



Preface ix

- Objectives **ix**
- Audience **ix**
- Organization **x**
- Conventions **x**
- Terms and Acronyms **xiii**
- Obtaining Documentation **xiv**
 - World Wide Web **xiv**
 - Documentation CD-ROM **xiv**
 - Ordering Documentation **xiv**
- Obtaining Technical Assistance **xv**
 - Cisco Connection Online **xv**
 - Technical Assistance Center **xvi**
 - Documentation Feedback **xvii**

CHAPTER 1

Product Overview 1-1

- Product Features **1-1**
 - All Versions of the Cisco DVB CAR100 **1-1**
 - Additional Features of the Cisco DVB CAR100-LAN **1-2**
- Network Overview **1-2**
 - Cisco DVB CAR100-PC Version **1-3**
 - Cisco DVB CAR100-LAN Version **1-3**
- Physical Description **1-4**

CHAPTER 2

Preparing for Installation 2-1

- Safety Recommendations 2-1
 - Safety with Electricity 2-1
 - Basic Guidelines 2-2
 - Safety Standards Compliance 2-2
- PC Hardware and Software Requirements 2-3
- Tools for Installation 2-3

CHAPTER 3

Installing the Cisco DVB CAR100 3-1

- Connecting the Cables 3-2
 - Connecting the CATV Coaxial Cable 3-2
 - Connecting the Ethernet Cable 3-3
 - Connecting to a Single Computer 3-3
 - Connecting to Multiple Computers 3-4
 - Connecting the Computers to the Ethernet Hub 3-5
 - Connecting the Power Supply 3-5

CHAPTER 4

Computer Configuration and Cisco DVB CAR100 Startup 4-1

- Configuration Overview 4-2
- Configuration Procedure 4-2
- Automatic Network Configuration 4-2
 - Automatic Network Configuration for Windows 95/98 4-3
 - Automatic Network Configuration for Windows NT 4-3
- Manual Network Configuration 4-4
 - Manual TCP/IP Configuration for Windows 95/98 4-4
 - Manual TCP/IP Configuration for Windows NT 4-5
- Startup 4-6

CHAPTER 5

Troubleshooting 5-1

LED Patterns 5-1

Location of LEDs 5-1

Normal Operation 5-1

During Startup 5-2

Master LED Patterns 5-2

If the Cisco DVB CAR100 Does Not Receive an IP Address 5-3

Master LED, Amber 5-3

Specifications A-1**Regulatory Compliance and Safety Information 5**

INDEX

