

Operating Conditions for the United Kingdom

For United Kingdom Use Only

Cisco Systems declaration of operating conditions:

The AGS+ chassis is designed to meet the requirements of TG. No. 17.

Interconnections

Interconnection directly, or by way of other apparatus, of ports marked:

“WARNING. CONNECT ONLY APPARATUS COMPLYING WITH BS6301 TO THIS (THESE) PORT(S)”

with ports not so marked may produce hazardous conditions on the British Telecom Network. Obtain advice from a competent engineer before making such a connection.

Power

Always unplug your connection to the British Telecom Network *before* you disconnect the mains plug which provides protective earth. The connection to the British Telecom Network must not be hard wired; it is, however, appropriate to connect the Cisco server to protective earth by hard wiring.

Connection to a telecommunications network may only be made via Dynatech communications type 1183 fuse disconnection barrier units. The fuses used in the fuse disconnection barrier have a rated current of 60 milliamperes.

The chassis is brought into service by the supplier.

Compliance Provisions

The RS-232 Console Port is declared as an Accessory Port as defined by BS 6301.

Any approval given to this apparatus will be invalidated if the chassis is used in a manner which in any way causes noncompliance with BS 6301: 1982.

