

## DS3 Retrofit Kit Release Notes

---

### February 4, 2000

For the Cisco 6100 Series system to achieve better DS3 performance and reliability, the following hardware components need to be removed and replaced:

- System I/O card—Version 6100-SYS-IO-3=
- DS3 subtending I/O card—Version 6100-ST-IO-3-DS3=
- DS3 subtend host module (STM)—Version 6100-ST-3-DS3=



Note

---

Older versions of the system I/O card, the DS3 subtending I/O card, or the DS3 STM cannot be mixed with the newer versions listed in the preceding list. If you mix older versions with newer versions, the hardware components will not work properly.

---

These release notes provide the removal and replacement procedures.

## Contents

This document includes the following sections:

- Installation Prerequisites, page 2
- General Safety Precautions and Installation Guidelines, page 3
- Removal and Replacement Procedures—Nonsubtended Network Configuration, page 8
- Removal and Replacement Procedures—Subtended Network Configuration, page 16
- Related Documentation, page 32
- Cisco Connection Online, page 33
- Documentation CD-ROM, page 34

# Installation Prerequisites

This section describes hardware requirements and lists the parts and tools used to install the system I/O card, DS3 subtending I/O card, and DS3 STM.

## Hardware Requirements

In order for a subtended network configuration to work properly, you must install both a DS3 subtending I/O card and DS3 STM on a subtending host chassis.

The system I/O card is installed on all Cisco 6100/6130 chassis backplanes and it is not a stand-alone product.

## Part and Tool Requirements

To install or replace the DS3 subtending I/O card, you need the following parts and tools:

- DS3 subtending I/O card.
- System I/O card.
- DS3 STM.
- A one-quarter inch socket driver or wrench.
- A Phillips-head screwdriver.
- Ferrites that yield an impedance greater than 200 ohms +/- 20 percent at 100 MHz.
- Tie wraps.
- Coaxial cable.
  - Type 734A or equivalent.
  - Type 735A or equivalent.
- Standoff screws.
- Backplane screws—Included on the chassis backplane.
- Two plastic ESD shields for the system I/O card and the DS3 subtending I/O card.
- Necessary equipment for ESD protection—Required whenever you handle Cisco Digital Subscriber Line Access Multiplexer (DSLAM) equipment, which includes the chassis, modules, and cards.

**Note**

---

The Cisco 6100 Series system has no internal user-serviceable parts. However, you can add or remove a DS3 STM without removing power from the system (hot swapping).

---

*REVIEW DRAFT*

# General Safety Precautions and Installation Guidelines

This section covers the following topics:

- General Safety Precautions
- Hot-Swapping Modules
- Installation and Replacement Suggestions

## General Safety Precautions

Before working on the equipment, be aware of standard safety practices and the hazards involved in working with electrical circuitry to prevent accidents. Adhere to the following cautions and warnings for safe and hazard-free installation.

**Note**

To see translations of the warnings that appear in this publication, refer to the *Regulatory Compliance and Safety Information for the Cisco 6100 Series System* document.

**Caution**

Proper ESD protection is required whenever you handle Cisco DSLAM equipment. Installation and maintenance personnel should be properly grounded using ground straps to eliminate the risk of ESD damage to the equipment. Modules are subject to ESD damage whenever they are removed from the chassis.

**Caution**

Be careful when you remove the standoff screws and reinsert the screws into the screw holes on the backplane so that the backplane circuitry does not become damaged.

**Caution**

If the modules are installed when you apply power to the system, you could damage the modules and the chassis.

**Caution**

Installing the modules in the chassis with the power leads reversed can damage the modules.

**Caution**

If fuses are already installed in the fuse and alarm panel, remove them. You can replace the fuses after the card or module is installed. Do not power up the system while you install and connect the card or module.

**Warning**

The customer 48 volt power system must provide reinforced insulation between the primary AC power and the 48 VDC output.

*REVIEW DRAFT*



Warning

There is the danger of explosion if the battery is replaced incorrectly. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.



Warning

Class 1 laser product.



Warning

Use copper conductors only.



Warning

A readily accessible two-poled disconnect device must be incorporated in the fixed wiring.



Warning

The DS3 ports are not intended to be connected to cables that run outside the building where it is installed. For any connections outside the building, the DS3 ports must be connected to a network termination unit (NTU). NTU devices should comply with appropriate national safety standards such as UL 1950, CSA 950, EN 60950, IEC 950, and AS 3260.



Warning

Never install telephone wiring during an electrical storm.



Warning

Do not reach into a vacant slot or chassis while you install or remove a module or a fan. Exposed circuitry could constitute an energy hazard.



Warning

Ethernet cables must be shielded when used in a central office environment.



Warning

An exposed wire lead from a DC-input power source can conduct harmful levels of electricity. Be sure that no exposed portion of the DC-input power source wire extends from the terminal block plug.



Warning

Incorrect connection of this or connected equipment to a general purpose outlet could result in a hazardous situation.



Warning











 
Read the installation instructions before you connect the system to its power source.




Warning


Only trained and qualified personnel should be allowed to install, replace, or service this equipment.


*REVIEW DRAFT*

-  Warning Do not work on the system or connect or disconnect cables during periods of lightning activity.
-  Warning Use caution when installing or modifying telephone lines.
-  Warning This unit has more than one power supply connection; all connections must be removed completely to completely remove power from the unit.
-  Warning To reduce the risk of fire, use only No. 26 AWG or larger telecommunication line cord.
-  Warning To prevent the system from overheating, do not operate it in an area that exceeds the maximum recommended ambient temperature of 104°F (40°C).
-  Warning Metal objects heat up when connected to power and ground, and can cause serious burns.
-  Warning Secure all power cabling when installing this unit to avoid disturbing field-wiring connections.
-  Warning The power supply circuitry for the equipment can constitute an energy hazard. Before you install or replace the equipment, remove all jewelry (including rings, necklaces, and watches). Metal objects can come into contact with exposed power supply wiring or circuitry inside the DSLAM equipment. This could cause the metal objects to heat up and cause serious burns or weld the metal object to the equipment.
-  Warning Ultimate disposal of this product should be handled according to all national laws and regulations.
-  Warning This unit is intended for installation in restricted access areas. A restricted access area is where access can only be gained by service personnel through the use of a special tool, lock and key, or other means of security, and is controlled by the authority responsible for the location
-  Warning Connect the unit only to DC power source that complies with the Safety Extra-Low Voltage (SELV) requirements in IEC 60950 based safety standards.


*REVIEW DRAFT*


 **Warning** This product requires short-circuit (overcurrent) protection, to be provided as part of the building installation. Install only in accordance with national and local wiring regulations.


 **Warning** Care must be given to connecting units to the supply circuit so that wiring is not overloaded.


 **Warning** Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.


 **Warning** Do not use a telephone to report a gas leak in the vicinity of the leak.

 **Warning** Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.

 **Warning** Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.

 **Warning** This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user might be required to take corrective actions.

 **Warning** Do not use this product near water; for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.

 **Warning** During this procedure, wear grounding wrist straps to avoid ESD damage to the card. Do not directly touch the backplane with your hand or any metal tool, or you could shock yourself.

## Hot-Swapping Modules

The DS3 STM supports hot swapping. Hot swapping allows you to remove and replace the modules without disconnecting the system power. When the system detects that a module is added or removed, it automatically runs diagnostic and discovery routines, and acknowledges the presence or absence of the module.

## REVIEW DRAFT

# Installation and Replacement Suggestions

The following sections detail the recommended module installation and replacement practices for the system I/O card, the DS3 subtending I/O card, and the DS3 STM.

**Caution**

---

Any card or module that is only partially connected to the backplane can disrupt system operation.

---

## System I/O Card

The following are recommended installation and replacement practices for the system I/O card:

- Do not force the card into the chassis backplane connectors P3 and P9. This action can damage the pins on the connectors if they are not aligned properly with the system I/O card.
- Ensure that the card is straight and perpendicular to the chassis backplane when you install the card onto the connectors. The pins on the connectors can be damaged if the card is not installed correctly.

## DS3 Subtending I/O Card

The following are recommended installation and replacement practices for the DS3 subtending I/O card:

- Do not force the card into the chassis backplane connector J48. This action can damage the pins on the DS3 subtending I/O card if they are not aligned properly with the connector.
- Ensure that the card is straight and perpendicular to the chassis backplane when you install the card into the connector. The pins on the card can be damaged if the card is not installed correctly.

## DS3 STM

The following are recommended module installation and replacement practices for the DS3 STM:

- Do not force the module into its slot. This action can damage the pins on the backplane if they are not aligned properly with the module.
- Ensure that the module is straight and not at an angle when you install the module in the slot. Installing the module at an angle can damage the module.
- Fully depress the ejector tabs to ensure that the module connector mates with the backplane correctly. Firmly seat the module in the slot.

*REVIEW DRAFT*

# Removal and Replacement Procedures—Nonsubtended Network Configuration

The following sections detail the removal and replacement procedures for a nonsubtended network configuration. In a nonsubtended network configuration, you will need to remove and replace the system I/O card.

## Removal Procedures

**Caution**

Proper ESD protection is required whenever you handle Cisco DSLAM equipment. Installation and maintenance personnel should be properly grounded using ground straps to eliminate the risk of ESD damage to the equipment. Modules are subject to ESD damage whenever they are removed from the chassis.

Use the following steps to remove a system I/O card from the Cisco 6100/6130 chassis backplane:

**Note**

There are two versions of the system I/O card currently in the field. With the earlier version (prior to Release 2.4.0), the DS3 BNC connectors are located at the bottom left corner of the card and the 10BaseT management interface is located across the bottom of the card. The removal procedures are the same for each version of the system I/O card.

- 
- Step 1** Remove the optional rear door, if your system has one.
  - Step 2** Disconnect the ViewRunner system from the Cisco 6100/6130 chassis by removing the Ethernet cable.
  - Step 3** Open the front door of the Cisco 6100/6130 chassis.
  - Step 4** Disconnect the DS3 network interface module from the network if you have a DS3 network interface module installed in slot 10 of the Cisco 6100/6130 chassis.
    - a. Disconnect the end of the cable that attaches to the receive (J4) DS3 BNC connector on the system I/O card on the chassis backplane.
    - b. Disconnect the end of the cable that attaches to the transmit (J3) DS3 BNC connector on the system I/O card on the chassis backplane.
    - c. Pull the DS3 network interface module away from the backplane connection.
      - Lift up on the ejector tabs. This action disconnects the module from the backplane.
      - Carefully slide the module forward and away from the backplane connection.
  - Step 5** Pull all of the modules away from the Cisco 6100/6130 chassis backplane connection.
    - a. Lift up on the ejector tab. This action disconnects the module from the backplane.
    - b. Carefully slide the module forward and away from the backplane connection.
  - Step 6** Pull all of the modules away from the Cisco 6110 chassis backplane connection (as necessary).
    - a. Lift up on the ejector tab. This action disconnects the module from the backplane.
    - b. Carefully slide the module forward and away from the backplane connection.



*REVIEW DRAFT*


- Step 7** Pull all of the modules away from the POTS splitter backplane connection (as necessary).
- a. Lift up on the ejector tab. This action disconnects the module from the backplane.
  - b. Carefully slide the module forward and away from the backplane connection.
- Step 8** Remove the fuses from the fuse and alarm panel. By removing the fuses, the system is not powered while you install and connect the system I/O card.
- Step 9** Remove the coaxial cables from the two DS3 BNC connectors (TX and RX) for the system I/O card on a subtended node chassis backplane.
- Step 10** Use a Phillips-head screwdriver to remove the two backplane screws that hold the plastic ESD shield over the system I/O card. Keep these backplane screws and the plastic ESD shield for use when you replace the system I/O card.
- Step 11** Use a one-quarter inch socket driver or wrench to remove the two additional standoff screws that are attached to the system I/O card.

*REVIEW DRAFT*

**Step 12** Lift and disconnect the system I/O card from connectors P3 and P9, two 2-mm hard metric (HM) module connectors on the Cisco 6100/6130 backplane.

Figure 1 shows the system I/O card removal.

*Figure 1 System I/O Card Removal*

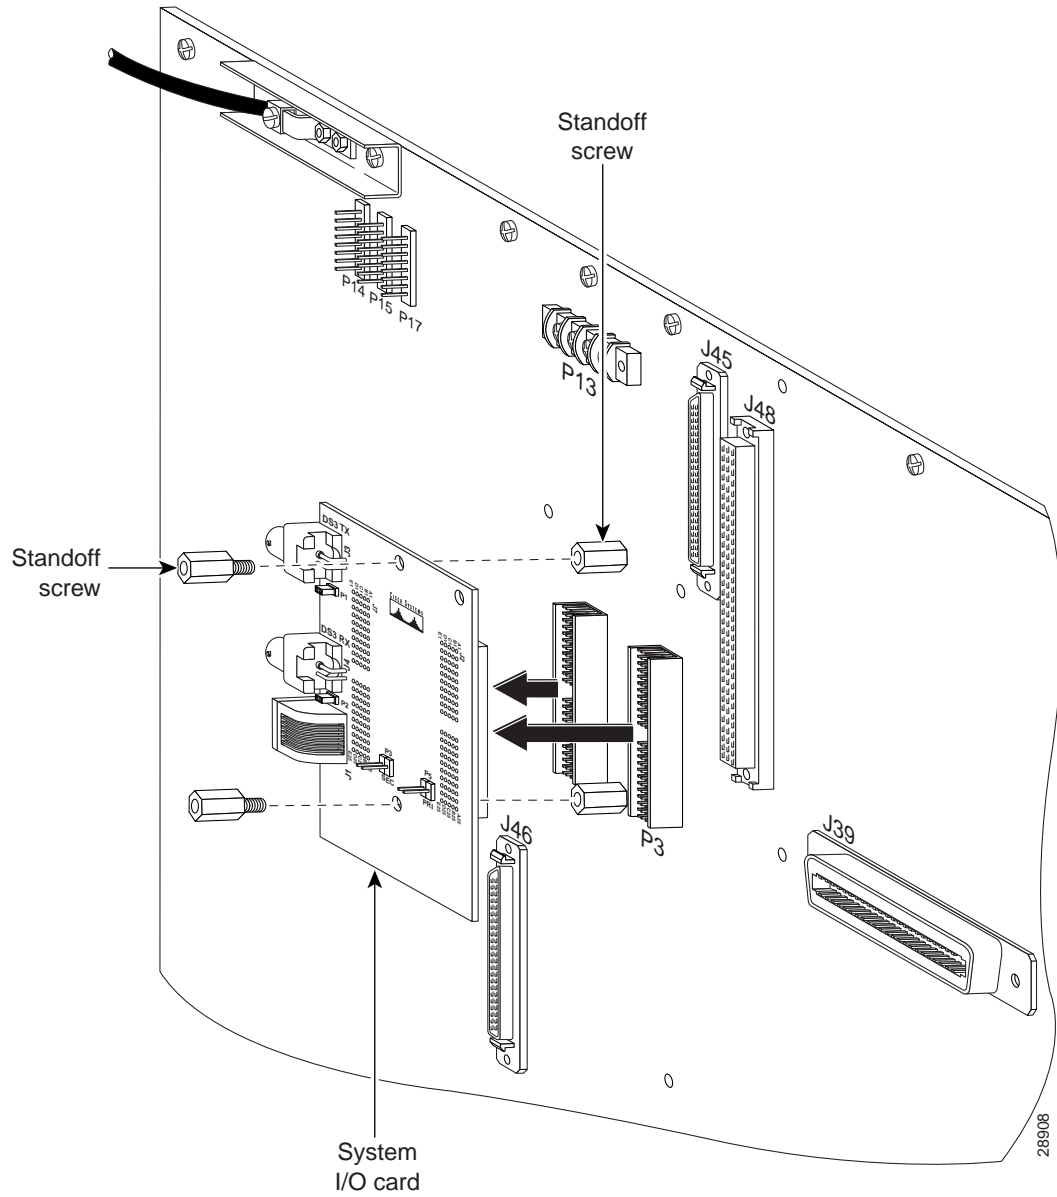

28900

*REVIEW DRAFT*

## Replacement Procedures

**Caution**

---

Proper ESD protection is required whenever you handle Cisco DSLAM equipment. Installation and maintenance personnel should be properly grounded using ground straps to eliminate the risk of ESD damage to the equipment. Modules are subject to ESD damage whenever they are removed from the chassis.

---

Use the following steps to replace a system I/O card on the Cisco 6100/6130 chassis backplane:

**Note**

---

Before you replace a system I/O card, please complete all of the steps in the “Removal Procedures” section on page 8.


---

- 
- Step 1** Locate the two standoff screws that are between connectors P3 and P9. Tighten the standoff screws using a one-quarter inch socket driver or wrench.
- Step 2** Position and align the holes on the system I/O card over the two standoff screws and gently press the system I/O card onto the Cisco 6100/6130 connectors P3 and P9 on the backplane.

*REVIEW DRAFT*

Figure 2 shows the system I/O card replacement procedures.

**Figure 2** *System I/O Card Replacement*

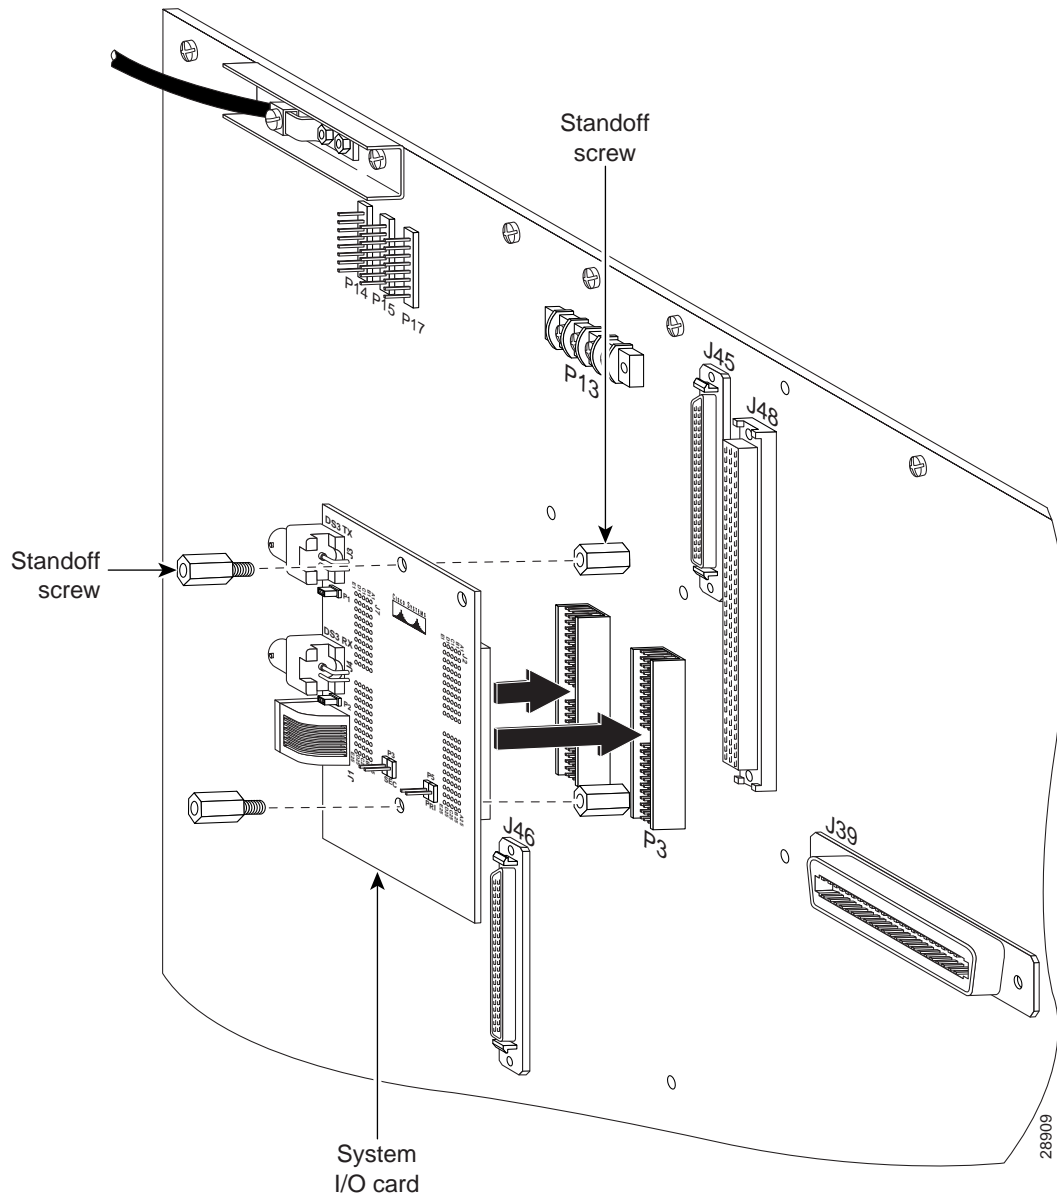

- Step 3** Use a one-quarter inch socket driver or wrench to screw two additional standoff screws into the screw holes in the system I/O card and into the original standoff screws on the chassis backplane. Tighten the standoff screws using the one-quarter inch socket driver or wrench.
- Step 4** Complete the following steps to connect the system I/O card to the network if a DS3 network interface module is installed in slot 10 of a subtending host chassis at the top of the subtending tree:
  - a. Attach the end of the cable that is connected to the ATM switch to the receive (J4) DS3 BNC connector on the system I/O card.
  - b. Attach the end of the cable that is connected to the ATM switch to the transmit (J3) DS3 BNC connector on the system I/O card.

*REVIEW DRAFT*


- Step 5** Locate the cable coming from the receive DS3 BNC connector (RX1) for the DS3 subtending I/O card on the subtending host chassis.
- Step 6** Attach the cable from Step 5 to the transmit DS3 BNC connector (TX) for the system I/O card on the subtended node chassis.
- Step 7** Locate the cable coming from the transmit DS3 BNC connector (TX1) for the DS3 subtending I/O card on the subtending host chassis.
- Step 8** Attach the cable from Step 7 to the receive DS3 BNC connector (RX) for the system I/O card on the subtended node chassis.

Figure 3 shows cabling from a DS3 subtending I/O card to a system I/O card.



**Note** If you have one subtending host chassis with two subtended node chassis, the second subtended node chassis system I/O card connects to the TX2 and RX2 DS3 BNC connectors on the DS3 subtending I/O card.


**Figure 3** *Cabling for a DS3 Subtending I/O Card and a System I/O Card*

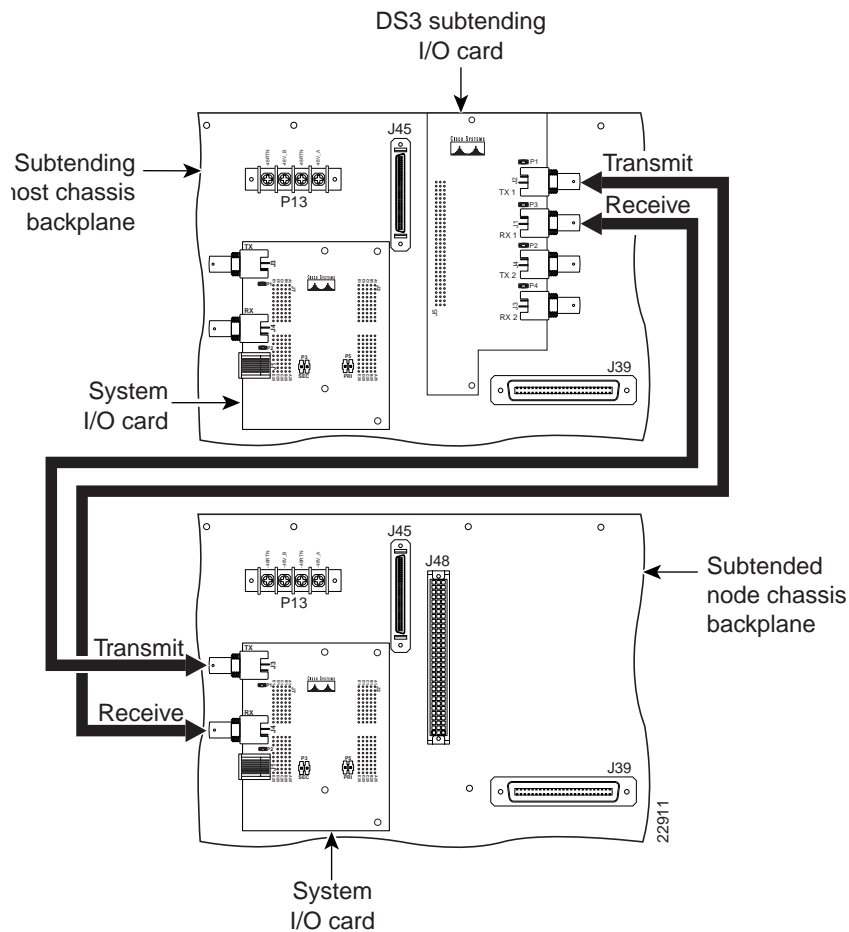

REVIEW DRAFT

- Step 9** Install the plastic ESD shield over the system I/O card using the following steps:
- a. Position the holes in the plastic ESD shield over the existing standoff screws installed on the system I/O card.
  - b. Use a Phillips-head screwdriver and the backplane screws you removed in Step 10 of the “Removal Procedures” section on page 8 to attach the plastic ESD shield to the system I/O card (see Figure 4).

Figure 4 Plastic ESD Shield Installation

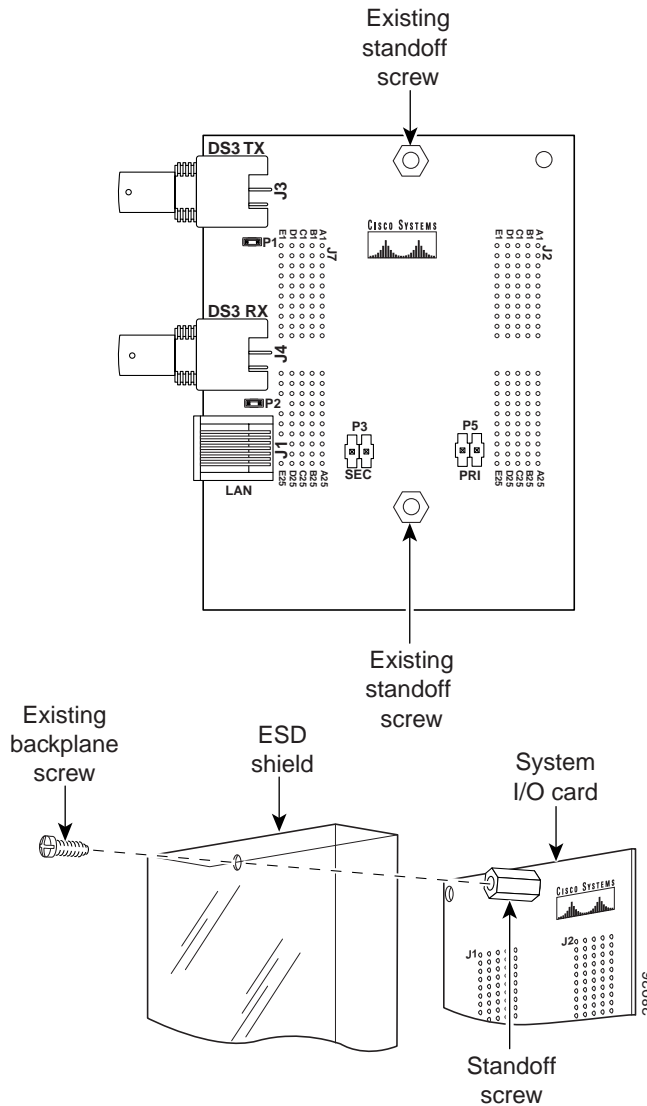

**Caution**

If the modules are installed when you apply power to the system, you could damage the modules and the chassis.

- Step 10** Reinsert the fuses in the fuse and alarm panel. When you reinsert the fuses, the system powers on.
- Step 11** Reseat all of the modules in the Cisco 6100/6130, Cisco 6110, and POTS splitter. It is important that you accomplish each step completely before moving on to the next step

*REVIEW DRAFT*

**Note** All modules must be fully seated in the chassis. A push on the faceplate of each module is required for the module to be fully seated.

- a. Reseat the xTU-C modules in the Cisco 6100/6130.
  - Lift up on the ejector tab and gently apply pressure to the bottom of the faceplate while pushing the module into the slot.
  - Push on the faceplate of each module to fully seat the module.
  - Press down on the ejector tab to secure the module.
  - Reseat the remaining xTU-C modules using the same procedure. Repeat Step 11a for each module.
- b. Reseat the network interface module in the Cisco 6100/6130.
  - Lift up on the ejector tabs and gently apply pressure to the bottom of the faceplate while pushing the module into the slot.
  - Push on the faceplate of each module to fully seat the module.
  - Press down on the ejector tabs to secure the module.
- c. Reseat the POTS modules in the POTS splitter.
  - Lift up on the ejector tab and gently apply pressure to the bottom of the faceplate while pushing the module into the slot.
  - Push on the faceplate of each module to fully seat the module.
  - Press down on the ejector tab to secure the module.
  - Reseat the remaining POTS modules using the same procedure. Repeat Step 11c for each module.
- d. Reseat the DS3 STM in the subtending host chassis.
  - Lift up on the ejector tab and gently apply pressure to the bottom of the faceplate while pushing the module into the slot.
  - Push on the faceplate of each module to fully seat the module.
  - Press down on the ejector tab to secure the module.
- e. Reseat the line interface modules (LIMs) in the Cisco 6110.
  - Lift up on the ejector tab and gently apply pressure to the bottom of the faceplate while pushing the module into the slot.
  - Push on the faceplate of each module to fully seat the module.
  - Press down on the ejector tab to secure the module.
  - Reseat the remaining LIMs using the same procedure. Repeat Step 11e for each module.
- f. Reseat the LIM controller module in the Cisco 6110.
  - Lift up on the ejector tab and gently apply pressure to the bottom of the faceplate while pushing the module into the slot.
  - Push on the faceplate of each module to fully seat the module.
  - Press down on the ejector tab to secure the module.
- g. Reseat the system controller module in the Cisco 6100/6130.

*REVIEW DRAFT*

- Lift up on the ejector tab and gently apply pressure to the bottom of the faceplate while pushing the module into the slot.
- Push on the faceplate of each module to fully seat the module.
- Press down on the ejector tab to secure the module. This causes each module in the Cisco 6100/6130 to reset.

h. Verify that the STATUS LEDs on all modules are solid green (where applicable).

This self-test procedure takes several minutes. Verify that there are no alarms on the system controller module (ALARM LED off). If the STATUS LEDs are not green after the self-test, refer to the appropriate installation guide for troubleshooting procedures.

i. Perform a software update using the ViewRunner software if the STATUS LEDs on the xTU-C modules or the network interface module are flashing.

Refer to the appropriate ViewRunner provisioning and operation guide for software upgrade procedures.

**Step 12** Verify that the Cisco 6100/6130 chassis front door is attached to the chassis and closed.

**Step 13** Connect the ViewRunner system to the Cisco 6100/6130 by attaching the Ethernet cable to the RJ-45 (10BaseT/LAN) connector on the system I/O card.

**Step 14** Close the optional rear door using the following steps:

- a. The rear door closes left to right (seen from the rear of the chassis). There are two latches on the rear door. Lift the two latches on the rear door as you close it. After the rear door is in place, release the latches. The rear door closes left to right (seen from the rear of the chassis).
- b. Align the two thumbscrews located on the rear door with two thumbscrew fasteners on the bracket. Tighten the thumbscrews to secure the rear door.

## Removal and Replacement Procedures—Subtended Network Configuration

The following sections detail the removal and replacement procedures for a subtended network configuration. In a subtended network configuration, you need to remove and replace the system I/O card, DS3 subtending I/O card, and the DS3 STM.



*REVIEW DRAFT*

## Removal Procedures

**Caution**

Proper ESD protection is required whenever you handle Cisco DSLAM equipment. Installation and maintenance personnel should be properly grounded using ground straps to eliminate the risk of ESD damage to the equipment. Modules are subject to ESD damage whenever they are removed from the chassis.

Use the following steps to remove a system I/O card, DS3 subtending card, and a DS3 STM:

**Note**

There are two versions of the system I/O card currently in the field. With the earlier version (prior to Release 2.4.0), the DS3 BNC connectors are located at the bottom left corner of the card and the 10BaseT management interface is located across the bottom of the card. The removal procedures are the same for each version of the system I/O card.


- 
- Step 1** Remove the optional rear door, if your system has one.
- Step 2** Disconnect the ViewRunner system from the Cisco 6100/6130 chassis by removing the Ethernet cable.
- Step 3** Open the front door of the Cisco 6100/6130 chassis.
- Step 4** Disconnect the DS3 network interface module from the network if you have a DS3 network interface module installed in slot 10 of the Cisco 6100/6130 chassis.
- Disconnect the end of the cable that attaches to the receive (J4) DS3 BNC connector on the system I/O card on the chassis backplane.
  - Disconnect the end of the cable that attaches to the transmit (J3) DS3 BNC connector on the system I/O card on the chassis backplane.
  - Pull the DS3 network interface module away from the backplane connection.
    - Lift up on the ejector tabs. This action disconnects the module from the backplane.
    - Carefully slide the module forward and away from the backplane connection.
- Step 5** Pull all of the modules away from the Cisco 6100/6130 chassis backplane connection.
- Lift up on the ejector tab. This action disconnects the module from the backplane.
  - Carefully slide the module forward and away from the backplane connection.
- Step 6** Pull all of the modules away from the Cisco 6110 chassis backplane connection (as necessary).
- Lift up on the ejector tab. This action disconnects the module from the backplane.
  - Carefully slide the module forward and away from the backplane connection.
- Step 7** Pull all of the modules away from the POTS splitter backplane connection (as necessary).
- Lift up on the ejector tab. This action disconnects the module from the backplane.
  - Carefully slide the module forward and away from the backplane connection.
- Step 8** Remove the fuses from the fuse and alarm panel. By removing the fuses, the system is not powered while you install and connect the system I/O card.
- Step 9** Remove the coaxial cables from the two DS3 BNC connectors (TX and RX) for the system I/O card on a subtended node chassis backplane.

*REVIEW DRAFT*

- Step 10** Use a Phillips-head screwdriver to remove the two backplane screws that hold the plastic ESD shield over the system I/O card. Keep these backplane screws and the plastic ESD shield for use when you replace the system I/O card.
- Step 11** Use a one-quarter inch socket driver or wrench to remove the two additional standoff screws that are attached to the system I/O card.
- Step 12** Lift and disconnect the system I/O card from connectors P3 and P9, two 2-mm HM module connectors on the Cisco 6100/6130 backplane.

Figure 5 shows the system I/O card removal.

**Figure 5** *System I/O Card Removal*

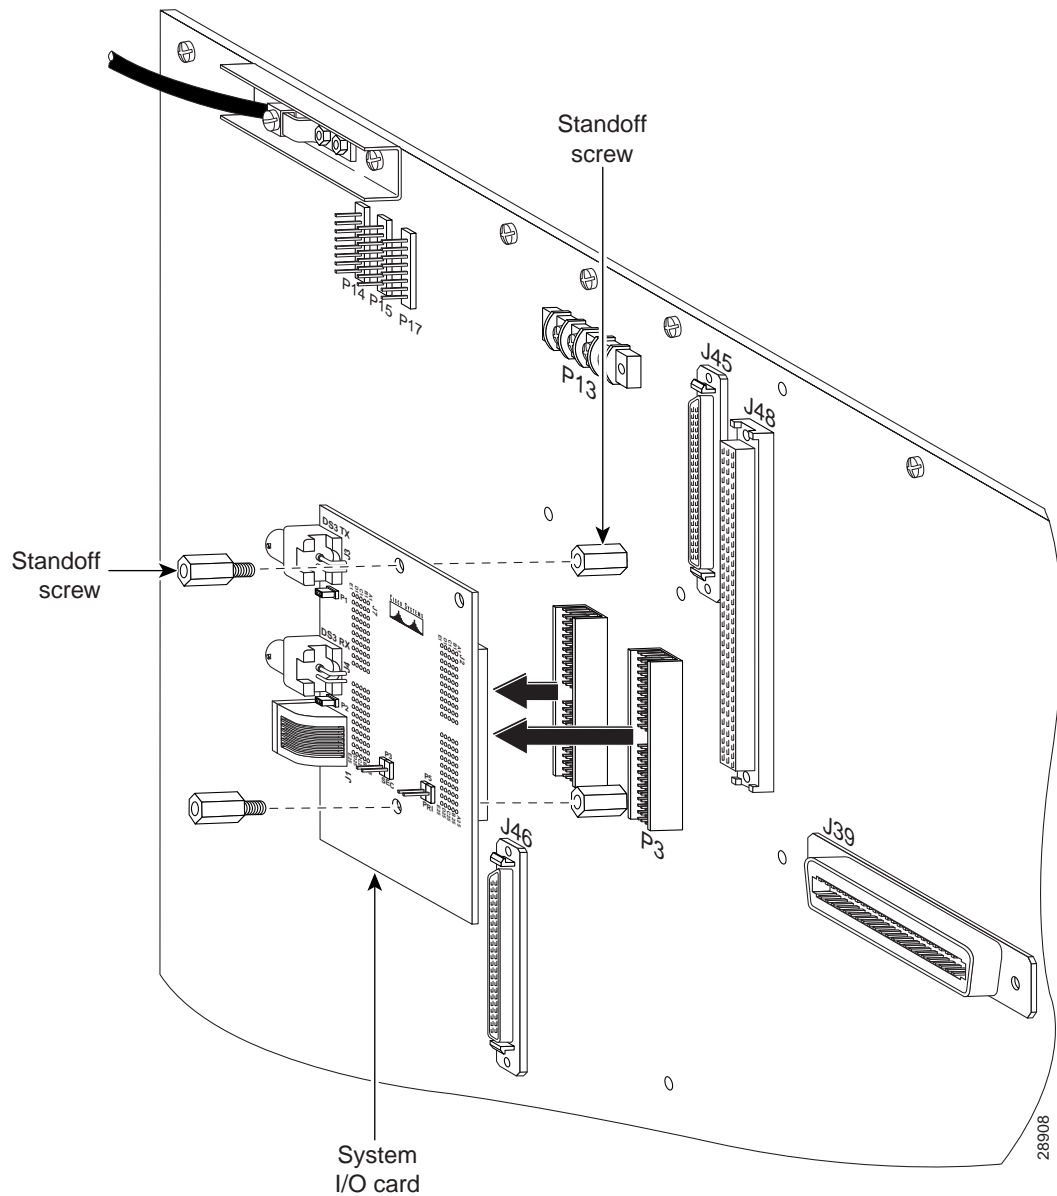


- Step 13** Remove the coaxial cables from the four DS3 BNC connectors (TX1, RX1, TX2, and RX2) on the DS3 subtending I/O card.

*REVIEW DRAFT*

- Step 14** Use a Phillips-head screwdriver to remove the two backplane screws that hold the plastic ESD shield over the DS3 subtending I/O card. Keep these backplane screws and the plastic ESD shield for use when you replace the DS3 subtending I/O card.
- Step 15** Use a one-quarter inch socket driver or wrench to remove the two additional standoff screws that are attached to the DS3 subtending I/O card.
- Step 16** Lift and disconnect the DS3 subtending I/O card from connector J48, a 96-pin DIN connector on the subtending host chassis backplane. Figure 6 shows the DS3 subtending I/O card removal.

**Figure 6** *DS3 Subtending I/O Card Removal*

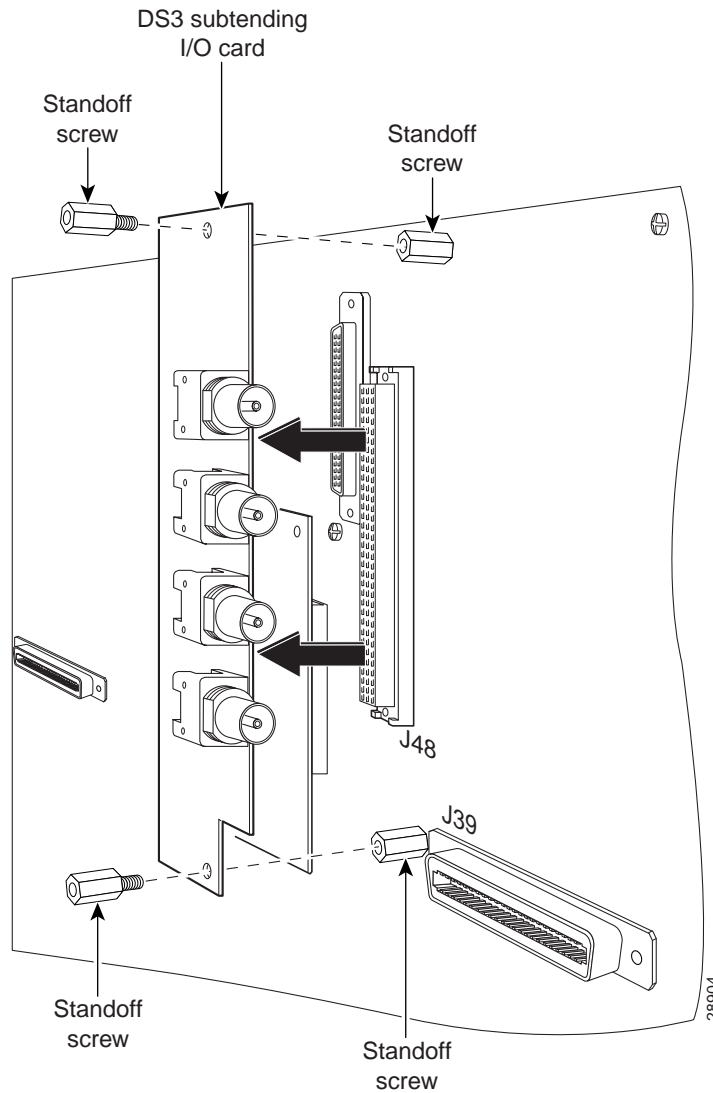

- Step 17** Remove the DS3 STM.
- Lift up the ejector tab.
  - Carefully slide the module out of the chassis.

*REVIEW DRAFT*

## Replacement Procedures

**Caution**

Proper ESD protection is required whenever you handle Cisco DSLAM equipment. Installation and maintenance personnel should be properly grounded using ground straps to eliminate the risk of ESD damage to the equipment. Modules are subject to ESD damage whenever they are removed from the chassis.

Use the following steps to replace a system I/O card, DS3 subtending card, and a DS3 STM:

**Note**


Before you replace a system I/O card, please complete all of the steps in the “Removal Procedures” section on page 17.

- 
- Step 1** Locate the two standoff screws that are between connectors P3 and P9. Tighten the standoff screws using a one-quarter inch socket driver or wrench.
- Step 2** Position and align the holes on the system I/O card over the two standoff screws and gently press the system I/O card onto the Cisco 6100/6130 connectors P3 and P9 on the backplane.

*REVIEW DRAFT*

Figure 7 shows the system I/O card replacement procedures.

**Figure 7** System I/O Card Replacement

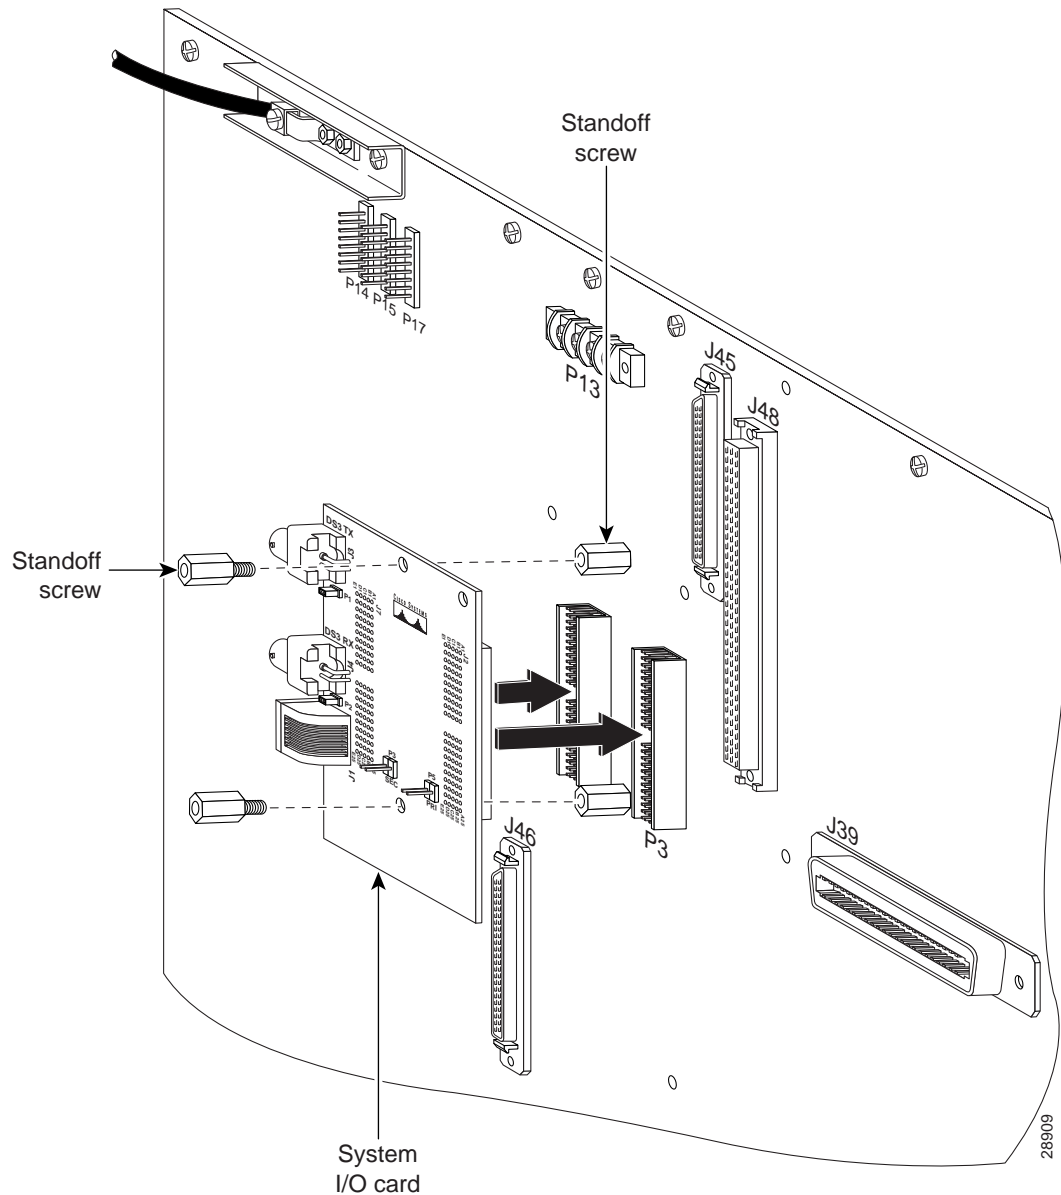


- Step 3** Use a one-quarter inch socket driver or wrench to screw two additional standoff screws into the screw holes in the system I/O card and into the original standoff screws on the chassis backplane. Tighten the standoff screws using the one-quarter inch socket driver or wrench.
- Step 4** Locate the two standoff screws that are above and below the chassis connector J48. Tighten the standoff screws using a one-quarter inch socket driver or wrench.
- Step 5** Position and align the holes on the DS3 subtending I/O card over the two standoff screws and gently press the DS3 subtending I/O card into the Cisco 6100/6130 connector J48 on the subtending host chassis backplane.

*REVIEW DRAFT*

Figure 8 shows the DS3 subtending I/O card replacement procedures.

**Figure 8** *DS3 Subtending I/O Card Replacement*

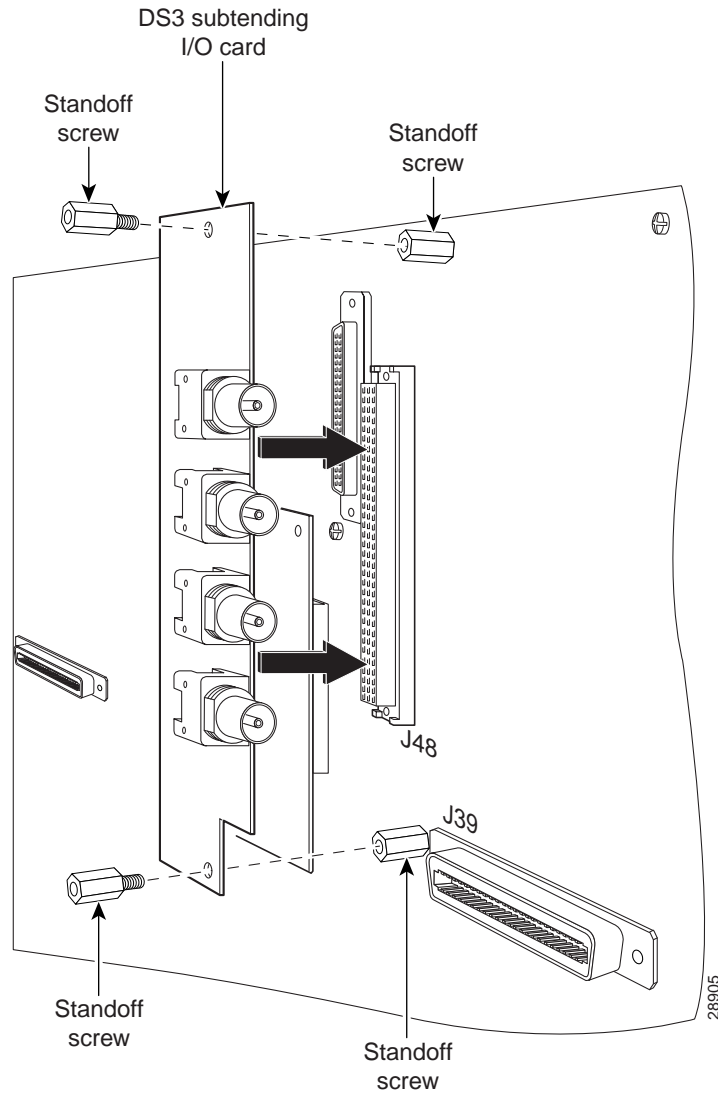


**Step 6** Use a one-quarter inch socket driver or wrench to screw two additional standoff screws into the screw holes in the DS3 subtending I/O card and into the original standoff screws on the chassis backplane. Tighten the standoff screws using a one-quarter inch socket driver or wrench.

**Step 7** Attach one end of a coaxial cable (type 734A, type 735A, or equivalent) to the transmit DS3 BNC connector (TX1) for the DS3 subtending I/O card on the subtending host chassis backplane.

*REVIEW DRAFT*

Figure 9 shows cabling for a subtended network configuration.

**Figure 9** Cabling for Subtended Network Configuration

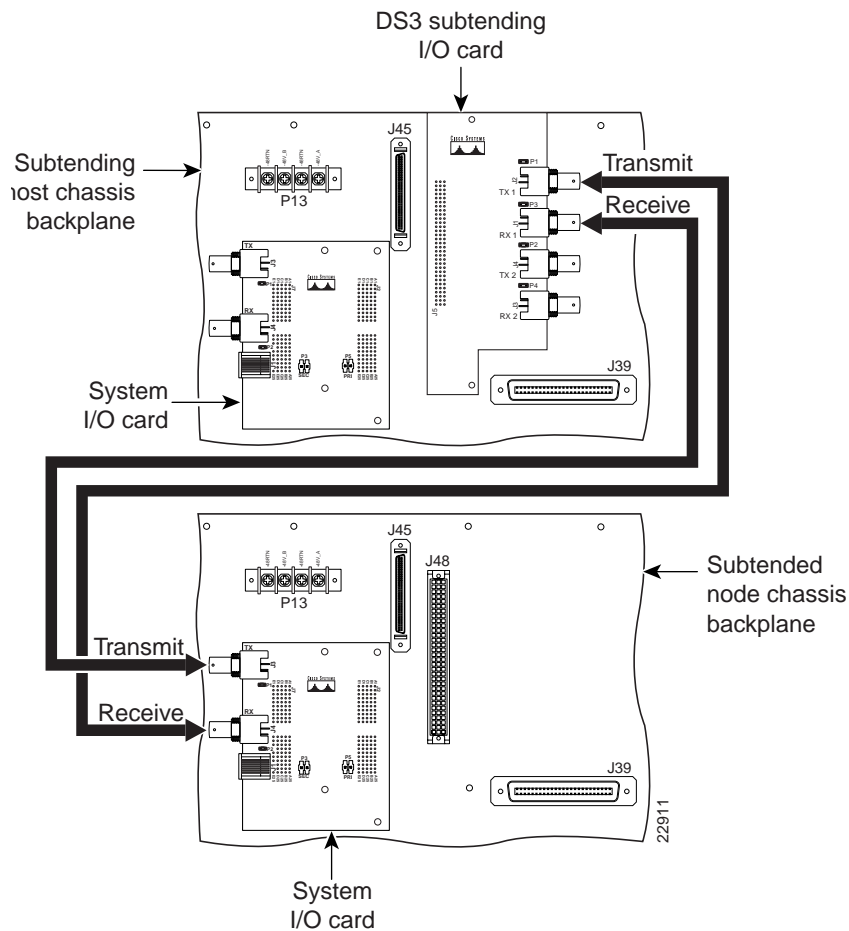


- Step 8** Add ferrites to the coaxial cables that you use to cable the DS3 subtending I/O card to the system I/O card to reduce the radiation/EMI susceptibility to high frequency noise between 30 and 200 MHz. Use either the ferrites shipped with the DS3 network interface module or ferrites that yield an impedance greater than 200 ohms +/- 20 percent at 100 MHz.

*REVIEW DRAFT*

If you are using

- Thick type 734A coaxial cable or equivalent, run the cable through a ferrite and clamp the ferrite shut, as shown in Figure 10. Attach the ferrite as close as possible to the transmit DS3 BNC connector (TX1) on the DS3 subtending I/O card. Tie wrap the cable directly behind the ferrite.

**Figure 10** *Thick Coaxial Cable Through Ferrite*

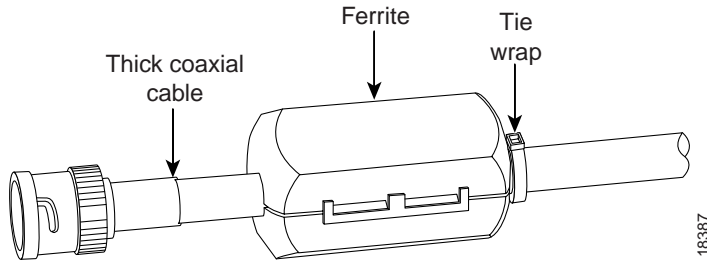

- Thin type 735A coaxial cable or equivalent, run the cable through the ferrite one time, loop the cable back through the ferrite, and clamp the ferrite shut, as shown in Figure 11. Attach the ferrite as close as possible to the transmit DS3 BNC connector (TX1) on the DS3 subtending I/O card.




**Note**

The minimum bend radius for thin type 735A coaxial cable or equivalent is one-quarter of an inch. If the minimum bend radius exceeds one-quarter of an inch, the cable might not work properly..

Looping the wire secures the ferrite.

**Figure 11** *Thin Coaxial Cable Through Ferrite*

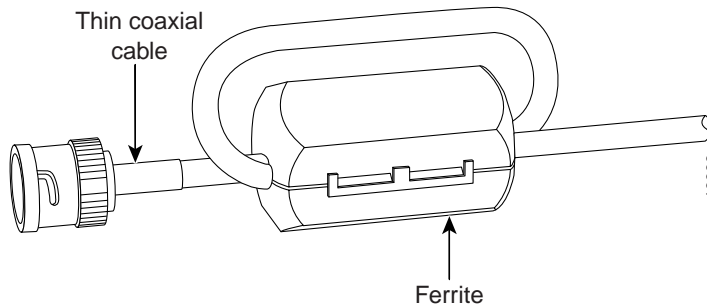


- Step 9** Attach a ferrite as close as possible to the remaining end of the cable (see Figure 10 or Figure 11 for ferrite installation). Tie wrap the cable directly behind the ferrite as necessary.
- Step 10** Attach the end of the cable used in Step 9 to the receive DS3 BNC connector (RX) for the system I/O card on the subtended node chassis backplane.
- Step 11** Attach one end of a coaxial cable to the receive DS3 BNC connector (RX1) for the DS3 subtending I/O card on the subtending host chassis backplane.
- Step 12** Attach the ferrite as close as possible to the receive DS3 BNC connector (RX1) on the DS3 subtending I/O card (see Figure 10 or Figure 11 for ferrite installation). Tie wrap the cable directly behind the ferrite as necessary.



*REVIEW DRAFT*

- Step 13** Attach a ferrite as close as possible to the remaining end of the cable (see Figure 10 or Figure 11 for ferrite installation). Tie wrap the cable directly behind the ferrite as necessary.
- Step 14** Attach the end of the cable used in Step 13 to the transmit DS3 BNC connector (TX) for the system I/O card on the subtended node chassis backplane.
- Step 15** Tie wrap the transmit and receive cables coming from the DS3 subtending I/O card where the cables meet after coming from the ferrites and every 1 foot thereafter for a total of 15 feet, as shown in Figure 12.

**Figure 12** *Ferrite Close to DS3 BNC Connectors on DS3 Subtending I/O Card*

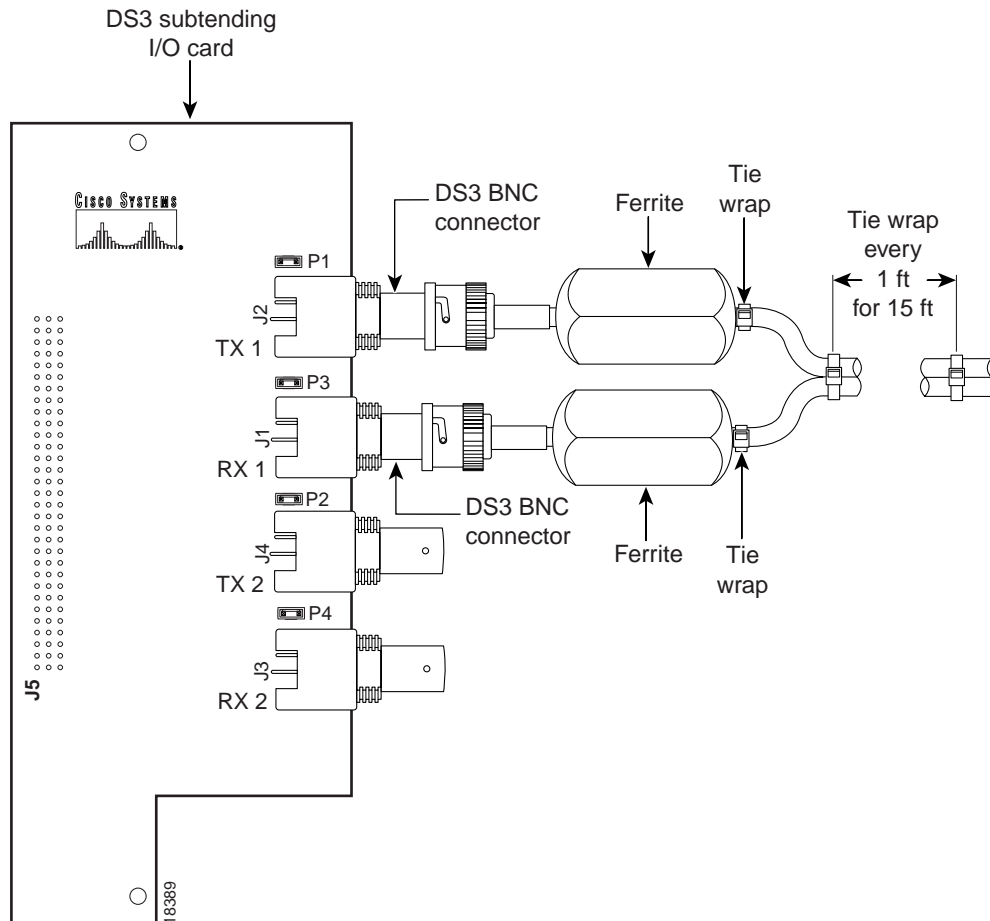



*REVIEW DRAFT*

**Note** The minimum bend radius for thin type 735A coaxial cable or equivalent is one-quarter of an inch. If the minimum bend radius exceeds one-quarter of an inch, the cable might not work properly..

Looping the wire secures the ferrite.


- c. Attach the end of the cable used in Step 17a, which originates at the transmit DS3 BNC connector, to the ATM switch.
- d. Attach one end of a coaxial cable (type 734A, type 735A, or equivalent) to the receive DS3 BNC connector (J4) for the system I/O card on the Cisco 6100/6130 backplane.
- e. Attach the ferrite as close as possible to the receive DS3 BNC connector on the system I/O card (see Figure 10 or Figure 11 for ferrite installation). Tie wrap the cable directly behind the ferrite as necessary.
- f. Attach the end of the cable used in Step 17d, which originates at the receive DS3 BNC connector, to the ATM switch.
- g. Tie wrap the transmit and receive cables coming from the system I/O card where the cables meet after coming from the ferrites and every 1 foot thereafter for a total of 15 feet, as shown in Figure 13.

**Step 18** Install the plastic ESD shield over the system I/O card using the following steps:

- a. Position the holes in the plastic ESD shield over the existing standoff screws installed on the system I/O card.
- b. Use a Phillips-head screwdriver and the backplane screws you removed in Step 10 of the “Removal Procedures” section on page 17 to attach the plastic ESD shield to the system I/O card (see Figure 14).

REVIEW DRAFT


Figure 14 Plastic ESD Shield Installation

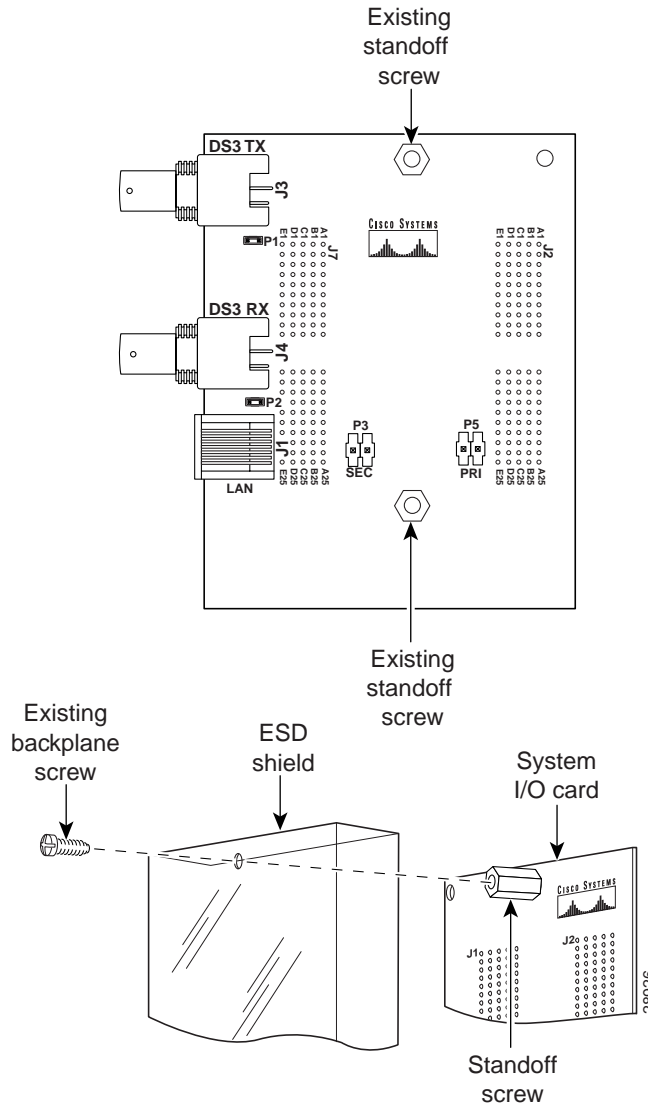

- Step 19** Install the plastic ESD shield over the DS3 subtending I/O card using the following steps:
- a. Position the holes in the plastic ESD shield over the existing standoff screws installed on the DS3 subtending I/O card.
  - b. Use a Phillips-head screwdriver and the backplane screws you removed in Step 14 of the “Removal Procedures” section on page 17 to attach the plastic ESD shield to the DS3 subtending I/O card (see Figure 15).

REVIEW DRAFT

Figure 15 Plastic ESD Shield Installation

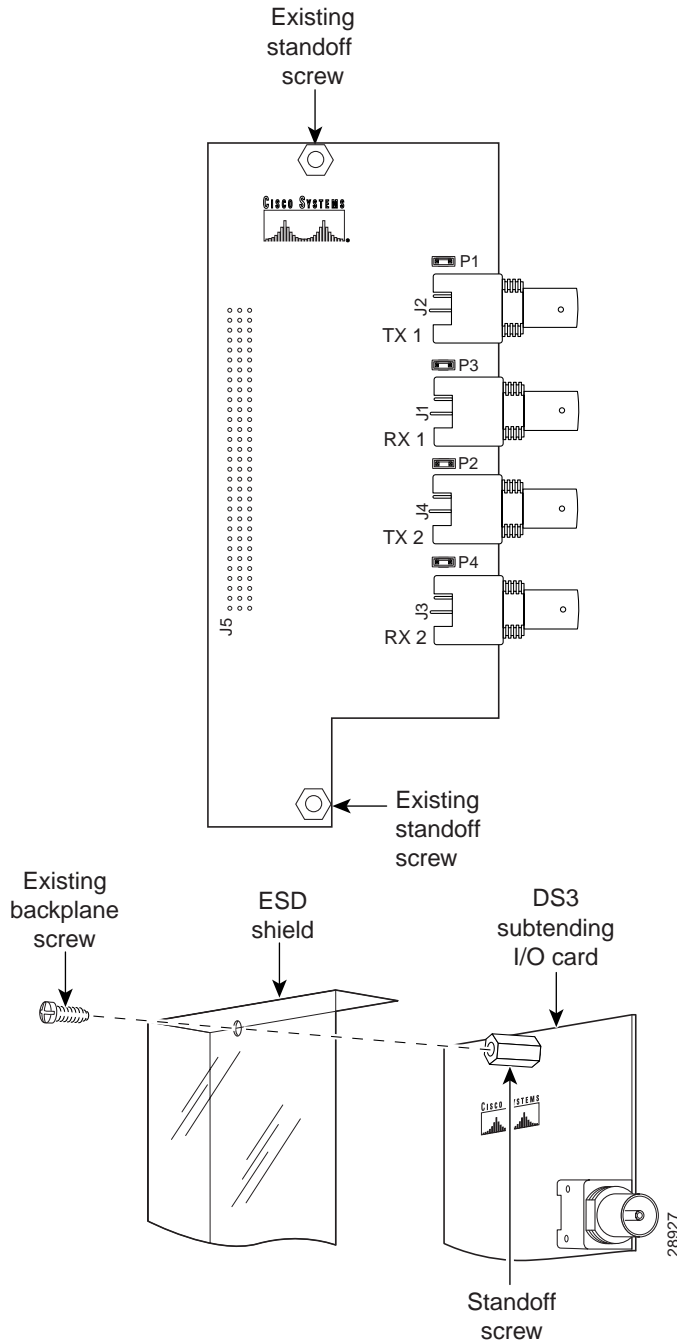

**Caution**

If the modules are installed when you apply power to the system, you could damage the modules and the chassis.

**Step 20** Reinsert the fuses in the fuse and alarm panel. When you reinsert the fuses, the system powers on.

*REVIEW DRAFT*


- Step 21** Install a DS3 STM in the Cisco 6100/6130 chassis. It is important that you accomplish each step completely before moving on to the next step.



**Note** All modules must be fully seated in the chassis. A push on the faceplate of each module is required for the module to be fully seated.

- a. Vertically align the module edge with the module guides at the top and bottom of slot 9 of the chassis.
- b. Lift up on the ejector tab and gently apply pressure to the bottom of the faceplate while pushing the module into the slot (see Figure 16).

**Figure 16** DS3 STM Installation

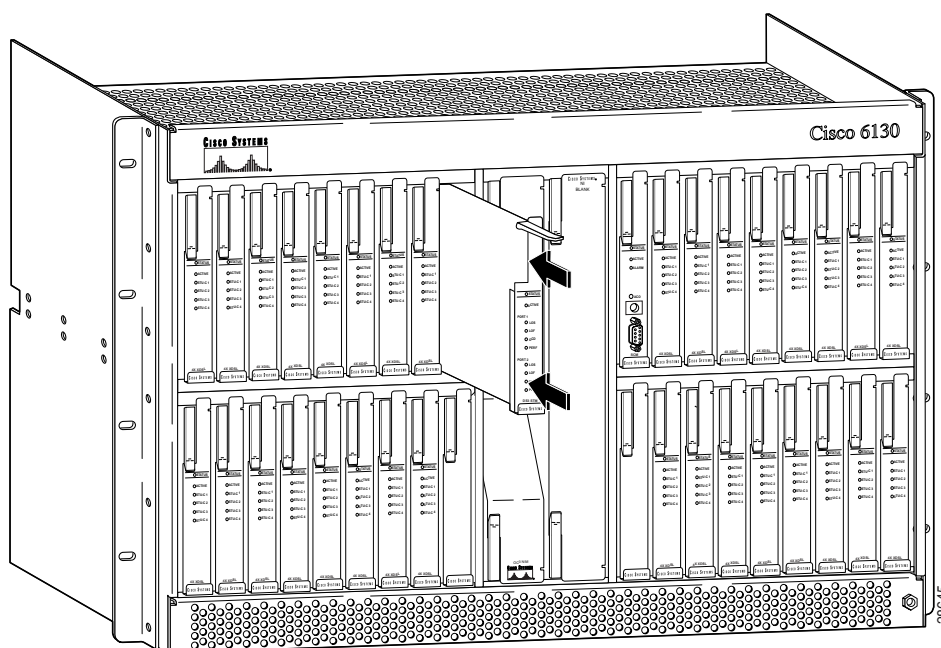

- c. Push on the faceplate of each module to fully seat the module.
- d. Press down on the ejector tab to secure the module.



**Note** If you are installing the DS3 STM for the first time, provision it using the ViewRunner management software. For provisioning procedures, refer to the *ViewRunner for Windows Provisioning and Operation Guide* or *ViewRunner for HP OpenView Provisioning and Operation Guide*.

*REVIEW DRAFT*

**Step 22** Reseat all of the modules in the Cisco 6100/6130, Cisco 6110, and POTS splitter. It is important that you accomplish each step completely before moving on to the next step.



---

**Note** All modules must be fully seated in the chassis. A push on the faceplate of each module is required for the module to be fully seated.

---

- a. Reseat the xTU-C modules in the Cisco 6100/6130.
  - Lift up on the ejector tab and gently apply pressure to the bottom of the faceplate while pushing the module into the slot.
  - Push on the faceplate of each module to fully seat the module.
  - Press down on the ejector tab to secure the module.
  - Reseat the remaining xTU-C modules using the same procedure. Repeat Step 22a for each module.
- b. Reseat the network interface module in the Cisco 6100/6130.
  - Lift up on the ejector tabs and gently apply pressure to the bottom of the faceplate while pushing the module into the slot.
  - Push on the faceplate of each module to fully seat the module.
  - Press down on the ejector tabs to secure the module.
- c. Reseat the POTS modules in the POTS splitter.
  - Lift up on the ejector tab and gently apply pressure to the bottom of the faceplate while pushing the module into the slot.
  - Push on the faceplate of each module to fully seat the module.
  - Press down on the ejector tab to secure the module.
  - Reseat the remaining POTS modules using the same procedure. Repeat Step 22c for each module.
- d. Reseat the line interface modules (LIMs) in the Cisco 6110.
  - Lift up on the ejector tab and gently apply pressure to the bottom of the faceplate while pushing the module into the slot.
  - Push on the faceplate of each module to fully seat the module.
  - Press down on the ejector tab to secure the module.
  - Reseat the remaining LIMs using the same procedure. Repeat Step 22d for each module.
- e. Reseat the LIM controller module in the Cisco 6110.
  - Lift up on the ejector tab and gently apply pressure to the bottom of the faceplate while pushing the module into the slot.
  - Push on the faceplate of each module to fully seat the module.
  - Press down on the ejector tab to secure the module.

*REVIEW DRAFT*

- f. Reseat the system controller module in the Cisco 6100/6130.
  - Lift up on the ejector tab and gently apply pressure to the bottom of the faceplate while pushing the module into the slot.
  - Push on the faceplate of each module to fully seat the module.
  - Press down on the ejector tab to secure the module. This causes each module in the Cisco 6100/6130 to reset.
- g. Verify that the STATUS LEDs on all modules are solid green (where applicable).  
This self-test procedure takes several minutes. Verify that there are no alarms on the system controller module (ALARM LED off). If the STATUS LEDs are not green after the self-test, refer to the appropriate installation guide for troubleshooting procedures.
- h. Perform a software update using the ViewRunner software if the STATUS LEDs on the xTU-C modules or the network interface module are flashing.  
Refer to the appropriate ViewRunner provisioning and operation guide for software upgrade procedures.

**Step 23** Verify that the Cisco 6100/6130 chassis front door is attached to the chassis and closed.

**Step 24** Connect the ViewRunner system to the Cisco 6100/6130 by attaching the Ethernet cable to the RJ-45 (10BaseT/LAN) connector on the system I/O card.

**Step 25** Close the optional rear door using the following steps:

- a. The rear door closes left to right (seen from the rear of the chassis). There are two latches on the rear door. Lift the two latches on the rear door as you close it. After the rear door is in place, release the latches. The rear door closes left to right (seen from the rear of the chassis).
- b. Align the two thumbscrews located on the rear door with two thumbscrew fasteners on the bracket. Tighten the thumbscrews to secure the rear door.

## Related Documentation

The following sections list the CO and customer premises equipment (CPE) publications that relate to the Cisco DSL product family.

### CO Publications

A complete list of all released Cisco 6100 Series system with NI-1 related documentation is available on the World Wide Web at

[http://www.cisco.com/univercd/cc/td/doc/product/dsl\\_prod/c6100/index.htm](http://www.cisco.com/univercd/cc/td/doc/product/dsl_prod/c6100/index.htm).

The following ViewRunner management software is used to provision and manage the Cisco 6100 Series system with NI-1. A complete list of all released ViewRunner documentation is available on the Word Wide Web.

- ViewRunner for Windows  
[http://lbj.cisco.com/push\\_targets1/ucdit/cc/td/doc/product/dsl\\_prod/vrmgtsw/vr4w/index.htm](http://lbj.cisco.com/push_targets1/ucdit/cc/td/doc/product/dsl_prod/vrmgtsw/vr4w/index.htm)
- ViewRunner for HP OpenView  
[http://lbj.cisco.com/push\\_targets1/ucdit/cc/td/doc/product/dsl\\_prod/vrmgtsw/vr4ov/index.htm](http://lbj.cisco.com/push_targets1/ucdit/cc/td/doc/product/dsl_prod/vrmgtsw/vr4ov/index.htm)



## REVIEW DRAFT

### CPE Publications

The Cisco CPE, also known as the Cisco 600 Series, is part of the Cisco end-to-end DSL product family. CPE comprises modems and routers at the customer site primarily used by home office and corporate LAN personnel. Most CPE uses the Cisco Broadband Operating System (CBOS) as its operating system. CBOS provides a comprehensive command set and web interface that allow you to configure your Cisco CPE modem or router.

A complete list of all released Cisco 600 Series documentation is available on the World Wide Web at [http://www.cisco.com/univercd/cc/td/doc/product/dsl\\_prod/c600s/index.htm](http://www.cisco.com/univercd/cc/td/doc/product/dsl_prod/c600s/index.htm).

### Cisco Connection Online

Cisco Connection Online (CCO) is Cisco Systems' primary, real-time support channel. Maintenance customers and partners can self-register on CCO to obtain additional information and services.

Available 24 hours a day, 7 days a week, CCO provides a wealth of standard and value-added services to Cisco's customers and business partners. CCO services include product information, product documentation, software updates, release notes, technical tips, the Bug Navigator, configuration notes, brochures, descriptions of service offerings, and download access to public and authorized files.

CCO serves a wide variety of users through two interfaces that are updated and enhanced simultaneously: a character-based version and a multimedia version that resides on the World Wide Web (WWW). The character-based CCO supports Zmodem, Kermit, Xmodem, FTP, and Internet e-mail, and it is excellent for quick access to information over lower bandwidths. The WWW version of CCO provides richly formatted documents with photographs, figures, graphics, and video, as well as hyperlinks to related information.

You can access CCO in the following ways:

- WWW: <http://www.cisco.com>
- WWW: <http://www-europe.cisco.com>
- WWW: <http://www-china.cisco.com>
- Telnet: [cco.cisco.com](http://cco.cisco.com)
- Modem: From North America, 408 526-8070; from Europe, 33 1 64 46 40 82. Use the following terminal settings: VT100 emulation; databits: 8; parity: none; stop bits: 1; and connection rates up to 28.8 kbps.

For a copy of CCO's Frequently Asked Questions (FAQ), contact [cco-help@cisco.com](mailto:cco-help@cisco.com). For additional information, contact [cco-team@cisco.com](mailto:cco-team@cisco.com).



#### Note

---

If you are a network administrator and need personal technical assistance with a Cisco product that is under warranty or covered by a maintenance contract, contact Cisco's Technical Assistance Center (TAC) at 800 553-2447, 408 526-7209, or [tac@cisco.com](mailto:tac@cisco.com). To obtain general information about Cisco Systems, Cisco products, or upgrades, contact 800 553-6387, 408 526-7208, or [cs-rep@cisco.com](mailto:cs-rep@cisco.com).

---

# Documentation CD-ROM

Cisco documentation and additional literature are available in a CD-ROM package, which ships with your product. The Documentation CD-ROM, a member of the Cisco Connection Family, is updated monthly. Therefore, it might be more current than printed documentation. To order additional copies of the Documentation CD-ROM, contact your local sales representative or call customer service. The CD-ROM package is available as a single package or as an annual subscription. You can also access Cisco documentation on the World Wide Web at <http://www.cisco.com>, <http://www-china.cisco.com>, or <http://www-europe.cisco.com>.

If you are reading Cisco product documentation on the World Wide Web, you can submit comments electronically. Click **Feedback** in the toolbar and select **Documentation**. After you complete the form, click **Submit** to send it to Cisco. We appreciate your comments.

---

This document is to be used in conjunction with the documents listed in the "Related Documentation" section.

Access Registrar, AccessPath, Any to Any, AtmDirector, Browse with Me, CCDA, CCDE, CCDP, CCIE, CCNA, CCNP, CCSI, CD-PAC, the Cisco logo, Cisco Certified Internetwork Expert logo, *CiscoLink*, the Cisco Management Connection logo, the Cisco NetWorks logo, the Cisco Powered Network logo, Cisco Systems Capital, the Cisco Systems Capital logo, Cisco Systems Networking Academy, the Cisco Systems Networking Academy logo, the Cisco Technologies logo, ConnectWay, Fast Step, FireRunner, Follow Me Browsing, FormShare, GigaStack, IGX, Intelligence in the Optical Core, Internet Quotient, IP/VC, Kernel Proxy, MGX, MultiPath Data, MultiPath Voice, Natural Network Viewer, NetSonar, Network Registrar, the Networkers logo, *Packet*, PIX, Point and Click Internetworking, Policy Builder, Precept, ScriptShare, Secure Script, ServiceWay, Shop with Me, SlideCast, SMARTnet, SVX, *The Cell*, TrafficDirector, TransPath, ViewRunner, Virtual Loop Carrier System, Virtual Service Node, Virtual Voice Line, VisionWay, VlanDirector, Voice LAN, WaRP, Wavelength Router, Wavelength Router Protocol, WebViewer, Workgroup Director, and Workgroup Stack are trademarks; Changing the Way We Work, Live, Play, and Learn, Empowering the Internet Generation, The Internet Economy, and The New Internet Economy are service marks; and ASIST, BPX, Catalyst, Cisco, Cisco IOS, the Cisco IOS logo, Cisco Systems, the Cisco Systems logo, the Cisco Systems Cisco Press logo, Enterprise/Solver, EtherChannel, EtherSwitch, FastHub, FastLink, FastPAD, FastSwitch, GeoTel, IOS, IP/TV, IPX, LightStream, LightSwitch, MICA, NetRanger, Post-Routing, Pre-Routing, Registrar, StrataView Plus, Stratm, TeleRouter, and VCO are registered trademarks of Cisco Systems, Inc. or its affiliates in the U.S. and certain other countries. All other trademarks mentioned in this document are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any of its resellers. (9912R)

Copyright © 2000, Cisco Systems, Inc.  
All rights reserved.