



Numerics

10/100BASE-T ports

- cables and connectors [B-1](#)
- connecting to [2-26](#)
- connection distances, maximum [1-6](#)
- full duplex [1-6, 1-7](#)
- half duplex [1-6](#)
- pinouts [B-2](#)

100BASE-FX ports

- cables and connectors [B-2](#)
- connecting to [2-28 to 2-30](#)
- connection distances, maximum [1-7](#)

100 port mode LED [1-13 to 1-15](#)

19-, 23-, and 24-inch racks [2-8](#)

A

AC power

- connecting to [2-25](#)
- connector [1-19](#)
- warning [C-2 to C-5](#)

adapter pinouts

- See terminal adapter pinouts

autonegotiation [1-6](#)

B

baud rate [2-33](#)

brackets

- See mounting brackets

C

cables

- 10/100BASE-T ports [B-1 to B-2, B-4](#)
- 100BASE-FX, 50/125- or 62.5/125-micron fiber-optic [2-28, B-2](#)
- crossover and straight-through pinouts [B-4](#)
- RJ-21 pinouts [B-5](#)
- rollover [B-6](#)
- rollover pinouts
 - DB-25 adapter [B-8](#)

CCO

- See Cisco.com

chassis, warning against stacking [C-8](#)

circuit breaker (15A) warning [C-15](#)

Cisco.com [xix](#)

Cisco Cluster Management Suite [1-4](#)

Cisco RPS

- See RPS

- CiscoWorks 2000 [1-4](#)
 - Class 1 laser product warning [C-25](#)
 - Cluster Management Suite [1-4](#)
 - command-line interface (CLI) [1-4](#)
 - connecting 10/100 ports to IP Phones [2-27](#)
 - connecting to
 - 10/100BASE-T ports [2-26](#)
 - 100BASE-FX ports [2-28 to 2-30](#)
 - console port [2-33 to 2-34](#)
 - LRE port [2-30 to 2-32](#)
 - workstation [B-7](#)
 - connection distances, maximum
 - 10/100BASE-T ports [1-6](#)
 - 100BASE-FX ports [1-7](#)
 - LRE ports [2-6](#)
 - connectivity problems, solving [3-3](#)
 - connectors
 - RJ-21 [B-3, B-5](#)
 - connectors, See also ports
 - console [B-5](#)
 - connectors and cables [1-19](#)
 - 10/100BASE-T ports [B-1 to B-2](#)
 - 100BASE-FX ports [1-7, B-2](#)
 - console port [2-33 to 2-34](#)
 - power (AC and RPS) [1-19](#)
 - RJ-21 connector [B-3, B-5](#)
 - RPS 300 [1-20](#)
 - RPS 600 [1-20](#)
 - See also ports
 - console port [1-21](#)
 - adapter pinouts
 - RJ-45-to-DB-25 terminal [B-7](#)
 - RJ-45-to-DB-9 terminal [B-6](#)
 - cable [B-6](#)
 - connecting to [2-33 to 2-34](#)
 - default characteristics [2-33](#)
 - conventions, document [xii](#)
 - crossover cable
 - connectivity problems [3-5](#)
 - pinout [B-4](#)
-
- ## D
- default characteristics of the console port [2-33](#)
 - documentation, CD-ROM
 - Catalyst 2900 XL and Catalyst 3500 XL [xvi](#)
 - document conventions [xii](#)
 - duplex SC connector [B-2](#)
-
- ## E
- expansion slots
 - illustration [1-5](#)
 - LEDs [1-17](#)
 - overview [1-8](#)
 - supported modules [1-8](#)

F

- feedback to Cisco Systems, web [xviii](#)
- fiber-optic cable
 - 50/125- or 62.5/125-micron [2-28, B-2](#)
- front panel
 - 10/100 ports [1-6](#)
 - expansion slots [1-8](#)
 - fixed ports [1-6](#)
 - LEDs [1-9](#)
 - LRE ports [1-7](#)
- full duplex
 - 10/100BASE-T ports [1-6, 1-7](#)
 - LED [1-15, 1-16](#)
 - port mode [1-15, 1-16](#)

G

- ground connection warning [C-14](#)
- grounded equipment warning [C-17](#)

H

- half duplex
 - 10/100BASE-T ports [1-6](#)
 - LED [1-15, 1-16](#)
 - port mode [1-15, 1-16](#)
- hot-swappable modules [1-8](#)
- HP OpenView [1-4](#)

I

- installation
 - attaching mounting brackets (rack-mount) [2-11, 2-17](#)
 - attaching mounting brackets (telco rack-mount) [2-16](#)
 - attaching mounting brackets (wall-mount) [2-23](#)
 - cable guide [2-20](#)
 - connecting to
 - 10/100BASE-T ports [2-26](#)
 - 100BASE-FX ports [2-28 to 2-30](#)
 - console port [2-33 to 2-34](#)
 - LRE port [2-30 to 2-32](#)
 - console port
 - connecting to [2-33 to 2-34](#)
 - electrical noise, avoiding [2-6](#)
 - guidelines [2-5](#)
 - mounting in a rack [2-19 to 2-20](#)
 - mounting on a wall [2-23 to 2-25](#)
 - packing list [2-6](#)
 - rack-mount [2-19 to 2-20](#)
 - table or shelf [2-7](#)
 - wall-mount [2-23 to 2-25](#)
 - warnings [2-1 to 2-4](#)
- IOS command-line interface [1-4](#)
- IP Phones
 - connecting to 10/100 ports [2-27](#)

J

jewelry removal warning [C-6](#)

L

LAN-to-phone jack [2-27](#)

Laser beam exposure warning [C-26](#)

LEDs

100 port mode [1-13, 1-15](#)

DUPLX [1-16](#)

expansion slots [1-17](#)

FDUP [1-13, 1-15](#)

full duplex [1-15, 1-16](#)

half duplex [1-15, 1-16](#)

interpreting [1-13](#)

LRE [1-14, 1-16](#)

port status [1-9, 1-15 to 1-16](#)

POST results [2-25, 3-2](#)

RPS [1-12 to 1-13](#)

RPS 300 [1-13](#)

RPS 600 [1-12](#)

SPEED [1-14, 1-16](#)

STAT [1-13 to 1-16](#)

STAT LED [1-15](#)

System [1-11](#)

UTL [1-13, 1-15](#)

lightning activity warning [C-23](#)

long-reach Ethernet

See LRE

LRE

defined [1-1](#)

LED [1-14, 1-16](#)

port

connecting to [2-30 to 2-32](#)

See also RJ-21 connector

M

main disconnecting device warning [C-9](#)

maximum connection distances

See connection distances, maximum

mid-mount

See installation

attaching mounting brackets (telco rack-mount)

modules [1-8](#)

mounting brackets [2-8](#)

attaching [2-11, 2-16, 2-17, 2-23](#)

N

no on/off switch warning [C-27](#)

O

overtemperature warning [C-10](#)

P

packing list [2-6](#)

PC, connecting to switch [2-33](#)

performance problems, solving [3-3](#)

personnel warning [C-4](#)

pinouts

10/100BASE-T ports [B-2](#)

cable, straight-through and crossover [B-4](#)

RJ-21 connector [B-5](#)

RJ-45-to-DB-25 terminal adapter [B-8](#)

RJ-45-to-DB-9 terminal adapter [B-7](#)

rollover cable [B-7, B-8](#)

ports

10/100BASE-T [1-6](#)

100BASE-FX [1-7](#)

console [1-21](#)

console connector pinouts [B-5](#)

LRE [1-7](#)

module [1-8](#)

port status LEDs [1-9, 1-15 to 1-16](#)

port status LEDs [1-9, 1-15 to 1-16](#)

POST results [2-25](#)

power

connecting to [2-25](#)

warning [C-18](#)

power connectors [1-19](#)

power on [2-25](#)

power supply

AC power outlet [1-19](#)

RPS connector [1-19](#)

warning [C-21](#)

product disposal warning [C-24](#)

Q

qualified personnel warning [C-4](#)

R

rack installation

bracket mounting points [2-9](#)

rear panel

AC power connector [1-19](#)

console port [B-5](#)

RPS connector [1-19](#)

RJ-21 connector

illustration [1-7](#)

pinouts [B-5](#)

RJ-45 connector, console port [2-34, B-3, B-5](#)

RJ-45 console port [1-18](#)

rollover cable [2-34, B-6](#)

identifying [B-6](#)

pinouts [B-8](#)

RPS

LED [1-12 to 1-13](#)

RPS 300

connector [1-20](#)

LED [1-13](#)

supported switches [1-19](#)

warning [C-3](#)

RPS 600

connector [1-20](#)

LED [1-12](#)

supported switches [1-19](#)

warning [C-2](#)

S

safety [C-1](#)

SC connectors [B-2](#)

SPEED LED [1-14, 1-16](#)

stacking the chassis warning [C-8](#)

STAT LED [1-13 to 1-16](#)

straight-through cable pinouts

cables

straight-through [B-4](#)

SunNet Manager [1-4](#)

supply circuit warning [C-18](#)

switch

powering on [2-25](#)

switched ports, module [1-8](#)

System LED [1-11](#)

T

Telco [2-16](#)

telephone network power warning

See TN power warning [C-13](#)

Telnet, and accessing the CLI [1-4](#)

temperature

maximum for installation [2-6, A-2](#)

warning [C-10](#)

temperature warning [C-10](#)

terminal, connecting to switch [2-33](#)

terminal adapter pinouts

RH-45-to-RJ-45 [B-7](#)

RJ-45-to-DB-25 [B-7](#)

RJ-45-to-DB-9 [B-6](#)

terminal emulation software [2-33](#)

TN power warning [C-13](#)

translated warnings [C-1 to C-33](#)

U

UTL LED [1-13, 1-15](#)

V

VDSL

defined [1-1](#)

very-high-data-rate digital subscriber line

See VDSL

voltage warning [C-19](#)

W

warnings

translated [C-1 to C-33](#)

