



A

alarm thresholds
 rates (table) 10-17

alarm thresholds rates (table) 10-17

aps clear command 1-2

aps direction command 1-4

aps disable command 1-7

aps enable command 1-8

aps lockout command 1-10

aps message-channel command 1-12

aps protection command 1-14

aps revertive command 1-16

aps switch command 1-18

aps timer message holddown command 1-20

aps timer message max-interval command 1-22

aps timer search-for-up command 1-24

aps timer switchover-enable min-interval command 1-26

aps timer wait-to-restore command 1-28

aps trigger command 10-2

aps working command 1-30

aps y-cable command 1-32

associate group command 1-34

associate interface command 1-36

autonegotiation. See negotiation auto command

auto-sync counters interface 7-2

auto-sync counters interface command 7-2

auto-sync running-config command 7-4

auto-sync startup-config command 7-6

C

cdl enable command 3-4

cdl flow identifier command 3-6

cdl flow-identifier force hop-endpoint command 3-2

cdl flow identifier reserved command 3-8

clear facility-alarm command 9-2

clear osep command 6-2

clear performance history command 3-10

clear redundancy command 7-8

CLI
 description xvii
 help xix

clock rate command 3-11

command-line interface. See CLI

command modes
 description xvii
 table xviii

commands
 abbreviating xix
 listing xix

connect command 3-13

D

debug aps command 2-2

debug cdl defect-indication command 2-3

debug cm command 2-5

debug cpu command 2-7

debug diag online command 2-9

debug driver 2gfc command 2-11

debug driver control ethernet command 2-12

debug driver escon command 2-14, 2-16

debug driver multirate command 2-18

debug driver nvram command 2-20

debug driver psm command 2-24

debug driver src command [2-26](#)
 debug driver ten-gigabit trunk command [2-28, 2-30](#)
 debug driver two-five-gigabit trunk command [2-31](#)
 debug driver voa command [2-33](#)
 debug oscp command [2-35](#)
 debug ports command [2-37](#)
 debug redundancy command [2-39](#)
 debug switch command [2-41](#)
 debug topology command [2-43](#)
 description command [10-4](#)
 diag online command [4-2](#)
 diag online slot command [4-4](#)
 diag online subslot command [4-6](#)
 diag power-on 2gfc command [5-3](#)
 diag power-on carrier-mb command [5-5](#)
 diag power-on command [5-2](#)
 diag power-on cpu command [5-7](#)
 diag power-on escon-10p command [5-9](#)
 diag power-on fcge-8p command [5-11](#)
 diag power-on itu2 command [5-13](#)
 diag power-on itu3 command [5-17](#)
 diag power-on itu-tun command [5-15](#)
 diag power-on mdx idprom subslot command [5-19](#)
 diag power-on oscm command [5-21](#)
 diag power-on psm command [5-23](#)
 diag power-on tsp1 command [5-25](#)
 diag power-on voa command [5-27](#)
 documentation
 related [xvi](#)

E

encapsulation command [3-15](#)
 environment-monitor shutdown fan command [9-4](#)
 environment-monitor shutdown temperature
 command [9-6](#)
 environment-monitor temperature-threshold
 command [9-8](#)

F

flow control command [3-20](#)

H

help
 CLI [xix](#)

L

laser control forward enable command [3-22](#)
 laser control safety enable command [3-25](#)
 laser frequency command [3-27](#)
 laser shutdown command [3-29](#)
 loopback command [3-31](#)

M

maintenance-mode command [7-9](#)
 monitor enable command [3-33](#)

N

notification-throttle timer command [10-6](#)

O

optical attenuation automatic desired-power
 command [3-38](#)
 optical attenuation manual command [3-40](#)
 optical threshold power receive command [3-42](#)
 oscp timer hello holddown command [6-4](#)
 oscp timer hello interval command [6-6](#)
 oscp timer inactivity-factor command [6-8](#)
 over-subscription command [3-45](#)

P

portgroup command [3-50](#)

R

redundancy command [7-11](#)

redundancy manual-sync command [7-13](#)

redundancy reload peer command [7-15](#)

redundancy reload shelf command [7-17](#)

redundancy switch-activity command [7-19](#)

reload command [9-10](#)

S

show aps command [1-39](#)

show aps trace command [1-44](#)

show bootvar command [9-15](#)

show cdl defect-indication command [3-52](#)

show cdl flow command [3-54](#)

show cdl flow defect-indication command [3-56](#)

show cdl flow identifier command [3-58](#)

show ciscoview package command [9-17](#)

show ciscoview version command [9-19](#)

show connect command [3-60](#)

show controllers command [3-64](#)

show diag online command [4-8](#)

show diag online detail command [4-10](#)

show diag online slot command [4-14](#)

show diag power-on command [5-29](#)

show environment command [9-21](#)

show facility-alarm status command [9-23](#)

show hardware command [9-25](#)

show interfaces command [3-70](#)

show inventory command [9-28](#)

show optical filter command [3-78](#)

show optical wavelength mapping command [9-30](#)

show oscp info command [6-10](#)

show oscp interface command [6-12](#)

show oscp neighbor command [6-14](#)

show oscp statistics command [6-16](#)

show oscp traffic command [6-18](#)

show patch command [3-81](#)

show performance command [3-83](#)

show redundancy capability command [7-21](#)

show redundancy clients command [7-25](#)

show redundancy counters command [7-27](#)

show redundancy history command [7-30](#)

show redundancy running-config-file command [7-32](#)

show redundancy states command [7-34](#)

show redundancy summary command [7-37](#)

show reload command [9-11](#)

show temperature command [9-32](#)

show threshold-list command [10-8](#)

show topology command [11-2](#)

show topology neighbor command [11-4](#)

show tsi command [3-87](#)

show upgrade-info functional-image command [9-34](#)

show version command [9-36](#)

shutdown command [3-90](#)

snmp-server enable traps aps command [8-2](#)

snmp-server enable traps cdl command [8-4](#)

snmp-server enable traps optical monitor min-severity
command [8-6](#)

snmp-server enable traps oscp command [8-8](#)

snmp-server enable traps rf command [8-10](#)

snmp-server enable traps threshold min-severity
command [8-12](#)

snmp-server enable traps topology command [8-14](#)

snmp-server host command [8-16](#)

standby privilege-mode enable command [7-40](#)

sub-rate command [3-98](#)

superportgroup command [3-100](#)

T

threshold command [10-10](#)

threshold-group command [10-12](#)

threshold-list command [10-14](#)
tl1 user command [9-38](#)
topology hold-time command [11-6](#)
topology neighbor agent ip-address command [11-11](#)
topology neighbor cdp command [11-13](#)
topology neighbor command [11-8](#)
topology neighbor disable command [11-15](#)
traceroute command [9-40](#)
tsi-protocol command [3-92](#)
tx-buffer size command [3-94](#)

U

undebg all command [2-45](#)

V

value command [10-16](#)