

# Appendix A

## ASCII Character Set

---



Many of the configuration commands described in this manual require the decimal representation of an ASCII character. Table A-1 provides translations from ASCII character to decimal number. To find the decimal equivalent of the ASCII character, add the row heading and column heading numbers together.

**Table A-1** ASCII-to-Decimal Translation Table

	<b>0</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>
0	^@	^A	^B	^C	^D	^E	^F	^G	^H	^I
10	^J	^K	^L	^M	^N	^O	^P	^Q	^R	^S
20	^T	^U	^V	^W	^X	^Y	^Z	ESC	FS	GS
30	RS	US	SP	!	"	#	\$	%	&	,
40	(	)	*	+	,	-	.	/	0	1
50	2	3	4	5	6	7	8	9	:	;
60	<	=	>	?	@	A	B	C	D	E
70	F	G	H	I	J	K	L	M	N	O
80	P	Q	R	S	T	U	V	W	X	Y
90	Z	[	\	]	^	-	'	a	b	c
100	d	e	f	g	h	i	j	k	l	m
110	n	o	p	q	r	s	t	u	v	w
120	x	y	z	{		{	~	DEL		

