



Numerics

10/100BaseT Ethernet port 1-6

A

analog ports 1-6

analog voice network module 2-2

application command 3-4

B

backup Cisco CallManager 3-4

C

call agent 1-6, 3-5

 manual redirection 3-7

 redundant 1-8

ccm-manager command 3-5

channel associated signaling, see T1-CAS

channel bank 1-9

chassis, rear view 2-2

Cisco CallManager 1-6, 3-4

 configuring 3-10

Cisco IOS

 command modes 2-17

 enable mode 2-19

 getting help 2-16

 saving configuration changes 2-19

 undo command 2-19

command line interface 2-4

command modes, Cisco IOS 2-17

commands

 application 3-4

 ccm-manager 3-5

 copy running-config 2-19

 copy-running-config 3-3

 dial-peer 3-4

 exec-timeout 2-21

 help 2-16

 MGCP 3-5

 show mgcp 3-7

 show startup-config 3-3

 switchback 3-5

 switchover 3-7

 undo 2-19

commands show running-config 3-3

configuration

 disabling timeout 2-21

saving changes 2-9, 2-19, 2-23

configuring

- Cisco CallManager 3-10
- DS-0 hunt groups 3-14
- DTMF relay
- Fast Ethernet 2-8, 2-22
- H.323 endpoint 3-10
- host name 2-7, 2-19
- interface parameters 2-10
- IP address 2-22
- ISDN BRI line 2-11
- ISDN PRI interface
 - E1 interface 3-25
 - T1 interface 3-24
- MGCP host name 3-7
- multiflex trunk interface
 - E1 interface 3-25
 - T1 interface 3-24
- passwords 2-7
- subnet mask 2-22
- timeslots for a DS-0 group 3-13
- voice interfaces 3-2
- Voice over IP 3-1 to 3-31
- voice ports with MGCP 3-4
- wildcard destination patterns 3-11

copy-running-config command 2-19, 3-3

D

dial-peer command 3-4

DID, see Direct Inward Dialing

digital ports 1-6

Direct Inward Dialing 1-10

DS-0

- configuring hunt groups 3-14
- configuring timeslots 3-13
- group 1-9
- hunt groups 1-9

DTMF relay, configuring

dual-tone multi-frequency relay, see DTMF relay

E

E&M 1-11

- emulation, sample configuration 3-17
- emulation options 3-13
- ports 1-7

E1/T1 ISDN PRI interface 3-24, 3-25

E1/T1 multiflex trunk interface 3-24, 3-25

Ear and Mouth, see E&M

enable mode 2-19

enable password 2-7

EXEC prompt 2-9

F
Fast Ethernet

- configuring interface 2-8, 2-22

- Foreign Exchange Office, see FXO

- Foreign Exchange Station, see FXS

FXO

- configuring with MGCP 3-4
- emulation, sample configuration 3-16
- emulation example 1-10
- emulation options 3-13

FXS

- configuring with MGCP 3-4
- emulation, sample configuration 3-15
- emulation example 1-11
- emulation options 3-13

G

- gateway, provisioning 3-10

- generic MGCP support 3-5

- global configuration command mode 2-17

H

- H.225 1-4

- H.245 1-4

- H.323 1-3

- configuring endpoint 3-10

- configuring IP address 3-11

- help command 2-16

- host name 2-7

- configuring 2-19

- show config command 2-21

- verifying 2-21

- hunt groups, configuring 3-14

- initial configuration dialog 2-4

- interface configuration command mode 2-18

- interface numbering 2-1

- IP address, configuring 2-22

- IP address

- configuring for H.323 endpoints 3-11

- ISDN BRI

- switch type, provisioning 2-12

- switch types 2-11

- ISDN BRI line, configuring 2-11

- ISDN PRI interface

- E1 configuration 3-25

- T1 configuration 3-24

- ISDN provisioning by switch type (table) 2-13

- ISDN switch types 3-18

M

- manual redirection of call agent 3-7

media gateway control protocol, see MGCP

MGCP

- call agent 1-6
- command settings 3-8
- configuring voice ports 3-4
- with Cisco CallManager 3-4

multiflex trunk interface

- E1 configuration 3-25
- T1 configuration 3-24

N

network modules

- configuring
 - E1/T1 ISDN PRI interface 2-15
 - ISDN BRI interface 2-10

NVRAM 2-23

P

parameters

- configuring interface 2-10

password

- configuring 2-19
- enable 2-7
- secret 2-7
- show config command 2-21
- verifying 2-21
- virtual terminal 2-7

PBX, connecting to 1-7

- port numbering 2-1
- powering on the gateway 2-5
- primary Cisco CallManager 3-4
- privileged EXEC command mode 2-17
- provisioning ISDN switch types 2-12
- provisioning the gateway 3-10
- Public Switched Telephone Network (PSTN) 1-1

R

redundant call agent feature 1-8

S

- saving configuration changes 2-9, 2-19, 2-23
- secret password 2-7
- service profile identifier
 - See SPID
- show mgcp command 3-7
- show running-config command 3-3
- show startup-config command 3-3
- slot numbering 2-1
- SPID 2-14
- SPIDs 2-14
- subnet mask, configuring 2-22
- switchback 1-8
- switchback command 3-5

switchback options 3-6
switchover 3-6
switchover command 3-7

T

T1 1-9
 channel bank, connecting to 1-9
 ports 1-6
T1-CAS
 illustration 1-11
T1 channel bank 3-13
time-division multiplexing (TDM) 1-9
timeout, disabling 2-21
timeslots, configuring 3-13

U

undo command 2-19
user EXEC command mode 2-17

V

verifying
 host name 2-21
 password 2-21
VIC, see voice interface card
viewing current configuration 3-7
virtual terminal password 2-7

voice interface card
voice interfaces
 configuring 3-2
voice network module 2-2
Voice over IP 1-1 to 1-3
 configuring 3-1 to 3-31
voice over IP
 configuring direct-inward dialing on a BRI
 port 1-13
 linking PBX users with E&M trunk lines
 1-12, 3-27
VoIP, see Voice over IP

W

wildcard destination patterns, configuring 3-11

