



# Access Point High-Speed WAN Interface Cards

---

Revised: 6/7/07, OL-12854-01

## Overview

This document describes access point high-speed WAN interface cards (HWICs) and how to connect access point HWICs to a network, and contains the following sections:

- [Access Point High-Speed WAN Interface Cards, page 1](#)
- [Related Documentation, page 9](#)
- [Obtaining Documentation, Obtaining Support, and Security Guidelines, page 10](#)

For an overview of Cisco interface cards used for Cisco access routers see the [Cisco Interface Cards for Cisco Access Routers](#) document.

## Access Point High-Speed WAN Interface Cards

This section describes access point HWICs and contains the following sections:

- [Access Point HWIC Limitations](#)
- [Access Point HWIC Safety Guidelines and Warnings](#)
- [Access Point HWIC LEDs](#)
- [Supported Cisco Radio Antennas](#)
- [Connecting Radio Antennas to the Access Point HWIC](#)

The access point HWIC houses one radio (single-mode) or two radios (dual-mode) for connection to a wireless LAN. There are two access point HWICs:

- Single-mode access point HWIC with 2.4-GHz radio for 802.11b/g operations. (See [Figure 132](#).)  
The following are the Cisco part numbers and the geographic regions for which the interface cards are configured:
  - HWIC-AP-G-A—North America
  - HWIC-AP-G-E—Europe
  - HWIC-AP-G-J—Japan

**Note**

The wireless operations can be configured by using the Cisco Router and Security Device Manager (SDM) web-based application, or by using the Cisco IOS command-line interface (CLI). See the [Cisco Router and Security Device Manager \(SDM\) Quick Start Guide](#) or the [Cisco Access Router Wireless Configuration Guide](#) for more information.

- Dual-mode access point HWIC with two radios: one 2.4-GHz 802.11b/g radio and one 5-GHz 802.11a radio. (See [Figure 133](#).) The following are the Cisco part numbers and the geographic regions for which the interface cards are configured:
  - HWIC-AP-AG-A—North America
  - HWIC-AP-AG-E—Europe

**Note**

Access point HWICs with the 5-GHz 802.11a radio that are used in Europe may be required to use Dynamic Frequency Selection (DFS) to detect and avoid interfering with radar signals to comply with that regulatory domain. DFS operates only on routers running Cisco IOS version 12.4(2)XA or higher.

- HWIC-AP-AG-J—Japan

Both the single-mode and dual-mode access point HWICs support diversity in the radio antennas. Types of antennas include swivel-mount dipole, wall-mount, and ceiling-mount antennas.

**Note**


For regulatory information about the access point HWIC and supported antennas, see the [Declarations of Conformity and Regulatory Information for Cisco Access Products with 802.11a/b/g and 802.11b/g Radios](#) document.

[Figure 132](#) shows a single-mode access point HWIC, and [Figure 133](#) shows a dual-mode access point HWIC.

**Note**


Although the single-mode access point HWIC has two sets of LEDs, the LEDs on the left side of the single-mode access point HWIC are nonfunctioning and do not light.

**Figure 132** Single-Mode Access Point HWIC Front Panel

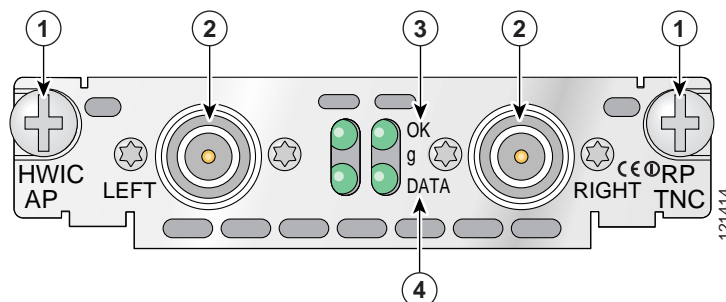

1	Mounting screws	3	OK LED for the 802.11b/g radio
2	RP-TNC connectors	4	DATA LED for the radio

Figure 133 Dual-Mode Access Point HWIC Front Panel

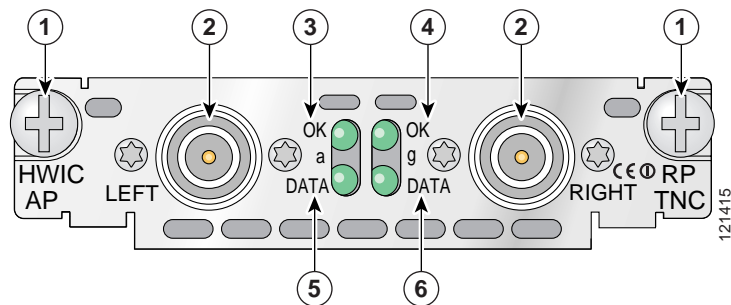

1	Mounting screws	4	OK LED for the 802.11b/g radio
2	RP-TNC connectors	5	DATA LED for the 802.11a radio
3	OK LED for the 802.11a radio	6	DATA LED for the 802.11b/g radio

## Access Point HWIC Limitations

Limitations of the single-mode and dual-mode access point HWICs include the following:

- Only one access point HWIC is supported in the router at a time. Installation of two access point HWICs in the router is not supported.
- The access point HWIC must be installed in an HWIC slot. To determine which slots on your platform support HWICs, see the [“Platform Slot Numbering and Limitations for Cisco Interface Cards”](#) section on page 8.
- The 4.9-GHz band is not supported.
- Although the use of two antennas is not required, both antennas should be used to take advantage of diversity for the best RF performance.

## Access Point HWIC Safety Guidelines and Warnings

The following are guidelines for wireless access devices:

- Do not touch or move antenna(s) while the unit is transmitting or receiving.
- Do not hold any component containing a radio so that the antenna is very close to or touching any exposed parts of the body, especially the face or eyes, while transmitting.
- The use of wireless devices in hazardous locations is limited to the constraints posed by the local codes, the national codes, and the safety directors of such environments.



Note

For regulatory information about the access point HWIC, see the [Declarations of Conformity and Regulatory Information for Cisco Access Products with 802.11a/b/g and 802.11b/g Radios](#) document.



Warning

Before working on a chassis or working near power supplies, unplug the power cord on AC units; disconnect the power at the circuit breaker on DC units. Statement 12

**Warning**

During this procedure, wear grounding wrist straps to avoid ESD damage to the card. Do not directly touch the backplane with your hand or any metal tool, or you could shock yourself. Statement 94

**Warning**

Do not operate your wireless network device near unshielded blasting caps or in an explosive environment unless the device has been modified to be especially qualified for such use. Statement 245B

**Warning**

In order to comply with FCC radio frequency (RF) exposure limits, antennas should be located at a minimum of 7.9 inches (20 cm) or more from the body of all persons. Statement 332

**Warning**

Do not work on the system or connect or disconnect cables during periods of lightning activity. Statement 1001

**Warning**

Read the installation instructions before connecting the system to the power source. Statement 1004

**Warning**

Ultimate disposal of this product should be handled according to all national laws and regulations. Statement 1040

## Access Point HWIC LEDs

The access point HWIC LEDs are shown in [Figure 132](#) and [Figure 133](#). The functions of the LEDs are described in [Table 39](#).

*Table 39 Access Point HWIC LEDs*

LED	Description
OK	Off if the access point HWIC is administratively shut down or there is no service set identifier (SSID) configured.
	Blinks if an SSID is configured but there is no client associated.
	On (solid green) if one or more clients are associated.
DATA	Off if the access point HWIC is administratively shut down or there is no SSID configured.
	Blinks if there is activity (sending or receiving packets).

## Supported Cisco Radio Antennas

Table 40 lists the Cisco antennas that are supported for use on the single-mode access point HWIC.

**Table 40** Cisco Antennas Supported on the Single-Mode Access Point HWIC

Cisco Part Number	Antenna Type	Maximum Gain	Description
AIR-ANT4941	Omnidirectional	2.2 dBi	This is the default antenna. Swivel-mount dipole antenna operating in the 2.4-to 2.5-GHz band. This antenna is designed for use with Cisco wireless products utilizing an RP-TNC connector. For more information, see the <a href="#">Cisco Aironet 2.4 GHz Articulated Dipole Antenna (AIR-ANT4941)</a> document.
AIR-ANT1728	Omnidirectional	5.2 dBi	Ceiling-mount antenna operating in the 2.4- to 2.5-GHz band. This antenna has a clip that allows it to be mounted to a drop-ceiling cross member. For more information, see the <a href="#">Cisco Aironet High-Gain Omnidirectional Ceiling Mount Antenna (AIR-ANT1728)</a> document. <b>Note</b> This antenna is not supported in Japan.
AIR-ANT3549	Patch	9 dBi	Wall-mount antenna operating in the 2.4- to 2.5-GHz band. <b>Note</b> This antenna is not supported in the United States and Canada.
AIR-ANT5959	Diversity omnidirectional	2 dBi	Ceiling-mount antenna operating in the 2.4- to 2.5-GHz band. This antenna has a clip that allows it to be mounted to a drop-ceiling cross member. For more information, see the <a href="#">Cisco Aironet 2-dBi Diversity Omnidirectional Ceiling Mount Antenna (AIR-ANT5959)</a> document.

Table 41 lists the Cisco antennas that are supported for use on the dual-mode access point HWIC.

**Table 41** Cisco Antennas Supported on the Dual-Mode Access Point HWIC

Cisco Part Number	Antenna Type	Maximum Gain	Description
AIR-ANTM2050D-R	Omnidirectional	<ul style="list-style-type: none"> <li>2.2 dBi in the 2.4-GHz band</li> <li>5 dBi in the 5-GHz band</li> </ul>	This is the default antenna. Swivel-mount dipole antenna operating in the 2.4- to 2.5-GHz band. This antenna is designed for use with Cisco wireless products utilizing an RP-TNC connector. For more information, see the <a href="#">Cisco Multiband Swivel-Mount Dipole Antenna (AIR-ANTM2050D-R)</a> document.
AIR-ANTM4050V-R	Diversity omnidirectional	<ul style="list-style-type: none"> <li>4 dBi in the 2.4-GHz band</li> <li>5 dBi in the 5-GHz band</li> </ul>	Ceiling-mount antenna operating in the 2.4- to 2.5-GHz band. This antenna has a clip that allows it to be mounted to a drop-ceiling cross member. For more information, see the <a href="#">Cisco Multiband Diversity Omnidirectional Ceiling-Mount Antenna (AIR-ANTM4050V-R)</a> document.
AIR-ANTM5560P-R	Patch	<ul style="list-style-type: none"> <li>5.5 dBi in the 2.4-GHz band</li> <li>6 dBi in the 5-GHz band</li> </ul>	Wall-mount antenna operating in the 2.4- to 2.5-GHz band. For more information, see the <a href="#">Cisco Multiband Wall-Mount Antenna (AIR-ANTM5560P-R)</a> document.

## Connecting Radio Antennas to the Access Point HWIC

This section contains information about connecting the radio antennas.



### Note

Before connecting the radio antennas, install the access point HWIC in the router. See [Installing Cisco Interface Cards in Cisco Access Routers](#) for more information.

In addition to antenna orientation, wireless access point installation location with respect to all wireless clients plays a significant role in determining overall network performance. Clients at the furthest coverage points might have 10% to 50% of the bandwidth of clients close to it. Wireless network coverage in one area or location might need to be lowered to improve the performance of other clients.

Because antennas transmit and receive radio signals, their performance can be adversely affected by the surrounding environment including distance between access point and client, physical obstructions, or radio frequency (RF) interference.

Follow these guidelines to ensure the best possible performance:

- Wherever possible, mount the access point HWIC and antenna where the wireless devices would be within sight and avoid physical obstructions. Barriers along the line of sight between client and access point will degrade the wireless radio signals. access point HWICs and antennas can be installed above floor level in office environments or near the ceiling for better performance since most obstructions tend to be near floor level.

- The density of the materials used in a building's construction determines the number of walls the signal must pass through and still maintain adequate coverage. Consider the following before choosing the location to install your antenna:
  - Paper and vinyl walls have very little effect on signal penetration.
  - Solid and precast concrete walls limit signal penetration to one or two walls without degrading coverage.
  - Concrete and wood block walls limit signal penetration to three or four walls.
  - A signal can penetrate five or six walls constructed of drywall or wood.
  - A thick metal wall or wire-mesh stucco walls causes signals to reflect back and cause poor penetration.
- Avoid mounting the antenna next to a column or vertical support that could create a shadow zone and reduce the coverage area.
- Keep the antenna away from reflective metal objects such as heating and air-conditioning ducts, large ceiling trusses, building superstructures, and major power cabling runs. If necessary, use an extension cable to relocate the antenna away from these obstructions.

**Caution**

---

Install the access point HWIC and any antennas away from appliances that share the same frequency bands. Microwave ovens, cordless telephones, and security monitors can temporarily interfere with wireless performance.

---

**Caution**

---

We recommend you avoid installing wireless antennas in or near rack-mounted installations that include networking equipment and computer servers whose radiated noise emissions can severely degrade radio performance.

---

**Note**

---

If the desired installation site has a marginally acceptable level of radiated noise emissions, consider using a remote-mounted antenna, such as a wall-mount or ceiling-mount antenna, for better radio performance and coverage.

---

## Swivel-Mount Dipole Antennas


If you are using Cisco swivel-mount dipole antennas, follow these steps:

- 
- Step 1** Attach an antenna to each of the RP-TNC antenna connectors on the front of the access point HWIC and tighten it hand-tight.
- Step 2** Orient the antennas depending on how you intend to mount the router in which the access point HWIC is installed.
- If the router is on a table or desk, orient the antennas to the left and right sides so that they are at a 90-degree angle to each other. (See [Figure 134](#).)
  - If the router is on a vertical surface, such as a wall, orient the antennas up and at a 90-degree angle to each other.
  - If the router is on a ceiling, orient the antennas down and at a 90-degree angle to each other.
-

**Note**

Although it is not absolutely necessary, for best RF performance, orient the antennas as shown in [Figure 134](#).

**Figure 134** Swivel-Mount Dipole Antenna Positions for Use with Desktop Router

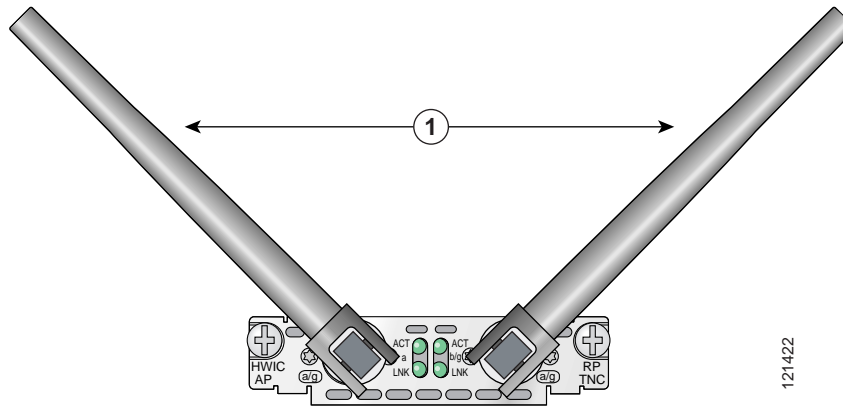

1	Swivel-mount dipole antennas		
---	------------------------------	--	--

For more information about connecting the AIR-ANT4941 to the HWIC-AP-G, see the [Cisco Aironet 2.4-GHz Articulated Dipole Antenna \(AIR-ANT4941\)](#) document.

For more information about connecting the AIR-ANTM2050D-R to the HWIC-AP-AG, see the [Cisco Multiband Swivel-Mount Dipole Antenna \(AIR-ANTM2050D-R\)](#) document.

## Wall-Mount and Ceiling-Mount Antennas and Cabling

Depending on the wireless environment, wall-mounted or ceiling-mounted antennas may be preferred for optimum radio coverage. If the length of the coaxial antenna cable is insufficient to cover the distance between the access point HWIC and the location of the installed antenna, you can use low-loss RP-TNC extension cables between the access point HWIC and the antenna cable.

RF energy is carried between the antennas and the radio equipment through a coaxial cable. An antenna cable introduces signal loss in the antenna system for both the transmitter and the receiver. Although the cable run can be 100 feet (30 m) or more from the access point HWIC to antenna locations, the longer the cable run, the greater the signal loss. To reduce signal loss, minimize the cable length and use only low-loss or ultra low-loss antenna cables to connect radio devices to antennas.

[Table 42](#) lists transmission loss information about low-loss and ultra-low-loss extension coaxial cables available from Cisco. For more information about antenna cables, see the [Antenna Cabling](#) document.



**Table 42** *Cisco Extension Coaxial Cables*

Cisco Product Number	Cable Length	Transmission Loss
AIR-CAB020LL-R	20 ft (6 m)	<ul style="list-style-type: none"> <li>• 2.4-GHz: 1.3 dBi</li> <li>• 5-GHz: 2.5 dBi</li> </ul>
AIR-CAB050LL-R	50 ft (15 m)	<ul style="list-style-type: none"> <li>• 2.4-GHz: 3.3 dBi</li> <li>• 5-GHz: 5.75 dBi</li> </ul>
AIR-CAB100ULL-R	100 ft (30 m)	<ul style="list-style-type: none"> <li>• 2.4-GHz: 4.4 dBi</li> <li>• 5-GHz: 7.25 dBi</li> </ul>
AIR-CAB150ULL-R	150 ft (46 m)	<ul style="list-style-type: none"> <li>• 2.4-GHz: 6.6 dBi</li> <li>• 5-GHz: 11 dBi</li> </ul>

To connect wall-mount or ceiling-mount antennas, follow the installation instructions for your antenna:

- For more information about connecting the AIR-ANT1728 to the HWIC-AP-G, see the [Cisco Aironet High-Gain Omnidirectional Ceiling Mount Antenna \(AIR-ANT1728\)](#) document.
- For more information about connecting the AIR-ANT5959 to the HWIC-AP-G, see the [Cisco Aironet 2-dBi Diversity Omnidirectional Ceiling Mount Antenna \(AIR-ANT5959\)](#) document.
- For more information about connecting the AIR-ANT4050V-R to the HWIC-AP-AG, see the [Cisco Multiband Diversity Omnidirectional Ceiling-Mount Antenna \(AIR-ANTM4050V-R\)](#) document.
- For more information about connecting the AIR-ANT5560P-R to the HWIC-AP-AG, see the [Cisco Multiband Wall-Mount Antenna \(AIR-ANTM5560P-R\)](#) document.

## Related Documentation

Related documentation is available on Cisco.com or on the Product Documentation DVD. For more information, see the “[Obtaining Documentation, Obtaining Support, and Security Guidelines](#)” section on page 10.

- [Cisco Access Router Wireless Configuration Guide](#)
- [Declarations of Conformity and Regulatory Information for Cisco Access Products with 802.11a/b/g and 802.11b/g Radios](#)
- [Cisco Aironet 2.4 Ghz Articulated Dipole Antenna \(AIR-ANT4941\)](#)
- [Cisco Aironet High Gain Omnidirectional Ceiling Mount Antenna \(AIR-ANT1728\)](#)
- [Cisco Aironet 2 dBi Diversity Omnidirectional Ceiling Mount Antenna \(AIR-ANT5959\)](#)
- [Cisco Multiband Swivel-Mount Dipole Antenna \(AIR-ANTM2050D-R\)](#)
- [Cisco Multiband Diversity Omnidirectional Ceiling-Mount Antenna \(AIR-ANTM4050V-R\)](#)
- [Cisco Multiband Wall-Mount Antenna \(AIR-ANTM5560P-R\)](#)
- [Antenna Cabling](#)

# Obtaining Documentation, Obtaining Support, and Security Guidelines

For information on obtaining documentation, obtaining support, providing documentation feedback, security guidelines, and also recommended aliases and general Cisco documents, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

---

CCVP, the Cisco logo, and Welcome to the Human Network are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn is a service mark of Cisco Systems, Inc.; and Access Registrar, Aironet, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Enterprise/Solver, EtherChannel, EtherFast, EtherSwitch, Fast Step, Follow Me Browsing, FormShare, GigaDrive, HomeLink, Internet Quotient, IOS, iPhone, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, iQuick Study, LightStream, Linksys, MeetingPlace, MGX, Networkers, Networking Academy, Network Registrar, PIX, ProConnect, ScriptShare, SMARTnet, StackWise, The Fastest Way to Increase Your Internet Quotient, and TransPath are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0711R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

© 2007 Cisco Systems, Inc. All rights reserved.