



Preface

This preface defines the audience for the *ATM Switch Router Command Reference*, and describes how this publication should be used. Specific new or modified commands, as well as the features these commands represent, are found in the “New and Changed Information” section. This preface also explains the document conventions, and provides information on how to obtain related documentation.

Audience

This publication is intended as a stand alone document for experienced network administrators who will be configuring and maintaining switches or switch routers, and who would also like to reference the commands. For less-experienced users who need to understand the tasks as well as the commands, it is intended as a companion guide to the *ATM Switch Router Software Configuration Guide*.

New and Changed Information

Feature	Commands	Chapter
Inverse Multiplexing over ATM (IMA)	ima active-links-minimum ima clock-mode ima differential-delay-maximum ima frame-length ima group ima test	Chapter 9
	show ima interface	Chapter 17

Organization

The *ATM Switch Router Command Reference* is organized alphabetically. Each chapter covers all commands that start with a particular letter, with the exception of Chapter 2, “ATM Commands,” and Chapter 18, “Show Commands.” Appendixes A through D contain information as described in the following table.

Chapter Number	Chapter Title	Description
Chapter 1	A Commands	Commands beginning with the letter “a.”
Chapter 2	ATM Commands	All commands beginning with “atm.”
Chapter 3	B Commands	All commands beginning with the letter “b.”
Chapter 4	C Commands	All commands beginning with the letter “c.”
Chapter 5	D Commands	All commands beginning with the letter “d.”
Chapter 6	E Commands	All commands beginning with the letter “e.”
Chapter 7	F Commands	All commands beginning with the letter “f.”
Chapter 8	H Commands	All commands beginning with the letter “h.”
Chapter 9	I Commands	All commands beginning with the letter “i.”
Chapter 10	K Commands	All commands beginning with the letter “k.”
Chapter 11	L Commands	All commands beginning with the letter “l.”
Chapter 12	M Commands	All commands beginning with the letter “m.”
Chapter 13	N Commands	All commands beginning with the letter “n.”
Chapter 14	O Commands	All commands beginning with the letter “o.”
Chapter 15	P Commands	All commands beginning with the letter “p.”
Chapter 16	R Commands	All commands beginning with the letter “r.”
Chapter 17	S Commands	Commands beginning with the letter “s.”
Chapter 18	Show Commands	All commands beginning with “show.”
Chapter 19	T Commands	All commands beginning with the letter “t.”
Chapter 20	U Commands	All commands beginning with the letter “u.”
Chapter 21	V Commands	All commands beginning with the letter “v.”
Chapter 22	Y Commands	All commands beginning with the letter “y.”
Appendix A	Acronyms	An up-to-date list of the acronyms used in this publication.
Appendix B	References and Recommended Reading	Contains lists of publications related to networks and networking.
Appendix C	Regular Expressions	Explains regular expressions and how to use them in ATM switch router configuration.
Appendix D	Removed and Changed Commands	Tables listing commands that have been removed, replaced, renamed; or commands that no longer function as expected in ATM environments.

Related Documentation

This publication provides an in-depth description of the commands necessary for configuring and maintaining your ATM switch. It describes tasks only in the context of using a particular command; it does not describe how the tasks interrelate nor does it provide comprehensive configuration examples. You can use this publication as a standalone reference manual or in conjunction with the *ATM Switch Router Software Configuration Guide*.

Not all of the **debug** commands are included in this publication. For a complete guide to the debug commands, refer to the *Debug Command Reference* publication.

Some Cisco IOS commands are not currently supported on the ATM switch router, hence these commands and/or some of their parameters might not function as expected. In this document these commands can be found in Table D-5 of Appendix D, where they are listed in alphabetical order. Wherever possible, a reference document has been listed for further information on these commands.

Document Conventions

Unless otherwise noted, all information in this document is relevant to the Catalyst 8540 MSR, Catalyst 8510 MSR, and LightStream 1010 ATM switch routers. Where certain information relates exclusively to specific switch routers, an exception is indicated by the following callouts:

- Catalyst 8540 MSR
- Catalyst 8510 MSR and LightStream 1010

Command descriptions use the following conventions (see Figure 1 for an example):

boldface font	Commands and keywords are in boldface .
<i>italic font</i>	Arguments for which you supply values are in <i>italics</i> . In contexts that do not allow italics, arguments are enclosed in angle brackets (< >).
[]	Elements in square brackets are optional.
{ x y z }	Required alternative keywords are grouped in braces and separated by vertical bars.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string, otherwise the string will include the quotation marks.

Screen examples use the following conventions:

<code>screen font</code>	Terminal sessions and information the system displays are in <code>screen font</code> .
boldface screen font	Information you must enter is in boldface screen font .
<i>italic screen font</i>	Arguments for which you supply values are in <i>italic screen font</i> .
→	This pointer highlights an important line of text in an example.
^	The symbol ^ represents the key labeled Control—for example, the key combination ^D in a screen display means hold down the Control key while you press the D key.
< >	Nonprinting characters, such as passwords, are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

Notes use the following conventions:



Note

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the publication.

Cautions use the following conventions:




Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Figure 1 on the following page explains the fields of a typical command reference page.

Figure 1 Typical Command Reference Page

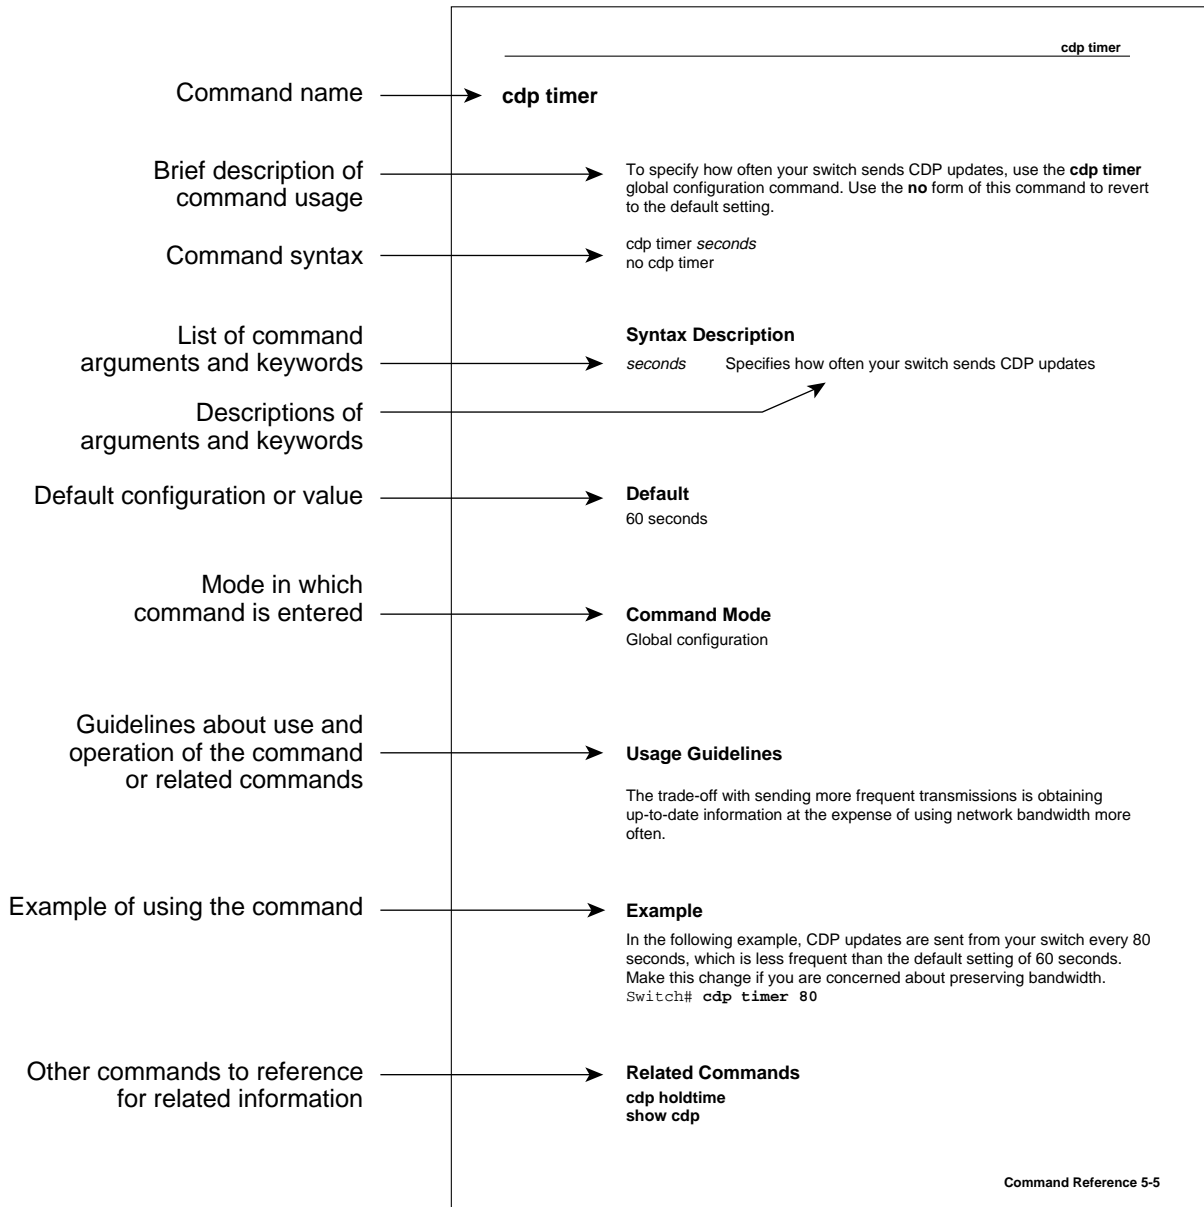

S4691

Cisco Connection Online

Cisco Connection Online (CCO) is Cisco Systems' primary, real-time support channel. Maintenance customers and partners can self-register on CCO to obtain additional information and services.

Available 24 hours a day, 7 days a week, CCO provides a wealth of standard and value-added services to Cisco's customers and business partners. CCO services include product information, product documentation, software updates, release notes, technical tips, the Bug Navigator, configuration notes, brochures, descriptions of service offerings, and download access to public and authorized files.

CCO serves a wide variety of users through two interfaces that are updated and enhanced simultaneously: a character-based version and a multimedia version that resides on the World Wide Web (WWW). The character-based CCO supports Zmodem, Kermit, Xmodem, FTP, and Internet e-mail, and it is excellent for quick access to information over lower bandwidths. The WWW version of CCO provides richly formatted documents with photographs, figures, graphics, and video, as well as hyperlinks to related information.

You can access CCO in the following ways:

- WWW: <http://www.cisco.com>
- WWW: <http://www-europe.cisco.com>
- WWW: <http://www-china.cisco.com>
- Telnet: cco.cisco.com
- Modem: From North America, 408 526-8070; from Europe, 33 1 64 46 40 82. Use the following terminal settings: VT100 emulation; databits: 8; parity: none; stop bits: 1; and connection rates up to 28.8 kbps.

For a copy of CCO's Frequently Asked Questions (FAQ), contact cco-help@cisco.com. For additional information, contact cco-team@cisco.com.

**Note**

If you are a network administrator and need personal technical assistance with a Cisco product that is under warranty or covered by a maintenance contract, contact Cisco's Technical Assistance Center (TAC) at 800 553-2447, 408 526-7209, or tac@cisco.com. To obtain general information about Cisco Systems, Cisco products, or upgrades, contact 800 553-6387, 408 526-7208, or cs-rep@cisco.com.

Documentation CD-ROM

Cisco documentation and additional literature are available in a CD-ROM package, which ships with your product. The Documentation CD-ROM, a member of the Cisco Connection Family, is updated monthly. Therefore, it might be more current than printed documentation. To order additional copies of the Documentation CD-ROM, contact your local sales representative or call customer service. The CD-ROM package is available as a single package or as an annual subscription. You can also access Cisco documentation on the World Wide Web at <http://www.cisco.com>, <http://www-china.cisco.com>, or <http://www-europe.cisco.com>.

If you are reading Cisco product documentation on the World Wide Web, you can submit comments electronically. Click **Feedback** in the toolbar and select **Documentation**. After you complete the form, click **Submit** to send it to Cisco. We appreciate your comments.