



Symbols

- # [for pound sign], in a prompt 2-5
- * [for asterisk], as wildcard 13-4
- > [for angle bracket], in a prompt 2-5
- ... [for ellipsis], as wildcard 13-4

Numerics

- 25 Mbps
 - configuring 17-2 to 17-3
 - default configuration 17-2
- 155 Mbps
 - configuring 17-4 to 17-5
 - default configuration 17-4
- 622 Mbps
 - configuring 17-7 to 17-8
 - default configuration 17-7

A

- AAA
 - configuring with TACACS+ 4-16
 - description 4-14
- aaa accounting command 4-16
- aaa new-model command 4-16
- abbreviating
 - commands 2-2
- ABR
 - configuring, example 8-36
 - configuring CTT rows, example 8-13
 - configuring OSF 8-6

- congestion notification mode 8-9 to 8-10
- CTT row default 8-12
- limits of best-effort connections 8-29
- output queue maximum 8-18
- service category limit 8-7
- access-class command 11-11
- access control
 - ATM filters 11-3 to 11-7
 - ATM interfaces 11-6 to 11-7
 - example 11-8 to 11-9
 - ILMI per-interface filters 11-13 to 11-14
 - IP access lists 11-9 to 11-14
 - overview 11-1
 - template aliases 11-2 to 11-3
- access filters 9-2 to 9-3
- accessibility tests
 - configuring, example 3-21
 - overview 3-19
- access lists. See IP access lists
- accounting. See ATM accounting
- accounting file configuration mode. See ATM accounting file configuration mode
- accounting selection configuration mode. See ATM accounting selection configuration mode
- acronyms (table) B-1 to B-5
- addressing schemes
 - ATM 3-5
 - ATM switch router chassis (table) 2-7
 - hierarchical model 3-5
 - See also ATM addresses
- administrative-weight command 10-42
- AESA
 - ATM E.164 translation table configuration mode 2-13
 - E.164 address autoconversion 16-5

- E.164 translation table 16-9
- ILMI access filters 9-2
- PNNI ATM addressing 10-2
- age-timer command 16-12
- aggregation-mode command 10-48
- AIS
 - DS3 and E3 17-13, 17-14
 - enabling, example 7-3, 7-4
 - enabling on interface, example 7-4
 - T1 and E1 17-16
- alarm indication signals. See AIS
- ARM. See ATM router modules
- ASP
 - features 1-2
 - with FC-PCQ 1-3
 - with FC-PFQ 1-3
- atm0 interface (note) 3-8
- atm abr-mode command 8-9
- atm access-group command 11-6
- ATM accounting
 - configuring 14-1 to 14-13
 - configuring interfaces 14-4
 - controlling data collection 14-9
 - copying data file with TFTP 14-12
 - data files 14-7 to 14-8
 - environment (figure) 14-2
 - global configuration 14-3
 - overview 14-2
 - remote logging 14-12 to 14-13
 - selection table 14-5 to 14-6
 - SNMP traps 14-10 to 14-12
- atm accounting collection command 14-9
- atm accounting enable command 14-3
- atm accounting file command
 - entering command mode 2-12
- ATM accounting file configuration mode
 - description 2-12
 - table 2-4
- atm accounting selection command 14-5
- ATM accounting selection configuration mode
 - description 2-12
 - table 2-4
- atm accounting trap threshold command 14-10
- atm address command
 - IISP ATM addresses 10-5
 - PNNI ATM addresses 10-11
- ATM addresses
 - ATM routing 10-5
 - CES-IWF
 - configuring 18-8 to 18-9
 - displaying 18-8, 18-45
 - soft PVCs 18-14, 18-29
 - changing active 10-5
 - configuration prerequisites 3-2
 - configuring 3-5, 9-1
 - IISP 10-5
 - manually configuring 3-6
 - PNNI 10-10
 - static routes 10-7
 - testing correct configuration 3-38
 - uniqueness rule (note) 3-5
 - wildcards in LANE templates 13-4
- ATM address group
 - configuring 9-8, 10-8
- ATM address groups
 - example 9-8, 10-8
- ATM addressing
 - BOOTP server 3-4
 - ILMI 3-5
 - See also ATM addresses
- ATM address prefixes
 - as ping destinations 7-6
- atm address-registration command 9-5
- atm address-registration permit command 11-13
- ATM ARP
 - clients 12-2
 - server description 12-4
 - SVC environment 12-1 to 12-5

- atm arp-server nsap command 12-2
- atm arp-server time-out command 12-4
- atm auto-configuration command 9-5
- atm cac best-effort-limit command 8-29
- atm cac framing overhead command 8-41
- atm cac link-sharing command 8-24
- atm cac max-peak-cell-rate command 8-31
- atm cac overbooking command 8-38
- atm cac service-category command 8-36
- ATM connections
 - checking reachability 7-5 to 7-6
 - network points 7-2
 - testing configuration 3-39
- atm connection-traffic-table-row command
 - CTT row allocations and defaults 8-12
 - hierarchical VP tunnels 6-39
 - shaped VP tunnels 6-36
 - single service VP tunnels 6-34
- ATM E.164 translation table configuration mode
 - description 2-13
 - table 2-4
- atm e164 address command 16-7
- atm e164 auto-conversion command 16-8
- atm e164 translation command 16-10
- atm e164 translation-table command
 - entering command mode 2-13
- ATM end system addresses. See AESA
- atm esi-address command
 - ATM ARP client 12-2
 - interfaces 12-4
- atm filter-expr command 11-5
- ATM filters
 - configuring access control 11-3 to 11-7
 - example 11-8 to 11-9
 - example (figure) 11-8
 - expressions 11-5 to 11-6
 - sets 11-3 to 11-5
- atm filter-set command 11-3
- atm hierarchical-tunnel command 6-38
- atm iisp command 5-7
- atm ilmi default-access permit command 9-2
- atm ilmi-keepalive command 9-5
- ATM InARP
 - classical IP over ATM 12-5 to 12-7
- atm interface-group command 9-8, 10-8
- ATM interfaces
 - configuring, examples 15-5
 - displaying configuration 15-5
 - displaying tag switching configuration, example 15-5
 - enabling tag switching 15-4
 - testing configuration 3-39
 - testing status 3-40
- ATM internetworking services
 - CES 18-1 to 18-48
 - classical IP over ATM 12-1 to 12-7
 - LANE 13-1 to 13-16
 - SSRP 13-15
 - summary 1-7
 - tag switching 15-1 to 15-18
- atm lecs-address command
 - Ethernet LANE clients 13-14
 - ILMI LECS addresses 9-3
- atm lecs-address-default command 13-7
- atm link-distance command 8-28
- atm manual-well-known-vc command 6-29
- atm maxvci-bits command 17-3, 21-7
- atm maxvpi-bits command
 - interfaces 17-3
 - NNI interfaces, 12-bit VPI 5-5
- ATM network interfaces
 - disabling autoconfiguration 5-1
 - IISP 5-7
 - NNI 5-4
 - UNI 5-3
- atm nni command 5-4, 5-5
- atm nsap-address command 12-2, 12-4, 12-9
- atm oam (global) command 7-3
- atm output-queue command 8-18

- atm output-threshold command 8-20
- atm over-subscription-factor command 8-7
- atm pacing command 8-22
- atm pnni admin-weight command 10-43
- atm pnni aggregation-token command 10-46
- atm pnni explicit-path command 10-38
- atm pnni link-selection command 10-34
- atm prefix command 9-6
- atm pvc command
 - end points to PVP tunnels 6-40
 - IP multicast 21-20
 - nondefault well-known PVCs 6-29
 - point-to-multipoint PVCCs 6-13
 - PVC-based map list 12-8
 - RFC 1483 21-14
 - terminating connections 6-8
 - VCCs 6-3
- atm pvc encaps aal5snap command 12-6, 21-16, 21-17, 21-18
- atm pvp command
 - connecting VP tunnels 15-12
 - hierarchical VP tunnels 6-39
 - PVPs 6-9
 - shaped VP tunnels 6-36
 - tag switching on VP tunnels 15-10
 - VP tunnels 6-34
- atm qos default command 8-5
- ATM RMON
 - configuring 14-14 to 14-20
 - enabling data collection 14-17 to 14-18
 - overview 14-14
 - port select group example (figure) 14-15
 - port select groups 14-14 to 14-17
 - See also RMON
- atm rmon collect command 14-16
- atm rmon enable command 14-17
- atm rmon portselgrp command 14-15
- atm route command
 - ATM ARP clients 12-2
 - ATM ARP servers 12-4
 - E.164 address autoconversion 16-8
 - IISP interfaces 5-7
 - static routes, ATM addresses 3-18, 10-7, 10-13
 - static routes, E.164 address 16-6
- atm route-optimization percentage-threshold command 6-24
- ATM router configuration mode
 - description 2-10
 - table 2-3
- ATM router modules
 - bridging 21-17 to 21-19
 - configuring 21-6 to 21-8
 - configuring LANE clients 13-14, 21-7
 - configuring LANE clients, examples 21-9 to 21-13
 - IP multicast 21-20
 - overview 21-2 to 21-3
 - restrictions, hardware and software 21-4
 - RFC 1483 21-13 to 21-16
 - routing and bridging functions (figure) 21-3
 - traffic flow (figure) 21-4
- atm router pnni command
 - configuring PNNI 10-11
 - entering command mode 2-10
- ATM routing
 - configuring 10-3 to 10-8
 - overview 10-1
 - routing mode 10-3 to 10-5
 - static routes 10-7
- atm routing-mode command 10-4
- atm service-category-limit command 8-8
- atm service-class command 15-15
- atm signalling cug access command 16-17
- atm signalling cug alias command 16-16
- atm signalling cug assign command 16-17
- atm signalling diagnostics command
 - entering command mode 2-14
 - signalling diagnostic tables 16-12

- ATM signalling diagnostics configuration mode
 - description 2-14
 - table 2-4
- atm signalling diagnostics enable command 16-12
- atm signalling ie forward command 16-2
- atm signalling vpci command 6-41
- atm snoop command 6-45
- atm snoop-vc command 6-47
- atm snoop-vp command 6-47
- atm soft-vc command 6-19
- atm soft-vp command 6-22
- atm sustained-cell-rate-margin-factor command 8-13
- atm svcc vci min command 6-31
- atm svcc vpi max command 6-31
- atm svc-frame-discard-on-aal5ie command 16-3
- atm svpc vpi max command 6-31
- ATM switches
 - overview 1-2
 - processor and feature card models 1-3
 - support for port adapters 1-3
 - terminal lines 3-2
- ATM switch processor. See ASP
- ATM switch routers
 - configuring OAM 7-3
 - connection characteristics 1-5
 - hardware components 1-2
 - modular chassis 1-1
 - OAM operation 7-2
 - overview 1-1
 - system availability 1-4
 - terminal lines 3-2
- atm template-alias command 11-2
- atm threshold-group command 8-16
- atm uni command
 - ATM interfaces 17-3
 - UNI interfaces 5-3
- authenticating user access, dynamic 11-10

- autoconfiguration
 - disabling 5-1
 - displaying 5-2
- auto-ferf command 17-14, 17-17
- auto-summary command
 - PNNI summary addresses 10-14
 - using (note) 10-14
- available bit rate. See ABR

B

- background-routes-enable command 10-31
- bert pattern command 20-5
- best-effort connections
 - configuring limits 8-29
 - displaying configuration 8-30
- BOOTP servers
 - configuration file 3-4 to 3-5
 - configuration prerequisites 3-2
 - configuring 3-4
- boot system command 3-25
- bridge atm-vc command 21-18
- bridge-group command 21-17, 21-18
- bridge protocol command 21-17
- bridging
 - between ATM and Ethernet 21-11
 - configuring 21-17
 - displaying configuration 21-19
 - packet flooding 21-18
- broadcast-and-unknown servers. See BUSs
- buffer pools, configuring 4-2
- buffers command 4-2
- BUSs
 - configuration examples 13-17 to 13-32
 - configuring 13-11 to 13-13
 - monitoring 13-16
 - redundant 13-15

C

- cablelength command 19-3
- calendar, configuring 4-14
- calendar set command 4-14
- called-address-mask command 16-12
- called-nsap-address command 16-12
- calling-nsap-address command 16-12
- carrier modules, documentation xxviii
- CAS
 - configuring soft PVCs
 - with CAS 18-35
 - with CAS and on-hook detection 18-39
 - description 18-35
- CBR
 - CAC parameter to bandwidth relationship 8-23
 - configuring CTT rows 8-12
 - configuring OSF 8-6
 - configuring output queue, example 8-19
 - CTT row default 8-12
 - FC-PCQ and FC-PFQ feature comparison 8-4
 - interface output discard threshold 8-20
 - interface output pacing 8-21
 - interface queue thresholds per service category 8-20
 - network clock services 3-17
 - output queue maximum 8-18, 8-19
 - service category limit 8-7
- CDP
 - configuring 4-3
- cdp command 4-3
- CDS3 Frame Relay controllers
 - changing default cable lengths, example 19-3
 - displaying configuration 19-5
 - displaying serial information, example 19-5
- CDS3 Frame Relay interfaces
 - configuring 19-1 to 19-6
 - default configuration 19-2
 - E1 time slot mapping (figure) 19-7
 - T3/T1 time slot mapping (figure) 19-2
- CDVT
 - configuring ATM default 8-33
 - displaying configuration 8-33
- CE1 Frame Relay controllers
 - changing default yellow alarms, example 19-8
 - displaying configuration, example 19-9
- CE1 Frame Relay interfaces
 - configuring 19-7 to 19-9
 - default configuration 19-7
- cell delay variation tolerance. See CDVT
- cell flows
 - on demand or periodic (note) 7-2
 - support for 7-1
- cell-payload scrambling, disabling 3-6
- CES
 - deleting circuits 18-47 to 18-48
 - E1 interfaces 18-2 to 18-7
 - reconfiguring circuits 18-46 to 18-47
 - SGCP 18-48 to 18-54
 - soft PVCs 18-7 to 18-9
 - structured services
 - hard PVCs 18-20 to 18-23
 - hard PVCs with shaped tunnel 18-23 to 18-29
 - multiple soft PVCs same port 18-40 to 18-45
 - overview 18-19
 - soft PVCs 18-29 to 18-35
 - soft PVCs with CAS enabled 18-35 to 18-38
 - soft PVCs with CAS on-hook detection enabled 18-39 to 18-40
 - T1 interfaces 18-2 to 18-7
 - unstructured services
 - hard PVCs 18-10 to 18-13
 - overview 18-9 to 18-10
 - soft PVCs 18-14 to 18-18
- ces aal1 clock adaptive command 18-12
- ces aal1 clock command 18-4
- ces aal1 clock synchronous command 18-16
- ces aal1 service command 18-4
- ces aal1 service structured command 18-12

- ces aal1 service unstructured command 18-16
- ces circuit cdv command 18-6
- ces circuit circuit-name command 18-12
- ces circuit command 18-4
- ces circuit timeslots command 18-22
- ces dsx1 clock source command 18-5
- ces dsx1 framing command 18-5
- ces dsx1 framing esf command 18-22
- ces dsx1 framing sf command 18-6
- ces dsx1 lbo command 18-5
- ces dsx1 linecode command 18-5, 18-42
- ces dsx1 loopback command 18-5
- ces dsx1 signalmode robbedbit command 18-5
- CES-IWF
 - ATM addresses
 - configuring 18-8, 18-9
 - displaying 18-8, 18-45
 - soft PVCs 18-14, 18-29
 - description 18-2
 - network clock services 3-17
- ces pvc command
 - CES T1/E1 interfaces 18-5
 - hard PVC, example 18-12
 - hard PVC with a shaped VP tunnel, example 18-27
 - soft PVC, example 18-17
- CES T1/E1 interfaces
 - clocking options 18-2
 - configuring 18-4 to 18-7
 - connectors supported 18-2
 - default configuration 18-3
 - overview 18-2
- channel associated signalling. See CAS
- channel-group command 19-4, 19-8
- channel groups
 - configuring 19-8
 - See also Frame Relay serial interfaces
- channelized DS3 Frame Relay interfaces. See CDS3 Frame Relay interfaces
- channelized E1 Frame Relay interfaces. See CE1 Frame Relay interfaces
- circuit emulation services. See CES
- circuit emulation services interworking function. See CES-IWF
- circuits
 - deleting 18-47 to 18-48
 - reconfiguring 18-46 to 18-47
 - structured services 18-19 to 18-45
 - unstructured services 18-9 to 18-18
- Cisco Discovery Protocol. See CDP
- classical IP over ATM
 - ATM router modules 21-16
 - example (figure) 12-3
 - map lists 12-7 to 12-10
 - PVC environment 12-5 to 12-7
 - SVC environment 12-1 to 12-5
- class mappings into service classes (table) 15-14
- class of service. See CoS
- clear-cause command 16-12
- clear cdp command 4-3
- client-atm-address command 13-10
- clock, configuring 4-13
- clock command 4-13
- clock module
 - network synchronization 1-7
 - on the route processor 1-1
- clock set command 3-18
- clock source command
 - ATM interfaces 17-5
 - CDS3 Frame Relay interfaces 19-3
 - T1/E1 IMA interfaces 20-5
 - transmit clocking source 3-12
- closed user groups. See CUGs
- collection-modes command 14-7
- command modes
 - ATM accounting file configuration 2-12
 - ATM accounting selection configuration 2-12
 - ATM E.164 translation table configuration 2-13

- ATM router configuration 2-10
- ATM signalling diagnostics configuration 2-14
- controller configuration 2-14
- global configuration 2-6
- interface configuration 2-7
- LANE configuration server database configuration 2-13
- line configuration 2-8 to 2-9
- main CPU configuration 2-15
- map-class configuration 2-10
- map-list configuration 2-9
- PNNI explicit path configuration 2-11
- PNNI node configuration 2-11
- privileged EXEC 2-5
- redundancy configuration 2-15
- subinterface configuration 2-8
- summary (table) 2-2 to 2-5
- user EXEC 2-5
- commands
 - abbreviating 2-2
 - syntax in documentation xxvii
 - using no to disable features or functions 2-2
- config-register command 3-25
- configuration registers
 - changing value 3-25
 - testing installation 3-35
- configurations
 - storing 3-33
 - synchronizing 3-28
 - testing 3-42
 - testing NVRAM 3-43
- configure command
 - entering command mode 2-6
- configuring
 - ATM addresses 3-5
 - BOOTP server 3-4
 - ESHA 3-31
 - Ethernet connections 3-7 to 3-9
 - IP address 3-7 to 3-9
 - network clocking 3-10 to 3-17
 - network routing 3-18
 - prerequisites 3-2
 - redundancy 3-23
 - RMON 3-33
 - SNMP 3-33
 - system information 3-18
 - terminal line 3-2
- configuring interfaces
 - 25 Mbps 17-2 to 17-3
 - 155 Mbps 17-4 to 17-5
 - 622 Mbps 17-7 to 17-8
 - ATM router module 21-2 to 21-8
 - CDS3 Frame Relay 19-1 to 19-6
 - CE1 Frame Relay 19-7 to 19-9
 - CES T1/E1 18-2 to 18-7
 - DS3 17-13 to 17-15
 - E1 ATM 17-15 to 17-17
 - E1 IMA 20-3 to 20-6
 - E1 trunk 17-15 to 17-17
 - E3 17-13 to 17-15
 - IISP 5-7
 - interface snooping 6-45
 - methods 3-2
 - OC-3c 17-5 to 17-6
 - OC-12c 17-9 to 17-10
 - OC-48c 17-11 to 17-12
 - T1 ATM 17-15 to 17-17
 - T1 IMA 20-3 to 20-6
 - T1 trunk 17-15 to 17-17
 - terminal lines and modem support 4-1 to 4-2
 - troubleshooting connections 17-17
- connection-category command 16-12
- connections
 - Frame Relay 19-20 to 19-38
 - OAM 7-1 to 7-5
 - virtual 6-2 to 6-28
 - See also VCs
- connection traffic table. See CTT

connection-traffic-table rows. See CTTRs
 connection-types command 14-5
 connectivity
 checking 4-18
 constant bit rate. See CBR
 controlled link sharing
 configuring 8-23
 displaying configuration 8-25
 minimum and maximum parameter relationships
 (table) 8-23
 controller command
 entering command mode 2-14
 controller configuration mode
 description 2-14
 table 2-4
 controller e1 command
 CE1 Frame Relay interfaces 19-8
 channel groups 19-8
 controller t3 command 19-3, 19-4
 CoS
 configuring for tag switching 15-13 to 15-16
 port weight mappings (table) 15-14
 VP tunnel weight mappings (table) 15-15
 CPUs. See route processors
 CTT
 configuring 8-10 to 8-11
 configuring for Frame Relay to ATM
 interworking 19-17
 displaying configuration 8-13
 Frame Relay to ATM interworking (table) 19-17
 management 8-2
 row allocations and defaults 8-11
 tag switching 15-18
 CTTRs
 restrictions 6-40
 CUGs
 description 16-15
 signalling 16-15 to 16-20

D

DACS
 T1/E1 structured CES 18-19
 debug diag online command 3-21
 default command
 ATM accounting files 14-7
 ATM accounting selection table 14-5
 default connections
 number in OAM configured connections 7-3
 default-name command 13-8, 13-10
 default QoS objective tables
 configuring 8-5
 description 8-2
 displaying 8-6
 description command 14-7
 diag online access command 3-20
 diag online access freq command 3-20
 diag online command 3-20
 diag online oir command 3-20
 diag online oir pktsize command 3-20
 diag online snake command 3-20
 diag online snake timer command 3-21
 Digital Access and Crossconnect System. See DACS
 disabling
 autoconfiguration 5-1
 cell-payload scrambling 3-6
 signalling 16-21
 documentation
 carrier modules xxviii
 cautions xxix
 command syntax xxvii
 conventions xxviii
 notes xxix
 DS3 interfaces
 configuring 17-13 to 17-15
 default configuration 17-13

E

E.164

- addresses 16-4 to 16-11
- autoconversion feature 16-5
- gateway feature 16-5
- one-to-one translation table 16-5, 16-9
- static routes 16-6

E1 ATM interfaces

- configuring 17-15
- default configuration 17-15

E1 channels

- configuring, example 19-9

e164 address command 16-10

E1 IMA interfaces

- configuring 20-3 to 20-6
- default configuration 20-4
- displaying configuration, example 20-6

E1 trunk interfaces

- configuring 17-15 to 17-17
- default configuration 17-15

E3 interfaces

- configuring 17-13 to 17-15
- default configuration 17-13

edge switches, example 14-2

EHSA

- configuring 3-31
- description 3-23
- displaying switch processor configuration 3-32

ELANs

- adding restricted membership
 - database entries for clients 13-10
- configuring 13-2 to 13-16
- restricted membership database 13-9
- unrestricted membership database 13-8

See also LANE

election leadership-priority command 10-22

emulated LANs. See ELANs

enable command

ATM accounting 14-7

entering privileged EXEC mode 2-5

end system identifier. See ESI

end-to-end loopback, example 7-4

Enhanced High System Availability. See EHSA

erase startup-config command 3-4

ESI

classical IP over ATM 12-3

configuring ARP client 12-2

template 13-4

values derived from MAC address 13-4

Ethernet

LANE clients 13-14

testing connectivity 3-38

ethernet0 interface

configuring 3-8

note 3-8

Ethernet connections

configuring 3-7 to 3-9

configuring IP addresses 3-7

testing configuration 3-37

Ethernet interfaces

configuring LAN emulation 13-1

exclude-node command 10-38

EXEC command mode

note 2-1

user level description 2-5

EXEC commands

privileged level 2-5

extended TACACS

description 4-14

enabling 4-15

F

F4 flows

reporting unavailable or not guaranteed paths 7-1

F5 flows

reporting degraded VC performance 7-1

- failed-attempts command 14-7
- fault management functions
 - in OAM (note) 7-1
- fault resistance
 - ATM switch routers 1-4
- FC-PCQ
 - ASP-B with 1-3
 - ASP-C with 1-3
 - features 8-2
 - functionality 8-3
- FC-PFQ
 - features 8-2
 - functionality 8-3
- fdl command 20-5
- FeatureCard1. See FC-PCQ
- feature card per-class queuing. See FC-PCQ
- feature card per-flow queuing. See FC-PFQ
- feature cards
 - FC-PCQ 8-3
 - FC-PFQ 8-3
 - models 1-3
- field programmable gate arrays. See FPGAs
- file management
 - BOOTP server configuration file 3-4 to 3-5
 - configuration files 21-4
 - copying ATM accounting files 14-12
 - functional images 21-5 to 21-9
 - IOS file system 21-2 to 21-3
 - preparing for download 21-1
 - system images 21-4
- filters. See ATM filters
- For 21-8
- FPGAs
 - description 21-5
 - See also functional images
- frame discard 16-3
- Frame Relay
 - CDS3 port adapters 19-1 to 19-6
 - CE1 port adapters 19-7 to 19-9
 - encapsulation
 - displaying, example 19-10
 - enabling 19-10
 - Frame Relay to ATM interworking 19-20 to 19-28, 19-31 to 19-35, 19-38
 - Frame Relay-to-Frame Relay 19-29 to 19-31
 - LMI 19-12 to 19-15
 - serial interfaces 19-11, 19-15
 - soft PVC route optimization 19-35 to 19-37
 - soft PVCs
 - configuration guidelines 19-28
 - configuring 19-21 to 19-34
 - configuring, example 19-34
- frame-relay accept-overflow command 19-19
- frame-relay bc-default command 19-18
- frame-relay connection-traffic-table-row command 19-17
- frame-relay input-queue command 19-18
- frame-relay intf-type command 19-11
- frame-relay lmi-n391dte command 19-14
- frame-relay lmi-n392dce command 19-14
- frame-relay lmi-n392dte command 19-14
- frame-relay lmi-n393dce command 19-14
- frame-relay lmi-n393dte command 19-14
- frame-relay lmi-type command 19-12
- frame-relay output-queue command 19-18
- frame-relay overbooking command 19-19
- frame-relay pvc command 19-21
- frame-relay pvc dlci command
 - Frame Relay to ATM service PVCs 19-24, 19-26
 - Frame Relay transit PVCs 19-27
- Frame Relay serial interfaces
 - configuring 19-11
 - configuring type NNI, example 19-11
 - displaying configuration, example 19-11, 19-15
- frame-relay soft-vc dlci command
 - Frame Relay to ATM network soft PVCs 19-29, 19-31
 - Frame Relay to ATM service soft PVCs 19-33

Frame Relay to ATM interworking

- configuration guidelines 19-28
- configuring network PVCs 19-21
- configuring service PVCs 19-23
- configuring soft PVCs, example 19-34
- configuring terminating service PVCs 19-25
- configuring the CTT 19-17
- configuring transit PVCs 19-27
- default CTT rows (table) 19-17
- functions 19-9 to 19-11
- resource management
 - CTT rows 19-16 to 19-18
 - interfaces 19-18 to 19-19

Frame Relay-to-Frame Relay

- configuring soft PVCs 19-29 to 19-31
- example 19-29

framing command

- 622-Mbps interfaces 17-8
- CDS3 Frame Relay interfaces 19-3
- CE1 Frame Relay interfaces 19-8
- DS3/E3 interfaces 17-14
- OC-12c interfaces 17-10
- T1/E1 ATM interfaces 17-16
- T1/E1 IMA interfaces 20-5

framing overhead

- configuring 8-40
- displaying configuration 8-41

functional images

- loading 21-5, 21-8
- maintaining 21-5, 21-7
- understanding 21-5, 21-7
- See also FPGAs

funnel signalling 16-21

G

global configuration mode

- accessing 2-1
- description 2-6
- table 2-2

guaranteed service categories. See service categories

H

hard PVCs

- configuring
 - structured services 18-20 to 18-22
 - structured services with shaped VP tunnel 18-23 to 18-27
 - unstructured services 18-10 to 18-12
- description 18-7
- verifying
 - for structured services 18-22
 - for unstructured services 18-13
 - structured services with a shaped VP tunnel 18-28

hard PVPs

- configuring 6-16 to 6-18
- displaying configuration 6-17
- example 6-16
- example (figure) 6-16

hardware

- overview 1-1 to 1-3
- resource management description 8-2
- testing installation and configuration 3-34, 3-35
- verifying 3-3

hardware RM

- description 8-2

hierarchical VP tunnels

- multiple service categories 6-37 to 6-40
- service categories (table) 15-15

host name, default 2-5

- hostname command
 - changing default host name 2-5
 - configuring system information 3-18

- ICMP messages 11-11
- IEs
 - forwarding 16-2 to 16-3
- IISP
 - ATM addresses 10-5
 - configuring 5-7, 10-3 to 10-8
 - configuring interfaces 5-7
 - displaying configurations 5-8
 - overview 10-1
 - routing mode 10-3 to 10-5
 - static routes 3-18, 10-7
- ILMI
 - access filters 9-2 to 9-3
 - ATM addresses 9-1
 - ATM address groups 9-8
 - configuring interfaces 9-5 to 9-8
 - displaying address prefix 9-7
 - global system configuration 9-1 to 9-5
 - LECS address 9-3
 - overview 9-1
 - switch address prefixes 3-5
- IMA
 - frames 20-2
 - groups 20-6 to 20-12
 - overview 20-1 to 20-3
 - T1/E1 IMA interfaces 20-3 to 20-6
- ima active-links-minimum command 20-13
- ima clock-mode command 20-14
- ima differential-link-delay command 20-16
- ima frame-length command 20-17
- IMA frames
 - description 20-2
 - layout (figure) 20-3
- ima-group command
 - adding interfaces to groups 20-8
 - creating groups 20-7
 - deleting interfaces groups 20-10
- IMA groups
 - adding interfaces 20-8
 - configuring parameters
 - active minimum links 20-13
 - differential delay 20-15
 - frame length 20-17
 - interface clock mode 20-14
 - test pattern 20-18
 - confirming interface deletion, example 20-12
 - creating 20-6 to 20-7
 - deleting 20-11 to 20-12
 - deleting interfaces 20-10
 - displaying configuration, example 20-9
 - grouping example (figure) 20-2
- ima test command 20-18
- incoming-port atm command 16-12
- information elements. See IEs
- initial IP configuration, testing 3-38
- Integrated Local Management Interface. See ILMI
- interface address formats (table) 2-7
- interface command
 - entering interface command mode 2-7
 - entering subinterface command mode 2-8
- interface configuration mode
 - description 2-7
 - table 2-2
- interface level OAM
 - configuring 7-4
 - enabling AIS and end-to-end loopback, example 7-4
- interface modules
 - ATM router module 21-2
 - description 17-1
 - OC-3c 17-5
 - OC-12c 17-9
 - OC-48c 17-11

- interface overbooking
 - configuring 8-37
 - displaying configuration 8-39
 - restrictions 8-37
- interfaces
 - 25 Mbps 17-2 to 17-3
 - 155 Mbps 17-3 to 17-5
 - 622 Mbps 17-7 to 17-8
 - ATM router module 21-6 to 21-8
 - CDS3 Frame Relay 19-1 to 19-6
 - CE1 Frame Relay 19-7 to 19-9
 - CES T1/E1 18-2 to 18-7
 - DS3 and E3 17-13 to 17-15
 - modifying default configuration 3-6
 - new address formats 3-8
 - OC-3c 17-5 to 17-6
 - OC-12c 17-9 to 17-10
 - OC-48c 17-11 to 17-12
 - T1/E1 IMA 20-4 to 20-6
 - T1/E1 trunk 17-15 to 17-17
 - troubleshooting 17-17
- interface serial command 19-29
- interface snooping
 - configuring 6-45
- Interim-Interswitch Signalling Protocol. See IISP
- internetworking services. See ATM internetworking services
- interval command 14-7
- interworking services
 - CES-IWF 18-2
 - Frame Relay to ATM 19-9
- Inverse ARP. See ATM InARP
- inverse multiplexing over ATM. See IMA
- IOS file system 21-2
- ip access-group command 11-11
- IP access lists
 - configuration, examples 11-12 to 11-13
 - configuring 11-9 to 11-14
 - description 11-10
- implicit masks 11-11
- logging violations 11-10
- styles 11-10
- undefined 11-11
- virtual terminal lines (note) 11-12
- ip address command
 - ATM ARP client 12-2, 12-4
 - classical IP over ATM 12-6, 21-16
 - IP address and subnet mask 3-8
 - LANE client 13-13, 21-8
 - LANE server, BUS, and client 13-12
 - loopback interface 15-3
 - PVC-based map list 12-7
 - RFC 1483 21-14, 21-20
 - SVC-based map list 12-9
 - tag switching on the ATM interface 15-4
 - tag switching on VP tunnels 15-10
 - TDP control channels 15-9
- IP addresses
 - assigned by BOOTP protocol 3-4
 - configuration prerequisites 3-2
 - configuring 3-7 to 3-9
 - configuring parallel interfaces (note) 15-4
 - displaying configuration 3-8
 - loopback interfaces 15-3
 - ping destinations 7-6
 - set to default 3-4
- ip command 12-8, 12-9
- IP multicast
 - configuring 21-20
 - example 21-20
- ip multicast-routing command 21-20
- IP over ATM. See classical IP over ATM
- ip pim command 21-20
- ip route command
 - map lists 12-8
 - static IP routes 21-2

ip unnumbered command
 tag switching on ATM interfaces 15-4
 tag switching on VP tunnels 15-10

K

keepalive command 19-13
 keepalive interval 19-13 to 19-14

L

LANE

assigning components to subinterfaces 13-4
 BUSs 13-11 to 13-13
 clients 13-11 to 13-13
 clients on ATM router module interfaces,
 examples 21-9 to 21-13
 concept (figure) 13-2
 configuration plan and worksheet 13-3
 configuration task list 13-2
 database
 configuration task list 13-8
 name 13-8
 restricted membership 13-9
 setting up 13-7
 unrestricted membership 13-8
 ELANs and subnetworks 13-12, 13-13
 enabling the configuration server 13-11
 ESI template 13-4
 ESI values derived from MAC address 13-4
 Ethernet clients 13-14
 examples 13-17 to 13-32
 LECSs
 addresses 13-7
 configuring 13-4
 LESs 13-11 to 13-13
 overview 13-1
 prefix template 13-4
 redundant LECSs 13-15

routing between ELANs 13-11, 13-12
 SSRP 13-15
 Token Ring 13-13
 troubleshooting 13-16
 values of wildcard characters (table) 13-4
 wildcards in ATM address templates 13-4
 lane client-atm-address command 13-14
 lane client ethernet command
 LANE clients on a subinterface 13-13, 21-8
 LANE Ethernet clients 13-14
 LANE server and clients 13-12
 redundant LECSs 13-15
 lane client tokenring command
 LANE clients on a subinterface 13-13, 21-8
 LANE server and clients 13-12
 redundant LECSs 13-15
 lane config auto-config-atm-address command 13-11
 lane config database command 13-11
 LANE configuration server database configuration mode
 description 2-13
 table 2-4
 lane database command
 default ELANs 13-8
 entering command mode 2-13
 redundant LECSs 13-15
 restricted-membership ELANs 13-10
 unrestricted-membership ELANs 13-9
 LAN emulation clients. See LECs
 LAN emulation configuration servers. See LECSs
 LAN emulation servers. See LESs
 lane server-bus ethernet command 13-12
 lbo command
 DS3/E3 interfaces 17-14
 T1/E1 ATM interfaces 17-17
 T1/E1 IMA interfaces 20-5
 LECs
 assigning protocol addresses 13-12
 ATM router module interfaces, examples 21-9 to 21-13
 changing to different ELANs 13-12

- configuration examples 13-17 to 13-32
 - configuring ATM router module interfaces 13-13, 21-7
 - configuring subinterfaces 13-12
 - LECSs
 - addresses 9-3, 13-7
 - configuration examples 13-17 to 13-32
 - configuring 13-4
 - redundant 13-15
 - LESs
 - configuration examples 13-17 to 13-32
 - configuring 13-11 to 13-13
 - redundant 13-15
 - LGNs
 - complex node representation 10-51 to 10-52
 - configuration example 10-25 to 10-30
 - configuring 10-17 to 10-25
 - summary addresses 10-23 to 10-25
 - linecode command
 - T1/E1 ATM interfaces 17-16
 - T1/E1 IMA interfaces 20-5
 - line command
 - entering command mode 2-8, 2-9
 - line configuration
 - ATM switches 3-2
 - ATM switch routers 3-2
 - line configuration mode
 - description 2-8 to 2-9
 - table 2-3
 - link distance
 - configuring 8-28
 - displaying configuration 8-28
 - list command 14-5
 - LMI
 - configuring 19-12 to 19-15
 - displaying statistics on port adapters with NNI interface, example 19-15
 - keepalive interval 19-13 to 19-14
 - polling intervals 19-14
 - type 19-12 to 19-13
 - load-interval command 4-4
 - Local Management Interface. See LMI
 - logging command 4-4
 - logging messages 4-4
 - logical group nodes. See LGNs
 - login authentication command 4-5
 - loopback command 20-5
 - loopback interfaces
 - OAM 7-4
 - tag switching 15-3 to 15-4
-
- ## M
- MAC addresses
 - adding to BOOTP configuration file 3-4
 - main-cpu command
 - entering command mode 2-15
 - synchronizing configurations 3-28
 - main CPU configuration mode
 - description 2-15
 - table 2-5
 - managing and monitoring
 - ATM accounting 14-1
 - configuration files 21-3 to 21-5
 - functional images 21-5 to 21-9
 - IOS file system 21-2
 - overview 1-7
 - rebooting 21-4
 - snooping 6-43
 - system images 21-3 to 21-5
 - user interface 2-1
 - map-class command
 - entering command mode 2-10
 - map-class configuration mode
 - description 2-10
 - table 2-3
 - map-group command 12-7, 12-9, 21-14, 21-20

- map-list command
 - bridging packet flooding 21-18
 - entering command mode 2-9
 - IP multicast 21-20
 - map lists, example 12-8, 12-9
 - RFC 1483 21-14
 - map-list configuration mode
 - description 2-9
 - table 2-3
 - map lists
 - configuration examples (figures) 12-8, 12-10
 - configuring 12-9
 - PVC-based 12-7 to 12-9
 - SVC-based 12-9 to 12-10
 - masks
 - implicit in IP access lists, example 11-12
 - NSAP address 16-12, 16-13
 - subnetting 3-8
 - tag switching loopback interface 15-3
 - wildcard subnet 15-6
 - max-admin-weight-percentage command 10-35
 - MaxCR
 - framing overhead 8-40
 - framing overhead configurations (table) 8-40
 - interface overbooking 8-37
 - maximum burst size. See MBS
 - maximum cell rate. See MaxCR
 - maximum queue size 8-18
 - max-records command 16-12
 - MBS
 - configuring ATM default 8-33
 - displaying configuration 8-33
 - mdl command 19-3
 - messages
 - access list violation 11-10
 - logging 11-10
 - min-age command 14-7
 - modem support 4-1 to 4-2
 - modes. See command modes
 - monitoring. See managing and monitoring
 - MPLS. See tag switching
 - MSRP 1-3
 - multipoint-to-point funnel signalling 16-21
 - Multiprotocol Label Switching. See tag switching
 - multiservice switch route processors. See MSRP
-
- N
- name command
 - default ELANs 13-8
 - ELANs 13-10
 - node names 10-20
 - name server-atm-address command
 - default ELANs 13-8
 - redundant LECSs 13-15
 - restricted-membership ELANs 13-10
 - unrestricted-membership ELANs 13-9
 - national reserve command 20-5
 - NCDP
 - configuring 3-14
 - enabling 3-15
 - network configuration example (figure) 3-14
 - ncdp admin-weight command 3-16
 - ncdp command 3-15
 - ncdp control-vc command 3-16
 - ncdp max-diameter command 3-15
 - ncdp revertive command 3-15
 - ncdp source priority command 3-15
 - ncdp timers command 3-15
 - NEs
 - cell flows and 7-1
 - netmask addresses
 - configuration prerequisites 3-2
 - Network Clock Distribution Protocol. See NCDP
 - network clocking
 - configuring NCDP 3-14
 - configuring sources and priorities 3-11 to 3-12
 - configuring transmit source 3-12

- displaying configuration 3-13
- features (table) 3-10
- feature summary (table) 3-10
- network-clock-select bits command 3-11
- network-clock-select command
 - clock sources and priorities 3-11, 3-12
 - DS3/E3 interfaces 17-14
 - T1/E1 ATM interfaces 17-16
- network command 15-6
- network connectivity
 - checking 7-5 to 7-6
- network elements. See NEs
- network interfaces. See ATM network interfaces
- network management applications 1-8
- network management interface
 - description 8-2
- network routing, configuring 3-18
- Network Time Protocol. See NTP
- Network-to-Network Interface. See NNI
- next-node command 10-38
- NNI
 - configuring interfaces 5-4 to 5-6
 - 12-bit VPI 5-5
- nodal-representation command 10-51
- node 1 disable command 10-11
- node 1 level enable command 10-11
- node command
 - entering command mode 2-11
 - PNNI peer group identifier 10-18
 - significant change threshold 10-50
 - summary address 10-14, 10-24
- node election leadership 10-21 to 10-23
- node names 10-19 to 10-20
- nondefault well-known PVCs
 - configuring 6-29 to 6-30
 - overview 6-28
- NTP
 - configuring 4-10 to 4-12
- ntp command 4-10

- NVRAM
 - storing configurations 3-33

O

- OAM
 - ATM switch router hardware support 7-2
 - cell flow support 7-1
 - configuring entire switch 7-3
 - configuring entire switch router 7-3
 - configuring interface level 7-4
 - configuring maximum connections, example 7-3, 7-4
 - displaying configuration 7-7
 - fault management function (note) 7-1
 - maximum configured connections 7-3
 - overview 7-1 to 7-2
 - software capabilities 7-2
 - switch component operations 7-2
- OC-3c interfaces
 - changing mode of operation 3-6
 - configuring 17-5 to 17-6
 - default configuration 17-5
 - displaying configuration 3-7
 - modifying default configuration, example 3-6
- OC-12c interfaces
 - configuring 17-9 to 17-10
 - default configuration 17-9
- OC-48c interfaces
 - configuring 17-11 to 17-12
 - default configuration 17-11
- OIR tests
 - configuring, example 3-22
 - overview 3-20
- online diagnostics
 - configuring 3-20
 - displaying results 3-21
- online insertion and removal tests. See OIR tests
- Open Shortest Path First. See OSPF
- Operation, Administration, and Maintenance. See OAM

- OSF
 - configuring 8-6 to 8-7
 - displaying configuration, example 8-7
 - OSPF
 - configuring 15-5 to 15-7
 - displaying configuration, example 15-6
 - example 15-6
 - outgoing-port atm command 16-12
 - output pacing
 - configuring 8-21 to 8-22
 - displaying configuration 8-22
 - output queue maximum size
 - displaying configuration 8-19
 - output virtual circuits. See OVCs
 - OVCs
 - configuring 8-25
 - description 8-25
 - See also service classes
 - overbooking. See interface overbooking
 - oversubscription factor. See OSF
-
- P
- packet discard 16-3
 - parallel interfaces
 - unnumbering (note) 15-4
 - parent command 10-21
 - parent nodes 10-21
 - passwords
 - configuring enable 4-4
 - privileged EXEC mode 2-5
 - PBXs
 - interconnecting 18-2, 18-9
 - peer group leaders. See PGLs
 - permanent virtual channels. See PVCs
 - permanent virtual path numbers. See PVP numbers
 - PGLs
 - configuration example 10-25 to 10-30
 - configuring 10-17 to 10-25
 - node election leadership 10-21 to 10-23
 - parent nodes 10-21
 - physical interfaces
 - configuring 8-17
 - types 1-2 to 1-3
 - ping atm command 17-17
 - ping atm interface atm command 7-6
 - checking ATM connection 7-5
 - checking basic connectivity 4-18
 - ping destinations
 - in ATM connections 7-6
 - ping ip command 3-9
 - PNNI
 - advanced configuration 10-30 to 10-57
 - ATM addresses 10-5, 10-10
 - ATM address groups 10-8
 - ATM router configuration mode 2-10
 - basic configuration 10-10 to 10-25
 - collecting statistics 10-56 to 10-57
 - configuration example 10-25 to 10-30
 - configuring higher levels 10-17 to 10-25
 - explicit path description 10-38
 - explicit paths for soft PVCs 6-26 to 6-28
 - IISP interface example (figure) A-1
 - LGNs 10-17 to 10-25
 - link selection methods (table) 10-33
 - migration examples A-1 to A-17
 - moving switch in hierarchy (figure) A-11
 - node election leadership 10-21 to 10-23
 - node names 10-19 to 10-20
 - one-level hierarchy example (figure) A-7
 - overview 10-1
 - parent nodes 10-21
 - peer group identifier 10-17
 - PGLs 10-17 to 10-25
 - protocol parameters 10-52 to 10-55
 - route selection 10-31 to 10-41
 - scope mapping 10-15 to 10-17
 - static routes 3-18, 10-7, 10-12 to 10-13

- summary addresses 10-14 to 10-15, 10-23 to 10-25
- topology example (figure) 10-25
- two-level hierarchy examples (figure) A-2, A-8
- PNNI explicit path configuration mode
 - description 2-11
 - table 2-4
- PNNI node configuration mode
 - description 2-11
 - table 2-3
- point-to-multipoint
 - configuring PVCs 6-13
 - configuring PVPs 6-16 to 6-18
- Point-to-Point Protocol. See PPP authentication
- port adapters
 - 25 Mbps 17-2
 - 155 Mbps 17-3
 - 622 Mbps 17-7
 - ATM switch support 1-3
 - CDS3 Frame Relay 19-1
 - CE1 Frame Relay 19-7
 - CES T1/E1 18-2
 - clocking options 18-2
 - DS3 17-13
 - E1 ATM 17-15
 - E1 IMA 20-3
 - E3 17-13
 - on carrier modules 1-2
 - overview 17-1
 - T1 ATM 17-15
 - T1 IMA 20-3
- port select groups 14-14 to 14-17
- power-on diagnostics 3-36
- PPP authentication 4-17
- precedence command 10-37
- primary reference source. See PRS
- Private Network-Network Interface. See PNNI
- privilege command 4-9
- privileged EXEC mode
 - description 2-5
 - security level 2-1
 - table 2-2
 - See also EXEC command mode
- prompts
 - angle bracket in 2-5
 - pound sign in 2-5
 - rommon> (note) 3-4
 - system 2-2, 2-5
- protocol parameters
 - database synchronization 10-52 to 10-54
 - flooding parameters 10-52 to 10-54
 - Hello protocol 10-52 to 10-54
 - resource management poll interval 10-54 to 10-55
 - tuning 10-52 to 10-55
- PRS
 - example (figure) 3-14
 - synchronizing 3-14
- ptse command 10-53
- ptse significant-change command 10-50
- purge command 16-13
- PVCs
 - configuring 6-3, 6-13
 - configuring (note) 6-3
 - configuring end points to PVP tunnels 6-40
 - configuring soft, route optimization 6-24
 - configuring soft PVCs 6-18
 - configuring terminating 6-8
 - deleting 6-6
 - example (figure) 6-13
 - examples 6-3, 6-8, 6-14
 - traffic values in CTT data structure 8-11
 - types (figure) 6-7
 - See also hard PVCs
 - See also soft PVCs
- PVP numbers
 - for VP tunnels (note) 15-7

PVPs

- configuring 6-16
- configuring soft PVCs, route optimization 6-24
- connecting VP tunnels 15-12
- connection 6-9
- deleting 6-12
- description 6-9
- displaying configuration 6-17
- examples 6-10, 6-16
- examples (figure) 6-9, 6-16
- See also hard PVPs
- See also soft PVPs

PVP tunnels

- configuring PVCs 6-40

Q

QoS

- ATM Forum Class A 3-17
 - configuring 18-4
 - description 15-13
- quality of service. See QoS

R

rate scheduler. See RS

RCAC

- description 8-2

RDI functions

- cell flows and 7-2

rebooting 21-4

redistribute atm-static command 10-45

redundancy

- configuring 3-23 to 3-29
- ESHA 3-31 to 3-33
- preferred switch processors 3-31 to 3-32

route processors

- configuring 3-25, 3-26
- displaying configuration 3-29
- preparing for removal 3-29
- synchronizing configurations 3-26, 3-28

redundancy command

- entering command mode 2-15
- synchronizing configurations 3-28

redundancy configuration mode

- description 2-15
- table 2-5

redundancy force-failover main-cpu command 3-25

redundancy manual-sync command 3-27

redundancy preferred-switch-card-slots command 3-31

redundancy prepare-for-cpu-removal command 3-29

relative weight

- configuring 15-15
- description 15-15

remote defect indication functions. See RDI functions

remote-log command 14-13

Remote Monitoring. See RMON

reprogram command 21-6, 21-8

resource call admission control. See RCAC

resource management. See RM

resource-poll-interval command 10-54

RFC 1757 14-14

RFC 1483

- configuring ATM router modules 21-13 to 21-16

example 21-14

See also map lists

RFC 1577. See classical IP over ATM

RM

CTT 8-10

Frame Relay to ATM 19-16 to 19-19

framing overhead 8-40

functions 1-6, 8-2

hardware features 8-2 to 8-4

interface overbooking 8-37

OSF 8-6

- output pacing 8-21
 - overview 8-1
 - QoS 8-5
 - service classes 8-25
 - threshold groups 8-15
 - traffic control parameters 8-10
 - RMON
 - alarms 14-19 to 14-20
 - configuring 3-33, 14-14 to 14-20
 - events 14-18 to 14-19
 - overview 14-14
 - See also ATM RMON
 - rmon alarm command 14-19
 - rmon event command 14-18
 - rommon> prompt
 - recovering from (note) 3-4
 - ROM monitor mode
 - description 2-6
 - table 2-2
 - route processors
 - configuring redundancy 3-25, 3-26
 - displaying redundancy configuration 3-29
 - forcing a switchover 3-25
 - preparing for removal 3-29
 - synchronizing configurations 3-26, 3-28
 - router command 15-6
 - router configuration mode. See ATM router configuration mode
 - route selection
 - background route computation 10-31 to 10-33
 - explicit paths 10-38 to 10-41
 - link selection 10-33 to 10-35
 - maximum administrative weight percentage 10-35
 - precedence 10-36 to 10-37
 - tuning 10-31 to 10-41
 - routing mode 10-3 to 10-5
 - routing table (note) 3-2
 - RS
 - QoS service classes 8-25
 - tag switching service classes 15-14
-
- S
 - scheduler
 - configuring attributes 4-6
 - configuring service classes 8-25
 - scheduler command 4-6
 - scope command 16-13
 - scope map command 10-16
 - scope mapping 10-15 to 10-17
 - scope mode command 10-16
 - SCR
 - configuring margin factor 8-13
 - displaying margin configuration 8-14
 - scrambling command 17-5
 - security
 - in user interface 2-1
 - See also authenticating user access
 - segment loopback flow
 - checking with ping command, example 7-5, 7-6
 - segment loopbacks
 - effect of ping command on unenabled (note) 7-6
 - enabling, example 7-3, 7-4
 - ping of neighbor switch with 7-6
 - segment-target command 10-38
 - selection table 14-5 to 14-6
 - serial interfaces. See Frame Relay serial interfaces
 - service categories
 - configuring support 8-35
 - displaying 8-37
 - displaying limit 8-8
 - QoS 8-5
 - restrictions 8-36
 - TBR classes (table) 15-15
 - service-category command 16-13

- service category limits
 - configuring 8-7 to 8-8
 - example 8-8
- service classes
 - configuring 8-25
 - displaying information 8-27
- service commands, summary 4-6
- SGCP
 - configuring
 - call agents 18-53
 - circuits 18-50 to 18-51
 - request handling 18-53
 - displaying
 - configuration information 18-49
 - connections 18-52
 - endpoints 18-51
 - operation 18-49
 - overview 18-48
 - shutdown 18-54
- sgcp call-agent command 18-53
- sgcp command 18-49
- sgcp graceful-shutdown command 18-54
- sgcp request retries command 18-53
- sgcp request timeout command 18-53
- shaped VP tunnels
 - configuring hard PVCs 18-23 to 18-29
 - See also CES
- ships in the night. See SIN
- show atm accounting command 14-6
- show atm addresses command
 - Frame Relay soft PVCs 19-29
 - IISP configuration 10-5
 - ILMI global configuration 9-4
 - ILMI interface configuration 9-7
 - PNNI configuration 10-11
 - soft PVCs 6-19
 - troubleshooting interface configurations 17-17
- show atm arp-server command 12-5
- show atm filter-expr command 11-7
- show atm filter-set command 11-7
- show atm ilmi-configuration command 9-4
- show atm ilmi-status command
 - ILMI global configuration 9-4
 - ILMI interface configuration 9-8, 9-9, 10-9
 - VPI range configuration 6-32
- show atm interface atm command
 - autoconfiguration 5-2
 - E.164 addresses 16-7
 - hierarchical VP tunnel configuration 6-39
 - IISP configuration 5-8
 - NNI interface configuration 5-4
 - UNI interface configuration 5-3
 - VP tunnel configuration 6-35
 - 12-bit VPI NNI configuration 5-6
- show atm interface command
 - ATM E.164 translation table configuration 16-10
 - E.164 address autoconversion 16-9
 - shaped VP tunnel configuration 6-37
 - soft PVC route optimization configuration 6-25
 - troubleshooting interface configuration 17-17
 - VCCs 6-4
 - VPI range configuration 6-32
 - VP tunnel deletion 6-42
- show atm interface resource command
 - best-effort connections 8-30
 - controlled link sharing configuration 8-25
 - framing overhead configuration 8-41
 - link distance configuration 8-28
 - output pacing configuration 8-22
 - output queue maximum configuration 8-19
 - overbooking configuration 8-39
 - service categories 8-37
- show atm map command 12-5, 12-9
- show atm pnni aggregation link command 10-48
- show atm pnni aggregation node command 10-48, 10-51
- show atm pnni background-routes command 10-31
- show atm pnni background status command 10-31, 10-32
- show atm pnni command 10-21, 10-43

- show atm pnni election command 10-23
- show atm pnni election peers command 10-23
- show atm pnni explicit-paths command 10-40
- show atm pnni hierarchy command 10-21
- show atm pnni identifier command 10-39
- show atm pnni interface command 10-47
- show atm pnni local-node command 10-18, 10-42
- show atm pnni neighbor command 10-34
- show atm pnni precedence command 10-37
- show atm pnni resource-info command 10-50, 10-55
- show atm pnni scope command 10-17
- show atm pnni statistics command 10-56
- show atm pnni summary command 10-15
- show atm pnni topology node command 10-39
- show atm qos-defaults command 8-6
- show atm resource command 8-7, 8-14, 8-17
- show atm rmon command 14-16
- show atm rmon stats command 14-16
- show atm route command
 - E.164 address route configuration 16-6
 - static route configuration 10-7, 10-13
- show atm signalling cug command 16-18
- show atm signalling diagnostics filter command 16-15
- show atm signalling diagnostics record command 16-14
- show atm signalling diagnostics status command 16-15
- show atm signalling statistics command 16-19
- show atm snoop command 6-45
- show atm snoop-vc command 6-47
- show atm snoop-vp command 6-47
- show atm status command
 - multipoint-to-point funnel connections 16-21
 - troubleshooting interface configuration 17-17
- show atm vc cast mp2p command 16-21, 16-22
- show atm vc command
 - MBS configuration 8-33
 - PVCs 6-41
 - soft PVC configuration 6-20
 - soft PVC explicit paths 6-27
 - troubleshooting interface configuration 17-17
 - VCCs 6-4, 6-6, 6-12
- show atm vc interface atm command 6-9, 6-14
- show atm vp command
 - MBS configuration 8-33
 - point-to-multipoint PVP configuration 6-17
 - soft PVPs 6-23
 - VP connections 6-10
 - VP tunnel configuration 15-11
- show buffers command 4-2
- show calendar command 4-14
- show capability command 3-32
- show cdp command 4-3
- show ces address command 18-8
- show ces circuit command 18-13
- show ces circuit interface command 18-13
- show ces interface command 17-17
- show clock command 4-14
- show controller e1 command 19-9
- show controllers atm command
 - physical interface configuration 3-7
 - T1/E1 IMA interface configuration 20-5
- show controllers command
 - network clocking configuration 3-13
 - troubleshooting interface configuration 17-17
- show controller t3 command 19-5
- show diag online command 3-21
- show environment command 4-18
- show frame-relay connection-traffic-table command 19-18
- show frame-relay interface resource serial command 19-19
- show frame-relay lmi command 19-12, 19-13, 19-15
- show functional-image-info command 21-6
- show hardware command 17-17
- show ima interface command
 - confirming IMA group deletion 20-11
 - confirming interface deletion 20-11

- IMA frame length configuration 20-17
- IMA group configuration 20-9
- show interfaces atm command
 - IMA group configuration 20-9
- show interfaces command
 - Frame Relay soft PVCs 19-29, 19-31
 - troubleshooting interface configuration 17-17
- show interfaces ethernet 0 command 3-8
- show interfaces serial command
 - Frame Relay encapsulation 19-10
 - Frame Relay route optimization configuration 19-36
 - Frame Relay serial interface configuration 19-15
 - Frame Relay to ATM service interworking PVCs 19-25, 19-26
- show ip ospf command 15-6
- show lane bus command 13-16
- show lane client command 13-16, 21-13
- show lane command 13-16, 21-13
- show lane config command 13-16, 21-13
- show lane database command 13-16
- show lane default-atm addresses command 13-6
- show lane le-arp command 13-16
- show lane server command 13-16
- show ncdp path root command 3-16
- show ncdp ports command 3-16
- show ncdp sources command 3-16
- show ncdp status command 3-17
- show ncdp timers command 3-17
- show network-clocks command 3-13
- show preferred-switch-card-slots command 3-32
- show privilege command 4-9
- show processes command 4-17
- show protocols command 4-17
- show redundancy command 3-29
- show rmon alarms events command 14-20
- show rmon events command 14-19
- show running-config command 17-17
- show sgcp command 18-49
- show sgcp connection command 18-52
- show sgcp endpoint command 18-51
- show snmp command 4-8
- show stacks command 4-17
- show startup-config command 17-17
- show switch module interface command 5-6
- show tag-switching atm-tdp capability command 15-13
- show tag-switching interfaces command 15-5, 15-10
- show tag-switching interfaces detail command 15-8
- show vc command
 - Frame Relay soft PVCs 19-35
 - Frame Relay to ATM network interworking PVCs 19-22
 - Frame Relay to ATM service interworking PVCs 19-25
- show vc interface serial command
 - Frame Relay to ATM service interworking soft PVCs 19-33
 - Frame Relay-to-Frame Relay soft PVCs 19-29
- show version command
 - configuration register value 3-26
 - troubleshooting interface configuration 17-17
- signalling
 - CUGs 16-15 to 16-20
 - diagnostics 16-12 to 16-15
 - disabling 16-21
 - E.164 addresses 16-4 to 16-11
 - IE forwarding 16-2 to 16-3
 - multipoint-to-point funnel 16-21
 - SVC frame discard 16-3 to 16-4
- Simple Gateway Control Protocol. See SGCP
- Simple Network Management Protocol. See SNMP
- Simple Server Redundancy Protocol. See SSRP
- SIN
 - tag switching QoS 15-14
- single service VP tunnels 6-34
- snake tests 3-20
- SNMP
 - ATM accounting data retrieval 14-2
 - configuring 3-33

- description 3-33
- management, enabling 3-33
- snmp-server commands 4-7
- snmp-server enable traps atm-accounting command 14-11
- snmp-server host command 14-11
- snooping
 - configuring 6-43
 - description 6-43
- snoop test ports 6-43
- soft permanent virtual paths. See soft PVPs
- soft PVCs
 - CES 18-7 to 18-9
 - configuration guidelines 18-7 to 18-9
 - configuring
 - connections 6-18
 - example 6-19
 - structured services 18-29 to 18-33
 - structured services with CAS 18-35 to 18-37
 - structured services with CAS and on-hook detection 18-39
 - unstructured services 18-14 to 18-17
 - creating multiple PVCs 18-40 to 18-44
 - deleting 6-6
 - description 18-7
 - example (figure) 6-18
 - explicit paths 6-26
 - Frame Relay
 - configuration guidelines 19-28
 - configuring 19-21 to 19-34
 - configuring, example 19-34
 - route optimization configuration 6-24, 19-35
 - verifying
 - creation of multiple PVCs 18-44 to 18-45
 - structured services 18-34 to 18-35
 - structured services with CAS 18-37
 - structured services with CAS and on-hook detection 18-39
 - unstructured services 18-17
- soft PVPs
 - deleting 6-12
 - example 6-22
 - example (figure) 6-22
 - route optimization configuration 6-24
- software features
 - ATM addressing 1-5
 - ATM internetworking services 1-7
 - managing and monitoring 1-7
 - resource management 1-6
 - signalling and routing 1-6
 - summary 1-4 to 1-7
 - system availability 1-4
 - virtual connections 1-5
- software versions
 - testing 3-35
 - verifying 3-3
- sonet command
 - 155-Mbps interfaces 17-5
 - 622-Mbps interfaces 17-8
 - OC-3c interfaces 17-6
 - OC-12c interfaces 17-10
 - OC-48c interfaces 17-12
- sonet overhead command 17-8
- sonet report command 17-8
- sonet threshold command 17-8
- SSRP
 - global ILMI registration (note) 9-2
 - LANE fault tolerance 13-15
- static IP routes 21-1 to 21-2
- static map lists. See map lists
- static routes
 - ATM addresses 10-7
 - configuring for IISP or PNNI 3-18
 - E.164 addresses 16-6
 - PNNI 10-7, 10-12
- statistics command 10-56
- status command 16-13

- structured services
 - configuring
 - hard PVCs 18-20 to 18-22
 - hard PVCs, with shaped VP tunnel 18-23 to 18-27
 - network clocking 18-19
 - soft PVCs 18-29 to 18-33
 - overview 18-19
 - verifying
 - hard PVCs 18-22
 - hard PVCs, with shaped VP tunnel 18-28
 - soft PVCs 18-34 to 18-35
- STS-stream scrambling
 - disabling 3-6
- subinterface configuration mode
 - description 2-8
 - table 2-3
- subinterfaces
 - assigning LANE components 13-4
 - ATM ARP server 12-4
 - PVC-based map lists 12-7
 - SVC-based map lists 12-9
- subnetting 3-8
- summary-address command 10-14, 10-24
- summary addresses 10-14 to 10-15, 10-23 to 10-25
- sustainable cell rate. See SCR
- SVCs
 - CTTs in 8-11
 - frame discard 16-3 to 16-4
- switch cards. See switch processors
- switched virtual circuits. See SVCs
- switch fabric functionality 8-2
- switch processors
 - displaying EHSA configuration 3-32
 - EHSA 3-31
 - features (table) 8-2
 - installing in chassis (note) 1-3
 - preferred switch cards 3-31 to 3-32
- switch routers. See ATM switch routers
- sync config command 3-28
- system availability
 - ATM switch router 1-4
 - ESHA 3-31
 - redundancy 3-23
- system images 21-4
- system management
 - AAA access control 4-16
 - buffer pools 4-2
 - calendar 4-14
 - CDP 4-3
 - checking basic connectivity 4-18
 - clock 4-13
 - extended TACACS 4-15
 - load statistics interval 4-4
 - login authentication 4-5, 4-8
 - message logging 4-4
 - modem support 4-1 to 4-2
 - NTP 4-10
 - passwords 4-4
 - PPP 4-17
 - privilege level access 4-8
 - scheduler attributes 4-6
 - SNMP 4-7
 - TACACS 4-14
 - TACACS+ 4-16
 - terminal lines 4-1 to 4-2
- system prompts 2-2, 2-5
- system redundancy
 - configuring 3-23 to 3-30
 - EHSA 3-31 to 3-32
 - See also redundancy 3-23
- system requirements
 - LANE 13-2
 - redundancy 3-25
 - tag switching 15-2

T

T1 ATM interfaces

- configuring 17-15
- default configuration 17-15

T1 channels

- configuring time slots 1 through 5, example 19-4
- time slot groupings (note) 19-4

t1 command 19-4

T1 IMA interfaces

- configuring 20-3 to 20-6
- default configuration 20-4
- displaying configuration, example 20-6

T1 lines

- configuring CDS3 Frame Relay port adapter 19-4
- defaults 19-2
- description 19-1

T1 trunk interfaces

- configuring 17-15 to 17-17
- default configuration 17-15

T3 trunks

- demultiplexing 19-2
- description 19-1

TACACS

- enabling 4-15

Tag Distribution Protocol. See TDP

tag switching

- CAC support 15-18
- configuring 15-2 to 15-13
- configuring on VP tunnels 15-10 to 15-12
- CoS 15-13 to 15-16
- CTT 15-18
- displaying configuration on ATM interfaces, example 15-5
- enabling ATM interfaces 15-4
- example configuration 15-19 to 15-21
- loopback interfaces 15-3 to 15-4
- OSPF 15-5 to 15-7
- overview 15-1

- system requirements 15-2

TDP control channels 15-8 to 15-10

threshold group for TBR classes 15-17 to 15-18

VC merge 15-13

tag-switching atm control-vc command

nondefault well-known PVCs 6-29

TDP control channels 15-9

tag-switching atm vpi command 15-7

tag-switching ip command

enabling tag switching 15-4

tag switching on VP tunnels 15-10

TDP control channels 15-9

tag virtual channels. See TVCs

TDP

control channels 15-8 to 15-10

identifiers 15-3

troubleshooting sessions 15-9

TDP control channels

between source and destination switches (figure) 15-9

configuration example 15-9

configuring 15-8 to 15-10

displaying configuration, example 15-10

template aliases, configuring 11-2 to 11-3

terminal access control, establishing 4-14

terminal line, configuring 4-1 to 4-2

testing

ATM address configurations 3-38

ATM connectivity 3-39

ATM interface configuration 3-39

ATM interface status 3-40

configuration register installation 3-35

configurations 3-33

confirming NVRAM configuration 3-43

Ethernet connection 3-38

hardware installation and configuration 3-34, 3-35

initial IP configuration 3-38

power-on diagnostics 3-36

running configuration 3-42

software versions and type 3-35

- VCs 3-40
- See also troubleshooting
- tftp-server command 14-12
- threshold groups
 - configuring 8-16
 - description 15-17
 - displaying configuration 8-17
 - overview 8-15
- timer command 10-53
- Token Ring
 - ELAN, example 13-31 to 13-32
 - LANE client 13-13, 21-8
- topology attributes
 - administrative weight per interface 10-43
 - aggregation mode 10-48 to 10-49
 - aggregation token 10-46 to 10-47
 - complex node representation 10-51 to 10-52
 - global administrative weight mode 10-41 to 10-42
 - redistribution 10-45 to 10-46
 - significant change thresholds 10-49 to 10-50
 - transit restriction 10-44 to 10-45
 - tuning 10-41 to 10-52
- trace command 4-18
- traffic control parameters
 - configuring interface maximum 8-31
 - displaying interface maximum configuration 8-32
- transit-restricted command 10-44
- transmit clocking source 3-12
- troubleshooting
 - ATM connections 3-39
 - Ethernet connections 3-38
 - interface configuration 17-17
 - LANE components 13-16
 - TDP sessions 15-9
 - VCs 3-40
 - See also testing
- TVCs
 - CAC 15-18
 - creating 15-7

- CTT row 15-18
- displaying 15-16
- threshold group 15-17

U

UBR

- configuring CTT rows 8-12
- configuring OSF 8-6
- CTT row default 8-12
- limits of best-effort connections 8-29
- output queue maximum 8-18
- service category limit 8-7

UNI

- configuring 5-3
- static routes 3-18

uniqueness rule

- ATM addresses (note) 3-5

unprivileged user mode. See user EXEC mode

unspecified bit rate. See UBR

unstructured services

- configuring
 - hard PVCs 18-10 to 18-12
 - network clocking 18-10
 - soft PVCs 18-14 to 18-17

- overview 18-9

verifying

- hard PVCs 18-13
- soft PVCs 18-17

user EXEC mode

- security level 2-1

- table 2-2

See also EXEC command mode

user interface

- command modes 2-2 to 2-15
- IOS CLI features 2-16
- overview 2-1

username command 4-8

User-Network Interface. See UNI

V

variable bit rate non-real time. See VBR-NRT 8-3

variable bit rate real time. See VBR-RT 8-4

VBR-NRT

configuring CTT rows 8-12

configuring OSF 8-6

CTT row default 8-12

output queue maximum 8-18

service category limit 8-7

VBR-RT

configuring CTT rows 8-12

CTT row default 8-12

output queue maximum 8-18

service category limit 8-7

VCCs

checking with ping command, example 7-5, 7-6

configuring 6-2 to 6-3

deleting 6-6

displaying configuration 6-4

example (figure) 6-2

VC merge

configuring 15-13

disabling 15-13

displaying configuration 15-13

displaying configuration on ATM interface,
example 15-13

feature card requirements 15-13

VCs

confirming connections 3-40

Frame Relay to ATM 19-20 to 19-38

Frame Relay-to-Frame Relay 19-20 to 19-38

nondefault well-known PVCs 6-28 to 6-30

point-to-multipoint PVCs 6-13 to 6-15

point-to-multipoint PVPs 6-16 to 6-18

PVCs 6-7 to 6-9

PVPs 6-9 to 6-12

route optimization 6-24 to 6-25

soft PVCs 6-18 to 6-21

soft PVPs 6-22 to 6-23

types supported (table) 6-2

VCCs 6-2 to 6-6

VP tunnels 6-33 to 6-43

virtual channel connections. See VCCs

virtual connections. See VCs

virtual path identifier range. See VPI range

virtual path identifiers. See VPI values

virtual terminal lines

settings 11-12

VPI/VCI ranges

configuring SVPs and SVCs 6-30 to 6-31

example 6-31

VPI range

changing default tag 15-7

changing default TDP 15-8

configuring 15-7

displaying tag switching 15-8

maximum (note) 15-8

on VP tunnels (note) 15-7

selecting range of three, example 15-8

selecting range of two, example 15-8

showing tag switching VPI range, example 15-8

VPI values

using to configure OAM operations 7-4

VP tunnels

between source and destination switches (figure) 15-11

configuring 6-34

configuring between switches, examples 15-11

configuring intermediate switches (figure) 15-12

configuring PVP on ATM interface, example 15-12

configuring tag switching 15-10 to 15-12

confirming deletion 6-42

connecting 15-12

connecting PVPs on ATM interface, example 15-12

deleting 6-42

displaying configuration 6-35, 15-11, 15-12

public network (figure) 6-33

signalling VPCI 6-41

W

weighted round-robin. See WRR

well-known VCs 6-28

wildcards

in LANE address templates 13-4

WRR

configuring output scheduling 8-26

configuring relative weight 15-15

description 15-14

Y

yellow command 20-5

