



---

## A

- Acronyms **xiii**
- Audience **ix**
- Automatic Network Configuration **4-2**
- Automatic Network Configuration for Windows 95/98 **4-3**
- Automatic Network Configuration for Windows NT **4-3**

---

## C

- Cable LED **5-1**
- CAR100
  - features **1-1**
  - initialization **4-6, 5-3**
  - installation guidelines **2-2**
  - rear connector locations **3-1**
  - rear view **1-5**
  - sign on sequence **5-3**
  - software updates **4-7**
  - startup **4-6**
  - troubleshooting **5-1**
- CAR100-LAN
  - features **1-2**
- CAR100-PC **1-3**

- Coaxial cable
  - connecting **3-2**
- Configuration Overview **4-2**
- Connecting to a CATV Wall Outlet **3-3**
- conventions **ix**

---

## D

- DHCP Server **4-2**

---

## E

- Ethernet
  - crossover **2-4**
  - LED **5-1**
  - network adapter card **ix**
  - straight-through **2-4**

---

## G

- Glossary **xiii**

---

## H

- Hub **1-1, 1-2**

---

I

Installation

- general 3-1
- IP address 4-2
- IP router 1-2

---

L

LED

- cable 1-5
- during start-up 5-2
- Ethernet 1-5
- location 5-1
- master 1-4, 4-6
- monitoring via Ethernet 5-3
- normal patterns 5-1
- startup pattern 5-2

---

M

- Manual Network Configuration 4-4
- Manual TCP/IP Configuration for Windows 95/98 4-4
- Manual TCP/IP Configuration for Windows NT 4-5
- Master LED 5-1

---

N

- NAPT 4-2
  - port-level Network Address Translation 1-2
- Note, description of x

---

P

- Parallel connections 1-3
- PC Card ix
- Power supply
  - connecting 3-5
- Procedures
  - general installation 3-1

---

R

- RJ-45 connectors 2-4

---

S

- Safety recommendations 2-1
- Safety standard 2-2
- Sign-on 5-3
- Subnet mask 4-2

---

T

- Terminology xiii

Timesaver, description x