


Quick Reference Card

CISCO UBR904 CABLE MODEM SUBSCRIBER SETUP

1

Connect the Cable Modem

A Connect to the Cable TV Network

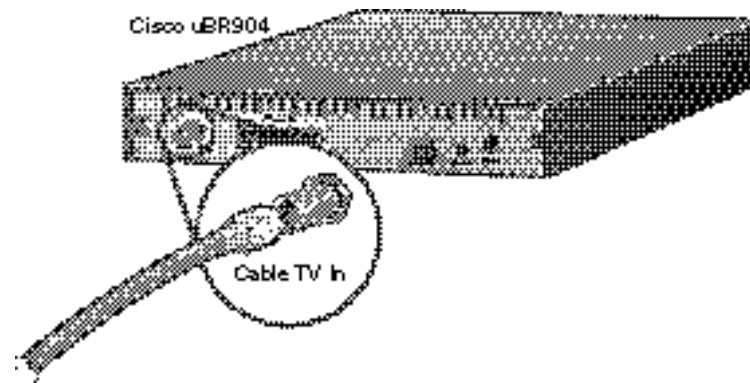

- 1 Locate the cable TV (CATV) outlet.
- 2 Connect one end of the CATV cable into the CATV outlet.
- 3 Connect the other end of the CATV cable to the connector with the label **Cable TV In**, on the cable modem's rear panel.



B Connect to Your PC




Note: All 4 Ethernet ports are identical.

- 1 Connect one end of the yellow Ethernet cable into 1 of the 4 yellow Ethernet ports (labeled **1**, **2**, **3**, and **4**), on the cable modem's rear panel.
- 2 Connect the other end of this cable to the Ethernet port on a PC.
- 3 Repeat Steps 1 and 2 for each additional PC. The cable modem contains 4 ports to connect directly to 4 PCs.

Note: Your cable service provider determines the number of devices that you can connect the cable modem to, based on the terms of your service agreement.

C Connect Power

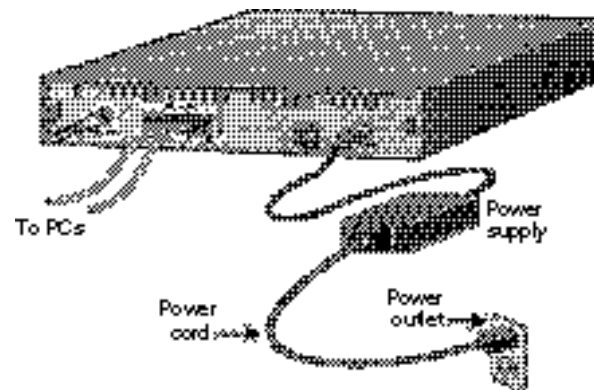

- 1 Connect the provided black power supply to the black power connector on the cable modem's rear panel.
- 2 Connect one end of the power cord to the power supply and the other end of the power cord to a grounded AC power outlet. The cable modem powers on after you connect it to the power outlet.
- 3 If your computer power cable is not already connected to a grounded AC power outlet, connect it now.
- 4 Turn on your PC power switch.

2

Initialize the Cable Modem

When connected and powered on, the cable modem executes an automatic installation procedure.

The cable modem:


- 1 Scans and locks on to the service provider's downstream frequency.
- 2 Obtains timing, signal, power level, authentication, addressing, and other operational parameters from the CATV headend.
- 3 Downloads its configuration file and is then operational.

During the initialization, the LEDs (lights) on the cable modem go on:

- The **OK** LED blinks for a few seconds during startup, then stays on when the automatic installation procedure is complete.
- The appropriate Ethernet LEDs (labeled **1**, **2**, **3**, and **4**) go on when the PC connects to the cable modem, and they blink when there is activity.
- When the **U1**, **U2**, and **LINK** LEDs go on, the cable modem is ready for use.

See the following section for more descriptions of the LEDs.

LED Descriptions

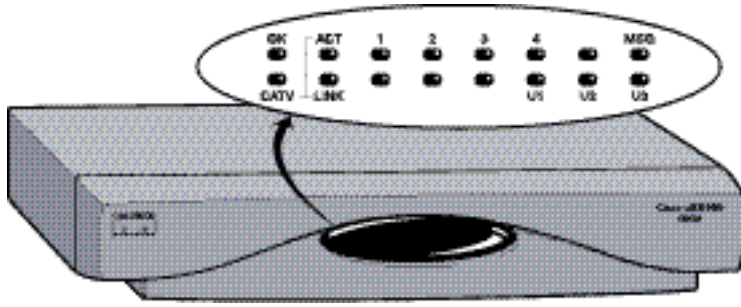

LED	Description	Function
OK	System status	On = System OK Blink = Fault Off = No power
ACT	Cable activity	Blink = Cable activity Off = No activity
1	Ethernet 1	On = Link up Blink = Activity Off = Link down
2	Ethernet 2	On = Link up Blink = Activity Off = Link down
3	Ethernet 3	On = Link up Blink = Activity Off = Link down
4	Ethernet 4	On = Link up Blink = Activity Off = Link down
MSG	Message	Used by your cable service provider to provide additional information. Contact your service provider for status details.
LINK	Cable link	On = Link up Blink = Establishing link to service provider Off = Link down
U1	User LED 1	On = Receiving valid signal
U2	User LED 2	On = Service provider receiving signal from modem
U3	User LED 3	On = Good signal received Off = Marginal signal received

3

Verify the Cable Modem Installation

A Check the LEDs

Check the LEDs on your cable modem to make sure that it is properly connected:

- If the **OK** LED does not stay on, check the power connections.
- If the appropriate Ethernet LEDs (**1**, **2**, **3**, **4**) do not blink or stay on, check the Ethernet cable connection for each PC that the cable modem connects to.

B Connect to a Web Site

Start your Web browser software and connect to a Web site of your choice, or try the Cisco Web site at:

<http://www.cisco.com>

- If you can access a Web page, your cable modem installation is now complete.
- If you cannot access a Web page, repeat the steps in this quick reference card. If you still cannot access a Web page, contact your cable service provider for assistance.

4

Safety Information

Following are safety instructions that you must follow when installing a Cisco uBR904. Failure to install the cable modem in accordance with these instructions will invalidate the agency approvals for the Cisco uBR904.

- Do not remove covers: There is no operator serviceable parts inside. Refer servicing to qualified personnel.
- Do not work on the system or connect and disconnect cables during a lightning storm.
- Safety requirements are not fulfilled unless the equipment is connected to a wall socket outlet with protective earth ground.

*Note: For a list of additional warnings and their translations, refer to the **Regulatory Compliance and Safety Information for the Cisco uBR904 Cable Modem**. To view this document on the Web, go to the Cisco Web site at www.cisco.com.*

Corporate Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>

