Numerics

100BASE-FX 2-6 100BASE-T 2-6 100BASE-TX 2-6 10BASE-2 See Ethernet network descriptions 10BASE-5 See Ethernet network descriptions 16 Mbps LED on TRIP See LEDs 16-bit CRC See CRC 2-minute fan failure shutdown See fan, shutdown 32-bit CRC See CRC 4 Mbps LED on TRIP See LEDs 4-40 thumbscrews on FSIP cables See FSIP, cables 7000 Series See Cisco 7000 Series 802.3 See IEEE 802.3 802.5 See IEEE 802.5

A

acronyms, definition 1-1 ACS-7010CBLM= spare cable management kit 5-71 ACS-7010RMK= spare rack mount kit 5-71 active monitor in Token Ring network 2-31 addresses interface 1-35 interface port 1-35 MAC 1-37 agency approvals summary 1-5 AIP cable connections 3-12 connection equipment 2-19 microcode ROM replacement 5-11 air exhaust 1-42 flow 1-5, 1-8, 2-14 AMD SuperNet chipset 1-26 ANSI X3.1 standard 1-26, 2-33 ANSI/CCITT standard 2-19 arbiter description 1-6, 5-72 MAS-7KARB= FRU 5-70

replacing 5-80 arbitration, CxBus 1-6 attachment unit interface See AUI AUI connector pinouts A-3 description 2-23 EIP ports 1-25 network connections (illustration) 3-14 See also Ethernet AUSTEL agency approvals 1-5 autoreconfiguration in Token Ring network 2-32 auxiliary port connecting devices to 3-26 description 1-15, 2-44 RS-232 connector 2-41

В

backoff algorithms and Ethernet collisions 2-24 backplane cover 5-72 description 1-9 interface processor connections 5-2 power distribution 4-4, 5-72 slot keys 1-10 speed 1-5 wiring 5-72 back-up batteries 1-14 banner, system 3-27, 4-5 baseband networks 2-24 batteries, lithium backup 1-14 baud-rate settings 5-21 beaconing on ring network 2-32 boot command 5-14 Boot Error LED on RP See LEDs boot filenames 5-14 boot system flash command 3-33 boot-load failure 5-16 bootload-failure response 5-21 brackets, cable management 3-7 Break key (interrupt) 5-21 broadcast address destination, configuration register settings 5-21 broadcast address, setting 5-15 broadcast networks 2-24 burn in 4-1 bus arbitration 1-6 data 1-6 See also CxBus traffic control 1-6 bypass switch, optical

See optical bypass switch

С

C (Connected) LED on HIP See LEDs CAB-ATM-DS3/E3 3-12 CAB-FMDD FDDI optical bypass cable 2-33 CAB-HNUL HSSI null modem cable 2-19, A-13 cable management brackets ACS-7010CBLM= FRU 5-71 installing 3-7 cable management kit hardware 2-46 using 2-14 cable retention clip on power supply 5-72 cables 100BASE-T 2-6 4-40 thumbscrews on serial 2-19 AC power 1-7 attaching **FEIP 3-14** avoiding crossing 3-10 CAB-ATM-DS3/E3 3-12 connecting external 3-10 console port 2-18, A-2 distance limitations 2-5 E1-G.703/G.704 2-39 Ethernet 10BASE-2 and 10BASE-5 2-5 Ethernet transceiver A-3 Fast Ethernet specifications 2-6 FDDI 2-32 **FEIP 2-27** fiber 2-32 FSIP 1-30, 2-19 guidelines 3-10 HSSI interface 2-43 HSSI null modem 2-44 interference 2-4 lobe (Token Ring) 2-30, A-5 M3 metric thumbscrews 2-38 MII and RJ-45, FEIP 2-27 MII specifications 2-6 MIP 2-36 monomode (FDDI) 2-32 multimode (FDDI) 2-32 optical bypass (FDDI) A-5 patch (Token Ring) 2-30 power 5-78 retention clip, power 5-78 safety guidelines 2-3 SCSI-II and HIP 2-43, A-12 serial 2-38 single-mode (FDDI) 2-32

strain relief 2-27, 5-10 swapping power 4-6 Token Ring A-5 ungrounded 2-3 uninsulated 2-3 universal serial port adapter 1-30, 2-19, 2-38, A-6 captive installation screws chassis cover panel 5-73 for ESD prevention 2-3 IPs 4-9, 5-7 caution hanging the router 5-18 reset switch B-2 caution, description iii CHAS-7010= spare chassis with power supply 5-71 chassis CHAS-7010= spare chassis with power supply 5-71 clearance 1-42, 2-14 cover panel description 1-3, 5-72 removing and replacing 5-73 dimensions 1-5, 2-14 environment 2-15 feet 2-14, 3-6 footprint 2-15 ground 1-7 interface processor end (illustration) 1-4 internal components 1-6, 5-72 lifting 2-2, 3-6 MAS-7010= FRU 5-71 noninterface processor end (illustration) 1-6 operating specifications 1-5 physical specifications 1-5 rear view (illustration) 1-4 specifications 1-5 temperature 1-40 top-down view (illustration) 1-6 checklist, installation 2-48 CIP microcode ROM replacement 5-11 Cisco 7000 Series downloadable software and microcode 1-12 interface addresses 1-35 platform comparison 1-2 Cisco Extended Bus See CxBus Class A stations (FDDI), description 2-33 Class B stations (FDDI), description 2-33 clearance for air circulation 2-14 clearance, chassis 1-42, 3-1 clock acceptable rates for serial 5-48 and HSSI interfaces 1-32, 3-24 and loopback test 5-47 and serial interfaces 1-29, 2-40, 3-22

and synchronous transmission 1-16, 2-44 arbiter (CxBus) 1-6 DCE signals 2-40 DTE signals 2-40 inverting on serial interfaces 5-47 clockrate command 2-40, 5-48 Collision LED on EIP See LEDs collision, on Ethernet network 2-24 commands b (boot) 5-19 boot 5-14 boot system 5-20, 5-24 boot system flash 5-22 boot system flash filename 3-33, 5-21 Break (interrupt) 5-21 clockrate 5-48 config-register 3-33, 5-19, 5-20, 5-22, 5-24 configure 5-8 configure terminal 5-19, 5-20, 5-24 copy 3-31 crc32 5-49 early token release 2-32 enable 5-18, 5-24 Flash-related 5-19 hssi internal-clock 3-24 i (initialize) 5-23 invert-transmit-clock 5-48 microcode card rom 5-12 microcode reload 5-12 nrzi encoding 5-49 o/r (reset) 5-23 reload 5-19 ring-speed 2-32 setup 5-8 show configuration 5-23 show controller cxbus 5-50 show controllers 5-8 show environment 1-42, 2-17 show environment all 1-45 show environment last 1-43 show environment table 1-43 show interfaces 1-36, 5-8 show version 4-7, 5-19, 5-23 shutdown 5-51 concentrator, in FDDI network 2-34 config-register command 3-33 configuration notes 5-1 register 5-13 boot field 5-20 worksheet 2-47, 2-50, 3-10 configure command 5-8 configuring MIP 5-57

Conn LED on FSIP See LEDs connector AUI 2-23, A-3 auxiliary port 1-15, A-2 console port 1-15, A-2 DB-9 1-34 DIN A-5 Ethernet 2-26, A-3 FC 1-27 FSIP 1-30, 2-38 MAU plug for Token Ring 2-29 MIC 1-27 MII and RJ-45 2-27 mini-DIN 1-27, A-5 optical bypass switch A-5 RJ-11 Token Ring 2-29 RS-232 1-30, 2-41, A-7 RS-449 1-30, 2-41, A-8 RS-530 2-43 Token Ring 2-29, A-5 TRIP A-5 universal serial port adapter 2-38 universal serial port adapters 1-30 V.35 1-30, 2-42, A-10 X.21 1-30, 2-42 console port A-2 baud rate 5-16 cable 2-18 description 1-15, 2-44 settings 5-21 terminal 4-5 conventions See document conventions cooling subsystem 4-3, 4-6 copy command 3-31 copying to Flash 5-22 cover backplane 5-72 power harness 5-72 cover panel illustration 1-3 CPU **FSIP 1-28** system 1-11, 4-5 CPU Halt LED on RP See LEDs CRC configuring 32-bit 5-49 description 2-40 crc32 command 5-49 Critical status level, environmental monitor 1-41 CSA agency approvals 1-5 CSMA/CD, description 2-24 CSU 2-19

current rating, chassis 1-5 CxBus arbitration 1-6 clock 1-6 description 1-6 IPs, replacing 5-7 See also backplane traffic 1-6 cyclic redundancy check see CRC

D

damage from overheating 1-40 DAS description 2-34 LED indications B-7 network connections (illustration) 3-18 DB-9 connector 1-34 DC OK LED 1-8, 4-4 DC power distribution 1-7 shutdown 1-41 voltages 4-1 DCE cables 2-38 clock signals 2-40, 5-48 devices 3-22 debug command mode 5-16 dimensions chassis 1-5 IPs 1-21 DIN connector A-5 displays, environmental 1-42 document conventions iii downloadable microcode 1-39, 5-9 downstream neighbors 2-34 **DRAM 1-11** DS1 network 5-48 DS-3 standard standards DS-3 2-19 DSU 2-19, 3-22 DTE cables 2-38 clock signals 2-40 devices 3-22 dual attach stations See DAS dual homing description 2-36 LED indications B-7 dual ring, description 2-34 dust 2-2

dynamic random-access memory See DRAM

Ε

E1 network 5-48 E1-G.703/G.704 cables 2-39 E3 HSSI support 2-43 early token release 2-31 early token release command 2-32 **EEPROM** description 1-15 MAC address bank 1-37 EIA/TIA 612/613 standard 2-13 EIP AUI ports 2-23 connecting transceivers 2-26 connectors 2-26 description 1-25 LEDs B-5 microcode ROM replacement 5-11 network connections (illustration) 3-14 port signals A-3 See also Ethernet speed 1-21 troubleshooting 4-8 ejector levers description 1-4 troubleshooting 4-9 using 5-6 electromagnetic pulse (EMP), avoiding 2-5 electronically erasable programmable read-only memory See EEPROM electrostatic discharge 2-4 EMI agency approvals 1-5 and chassis cover 2-17 and interface processorP carriers 5-6 shielding 2-3 EMI filter clip, AIP 3-12 enable command 5-24 Enabled LED on IPs See LEDs environmental monitor description 1-40 **EPROM** See ROM, system system software 1-12, 5-31 erasable-programmable read-only memory See ROM, system error detection, CRC 2-40, 5-49 ESD prevention 2-4 Ethernet 10BASE-2 networks 2-5

10BASE-5 networks 2-5 AUI connector pinouts A-3 cables A-3 connector locks 2-27 connectors 2-26 description 2-24 interface processor See EIP network connections 2-5 network connections (illustration) 3-14 ports on EIP 1-25, A-3 slide-type connector locks 2-26 transceiver 1-25, 2-18, 2-25, 5-7 transmission distances 2-5 examples clockrate command 5-48 copying images to a Flash memory card 3-31 crc32 command 5-49 Ethernet connections 2-26, 3-14 fan failure shutdown messages 1-45 FDDI DAS ring (illustration) 2-35 invert-transmit-clock command 5-48 microcode card-type ROM | Flash file command 5-11 nrzi-encoding command 5-49 **OIR** messages 5-8 port addresses 1-36 ring-speed command 3-16 show controller cxbus command 5-50 show controller cxbus command output 5-11 show environment all command output 1-45 show environment command output 1-43 show environment last command output 1-43 show environment table command output 1-44 show interfaces command output 1-36 shutting down an interface 5-51 system banner 4-5 upstream and downstream neighbors 2-35 exhaust air 1-42

F

```
factory burn in 4-1
failure
AC source 1-41
boot-load 5-16
fans 4-4
power source 4-4
fan
control board 5-72
failure 1-45, 4-4
shutdown 1-45
tray
description 1-9, 5-72
```

MAS-7010FAN= FRU 5-70 replacing 5-74 fan tray operating voltages 1-8, 4-4 Fast Ethernet Interface Processor See FEIP fast serial interface processor See FSIP fault management Ethernet 2-24 Token Ring 2-31 FC connector 1-27 FCC agency approvals 1-5 FDDI agency approvals 1-5 cable media 2-32 interface processor See FIP network connections (illustration) 3-16 optical bypass 2-35 optical bypass cable A-5 ring 2-32 standard 2-8 transmission distances 2-8 feet, chassis, removing 3-6 FEIP cable attachment 3-14 cables and connectors 2-27 LEDs B-5 microcode EPROM location 5-11 pinouts A-4 product numbers and descriptions 1-26 See also Fast Ethernet field-replaceable unit See FRUs filenames, netbooting 5-20 filler interface processor 2-17, 5-6 filler, interface processorP 5-7 FIP connections 2-33 description 1-26 DIN connector A-5 LEDs B-6 microcode ROM replacement 5-11 network connections (illustration) 3-16 optical bypass switch 2-35 See also FDDI speed 1-21, 1-26 transceivers 2-32 troubleshooting 4-8 Flash copying to 5-22 downloading images into 1-14 Flash memory

copying files 3-31 loading microcode from 5-12 write-protection 5-17 frequency, specifications 1-5 FRUs ACS-7010CBLM= cable management kit 5-71 ACS-7010RMK= rack mount kit 5-71 CHAS-7010= chassis with power supply 5-71 definition 1-1 descriptions 1-6 internal, replacing 5-70 locations of 1-6 MAS-7010= chassis (without power supply) 5-71 MAS-7010FAN= fan tray 5-70 MAS-7KARB= arbiter 5-70 MAS7K-BLANK interface processor filler 5-6 PKG-7010= spare shipping container and materials 5-71 PWR-7010AC*= power supply 5-71 FSIP cables 1-30, 2-19 configuration 5-47 connectors 2-38 description 1-28 interface pinouts A-6 LEDs B-8 microcode ROM replacement 5-11 modes and timing 1-29, 2-40 modules 1-28 network connections (illustration) 3-22 NRZI format 2-39 PLCC microcode ROM, replacing 5-9 port adapters, replacing 5-51 speed 1-21 SRAM 1-28 troubleshooting 4-8

G

gravity, maintaining low center 2-14 ground screw 1-7 guides, backplane slot keys 1-10

Н

Hall Effect signal 1-45 Halt LED on RP 1-15 handles IPs 2-3, 5-7 power supply 1-7, 5-79 hardware address 1-35 heat dissipation 1-5 High-Level Data Link Control (HDLC) 2-19 high-speed serial interface processor See HIP HIP cable pinouts A-12 connectors 2-43 description 1-21 LEDs B-10 microcode ROM replacement 5-11 network connections (illustration) 3-24 null modem cable pinouts A-13 See also HSSI speeds rates 1-32 troubleshooting 4-8 HSSI cable pinouts A-12 connectors 2-43 interface processor See HIP LEDs B-10 network connections (illustration) 3-24 null modem cable pinouts A-13 null modem connections 3-24 transmission distances 2-13 hssi internal-clock command 3-24 HSSI standard 2-13 humidity, specifications 1-5

I

i command (initialize and reboot) 5-23 IBM and NRZI format on serial interfaces 2-40, 5-48 Spyglass chipset on TRIP 1-34 Token Ring network, description 2-29 IEEE 802.3u 2-6 IEEE 802.3 and EIP 1-25, 2-18 and Ethernet Version 2 2-24 description 2-24 physical layers 2-24 IEEE 802.5 and TRIP 2-8, 2-18, 2-29 specification 2-29 IEEE RS-232C standard 2-9 images, downloading 1-14, 5-9 immunity, agency approvals for interference 1-5 In Ring LED on TRIP See LEDs inlet air 1-45 installation checklist 2-48 interface addresses 1-35 configuration 4-1

shutting down 5-51 types supported 1-4 interface processor end of router 1-3 interface processors configuration 5-2 Enabled LED B-3 filler 5-6 fillers 2-17 installation 5-2 intermittent powerfails 1-42, 1-45 inverted clock 2-40, 5-48 invert-transmit-clock command 5-48 IPs carriers 5-7 description 1-21 dimensions 1-21 FRUs 5-71 LEDs 1-22 spares 5-71 subsystem for troubleshooting 4-8 ISO 9314 standard 1-26, 2-33

J

jackscrews FEIP MII connector 2-28 on Ethernet cables 2-27 on power cable retention clip 5-80 on universal serial port adapters 5-52 jewelry, avoiding for safety 2-2 jumpers boot field 5-14 configuration register 5-14 Flash memory write protection 1-15 Flash memory write-protect 5-13 RP 1-15 system software EPROM size 1-15

Κ

key, Break (interrupt) 5-21 keys, backplane slots 1-10

L

label, chassis serial number 4-1 laser radiation 3-10 LEDs Boot Error B-2 CPU Halt B-2 DC OK 1-8, 3-27, 4-4

EIP 1-25, B-5 Enabled on IPs 1-22, 3-27 FEIP B-5 FIP 1-27, B-6 FSIP 1-29, B-8 HIP 1-32, B-10 interface processor Enabled B-3 MII, link, and RJ-45 B-6 PCMCIA slots 1 and 2 B-2 power supply 1-7, 4-4 RP 1-15, 4-5, B-2 serial ports B-8 system B-1 TRIP 1-34, B-6 levels, status for environmental monitor 1-41 lifting the chassis 2-2, 3-6 light signals in FDDI networks 2-32 lightning storm, safety during 2-3 Link LED B-6 lobe cables, Token Ring 2-30, A-5 locked blocks recovering 3-34 log environmental 1-42 site 2-47, 2-51 logical interface address 1-35

Μ

M3 metric thumbscrews for serial connectors 1-30, 2-38 MAC address allocator 1-37 MAS-7010= spare chassis 5-71 MAS-7010FAN= fan tray 5-70 MAS-7KARB= arbiter 5-70 MAS7K-BLANK interface processor filler 5-6 MAU EIP interface to 1-25, 2-23 TRIP interface to 1-34, 2-28, A-5 maximum configurations 1-35 memory SRAM on FSIP 1-28 system 1-11 memory, Flash See Flash messages CPU self-check 5-16 environmental 1-42 fan failure 2-17 fan shutdown 1-45 OIR status 5-8 universal cable unattached 5-50 MIC connector 1-27 microcode

and troubleshooting 4-5 downloadable 1-22, 1-39 ROM replacement 5-10 specifying file to load 5-11 verifying the current version 5-11 microcode card rom command 5-12 microcode reload command 5-12 MII cable attachment 3-14 cable specifications 2-6 connections, FEIP 2-27 LED B-6 pinouts A-4 mini-DIN connector 1-27 MIP cables 2-36 configuration 5-57 microcode ROM replacement 5-11 speed 1-22 modem 2-18 monomode FDDI cables 2-32 Motorola MC68040 See CPU MSAU, description 2-30 multimode FDDI cables 2-32 FIP description 1-26, 2-33 multistation access unit See MSAU

Ν

neighbors, upstream and downstream 2-34 netbooting 5-20 noninterface processor end of router 1-6 nonvolatile memory See NVRAM Normal LED on RP See LEDs Normal status level, environmental monitor 1-41, 1-43 note, description iii NRZI format configuring 5-48 description 2-39 nrzi-encoding command 5-49 null modem cable connecting 3-24 description 2-44 pinouts A-13 numbers, port 1-35 **NVRAM** description 1-14 log 1-41

0

o/r command (reset) 5-23 OIR functional description 1-38 interface processor support 1-21 onscreen messages during 5-8 screen displays during 5-8 steps for performing 5-2 online insertion and removal See OIR operating conditions for chassis 1-4, 2-4, 2-15 optical bypass cable 1-27 optical bypass switch cable pinouts A-5 functional description 2-35 installing 3-20 out-of-tolerance condition 1-41 overheating, preventing 1-6, 2-17 overtemperature conditions 4-1

Ρ

password, recovering 5-23 patch cables, Token Ring 2-30 PCMCIA formatting a new card 3-31 photodiode detector for FDDI 2-32 PHY A/B LEDs on FIP See LEDs PHY, description 2-34 physical layers, IEEE 802.3 and Ethernet 2-24 physical port addresses 1-35 physical sublayer See PHY pinouts Fast Ethernet A-4 MII, 100BASE-T port A-4 PKG-7010= spare shipping materials 5-71 PLCC IC on FSIP 5-9 port addresses 1-35 AUI 2-23 auxiliary 1-15, 2-41 console 1-15, 2-44 densities 1-35 EIP A-3 Ethernet 2-23 FDDI 2-32 RS-232 1-30, A-7 RS-449 1-30, A-8 RS-530 2-43 serial 2-38

Token Ring 2-28, A-5 V.35 1-30, A-10 X.21 1-30 port adapters cable pinouts A-6 cable unattached message 5-50 connectors 2-38 description 1-30 replacing 5-51 power backplane harness 5-72 cord 1-7, 2-2, 4-6, 5-71, 5-72 DC status 1-41 disabled 1-41 distribution 5-72 emergency switch 2-2 internal DC voltage 1-8, 4-4 LED 1-8, 4-4 service 3-11 site 2-4 specifications 1-5 status 1-8, 4-4 subsystem for troubleshooting 4-3 surge suppression 2-5 ungrounded 2-3 power factor corrector 1-5, 2-4 power harness cover 5-72 power supply and environmental monitor 1-41 cable retention clip 5-72 description 1-7 handles 2-3, 5-79 LED 1-7, 3-27, 4-4 PWR-7010AC FRU 5-71 shutdown 1-41 status 1-8, 4-4 troubleshooting 4-3 powerfails 1-45 PRE-FSIP 1-22 procedures copying to Flash 5-22 maintenance ??-5-23 recovering from a lost password 5-23 processor modules, definition 1-4 shutdown 1-41 system 1-11 protocols 1-1 PWR-7010AC power supply FRU 5-71

R

rack mount kit ACS-7010RMK= FRU 5-71

installing 3-1 radio frequency interference See RFI read-only memory See ROM 1-11 Receive LED on EIP See LEDs recovering a lost password 5-23 refresh, environmental display 1-45 reliability, system 1-1 reload command 5-19 replaceable system components 5-1 See FURs reports, environmental 1-42 reset switch B-2 RFI ring dual 2-34 in FDDI networks 2-32 in Token Ring networks 2-29 recovery 2-35 speed 2-28 ring-speed command 2-32 RJ-45 cable attachment 3-14 cable specifications 2-6 connections, FEIP 2-27 LED B-6 pinouts, FEIP A-4 ROM booting from 5-14 loading microcode from 5-12 microcode 1-22, 5-10 ROM monitor, system boot 5-15 route processor See RP RP and bus access 1-6 boot sequence 4-5 configuration 5-2 configuring 5-13 description 1-11 Flash write-protection 5-17 installation 5-2 LEDs 4-5, B-2 normal startup 4-5 operating voltages 1-8, 4-4 replacing 5-13 subsystem for troubleshooting 4-8 **RS-232** cable pinouts A-7 description 2-41 port A-7 port adapter 1-30 serial port adapter cable 2-38

standard 2-41 transmission distances 2-8 **RS-449** cable pinouts A-8 description 2-41 port adapter 1-30 serial port adapter cable 2-38 standard 2-9, 2-41 transmission distances 2-9 **RS-530** cable pinouts A-11 description 2-43 port adapter 1-30 serial port adapter cable 2-39 standard 2-43 transmission distances 2-9 RxC LED on FSIP See LEDs RxD LED on FSIP See LEDs

S

safety agency approvals 1-5 recommendations 2-2 SAS description 2-34 LED indications B-7 network connections (illustration) 3-17 segmentation on FDDI ring 2-35 self-check messages 5-16 sensors, temperature 1-45 serial interface processor See FSIP network connections (illustration) 3-22 ports, LED indications B-8 transmission distances 2-8 serial port adapters cable pinouts A-6 cable unattached message 5-50 cables 2-38 connectors 2-38 description 1-30 replacing 5-51 setup command facility 2-45, 5-8 shipping material spare PKG-7010= 5-71 show controller cxbus command 5-50 show controllers command 5-8 show environment command 1-42, 1-45, 2-17 show environment last command 1-43 show environment table command 1-43 show interface command 1-36

show interfaces command 1-36, 5-8 show version command 4-7 shutdown environmental 1-40, 4-7 fan failure 1-45, 4-7 power supply 1-41 processor 1-41 thresholds 1-40 shutdown command 5-51 signal loss with optical bypass 1-27 Silicon Switch Processor See SSP single attach stations See SAS single-mode FDDI cables 2-32 FIP description 1-26, 2-33 SIP 1-22 site cabling 2-4 power 2-4 slide-type locks on EIP ports 2-26 slot locations 1-3 numbers 1-35 slot/port addresses for interfaces 1-35 SMDS networks and CRCs 2-40 SNMP management 1-11 software commands 1-1 minimum requirements 1-2 upgrades 1-1, 5-2, 5-30 SONET description 2-19 HSSI support 2-43 SP configuration 5-2 description 1-20 installation 5-2 microcode ROM replacement 5-11 normal startup 4-5 subsystem for troubleshooting 4-8 spares descriptions 1-6 locations of 1-6 See FRUs specifications chassis, physical 1-5 Fast Ethernet 2-6 SRAM, FSIP 1-28 SSP configuration 5-2 installation 5-2 microcode ROM replacement 5-11 standards

32-bit CRC 2-40 ANSI X3.1 1-26, 2-33 ANSI/CCITT 2-19 EIA/TIA 612/613 2-13 **FDDI 2-8** HSSI 2-13 IEEE RS-232C 2-9 ISO 9314 1-26, 2-33 RS-232 2-41 RS-449 2-9, 2-41 RS-530 2-43 SONET STS-1 2-19 T3 2-19 X.21 2-42 startup, system 3-26, 4-3 static random-access memory See SRAM statistics, environmental 1-44 status DC power 1-41 environmental 1-43, 2-17 FIP 1-27 interfaces 1-36, 5-8, 5-57 IPs 1-22, 3-27, 5-12 microcode 5-11 **OIR 5-8** reports 1-42 RP 1-15 system 1-15 STS-1 SONET See SONET subsystems for troubleshooting 4-3 cooling 4-6 IPs 4-8 power 4-6 **RP 4-8** SP 4-8 switch emergency power 2-2 optical bypass 1-27, A-5 power 1-7, 1-41, 3-27, 5-1 reset B-2 switch processor See SP Synchronous Optical NETwork See SONET system architecture (illustration) 1-10 backplane 1-9 banner 3-27, 4-5 boot instructions 5-14 boot sequence 4-5 components, description 1-6, 2-47 fans 1-6 FRUs

description 1-6 replacing internal 5-70 functional overview 1-34 internal components 1-6 replacing 5-72 LEDs B-1 lifting 2-2, 3-6 maximum configurations 1-35 memory 1-11 physical description 1-2 power 1-8, 4-4 problems at startup 4-1 reliability 1-1 replaceable components 5-1 shutdown 1-8, 4-4 software EPROMs 1-12, 5-31 spare description 1-6 spares See FRUs startup 3-26, 4-3 upgrades 5-1

Т

T1 connections 2-19 network connections 2-19 T3 HSSI support 2-43 standard 2-19 Telco-type equipment racks 2-13, 3-1, 3-4 telephone jacks 2-3 temperature internal chassis 1-40 operating 1-5 parameters for environmental monitor 1-45 power supply B-1 sensors 1-45 specifications 1-5 thresholds environmental 1-41 shutdown 1-40 time saver, description iii Token Ring autoreconfiguration 2-32 beaconing 2-32 cable pinouts A-5 cables 2-29 interface processor See TRIP MAU 2-28 network connections (illustration) 3-15 ports A-5

transmission distances 2-8 Token Ring interface processor See TRIP traffic on CxBus 1-6 transceiver Ethernet 1-25, 2-23, 2-25, A-3 fiber optic 1-27 Transmit LED on EIP See LEDs TRIP description 1-34 LEDs B-6 microcode ROM replacement 5-11 network connections (illustration) 3-15 port signals A-5 See also Token Ring speed 1-21 troubleshooting 4-8 TxC LED on FSIP See LEDs

U

UL agency approvals 1-5 universal cable unattached message 5-50 universal serial port adapters cable pinouts A-6 cable unattached message 5-50 connectors 2-38 description 1-30 replacing 5-51 upgrades microcode 1-22, 5-9 system software 5-1, 5-30 system software EPROM jumper settings 1-15 upstream neighbors 2-34

V

V.35 cable pinouts A-10 description 2-42 port adapter 1-30 serial port adapter cable 2-38 transmission distances 2-9 VDE agency approvals 1-5 virtual configuration register functions 5-17–5-22 voltage input 1-5 out-of-tolerance condition 1-41

W

warning description iii environmental 1-45 weight, chassis 1-5 wiring backplane 5-72 color codes C-1 second scheme C-3 interference 2-4 plant 2-4 telephone 2-3 telepnone industry 25-pair color code C-1 write protection, Flash 5-13

Χ

X.21 cable pinouts A-9 description 2-42 port adapter 1-30 serial port adapter cable 2-39 standard 2-42 transmission distances 2-9