

A

alarm maintenance and management card

See AMM

alarm server

connecting 12-1

monitoring 12-2

shutting down 2-2, 12-2

alarms

displaying 12-2

provisioning 3-22

AMM

connecting to EMS workstation 3-10

assigning IP address to NE 3-17

ATM

provisioning 9-1

ATM cross connections

provisioning 9-4

AUTOEXEC.BAT

editing for EMS Lite 2-13

B

backplane

version 13-1

Backup Cisco 6700 Database Before Ethernet Port

Shutdown 13-3

C

call reference value

see CRV

card

adding in EMS 5-4

definition 1-1

placing in service 5-5

batch 5-5

individual 5-5

resetting 10-11

Cisco 6700 NE

definition 1-1

Clear button 1-9

CLEI

displaying 13-2

clock

provisioning 3-22

common card

definition 1-1

configuring TCP/IP on workstation 3-2

configuring the NE 3-20

creating a node 3-11

cross connections

ATM

provisioning 9-4

TDM

provisioning 8-1

remote 8-5

CRV

allocating for an interface group 7-1

provisioning

batch 7-5

individual 7-4

remote 7-8

D

database

backing up 10-1

erasing 10-10

restoring 10-9

scheduling 11-8

datalink route configuration window 6-11

Dismiss button 1-9

documentation

conventions viii

organization viii

related publications ix

DSX1/8 card

DS0 signalling 5-15

provisioning lines

batch 5-15

individual 5-14

DSX3-CHNL

protection 5-6

E

embedded software upgrade

for Cisco 6705 10-7

for Cisco 6732 10-2

EMS

exit 2-3

information 13-1

installing 2-2

navigating 1-7

starting

on UNIX workstation 3-11

on Windows 95/98 workstation 3-11

on Windows NT workstation 3-10

UNIX environment variables 2-15

user administration 11-2

version 13-1

workstation requirements 2-1

EMS workstation

- connecting to NE 3-10
- end node list
 - adding to 4-7
 - creating 4-5
 - definition 4-5
 - deleting 4-8
 - displaying 4-6
 - moving 4-6
 - opening node view 4-7
- environment variables
 - UNIX 2-15
- Ethernet port
 - shutting down 13-3
- Ethernet Shutdown for System Protection 13-3
- Event Message Display 12-3
- exit EMS 2-3

F

- FPGA
 - displaying 13-2
- function bar
 - definition 1-5
- FXS/16 card
 - provisioning lines
 - batch 5-11
 - individual 5-10

G

- GR-303
 - provisioning 7-1

H

- highlight
 - definition 1-8
- History Message Display 12-3

I

- icon
 - selecting 1-8
- inactivity timer 11-3
- INDL
 - definition
- installing EMS 2-2
- inter node data link
 - see INDL

- inter node link display 6-4
- inter node provision window
 - definition 1-1
 - example 1-3
- IP
 - assigning address to NE 3-17
 - assigning to a node 3-19
 - configuring on EMS workstation 3-2
 - factory defaults 3-18
- IP address configuration window 3-18

L

- launching the node view 3-13
- line
 - definition 1-1
 - placing in service 5-8
- line card
 - definition 1-1
 - resetting 10-11
- line provision window
 - definition 1-2
 - example 1-7
- local node
 - definition 6-1

M

- main common control card
 - See MCC
- MCC
 - connecting to EMS workstation 3-10
 - resetting 10-11
- mouse
 - using in EMS 1-7
- MSDSL-2W card
 - INDL framing types 6-1
 - provisioning ATM 9-1

N

- NE
 - definition 1-1
 - information 13-1
- NE provision window
 - definition 1-2
 - example 1-5
 - launching 3-16
- NE provisioning window
 - launching 3-20
- net view

- definition 1-1
- example 1-2
- node
 - creating 3-11, 4-1
 - definition 1-1
 - deleting 4-4
 - modifying 4-3
 - moving 4-3
 - provision log 11-4
 - searching for 11-4
- node critical commands 10-9
 - changing password 10-12
- node ID conflict 3-15
- node information window 3-12
- node IP address 3-19
- Node Log Feature 11-4
- node nameplate
 - definition 1-4
- node view
 - definition 1-2
 - example 1-3
 - Cisco 6705 3-15
 - Cisco 6732 3-14
 - launching 3-13, 5-1
 - troubleshooting 3-16
- non-data link
 - definition 6-1

O

- OC3-AUPSR card
 - provisioning ATM 9-1

P

- pinging a node 11-1
- plugin card provision window
 - definition 1-2
 - example 1-6
- plugin slot provision window
 - definition 1-2
 - example 1-5
- port
 - definition 1-1
- primary DS1 7-2

R

- Refresh button 1-9
- remote node
 - definition 6-1

- RPOTS/16 card
 - provisioning lines
 - batch 5-11
 - individual 5-10
- RUVG/8 card
 - provisioning lines
 - batch 5-11
 - individual 5-10

S

- secondary DS1 7-2
- serial number
 - displaying 13-1
- setting NE clock 3-22
- shut down EMS 2-3
- shutting down the Ethernet port 13-3
- slot
 - definition 1-1
 - provisioning 5-4
 - security 11-6
- software
 - scheduling upgrade 11-8
- software upgrade
 - for Cisco 6705 10-7
 - for Cisco 6732 10-2
- STSX1-CHNL
 - protection 5-6
- subnet
 - assigning maps
 - maps 4-11
 - creating 4-9
 - definition 4-9
 - opening 4-10
 - returning to root 4-11
- system database
 - backing up 10-1
 - erasing 10-10
 - restoring 10-9
 - scheduling 11-8
- system information 13-1

T

- T1-2-V35 card
 - provisioning ATM 9-1
 - provisioning lines
 - batch 5-19
 - individual 5-18
 - provisioning the V.35 port 5-19
- TCP/IP
 - configuring on EMS workstation 3-2

TDM cross connections 8-1
 remote 8-5
time of day
 provisioning 3-22
timing source
 provisioning 3-23
TR-008
 provisioning 7-8

U

user administration 11-2
using the mouse 1-7

V

virtual channels
 assigning 9-2
virtual paths
 assigning 9-2

W

Windows NT
 installing EMS 2-2
workstation
 connecting to NE 3-10
workstation requirements 2-1