



A

accelerator cards

See XL cards

access control list

See ACL

accessories

four-post racks

installing appliances in racks [3-21](#)

installing cable-management arms [3-23](#)

installing slide assemblies [3-18](#)

rack-kit contents [3-18](#)

routing cables [3-27](#)

tools [3-17](#)

IDS-4210

package contents [3-4](#)

IDS-4235

package contents [3-5](#)

IDS-4250

package contents [3-5](#)

two-post racks

center-mount installations [3-32](#)

flush-mount installations [3-34](#)

marking racks [3-31](#)

rack kit contents [3-30](#)

tools [3-30](#)

ACL

changes [1-3](#)

firewalls [1-8](#)

adding

allowed hosts [4-18](#)

hosts to the SSH known hosts list [4-20](#)

users [4-17](#)

Administrator

privileges [4-5](#)

B

backing up configuration files [4-24](#)

BIOS

IDS-4235

upgrading [1-10](#)

IDS-4250

upgrading [1-10](#)

C

Catalyst Software

supervisor engine commands

supported [4-42](#)

- unsupported [4-43](#)
- CLI
 - usage guidelines [4-3](#)
- CLI tasks
 - adding
 - allowed hosts [4-18](#)
 - hosts to the SSH known hosts list [4-20](#)
 - appliance
 - starting [4-26](#)
 - stopping [4-26](#)
 - configuration files
 - backing up [4-24](#)
 - restoring [4-24](#)
 - configuring
 - alarm channel system variables [4-29](#)
 - event filters [4-30](#)
 - sensors to log IP traffic [4-35](#)
 - virtual sensor system variables [4-32](#)
 - displaying
 - events [4-25](#)
 - tech support information [4-27](#)
 - version [4-21](#)
 - IDS modules
 - configuring SPAN [4-41](#)
 - configuring VACLs [4-39](#)
 - enabling full memory tests [4-38](#)
 - using the mls command [4-40](#)
 - verifying installation [4-36](#)
 - logging in [4-15](#)
 - manually setting the sensor clock [4-14](#)
 - passwords
 - changing [4-16](#)
 - signature engines
 - tuning [4-33](#)
 - viewing [4-31](#)
 - users
 - adding [4-17](#)
 - removing [4-19](#)
 - command line interface
 - See CLI
 - configuration files
 - backing up [4-24](#)
 - restoring [4-24](#)
 - configuring
 - alarm channel system variables [4-29](#)
 - event filters [4-30](#)
 - sensors to log IP traffic [4-35](#)
 - creating
 - service account [4-13](#)
 - Ctrl-n [4-4](#)
 - Ctrl-p [4-4](#)

D

- default
 - as a keyword [4-5](#)
 - password [4-16](#)
 - username [4-16](#)

displaying
 events [4-25](#)
 tech support information [4-27](#)
 version [4-21](#)

E

enabling full memory tests [4-38](#)
 event filters
 configuring [4-30](#)

F

firewalls
 appliances
 behind (figure) [1-6](#)
 in front of (figure) [1-5](#)
 network placement [1-5](#)
 with routers [1-7](#)

H

hardware
 four-post racks [3-17](#)
 keyboards [1-9](#)
 monitors [1-9](#)
 power supply [3-12](#)
 SCSI hard-disk drives [3-15](#)
 spare hard-disk drives [1-9](#)

two-post racks [3-29](#)
 XL card [3-1](#)
 help
 displaying for a command [4-4](#)
 hosts
 adding allowed [4-18](#)

I

IDS-4210
 accessories
 package contents [3-4](#)
 bezel
 described [3-6](#)
 installing [3-6](#)
 removing [3-6](#)
 center mount brackets
 installing [3-7](#)
 tools [3-6](#)
 front mount brackets
 installing [3-8](#)
 tools [3-8](#)
 NIC
 lighted during power off [1-20](#)
 IDS-4220-E
 upgrading
 described [1-11](#)
 to version 4.0 [1-12](#)

- IDS-4230-FE
 - upgrading
 - described 1-11
 - to version 4.0 1-12
- IDS-4235
 - accessories
 - described 3-10
 - package contents 3-5
 - bezel
 - described 3-11
 - installing 3-11
 - removing 3-11
 - installing
 - power supply 3-12
 - SCSI hard-disk drives 3-16
 - upgrading
 - BIOS 1-10
- IDS-4250
 - accessories
 - described 3-10
 - package contents 3-5
 - bezel
 - described 3-11
 - installing 3-11
 - removing 3-11
 - installing
 - 1000BaseSX 3-14
 - power supply 3-12
 - SCSI hard-disk drives 3-16
 - two hard-disk drives 3-15
 - XL cards 3-2
 - SCSI hard-disk drives
 - installing 3-16
 - removing 3-16
 - upgrading
 - BIOS 1-10
- IDS appliances
 - ACL
 - changes 1-3
 - firewalls 1-8
 - described 1-1
 - firewalls
 - ACL 1-8
 - behind appliances (figure) 1-6
 - in front of appliances (figure) 1-5
 - placement 1-5
 - with routers 1-7
 - four-post racks
 - installing appliances in racks 3-21
 - installing cable-management arms 3-23
 - installing slide assemblies 3-18
 - rack kit contents 3-18
 - routing cables 3-27
 - tools 3-17
 - hardware
 - compatibility 1-9
 - dual serial communication cables 1-20
 - keyboards 1-9

- monitors [1-9](#)
- spare hard-disk drives [1-9](#)
- terminal settings [1-20](#)
- XL card [3-1](#)
- installing
 - procedure [1-19](#)
 - XL cards [3-1, 3-2](#)
- interfaces [1-2](#)
- models [1-1](#)
- network
 - placement of appliances [1-4](#)
 - topologies [1-3](#)
- removing the cover [3-2](#)
- restrictions [1-10](#)
- routers [1-7](#)
- SPAN [1-2](#)
- syslog
 - messages [1-2](#)
 - traffic [1-8](#)
- TCP reset [1-3](#)
- Telnet traffic [1-8](#)
- two-post racks
 - center-mount installations [3-32](#)
 - flush-mount installations [3-34](#)
 - marking racks [3-31](#)
 - rack kit contents [3-30](#)
 - tools [3-30](#)
- upgrading
 - IDS-4220-E [1-20](#)
 - IDS-4230-FE [1-20](#)
 - to version 4.0 [1-12](#)
- XL cards
 - fiber ports [3-4](#)
- IDS Event Viewer
 - privileges requires for viewing [4-6](#)
- IDS modules
 - described [2-1](#)
 - enabling full memory tests [4-38](#)
 - front panel [2-3](#)
 - hot swapping [2-5, 2-10](#)
 - installing
 - procedure [2-8](#)
 - required tools [2-5](#)
 - verifying [4-36](#)
 - models [2-1](#)
 - PFC [2-6](#)
 - removing [2-11](#)
 - requirements [2-3](#)
 - shutdown
 - button [2-4](#)
 - command [2-4](#)
 - described [2-11](#)
 - slot assignments [2-6, 2-8](#)
- SPAN
 - configuring [4-41](#)
 - described [2-1](#)
 - specifications [2-3](#)
 - status LED [2-4](#)

supported supervisor engine commands [4-42](#)
 unsupported supervisor engine
 commands [4-43](#)
 using the mls command [4-40](#)
 VACLs
 configuring [4-39](#)
 described [2-1](#)
 initializing
 sensors [4-7](#)
 installing
 1000BaseSX [3-14](#)
 IDS appliances [1-19](#)
 power supply [3-12](#)
 SCSI hard-disk drives [3-16](#)
 XL cards [3-1, 3-2](#)

K

keyboards
 compatibility [1-9](#)
 keywords
 default [4-5](#)
 no [4-5](#)
 using [4-5](#)

L

license files
 Apache license [A-1](#)

BSD license [A-3](#)
 expat license [A-4](#)
 GNU Lesser license [A-13](#)
 GNU license [A-4](#)
 JDOM license [A-11](#)
 STLport license [A-23](#)
 logging in [4-15](#)

M

modes
 Alarm Channel Configuration [4-3](#)
 Configuration [4-2](#)
 Interface Command-Control
 Configuration [4-2](#)
 Interface Group Configuration [4-2](#)
 Interface Sensing Configuration [4-2](#)
 Privileged Exec [4-2](#)
 Service [4-2](#)
 Tune Alarm Channel [4-3](#)
 Tune Micro Engines [4-3](#)
 Virtual Sensor Configuration [4-3](#)
 monitors
 compatibility [1-9](#)

N

Network Interface Card
 See NIC

network placement

IDS appliances [1-4](#)

network topologies

IDS appliances [1-3](#)

NIC

lighted during power off [1-20](#)

O

Operator

privileges [4-6](#)

output

clearing current line [4-5](#)

displaying [4-5](#)

P

passwords

changing [4-16](#)

service account [4-8](#)

PFC

described [2-6](#)

Policy Feature Card

See PFC

prompts

default input [4-3](#)

R

recall

help and tab completion [4-4](#)

using [4-4](#)

removing

SCSI hard-disk drives [3-16](#)

users [4-19](#)

restoring configuration files [4-24](#)

routers

with firewalls [1-7](#)

S

sensors

initializing [4-7](#)

service account

creating [4-13](#)

setting the clock [4-14](#)

signature engines

tuning [4-33](#)

viewing [4-31](#)

slot assignments

IDS modules [2-6](#)

supervisor engines [2-6](#)

SPAN

IDS appliances [1-2](#)

SSH known hosts list

adding hosts [4-20](#)

starting the appliance [4-26](#)
stopping the appliance [4-26](#)
supervisor engine commands
 supported [4-42](#)
 unsupported [4-43](#)
Switched Port Analyzer
 See SPAN
syntax
 case sensitivity [4-5](#)
 using tab completion [4-4](#)

T

tab completion
 using [4-4](#)
TCP reset [1-3](#)
troubleshooting
 displaying system information [4-27](#)
tuning signature engines [4-33](#)

U

unsupported supervisor engine commands [4-43](#)
upgrading
 IDS-4220-E [1-11](#)
 IDS-4230-FE [1-11](#)
 to version 4.0 [1-12](#)
usage guidelines
 CLI [4-3](#)

user roles
 Administrator [4-5](#)
 Operator [4-5](#)
 Viewer [4-5](#)
using the mls command [4-40](#)

V

VACLs
 described [2-1](#)
 IDS modules [4-39](#)
verifying IDS module installation [4-36](#)
Viewer
 assigning role for IDS Event Viewer [4-6](#)
 privileges [4-6](#)
viewing signature engines [4-31](#)
virtualAlarm [4-3](#)
virtualSensor [4-3](#)
virtual sensor system variables [4-32](#)
VLAN access control lists
 See VACLs

X

XL cards
 described [3-1](#)
 fiber ports [3-4](#)
 installing [3-2](#)