



---

## Numerics

### 10/100/1000 ports

connecting to [3-20 to 3-22](#)

described [1-3](#)

### 10/100BASE-T [1-8](#)

### 10/100 ports

connecting to [3-20 to 3-22](#)

described [1-3](#)

### 1000BASE-LX/LH GBICs [4-3](#)

### 1000BASE-LX SFP modules [4-12](#)

### 1000BASE-SX GBICs [4-3](#)

### 1000BASE-SX SFP modules [4-12](#)

### 1000BASE-T [1-4, 1-6, 1-7](#)

### 1000BASE-T SFP modules [4-12](#)

### 1000BASE-TX GBICs [4-3](#)

### 1000BASE-X [1-2](#)

### 1000BASE-X (CWDM) GBICs [4-3](#)

### 1000BASE-X (CWDM) SFP modules [4-12](#)

### 1000BASE-ZX GBICs [4-3](#)

### 1000BASE-ZX SFP modules [4-12](#)

### 100BASE-T [1-4](#)

### 10BASE-T [1-4, 1-8](#)

### 10BASE-TX RJ-45 connector [3-23](#)

### 19- and 24-inch racks [3-7](#)

### 802.1D Spanning Tree [1-5](#)

### 802.3z, IEEE [C-1](#)

### 802.3z 1000BASE-LX, IEEE standard [4-3, 4-11](#)

---

## A

### airflow [1-9 to 1-11](#)

### attaching the cable guide [3-15](#)

### autonegotiation [1-4](#)

---

## B

### BER [4-10](#)

### bit error rate

See BER

### blower

see airflow

### boot process

observing LEDs [3-23](#)

### brackets

See mounting brackets

## C

## cable guide

- attaching [3-15](#)

## cabling

- GBIC [4-4, 4-5](#)
- mode-conditioning [4-10](#)

## Catalyst 2948G-GE-TX switch

- 10/100/1000 ports [1-3](#)
- heat dissipation [2-2](#)
- illustration [1-2](#)
- management ports [1-8, 3-22](#)

## Catalyst 2948G switch

- 10/100 ports [1-2](#)
- heat dissipation [2-2](#)
- illustration [1-2](#)
- management ports [1-8, 3-22](#)

## Catalyst 2980G-A switch

- heat dissipation [2-3](#)
- management ports [1-8, 3-22](#)
- referred to with Catalyst 2980G switch [1-1](#)

## Catalyst 2980G switch

- 10/100 ports [1-2](#)
- heat dissipation [2-3](#)
- illustration [1-2](#)

CDP [1-5](#)CGMP [1-5](#)

## checking

- shipping container contents (Catalyst 2948G and 2980G switches) [3-4](#)

- shipping container contents (Catalyst 2948G-GE-TX) [3-5](#)

## checklist

- rack-mount [3-7](#)
- site planning [2-7](#)

## Cisco Discovery Protocol

- See CDP

## Cisco Group Management Protocol

- See CGMP

CLI [1-5](#)

## command-line interface

- See CLI

## commands

- show port [4-9](#)

configuration, patch cord (figure) [4-11](#)

## connecting

- to 10/100/1000 ports [3-20 to 3-22](#)
- to 10/100 ports [3-20 to 3-22](#)
- to console serial port [3-22](#)
- to Ethernet management port [3-22](#)
- to SFP modules [4-12 to 4-16](#)

connections, earth ground [2-3](#)

## connectors

- 10BASE-TX RJ-45 [3-23](#)
- SC-type [4-8](#)

## console serial port

- connecting [3-22](#)
- description [1-8](#)

conventions, document [xvii](#)

cooling

See airflow

crossover cable

connecting to

10/100/1000 ports [3-21](#)

10/100 ports [3-21](#)

customer service, contacting [5-5](#)

CWDM GBICs

see 1000BASE-X (CWDM) GBICs

CWDM SFP modules

see 1000BASE-X (CWDM) SFP modules

---

## D

differential mode delay [C-1](#)

dimensions, chassis

Catalyst 2948G [A-3](#)

Catalyst 2948G-GE-TX [A-7](#)

Catalyst 2980G [A-7](#)

documentation, obtaining [xxiii](#)

document conventions [xvii](#)

---

## E

EMC regulatory statements [3-2 to 3-4](#)

Ethernet interfaces [1-4](#)

Ethernet management port

connecting [3-22](#)

Ethernet speeds

1000BASE-X [1-2](#)

100BASE-T [1-4](#)

10BASE-T [1-4](#)

---

## F

fan assembly [1-9](#)

see airflow

features, switch [1-4 to 1-6](#)

frequency, specifications [A-3, A-5, A-7](#)

---

## G

GBICs

cabling [4-4](#)

cabling restrictions [4-5](#)

care and handling [4-6, 4-8, 4-9, 4-10](#)

description [1-3](#)

Ethernet interfaces [1-2](#)

features [4-2](#)

installing [4-6](#)

maintenance guidelines [4-6, 4-8, 4-9 to 4-10](#)

optical power [4-5](#)

patch cord [4-10](#)

port configuration [4-1](#)

removing [4-9](#)

speeds [1-2](#)

Gigabit Interface Converter

See GBICs

## grounding

- holes [2-4](#)
- procedure [2-5 to 2-7](#)
- tools [2-4](#)

---

H

## heat dissipation

- Catalyst 2948G-GE-TX switches [2-2, A-3, A-5](#)
- Catalyst 2948G switches [2-2, A-3, A-5](#)
- Catalyst 2980G switches [2-2, A-7](#)

---

IIEEE 802.1D Spanning Tree [1-5](#)IEEE 802.3z [C-1](#)IEEE 802.3z 1000BASE-LX standard [4-3](#)

## installations

- connecting a terminal to the console serial and Ethernet management ports [3-22](#)

## rack-mounting

- Catalyst 2948G and 2980G switches [3-7 to 3-9](#)

- Catalyst 2948G-GE-TX switches [3-10 to 3-15](#)

- tools required [3-6](#)

## table- or shelf-mounting

- Catalyst 2948G-GE-TX switch [3-19](#)

troubleshooting [5-1](#)wall-mounting [3-16](#)

- Catalyst 2948G-GE-TX switch [3-16 to 3-18](#)

invisible radiation warning [D-10 to D-11](#)

---

Llaser radiation warning [D-11 to D-13](#)laser transmission [C-1](#)Layer 2 forwarding [1-4](#)

## LEDs

- Link Status [1-8, A-2](#)
- power supply [3-19, 5-3](#)
- PSI [1-9](#)
- PWR [1-9](#)
- RPS [1-9](#)
- STATUS [1-9](#)

Link Status LED [1-8, A-2](#)

---

MMAC addresses [1-4](#)management, software [1-5](#)management ports [1-8](#)

- 10/100BASE-T [1-8](#)

- 10BASE-T [1-8](#)

- console serial [1-8](#)

## MDIX connectors

- See media-dependent interface crossed-over connectors

## Media Access Control addresses

See MAC addresses

media-dependent interface crossed-over connectors [3-22](#)

memory [A-3, A-7](#)

microprocessor [A-3, A-7](#)

MMF [4-4](#)

mounting, table- or shelf- [3-19](#)

mounting, wall-mounting [3-16](#)

mounting brackets

Catalyst 2948G and 2980A switches [3-7 to 3-8](#)

Catalyst 2948G-GE-TX switch [3-10 to 3-14](#)

multimode fiber-optic

See MMF

---

## O

obtaining technical assistance [xxiv](#)

overfilled launch condition [C-2](#)

---

## P

packaging materials [B-1](#)

packing list [3-5](#)

PAGp

for port aggregation [1-5](#)

patch cord

configuration (figure) [4-11](#)

description [4-10](#)

installing [4-11](#)

mode-conditioning [4-4, 4-6](#)

Port Aggregation Protocol

See PAGp

port cabling specifications [4-4](#)

ports

locations [1-6](#)

management [1-8](#)

power

requirements [2-2](#)

site planning [2-2](#)

specifications

Catalyst 2948G-GE-TX switch [A-3, A-5](#)

Catalyst 2948G switch [A-3, A-5](#)

Catalyst 2980G switch [A-7](#)

troubleshooting [5-2](#)

power supplies

connecting system ground [2-3](#)

description [1-11](#)

internal [1-11](#)

LEDs [5-3](#)

RPS [1-11](#)

RPS 300 [1-12](#)

RPS 600 [1-12](#)

RPS 675 [1-12](#)

supported [1-6](#)

troubleshooting [5-2, 5-3, 5-4](#)

## procedures

- connecting system ground [2-3](#)
- connecting to an SFP module [4-12 to 4-16](#)
- connecting to the console serial port [3-22](#)
- connecting to the Ethernet management port [3-22](#)
- installing a GBIC [4-6](#)
- installing a patch cord [4-11](#)
- removing a GBIC [4-9](#)
- repacking a switch [B-1](#)

## protocols

- 802.1D Spanning Tree [1-5](#)
  - CDP [1-5](#)
  - CGMP [1-5](#)
  - PAgP [1-5](#)
  - SNMP [1-6](#)
  - TFTP [1-5](#)
  - VTP (Virtual Terminal Protocol) [1-5](#)
- PSI LED [1-9](#)
- PWR LED [1-9](#)

---

**Q**

- qualified personnel warning [D-9 to D-10](#)

---

**R**

## rack-mounting

- Catalyst 2948G and 2980G switches [3-7 to 3-9](#)
- Catalyst 2948G-GE-TX switch [3-10 to 3-15](#)

rack-mounting kit [3-7](#)rack-mounting warning [D-20 to D-24](#)

## Redundant Power System

- See RPS

regulatory statements, EMC [3-2 to 3-4](#)

## Remote Monitoring

- See RMON

repacking instructions [B-1](#)returns [B-1](#)RMON [1-5, 1-6](#)RPS [1-11, 5-4](#)

- See power supplies

RPS 300 [1-12](#)RPS 300 warning [D-13 to D-14](#)RPS 600 [1-12](#)RPS 600 warning [D-14 to D-15](#)RPS 675 [1-12](#)RPS 675 warning [D-15 to D-16](#)RPS LED [1-9](#)

---

**S**

- safety information warning [D-7 to D-8](#)

## SFP modules

- connecting to [4-12 to 4-16](#)

- shelf-mounting [3-19](#)

## shipping

- container contents (Catalyst 2948G and 2980G switches) [3-4](#)

- container contents (Catalyst 2948G-GE-TX switches) [3-5](#)

- instructions [B-1](#)

- show port command [4-9](#)

## Simple Network Management Protocol

- See SNMP

## site planning

- checklist [2-7](#)

- heat dissipation [2-2](#)

## small form-factor pluggable modules

- see SFP modules [4-12](#)

SNMP [1-5](#)

- software management [1-5](#)

## specifications

- Catalyst 2948G switch [A-2, A-5](#)

- Catalyst 2980G switch [A-6](#)

- GBIC optical power [4-5](#)

- startup problems [5-3](#)

STATUS LED [1-9](#)

## straight-through cable

- connecting to

- 10/100/1000 ports [3-21](#)

- 10/100 ports [3-21](#)

- switch installation warning [D-18 to D-19](#)

- switch verification [3-23](#)

- system component level problems [5-2](#)

---

**T**

- table-mounting [3-19](#)

- technical assistance, obtaining [xxiv](#)

- telco racks [3-7](#)

## terminals

- connecting to the console serial port [3-22](#)

- connecting to the Ethernet management port [3-22](#)

- tools, installation [3-6](#)

## troubleshooting

- contacting customer service [5-5](#)

- getting started [5-2](#)

- identifying startup problems [5-3](#)

- initial boot [5-2](#)

- methodology [5-2](#)

- power supplies [5-2, 5-3, 5-4](#)

---

**V**

- verifying switch operation [3-23](#)

## virtual LANs

- See VLANs

## Virtual Terminal Protocol

- See VTP (Virtual Terminal Protocol)

- VLANs [1-5](#)

## VLAN Trunk Protocol

See VTP (VLAN Trunk Protocol)

VTP (Virtual Terminal Protocol) [1-5](#)

VTP (VLAN Trunk Protocol) [1-5](#)

---

## W

wall-mounting [3-16](#)

### warning

definition [D-2 to D-4](#)

invisible radiation [D-10 to D-11](#)

laser radiation [D-11 to D-13](#)

qualified personnel information [D-9 to D-10](#)

rack mounting [D-20 to D-24](#)

RPS 300 [D-13 to D-14](#)

RPS 600 [D-14 to D-15](#)

RPS 675 [D-15 to D-16](#)

safety information [D-7 to D-8](#)

switch installation [D-18 to D-19](#)

### weight, chassis

Catalyst 2948G [A-3](#)

Catalyst 2948G-GE-TX [A-5](#)

Catalyst 2980G [A-7](#)