



Catalyst 3560 Switch Command Reference

Cisco IOS Release 12.2(25)SED
October 2005

Corporate Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 526-4100

Customer Order Number: DOC-7816405=
Text Part Number: 78-16405-05



THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

CCSP, CCVP, the Cisco Square Bridge logo, Follow Me Browsing, and StackWise are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn, and iQuick Study are service marks of Cisco Systems, Inc.; and Access Registrar, Aironet, ASIST, BPX, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Empowering the Internet Generation, Enterprise/Solver, EtherChannel, EtherFast, EtherSwitch, Fast Step, FormShare, GigaDrive, GigaStack, HomeLink, Internet Quotient, IOS, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, LightStream, Linksys, MeetingPlace, MGX, the Networkers logo, Networking Academy, Network Registrar, *Packet*, PIX, Post-Routing, Pre-Routing, ProConnect, RateMUX, ScriptShare, SlideCast, SMARTnet, StrataView Plus, TeleRouter, The Fastest Way to Increase Your Internet Quotient, and TransPath are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0502R)

Catalyst 3560 Switch Command Reference

Copyright © 2004–2005 Cisco Systems, Inc. All rights reserved.



Preface	xix
Audience	xix
Purpose	xix
Conventions	xx
Related Publications	xx
Obtaining Documentation	xxi
Cisco.com	xxi
Product Documentation DVD	xxii
Ordering Documentation	xxii
Documentation Feedback	xxii
Cisco Product Security Overview	xxiii
Reporting Security Problems in Cisco Products	xxiii
Obtaining Technical Assistance	xxiv
Cisco Technical Support & Documentation Website	xxiv
Submitting a Service Request	xxiv
Definitions of Service Request Severity	xxv
Obtaining Additional Publications and Information	xxv

CHAPTER 1

Using the Command-Line Interface	1-1
CLI Command Modes	1-1
User EXEC Mode	1-3
Privileged EXEC Mode	1-3
Global Configuration Mode	1-3
Interface Configuration Mode	1-4
config-vlan Mode	1-4
VLAN Configuration Mode	1-5
Line Configuration Mode	1-5
Commands Changed in Cisco IOS 12.2(20)SE	1-6

CHAPTER 2

Catalyst 3560 Switch Cisco IOS Commands 2-1

aaa accounting dot1x 2-1

aaa authentication dot1x 2-3

action 2-5

archive download-sw 2-7

archive tar 2-10

archive upload-sw 2-13

arp access-list 2-15

auto qos voip 2-17

boot boothlpr 2-22

boot config-file 2-23

boot enable-break 2-24

boot helper 2-25

boot helper-config-file 2-26

boot manual 2-27

boot private-config-file 2-28

boot system 2-29

channel-group 2-30

channel-protocol 2-33

class 2-34

class-map 2-36

clear ip arp inspection log 2-38

clear ip arp inspection statistics 2-39

clear ip dhcp snooping database 2-40

clear ipc 2-41

clear l2protocol-tunnel counters 2-42

clear lacp 2-43

clear mac address-table 2-44

clear mac address-table move update 2-46

clear pagp 2-47

clear port-security 2-48

clear spanning-tree counters 2-50

clear spanning-tree detected-protocols 2-51

clear vmps statistics 2-52

clear vtp counters 2-53

cluster commander-address	2-54
cluster discovery hop-count	2-56
cluster enable	2-57
cluster holdtime	2-59
cluster member	2-60
cluster outside-interface	2-62
cluster run	2-63
cluster standby-group	2-64
cluster timer	2-66
define interface-range	2-67
delete	2-69
deny (ARP access-list configuration)	2-70
deny (IPv6 access-list configuration)	2-72
deny (MAC access-list configuration)	2-77
dot1x	2-80
dot1x auth-fail max-attempts	2-82
dot1x auth-fail vlan	2-84
dot1x control-direction	2-86
dot1x critical	2-88
dot1x default	2-90
dot1x guest-vlan	2-91
dot1x host-mode	2-93
dot1x initialize	2-95
dot1x max-reauth-req	2-96
dot1x max-req	2-97
dot1x multiple-hosts	2-98
dot1x port-control	2-99
dot1x re-authenticate	2-101
dot1x re-authentication	2-102
dot1x reauthentication	2-103
dot1x timeout	2-104
duplex	2-106
errdisable detect cause	2-108
errdisable recovery	2-110
exception crashinfo	2-113

[flowcontrol](#) **2-114**
[interface port-channel](#) **2-116**
[interface range](#) **2-118**
[interface vlan](#) **2-120**
[ip access-group](#) **2-122**
[ip address](#) **2-125**
[ip arp inspection filter vlan](#) **2-127**
[ip arp inspection limit](#) **2-129**
[ip arp inspection log-buffer](#) **2-131**
[ip arp inspection trust](#) **2-133**
[ip arp inspection validate](#) **2-135**
[ip arp inspection vlan](#) **2-137**
[ip arp inspection vlan logging](#) **2-138**
[ip dhcp snooping](#) **2-140**
[ip dhcp snooping binding](#) **2-141**
[ip dhcp snooping database](#) **2-143**
[ip dhcp snooping information option](#) **2-145**
[ip dhcp snooping information option allow-untrusted](#) **2-147**
[ip dhcp snooping limit rate](#) **2-149**
[ip dhcp snooping trust](#) **2-151**
[ip dhcp snooping verify](#) **2-152**
[ip dhcp snooping vlan](#) **2-153**
[ip igmp filter](#) **2-154**
[ip igmp max-groups](#) **2-155**
[ip igmp profile](#) **2-157**
[ip igmp snooping](#) **2-159**
[ip igmp snooping last-member-query-interval](#) **2-161**
[ip igmp snooping querier](#) **2-163**
[ip igmp snooping report-suppression](#) **2-165**
[ip igmp snooping tcn](#) **2-167**
[ip igmp snooping tcn flood](#) **2-169**
[ip igmp snooping vlan immediate-leave](#) **2-170**
[ip igmp snooping vlan mrouter](#) **2-171**
[ip igmp snooping vlan static](#) **2-173**
[ip source binding](#) **2-175**

ip ssh	2-177
ip verify source	2-179
ipv6 access-list	2-180
ipv6 mld snooping	2-183
ipv6 mld snooping last-listener-query-count	2-185
ipv6 mld snooping last-listener-query-interval	2-187
ipv6 mld snooping listener-message-suppression	2-189
ipv6 mld snooping robustness-variable	2-191
ipv6 mld snooping tcn	2-193
ipv6 mld snooping vlan	2-195
ipv6 traffic-filter	2-197
l2protocol-tunnel	2-199
l2protocol-tunnel cos	2-202
lacp port-priority	2-203
lacp system-priority	2-205
logging event power-inline-status	2-207
logging file	2-208
mac access-group	2-210
mac access-list extended	2-212
mac address-table aging-time	2-214
mac address-table move update	2-215
mac address-table notification	2-217
mac address-table static	2-219
mac address-table static drop	2-220
macro apply	2-222
macro description	2-225
macro global	2-226
macro global description	2-229
macro name	2-230
match (access-map configuration)	2-232
match (class-map configuration)	2-234
mdix auto	2-236
mls qos	2-238
mls qos aggregate-policer	2-240
mls qos cos	2-242

mls qos dscp-mutation	2-244
mls qos map	2-246
mls qos queue-set output buffers	2-250
mls qos queue-set output threshold	2-252
mls qos rewrite ip dscp	2-254
mls qos srr-queue input bandwidth	2-256
mls qos srr-queue input buffers	2-258
mls qos srr-queue input cos-map	2-260
mls qos srr-queue input dscp-map	2-262
mls qos srr-queue input priority-queue	2-264
mls qos srr-queue input threshold	2-266
mls qos srr-queue output cos-map	2-268
mls qos srr-queue output dscp-map	2-270
mls qos trust	2-272
mls qos vlan-based	2-274
monitor session	2-275
mvr (global configuration)	2-280
mvr (interface configuration)	2-283
pagp learn-method	2-286
pagp port-priority	2-288
permit (ARP access-list configuration)	2-290
permit (IPv6 access-list configuration)	2-292
permit (MAC access-list configuration)	2-298
police	2-301
police aggregate	2-303
policy-map	2-305
port-channel load-balance	2-308
power inline	2-310
power inline consumption	2-313
priority-queue	2-315
private-vlan	2-317
private-vlan mapping	2-320
queue-set	2-322
rcommand	2-323
remote-span	2-325

renew ip dhcp snooping database 2-327

rmon collection stats 2-329

sdm prefer 2-330

service password-recovery 2-333

service-policy 2-335

set 2-338

setup 2-340

setup express 2-343

show access-lists 2-345

show archive status 2-348

show arp access-list 2-349

show auto qos 2-350

show boot 2-354

show cable-diagnostics tdr 2-356

show class-map 2-359

show cluster 2-360

show cluster candidates 2-362

show cluster members 2-364

show controllers cpu-interface 2-366

show controllers ethernet-controller 2-368

show controllers power inline 2-375

show controllers tcam 2-377

show controllers utilization 2-379

show dot1q-tunnel 2-381

show dot1x 2-382

show dtp 2-386

show env 2-388

show errdisable detect 2-390

show errdisable flap-values 2-392

show errdisable recovery 2-394

show etherchannel 2-396

show flowcontrol 2-399

show interfaces 2-401

show interfaces counters 2-411

show inventory 2-413

show ip arp inspection 2-414

show ip dhcp snooping 2-417

show ip dhcp snooping binding 2-418

show ip dhcp snooping database 2-420

show ip igmp profile 2-422

show ip igmp snooping 2-423

show ip igmp snooping groups 2-426

show ip igmp snooping mrouter 2-428

show ip igmp snooping querier 2-430

show ip source binding 2-432

show ip verify source 2-434

show ipc 2-436

show ipv6 access-list 2-440

show ipv6 mld snooping 2-442

show ipv6 mld snooping address 2-444

show ipv6 mld snooping mrouter 2-446

show ipv6 mld snooping querier 2-448

show l2protocol-tunnel 2-450

show lacp 2-453

show mac access-group 2-457

show mac address-table 2-459

show mac address-table address 2-461

show mac address-table aging-time 2-463

show mac address-table count 2-465

show mac address-table dynamic 2-467

show mac address-table interface 2-469

show mac address-table move update 2-471

show mac address-table notification 2-473

show mac address-table static 2-475

show mac address-table vlan 2-477

show mls qos 2-479

show mls qos aggregate-policer 2-480

show mls qos input-queue 2-481

show mls qos interface 2-483

show mls qos maps 2-487

show mls qos queue-set	2-490
show mls qos vlan	2-492
show monitor	2-493
show mvr	2-496
show mvr interface	2-498
show mvr members	2-500
show pagp	2-502
show parser macro	2-504
show policy-map	2-507
show port-security	2-509
show power inline	2-512
show sdm prefer	2-514
show setup express	2-518
show spanning-tree	2-519
show storm-control	2-526
show system mtu	2-528
show udid	2-529
show version	2-532
show vlan	2-534
show vlan access-map	2-539
show vlan filter	2-540
show vmps	2-541
show vtp	2-544
shutdown	2-549
shutdown vlan	2-550
snmp-server enable traps	2-551
snmp-server host	2-555
snmp trap mac-notification	2-559
spanning-tree backbonefast	2-561
spanning-tree bpdupfilter	2-562
spanning-tree bpduguard	2-564
spanning-tree cost	2-566
spanning-tree etherchannel guard misconfig	2-568
spanning-tree extend system-id	2-570
spanning-tree guard	2-572

spanning-tree link-type	2-574
spanning-tree loopguard default	2-576
spanning-tree mode	2-578
spanning-tree mst configuration	2-580
spanning-tree mst cost	2-582
spanning-tree mst forward-time	2-584
spanning-tree mst hello-time	2-585
spanning-tree mst max-age	2-586
spanning-tree mst max-hops	2-587
spanning-tree mst port-priority	2-589
spanning-tree mst pre-standard	2-591
spanning-tree mst priority	2-592
spanning-tree mst root	2-593
spanning-tree port-priority	2-595
spanning-tree portfast (global configuration)	2-597
spanning-tree portfast (interface configuration)	2-599
spanning-tree transmit hold-count	2-601
spanning-tree uplinkfast	2-602
spanning-tree vlan	2-604
speed	2-607
srr-queue bandwidth limit	2-609
srr-queue bandwidth shape	2-611
srr-queue bandwidth share	2-613
storm-control	2-615
switchport	2-618
switchport access	2-620
switchport backup interface	2-622
switchport block	2-624
switchport host	2-625
switchport mode	2-626
switchport mode private-vlan	2-629
switchport nonegotiate	2-631
switchport port-security	2-633
switchport port-security aging	2-638
switchport priority extend	2-640

switchport private-vlan	2-642
switchport protected	2-644
switchport trunk	2-646
switchport voice vlan	2-649
system env temperature threshold yellow	2-651
system mtu	2-653
test cable-diagnostics tdr	2-655
traceroute mac	2-656
traceroute mac ip	2-659
trust	2-661
udld	2-663
udld port	2-665
udld reset	2-667
vlan (global configuration)	2-668
vlan (VLAN configuration)	2-674
vlan access-map	2-680
vlan database	2-682
vlan dot1q tag native	2-685
vlan filter	2-687
vmpls reconfirm (privileged EXEC)	2-689
vmpls reconfirm (global configuration)	2-690
vmpls retry	2-691
vmpls server	2-692
vtp (global configuration)	2-694
vtp (VLAN configuration)	2-698

APPENDIX A**Catalyst 3560 Switch Boot Loader Commands** A-1

boot	A-2
cat	A-4
copy	A-5
delete	A-6
dir	A-7
flash_init	A-9
format	A-10
fsck	A-11
help	A-12

load_helper A-13
 memory A-14
 mkdir A-15
 more A-16
 rename A-17
 reset A-18
 rmdir A-19
 set A-20
 type A-23
 unset A-24
 version A-26

APPENDIX B

Catalyst 3560 Switch Debug Commands B-1

debug auto qos B-2
 debug backup B-4
 debug cluster B-5
 debug dot1x B-7
 debug dtp B-9
 debug etherchannel B-10
 debug ilpower B-12
 debug ip dhcp snooping B-13
 debug ip verify source packet B-14
 debug interface B-15
 debug ip igmp filter B-17
 debug ip igmp max-groups B-18
 debug ip igmp snooping B-19
 debug lacp B-20
 debug mac-notification B-21
 debug matm B-22
 debug matm move update B-23
 debug monitor B-24
 debug mvrdbg B-26
 debug nvram B-27
 debug pagp B-28
 debug platform acl B-29
 debug platform backup interface B-30

debug platform cpu-queues	B-31
debug platform device-manager	B-33
debug platform dot1x	B-34
debug platform etherchannel	B-35
debug platform fallback-bridging	B-36
debug platform forw-tcam	B-37
debug platform frontend-controller	B-38
debug platform ip arp inspection	B-40
debug platform ip dhcp	B-41
debug platform ip igmp snooping	B-42
debug platform ip multicast	B-44
debug platform ip unicast	B-46
debug platform led	B-48
debug platform matm	B-49
debug platform messaging application	B-51
debug platform phy	B-52
debug platform pm	B-54
debug platform port-asic	B-56
debug platform port-security	B-57
debug platform qos-acl-tcam	B-58
debug platform remote-commands	B-59
debug platform resource-manager	B-60
debug platform snmp	B-61
debug platform span	B-62
debug platform supervisor-asic	B-63
debug platform sw-bridge	B-64
debug platform tcam	B-65
debug platform udd	B-68
debug platform vlan	B-69
debug pm	B-70
debug port-security	B-72
debug qos-manager	B-73
debug spanning-tree	B-74
debug spanning-tree backbonefast	B-76
debug spanning-tree bpdu	B-77

debug spanning-tree bpdu-opt **B-78**
 debug spanning-tree mstp **B-79**
 debug spanning-tree switch **B-81**
 debug spanning-tree uplinkfast **B-83**
 debug sw-vlan **B-84**
 debug sw-vlan ifs **B-86**
 debug sw-vlan notification **B-88**
 debug sw-vlan vtp **B-90**
 debug udld **B-92**
 debug vqpc **B-94**

APPENDIX C

Catalyst 3560 Switch Show Platform Commands C-1

show platform acl **C-2**
 show platform backup interface **C-3**
 show platform configuration **C-4**
 show platform etherchannel **C-5**
 show platform forward **C-6**
 show platform frontend-controller **C-8**
 show platform ip igmp snooping **C-9**
 show platform ip multicast **C-11**
 show platform ip unicast **C-12**
 show platform ip unicast vrf compaction **C-14**
 show platform ip unicast vrf tcam-label **C-15**
 show platform ipv6 unicast **C-16**
 show platform layer4op **C-18**
 show platform mac-address-table **C-19**
 show platform messaging **C-20**
 show platform monitor **C-21**
 show platform mvr table **C-22**
 show platform pm **C-23**
 show platform port-asic **C-24**
 show platform port-security **C-29**
 show platform qos **C-30**
 show platform resource-manager **C-31**
 show platform snmp counters **C-33**
 show platform spanning-tree **C-34**

show platform stp-instance	C-35
show platform tcam	C-36
show platform vlan	C-39

INDEX



Preface

Audience

This guide is for the networking professional using the Cisco IOS command-line interface (CLI) to manage the Catalyst 3560 switch, hereafter referred to as *the switch*. Before using this guide, you should have experience working with the Cisco IOS commands and the switch software features. Before using this guide, you should have experience working with the concepts and terminology of Ethernet and local area networking.

Purpose

The Catalyst 3560 switch is supported by either the IP base image, formerly known as the standard multilayer image (SMI), or the IP services image, formerly known as the enhanced multilayer image (EMI). The IP base image provides Layer 2+ features including access control lists (ACLs), quality of service (QoS), static routing, and the Routing Information Protocol (RIP). The IP services image provides a richer set of enterprise-class features. It includes Layer 2+ features and full Layer 3 routing (IP unicast routing, IP multicast routing, and fallback bridging). To distinguish it from the Layer 2+ static routing and RIP, the IP services image includes protocols such as the Enhanced Interior Gateway Routing Protocol (EIGRP) and Open Shortest Path First (OSPF) Protocol.

This guide provides the information that you need about the Layer 2 and Layer 3 commands that have been created or changed for use with the Catalyst 3560 switches. For information about the standard Cisco IOS Release 12.2 commands, see the Cisco IOS documentation set available from the Cisco.com home page by selecting **Technical Support & Documentation > Cisco IOS Software**.

This guide does not provide procedures for configuring your switch. For detailed configuration procedures, see the software configuration guide for this release.

This guide does not describe system messages you might encounter. For more information, see the system message guide for this release.

For documentation updates, see the release notes for this release.

Conventions

This publication uses these conventions to convey instructions and information:

Command descriptions use these conventions:

- Commands and keywords are in **boldface** text.
- Arguments for which you supply values are in *italic*.
- Square brackets ([]) means optional elements.
- Braces ({}) group required choices, and vertical bars (|) separate the alternative elements.
- Braces and vertical bars within square brackets ({{ | }}) mean a required choice within an optional element.

Interactive examples use these conventions:

- Terminal sessions and system displays are in `screen` font.
- Information you enter is in **boldface screen** font.
- Nonprinting characters, such as passwords or tabs, are in angle brackets (< >).

Notes, cautions, and warnings use these conventions and symbols:



Note

Means *reader take note*. Notes contain helpful suggestions or references to materials not contained in this manual.



Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Related Publications

These documents provide complete information about the switch and are available from this Cisco.com site:

<http://www.cisco.com/univercd/cc/td/doc/product/lan/cat3560/index.htm>



Note

Before installing, configuring, or upgrading the switch, see these documents:

- For initial configuration information, see the “Using Express Setup” chapter in the getting started guide or the “Configuring the Switch with the CLI-Based Setup Program” appendix in the hardware installation guide.
- For device manager requirements, see the “System Requirements” section in the release notes (not orderable but available on Cisco.com).
- For Network Assistant requirements, see the *Getting Started with Cisco Network Assistant* (not orderable but available on Cisco.com).

- For cluster requirements, see the *Release Notes for Cisco Network Assistant* (not orderable but available on Cisco.com).
- For upgrade information, see the “Downloading Software” section in the release notes.

You can order printed copies of documents with a DOC-xxxxxx= number from the Cisco.com sites and from the telephone numbers listed in the “Obtaining Documentation” section on page xxi.

- *Release Notes for the Catalyst 3750, 3560, 2970, and 2960 Switches* (not orderable but available on Cisco.com)
- *Catalyst 3560 Switch Software Configuration Guide* (order number DOC-7816404=)
- *Catalyst 3560 Switch Command Reference* (order number DOC-7816405=)
- *Catalyst 3560 Switch System Message Guide* (order number DOC-7816406=)
- Device manager online help (available on the switch)
- *Catalyst 3560 Switch Hardware Installation Guide* (not orderable but available on Cisco.com)
- *Catalyst 3560 Switch Getting Started Guide* (order number DOC-7816660=)
- *Regulatory Compliance and Safety Information for the Catalyst 3560 Switch* (order number DOC-7816665)
- *Getting Started with Cisco Network Assistant* (not orderable but available on Cisco.com)
- *Release Notes for Cisco Network Assistant* (not orderable but available on Cisco.com)
- *Cisco Small Form-Factor Pluggable Modules Installation Notes* (order number DOC-7815160=)
- *Cisco CWDM GBIC and CWDM SFP Modules Installation Note* (not orderable but available on Cisco.com)
- *Cisco RPS 300 Redundant Power System Hardware Installation Guide* (order number DOC-7810372=)
- *Cisco RPS 675 Redundant Power System Hardware Installation Guide* (order number DOC-7815201=)

Obtaining Documentation

Cisco documentation and additional literature are available on Cisco.com. Cisco also provides several ways to obtain technical assistance and other technical resources. These sections explain how to obtain technical information from Cisco Systems.

Cisco.com

You can access the most current Cisco documentation at this URL:

<http://www.cisco.com/techsupport>

You can access the Cisco website at this URL:

<http://www.cisco.com>

You can access international Cisco websites at this URL:

http://www.cisco.com/public/countries_languages.shtml

Product Documentation DVD

Cisco documentation and additional literature are available in the Product Documentation DVD package, which may have shipped with your product. The Product Documentation DVD is updated regularly and may be more current than printed documentation.

The Product Documentation DVD is a comprehensive library of technical product documentation on portable media. The DVD enables you to access multiple versions of hardware and software installation, configuration, and command guides for Cisco products and to view technical documentation in HTML. With the DVD, you have access to the same documentation that is found on the Cisco website without being connected to the Internet. Certain products also have .pdf versions of the documentation available.

The Product Documentation DVD is available as a single unit or as a subscription. Registered Cisco.com users (Cisco direct customers) can order a Product Documentation DVD (product number DOC-DOCDVD=) from Cisco Marketplace at this URL:

<http://www.cisco.com/go/marketplace/>

Ordering Documentation

Beginning June 30, 2005, registered Cisco.com users may order Cisco documentation at the Product Documentation Store in the Cisco Marketplace at this URL:

<http://www.cisco.com/go/marketplace/>

Nonregistered Cisco.com users can order technical documentation from 8:00 a.m. to 5:00 p.m. (0800 to 1700) PDT by calling 1 866 463-3487 in the United States and Canada, or elsewhere by calling 011 408 519-5055. You can also order documentation by e-mail at tech-doc-store-mkpl@external.cisco.com or by fax at 1 408 519-5001 in the United States and Canada, or elsewhere at 011 408 519-5001.

Documentation Feedback

You can rate and provide feedback about Cisco technical documents by completing the online feedback form that appears with the technical documents on Cisco.com.

You can send comments about Cisco documentation to bug-doc@cisco.com.

You can submit comments by using the response card (if present) behind the front cover of your document or by writing to the following address:

Cisco Systems
Attn: Customer Document Ordering
170 West Tasman Drive
San Jose, CA 95134-9883

We appreciate your comments.

Cisco Product Security Overview

Cisco provides a free online Security Vulnerability Policy portal at this URL:

http://www.cisco.com/en/US/products/products_security_vulnerability_policy.html

From this site, you can perform these tasks:

- Report security vulnerabilities in Cisco products.
- Obtain assistance with security incidents that involve Cisco products.
- Register to receive security information from Cisco.

A current list of security advisories and notices for Cisco products is available at this URL:

<http://www.cisco.com/go/psirt>

If you prefer to see advisories and notices as they are updated in real time, you can access a Product Security Incident Response Team Really Simple Syndication (PSIRT RSS) feed from this URL:

http://www.cisco.com/en/US/products/products_psirt_rss_feed.html

Reporting Security Problems in Cisco Products

Cisco is committed to delivering secure products. We test our products internally before we release them, and we strive to correct all vulnerabilities quickly. If you think that you might have identified a vulnerability in a Cisco product, contact PSIRT:

- Emergencies—security-alert@cisco.com

An emergency is either a condition in which a system is under active attack or a condition for which a severe and urgent security vulnerability should be reported. All other conditions are considered nonemergencies.

- Nonemergencies—psirt@cisco.com

In an emergency, you can also reach PSIRT by telephone:

- 1 877 228-7302
- 1 408 525-6532



Tip

We encourage you to use Pretty Good Privacy (PGP) or a compatible product to encrypt any sensitive information that you send to Cisco. PSIRT can work from encrypted information that is compatible with PGP versions 2.x through 8.x.

Never use a revoked or an expired encryption key. The correct public key to use in your correspondence with PSIRT is the one linked in the Contact Summary section of the Security Vulnerability Policy page at this URL:

http://www.cisco.com/en/US/products/products_security_vulnerability_policy.html

The link on this page has the current PGP key ID in use.

Obtaining Technical Assistance

Cisco Technical Support provides 24-hour-a-day award-winning technical assistance. The Cisco Technical Support & Documentation website on Cisco.com features extensive online support resources. In addition, if you have a valid Cisco service contract, Cisco Technical Assistance Center (TAC) engineers provide telephone support. If you do not have a valid Cisco service contract, contact your reseller.

Cisco Technical Support & Documentation Website

The Cisco Technical Support & Documentation website provides online documents and tools for troubleshooting and resolving technical issues with Cisco products and technologies. The website is available 24 hours a day, at this URL:

<http://www.cisco.com/techsupport>

Access to all tools on the Cisco Technical Support & Documentation website requires a Cisco.com user ID and password. If you have a valid service contract but do not have a user ID or password, you can register at this URL:

<http://tools.cisco.com/RPF/register/register.do>

**Note**

Use the Cisco Product Identification (CPI) tool to locate your product serial number before submitting a web or phone request for service. You can access the CPI tool from the Cisco Technical Support & Documentation website by clicking the **Tools & Resources** link under Documentation & Tools. Choose **Cisco Product Identification Tool** from the Alphabetical Index drop-down list, or click the **Cisco Product Identification Tool** link under Alerts & RMAs. The CPI tool offers three search options: by product ID or model name; by tree view; or for certain products, by copying and pasting **show** command output. Search results show an illustration of your product with the serial number label location highlighted. Locate the serial number label on your product and record the information before placing a service call.

Submitting a Service Request

Using the online TAC Service Request Tool is the fastest way to open S3 and S4 service requests. (S3 and S4 service requests are those in which your network is minimally impaired or for which you require product information.) After you describe your situation, the TAC Service Request Tool provides recommended solutions. If your issue is not resolved using the recommended resources, your service request is assigned to a Cisco engineer. The TAC Service Request Tool is located at this URL:

<http://www.cisco.com/techsupport/servicerequest>

For S1 or S2 service requests or if you do not have Internet access, contact the Cisco TAC by telephone. (S1 or S2 service requests are those in which your production network is down or severely degraded.) Cisco engineers are assigned immediately to S1 and S2 service requests to help keep your business operations running smoothly.

To open a service request by telephone, use one of the following numbers:

Asia-Pacific: +61 2 8446 7411 (Australia: 1 800 805 227)

EMEA: +32 2 704 55 55

USA: 1 800 553-2447

For a complete list of Cisco TAC contacts, go to this URL:

<http://www.cisco.com/techsupport/contacts>

Definitions of Service Request Severity

To ensure that all service requests are reported in a standard format, Cisco has established severity definitions.

Severity 1 (S1)—Your network is “down,” or there is a critical impact to your business operations. You and Cisco will commit all necessary resources around the clock to resolve the situation.

Severity 2 (S2)—Operation of an existing network is severely degraded, or significant aspects of your business operation are negatively affected by inadequate performance of Cisco products. You and Cisco will commit full-time resources during normal business hours to resolve the situation.

Severity 3 (S3)—Operational performance of your network is impaired, but most business operations remain functional. You and Cisco will commit resources during normal business hours to restore service to satisfactory levels.

Severity 4 (S4)—You require information or assistance with Cisco product capabilities, installation, or configuration. There is little or no effect on your business operations.

Obtaining Additional Publications and Information

Information about Cisco products, technologies, and network solutions is available from various online and printed sources.

- Cisco Marketplace provides a variety of Cisco books, reference guides, documentation, and logo merchandise. Visit Cisco Marketplace, the company store, at this URL:
<http://www.cisco.com/go/marketplace/>
- *Cisco Press* publishes a wide range of general networking, training and certification titles. Both new and experienced users will benefit from these publications. For current Cisco Press titles and other information, go to Cisco Press at this URL:
<http://www.ciscopress.com>
- *Packet* magazine is the Cisco Systems technical user magazine for maximizing Internet and networking investments. Each quarter, Packet delivers coverage of the latest industry trends, technology breakthroughs, and Cisco products and solutions, as well as network deployment and troubleshooting tips, configuration examples, customer case studies, certification and training information, and links to scores of in-depth online resources. You can access Packet magazine at this URL:
<http://www.cisco.com/packet>
- *iQ Magazine* is the quarterly publication from Cisco Systems designed to help growing companies learn how they can use technology to increase revenue, streamline their business, and expand services. The publication identifies the challenges facing these companies and the technologies to help solve them, using real-world case studies and business strategies to help readers make sound technology investment decisions. You can access iQ Magazine at this URL:

<http://www.cisco.com/go/iqmagazine>

or view the digital edition at this URL:

<http://ciscoiq.texterity.com/ciscoiq/sample/>

- *Internet Protocol Journal* is a quarterly journal published by Cisco Systems for engineering professionals involved in designing, developing, and operating public and private internets and intranets. You can access the Internet Protocol Journal at this URL:
<http://www.cisco.com/ipj>
- Networking products offered by Cisco Systems, as well as customer support services, can be obtained at this URL:
<http://www.cisco.com/en/US/products/index.html>
- Networking Professionals Connection is an interactive website for networking professionals to share questions, suggestions, and information about networking products and technologies with Cisco experts and other networking professionals. Join a discussion at this URL:
<http://www.cisco.com/discuss/networking>
- World-class networking training is available from Cisco. You can view current offerings at this URL:
<http://www.cisco.com/en/US/learning/index.html>



Using the Command-Line Interface

The Catalyst 3560 switch is supported by Cisco IOS software. This chapter describes how to use the switch command-line interface (CLI) to configure software features.

For a complete description of the commands that support these features, see [Chapter 2, “Catalyst 3560 Switch Cisco IOS Commands.”](#) For information on the boot loader commands, see [Appendix A, “Catalyst 3560 Switch Boot Loader Commands.”](#) For information on the **debug** commands, see [Appendix B, “Catalyst 3560 Switch Debug Commands.”](#) For information on the **show platform** commands, see [Appendix C, “Catalyst 3560 Switch Show Platform Commands.”](#) For more information on Cisco IOS Release 12.2, see the *Cisco IOS Release 12.2 Command Summary*.

For task-oriented configuration steps, see the software configuration guide for this release.

In this document, IP refers to IP version 4 (IPv4) unless there is a specific reference to IP version 6 (IPv6).

CLI Command Modes

This section describes the CLI command mode structure. Command modes support specific Cisco IOS commands. For example, the **interface** *interface-id* command only works when entered in global configuration mode.

These are the main command modes for the switch:

- User EXEC
- Privileged EXEC
- Global configuration
- Interface configuration
- Config-vlan
- VLAN configuration
- Line configuration

Table 1-1 lists the main command modes, how to access each mode, the prompt you see in that mode, and how to exit that mode. The prompts listed use the default name *Switch*.

Table 1-1 Command Modes Summary

Command Mode	Access Method	Prompt	Exit or Access Next Mode
User EXEC	This is the first level of access. (For the switch) Change terminal settings, perform basic tasks, and list system information.	Switch>	Enter the logout command. To enter privileged EXEC mode, enter the enable command.
Privileged EXEC	From user EXEC mode, enter the enable command.	Switch#	To exit to user EXEC mode, enter the disable command. To enter global configuration mode, enter the configure command.
Global configuration	From privileged EXEC mode, enter the configure command.	Switch(config)#	To exit to privileged EXEC mode, enter the exit or end command, or press Ctrl-Z . To enter interface configuration mode, enter the interface configuration command.
Interface configuration	From global configuration mode, specify an interface by entering the interface command followed by an interface identification.	Switch(config-if)#	To exit to privileged EXEC mode, enter the end command, or press Ctrl-Z . To exit to global configuration mode, enter the exit command.
Config-vlan	In global configuration mode, enter the vlan <i>vlan-id</i> command.	Switch(config-vlan)#	To exit to global configuration mode, enter the exit command. To return to privileged EXEC mode, enter the end command, or press Ctrl-Z .
VLAN configuration	From privileged EXEC mode, enter the vlan database command.	Switch(vlan)#	To exit to privileged EXEC mode, enter the exit command.
Line configuration	From global configuration mode, specify a line by entering the line command.	Switch(config-line)#	To exit to global configuration mode, enter the exit command. To return to privileged EXEC mode, enter the end command, or press Ctrl-Z .

User EXEC Mode

After you access the device, you are automatically in user EXEC command mode. The EXEC commands available at the user level are a subset of those available at the privileged level. In general, use the user EXEC commands to temporarily change terminal settings, perform basic tests, and list system information.

The supported commands can vary depending on the version of software in use. To display a comprehensive list of commands, enter a question mark (?) at the prompt.

```
Switch> ?
```

Privileged EXEC Mode

Because many of the privileged commands configure operating parameters, privileged access should be password-protected to prevent unauthorized use. The privileged command set includes those commands contained in user EXEC mode, as well as the **configure** privileged EXEC command through which you access the remaining command modes.

If your system administrator has set a password, you are prompted to enter it before being granted access to privileged EXEC mode. The password does not appear on the screen and is case sensitive.

The privileged EXEC mode prompt is the device name followed by the pound sign (#).

```
Switch#
```

Enter the **enable** command to access privileged EXEC mode:

```
Switch> enable  
Switch#
```

The supported commands can vary depending on the version of software in use. To display a comprehensive list of commands, enter a question mark (?) at the prompt.

```
Switch# ?
```

To return to user EXEC mode, enter the **disable** privileged EXEC command.

Global Configuration Mode

Global configuration commands apply to features that affect the device as a whole. Use the **configure** privileged EXEC command to enter global configuration mode. The default is to enter commands from the management console.

When you enter the **configure** command, a message prompts you for the source of the configuration commands:

```
Switch# configure  
Configuring from terminal, memory, or network [terminal]?
```

You can specify either the terminal or NVRAM as the source of configuration commands.

This example shows you how to access global configuration mode:

```
Switch# configure terminal  
Enter configuration commands, one per line. End with CNTL/Z.
```

The supported commands can vary depending on the version of software in use. To display a comprehensive list of commands, enter a question mark (?) at the prompt.

```
Switch(config)# ?
```

To exit global configuration command mode and to return to privileged EXEC mode, enter the **end** or **exit** command, or press **Ctrl-Z**.

Interface Configuration Mode

Interface configuration commands modify the operation of the interface. Interface configuration commands always follow a global configuration command, which defines the interface type.

Use the **interface** *interface-id* command to access interface configuration mode. The new prompt means interface configuration mode.

```
Switch(config-if)#
```

The supported commands can vary depending on the version of software in use. To display a comprehensive list of commands, enter a question mark (?) at the prompt.

```
Switch(config-if)# ?
```

To exit interface configuration mode and to return to global configuration mode, enter the **exit** command. To exit interface configuration mode and to return to privileged EXEC mode, enter the **end** command, or press **Ctrl-Z**.

config-vlan Mode

Use this mode to configure normal-range VLANs (VLAN IDs 1 to 1005) or, when VTP mode is transparent, to configure extended-range VLANs (VLAN IDs 1006 to 4094). When VTP mode is transparent, the VLAN and VTP configuration is saved in the running configuration file, and you can save it to the switch startup configuration file by using the **copy running-config startup-config** privileged EXEC command. The configurations of VLAN IDs 1 to 1005 are saved in the VLAN database if VTP is in transparent or server mode. The extended-range VLAN configurations are not saved in the VLAN database.

Enter the **vlan** *vlan-id* global configuration command to access config-vlan mode:

```
Switch(config)# vlan 2000
Switch(config-vlan)#
```

The supported keywords can vary but are similar to the commands available in VLAN configuration mode. To display a comprehensive list of commands, enter a question mark (?) at the prompt.

```
Switch(config-vlan)# ?
```

For extended-range VLANs, all characteristics except the MTU size must remain at the default setting.

To return to global configuration mode, enter **exit**; to return to privileged EXEC mode, enter **end**. All the commands except **shutdown** take effect when you exit config-vlan mode.

VLAN Configuration Mode

You can use the VLAN configuration commands to create or modify VLAN parameters for VLAN IDs 1 to 1005.

Enter the **vlan database** privileged EXEC command to access VLAN configuration mode:

```
Switch# vlan database  
Switch(vlan)#
```

The supported commands can vary depending on the version of software in use. To display a comprehensive list of commands, enter a question mark (?) at the prompt.

```
Switch(vlan)# ?
```

To return to privileged EXEC mode, enter the **abort** VLAN configuration command to abandon the proposed database. Otherwise, enter **exit** to implement the proposed new VLAN database and to return to privileged EXEC mode. When you enter exit or apply, the configuration is saved in the VLAN database; configuration from VLAN configuration mode cannot be saved in the switch configuration file.

Line Configuration Mode

Line configuration commands modify the operation of a terminal line. Line configuration commands always follow a line command, which defines a line number. Use these commands to change terminal parameter settings line-by-line or for a range of lines.

Use the **line vty** *line_number* [*ending_line_number*] command to enter line configuration mode. The new prompt means line configuration mode. The following example shows how to enter line configuration mode for virtual terminal line 7:

```
Switch(config)# line vty 0 7
```

The supported commands can vary depending on the version of software in use. To display a comprehensive list of commands, enter a question mark (?) at the prompt.

```
Switch(config-line)# ?
```

To exit line configuration mode and to return to global configuration mode, use the **exit** command. To exit line configuration mode and to return to privileged EXEC mode, enter the **end** command, or press **Ctrl-Z**.

Commands Changed in Cisco IOS 12.2(20)SE

Table 1-2 lists describes the commands that have the same function but different syntax than they did in software releases before Cisco IOS Release 12.2(20)SE.

Table 1-2 *Commands Changed*

Releases earlier than Cisco IOS Release 12.2(20)SE	Cisco IOS Release 12.2(20)SE or later	Description
show ip igmp snooping multicast	show ip igmp snooping groups	Displays the IGMP ¹ snooping multicast table for the switch or multicast information.
debug autoqos	debug auto qos	Enables debugging of the auto-QoS ² feature.

1. IGMP = Internet Group Management Protocol
2. auto-QoS = automatic quality of service



Catalyst 3560 Switch Cisco IOS Commands

aaa accounting dot1x

Use the **aaa accounting dot1x** global configuration command to enable authentication, authorization, and accounting (AAA) accounting and to create method lists defining specific accounting methods on a per-line or per-interface basis for IEEE 802.1x sessions. Use the **no** form of this command to disable IEEE 802.1x accounting.

```
aaa accounting dot1x {name | default} start-stop {broadcast group {name | radius | tacacs+}
[group {name | radius | tacacs+} ... ] | group {name | radius | tacacs+} [group {name | radius
| tacacs+} ... ]}
```

```
no aaa accounting dot1x {name | default}
```

Syntax Description

<i>name</i>	Name of a server group. This is optional when you enter it after the broadcast group and group keywords.
default	Use the accounting methods that follow as the default list for accounting services.
start-stop	Send a start accounting notice at the beginning of a process and a stop accounting notice at the end of a process. The start accounting record is sent in the background. The requested-user process begins regardless of whether or not the start accounting notice was received by the accounting server.
broadcast	Enable accounting records to be sent to multiple AAA servers and send accounting records to the first server in each group. If the first server is unavailable, the switch uses the list of backup servers to identify the first server.
group	Specify the server group to be used for accounting services. These are valid server group names: <ul style="list-style-type: none"> <i>name</i>—Name of a server group. radius—List of all RADIUS hosts. tacacs+—List of all TACACS+ hosts. The group keyword is optional when you enter it after the broadcast group and group keywords. You can enter more than optional group keyword.
radius	(Optional) Enable RADIUS authorization.
tacacs+	(Optional) Enable TACACS+ accounting.

Defaults AAA accounting is disabled.

Command Modes Global configuration

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines This command requires access to a RADIUS server. We recommend that you enter the **dot1x reauthentication** interface configuration command before configuring IEEE 802.1x RADIUS accounting on an interface.

Examples This example shows how to configure IEEE 802.1x accounting:

```
Switch(config)# aaa new-model
Switch(config)# aaa accounting dot1x default start-stop group radius
```



Note

The RADIUS authentication server must be properly configured to accept and log update or watchdog packets from the AAA client.

Related Commands	Command	Description
	aaa authentication dot1x	Specifies one or more AAA methods for use on interfaces running IEEE 802.1x.
	aaa new-model	Enables the AAA access control model. For syntax information, see the Cisco IOS Security Command Reference, Release 12.2 > Authentication, Authorization, and Accounting > Authentication Commands .
	dot1x reauthentication	Enables or disables periodic reauthentication.
	dot1x timeout reauth-period	Sets the number of seconds between re-authentication attempts.

aaa authentication dot1x

Use the **aaa authentication dot1x** global configuration command to specify the authentication, authorization, and accounting (AAA) method to use on ports complying with IEEE 802.1x. Use the **no** form of this command to disable authentication.

```
aaa authentication dot1x {default} method1
```

```
no aaa authentication dot1x {default}
```

Syntax Description

default	Use the listed authentication method that follows this argument as the default method when a user logs in.
<i>method1</i>	Enter the group radius keywords to use the list of all RADIUS servers for authentication.



Note

Though other keywords are visible in the command-line help strings, only the **default** and **group radius** keywords are supported.

Defaults

No authentication is performed.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The *method* argument identifies the method that the authentication algorithm tries in the given sequence to validate the password provided by the client. The only method that is truly IEEE 802.1x-compliant is the **group radius** method, in which the client data is validated against a RADIUS authentication server.

If you specify **group radius**, you must configure the RADIUS server by entering the **radius-server host** global configuration command.

Use the **show running-config** privileged EXEC command to display the configured lists of authentication methods.

Examples

This example shows how to enable AAA and how to create an IEEE 802.1x-compliant authentication list. This authentication first tries to contact a RADIUS server. If this action returns an error, the user is not allowed access to the network.

```
Switch(config)# aaa new-model
Switch(config)# aaa authentication dot1x default group radius
```

You can verify your settings by entering the **show running-config** privileged EXEC command.

Related Commands

Command	Description
aaa new-model	Enables the AAA access control model. For syntax information, see the Cisco IOS Security Command Reference, Release 12.2 > Authentication, Authorization, and Accounting > Authentication Commands .
show running-config	Displays the current operating configuration. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

action

Use the **action** access-map configuration command to set the action for the VLAN access map entry. Use the **no** form of this command to return to the default setting.

action { **drop** | **forward** }

no action

Syntax Description	drop	Drop the packet when the specified conditions are matched.
	forward	Forward the packet when the specified conditions are matched.

Defaults The default action is to forward packets.

Command Modes Access-map configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You enter access-map configuration mode by using the **vlan access-map** global configuration command. If the action is **drop**, you should define the access map, including configuring any access control list (ACL) names in match clauses, before applying the map to a VLAN, or all packets could be dropped. In access-map configuration mode, use the **match** access-map configuration command to define the match conditions for a VLAN map. Use the **action** command to set the action that occurs when a packet matches the conditions.

The drop and forward parameters are not used in the **no** form of the command.

Examples This example shows how to identify and apply a VLAN access map *vmap4* to VLANs 5 and 6 that causes the VLAN to forward an IP packet if the packet matches the conditions defined in access list *a12*:

```
Switch(config)# vlan access-map vmap4
Switch(config-access-map)# match ip address a12
Switch(config-access-map)# action forward
Switch(config-access-map)# exit
Switch(config)# vlan filter vmap4 vlan-list 5-6
```

You can verify your settings by entering the **show vlan access-map** privileged EXEC command.

Related Commands

Command	Description
access-list {deny permit}	Configures a standard numbered ACL. For syntax information, select Cisco IOS IP Command Reference, Volume 1 of 3:Addressing and Services, Release 12.2 > IP Services Commands .
ip access-list	Creates a named access list. For syntax information, select Cisco IOS IP Command Reference, Volume 1 of 3:Addressing and Services, Release 12.2 > IP Services Commands .
mac access-list extended	Creates a named MAC address access list.
match (access-map configuration)	Defines the match conditions for a VLAN map.
show vlan access-map	Displays the VLAN access maps created on the switch.
vlan access-map	Creates a VLAN access map.

archive download-sw

Use the **archive download-sw** privileged EXEC command to download a new image from a TFTP server to the switch and to overwrite or keep the existing image.

```
archive download-sw {/force-reload | /imageonly | /leave-old-sw | /no-set-boot | /overwrite |
/reload | /safe} source-url
```

Syntax Description		
/force-reload		Unconditionally force a system reload after successfully downloading the software image.
/imageonly		Download only the software image but not the HTML files associated with the embedded device manager. The HTML files for the existing version are deleted only if the existing version is being overwritten or removed.
/leave-old-sw		Keep the old software version after a successful download.
/no-set-boot		Do not alter the setting of the BOOT environment variable to point to the new software image after it is successfully downloaded.
/overwrite		Overwrite the software image in flash memory with the downloaded one.
/reload		Reload the system after successfully downloading the image unless the configuration has been changed and not been saved.
/safe		Keep the current software image; do not delete it to make room for the new software image before the new image is downloaded. The current image is deleted after the download.
<i>source-url</i>		<p>The source URL alias for a local or network file system. These options are supported:</p> <ul style="list-style-type: none"> The syntax for the local flash file system: flash: The syntax for the FTP: ftp:[[/username[:password]@location]/directory]/image-name.tar The syntax for an HTTP server: http://[[username:password]@]{hostname host-ip}[/directory]/image-name.tar The syntax for a secure HTTP server: https://[[username:password]@]{hostname host-ip}[/directory]/image-name.tar The syntax for the Remote Copy Protocol (RCP): rcp:[[/username@location]/directory]/image-name.tar The syntax for the TFTP: tftp:[[/location]/directory]/image-name.tar <p>The <i>image-name.tar</i> is the software image to download and install on the switch.</p>

Defaults

The current software image is not overwritten with the downloaded image.

Both the software image and HTML files are downloaded.

The new image is downloaded to the flash: file system.

The BOOT environment variable is changed to point to the new software image on the flash: file system.

Image names are case sensitive; the image file is provided in tar format.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(20)SE	The http and https keywords were added.

Usage Guidelines

The **/imageonly** option removes the HTML files for the existing image if the existing image is being removed or replaced. Only the Cisco IOS image (without the HTML files) is downloaded.

Using the **/safe** or **/leave-old-sw** option can cause the new image download to fail if there is insufficient flash memory. If leaving the software in place prevents the new image from fitting in flash memory due to space constraints, an error results.

If you used the **/leave-old-sw** option and did not overwrite the old image when you downloaded the new one, you can remove the old image by using the **delete** privileged EXEC command. For more information, see the “[delete](#)” section on page 2-69.

Use the **/overwrite** option to overwrite the image on the flash device with the downloaded one.

If you specify the command *without* the **/overwrite** option, the download algorithm verifies that the new image is not the same as the one on the switch flash device. If the images are the same, the download does not occur. If the images are different, the old image is deleted, and the new one is downloaded.

After downloading a new image, enter the **reload** privileged EXEC command to begin using the new image, or specify the **/reload** or **/force-reload** option in the **archive download-sw** command.

Examples

This example shows how to download a new image from a TFTP server at 172.20.129.10 and overwrite the image on the switch:

```
Switch# archive download-sw /overwrite tftp://172.20.129.10/test-image.tar
```

This example shows how to download only the software image from a TFTP server at 172.20.129.10 to the switch:

```
Switch# archive download-sw /imageonly tftp://172.20.129.10/test-image.tar
```

This example shows how to keep the old software version after a successful download:

```
Switch# archive download-sw /leave-old-sw tftp://172.20.129.10/test-image.tar
```


Related Commands

Command	Description
archive tar	Creates a tar file, lists the files in a tar file, or extracts the files from a tar file.
archive upload-sw	Uploads an existing image on the switch to a server.
delete	Deletes a file or directory on the flash memory device.

archive tar

Use the **archive tar** privileged EXEC command to create a tar file, list files in a tar file, or extract the files from a tar file.

```
archive tar {/create destination-url flash:/file-url} | {/table source-url} | {/extract source-url
flash:/file-url [dir/file...]}
```

Syntax Description

/create *destination-url*
flash:/*file-url*

Create a new tar file on the local or network file system.

For *destination-url*, specify the destination URL alias for the local or network file system and the name of the tar file to create. These options are supported:

- The syntax for the local flash filesystem:
flash:
- The syntax for the FTP:
ftp:[[/*username[:password]*@*location*]/*directory*]/*tar-filename.tar*
- The syntax for an HTTP server:
http:[[/*username:password*]@]{*hostname* | *host-ip*}/*directory*]/*image-name.tar*
- The syntax for a secure HTTP server:
https:[[/*username:password*]@]{*hostname* | *host-ip*}/*directory*]/*image-name.tar*
- The syntax for the Remote Copy Protocol (RCP) is:
rnp:[[/*username@location*]/*directory*]/*tar-filename.tar*
- The syntax for the TFTP:
tftp:[[/*location*]/*directory*]/*tar-filename.tar*

The *tar-filename.tar* is the tar file to be created.

For **flash:**/*file-url*, specify the location on the local flash file system from which the new tar file is created.

An optional list of files or directories within the source directory can be specified to write to the new tar file. If none are specified, all files and directories at this level are written to the newly created tar file.

<p>/table <i>source-url</i></p>	<p>Display the contents of an existing tar file to the screen.</p> <p>For <i>source-url</i>, specify the source URL alias for the local or network file system. These options are supported:</p> <ul style="list-style-type: none"> • The syntax for the local flash file system: flash: • The syntax for the FTP: ftp:[//[username[:password]@location]/directory]/tar-filename.tar • The syntax for an HTTP server: http://[[username:password]@]{hostname host-ip}[/directory]/image-name.tar • The syntax for a secure HTTP server: https://[[username:password]@]{hostname host-ip}[/directory]/image-name.tar • The syntax for the RCP: rcp:[//[username@location]/directory]/tar-filename.tar • The syntax for the TFTP: tftp:[//[location]/directory]/tar-filename.tar <p>The <i>tar-filename.tar</i> is the tar file to display.</p>
<p>/xtract <i>source-url</i> flash:/file-url [<i>dir/file...</i>]</p>	<p>Extract files from a tar file to the local file system.</p> <p>For <i>source-url</i>, specify the source URL alias for the local file system. These options are supported:</p> <ul style="list-style-type: none"> • The syntax for the local flash file system: flash: • The syntax for the FTP: ftp:[//[username[:password]@location]/directory]/tar-filename.tar • The syntax for an HTTP server: http://[[username:password]@]{hostname host-ip}[/directory]/image-name.tar • The syntax for a secure HTTP server: https://[[username:password]@]{hostname host-ip}[/directory]/image-name.tar • The syntax for the RCP: rcp:[//[username@location]/directory]/tar-filename.tar • The syntax for the TFTP: tftp:[//[location]/directory]/tar-filename.tar <p>The <i>tar-filename.tar</i> is the tar file from which to extract.</p> <p>For flash:/file-url [<i>dir/file...</i>], specify the location on the local flash file system into which the tar file is extracted. Use the <i>dir/file...</i> option to specify an optional list of files or directories within the tar file to be extracted. If none are specified, all files and directories are extracted.</p>

Defaults

None

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Filenames and directory names are case sensitive.
Image names are case sensitive.

Examples This example shows how to create a tar file. The command writes the contents of the *new-configs* directory on the local flash device to a file named *saved.tar* on the TFTP server at 172.20.10.30:

```
Switch# archive tar /create tftp:172.20.10.30/saved.tar flash:/new-configs
```

This example shows how to display the contents of the *c3560-ip-services-tar.12-25.SEB* file that is in flash memory. The contents of the tar file appear on the screen:

```
Switch# archive tar /table flash:c3560-ip-services-12-25.SEB.tar
info (219 bytes)

c3560-ip-services-mz.12-25.SEB/ (directory)
c3560-ip-services-mz.12-25.SEB (610856 bytes)
c3560-ip-services-mz.12-25.SEB/info (219 bytes)
info.ver (219 bytes)
```

This example shows how to display only the *c3560-ip-services-12-25.SEB/html* directory and its contents:

```
Switch# archive tar /table flash:c3560-ip-services-12-25.SEB.tar
c3560-ip-services-12-25/html
c3560-ip-services-mz.12-25.SEB/html/ (directory)
c3560-ip-services-mz.12-25.SEB/html/const.htm (556 bytes)
c3560-ip-services-mz.12-25.SEB/html/xhome.htm (9373 bytes)
c3560-ip-services-mz.12-25.SEB/html/menu.css (1654 bytes)
<output truncated>
```

This example shows how to extract the contents of a tar file on the TFTP server at 172.20.10.30. This command extracts just the *new-configs* directory into the root directory on the local flash file system. The remaining files in the *saved.tar* file are ignored.

```
Switch# archive tar /xtract tftp://172.20.10.30/saved.tar flash:/ new-configs
```

Related Commands	Command	Description
	archive download-sw	Downloads a new image from a TFTP server to the switch.
	archive upload-sw	Uploads an existing image on the switch to a server.

archive upload-sw

Use the **archive upload-sw** privileged EXEC command to upload an existing switch image to a server.

archive upload-sw [/version *version_string*] **destination-url**

Syntax Description	<p>/version <i>version_string</i> (Optional) Specify the specific version string of the image to be uploaded.</p> <p>destination-url The destination URL alias for a local or network file system. These options are supported:</p> <ul style="list-style-type: none"> The syntax for the local flash file system: flash: The syntax for the FTP: ftp:[[//username[:password]@location]/directory]/image-name.tar The syntax for an HTTP server: http:[[//username:password]@]{hostname host-ip}[/directory]/image-name.tar The syntax for a secure HTTP server: https:[[//username:password]@]{hostname host-ip}[/directory]/image-name.tar The syntax for the Remote Copy Protocol (RCP): rcp:[[//username@location]/directory]/image-name.tar The syntax for the TFTP: tftp:[[//location]/directory]/image-name.tar <p>The <i>image-name.tar</i> is the name of software image to be stored on the server.</p>
---------------------------	---

Defaults Uploads the currently running image from the flash: file system.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Use the upload feature only if the HTML files associated with the embedded device manager have been installed with the existing image.

The files are uploaded in this sequence: the Cisco IOS image, the HTML files, and info. After these files are uploaded, the software creates the tar file.

Image names are case sensitive.

Examples

This example shows how to upload the currently running image to a TFTP server at 172.20.140.2:

```
Switch# archive upload-sw tftp://172.20.140.2/test-image.tar
```

Related Commands

Command	Description
archive download-sw	Downloads a new image to the switch.
archive tar	Creates a tar file, lists the files in a tar file, or extracts the files from a tar file.

arp access-list

Use the **arp access-list** global configuration command to define an Address Resolution Protocol (ARP) access control list (ACL) or to add clauses to the end of a previously defined list. Use the **no** form of this command to delete the specified ARP access list.

arp access-list *acl-name*

no arp access-list *acl-name*

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description	<i>acl-name</i>	Name of the ACL.
--------------------	-----------------	------------------

Defaults No ARP access lists are defined.

Command Modes Global configuration

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines After entering the **arp access-list** command, you enter ARP access-list configuration mode, and these configuration commands are available:

- **default**: returns a command to its default setting.
- **deny**: specifies packets to reject. For more information, see the “[deny \(ARP access-list configuration\)](#)” section on page 2-70.
- **exit**: exits ARP access-list configuration mode.
- **no**: negates a command or returns to default settings.
- **permit**: specifies packets to forward. For more information, see the “[permit \(ARP access-list configuration\)](#)” section on page 2-290.

Use the **permit** and **deny** access-list configuration commands to forward and to drop ARP packets based on the specified matching criteria.

When the ARP ACL is defined, you can apply it to a VLAN by using the **ip arp inspection filter vlan** global configuration command. ARP packets containing only IP-to-MAC address bindings are compared to the ACL. All other types of packets are bridged in the ingress VLAN without validation. If the ACL permits a packet, the switch forwards it. If the ACL denies a packet because of an explicit deny statement, the switch drops the packet. If the ACL denies a packet because of an implicit deny statement, the switch compares the packet to the list of DHCP bindings (unless the ACL is *static*, which means that packets are not compared to the bindings).

Examples

This example shows how to define an ARP access list and to permit both ARP requests and ARP responses from a host with an IP address of 1.1.1.1 and a MAC address of 0000.0000.abcd:

```
Switch(config)# arp access-list static-hosts
Switch(config-arp-nacl)# permit ip host 1.1.1.1 mac host 00001.0000.abcd
Switch(config-arp-nacl)# end
```

You can verify your settings by entering the **show arp access-list** privileged EXEC command.

Related Commands

Command	Description
deny (ARP access-list configuration)	Denies an ARP packet based on matches compared against the DHCP bindings.
ip arp inspection filter vlan	Permits ARP requests and responses from a host configured with a static IP address.
permit (ARP access-list configuration)	Permits an ARP packet based on matches compared against the DHCP bindings.
show arp access-list	Displays detailed information about ARP access lists.

auto qos voip

Use the **auto qos voip** interface configuration command to automatically configure quality of service (QoS) for voice over IP (VoIP) within a QoS domain. Use the **no** form of this command to return to the default setting.

auto qos voip { **cisco-phone** | **cisco-softphone** | **trust** }

no auto qos voip [**cisco-phone** | **cisco-softphone** | **trust**]

Syntax Description

cisco-phone	Identify this port as connected to a Cisco IP Phone, and automatically configure QoS for VoIP. The QoS labels of incoming packets are trusted only when the telephone is detected.
cisco-softphone	Identify this port as connected to a device running the Cisco SoftPhone, and automatically configure QoS for VoIP.
trust	Identify this port as connected to a trusted switch or router, and automatically configure QoS for VoIP. The QoS labels of incoming packets are trusted. For nonrouted ports, the CoS value of the incoming packet is trusted. For routed ports, the DSCP value of the incoming packet is trusted.

Defaults

Auto-QoS is disabled on the port.

When auto-QoS is enabled, it uses the ingress packet label to categorize traffic, to assign packet labels, and to configure the ingress and egress queues as shown in [Table 2-1](#).

Table 2-1 Traffic Types, Packet Labels, and Queues

	VoIP Data Traffic	VoIP Control Traffic	Routing Protocol Traffic	STP ¹ BPDU ² Traffic	Real-Time Video Traffic	All Other Traffic	
DSCP ³	46	24, 26	48	56	34	–	
CoS ⁴	5	3	6	7	3	–	
CoS-to-Ingress Queue Map	2, 3, 4, 5, 6, 7 (queue 2)					0, 1 (queue 1)	
CoS-to-Egress Queue Map	5 (queue 1)	3, 6, 7 (queue 2)			4 (queue 3)	2 (queue 3)	0, 1 (queue 4)

1. STP = Spanning Tree Protocol
2. BPDU = bridge protocol data unit
3. DSCP = Differentiated Services Code Point
4. CoS = class of service

Table 2-2 shows the generated auto-QoS configuration for the ingress queues.

Table 2-2 Auto-QoS Configuration for the Ingress Queues

Ingress Queue	Queue Number	CoS-to-Queue Map	Queue Weight (Bandwidth)	Queue (Buffer) Size
SRR ¹ shared	1	0, 1	81 percent	67 percent
Priority	2	2, 3, 4, 5, 6, 7	19 percent	33 percent

1. SRR = shaped round robin. Ingress queues support shared mode only.

Table 2-3 shows the generated auto-QoS configuration for the egress queues.

Table 2-3 Auto-QoS Configuration for the Egress Queues

Egress Queue	Queue Number	CoS-to-Queue Map	Queue Weight (Bandwidth)	Queue (Buffer) Size for Gigabit-Capable Ports	Queue (Buffer) Size for 10/100 Ethernet Ports
Priority (shaped)	1	5	10 percent	16 percent	10 percent
SRR shared	2	3, 6, 7	10 percent	6 percent	10 percent
SRR shared	3	2, 4	60 percent	17 percent	26 percent
SRR shared	4	0, 1	20 percent	61 percent	54 percent

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(20)SE	The cisco-softphone keyword was added, and the generated auto-QoS configuration changed.

Usage Guidelines

Use this command to configure the QoS appropriate for VoIP traffic within the QoS domain. The QoS domain includes the switch, the interior of the network, and edge devices that can classify incoming traffic for QoS.

In releases earlier than Cisco IOS Release 12.2(20)SE, auto-QoS configures the switch only for VoIP with Cisco IP Phones on switch ports.

In Cisco IOS Release 12.2(20)SE or later, auto-QoS configures the switch for VoIP with Cisco IP Phones on switch and routed ports and for VoIP with devices running the Cisco SoftPhone application. These releases support only Cisco IP SoftPhone Version 1.3(3) or later. Connected devices must use Cisco Call Manager Version 4 or later.

To take advantage of the auto-QoS defaults, you should enable auto-QoS before you configure other QoS commands. You can fine-tune the auto-QoS configuration *after* you enable auto-QoS.

**Note**

The switch applies the auto-QoS-generated commands as if the commands were entered from the command-line interface (CLI). An existing user configuration can cause the application of the generated commands to fail or to be overridden by the generated commands. These actions occur without warning. If all the generated commands are successfully applied, any user-entered configuration that was not overridden remains in the running configuration. Any user-entered configuration that was overridden can be retrieved by reloading the switch without saving the current configuration to memory. If the generated commands fail to be applied, the previous running configuration is restored.

If this is the first port on which you have enabled auto-QoS, the auto-QoS-generated global configuration commands are executed followed by the interface configuration commands. If you enable auto-QoS on another port, only the auto-QoS-generated interface configuration commands for that port are executed.

When you enable the auto-QoS feature on the first port, these automatic actions occur:

- QoS is globally enabled (**mls qos** global configuration command), and other global configuration commands are added.
- When you enter the **auto qos voip cisco-phone** interface configuration command on a port at the edge of the network that is connected to a Cisco IP Phone, the switch enables the trusted boundary feature. The switch uses the Cisco Discovery Protocol (CDP) to detect the presence or absence of a Cisco IP Phone. When a Cisco IP Phone is detected, the ingress classification on the port is set to trust the QoS label received in the packet. When a Cisco IP Phone is absent, the ingress classification is set to not trust the QoS label in the packet. The switch configures ingress and egress queues on the port according to the settings in [Table 2-2](#) and [Table 2-3](#).
- When you enter the **auto qos voip cisco-softphone** interface configuration command on a port at the edge of the network that is connected to a device running the Cisco SoftPhone, the switch uses policing to decide whether a packet is in or out of profile and to specify the action on the packet. If the packet does not have a DSCP value of 24, 26, or 46 or is out of profile, the switch changes the DSCP value to 0. The switch configures ingress and egress queues on the port according to the settings in [Table 2-2](#) and [Table 2-3](#).
- When you enter the **auto qos voip trust** interface configuration command on a port connected to the interior of the network, the switch trusts the CoS value for nonrouted ports or the DSCP value for routed ports in ingress packets (the assumption is that traffic has already been classified by other edge devices). The switch configures the ingress and egress queues on the port according to the settings in [Table 2-2](#) and [Table 2-3](#).

You can enable auto-QoS on static, dynamic-access, and voice VLAN access, and trunk ports. When enabling auto-QoS with a Cisco IP Phone on a routed port, you must assign a static IP address to the IP phone.

**Note**

When a device running Cisco SoftPhone is connected to a switch or routed port, the switch supports only one Cisco SoftPhone application per port.

After auto-QoS is enabled, do not modify a policy map or aggregate policer that includes *AutoQoS* in its name. If you need to modify the policy map or aggregate policer, make a copy of it, and change the copied policy map or policer. To use the new policy map instead of the generated one, remove the generated policy map from the interface, and apply the new policy map.

To display the QoS configuration that is automatically generated when auto-QoS is enabled, enable debugging before you enable auto-QoS. Use the **debug auto qos** privileged EXEC command to enable auto-QoS debugging. For more information, see the [debug auto qos](#) command.

To disable auto-QoS on a port, use the **no auto qos voip** interface configuration command. Only the auto-QoS-generated interface configuration commands for this port are removed. If this is the last port on which auto-QoS is enabled and you enter the **no auto qos voip** command, auto-QoS is considered disabled even though the auto-QoS-generated global configuration commands remain (to avoid disrupting traffic on other ports affected by the global configuration). You can use the **no mls qos** global configuration command to disable the auto-QoS-generated global configuration commands. With QoS disabled, there is no concept of trusted or untrusted ports because the packets are not modified (the CoS, DSCP, and IP precedence values in the packet are not changed). Traffic is switched in pass-through mode (packets are switched without any rewrites and classified as best effort without any policing).

Examples

This example shows how to enable auto-QoS and to trust the QoS labels received in incoming packets when the switch or router connected to the port is a trusted device:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# auto qos voip trust
```

You can verify your settings by entering the **show auto qos interface interface-id** privileged EXEC command.

Related Commands

Command	Description
debug auto qos	Enables debugging of the auto-QoS feature.
mls qos cos	Defines the default CoS value of a port or assigns the default CoS to all incoming packets on the port.
mls qos map {cos-dscp dscp1 ... dscp8 dscp-cos dscp-list to cos}	Defines the CoS-to-DSCP map or the DSCP-to-CoS map.
mls qos queue-set output buffers	Allocates buffers to a queue-set.
mls qos srr-queue input bandwidth	Assigns shaped round robin (SRR) weights to an ingress queue.
mls qos srr-queue input buffers	Allocates the buffers between the ingress queues.
mls qos srr-queue input cos-map	Maps CoS values to an ingress queue or maps CoS values to a queue and to a threshold ID.
mls qos srr-queue input dscp-map	Maps DSCP values to an ingress queue or maps DSCP values to a queue and to a threshold ID.
mls qos srr-queue input priority-queue	Configures the ingress priority queue and guarantees bandwidth.
mls qos srr-queue output cos-map	Maps CoS values to an egress queue or maps CoS values to a queue and to a threshold ID.
mls qos srr-queue output dscp-map	Maps DSCP values to an egress queue or maps DSCP values to a queue and to a threshold ID.
mls qos trust queue-set	Configures the port trust state.
queue-set	Maps a port to a queue-set.
show auto qos	Displays auto-QoS information.
show mls qos interface	Displays QoS information at the port level.

Command	Description
srr-queue bandwidth shape	Assigns the shaped weights and enables bandwidth shaping on the four egress queues mapped to a port.
srr-queue bandwidth share	Assigns the shared weights and enables bandwidth sharing on the four egress queues mapped to a port.

boot boothlpr

Use the **boot boothlpr** global configuration command to load a special Cisco IOS image, which when loaded into memory, can load a second Cisco IOS image into memory and launch it. This variable is used only for internal development and testing. Use the **no** form of this command to return to the default setting.

boot boothlpr *filesystem:/file-url*

no boot boothlpr

Syntax Description	
<i>filesystem:</i>	Alias for a flash file system. Use flash: for the system board flash device.
<i>/file-url</i>	The path (directory) and name of a bootable helper image.

Defaults No helper image is loaded.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Filenames and directory names are case sensitive.
 This command changes the setting of the BOOTHLP environment variable. For more information, see [Appendix A, “Catalyst 3560 Switch Boot Loader Commands.”](#)

Related Commands	Command	Description
	show boot	Displays the settings of the boot environment variables.

boot config-file

Use the **boot config-file** global configuration command to specify the filename that Cisco IOS uses to read and write a nonvolatile copy of the system configuration. Use the **no** form of this command to return to the default setting.

boot config-file flash:*file-url*

no boot config-file

Syntax Description

flash: <i>file-url</i>	The path (directory) and name of the configuration file.
-------------------------------	--

Defaults

The default configuration file is flash:config.text.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Filenames and directory names are case sensitive.

This command changes the setting of the CONFIG_FILE environment variable. For more information, see [Appendix A, “Catalyst 3560 Switch Boot Loader Commands.”](#)

Related Commands

Command	Description
show boot	Displays the settings of the boot environment variables.

boot enable-break

Use the **boot enable-break** global configuration command to enable interrupting the automatic boot process. Use the **no** form of this command to return to the default setting.

boot enable-break

no boot enable-break

Syntax Description This command has no arguments or keywords.

Defaults Disabled. The automatic boot process cannot be interrupted by pressing the Break key on the console.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines When you enter this command, you can interrupt the automatic boot process by pressing the Break key on the console after the flash file system is initialized.



Note

Despite the setting of this command, you can interrupt the automatic boot process at any time by pressing the MODE button on the switch front panel.

This command changes the setting of the ENABLE_BREAK environment variable. For more information, see [Appendix A, “Catalyst 3560 Switch Boot Loader Commands.”](#)

Related Commands	Command	Description
	show boot	Displays the settings of the boot environment variables.

boot helper

Use the **boot helper** global configuration command to dynamically load files during boot loader initialization to extend or patch the functionality of the boot loader. Use the **no** form of this command to return to the default.

boot helper *filesystem:/file-url ...*

no boot helper

Syntax Description

<i>filesystem:</i>	Alias for a flash file system. Use flash: for the system board flash device.
<i>/file-url</i>	The path (directory) and a list of loadable files to dynamically load during loader initialization. Separate each image name with a semicolon.

Defaults

No helper files are loaded.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

This variable is used only for internal development and testing.

Filenames and directory names are case sensitive.

This command changes the setting of the HELPER environment variable. For more information, see [Appendix A, “Catalyst 3560 Switch Boot Loader Commands.”](#)

Related Commands

Command	Description
show boot	Displays the settings of the boot environment variables.

boot helper-config-file

Use the **boot helper-config-file** global configuration command to specify the name of the configuration file to be used by the Cisco IOS helper image. If this is not set, the file specified by the CONFIG_FILE environment variable is used by all versions of Cisco IOS that are loaded. Use the **no** form of this command to return to the default setting.

boot helper-config-file *filesystem:/file-url*

no boot helper-config file

Syntax Description		
<i>filesystem:</i>		Alias for a flash file system. Use flash: for the system board flash device.
<i>/file-url</i>		The path (directory) and helper configuration file to load.

Defaults No helper configuration file is specified.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines This variable is used only for internal development and testing.

Filenames and directory names are case sensitive.

This command changes the setting of the HELPER_CONFIG_FILE environment variable. For more information, see [Appendix A, “Catalyst 3560 Switch Boot Loader Commands.”](#)

Related Commands	Command	Description
	show boot	Displays the settings of the boot environment variables.

boot manual

Use the **boot manual** global configuration command to enable manually booting the switch during the next boot cycle. Use the **no** form of this command to return to the default setting.

boot manual

no boot manual

Syntax Description This command has no arguments or keywords.

Defaults Manual booting is disabled.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The next time you reboot the system, the switch is in boot loader mode, which is shown by the *switch:* prompt. To boot the system, use the **boot** boot loader command, and specify the name of the bootable image.

This command changes the setting of the MANUAL_BOOT environment variable. For more information, see [Appendix A, “Catalyst 3560 Switch Boot Loader Commands.”](#)

Related Commands	Command	Description
	show boot	Displays the settings of the boot environment variables.

boot private-config-file

Use the **boot private-config-file** global configuration command to specify the filename that Cisco IOS uses to read and write a nonvolatile copy of the private configuration. Use the **no** form of this command to return to the default setting.

boot private-config-file *filename*

no boot private-config-file

Syntax Description	<i>filename</i>	The name of the private configuration file.
--------------------	-----------------	---

Defaults	The default configuration file is <i>private-config</i> .
----------	---

Command Modes	Global configuration
---------------	----------------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	Filenames are case sensitive.
------------------	-------------------------------

Examples	This example shows how to specify the name of the private configuration file to be <i>pconfig</i> :
----------	---

```
Switch(config)# boot private-config-file pconfig
```

Related Commands	Command	Description
	show boot	Displays the settings of the boot environment variables.

boot system

Use the **boot system** global configuration command to specify the Cisco IOS image to load during the next boot cycle. Use the **no** form of this command to return to the default setting.

```
boot system filesystem:/file-url ...
```

```
no boot system
```

Syntax Description

<i>filesystem:</i>	Alias for a flash file system. Use flash: for the system board flash device.
<i>/file-url</i>	The path (directory) and name of a bootable image. Separate image names with a semicolon.

Defaults

The switch attempts to automatically boot the system by using information in the BOOT environment variable. If this variable is not set, the switch attempts to load and execute the first executable image it can by performing a recursive, depth-first search throughout the flash file system. In a depth-first search of a directory, each encountered subdirectory is completely searched before continuing the search in the original directory.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Filenames and directory names are case sensitive.

If you are using the **archive download-sw** privileged EXEC command to maintain system images, you never need to use the **boot system** command. The **boot system** command is automatically manipulated to load the downloaded image.

This command changes the setting of the BOOT environment variable. For more information, see [Appendix A, “Catalyst 3560 Switch Boot Loader Commands.”](#)

Related Commands

Command	Description
show boot	Displays the settings of the boot environment variables.

channel-group

Use the **channel-group** interface configuration command to assign an Ethernet port to an EtherChannel group, to enable an EtherChannel mode, or both. Use the **no** form of this command to remove an Ethernet port from an EtherChannel group.

```
channel-group channel-group-number mode {active | {auto [non-silent]} | {desirable [non-silent]} | on | passive}
```

```
no channel-group
```

PAgP modes:

```
channel-group channel-group-number mode {{auto [non-silent]} | {desirable [non-silent]}}
```

LACP modes:

```
channel-group channel-group-number mode {active | passive}
```

On mode:

```
channel-group channel-group-number mode on
```

Syntax Description

<i>channel-group-number</i>	Specify the channel group number. The range is 1 to 48.
mode	Specify the EtherChannel mode.
active	Unconditionally enable Link Aggregation Control Protocol (LACP). Active mode places a port into a negotiating state in which the port initiates negotiations with other ports by sending LACP packets. A channel is formed with another port group in either the active or passive mode.
auto	Enable the Port Aggregation Protocol (PAgP) only if a PAgP device is detected. Auto mode places a port into a passive negotiating state in which the port responds to PAgP packets it receives but does not start PAgP packet negotiation. A channel is formed only with another port group in desirable mode. When auto is enabled, silent operation is the default.
desirable	Unconditionally enable PAgP. Desirable mode places a port into an active negotiating state in which the port starts negotiations with other ports by sending PAgP packets. An EtherChannel is formed with another port group that is in the desirable or auto mode. When desirable is enabled, silent operation is the default.
non-silent	(Optional) Use in PAgP mode with the auto or desirable keyword when traffic is expected from the other device.
on	Enable on mode. In on mode, a usable EtherChannel exists only when both connected port groups are in the on mode.
passive	Enable LACP only if a LACP device is detected. Passive mode places a port into a negotiating state in which the port responds to received LACP packets but does not initiate LACP packet negotiation. A channel is formed only with another port group in active mode.

Defaults

No channel groups are assigned.
No mode is configured.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	The <i>channel-group-number</i> range was changed from 1 to 12 to 1 to 48.

Usage Guidelines

For Layer 2 EtherChannels, you do not have to create a port-channel interface first by using the **interface port-channel** global configuration command before assigning a physical port to a channel group. Instead, you can use the **channel-group** interface configuration command. It automatically creates the port-channel interface when the channel group gets its first physical port if the logical interface is not already created. If you create the port-channel interface first, the *channel-group-number* can be the same as the *port-channel-number*, or you can use a new number. If you use a new number, the **channel-group** command dynamically creates a new port channel.

You do not have to disable the IP address that is assigned to a physical port that is part of a channel group, but we strongly recommend that you do so.

You create Layer 3 port channels by using the **interface port-channel** command followed by the **no switchport** interface configuration command. You should manually configure the port-channel logical interface before putting the interface into the channel group.

After you configure an EtherChannel, configuration changes that you make on the port-channel interface apply to all the physical ports assigned to the port-channel interface. Configuration changes applied to the physical port affect only the port where you apply the configuration. To change the parameters of all ports in an EtherChannel, apply configuration commands to the port-channel interface, for example, spanning-tree commands or commands to configure a Layer 2 EtherChannel as a trunk.

If you do not specify **non-silent** with the **auto** or **desirable** mode, silent is assumed. The silent mode is used when the switch is connected to a device that is not PAgP-capable and seldom, if ever, sends packets. An example of a silent partner is a file server or a packet analyzer that is not generating traffic. In this case, running PAgP on a physical port prevents that port from ever becoming operational. However, it allows PAgP to operate, to attach the port to a channel group, and to use the port for transmission. Both ends of the link cannot be set to silent.

In the **on** mode, an EtherChannel exists only when a port group in the **on** mode is connected to another port group in the **on** mode.

**Caution**

You should use care when using the **on** mode. This is a manual configuration, and ports on both ends of the EtherChannel must have the same configuration. If the group is misconfigured, packet loss or spanning-tree loops can occur.

Do not configure an EtherChannel in both the PAgP and LACP modes. EtherChannel groups running PAgP and LACP can coexist on the same switch. Individual EtherChannel groups can run either PAgP or LACP, but they cannot interoperate.

If you set the protocol by using the **channel-protocol** interface configuration command, the setting is not overridden by the **channel-group** interface configuration command.

Do not configure a port that is an active or a not-yet-active member of an EtherChannel as an IEEE 802.1x port. If you try to enable IEEE 802.1x on an EtherChannel port, an error message appears, and IEEE 802.1x is not enabled.

**Note**

If IEEE 802.1x is enabled on a not-yet active port of an EtherChannel in software releases earlier than Cisco IOS Release 12.2(20)SE, the port does not join the EtherChannel.

Do not configure a secure port as part of an EtherChannel or an EtherChannel port as a secure port.

For a complete list of configuration guidelines, see the “Configuring EtherChannels” chapter in the software configuration guide for this release.

**Caution**

Do not enable Layer 3 addresses on the physical EtherChannel ports. Do not assign bridge groups on the physical EtherChannel ports because it creates loops.

Examples

This example shows how to configure an EtherChannel. It assigns two static-access ports in VLAN 10 to channel 5 with the PAgP mode **desirable**:

```
Switch# configure terminal
Switch(config)# interface range gigabitethernet0/1 -2
Switch(config-if-range)# switchport mode access
Switch(config-if-range)# switchport access vlan 10
Switch(config-if-range)# channel-group 5 mode desirable
Switch(config-if-range)# end
```

This example shows how to configure an EtherChannel. It assigns two static-access ports in VLAN 10 to channel 5 with the LACP mode **active**:

```
Switch# configure terminal
Switch(config)# interface range gigabitethernet0/1 -2
Switch(config-if-range)# switchport mode access
Switch(config-if-range)# switchport access vlan 10
Switch(config-if-range)# channel-group 5 mode active
Switch(config-if-range)# end
```

You can verify your settings by entering the **show running-config** privileged EXEC command.

Related Commands

Command	Description
channel-protocol	Restricts the protocol used on a port to manage channeling.
interface port-channel	Accesses or creates the port channel.
show etherchannel	Displays EtherChannel information for a channel.
show lacp	Displays LACP channel-group information.
show pagp	Displays PAgP channel-group information.
show running-config	Displays the current operating configuration. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

channel-protocol

Use the **channel-protocol** interface configuration command to restrict the protocol used on a port to manage channeling. Use the **no** form of this command to return to the default setting.

channel-protocol {lacp | pagp}

no channel-protocol

Syntax Description	Command	Description
	lacp	Configure an EtherChannel with the Link Aggregation Control Protocol (LACP).
	pagp	Configure an EtherChannel with the Port Aggregation Protocol (PAgP).

Defaults No protocol is assigned to the EtherChannel.

Command Modes Interface configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Use the **channel-protocol** command only to restrict a channel to LACP or PAgP. If you set the protocol by using the **channel-protocol** command, the setting is not overridden by the **channel-group** interface configuration command.

You must use the **channel-group** interface configuration command to configure the EtherChannel parameters. The **channel-group** command also can set the mode for the EtherChannel.

You cannot enable both the PAgP and LACP modes on an EtherChannel group.

PAgP and LACP are not compatible; both ends of a channel must use the same protocol.

Examples This example shows how to specify LACP as the protocol that manages the EtherChannel:

```
Switch(config-if)# channel-protocol lacp
```

You can verify your settings by entering the **show etherchannel** [*channel-group-number*] **protocol** privileged EXEC command.

Related Commands	Command	Description
	channel-group	Assigns an Ethernet port to an EtherChannel group.
	show etherchannel protocol	Displays protocol information the EtherChannel.

class

Use the **class** policy-map configuration command to define a traffic classification match criteria (through the **police**, **set**, and **trust** policy-map class configuration commands) for the specified class-map name. Use the **no** form of this command to delete an existing class map.

class *class-map-name*

no class *class-map-name*

Syntax Description

<i>class-map-name</i>	Name of the class map.
-----------------------	------------------------

Defaults

No policy map class-maps are defined.

Command Modes

Policy-map configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Before using the **class** command, you must use the **policy-map** global configuration command to identify the policy map and to enter policy-map configuration mode. After specifying a policy map, you can configure a policy for new classes or modify a policy for any existing classes in that policy map. You attach the policy map to a port by using the **service-policy** interface configuration command.

After entering the **class** command, you enter policy-map class configuration mode, and these configuration commands are available:

- **exit**: exits policy-map class configuration mode and returns to policy-map configuration mode.
- **no**: returns a command to its default setting.
- **police**: defines a policer or aggregate policer for the classified traffic. The policer specifies the bandwidth limitations and the action to take when the limits are exceeded. For more information, see the **police** and **police aggregate** policy-map class commands.
- **set**: specifies a value to be assigned to the classified traffic. For more information, see the **set** command.
- **trust**: defines a trust state for traffic classified with the **class** or the **class-map** command. For more information, see the **trust** command.

To return to policy-map configuration mode, use the **exit** command. To return to privileged EXEC mode, use the **end** command.

The **class** command performs the same function as the **class-map global configuration command**. Use the **class** command when a new classification, which is not shared with any other ports, is needed. Use the **class-map** command when the map is shared among many ports.

Examples

This example shows how to create a policy map called *policy1*. When attached to the ingress direction, it matches all the incoming traffic defined in *class1*, sets the IP Differentiated Services Code Point (DSCP) to 10, and polices the traffic at an average rate of 1 Mbps and bursts at 20 KB. Traffic exceeding the profile is marked down to a DSCP value gotten from the policed-DSCP map and then sent.

```
Switch(config)# policy-map policy1
Switch(config-pmap)# class class1
Switch(config-pmap-c)# set dscp 10
Switch(config-pmap-c)# police 1000000 20000 exceed-action policed-dscp-transmit
Switch(config-pmap-c)# exit
```

You can verify your settings by entering the **show policy-map** privileged EXEC command.

Related Commands

Command	Description
class-map	Creates a class map to be used for matching packets to the class whose name you specify.
police	Defines a policer for classified traffic.
policy-map	Creates or modifies a policy map that can be attached to multiple ports to specify a service policy.
set	Classifies IP traffic by setting a DSCP or IP-precedence value in the packet.
show policy-map	Displays quality of service (QoS) policy maps.
trust	Defines a trust state for the traffic classified through the class policy-map configuration command or the class-map global configuration command.

class-map

Use the **class-map** global configuration command to create a class map to be used for matching packets to the class whose name you specify and to enter class-map configuration mode. Use the **no** form of this command to delete an existing class map and to return to global configuration mode.

```
class-map [match-all | match-any] class-map-name
```

```
no class-map [match-all | match-any] class-map-name
```

Syntax Description

match-all	(Optional) Perform a logical-AND of all matching statements under this class map. All criteria in the class map must be matched.
match-any	(Optional) Perform a logical-OR of the matching statements under this class map. One or more criteria must be matched.
<i>class-map-name</i>	Name of the class map.

Defaults

No class maps are defined.

If neither the **match-all** or **match-any** keyword is specified, the default is **match-all**.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Use this command to specify the name of the class for which you want to create or modify class-map match criteria and to enter class-map configuration mode.

The **class-map** command and its subcommands are used to define packet classification, marking, and aggregate policing as part of a globally named service policy applied on a per-port basis.

After you are in quality of service (QoS) class-map configuration mode, these configuration commands are available:

- **description**: describes the class map (up to 200 characters). The **show class-map** privileged EXEC command displays the description and the name of the class-map.
- **exit**: exits from QoS class-map configuration mode.
- **match**: configures classification criteria. For more information, see the [match \(class-map configuration\)](#) command.
- **no**: removes a match statement from a class map.
- **rename**: renames the current class map. If you rename a class map with a name that is already used, the message `A class-map with this name already exists` appears.

To define packet classification on a physical-port basis, only one **match** command per class map is supported. In this situation, the **match-all** and **match-any** keywords are equivalent.

Only one access control list (ACL) can be configured in a class map. The ACL can have multiple access control entries (ACEs).

Examples

This example shows how to configure the class map called *class1* with one match criterion, which is an access list called *103*:

```
Switch(config)# access-list 103 permit any any dscp 10
Switch(config)# class-map class1
Switch(config-cmap)# match access-group 103
Switch(config-cmap)# exit
```

This example shows how to delete the class map *class1*:

```
Switch(config)# no class-map class1
```

You can verify your settings by entering the **show class-map** privileged EXEC command.

Related Commands

Command	Description
class	Defines a traffic classification match criteria (through the police , set , and trust policy-map class configuration commands) for the specified class-map name.
match (class-map configuration)	Defines the match criteria to classify traffic.
policy-map	Creates or modifies a policy map that can be attached to multiple ports to specify a service policy.
show class-map	Displays QoS class maps.

clear ip arp inspection log

Use the **clear ip arp inspection log** privileged EXEC command to clear the dynamic Address Resolution Protocol (ARP) inspection log buffer.

clear ip arp inspection log

Syntax Description This command has no arguments or keywords.

Defaults No default is defined.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Examples This example shows how to clear the contents of the log buffer:

```
Switch# clear ip arp inspection log
```

You can verify that the log was cleared by entering the **show ip arp inspection log** privileged command.

Related Commands	Command	Description
	arp access-list	Defines an ARP access control list (ACL).
	ip arp inspection log-buffer	Configures the dynamic ARP inspection logging buffer.
	ip arp inspection vlan logging	Controls the type of packets that are logged per VLAN.
	show inventory log	Displays the configuration and contents of the dynamic ARP inspection log buffer.

clear ip arp inspection statistics

Use the **clear ip arp inspection statistics** privileged EXEC command to clear the dynamic Address Resolution Protocol (ARP) inspection statistics.

clear ip arp inspection statistics [**vlan** *vlan-range*]

Syntax Description	vlan <i>vlan-range</i>	(Optional) Clear statistics for the specified VLAN or VLANs. You can specify a single VLAN identified by VLAN ID number, a range of VLANs separated by a hyphen, or a series of VLANs separated by a comma. The range is 1 to 4094.
---------------------------	-------------------------------	--

Defaults	No default is defined.
-----------------	------------------------

Command Modes	Privileged EXEC
----------------------	-----------------

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Examples	This example shows how to clear the statistics for VLAN 1:
-----------------	--

```
Switch# clear ip arp inspection statistics vlan 1
```

You can verify that the statistics were deleted by entering the **show ip arp inspection statistics vlan 1** privileged EXEC command.

Related Commands	Command	Description
	show inventory statistics	Displays statistics for forwarded, dropped, MAC validation failure, and IP validation failure packets for all VLANs or the specified VLAN.

clear ip dhcp snooping database

Use the **clear ip dhcp snooping database** privileged EXEC command to clear the DHCP binding database agent statistics.

clear ip dhcp snooping database statistics

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description	statistics Clear the DHCP snooping binding database agent statistics.
---------------------------	--

Defaults	No default is defined.
-----------------	------------------------

Command Modes	Privileged EXEC
----------------------	-----------------

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines	When you enter the clear ip dhcp snooping database statistics command, the switch does not update the entries in the binding database and in the binding file before clearing the statistics.
-------------------------	--

Examples	This example shows how to clear the DHCP snooping binding database agent statistics:
-----------------	--

```
Switch# clear ip dhcp snooping database statistics
```

You can verify that the statistics were cleared by entering the **show ip dhcp snooping database** privileged EXEC command.

Related Commands	Command	Description
	ip dhcp snooping	Enables DHCP snooping on a VLAN.
	ip dhcp snooping database	Configures the DHCP snooping binding database agent or the binding file.
	show ip dhcp snooping binding	Displays the status of DHCP snooping database agent.

clear ipc

Use the **clear ipc** privileged EXEC command on the switch stack or on a standalone switch to clear Interprocess Communications Protocol (IPC) statistics.

```
clear ipc {queue-statistics | statistics}
```

Syntax Description	queue-statistics	Clear the IPC queue statistics.
	statistics	Clear the IPC statistics.

Defaults No default is defined.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines You can clear all statistics by using the **clear ipc statistics** command, or you can clear only the queue statistics by using the **clear ipc queue-statistics** command.

Examples This example shows how to clear all statistics:

```
Switch# clear ipc statistics
```

This example shows how to clear only the queue statistics:

```
Switch# clear ipc queue-statistics
```

You can verify that the statistics were deleted by entering the **show ipc rpc** or the **show ipc session** privileged EXEC command.

Related Commands	Command	Description
	show ipc {rpc session}	Displays the IPC multicast routing statistics.

clear l2protocol-tunnel counters

Use the **clear l2protocol-tunnel counters** privileged EXEC command to clear the protocol counters in protocol tunnel ports.

```
clear l2protocol-tunnel counters [interface-id]
```

Syntax Description	<i>interface-id</i>	(Optional) Specify interface (physical interface or port channel) for which protocol counters are to be cleared.
---------------------------	---------------------	--

Defaults	No default is defined.
-----------------	------------------------

Command Modes	Privileged EXEC
----------------------	-----------------

Command History	Release	Modification
	12.2(25)SE	This command was introduced.

Usage Guidelines	Use this command to clear protocol tunnel counters on the switch or on the specified interface.
-------------------------	---

Examples This example shows how to clear Layer 2 protocol tunnel counters on an interface:

```
Switch# clear l2protocol-tunnel counters gigabitethernet0/3
```

Related Commands	Command	Description
	show l2protocol-tunnel	Displays information about ports configured for Layer 2 protocol tunneling.

clear lacp

Use the **clear lacp** privileged EXEC command to clear Link Aggregation Control Protocol (LACP) channel-group counters.

```
clear lacp {channel-group-number counters | counters}
```

Syntax Description

<i>channel-group-number</i>	(Optional) Channel group number. The range is 1 to 48.
counters	Clear traffic counters.

Defaults

No default is defined.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	The <i>channel-group-number</i> range was changed from 1 to 12 to 1 to 48.

Usage Guidelines

You can clear all counters by using the **clear lacp counters** command, or you can clear only the counters for the specified channel group by using the **clear lacp *channel-group-number* counters** command.

Examples

This example shows how to clear all channel-group information:

```
Switch# clear lacp counters
```

This example shows how to clear LACP traffic counters for group 4:

```
Switch# clear lacp 4 counters
```

You can verify that the information was deleted by entering the **show lacp counters** or the **show lacp 4 counters** privileged EXEC command.

Related Commands

Command	Description
show lacp	Displays LACP channel-group information.

clear mac address-table

Use the **clear mac address-table** privileged EXEC command to delete from the MAC address table a specific dynamic address, all dynamic addresses on a particular interface, or all dynamic addresses on a particular VLAN. This command also clears the MAC address notification global counters.

```
clear mac address-table {dynamic [address mac-addr | interface interface-id | vlan vlan-id] |
notification}
```

Syntax Description		
dynamic		Delete all dynamic MAC addresses.
dynamic address <i>mac-addr</i>		(Optional) Delete the specified dynamic MAC address.
dynamic interface <i>interface-id</i>		(Optional) Delete all dynamic MAC addresses on the specified physical port or port channel.
dynamic vlan <i>vlan-id</i>		(Optional) Delete all dynamic MAC addresses for the specified VLAN. The range is 1 to 4094.
notification		Clear the notifications in the history table and reset the counters.

Defaults No default is defined.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Examples This example shows how to remove a specific MAC address from the dynamic address table:

```
Switch# clear mac address-table dynamic address 0008.0070.0007
```

You can verify that the information was deleted by entering the **show mac address-table** privileged EXEC command.

Related Commands

Command	Description
mac address-table notification	Enables the MAC address notification feature.
show mac address-table	Displays the MAC address table static and dynamic entries.
show mac address-table notification	Displays the MAC address notification settings for all interfaces or the specified interface.
snmp trap mac-notification	Enables the Simple Network Management Protocol (SNMP) MAC address notification trap on a specific interface.

clear mac address-table move update

Use the **clear mac address-table move update** privileged EXEC command to clear the mac address-table-move update-related counters.

clear mac address-table move update

Syntax Description This command has no arguments or keywords.

Defaults No default is defined.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(25)SED	This command was introduced.

Examples This example shows how to clear the mac address-table move update related counters.

```
Switch# clear mac address-table move update
```

You can verify that the information was cleared by entering the **show mac address-table move update** privileged EXEC command.

Related Commands	Command	Description
	mac address-table move update {receive transmit}	Configures MAC address-table move update on the switch.
	show mac address-table move update	Displays the MAC address-table move update information on the switch.

clear pagp

Use the **clear pagp** privileged EXEC command to clear Port Aggregation Protocol (PAgP) channel-group information.

```
clear pagp {channel-group-number counters | counters}
```

Syntax Description	<i>channel-group-number</i>	(Optional) Channel group number. The range is 1 to 48.
	counters	Clear traffic counters.

Defaults No default is defined.

Command Modes Privileged EXEC

Command History	Release	Modification
		12.1(19)EA1
	12.2(25)SE	The <i>channel-group-number</i> range was changed from 1 to 12 to 1 to 48.

Usage Guidelines You can clear all counters by using the **clear pagp counters** command, or you can clear only the counters for the specified channel group by using the **clear pagp channel-group-number counters** command.

Examples This example shows how to clear all channel-group information:

```
Switch# clear pagp counters
```

This example shows how to clear PAgP traffic counters for group 10:

```
Switch# clear pagp 10 counters
```

You can verify that information was deleted by entering the **show pagp** privileged EXEC command.

Related Commands	Command	Description
		show pagp

clear port-security

Use the **clear port-security** privileged EXEC command to delete from the MAC address table all secure addresses or all secure addresses of a specific type (configured, dynamic, or sticky) on the switch or on an interface.

```
clear port-security {all | configured | dynamic | sticky} [[address mac-addr | interface
interface-id] [vlan {vlan-id | {access | voice}}]]
```

Syntax Description	
all	Delete all secure MAC addresses.
configured	Delete configured secure MAC addresses.
dynamic	Delete secure MAC addresses auto-learned by hardware.
sticky	Delete secure MAC addresses, either auto-learned or configured.
address mac-addr	(Optional) Delete the specified dynamic secure MAC address.
interface interface-id	(Optional) Delete all the dynamic secure MAC addresses on the specified physical port or VLAN.
vlan	(Optional) Delete the specified secure MAC address from the specified VLAN. Enter one of these options after you enter the vlan keyword: <ul style="list-style-type: none"> <i>vlan-id</i>—On a trunk port, specify the VLAN ID of the VLAN on which this address should be cleared. access—On an access port, clear the specified secure MAC address on the access VLAN. voice—On an access port, clear the specified secure MAC address on the voice VLAN. <p>Note The voice keyword is available only if voice VLAN is configured on a port and if that port is not the access VLAN.</p>

Defaults No default is defined.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(25)SEA	This command was introduced.
	12.2(25)SEB	The access and voice keywords were added.

Examples This example shows how to clear all secure addresses from the MAC address table:

```
Switch# clear port-security all
```

This example shows how to remove a specific configured secure address from the MAC address table:

```
Switch# clear port-security configured address 0008.0070.0007
```


This example shows how to remove all the dynamic secure addresses learned on a specific interface:

```
Switch# clear port-security dynamic interface gigabitethernet0/1
```

This example shows how to remove all the dynamic secure addresses from the address table:

```
Switch# clear port-security dynamic
```

You can verify that the information was deleted by entering the **show port-security** privileged EXEC command.

Related Commands	Command	Description
	switchport port-security	Enables port security on an interface.
	switchport port-security mac-address <i>mac-address</i>	Configures secure MAC addresses.
	switchport port-security maximum <i>value</i>	Configures a maximum number of secure MAC addresses on a secure interface.
	show port-security	Displays the port security settings defined for an interface or for the switch.

clear spanning-tree counters

Use the **clear spanning-tree counters** privileged EXEC command to clear the spanning-tree counters.

```
clear spanning-tree counters [interface interface-id]
```

Syntax Description	interface <i>interface-id</i> (Optional) Clear all spanning-tree counters on the specified interface. Valid interfaces include physical ports, VLANs, and port channels. The VLAN range is 1 to 4094. The port-channel range is 1 to 48.
---------------------------	---

Defaults	No default is defined.
-----------------	------------------------

Command Modes	Privileged EXEC
----------------------	-----------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	If the <i>interface-id</i> is not specified, spanning-tree counters are cleared for all interfaces.
-------------------------	---

Examples	This example shows how to clear spanning-tree counters for all interfaces: Switch# clear spanning-tree counters
-----------------	---

Related Commands	Command	Description
	show spanning-tree	Displays spanning-tree state information.

clear spanning-tree detected-protocols

Use the **clear spanning-tree detected-protocols** privileged EXEC command to restart the protocol migration process (force the renegotiation with neighboring switches) on all interfaces or on the specified interface.

clear spanning-tree detected-protocols [*interface interface-id*]

Syntax Description	interface <i>interface-id</i> (Optional) Restart the protocol migration process on the specified interface. Valid interfaces include physical ports, VLANs, and port channels. The VLAN range is 1 to 4094. The port-channel range is 1 to 48.
---------------------------	---

Defaults	No default is defined.
-----------------	------------------------

Command Modes	Privileged EXEC
----------------------	-----------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines A switch running the rapid per-VLAN spanning-tree plus (rapid-PVST+) protocol or the Multiple Spanning Tree Protocol (MSTP) supports a built-in protocol migration mechanism that enables it to interoperate with legacy IEEE 802.1D switches. If a rapid-PVST+ switch or an MSTP switch receives a legacy IEEE 802.1D configuration bridge protocol data unit (BPDU) with the protocol version set to 0, it sends only IEEE 802.1D BPDUs on that port. A multiple spanning-tree (MST) switch can also detect that a port is at the boundary of a region when it receives a legacy BPDU, an MST BPDU (Version 3) associated with a different region, or a rapid spanning-tree (RST) BPDU (Version 2).

However, the switch does not automatically revert to the rapid-PVST+ or the MSTP mode if it no longer receives IEEE 802.1D BPDUs because it cannot learn whether the legacy switch has been removed from the link unless the legacy switch is the designated switch. Use the **clear spanning-tree detected-protocols** command in this situation.

Examples This example shows how to restart the protocol migration process on a port:

```
Switch# clear spanning-tree detected-protocols interface gigabitethernet0/1
```

Related Commands	Command	Description
	show spanning-tree	Displays spanning-tree state information.
	spanning-tree link-type	Overrides the default link-type setting and enables rapid spanning-tree changes to the forwarding state.

clear vmpls statistics

Use the **clear vmpls statistics** privileged EXEC command to clear the statistics maintained by the VLAN Query Protocol (VQP) client.

clear vmpls statistics

Syntax Description This command has no arguments or keywords.

Defaults No default is defined.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Examples This example shows how to clear VLAN Membership Policy Server (VMPS) statistics:

```
Switch# clear vmpls statistics
```

You can verify that information was deleted by entering the **show vmpls statistics** privileged EXEC command.

Related Commands	Command	Description
	show vmpls	Displays the VQP version, reconfirmation interval, retry count, VMPS IP addresses, and the current and primary servers.

clear vtp counters

Use the **clear vtp counters** privileged EXEC command to clear the VLAN Trunking Protocol (VTP) and pruning counters.

clear vtp counters

Syntax Description This command has no arguments or keywords.

Defaults No default is defined.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Examples This example shows how to clear the VTP counters:

```
Switch# clear vtp counters
```

You can verify that information was deleted by entering the **show vtp counters** privileged EXEC command.

Related Commands	Command	Description
	show vtp	Displays general information about the VTP management domain, status, and counters.

cluster commander-address

You do not need to enter this command. The cluster command switch automatically provides its MAC address to cluster member switches when these switches join the cluster. The cluster member switch adds this information and other cluster information to its running configuration file. Use the **no** form of this global configuration command from the cluster member switch console port to remove the switch from a cluster only during debugging or recovery procedures.

cluster commander-address *mac-address* [**member** *number* **name** *name*]

no cluster commander-address

Syntax Description		
	<i>mac-address</i>	MAC address of the cluster command switch.
	member <i>number</i>	(Optional) Number of a configured cluster member switch. The range is 0 to 15.
	name <i>name</i>	(Optional) Name of the configured cluster up to 31 characters.

Defaults The switch is not a member of any cluster.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines This command is available only on the cluster command switch.

A cluster member can have only one cluster command switch.

The cluster member switch retains the identity of the cluster command switch during a system reload by using the *mac-address* parameter.

You can enter the **no** form on a cluster member switch to remove it from the cluster during debugging or recovery procedures. You would normally use this command from the cluster member switch console port only when the member has lost communication with the cluster command switch. With normal switch configuration, we recommend that you remove cluster member switches only by entering the **no cluster member n** global configuration command on the cluster command switch.

When a standby cluster command switch becomes active (becomes the cluster command switch), it removes the cluster commander address line from its configuration.

Examples

This is partial sample output from the running configuration of a cluster member.

```
Switch(config)# show running-configuration
```

```
<output truncated>
```

```
cluster commander-address 00e0.9bc0.a500 member 4 name my_cluster
```

```
<output truncated>
```

This example shows how to remove a member from the cluster by using the cluster member console.

```
Switch # configure terminal
```

```
Enter configuration commands, one per line. End with CNTL/Z.
```

```
Switch(config)# no cluster commander-address
```

You can verify your settings by entering the **show cluster** privileged EXEC command.

Related Commands

Command	Description
show cluster	Displays the cluster status and a summary of the cluster to which the switch belongs.

cluster discovery hop-count

Use the **cluster discovery hop-count** global configuration command on the cluster command switch to set the hop-count limit for extended discovery of candidate switches. Use the **no** form of this command to return to the default setting.

cluster discovery hop-count *number*

no cluster discovery hop-count

Syntax Description	<i>number</i>	Number of hops from the cluster edge that the cluster command switch limits the discovery of candidates. The range is 1 to 7.
---------------------------	---------------	---

Defaults The hop count is set to 3.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines This command is available only on the cluster command switch. This command does not operate on cluster member switches.

If the hop count is set to 1, it disables extended discovery. The cluster command switch discovers only candidates that are one hop from the edge of the cluster. The edge of the cluster is the point between the last discovered cluster member switch and the first discovered candidate switch.

Examples This example shows how to set hop count limit to 4. This command is executed on the cluster command switch.

```
Switch(config)# cluster discovery hop-count 4
```

You can verify your setting by entering the **show cluster** privileged EXEC command.

Related Commands	Command	Description
	show cluster	Displays the cluster status and a summary of the cluster to which the switch belongs.
	show cluster candidates	Displays a list of candidate switches.

cluster enable

Use the **cluster enable** global configuration command on a command-capable switch to enable it as the cluster command switch, assign a cluster name, and to optionally assign a member number to it. Use the **no** form of the command to remove all members and to make the cluster command switch a candidate switch.

cluster enable *name* [*command-switch-member-number*]

no cluster enable

Syntax Description

<i>name</i>	Name of the cluster up to 31 characters. Valid characters include only alphanumerics, dashes, and underscores.
<i>command-switch-member-number</i>	(Optional) Assign a member number to the cluster command switch of the cluster. The range is 0 to 15.

Defaults

The switch is not a cluster command switch.

No cluster name is defined.

The member number is 0 when the switch is the cluster command switch.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Enter this command on any command-capable switch that is not part of any cluster. This command fails if a device is already configured as a member of the cluster.

You must name the cluster when you enable the cluster command switch. If the switch is already configured as the cluster command switch, this command changes the cluster name if it is different from the previous cluster name.

Examples

This example shows how to enable the cluster command switch, name the cluster, and set the cluster command switch member number to 4.

```
Switch(config)# cluster enable Engineering-IDF4 4
```

You can verify your setting by entering the **show cluster** privileged EXEC command on the cluster command switch.

■ cluster enable

Related Commands	Command	Description
	show cluster	Displays the cluster status and a summary of the cluster to which the switch belongs.

cluster holdtime

Use the **cluster holdtime** global configuration command to set the duration in seconds before a switch (either the command or cluster member switch) declares the other switch down after not receiving heartbeat messages. Use the **no** form of this command to set the duration to the default value.

cluster holdtime *holdtime-in-secs*

no cluster holdtime

Syntax Description	<i>holdtime-in-secs</i>	Duration in seconds before a switch (either a command or cluster member switch) declares the other switch down. The range is 1 to 300 seconds.				
Defaults	The default holdtime is 80 seconds.					
Command Modes	Global configuration					
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>12.1(19)EA1</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	12.1(19)EA1	This command was introduced.	
Release	Modification					
12.1(19)EA1	This command was introduced.					
Usage Guidelines	<p>Enter this command with the cluster timer global configuration command only on the cluster command switch. The cluster command switch propagates the values to all its cluster members so that the setting is consistent among all switches in the cluster.</p> <p>The holdtime is typically set as a multiple of the interval timer (cluster timer). For example, it takes (holdtime-in-secs divided by the interval-in-secs) number of heartbeat messages to be missed in a row to declare a switch down.</p>					
Examples	<p>This example shows how to change the interval timer and the duration on the cluster command switch.</p> <pre>Switch(config)# cluster timer 3 Switch(config)# cluster holdtime 30</pre> <p>You can verify your settings by entering the show cluster privileged EXEC command.</p>					
Related Commands	<table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>show cluster</td> <td>Displays the cluster status and a summary of the cluster to which the switch belongs.</td> </tr> </tbody> </table>	Command	Description	show cluster	Displays the cluster status and a summary of the cluster to which the switch belongs.	
Command	Description					
show cluster	Displays the cluster status and a summary of the cluster to which the switch belongs.					

cluster member

Use the **cluster member** global configuration command on the cluster command switch to add candidates to a cluster. Use the **no** form of the command to remove members from the cluster.

```
cluster member [n] mac-address H.H.H [password enable-password] [vlan vlan-id]
```

```
no cluster member n
```

Syntax Description		
<i>n</i>		The number that identifies a cluster member. The range is 0 to 15.
mac-address <i>H.H.H</i>		MAC address of the cluster member switch in hexadecimal format.
password <i>enable-password</i>		Enable password of the candidate switch. The password is not required if there is no password on the candidate switch.
vlan <i>vlan-id</i>		(Optional) VLAN ID through which the candidate is added to the cluster by the cluster command switch. The range is 1 to 4094.

Defaults A newly enabled cluster command switch has no associated cluster members.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Enter this command only on the cluster command switch to add a candidate to or remove a member from the cluster. If you enter this command on a switch other than the cluster command switch, the switch rejects the command and displays an error message.

You must enter a member number to remove a switch from the cluster. However, you do not need to enter a member number to add a switch to the cluster. The cluster command switch selects the next available member number and assigns it to the switch that is joining the cluster.

You must enter the enable password of the candidate switch for authentication when it joins the cluster. The password is not saved in the running or startup configuration. After a candidate switch becomes a member of the cluster, its password becomes the same as the cluster command-switch password.

If a switch does not have a configured hostname, the cluster command switch appends a member number to the cluster command-switch hostname and assigns it to the cluster member switch.

If you do not specify a VLAN ID, the cluster command switch automatically chooses a VLAN and adds the candidate to the cluster.

Examples

This example shows how to add a switch as member 2 with MAC address 00E0.1E00.2222 and the password *key* to a cluster. The cluster command switch adds the candidate to the cluster through VLAN 3.

```
Switch(config)# cluster member 2 mac-address 00E0.1E00.2222 password key vlan 3
```

This example shows how to add a switch with MAC address 00E0.1E00.3333 to the cluster. This switch does not have a password. The cluster command switch selects the next available member number and assigns it to the switch that is joining the cluster.

```
Switch(config)# cluster member mac-address 00E0.1E00.3333
```

You can verify your settings by entering the **show cluster members** privileged EXEC command on the cluster command switch.

Related Commands

Command	Description
show cluster	Displays the cluster status and a summary of the cluster to which the switch belongs.
show cluster candidates	Displays a list of candidate switches.
show cluster members	Displays information about the cluster members.

cluster outside-interface

Use the **cluster outside-interface** global configuration command to configure the outside interface for cluster Network Address Translation (NAT) so that a member without an IP address can communicate with devices outside the cluster. Use the **no** form of this command to return to the default setting.

cluster outside-interface *interface-id*

no cluster outside-interface

Syntax Description

interface-id Interface to serve as the outside interface. Valid interfaces include physical interfaces, port-channels, or VLANs. The port-channel range is 1 to 48. The VLAN range is 1 to 4094.

Defaults

The default outside interface is automatically selected by the cluster command switch.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Enter this command only on the cluster command switch. If you enter this command on a cluster member switch, an error message appears.

Examples

This example shows how to set the outside interface to VLAN 1:

```
Switch(config)# cluster outside-interface vlan 1
```

You can verify your setting by entering the **show running-config** privileged EXEC command.

Related Commands

Command	Description
show running-config	Displays the current operating configuration. For syntax information, select the Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

cluster run

Use the **cluster run** global configuration command to enable clustering on a switch. Use the **no** form of this command to disable clustering on a switch.

cluster run

no cluster run

Syntax Description This command has no arguments or keywords.

Defaults Clustering is enabled on all switches.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines

When you enter the **no cluster run** command on a cluster command switch, the cluster command switch is disabled. Clustering is disabled, and the switch cannot become a candidate switch.

When you enter the **no cluster run** command on a cluster member switch, it is removed from the cluster. Clustering is disabled, and the switch cannot become a candidate switch.

When you enter the **no cluster run** command on a switch that is not part of a cluster, clustering is disabled on this switch. This switch cannot then become a candidate switch.

Examples This example shows how to disable clustering on the cluster command switch:

```
Switch(config)# no cluster run
```

You can verify your setting by entering the **show cluster** privileged EXEC command.

Related Commands	Command	Description
	show cluster	Displays the cluster status and a summary of the cluster to which the switch belongs.

cluster standby-group

Use the **cluster standby-group** global configuration command to enable cluster command-switch redundancy by binding the cluster to an existing Hot Standby Router Protocol (HSRP). Entering the **routing-redundancy** keyword enables the same HSRP group to be used for cluster command-switch redundancy and routing redundancy. Use the **no** form of this command to return to the default setting.

cluster standby-group *HSRP-group-name* [**routing-redundancy**]

no cluster standby-group

Syntax Description	<i>HSRP-group-name</i>	Name of the HSRP group that is bound to the cluster. The group name is limited to 32 characters.
	routing-redundancy	(Optional) Enable the same HSRP standby group to be used for cluster command-switch redundancy and routing redundancy.

Defaults The cluster is not bound to any HSRP group.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Enter this command only on the cluster command switch. If you enter it on a cluster member switch, an error message appears.

The cluster command switch propagates the cluster-HSRP binding information to all cluster-HSRP capable members. Each cluster member switch stores the binding information in its NVRAM. The HSRP group name must be a valid standby group; otherwise, the command exits with an error.

The same group name should be used on all members of the HSRP standby group that is to be bound to the cluster. The same HSRP group name should also be used on all cluster-HSRP capable members for the HSRP group that is to be bound. (When not binding a cluster to an HSRP group, you can use different names on the cluster commander and the members.)

Examples This example shows how to bind the HSRP group named *my_hsrp* to the cluster. This command is executed on the cluster command switch.

```
Switch(config)# cluster standby-group my_hsrp
```

This example shows how to use the same HSRP group named *my_hsrp* for routing redundancy and cluster redundancy.

```
Switch(config)# cluster standby-group my_hsrp routing-redundancy
```


This example shows the error message when this command is executed on a cluster command switch and the specified HSRP standby group does not exist:

```
Switch(config)# cluster standby-group my_hsrp
%ERROR: Standby (my_hsrp) group does not exist
```

This example shows the error message when this command is executed on a cluster member switch:

```
Switch(config)# cluster standby-group my_hsrp routing-redundancy
%ERROR: This command runs on a cluster command switch
```

You can verify your settings by entering the **show cluster** privileged EXEC command. The output shows whether redundancy is enabled in the cluster.

Related Commands

Command	Description
standby ip	Enables HSRP on the interface. For syntax information, select Cisco IOS IP Command Reference, Volume 1 of 3:Addressing and Services, Release 12.2 > IP Services Commands .
show cluster	Displays the cluster status and a summary of the cluster to which the switch belongs.
show standby	Displays standby group information. For syntax information, select Cisco IOS IP Command Reference, Volume 1 of 3:Addressing and Services, Release 12.2 > IP Services Commands .

cluster timer

Use the **cluster timer** global configuration command to set the interval in seconds between heartbeat messages. Use the **no** form of this command to set the interval to the default value.

cluster timer *interval-in-secs*

no cluster timer

Syntax Description	<i>interval-in-secs</i>	Interval in seconds between heartbeat messages. The range is 1 to 300 seconds.
Defaults	The interval is 8 seconds.	
Command Modes	Global configuration	
Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
Usage Guidelines	<p>Enter this command with the cluster holdtime global configuration command only on the cluster command switch. The cluster command switch propagates the values to all its cluster members so that the setting is consistent among all switches in the cluster.</p> <p>The holdtime is typically set as a multiple of the heartbeat interval timer (cluster timer). For example, it takes (holdtime-in-secs divided by the interval-in-secs) number of heartbeat messages to be missed in a row to declare a switch down.</p>	
Examples	<p>This example shows how to change the heartbeat interval timer and the duration on the cluster command switch:</p> <pre>Switch(config)# cluster timer 3 Switch(config)# cluster holdtime 30</pre> <p>You can verify your settings by entering the show cluster privileged EXEC command.</p>	
Related Commands	Command	Description
	show cluster	Displays the cluster status and a summary of the cluster to which the switch belongs.

define interface-range

Use the **define interface-range** global configuration command to create an interface-range macro. Use the **no** form of this command to delete the defined macro.

define interface-range *macro-name interface-range*

no define interface-range *macro-name interface-range*

Syntax Description

<i>macro-name</i>	Name of the interface-range macro; up to 32 characters.
<i>interface-range</i>	Interface range; for valid values for interface ranges, see “Usage Guidelines.”

Defaults

This command has no default setting.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The macro name is a 32-character maximum character string.

A macro can contain up to five ranges.

All interfaces in a range must be the same type; that is, all Fast Ethernet ports, all Gigabit Ethernet ports, all EtherChannel ports, or all VLANs, but you can combine multiple interface types in a macro.

When entering the *interface-range*, use this format:

- *type {first-interface} - {last-interface}*
- You must add a space between the first interface number and the hyphen when entering an *interface-range*. For example, **gigabitethernet 0/1 - 2** is a valid range; **gigabitethernet 0/1-2** is not a valid range

Valid values for *type* and *interface*:

- **vlan** *vlan-id - vlan-ID*, where the VLAN ID is 1 to 4094
VLAN interfaces must have been configured with the **interface vlan** command (the **show running-config** privileged EXEC command displays the configured VLAN interfaces). VLAN interfaces not displayed by the **show running-config** command cannot be used in *interface-ranges*.
- **port-channel** *port-channel-number*, where *port-channel-number* is from 1 to 48
- **fastethernet** *module/{first port} - {last port}*
- **gigabitethernet** *module/{first port} - {last port}*

For physical interfaces:

- module is always 0.
- the range is *type 0/number - number* (for example, **gigabitethernet 0/1 - 2**).

When you define a range, you must enter a space before the hyphen (-), for example:

gigabitethernet0/1 - 2

You can also enter multiple ranges. When you define multiple ranges, you must enter a space after the first entry before the comma (.). The space after the comma is optional, for example:

fastethernet0/3, gigabitethernet0/1 - 2

fastethernet0/3 -4, gigabitethernet0/1 - 2

Examples

This example shows how to create a multiple-interface macro:

```
Switch(config)# define interface-range macro1 fastethernet0/1 - 2, gigabitethernet0/1 - 2
```

Related Commands

Command	Description
interface range	Executes a command on multiple ports at the same time.
show running-config	Displays the current operating configuration, including defined macros. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

delete

Use the **delete** privileged EXEC command to delete a file or directory on the flash memory device.

```
delete [/force] [/recursive] filesystem:/file-url
```

Syntax Description	
/force	(Optional) Suppress the prompt that confirms the deletion.
/recursive	(Optional) Delete the named directory and all subdirectories and the files contained in it.
filesystem:	Alias for a flash file system. The syntax for the local flash file system: flash:
/file-url	The path (directory) and filename to delete.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines If you use the **/force** keyword, you are prompted once at the beginning of the deletion process to confirm the deletion.

If you use the **/recursive** keyword without the **/force** keyword, you are prompted to confirm the deletion of every file.

The prompting behavior depends on the setting of the **file prompt** global configuration command. By default, the switch prompts for confirmation on destructive file operations. For more information about this command, see the *Cisco IOS Command Reference for Release 12.1*.

Examples This example shows how to remove the directory that contains the old software image after a successful download of a new image:

```
Switch# delete /force /recursive flash:/old-image
```

You can verify that the directory was removed by entering the **dir filesystem:** privileged EXEC command.

Related Commands	Command	Description
	archive download-sw	Downloads a new image to the switch and overwrites or keeps the existing image.

deny (ARP access-list configuration)

Use the **deny** Address Resolution Protocol (ARP) access-list configuration command to deny an ARP packet based on matches against the DHCP bindings. Use the **no** form of this command to remove the specified access control entry (ACE) from the access list.

```
deny [[request] ip {any | host sender-ip | sender-ip sender-ip-mask} mac {any | host sender-mac | sender-mac sender-mac-mask} | response ip {any | host sender-ip | sender-ip sender-ip-mask} [{any | host target-ip | target-ip target-ip-mask}] mac {any | host sender-mac | sender-mac sender-mac-mask} [{any | host target-mac | target-mac target-mac-mask}]] [log]
```

```
no deny [[request] ip {any | host sender-ip | sender-ip sender-ip-mask} mac {any | host sender-mac | sender-mac sender-mac-mask} | response ip {any | host sender-ip | sender-ip sender-ip-mask} [{any | host target-ip | target-ip target-ip-mask}] mac {any | host sender-mac | sender-mac sender-mac-mask} [{any | host target-mac | target-mac target-mac-mask}]] [log]
```

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description

request	(Optional) Define a match for the ARP request. When request is not specified, matching is performed against all ARP packets.
ip	Specify the sender IP address.
any	Deny any IP or MAC address.
host sender-ip	Deny the specified sender IP address.
<i>sender-ip sender-ip-mask</i>	Deny the specified range of sender IP addresses.
mac	Deny the sender MAC address.
host sender-mac	Deny a specific sender MAC address.
<i>sender-mac sender-mac-mask</i>	Deny the specified range of sender MAC addresses.
response ip	Define the IP address values for the ARP responses.
host target-ip	Deny the specified target IP address.
<i>target-ip target-ip-mask</i>	Deny the specified range of target IP addresses.
mac	Deny the MAC address values for the ARP responses.
host target-mac	Deny the specified target MAC address.
<i>target-mac target-mac-mask</i>	Deny the specified range of target MAC addresses.
log	(Optional) Log a packet when it matches the ACE.

Defaults

There are no default settings. However, at the end of the ARP access list, there is an implicit **deny ip any mac any** command.

Command Modes

ARP access-list configuration

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

You can add deny clauses to drop ARP packets based on matching criteria.

Examples

This example shows how to define an ARP access list and to deny both ARP requests and ARP responses from a host with an IP address of 1.1.1.1 and a MAC address of 0000.0000.abcd:

```
Switch(config)# arp access-list static-hosts
Switch(config-arp-nacl)# deny ip host 1.1.1.1 mac host 0000.0000.abcd
Switch(config-arp-nacl)# end
```

You can verify your settings by entering the **show arp access-list** privileged EXEC command.

Related Commands

Command	Description
arp access-list	Defines an ARP access control list (ACL).
ip arp inspection filter vlan	Permits ARP requests and responses from a host configured with a static IP address.
permit (ARP access-list configuration)	Permits an ARP packet based on matches against the DHCP bindings.
show arp access-list	Displays detailed information about ARP access lists.

deny (IPv6 access-list configuration)

Use the **deny** command in IPv6 access list configuration mode to set deny conditions for an IPv6 access list. Use the **no** form of this command to remove the deny conditions.

```
deny {protocol} {source-ipv6-prefix/prefix-length | any | host source-ipv6-address} [operator
[port-number]] {destination-ipv6-prefix/prefix-length | any | host destination-ipv6-address}
[operator [port-number]] [dscp value] [fragments] [log] [log-input] [sequence value]
[time-range name]
```

```
no deny {protocol} {source-ipv6-prefix/prefix-length | any | host source-ipv6-address} [operator
[port-number]] {destination-ipv6-prefix/prefix-length | any | host destination-ipv6-address}
[operator [port-number]] [dscp value] [fragments] [log] [log-input] [sequence value]
[time-range name]
```

Internet Control Message Protocol

```
deny icmp {source-ipv6-prefix/prefix-length | any | host source-ipv6-address} [operator
[port-number]] {destination-ipv6-prefix/prefix-length | any | host destination-ipv6-address}
[operator [port-number]] [icmp-type [icmp-code] | icmp-message] [dscp value] [log]
[log-input] [sequence value] [time-range name]
```

Transmission Control Protocol

```
deny tcp {source-ipv6-prefix/prefix-length | any | host source-ipv6-address} [operator
[port-number]] {destination-ipv6-prefix/prefix-length | any | host destination-ipv6-address}
[operator [port-number]] [ack] [dscp value] [established] [fin] [log] [log-input] [neq {port |
protocol}] [psh] [range {port | protocol}] [rst] [sequence value] [syn] [time-range name]
[urg]
```

User Datagram Protocol

```
deny udp {source-ipv6-prefix/prefix-length | any | host source-ipv6-address} [operator
[port-number]] {destination-ipv6-prefix/prefix-length | any | host destination-ipv6-address}
[operator [port-number]] [dscp value] [log] [log-input] [neq {port | protocol}] [range {port |
protocol}] [sequence value] [time-range name]
```



Note

This command is available only if the switch is running the advanced IP services image and you have configured a dual IPv4 and IPv6 Switch Database Management (SDM) template on the switch.

Syntax Description

<i>protocol</i>	Name or number of an Internet protocol. It can be one of the keywords ahp , esp , icmp , ipv6 , pcp , sctp , tcp , or udp , or an integer in the range from 0 to 255 representing an IPv6 protocol number.
<i>source-ipv6-prefix/prefix-length</i>	<p>The source IPv6 network or class of networks about which to set deny conditions.</p> <p>This argument must be in the form documented in RFC 2373 where the address is specified in hexadecimal using 16-bit values between colons.</p> <p>Note Although the CLI help shows a prefix-length range of /0 to /128, the switch supports IPv6 address-matching only for prefixes in the range of /0 to /64 and extended universal identifier (EUI)-based /128 prefixes for aggregatable global unicast and link-local host addresses.</p>
any	An abbreviation for the IPv6 prefix ::/0.
host <i>source-ipv6-address</i>	<p>The source IPv6 host address for which to set deny conditions.</p> <p>This <i>source-ipv6-address</i> argument must be in the form documented in RFC 2373 where the address is specified in hexadecimal using 16-bit values between colons.</p>
<i>operator</i> [<i>port-number</i>]	<p>(Optional) Specify an operator that compares the source or destination ports of the specified protocol. Operators are lt (less than), gt (greater than), eq (equal), neq (not equal), and range (inclusive range).</p> <p>If the operator is positioned after the <i>source-ipv6-prefix/prefix-length</i> argument, it must match the source port.</p> <p>If the operator is positioned after the <i>destination-ipv6-prefix/prefix-length</i> argument, it must match the destination port.</p> <p>The range operator requires two port numbers. All other operators require one port number.</p> <p>The optional <i>port-number</i> argument is a decimal number or the name of a TCP or a UDP port. A port number is a number from 0 to 65535. TCP port names can be used only when filtering TCP. UDP port names can be used only when filtering UDP.</p>
<i>destination-ipv6-prefix/prefix-length</i>	<p>The destination IPv6 network or class of networks for which to set deny conditions.</p> <p>This argument must be in the form documented in RFC 2373 where the address is specified in hexadecimal using 16-bit values between colons.</p> <p>Note Although the CLI help shows a prefix-length range of /0 to /128, the switch supports IPv6 address-matching only for prefixes in the range of /0 to /64 and EUI-based /128 prefixes for aggregatable global unicast and link-local host addresses.</p>
host <i>destination-ipv6-address</i>	<p>The destination IPv6 host address for which to set deny conditions.</p> <p>This <i>destination-ipv6-address</i> argument must be in the form documented in RFC 2373 where the address is specified in hexadecimal using 16-bit values between colons.</p>
dscp <i>value</i>	(Optional) Match a differentiated services code point value against the traffic class value in the Traffic Class field of each IPv6 packet header. The acceptable range is from 0 to 63.

fragments	(Optional) Match non-initial fragmented packets where the fragment extension header contains a non-zero fragment offset. The fragments keyword is an option only if the protocol is ipv6 and the <i>operator</i> [<i>port-number</i>] arguments are not specified.
log	(Optional) Send an informational logging message to the console about the packet that matches the entry. (The level of messages sent to the console is controlled by the logging console command.) The message includes the access list name and sequence number, whether the packet was denied; the protocol, whether it was TCP, UDP, ICMP, or a number; and, if appropriate, the source and destination addresses and source and destination port numbers. The message is generated for the first packet that matches, and then at 5-minute intervals, including the number of packets denied in the prior 5-minute interval. Note Logging is not supported for port ACLs.
log-input	(Optional) Provide the same function as the log keyword, except that the logging message also includes the receiving interface.
sequence value	(Optional) Specify the sequence number for the access list statement. The acceptable range is from 1 to 4294967295.
time-range name	(Optional) Specify the time range that applies to the deny statement. The name of the time range and its restrictions are specified by the time-range and absolute or periodic commands, respectively.
<i>icmp-type</i>	(Optional) Specify an ICMP message type for filtering ICMP packets. ICMP packets can be filtered by an ICMP message type. The type is a number from 0 to 255.
<i>icmp-code</i>	(Optional) Specify an ICMP message code for filtering ICMP packets. ICMP packets that are filtered by ICMP message type can also be filtered by the ICMP message code. The code is a number from 0 to 255.
<i>icmp-message</i>	(Optional) Specify an ICMP message name for filtering ICMP packets. ICMP packets can be filtered by an ICMP message name or an ICMP message type and code. The possible names are listed in the “Usage Guidelines” section.
ack	(Optional) Only for the TCP protocol: Acknowledgment (ACK) bit set.
established	(Optional) Only for the TCP protocol: Means the connection has been established. A match occurs if the TCP datagram has the ACK or RST bits set. The nonmatching case is that of the initial TCP datagram to form a connection.
fin	(Optional) Only for the TCP protocol: Fin bit set; no more data from sender.
neq { <i>port</i> <i>protocol</i> }	(Optional) Match only packets that are not on a given port number.
psh	(Optional) Only for the TCP protocol: Push function bit set.
range { <i>port</i> <i>protocol</i> }	(Optional) Match only packets in the range of port numbers.
rst	(Optional) Only for the TCP protocol: Reset bit set.
syn	(Optional) Only for the TCP protocol: Synchronize bit set.
urg	(Optional) Only for the TCP protocol: Urgent pointer bit set.

**Note**

Although visible in the command-line help strings, the **flow-label**, **routing**, and **undetermined-transport** keywords are not supported.

Defaults

No IPv6 access list is defined.

Command Modes

IPv6 access list configuration

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

The **deny** (IPv6 access-list configuration mode) command is similar to the **deny** (IPv4 access-list configuration mode) command, except that it is IPv6-specific.

Use the **deny** (IPv6) command after the **ipv6 access-list** command to enter IPv6 access list configuration mode and to define the conditions under which a packet passes the access list.

Specifying IPv6 for the *protocol* argument matches against the IPv6 header of the packet.

By default, the first statement in an access list is number 10, and the subsequent statements are numbered in increments of 10.

You can add **permit**, **deny**, or **remark** statements to an existing access list without re-entering the entire list. To add a new statement anywhere other than at the end of the list, create a new statement with an appropriate entry number that falls between two existing entry numbers to show where it belongs.

**Note**

Every IPv6 ACL has implicit **permit icmp any any nd-na**, **permit icmp any any nd-ns**, and **deny ipv6 any any** statements as its last match conditions. The two **permit** conditions allow ICMPv6 neighbor discovery. To disallow ICMPv6 neighbor discovery and to deny **icmp any any nd-na** or **icmp any any nd-ns**, there must be an explicit **deny** entry in the ACL. For the implicit **deny ipv6 any any** statement to take effect, an IPv6 ACL must contain at least one entry.

The IPv6 neighbor discovery process uses the IPv6 network layer service. Therefore, by default, IPv6 ACLs implicitly allow IPv6 neighbor discovery packets to be sent and received on an interface. In IPv4, the Address Resolution Protocol (ARP), which is equivalent to the IPv6 neighbor discovery process, uses a separate data-link layer protocol. Therefore, by default, IPv4 ACLs implicitly allow ARP packets to be sent and received on an interface.

Both the *source-ipv6-prefix/prefix-length* and *destination-ipv6-prefix/prefix-length* arguments are used for traffic filtering. (The source prefix filters traffic based upon the traffic source; the destination prefix filters traffic based upon the traffic destination.)

The switch supports only prefixes from /0 to /64 and EUI-based /128 prefixes for aggregatable global unicast and link-local host addresses.

The **fragments** keyword is an option only if the protocol is **ipv6** and the *operator [port-number]* arguments are not specified.

This is a list of ICMP message names:

beyond-scope	destination-unreachable
echo-reply	echo-request
header	hop-limit
mld-query	mld-reduction
mld-report	nd-na
nd-ns	next-header
no-admin	no-route
packet-too-big	parameter-option
parameter-problem	port-unreachable
reassembly-timeout	renum-command
renum-result	renum-seq-number
router-advertisement	router-renumbering
router-solicitation	time-exceeded
unreachable	

Examples

This example configures the IPv6 access list named CISCO and applies the access list to outbound traffic on a Layer 3 interface. The first deny entry in the list prevents all packets that have a destination TCP port number greater than 5000 from leaving the interface. The second deny entry in the list prevents all packets that have a source UDP port number less than 5000 from leaving the interface. The second deny also logs all matches to the console. The first permit entry in the list permits all ICMP packets to leave the interface. The second permit entry in the list permits all other traffic to leave the interface. The second permit entry is necessary because an implicit deny-all condition is at the end of each IPv6 access list.

```
Switch(config)# ipv6 access-list CISCO
Switch(config-ipv6-acl)# deny tcp any any gt 5000
Switch config-ipv6-acl)# deny ::/0 lt 5000 ::/0 log
Switch(config-ipv6-acl)# permit icmp any any
Switch(config-ipv6-acl)# permit any any
Switch(config-ipv6-acl)# exit
Switch(config)# interface gigabitethernet0/3
Switch(config-if)# no switchport
Switch(config-if)# ipv6 address 2001::/64 eui-64
Switch(config-if)# ipv6 traffic-filter CISCO out
```

Related Commands

Command	Description
ipv6 access-list	Defines an IPv6 access list and enters IPv6 access list configuration mode.
ipv6 traffic-filter	Filters incoming or outgoing IPv6 traffic on an interface.
permit (IPv6 access-list configuration)	Sets permit conditions for an IPv6 access list.
show ipv6 access-list	Displays the contents of all current IPv6 access lists.

deny (MAC access-list configuration)

Use the **deny** MAC access-list configuration command to prevent non-IP traffic from being forwarded if the conditions are matched. Use the **no** form of this command to remove a deny condition from the named MAC access list.

```
{deny | permit} {any | host src-MAC-addr | src-MAC-addr mask} {any | host dst-MAC-addr |
dst-MAC-addr mask} [type mask | aarp | amber | cos cos | dec-spanning | decnet-iv |
diagnostic | dsm | etype-6000 | etype-8042 | lat | lavc-sca | lsap lsap mask | mop-console |
mop-dump | msdos | mumps | netbios | vines-echo | vines-ip | xns-idp]
```

```
no {deny | permit} {any | host src-MAC-addr | src-MAC-addr mask} {any | host dst-MAC-addr |
dst-MAC-addr mask} [type mask | aarp | amber | cos cos | dec-spanning | decnet-iv |
diagnostic | dsm | etype-6000 | etype-8042 | lat | lavc-sca | lsap lsap mask | mop-console |
mop-dump | msdos | mumps | netbios | vines-echo | vines-ip | xns-idp]
```

Syntax Description

any	Keyword to specify to deny any source or destination MAC address.
host <i>src MAC-addr</i> <i>src-MAC-addr mask</i>	Define a host MAC address and optional subnet mask. If the source address for a packet matches the defined address, non-IP traffic from that address is denied.
host <i>dst-MAC-addr</i> <i>dst-MAC-addr mask</i>	Define a destination MAC address and optional subnet mask. If the destination address for a packet matches the defined address, non-IP traffic to that address is denied.
<i>type mask</i>	(Optional) Use the Ethertype number of a packet with Ethernet II or SNAP encapsulation to identify the protocol of the packet. The <i>type</i> is 0 to 65535, specified in hexadecimal. The <i>mask</i> is a mask of <i>don't care</i> bits applied to the Ethertype before testing for a match.
aarp	(Optional) Select Ethertype AppleTalk Address Resolution Protocol that maps a data-link address to a network address.
amber	(Optional) Select EtherType DEC-Amber.
cos <i>cos</i>	(Optional) Select a class of service (CoS) number from 0 to 7 to set priority. Filtering on CoS can be performed only in hardware. A warning message reminds the user if the cos option is configured.
dec-spanning	(Optional) Select EtherType Digital Equipment Corporation (DEC) spanning tree.
decnet-iv	(Optional) Select EtherType DECnet Phase IV protocol.
diagnostic	(Optional) Select EtherType DEC-Diagnostic.
dsm	(Optional) Select EtherType DEC-DSM.
etype-6000	(Optional) Select EtherType 0x6000.
etype-8042	(Optional) Select EtherType 0x8042.
lat	(Optional) Select EtherType DEC-LAT.
lavc-sca	(Optional) Select EtherType DEC-LAVC-SCA.

lsap <i>lsap-number mask</i>	(Optional) Use the LSAP number (0 to 65535) of a packet with 802.2 encapsulation to identify the protocol of the packet. <i>mask</i> is a mask of <i>don't care</i> bits applied to the LSAP number before testing for a match.
mop-console	(Optional) Select EtherType DEC-MOP Remote Console.
mop-dump	(Optional) Select EtherType DEC-MOP Dump.
msdos	(Optional) Select EtherType DEC-MSDOS.
mumps	(Optional) Select EtherType DEC-MUMPS.
netbios	(Optional) Select EtherType DEC- Network Basic Input/Output System (NETBIOS).
vines-echo	(Optional) Select EtherType Virtual Integrated Network Service (VINES) Echo from Banyan Systems.
vines-ip	(Optional) Select EtherType VINES IP.
xns-idp	(Optional) Select EtherType Xerox Network Systems (XNS) protocol suite (0 to 65535), an arbitrary Ethertype in decimal, hexadecimal, or octal.

**Note**

Though visible in the command-line help strings, **appletalk** is not supported as a matching condition.

To filter IPX traffic, you use the *type mask* or **lsap lsap mask** keywords, depending on the type of IPX encapsulation being used. Filter criteria for IPX encapsulation types as specified in Novell terminology and Cisco IOS terminology are listed in [Table 2-4](#).

Table 2-4 IPX Filtering Criteria

IPX Encapsulation Type		Filter Criterion
Cisco IOS Name	Novel Name	
arpa	Ethernet II	Ethertype 0x8137
snap	Ethernet-snap	Ethertype 0x8137
sap	Ethernet 802.2	LSAP 0xE0E0
novell-ether	Ethernet 802.3	LSAP 0xFFFF

Defaults

This command has no defaults. However; the default action for a MAC-named ACL is to deny.

Command Modes

MAC-access list configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You enter MAC-access list configuration mode by using the **mac access-list extended** global configuration command.

If you use the **host** keyword, you cannot enter an address mask; if you do not use the **host** keyword, you must enter an address mask.

When an access control entry (ACE) is added to an access control list, an implied **deny-any-any** condition exists at the end of the list. That is, if there are no matches, the packets are denied. However, before the first ACE is added, the list permits all packets.

For more information about named MAC extended access lists, see the software configuration guide for this release.

Examples

This example shows how to define the named MAC extended access list to deny NETBIOS traffic from any source to MAC address 00c0.00a0.03fa. Traffic matching this list is denied.

```
Switch(config-ext-macl)# deny any host 00c0.00a0.03fa netbios.
```

This example shows how to remove the deny condition from the named MAC extended access list:

```
Switch(config-ext-macl)# no deny any 00c0.00a0.03fa 0000.0000.0000 netbios.
```

This example denies all packets with Ethertype 0x4321:

```
Switch(config-ext-macl)# deny any any 0x4321 0
```

You can verify your settings by entering the **show access-lists** privileged EXEC command.

Related Commands

Command	Description
mac access-list extended	Creates an access list based on MAC addresses for non-IP traffic.
permit (MAC access-list configuration)	Permits non-IP traffic to be forwarded if conditions are matched.
show access-lists	Displays access control lists configured on a switch.

dot1x

Use the **dot1x** global configuration command to globally enable IEEE 802.1x. Use the **no** form of this command to return to the default setting.

```
dot1x {system-auth-control} | {guest-vlan supplicant}
```

```
no dot1x {system-auth-control} | {guest-vlan supplicant}
```

Syntax Description

system-auth-control	Enable IEEE 802.1x globally on the switch.
guest-vlan supplicant	Enable optional guest VLAN behavior globally on the switch.

Defaults

IEEE 802.1x is disabled, and the optional guest VLAN behavior is disabled.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	The guest-vlan supplicant keywords were added.

Usage Guidelines

You must enable authentication, authorization, and accounting (AAA) and specify the authentication method list before globally enabling IEEE 802.1x. A method list describes the sequence and authentication methods to be used to authenticate a user.

Before globally enabling IEEE 802.1x on a switch, remove the EtherChannel configuration from the interfaces on which IEEE 802.1x and EtherChannel are configured.

If you are using a device running the Cisco Access Control Server (ACS) application for IEEE 802.1x authentication with EAP-Transparent LAN Services (TLS) and with EAP-MD5, make sure that the device is running ACS Version 3.2.1 or later.

You can use the **guest-vlan supplicant** keywords to enable the optional IEEE 802.1x guest VLAN behavior globally on the switch. For more information, see the [dot1x guest-vlan](#) command.

Examples

This example shows how to globally enable IEEE 802.1x on a switch:

```
Switch(config)# dot1x system-auth-control
```

This example shows how to globally enable the optional guest VLAN behavior on a switch:

```
Switch(config)# dot1x guest-vlan supplicant
```

You can verify your settings by entering the **show dot1x [interface interface-id]** privileged EXEC command.

Related Commands

Command	Description
dot1x guest-vlan	Enables and specifies an active VLAN as an IEEE 802.1x guest VLAN.
dot1x port-control	Enables manual control of the authorization state of the port.
show dot1x [interface interface-id]	Displays IEEE 802.1x status for the specified port.

dot1x auth-fail max-attempts

Use the **dot1x auth-fail max-attempts** interface configuration command to configure the maximum allowable authentication attempts before a port is moved to the restricted VLAN. To return to the default setting, use the **no** form of this command.

dot1x auth-fail max-attempts *max-attempts*

no dot1x auth-fail max-attempts

Syntax Description	<i>max-attempts</i>	Specify a maximum number of authentication attempts allowed before a port is moved to the restricted VLAN. The range is 1 to 3, the default value is 3.
Defaults	The default value is 3 attempts.	
Command Modes	Interface configuration	
Command History	Release	Modification
	12.2(25)SED	This command was introduced.
Usage Guidelines	If you reconfigure the maximum number of authentication attempts allowed by the VLAN, the change takes effect after the re-authentication timer expires.	

Examples

This example shows how to set 2 as the maximum number of authentication attempts allowed before the port is moved to the restricted VLAN on port 3:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# interface gigabitethernet0/3
Switch(config-if)# dot1x auth-fail max-attempts 2
Switch(config-if)# end
Switch(config)# end
Switch#
```

You can verify your settings by entering the **show dot1x [interface interface-id]** privileged EXEC command.

Related Commands

Command	Description
dot1x auth-fail vlan [<i>vlan id</i>]	Enables the optional restricted VLAN feature.
dot1x max-reauth-req [<i>count</i>]	Sets the maximum number of times that the switch restarts the authentication process before a port changes to the unauthorized state.
show dot1x [interface <i>interface-id</i>]	Displays IEEE 802.1x status for the specified port.

dot1x auth-fail vlan

Use the **dot1x auth-fail vlan** interface configuration command to enable the restricted VLAN on a port. To return to the default setting, use the **no** form of this command.

```
dot1x auth-fail vlan vlan-id
```

```
no dot1x auth-fail vlan vlan-id
```

Syntax Description	<i>vlan-id</i>	Specify a VLAN in the range of 1 to 4094.
--------------------	----------------	---

Defaults	No restricted VLAN is configured.
----------	-----------------------------------

Command Modes	Interface configuration
---------------	-------------------------

Command History	Release	Modification
	12.2(25)SED	This command was introduced.

Usage Guidelines	You can configure a restricted VLAN on ports configured as follows:
------------------	---

- single-host (default) mode
- auto mode for authorization

You should enable re-authentication. The ports in restricted VLANs do not receive re-authentication requests if it is disabled. To start the re-authentication process, the restricted VLAN must receive a link-down event or an Extensible Authentication Protocol (EAP) logoff event from the port. If a host is connected through a hub, the port might never receive a link-down event when that host is disconnected, and, as a result, might not detect any new hosts until the next re-authentication attempt occurs.

If the supplicant fails authentication, the port is moved to a restricted VLAN, and an EAP *success* message is sent to the supplicant. Because the supplicant is not notified of the actual authentication failure, there might be confusion about this restricted network access. An EAP success message is sent for these reasons:

- If the EAP success message is not sent, the supplicant tries to authenticate every 60 seconds (the default) by sending an EAP-start message.
- Some hosts (for example, devices running Windows XP) cannot implement DHCP until they receive an EAP success message.

A supplicant might cache an incorrect username and password combination after receiving an EAP success message from the authenticator and re-use that information in every re-authentication. Until the supplicant sends the correct username and password combination, the port remains in the restricted VLAN.

Internal VLANs used for Layer 3 ports cannot be configured as restricted VLANs.

You cannot configure a VLAN to be both a restricted VLAN and a voice VLAN. If you do this, a syslog message is generated.

When a restricted VLAN port is moved to an unauthorized state, the authentication process restarts. If the supplicant fails the authentication process again, the authenticator waits in the held state. After the supplicant has correctly re-authenticated, all IEEE 802.1x ports are reinitialized and treated as normal IEEE 802.1x ports.

When you reconfigure a restricted VLAN as a different VLAN, any ports in the restricted VLAN are also moved, and the ports stay in their currently authorized state.

When you shut down or remove a restricted VLAN from the VLAN database, any ports in the restricted VLAN are immediately moved to an unauthorized state, and the authentication process restarts. The authenticator does not wait in a held state because the restricted VLAN configuration still exists. While the restricted VLAN is inactive, all authentication attempts are counted so that when the restricted VLAN becomes active, the port is immediately placed in the restricted VLAN.

The restricted VLAN is supported only in single-host mode (the default port mode). For this reason, when a port is placed in a restricted VLAN, the supplicant's MAC address is added to the MAC address table, and any other MAC address that appears on the port is treated as a security violation.

Examples

This example shows how to configure a restricted VLAN on port 1:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# dot1x auth-fail vlan 40
Switch(config-if)# end
Switch(config)# end
Switch#
```

You can verify your configuration by entering the **show dot1x [interface interface-id]** privileged EXEC command.

Related Commands

Command	Description
dot1x auth-fail max-attempts [<i>max-attempts</i>]	Configures the number of authentication attempts allowed before assigning a supplicant to the restricted VLAN.
show dot1x [interface interface-id]	Displays IEEE 802.1x status for the specified port.

dot1x control-direction

Use the **dot1x control-direction** interface configuration command to change the port control to unidirectional or bidirectional control. Use the **no** form of this command to return to the default setting.

dot1x control-direction {in | both}

no dot1x control-direction {in | both}

Syntax Description

in	Enable unidirectional control on port.
both	Enable bidirectional control on port.

Defaults

The port is set to bidirectional mode.

Command Modes

Interface configuration

Command History

Release	Modification
12.2(25)SEC	This command was introduced.

Usage Guidelines

Using the keyword **both** or using the **no** form of this command are the same command.

The keyword **both** and the **no** form of this command change the port to its bidirectional default setting.

Examples

This example shows how to enable unidirectional control:

```
Switch(config-if)# dot1x control-direction in
```

These examples show how to enable bidirectional control:

```
Switch(config-if)# dot1x control-direction both
Switch(config-if)# no dot1x control-direction
```

You can verify your settings by entering the **show dot1x all** privileged EXEC command.

The **show dot1x all** privileged EXEC command output is the same for all switches except for the port names and the state of the port. If a host is attached to the port but is not yet authenticated, a display similar to this appears:

```
Supplicant MAC 0002.b39a.9275
AuthSM State = CONNECTING
BendSM State = IDLE
PortStatus = UNAUTHORIZED
```

If you enter the **dot1x control-direction in** interface configuration command to enable unidirectional control, this appears in the **show dot1x all** command output:

```
ControlDirection = In
```

If you enter the **dot1x control-direction in** interface configuration command and the port cannot support this mode due to a configuration conflict, this appears in the **show dot1x all** command output:

```
ControlDirection = In (Disabled due to port settings)
```

Related Commands

Command	Description
show dot1x all [interface <i>interface-id</i>]	Displays control-direction port setting status for the specified interface.

dot1x critical

Use the **dot1x critical** interface configuration command to enable the inaccessible authentication bypass feature. To disable the feature, use the **no** form of this command.

dot1x critical

no dot1x critical

Syntax Description This command has no arguments or keywords.

Defaults The inaccessible authentication bypass feature is disabled.

Command Modes Interface configuration

Command History	Release	Modification
	12.2(25)SED	This command was introduced.

Usage Guidelines This feature is supported only on IEEE 802.1x ports in single-host mode. If you try to configure the port as a critical port or if you change the host mode to multiple-hosts mode, this message appears:

```
%Command rejected: Critical ports are only allowed in single-host mode
```

If the client is running Windows XP and the critical port to which the client is connected is in the critical-authentication state, Windows XP might report that the interface is not authenticated.

If the Windows XP client is configured for DHCP and has an IP address from the DHCP server, receiving an EAP-Success message on a critical port might not re-initiate the DHCP configuration process.

You can configure the inaccessible authentication bypass feature and the restricted VLAN on an IEEE 802.1x port. If the switch tries to re-authenticate a critical port in a restricted VLAN and all the RADIUS servers are unavailable, the switch changes the port state to the critical authentication state, and it remains in the restricted VLAN.

You can configure the inaccessible bypass feature and port security on the same switch port.

Examples

This example shows how to enable the inaccessible authentication bypass feature on port 1:

```
Switch# configure terminal  
Enter configuration commands, one per line. End with CNTL/Z.  
Switch(config)# interface gigabitethernet0/1  
Switch(config-if)# dot1x critical  
Switch(config-if)# end  
Switch(config)# end  
Switch#
```

You can verify your configuration by entering the **show dot1x [interface interface-id]** privileged EXEC command.

Related Commands

Command	Description
show dot1x [interface interface-id]	Displays IEEE 802.1x status for the specified port.

dot1x default

Use the **dot1x default** interface configuration command to reset the IEEE 802.1x parameters to their default values.

dot1x default

Syntax Description This command has no arguments or keywords.

Defaults

These are the default values:

- The per-port IEEE 802.1x protocol enable state is disabled (force-authorized).
- The number of seconds between re-authentication attempts is 3600 seconds.
- The periodic re-authentication is disabled.
- The quiet period is 60 seconds.
- The retransmission time is 30 seconds.
- The maximum retransmission number is 2 times.
- The host mode is single host.
- The client timeout period is 30 seconds.
- The authentication server timeout period is 30 seconds.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Examples

This example shows how to reset the IEEE 802.1x parameters on a port:

```
Switch(config-if)# dot1x default
```

You can verify your settings by entering the **show dot1x [interface interface-id]** privileged EXEC command.

Related Commands

Command	Description
show dot1x [interface interface-id]	Displays IEEE 802.1x status for the specified port.

dot1x guest-vlan

Use the **dot1x guest-vlan** interface configuration command to specify an active VLAN as an IEEE 802.1x guest VLAN. Use the **no** form of this command to return to the default setting.

```
dot1x guest-vlan vlan-id
```

```
no dot1x guest-vlan
```

Syntax Description

<i>vlan-id</i>	Specify an active VLAN as an IEEE 802.1x guest VLAN. The range is 1 to 4094.
----------------	--

Defaults

No guest VLAN is configured.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	This command was modified to change the default guest VLAN behavior.
12.2(25)SEC	The usage guidelines were modified.

Usage Guidelines

You can configure a guest VLAN on one of these switch ports:

- A static-access port that belongs to a non-private VLAN.
- A private-VLAN port that belongs to a secondary private VLAN. All the hosts connected to the switch port are assigned to private VLANs, regardless whether the posture validation was successful. The switch determines the primary private VLAN by using the primary- and secondary-private-VLAN associations on the switch.

For each IEEE 802.1x port on the switch, you can configure a guest VLAN to provide limited services to clients (a device or workstation connected to the switch) not currently running IEEE 802.1x. These users might be upgrading their systems for IEEE 802.1x authentication, and some hosts, such as Windows 98 systems, might not be IEEE 802.1x-capable.

When you enable a guest VLAN on an IEEE 802.1x port, the switch assigns clients to a guest VLAN when it does not receive a response to its Extensible Authentication Protocol over LAN (EAPOL) request/identity frame or when EAPOL packets are not sent by the client.

Before Cisco IOS Release 12.2(25)SE, the switch did not maintain the EAPOL packet history and allowed clients that failed authentication access to the guest VLAN, regardless of whether EAPOL packets had been detected on the interface. You can use the **dot1x guest-vlan supplicant** global configuration command to enable this optional behavior.

With Cisco IOS Release 12.2(25)SE and later, the switch maintains the EAPOL packet history. If another EAPOL packet is detected on the interface during the lifetime of the link, the guest VLAN feature is disabled. If the port is already in the guest VLAN state, the port is returned to the unauthorized state, and authentication is restarted. The EAPOL history is reset upon loss of link.

Entering the **dot1x guest-vlan supplicant** global configuration command disables this behavior.

Any number of non-IEEE 802.1x-capable clients are allowed access when the switch port is moved to the guest VLAN. If an IEEE 802.1x-capable client joins the same port on which the guest VLAN is configured, the port is put into the unauthorized state in the user-configured access VLAN, and authentication is restarted.

Guest VLANs are supported on IEEE 802.1x ports in single-host or multiple-hosts mode.

You can configure any active VLAN except an Remote Switched Port Analyzer (RSPAN) VLAN, a primary private VLAN, or a voice VLAN as an IEEE 802.1x guest VLAN. The guest VLAN feature is not supported on internal VLANs (routed ports) or trunk ports; it is supported only on access ports.

After you configure a guest VLAN for an IEEE 802.1x port to which a DHCP client is connected, you might need to get a host IP address from a DHCP server. You can change the settings for restarting the IEEE 802.1x authentication process on the switch before the DHCP process on the client times out and tries to get a host IP address from the DHCP server. Decrease the settings for the IEEE 802.1x authentication process (**dot1x timeout quiet-period** and **dot1x timeout tx-period** interface configuration commands). The amount to decrease the settings depends on the connected IEEE 802.1x client type.

Examples

This example shows how to specify VLAN 5 as an IEEE 802.1x guest VLAN:

```
Switch(config-if)# dot1x guest-vlan 5
```

This example shows how to set 3 as the quiet time on the switch, to set 15 as the number of seconds that the switch waits for a response to an EAP-request/identity frame from the client before resending the request, and to enable VLAN 2 as an IEEE 802.1x guest VLAN when an IEEE 802.1x port is connected to a DHCP client:

```
Switch(config-if)# dot1x timeout quiet-period 3
Switch(config-if)# dot1x timeout tx-period 15
Switch(config-if)# dot1x guest-vlan 2
```

This example shows how to enable the optional guest VLAN behavior and to specify VLAN 5 as an IEEE 802.1x guest VLAN:

```
Switch(config)# dot1x guest-vlan supplicant
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# dot1x guest-vlan 5
```

You can verify your settings by entering the **show dot1x [interface interface-id]** privileged EXEC command.

Related Commands

Command	Description
dot1x	Enables the optional guest VLAN supplicant feature.
show dot1x [interface interface-id]	Displays IEEE 802.1x status for the specified port.

dot1x host-mode

Use the **dot1x host-mode** interface configuration command to allow a single host (client) or multiple hosts on an IEEE 802.1x-authorized port that has the **dot1x port-control** interface configuration command set to **auto**. Use the **no** form of this command to return to the default setting.

```
dot1x host-mode {multi-host | single-host}
```

```
no dot1x host-mode [multi-host | single-host]
```

Syntax Description

multi-host	Enable multiple-hosts mode on the switch.
single-host	Enable single-host mode on the switch.

Defaults

The default is single-host mode.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Use this command to limit an IEEE 802.1x-enabled port to a single client or to attach multiple clients to an IEEE 802.1x-enabled port. In multiple-hosts mode, only one of the attached hosts needs to be successfully authorized for all hosts to be granted network access. If the port becomes unauthorized (re-authentication fails or an Extensible Authentication Protocol over LAN [EAPOL]-logoff message is received), all attached clients are denied access to the network.

Before entering this command, make sure that the **dot1x port-control** interface configuration command is set to **auto** for the specified port.

Examples

This example shows how to enable IEEE 802.1x globally, to enable IEEE 802.1x on a port, and to enable multiple-hosts mode:

```
Switch(config)# dot1x system-auth-control
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# dot1x port-control auto
Switch(config-if)# dot1x host-mode multi-host
```

You can verify your settings by entering the **show dot1x [interface interface-id]** privileged EXEC command.

■ dot1x host-mode

Related Commands

Command	Description
<code>show dot1x [interface <i>interface-id</i>]</code>	Displays IEEE 802.1x status for the specified port.

dot1x initialize

Use the **dot1x initialize** privileged EXEC command to manually return the specified IEEE 802.1x-enabled port to an unauthorized state before initiating a new authentication session on the port.

dot1x initialize interface *interface-id*

Syntax Description	interface <i>interface-id</i>	Port to be initialized.
--------------------	-------------------------------	-------------------------

Defaults	There is no default setting.
----------	------------------------------

Command Modes	Privileged EXEC
---------------	-----------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	Use this command to initialize the IEEE 802.1x state machines and to set up a fresh environment for authentication. After you enter this command, the port status becomes unauthorized. There is not a no form of this command.
------------------	---

Examples	This example shows how to manually initialize a port: Switch# dot1x initialize interface gigabitethernet0/2
----------	---

You can verify the unauthorized port status by entering the **show dot1x [interface *interface-id*]** privileged EXEC command.

Related Commands	Command	Description
	show dot1x [interface <i>interface-id</i>]	Displays IEEE 802.1x status for the specified port.

dot1x max-reauth-req

Use the **dot1x max-reauth-req** interface configuration command to set the maximum number of times that the switch restarts the authentication process before a port changes to the unauthorized state. Use the **no** form of this command to return to the default setting.

dot1x max-reauth-req *count*

no dot1x max-reauth-req

Syntax Description	<i>count</i>	Number of times that the switch restarts the authentication process before the port changes to the unauthorized state. The range is 0 to 10.
---------------------------	--------------	--

Defaults	The default is 2 times.
-----------------	-------------------------

Command Modes	Interface configuration
----------------------	-------------------------

Command History	Release	Modification
	12.2(18)SE	This command was introduced.
12.2(25)SEC	The <i>count</i> range was changed.	

Usage Guidelines	You should change the default value of this command only to adjust for unusual circumstances such as unreliable links or specific behavioral problems with certain clients and authentication servers.
-------------------------	--

Examples	This example shows how to set 4 as the number of times that the switch restarts the authentication process before the port changes to the unauthorized state:
-----------------	---

```
Switch(config-if)# dot1x max-reauth-req 4
```

You can verify your settings by entering the **show dot1x [interface *interface-id*]** privileged EXEC command.

Related Commands	Command	Description
	dot1x max-req	Sets the maximum number of times that the switch forwards an EAP frame (assuming that no response is received) to the authentication server before restarting the authentication process .
	dot1x timeout tx-period	Sets the number of seconds that the switch waits for a response to an EAP-request/identity frame from the client before resending the request.
	show dot1x [interface <i>interface-id</i>]	Displays IEEE 802.1x status for the specified port.

dot1x max-req

Use the **dot1x max-req** interface configuration command to set the maximum number of times that the switch sends an Extensible Authentication Protocol (EAP) frame from the authentication server (assuming that no response is received) to the client before restarting the authentication process. Use the **no** form of this command to return to the default setting.

dot1x max-req *count*

no dot1x max-req

Syntax Description	<i>count</i>	Number of times that the switch resends an EAP frame from the authentication server before restarting the authentication process. The range is 1 to 10.
---------------------------	--------------	---

Defaults	The default is 2 times.
-----------------	-------------------------

Command Modes	Interface configuration
----------------------	-------------------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	You should change the default value of this command only to adjust for unusual circumstances such as unreliable links or specific behavioral problems with certain clients and authentication servers.
-------------------------	--

Examples	This example shows how to set 5 as the number of times that the switch sends an EAP frame from the authentication server to the client before restarting the authentication process:
-----------------	--

```
Switch(config-if)# dot1x max-req 5
```

You can verify your settings by entering the **show dot1x [interface interface-id]** privileged EXEC command.

Related Commands	Command	Description
	dot1x timeout tx-period	Sets the number of seconds that the switch waits for a response to an EAP-request/identity frame from the client before resending the request.
	show dot1x [interface interface-id]	Displays IEEE 802.1x status for the specified port.

dot1x multiple-hosts

This is an obsolete command.

In past releases, the **dot1x multiple-hosts** interface configuration command was used to allow multiple hosts (clients) on an IEEE 802.1x-authorized port.

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Related Commands	Command	Description
	dot1x host-mode	Sets the IEEE 802.1x host mode on a port.
	show dot1x	Displays IEEE 802.1x statistics, administrative status, and operational status for the switch or for the specified port.

dot1x port-control

Use the **dot1x port-control** interface configuration command to enable manual control of the authorization state of the port. Use the **no** form of this command to return to the default setting.

dot1x port-control { auto | force-authorized | force-unauthorized }

no dot1x port-control

Syntax Description

auto	Enable IEEE 802.1x authentication on the port and cause the port to change to the authorized or unauthorized state based on the IEEE 802.1x authentication exchange between the switch and the client.
force-authorized	Disable IEEE 802.1x authentication on the port and cause the port to transition to the authorized state without an authentication exchange. The port sends and receives normal traffic without IEEE 802.1x-based authentication of the client.
force-unauthorized	Deny all access through this port by forcing the port to change to the unauthorized state, ignoring all attempts by the client to authenticate. The switch cannot provide authentication services to the client through the port.

Defaults

The default is force-authorized.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You must globally enable IEEE 802.1x on the switch by using the **dot1x system-auth-control** global configuration command before enabling IEEE 802.1x on a specific port.

The IEEE 802.1x protocol is supported on Layer 2 static-access ports, voice VLAN ports, and Layer 3 routed ports.

You can use the **auto** keyword only if the port is not configured as one of these:

- Trunk port—If you try to enable IEEE 802.1x on a trunk port, an error message appears, and IEEE 802.1x is not enabled. If you try to change the mode of an IEEE 802.1x-enabled port to trunk, an error message appears, and the port mode is not changed.
- Dynamic ports—A port in dynamic mode can negotiate with its neighbor to become a trunk port. If you try to enable IEEE 802.1x on a dynamic port, an error message appears, and IEEE 802.1x is not enabled. If you try to change the mode of an IEEE 802.1x-enabled port to dynamic, an error message appears, and the port mode is not changed.
- Dynamic-access ports—If you try to enable IEEE 802.1x on a dynamic-access (VLAN Query Protocol [VQP]) port, an error message appears, and IEEE 802.1x is not enabled. If you try to change an IEEE 802.1x-enabled port to dynamic VLAN assignment, an error message appears, and the VLAN configuration is not changed.

- EtherChannel port—Do not configure a port that is an active or a not-yet-active member of an EtherChannel as an IEEE 802.1x port. If you try to enable IEEE 802.1x on an EtherChannel port, an error message appears, and IEEE 802.1x is not enabled.



Note In software releases earlier than Cisco IOS Release 12.2(20)SE, if IEEE 802.1x is enabled on a not-yet active port of an EtherChannel, the port does not join the EtherChannel.

- Switched Port Analyzer (SPAN) and Remote SPAN (RSPAN) destination ports—You can enable IEEE 802.1x on a port that is a SPAN or RSPAN destination port. However, IEEE 802.1x is disabled until the port is removed as a SPAN or RSPAN destination. You can enable IEEE 802.1x on a SPAN or RSPAN source port.

To globally disable IEEE 802.1x on the switch, use the **no dot1x system-auth-control** global configuration command. To disable IEEE 802.1x on a specific port, use the **no dot1x port-control** interface configuration command.

Examples

This example shows how to enable IEEE 802.1x on a port:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# dot1x port-control auto
```

You can verify your settings by entering the **show dot1x [interface interface-id]** privileged EXEC command.

Related Commands

Command	Description
show dot1x [interface interface-id]	Displays IEEE 802.1x status for the specified port.

dot1x re-authenticate

Use the **dot1x re-authenticate** privileged EXEC command to manually initiate a re-authentication of the specified IEEE 802.1x-enabled port.

dot1x re-authenticate interface *interface-id*

Syntax Description	interface <i>interface-id</i> Module and port number of the interface to re-authenticate.
---------------------------	--

Defaults	There is no default setting.
-----------------	------------------------------

Command Modes	Privileged EXEC
----------------------	-----------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	You can use this command to re-authenticate a client without waiting for the configured number of seconds between re-authentication attempts (re-authperiod) and automatic re-authentication.
-------------------------	---

Examples	This example shows how to manually re-authenticate the device connected to a port:
-----------------	--

```
Switch# dot1x re-authenticate interface gigabitethernet0/1
```

Related Commands	Command	Description
	dot1x reauthentication	Enables periodic re-authentication of the client.
dot1x timeout reauth-period	Sets the number of seconds between re-authentication attempts.	

dot1x re-authentication

This is an obsolete command.

In past releases, the **dot1x re-authentication** global configuration command was used to set the amount of time between periodic re-authentication attempts.

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Related Commands	Command	Description
	dot1x reauthentication	Sets the number of seconds between re-authentication attempts.
	show dot1x	Displays IEEE 802.1x statistics, administrative status, and operational status for the switch or for the specified port.

dot1x reauthentication

Use the **dot1x reauthentication** interface configuration command to enable periodic re-authentication of the client. Use the **no** form of this command to return to the default setting.

dot1x reauthentication

no dot1x reauthentication

Syntax Description This command has no arguments or keywords.

Defaults Periodic re-authentication is disabled.

Command Modes Interface configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You configure the amount of time between periodic re-authentication attempts by using the **dot1x timeout reauth-period** interface configuration command.

Examples This example shows how to disable periodic re-authentication of the client:

```
Switch(config-if)# no dot1x reauthentication
```

This example shows how to enable periodic re-authentication and to set the number of seconds between re-authentication attempts to 4000 seconds:

```
Switch(config-if)# dot1x reauthentication
Switch(config-if)# dot1x timeout reauth-period 4000
```

You can verify your settings by entering the **show dot1x [interface interface-id]** privileged EXEC command.

Related Commands	Command	Description
	dot1x re-authenticate	Manually initiates a re-authentication of all IEEE 802.1x-enabled ports.
	dot1x timeout reauth-period	Sets the number of seconds between re-authentication attempts.
	show dot1x [interface interface-id]	Displays IEEE 802.1x status for the specified port.

dot1x timeout

Use the **dot1x timeout** interface configuration command to set IEEE 802.1x timers. Use the **no** form of this command to return to the default setting.

```
dot1x timeout { quiet-period seconds | reauth-period { seconds | server } | server-timeout seconds
  | supp-timeout seconds | tx-period seconds }
```

```
no dot1x timeout { quiet-period | reauth-period | server-timeout | supp-timeout | tx-period }
```

Syntax Description

quiet-period <i>seconds</i>	Number of seconds that the switch remains in the quiet state following a failed authentication exchange with the client. The range is 1 to 65535.
reauth-period { <i>seconds</i> server }	Set the number of seconds between re-authentication attempts. The keywords have these meanings: <ul style="list-style-type: none"> <i>seconds</i>—Sets the number of seconds from 1 to 65535; the default is 3600 seconds. server—Sets the number of seconds as the value of the Session-Timeout RADIUS attribute (Attribute[27]).
server-timeout <i>seconds</i>	Number of seconds that the switch waits for the retransmission of packets by the switch to the authentication server. The range is 30 to 65535.
supp-timeout <i>seconds</i>	Number of seconds that the switch waits for the retransmission of packets by the switch to the IEEE 802.1x client. The range is 30 to 65535.
tx-period <i>seconds</i>	Number of seconds that the switch waits for a response to an EAP-request/identity frame from the client before retransmitting the request. The range is 5 to 65535.

Defaults

These are the default settings:

reauth-period is 3600 seconds.

quiet-period is 60 seconds.

tx-period is 5 seconds.

supp-timeout is 30 seconds.

server-timeout is 30 seconds.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(20)SE	The ranges for the server-timeout , supp-timeout , and tx-period keywords were changed.
12.2(25)SEC	The range for tx-period keyword was changed, and the reauth-period server keywords were added.

Usage Guidelines

You should change the default value of this command only to adjust for unusual circumstances such as unreliable links or specific behavioral problems with certain clients and authentication servers.

The **dot1x timeout reauth-period** interface configuration command affects the behavior of the switch only if you have enabled periodic re-authentication by using the **dot1x reauthentication** interface configuration command.

During the quiet period, the switch does not accept or initiate any authentication requests. If you want to provide a faster response time to the user, enter a number smaller than the default.

Examples

This example shows how to enable periodic re-authentication and to set 4000 as the number of seconds between re-authentication attempts:

```
Switch(config-if)# dot1x reauthentication
Switch(config-if)# dot1x timeout reauth-period 4000
```

This example shows how to enable periodic re-authentication and to specify the value of the Session-Timeout RADIUS attribute as the number of seconds between re-authentication attempts:

```
Switch(config-if)# dot1x reauthentication
Switch(config-if)# dot1x timeout reauth-period server
```

This example shows how to set 30 seconds as the quiet time on the switch:

```
Switch(config-if)# dot1x timeout quiet-period 30
```

This example shows how to set 45 seconds as the switch-to-authentication server retransmission time:

```
Switch(config)# dot1x timeout server-timeout 45
```

This example shows how to set 45 seconds as the switch-to-client retransmission time for the EAP request frame:

```
Switch(config-if)# dot1x timeout supp-timeout 45
```

This example shows how to set 60 as the number of seconds to wait for a response to an EAP-request/identity frame from the client before re-transmitting the request:

```
Switch(config-if)# dot1x timeout tx-period 60
```

You can verify your settings by entering the **show dot1x** privileged EXEC command.

Related Commands

Command	Description
dot1x max-req	Sets the maximum number of times that the switch sends an EAP-request/identity frame before restarting the authentication process.
dot1x reauthentication	Enables periodic re-authentication of the client.
show dot1x	Displays IEEE 802.1x status for all ports.

duplex

Use the **duplex** interface configuration command to specify the duplex mode of operation for a port. Use the **no** form of this command to return the port to its default value.

duplex { **auto** | **full** | **half** }

no duplex

Syntax Description	Command	Description
	auto	Enable automatic duplex configuration; port automatically detects whether it should run in full- or half-duplex mode, depending on the attached device mode.
	full	Enable full-duplex mode.
	half	Enable half-duplex mode (only for interfaces operating at 10 or 100 Mbps). You cannot configure half-duplex mode for interfaces operating at 1000 or 10,000 Mbps.

Defaults

The default is **auto** for Fast Ethernet and Gigabit Ethernet ports.

The default is **full** for 100BASE-*x* (where *x* is -BX, -FX, -FX-FE, and -LX) SFP modules.

Duplex options are not supported on the 1000BASE-*x* (where *x* is -BX, -CWDM, -LX, -SX, and -ZX) SFP modules.

For information about which SFP modules are supported on your switch, see the product release notes.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.1(20)SE	Support for the half keyword was added for the 100BASE-FX SFP module.

Usage Guidelines

For Fast Ethernet ports, setting the port to **auto** has the same effect as specifying **half** if the attached device does not autonegotiate the duplex parameter.

For Gigabit Ethernet ports, setting the port to **auto** has the same effect as specifying **full** if the attached device does not autonegotiate the duplex parameter.



Note Half-duplex mode is supported on Gigabit Ethernet interfaces if the duplex mode is **auto** and the connected device is operating at half duplex. However, you cannot configure these interfaces to operate in half-duplex mode.

Certain ports can be configured to be either full duplex or half duplex. Applicability of this command depends on the device to which the switch is attached.

If both ends of the line support autonegotiation, we highly recommend using the default autonegotiation settings. If one interface supports autonegotiation and the other end does not, configure duplex and speed on both interfaces; do use the **auto** setting on the supported side.

If the speed is set to **auto**, the switch negotiates with the device at the other end of the link for the speed setting and then forces the speed setting to the negotiated value. The duplex setting remains as configured on each end of the link, which could result in a duplex setting mismatch.

Beginning with Cisco IOS Release 12.2(20)SE1, you can configure the duplex setting when the speed is set to **auto**.



Caution

Changing the interface speed and duplex mode configuration might shut down and re-enable the interface during the reconfiguration.

For guidelines on setting the switch speed and duplex parameters, see the “Configuring Interface Characteristics” chapter in the software configuration guide for this release.

Examples

This example shows how to configure an interface for full-duplex operation:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# duplex full
```

You can verify your setting by entering the **show interfaces** privileged EXEC command.

Related Commands

Command	Description
show interfaces	Displays the interface settings on the switch.
speed	Sets the speed on a 10/100 or 10/100/1000 Mbps interface.

errdisable detect cause

Use the **errdisable detect cause** global configuration command to enable error-disabled detection for a specific cause or all causes. Use the **no** form of this command to disable the error-disabled detection feature.

```
errdisable detect cause {all | arp-inspection | dhcp-rate-limit | dtp-flap | gbic-invalid |
l2ptguard | link-flap | loopback | pagp-flap}
```

```
no errdisable detect cause {all | arp-inspection | dhcp-rate-limit | dtp-flap | gbic-invalid |
l2ptguard | link-flap | pagp-flap}
```

Syntax Description

all	Enable error detection for all error-disabled causes.
arp-inspection	Enable error detection for dynamic Address Resolution Protocol (ARP) inspection.
dhcp-rate-limit	Enable error detection for DHCP snooping.
dtp-flap	Enable error detection for the Dynamic Trunking Protocol (DTP) flapping.
gbic-invalid	Enable error detection for an invalid Gigabit Interface Converter (GBIC) module. Note On the Catalyst 3560 switch, this error refers to an invalid small form-factor pluggable (SFP) module.
l2ptguard	Enable error detection for a Layer 2 protocol-tunnel error-disabled cause.
link-flap	Enable error detection for link-state flapping.
loopback	Enable error detection for detected loopbacks.
pagp-flap	Enable error detection for the Port Aggregation Protocol (PAgP) flap error-disabled cause.

Command Default

Detection is enabled for all causes.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(20)SE	The arp-inspection keyword was added.
12.2(25)SE	The l2ptguard keyword was added.

Usage Guidelines

A cause (**all**, **dhcp-rate-limit**, and so forth) is the reason why the error-disabled state occurred. When a cause is detected on an interface, the interface is placed in an error-disabled state, an operational state that is similar to a link-down state.

If you set a recovery mechanism for the cause by entering the **errdisable recovery** global configuration command for the cause, the interface is brought out of the error-disabled state and allowed to retry the operation when all causes have timed out. If you do not set a recovery mechanism, you must enter the **shutdown** and then the **no shutdown** commands to manually recover an interface from the error-disabled state.

Examples

This example shows how to enable error-disabled detection for the link-flap error-disabled cause:

```
Switch(config)# errdisable detect cause link-flap
```

You can verify your setting by entering the **show errdisable detect** privileged EXEC command.

Related Commands

Command	Description
show errdisable detect	Displays error-disabled detection information.
show interfaces status err-disabled	Displays interface status or a list of interfaces in the error-disabled state.

errdisable recovery

Use the **errdisable recovery** global configuration command to configure the recover mechanism variables. Use the **no** form of this command to return to the default setting.

```
errdisable recovery { cause { all | arp-inspection | bpduguard | channel-misconfig |
dhcp-rate-limit | dtp-flap | gbic-invalid | l2ptguard | link-flap | loopback | pagp-flap |
psecure-violation | security-violation | udld | vmpls } | { interval interval }
```

```
no errdisable recovery { cause { all | arp-inspection | bpduguard | channel-misconfig |
dhcp-rate-limit | dtp-flap | gbic-invalid | l2ptguard | link-flap | loopback | pagp-flap |
psecure-violation | security-violation | udld | vmpls } | { interval interval }
```

Syntax Description

cause	Enable the error-disabled mechanism to recover from a specific cause.
all	Enable the timer to recover from all error-disabled causes.
bpduguard	Enable the timer to recover from the bridge protocol data unit (BPDU) guard error-disabled state.
arp-inspection	Enable the timer to recover from the Address Resolution Protocol (ARP) inspection error-disabled state.
channel-misconfig	Enable the timer to recover from the EtherChannel misconfiguration error-disabled state.
dhcp-rate-limit	Enable the timer to recover from the DHCP snooping error-disabled state.
dtp-flap	Enable the timer to recover from the Dynamic Trunking Protocol (DTP) flap error-disabled state.
gbic-invalid	Enable the timer to recover from an invalid Gigabit Interface Converter (GBIC) module error-disabled state. Note On the Catalyst 3560 switch, this error refers to an invalid small form-factor pluggable (SFP) error-disabled state.
l2ptguard	Enable the timer to recover from a Layer 2 protocol tunnel error-disabled state.
link-flap	Enable the timer to recover from the link-flap error-disabled state.
loopback	Enable the timer to recover from a loopback error-disabled state.
pagp-flap	Enable the timer to recover from the Port Aggregation Protocol (PAgP)-flap error-disabled state.
psecure-violation	Enable the timer to recover from a port security violation disable state.
security-violation	Enable the timer to recover from an IEEE 802.1x-violation disabled state.
udld	Enable the timer to recover from the UniDirectional Link Detection (UDLD) error-disabled state.

vmpls	Enable the timer to recover from the VLAN Membership Policy Server (VMPS) error-disabled state.
interval <i>interval</i>	Specify the time to recover from the specified error-disabled state. The range is 30 to 86400 seconds. The same interval is applied to all causes. The default interval is 300 seconds.
	Note The error-disabled recovery timer is initialized at a random differential from the configured interval value. The difference between the actual timeout value and the configured value can be up to 15 percent of the configured interval.

Defaults

Recovery is disabled for all causes.
The default recovery interval is 300 seconds.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(18)SE	The channel-misconfig keyword was added.
12.2(20)SE	The arp-inspection keyword was added.
12.2(25)SE	The l2ptguard keyword was added.

Usage Guidelines

A cause (**all**, **bpduguard**, and so forth) is defined as the reason that the error-disabled state occurred. When a cause is detected on an interface, the interface is placed in the error-disabled state, an operational state similar to link-down state. If you do not enable the recovery for the cause, the interface stays in the error-disabled state until you enter the **shutdown** and the **no shutdown** interface configuration commands. If you enable the recovery for a cause, the interface is brought out of the error-disabled state and allowed to retry the operation again when all the causes have timed out.

Otherwise, you must enter the **shutdown** and then the **no shutdown** commands to manually recover an interface from the error-disabled state.

Examples

This example shows how to enable the recovery timer for the BPDU guard error-disabled cause:

```
Switch(config)# errdisable recovery cause bpduguard
```

This example shows how to set the timer to 500 seconds:

```
Switch(config)# errdisable recovery interval 500
```

You can verify your settings by entering the **show errdisable recovery** privileged EXEC command.

Related Commands

Command	Description
show errdisable recovery	Displays error-disabled recovery timer information.
show interfaces status err-disabled	Displays interface status or a list of interfaces in error-disabled state.

exception crashinfo

Use the **exception crashinfo** global configuration command to configure the switch to create the extended crashinfo file when the Cisco IOS image fails. Use the **no** form of this command to disable this feature.

exception crashinfo

no exception crashinfo

Syntax Description This command has no arguments or keywords.

Defaults The switch creates the extended crashinfo file.

Command Modes Global configuration

Command History	Release	Modification
	12.2(25)SEC	This command was introduced.

Usage Guidelines The basic crashinfo file includes the Cisco IOS image name and version that failed, a list of the processor registers, and a stack trace. The extended crashinfo file includes additional information that can help determine the cause of the switch failure.

If you enter the **exception crashinfo** global configuration command on a stack master, it configures all the stack members to create the extended crashinfo file if the Cisco IOS image on the stack members fail.

Use the **no exception crashinfo** global configuration command to configure the switch to not create the extended crashinfo file.

Examples This example shows how to configure the switch to not create the extended crashinfo file:

```
Switch(config)# no exception crashinfo
```

You can verify your settings by entering the **show running-config** privileged EXEC command.

Related Commands	Command	Description
	show running-config	Displays the operating configuration, including defined macros. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

flowcontrol

Use the **flowcontrol** interface configuration command to set the receive flow-control state for an interface. When flow control **send** is operable and on for a device and it detects any congestion at its end, it notifies the link partner or the remote device of the congestion by sending a pause frame. When flow control **receive** is on for a device and it receives a pause frame, it stops sending any data packets. This prevents any loss of data packets during the congestion period.

Use the **receive off** keywords to disable flow control.

flowcontrol receive {desired | off | on}



Note

The Catalyst 3560 switch can receive, but not send, pause frames.

Syntax Description

receive	Set whether the interface can receive flow-control packets from a remote device.
desired	Allow an interface to operate with an attached device that is required to send flow-control packets or with an attached device that is not required to but can send flow-control packets.
off	Turn off the ability of an attached device to send flow-control packets to an interface.
on	Allow an interface to operate with an attached device that is required to send flow-control packets or with an attached device that is not required to but can send flow-control packets.

Defaults

The default is **flowcontrol receive off**.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The switch does not support sending flow-control pause frames.

Note that the **on** and **desired** keywords have the same result.

When you use the **flowcontrol** command to set a port to control traffic rates during congestion, you are setting flow control on a port to one of these conditions:

- **receive on** or **desired**: The port cannot send pause frames, but can operate with an attached device that is required to or is able to send pause frames. The port can receive pause frames.
- **receive off**: Flow control does not operate in either direction. In case of congestion, no indication is given to the link partner, and no pause frames are sent or received by either device.

Table 2-5 shows the flow control results on local and remote ports for a combination of settings. The table assumes that **receive desired** has the same results as using the **receive on** keywords.

Table 2-5 Flow Control Settings and Local and Remote Port Flow Control Resolution

Flow Control Settings		Flow Control Resolution	
Local Device	Remote Device	Local Device	Remote Device
send off/receive on	send on/receive on	Receives only	Sends and receives
	send on/receive off	Receives only	Sends only
	send desired/receive on	Receives only	Sends and receives
	send desired/receive off	Receives only	Sends only
	send off/receive on	Receives only	Receives only
	send off/receive off	Does not send or receive	Does not send or receive
send off/receive off	send on/receive on	Does not send or receive	Does not send or receive
	send on/receive off	Does not send or receive	Does not send or receive
	send desired/receive on	Does not send or receive	Does not send or receive
	send desired/receive off	Does not send or receive	Does not send or receive
	send off/receive on	Does not send or receive	Does not send or receive
	send off/receive off	Does not send or receive	Does not send or receive

Examples

This example shows how to configure the local port to not support flow control by the remote port:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# flowcontrol receive off
```

You can verify your settings by entering the **show interfaces** privileged EXEC command.

Related Commands

Command	Description
show interfaces	Displays the interface settings on the switch, including input and output flow control.

interface port-channel

Use the **interface port-channel** global configuration command to access or create the port-channel logical interface. Use the **no** form of this command to remove the port-channel.

interface port-channel *port-channel-number*

no interface port-channel *port-channel-number*

Syntax Description

port-channel-number Port-channel number. The range is 1 to 48.

Defaults

No port-channel logical interfaces are defined.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	The <i>port-channel-number</i> range was changed from 1 to 12 to 1 to 48.

Usage Guidelines

For Layer 2 EtherChannels, you do not have to create a port-channel interface first before assigning a physical port to a channel group. Instead, you can use the **channel-group** interface configuration command. It automatically creates the port-channel interface when the channel group gets its first physical port. If you create the port-channel interface first, the *channel-group-number* can be the same as the *port-channel-number*, or you can use a new number. If you use a new number, the **channel-group** command dynamically creates a new port channel.

You create Layer 3 port channels by using the **interface port-channel** command followed by the **no switchport** interface configuration command. You should manually configure the port-channel logical interface before putting the interface into the channel group.

Only one port channel in a channel group is allowed.



Caution

When using a port-channel interface as a routed port, do not assign Layer 3 addresses on the physical ports that are assigned to the channel group.



Caution

Do not assign bridge groups on the physical ports in a channel group used as a Layer 3 port-channel interface because it creates loops. You must also disable spanning tree.

Follow these guidelines when you use the **interface port-channel** command:

- If you want to use the Cisco Discovery Protocol (CDP), you must configure it only on the physical port and not on the port-channel interface.
- Do not configure a port that is an active member of an EtherChannel as an IEEE 802.1x port. If IEEE 802.1x is enabled on a not-yet active port of an EtherChannel, the port does not join the EtherChannel.

For a complete list of configuration guidelines, see the “Configuring EtherChannels” chapter in the software configuration guide for this release.

Examples

This example shows how to create a port-channel interface with a port channel number of 5:

```
Switch(config)# interface port-channel 5
```

You can verify your setting by entering the **show running-config** privileged EXEC or **show etherchannel channel-group-number detail** privileged EXEC command.

Related Commands

Command	Description
channel-group	Assigns an Ethernet port to an EtherChannel group.
show etherchannel	Displays EtherChannel information for a channel.
show running-config	Displays the current operating configuration. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

interface range

Use the **interface range** global configuration command to enter interface range configuration mode and to execute a command on multiple ports at the same time. Use the **no** form of this command to remove an interface range.

interface range {*port-range* | **macro name**}

no interface range {*port-range* | **macro name**}

Syntax Description

<i>port-range</i>	Port range. For a list of valid values for <i>port-range</i> , see the “Usage Guidelines” section.
macro name	Specify the name of a macro.

Defaults

This command has no default setting.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

When you enter interface range configuration mode, all interface parameters you enter are attributed to all interfaces within the range.

For VLANs, you can use the **interface range** command only on existing VLAN switch virtual interfaces (SVIs). To display VLAN SVIs, enter the **show running-config** privileged EXEC command. VLANs not displayed cannot be used in the **interface range** command. The commands entered under **interface range** command are applied to all existing VLAN SVIs in the range.

All configuration changes made to an interface range are saved to NVRAM, but the interface range itself is not saved to NVRAM.

You can enter the interface range in two ways:

- Specifying up to five interface ranges
- Specifying a previously defined interface-range macro

All interfaces in a range must be the same type; that is, all Fast Ethernet ports, all Gigabit Ethernet ports, all EtherChannel ports, or all VLANs. However, you can define up to five interface ranges with a single command, with each range separated by a comma.

Valid values for *port-range* type and interface:

- **vlan** *vlan-ID* - *vlan-ID*, where VLAN ID is from 1 to 4094
- **fastethernet** module/{*first port*} - {*last port*}, where module is always 0

- **gigabitethernet** *module*/{*first port*} - {*last port*}, where *module* is always 0
For physical interfaces:
 - *module* is always 0
 - the range is *type 0/number - number* (for example, **gigabitethernet0/1 - 2**)
- **port-channel** *port-channel-number* - *port-channel-number*, where *port-channel-number* is from 1 to 48



Note When you use the **interface range** command with port channels, the first and last port channel number in the range must be active port channels.

When you define a range, you must enter a space between the first entry and the hyphen (-):

```
interface range gigabitethernet0/1 -2
```

When you define multiple ranges, you must still enter a space after the first entry and before the comma (,):

```
interface range fastethernet0/1 - 2, gigabitethernet0/1 - 2
```

You cannot specify both a macro and an interface range in the same command.

You can also specify a single interface in *port-range*. The command is then similar to the **interface interface-id** global configuration command.

For more information about configuring interface ranges, see the software configuration guide for this release.

Examples

This example shows how to use the **interface range** command to enter interface-range configuration mode to apply commands to two ports:

```
Switch(config)# interface range gigabitethernet0/1 - 2
Switch(config-if-range)#
```

This example shows how to use a port-range macro *macro1* for the same function. The advantage is that you can reuse *macro1* until you delete it.

```
Switch(config)# define interface-range macro1 gigabitethernet0/1 - 2
Switch(config)# interface range macro macro1
Switch(config-if-range)#
```

Related Commands

Command	Description
define interface-range	Creates an interface range macro.
show running-config	Displays the configuration information currently running on the switch. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

interface vlan

Use the **interface vlan** global configuration command to create or access a dynamic switch virtual interface (SVI) and to enter interface configuration mode. Use the **no** form of this command to delete an SVI.

interface vlan *vlan-id*

no interface vlan *vlan-id*

Syntax Description

vlan-id VLAN number. The range is 1 to 4094.

Defaults

The default VLAN interface is VLAN 1.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

SVIs are created the first time that you enter the **interface vlan** *vlan-id* command for a particular VLAN. The *vlan-id* corresponds to the VLAN-tag associated with data frames on an ISL or IEEE 802.1Q encapsulated trunk or the VLAN ID configured for an access port.



Note

When you create an SVI, it does not become active until it is associated with a physical port.

If you delete an SVI by entering the **no interface vlan** *vlan-id* command, the deleted interface is no longer visible in the output from the **show interfaces** privileged EXEC command.



Note

You cannot delete the VLAN 1 interface.

You can re-instate a deleted SVI by entering the **interface vlan** *vlan-id* command for the deleted interface. The interface comes back up, but the previous configuration is gone.

The interrelationship between the number of SVIs configured on a switch and the number of other features being configured might have an impact on CPU utilization due to hardware limitations. You can use the **sdm prefer** global configuration command to reallocate system hardware resources based on templates and feature tables. For more information, see the [sdm prefer](#) command.

Examples

This example shows how to create a new SVI with VLAN ID 23 and to enter interface configuration mode:

```
Switch(config)# interface vlan 23  
Switch(config-if)#
```

You can verify your setting by entering the **show interfaces** and **show interfaces vlan *vlan-id*** privileged EXEC commands.

Related Commands

Command	Description
show interfaces vlan <i>vlan-id</i>	Displays the administrative and operational status of all interfaces or the specified VLAN.

ip access-group

Use the **ip access-group** interface configuration command to control access to a Layer 2 or Layer 3 interface. Use the **no** form of this command to remove all access groups or the specified access group from the interface.

```
ip access-group {access-list-number | name} {in | out}
```

```
no ip access-group [access-list-number | name] {in | out}
```

Syntax Description

<i>access-list-number</i>	The number of the IP access control list (ACL). The range is 1 to 199 or 1300 to 2699.
<i>name</i>	The name of an IP ACL, specified in the ip access-list global configuration command.
in	Specify filtering on inbound packets.
out	Specify filtering on outbound packets. This keyword is valid only on Layer 3 interfaces.

Defaults

No access list is applied to the interface.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You can apply named or numbered standard or extended IP access lists to an interface. To define an access list by name, use the **ip access-list** global configuration command. To define a numbered access list, use the **access list** global configuration command. You can use numbered standard access lists ranging from 1 to 99 and 1300 to 1999 or extended access lists ranging from 100 to 199 and 2000 to 2699.

You can use this command to apply an access list to a Layer 2 or Layer 3 interface. However, note these limitations for Layer 2 interfaces (port ACLs):

- You can only apply ACLs in the inbound direction; the **out** keyword is not supported for Layer 2 interfaces.
- You can only apply one IP ACL and one MAC ACL per interface.
- Layer 2 interfaces do not support logging; if the **log** keyword is specified in the IP ACL, it is ignored.
- An IP ACL applied to a Layer 2 interface only filters IP packets. To filter non-IP packets, use the **mac access-group** interface configuration command with MAC extended ACLs.

You can use router ACLs, input port ACLs, and VLAN maps on the same switch. However, a port ACL takes precedence over a router ACL or VLAN map:

- When an input port ACL is applied to an interface and a VLAN map is applied to a VLAN that the interface is a member of, incoming packets received on ports with the ACL applied are filtered by the port ACL. Other packets are filtered by the VLAN map.
- When an input router ACL and input port ACLs exist in an switch virtual interface (SVI), incoming packets received on ports to which a port ACL is applied are filtered by the port ACL. Incoming routed IP packets received on other ports are filtered by the router ACL. Other packets are not filtered.
- When an output router ACL and input port ACLs exist in an SVI, incoming packets received on the ports to which a port ACL is applied are filtered by the port ACL. Outgoing routed IP packets are filtered by the router ACL. Other packets are not filtered.
- When a VLAN map, input router ACLs, and input port ACLs exist in an SVI, incoming packets received on the ports to which a port ACL is applied are only filtered by the port ACL. Incoming routed IP packets received on other ports are filtered by both the VLAN map and the router ACL. Other packets are filtered only by the VLAN map.
- When a VLAN map, output router ACLs, and input port ACLs exist in an SVI, incoming packets received on the ports to which a port ACL is applied are only filtered by the port ACL. Outgoing routed IP packets are filtered by both the VLAN map and the router ACL. Other packets are filtered only by the VLAN map.

You can apply IP ACLs to both outbound or inbound Layer 3 interfaces.

A Layer 3 interface can have one IP ACL applied in each direction.

You can configure only one VLAN map and one router ACL in each direction (input/output) on a VLAN interface.

For standard inbound access lists, after the switch receives a packet, it checks the source address of the packet against the access list. IP extended access lists can optionally check other fields in the packet, such as the destination IP address, protocol type, or port numbers. If the access list permits the packet, the switch continues to process the packet. If the access list denies the packet, the switch discards the packet. If the access list has been applied to a Layer 3 interface, discarding a packet (by default) causes the generation of an Internet Control Message Protocol (ICMP) Host Unreachable message. ICMP Host Unreachable messages are not generated for packets discarded on a Layer 2 interface.

For standard outbound access lists, after receiving a packet and sending it to a controlled interface, the switch checks the packet against the access list. If the access list permits the packet, the switch sends the packet. If the access list denies the packet, the switch discards the packet and, by default, generates an ICMP Host Unreachable message.

If the specified access list does not exist, all packets are passed.

Examples

This example shows how to apply IP access list 101 to inbound packets on a port:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# ip access-group 101 in
```

You can verify your settings by entering the **show ip interface**, **show access-lists**, or **show ip access-lists** privileged EXEC command.

Related Commands	Command	Description
	access list	Configures a numbered ACL. For syntax information, select Cisco IOS IP Command Reference, Volume 1 of 3:Addressing and Services, Release 12.2 > IP Services Commands
	ip access-list	Configures a named ACL. For syntax information, select Cisco IOS IP Command Reference, Volume 1 of 3:Addressing and Services, Release 12.2 > IP Services Commands.
	show access-lists	Displays ACLs configured on the switch.
	show ip access-lists	Displays IP ACLs configured on the switch. For syntax information, select Cisco IOS IP Command Reference, Volume 1 of 3:Addressing and Services, Release 12.2 > IP Services Commands.
	show ip interface	Displays information about interface status and configuration. For syntax information, select Cisco IOS IP Command Reference, Volume 1 of 3:Addressing and Services, Release 12.2 > IP Services Commands.

ip address

Use the **ip address** interface configuration command to set an IP address for the Layer 2 switch or an IP address for each switch virtual interface (SVI) or routed port on the Layer 3 switch. Use the **no** form of this command to remove an IP address or to disable IP processing.

ip address *ip-address subnet-mask* [**secondary**]

no ip address [*ip-address subnet-mask*] [**secondary**]

Syntax Description

<i>ip-address</i>	IP address.
<i>subnet-mask</i>	Mask for the associated IP subnet.
secondary	(Optional) Specifies that the configured address is a secondary IP address. If this keyword is omitted, the configured address is the primary IP address.

Defaults

No IP address is defined.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

If you remove the switch IP address through a Telnet session, your connection to the switch will be lost. Hosts can find subnet masks using the Internet Control Message Protocol (ICMP) Mask Request message. Routers respond to this request with an ICMP Mask Reply message.

You can disable IP processing on a particular interface by removing its IP address with the **no ip address** command. If the switch detects another host using one of its IP addresses, it will send an error message to the console.

You can use the optional keyword **secondary** to specify an unlimited number of secondary addresses. Secondary addresses are treated like primary addresses, except the system never generates datagrams other than routing updates with secondary source addresses. IP broadcasts and ARP requests are handled properly, as are interface routes in the IP routing table.



Note

If any router on a network segment uses a secondary address, all other devices on that same segment must also use a secondary address from the same network or subnet. Inconsistent use of secondary addresses on a network segment can very quickly cause routing loops.

When you are routing Open Shortest Path First (OSPF), ensure that all secondary addresses of an interface fall into the same OSPF area as the primary addresses.

If your switch receives its IP address from a Bootstrap Protocol (BOOTP) or a DHCP server and you remove the switch IP address by using the **no ip address** command, IP processing is disabled, and the BOOTP or the DHCP server cannot reassign the address.

A Layer 3 switch can have an IP address assigned to each routed port and SVI. The number of routed ports and SVIs that you can configure is not limited by software; however, the interrelationship between this number and the number of other features being configured might have an impact on CPU utilization due to hardware limitations. You can use the **sdm prefer** global configuration command to reallocate system hardware resources based on templates and feature tables. For more information, see the **sdm prefer** command.

Examples

This example shows how to configure the IP address for the Layer 2 switch on a subnetted network:

```
Switch(config)# interface vlan 1
Switch(config-if)# ip address 172.20.128.2 255.255.255.0
```

This example shows how to configure the IP address for a port on the Layer 3 switch:

```
Switch(config)# ip multicast-routing
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# no switchport
Switch(config-if)# ip address 172.20.128.2 255.255.255.0
```

You can verify your settings by entering the **show running-config** privileged EXEC command.

Related Commands

Command	Description
show running-config	Displays the running configuration on the switch. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

ip arp inspection filter vlan

Use the **ip arp inspection filter vlan** global configuration command to permit or deny Address Resolution Protocol (ARP) requests and responses from a host configured with a static IP address when dynamic ARP inspection is enabled. Use the **no** form of this command to return to the default settings.

ip arp inspection filter *arp-acl-name* **vlan** *vlan-range* [**static**]

no ip arp inspection filter *arp-acl-name* **vlan** *vlan-range* [**static**]

Syntax Description

<i>arp-acl-name</i>	ARP access control list (ACL) name.
<i>vlan-range</i>	VLAN number or range. You can specify a single VLAN identified by VLAN ID number, a range of VLANs separated by a hyphen, or a series of VLANs separated by a comma. The range is 1 to 4094.
static	(Optional) Specify static to treat implicit denies in the ARP ACL as explicit denies and to drop packets that do not match any previous clauses in the ACL. DHCP bindings are not used. If you do not specify this keyword, it means that there is no explicit deny in the ACL that denies the packet, and DHCP bindings determine whether a packet is permitted or denied if the packet does not match any clauses in the ACL.

Defaults

No defined ARP ACLs are applied to any VLAN.

Command Modes

Global configuration

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

When an ARP ACL is applied to a VLAN for dynamic ARP inspection, only the ARP packets with IP-to-MAC address bindings are compared against the ACL. If the ACL permits a packet, the switch forwards it. All other packet types are bridged in the ingress VLAN without validation.

If the switch denies a packet because of an explicit deny statement in the ACL, the packet is dropped. If the switch denies a packet because of an implicit deny statement, the packet is then compared against the list of DHCP bindings (unless the ACL is *static*, which means that packets are not compared against the bindings).

Use the **arp access-list** *acl-name* global configuration command to define the ARP ACL or to add clauses to the end of a predefined list.

Examples

This example shows how to apply the ARP ACL *static-hosts* to VLAN 1 for dynamic ARP inspection:

```
Switch(config)# ip arp inspection filter static-hosts vlan 1
```

You can verify your settings by entering the **show ip arp inspection vlan 1** privileged EXEC command.

Related Commands

Command	Description
arp access-list	Defines an ARP ACL.
deny (ARP access-list configuration)	Denies an ARP packet based on matches against the DHCP bindings.
permit (ARP access-list configuration)	Permits an ARP packet based on matches against the DHCP bindings.
show arp access-list	Displays detailed information about ARP access lists.
show inventory vlan vlan-range	Displays the configuration and the operating state of dynamic ARP inspection for the specified VLAN.

ip arp inspection limit

Use the **ip arp inspection limit** interface configuration command to limit the rate of incoming Address Resolution Protocol (ARP) requests and responses on an interface. It prevents dynamic ARP inspection from using all of the switch resources if a denial-of-service attack occurs. Use the **no** form of this command to return to the default settings.

```
ip arp inspection limit {rate pps [burst interval seconds] | none}
```

```
no ip arp inspection limit
```

Syntax Description

rate <i>pps</i>	Specify an upper limit for the number of incoming packets processed per second. The range is 0 to 2048 packets per second (pps).
burst interval <i>seconds</i>	(Optional) Specify the consecutive interval in seconds, over which the interface is monitored for a high rate of ARP packets. The range is 1 to 15 seconds.
none	Specify no upper limit for the rate of incoming ARP packets that can be processed.

Defaults

The rate is 15 pps on untrusted interfaces, assuming that the network is a switched network with a host connecting to as many as 15 new hosts per second.

The rate is unlimited on all trusted interfaces.

The burst interval is 1 second.

Command Modes

Interface configuration

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

The rate applies to both trusted and untrusted interfaces. Configure appropriate rates on trunks to process packets across multiple dynamic ARP inspection-enabled VLANs, or use the **none** keyword to make the rate unlimited.

After a switch receives more than the configured rate of packets every second consecutively over a number of burst seconds, the interface is placed into an error-disabled state.

Unless you explicitly configure a rate limit on an interface, changing the trust state of the interface also changes its rate limit to the default value for that trust state. After you configure the rate limit, the interface retains the rate limit even when its trust state is changed. If you enter the **no ip arp inspection limit** interface configuration command, the interface reverts to its default rate limit.

You should configure trunk ports with higher rates to reflect their aggregation. When the rate of incoming packets exceeds the user-configured rate, the switch places the interface into an error-disabled state. The error-disabled recovery feature automatically removes the port from the error-disabled state according to the recovery setting.

The rate of incoming ARP packets on EtherChannel ports equals the sum of the incoming rate of ARP packets from all the channel members. Configure the rate limit for EtherChannel ports only after examining the rate of incoming ARP packets on all the channel members.

Examples

This example shows how to limit the rate of incoming ARP requests on a port to 25 pps and to set the interface monitoring interval to 5 consecutive seconds:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# ip arp inspection limit rate 25 burst interval 5
```

You can verify your settings by entering the **show ip arp inspection interfaces** *interface-id* privileged EXEC command.

Related Commands

Command	Description
show inventory interfaces	Displays the trust state and the rate limit of ARP packets for the specified interface or all interfaces.

ip arp inspection log-buffer

Use the **ip arp inspection log-buffer** global configuration command to configure the dynamic Address Resolution Protocol (ARP) inspection logging buffer. Use the **no** form of this command to return to the default settings.

```
ip arp inspection log-buffer {entries number | logs number interval seconds}
```

```
no ip arp inspection log-buffer {entries | logs}
```

Syntax Description

entries <i>number</i>	Number of entries to be logged in the buffer. The range is 0 to 1024.
logs <i>number</i>	Number of entries needed in the specified interval to generate system messages.
interval <i>seconds</i>	For logs <i>number</i> , the range is 0 to 1024. A 0 value means that the entry is placed in the log buffer, but a system message is not generated. For interval <i>seconds</i> , the range is 0 to 86400 seconds (1 day). A 0 value means that a system message is immediately generated (and the log buffer is always empty).

Defaults

When dynamic ARP inspection is enabled, denied or dropped ARP packets are logged.

The number of log entries is 32.

The number of system messages is limited to 5 per second.

The logging-rate interval is 1 second.

Command Modes

Global configuration

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

A value of 0 is not allowed for both the **logs** and the **interval** keywords.

The **logs** and **interval** settings interact. If the **logs** *number* X is greater than **interval** *seconds* Y, X divided by Y (X/Y) system messages are sent every second. Otherwise, one system message is sent every Y divided by X (Y/X) seconds. For example, if the **logs** *number* is 20 and the **interval** *seconds* is 4, the switch generates system messages for five entries every second while there are entries in the log buffer.

A log buffer entry can represent more than one packet. For example, if an interface receives many packets on the same VLAN with the same ARP parameters, the switch combines the packets as one entry in the log buffer and generates a system message as a single entry.

If the log buffer overflows, it means that a log event does not fit into the log buffer, and the output display for the **show ip arp inspection log** privileged EXEC command is affected. A -- in the output display appears in place of all data except the packet count and the time. No other statistics are provided for the entry. If you see this entry in the display, increase the number of entries in the log buffer, or increase the logging rate.

Examples

This example shows how to configure the logging buffer to hold up to 45 entries:

```
Switch(config)# ip arp inspection log-buffer entries 45
```

This example shows how to configure the logging rate to 20 log entries per 4 seconds. With this configuration, the switch generates system messages for five entries every second while there are entries in the log buffer.

```
Switch(config)# ip arp inspection log-buffer logs 20 interval 4
```

You can verify your settings by entering the **show ip arp inspection log** privileged EXEC command.

Related Commands

Command	Description
arp access-list	Defines an ARP access control list (ACL).
clear ip arp inspection log	Clears the dynamic ARP inspection log buffer.
ip arp inspection vlan logging	Controls the type of packets that are logged per VLAN.
show inventory log	Displays the configuration and contents of the dynamic ARP inspection log buffer.

ip arp inspection trust

Use the **ip arp inspection trust** interface configuration command to configure an interface trust state that determines which incoming Address Resolution Protocol (ARP) packets are inspected. Use the **no** form of this command to return to the default setting.

ip arp inspection trust

no ip arp inspection trust

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description This command has no arguments or keywords.

Defaults The interface is untrusted.

Command Modes Interface configuration

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines The switch does not check ARP packets that it receives on the trusted interface; it simply forwards the packets.

For untrusted interfaces, the switch intercepts all ARP requests and responses. It verifies that the intercepted packets have valid IP-to-MAC address bindings before updating the local cache and before forwarding the packet to the appropriate destination. The switch drops invalid packets and logs them in the log buffer according to the logging configuration specified with the **ip arp inspection vlan logging** global configuration command.

Examples This example shows how to configure a port to be trusted:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# ip arp inspection trust
```

You can verify your setting by entering the **show ip arp inspection interfaces** *interface-id* privileged EXEC command.

Related Commands

Command	Description
ip arp inspection log-buffer	Configures the dynamic ARP inspection logging buffer.
show inventory interfaces	Displays the trust state and the rate limit of ARP packets for the specified interface or all interfaces.
show inventory log	Displays the configuration and contents of the dynamic ARP inspection log buffer.

ip arp inspection validate

Use the **ip arp inspection validate** global configuration command to perform specific checks for dynamic Address Resolution Protocol (ARP) inspection. Use the **no** form of this command to return to the default settings.

```
ip arp inspection validate {[src-mac] [dst-mac] [ip]}
```

```
no ip arp inspection validate [src-mac] [dst-mac] [ip]
```

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description	src-mac	dst-mac	ip
	Compare the source MAC address in the Ethernet header against the sender MAC address in the ARP body. This check is performed on both ARP requests and responses. When enabled, packets with different MAC addresses are classified as invalid and are dropped.	Compare the destination MAC address in the Ethernet header against the target MAC address in ARP body. This check is performed for ARP responses. When enabled, packets with different MAC addresses are classified as invalid and are dropped.	Compare the ARP body for invalid and unexpected IP addresses. Addresses include 0.0.0.0, 255.255.255.255, and all IP multicast addresses. Sender IP addresses are compared in all ARP requests and responses. Target IP addresses are checked only in ARP responses.

Defaults No checks are performed.

Command Modes Global configuration

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines You must specify at least one of the keywords. Each command overrides the configuration of the previous command; that is, if a command enables **src-mac** and **dst-mac** validations, and a second command enables IP validation only, the **src-mac** and **dst-mac** validations are disabled as a result of the second command.

If you first specify the **src-mac** keyword, you also can specify the **dst-mac** and **ip** keywords. If you first specify the **ip** keyword, no other keywords can be specified.

The **no** form of the command disables only the specified checks. If none of the options are enabled, all checks are disabled.

Examples

This example show how to enable source MAC validation:

```
Switch(config)# ip arp inspection validate src-mac
```

You can verify your setting by entering the **show ip arp inspection vlan *vlan-range*** privileged EXEC command.

Related Commands

Command	Description
show inventory vlan <i>vlan-range</i>	Displays the configuration and the operating state of dynamic ARP inspection for the specified VLAN.

ip arp inspection vlan

Use the **ip arp inspection vlan** global configuration command to enable dynamic Address Resolution Protocol (ARP) inspection on a per-VLAN basis. Use the **no** form of this command to return to the default setting.

ip arp inspection vlan *vlan-range*

no ip arp inspection vlan *vlan-range*

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description

<i>vlan-range</i>	VLAN number or range. You can specify a single VLAN identified by VLAN ID number, a range of VLANs separated by a hyphen, or a series of VLANs separated by a comma. The range is 1 to 4094.
-------------------	---

Defaults

ARP inspection is disabled on all VLANs.

Command Modes

Global configuration

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

You must specify the VLANs on which to enable dynamic ARP inspection.

Dynamic ARP inspection is supported on access ports, trunk ports, EtherChannel ports, or private VLAN ports.

Examples

This example shows how to enable dynamic ARP inspection on VLAN 1:

```
Switch(config)# ip arp inspection vlan 1
```

You can verify your setting by entering the **show ip arp inspection vlan** *vlan-range* privileged EXEC command.

Related Commands

Command	Description
arp access-list	Defines an ARP access control list (ACL).
show inventory vlan <i>vlan-range</i>	Displays the configuration and the operating state of dynamic ARP inspection for the specified VLAN.

ip arp inspection vlan logging

Use the **ip arp inspection vlan logging** global configuration command to control the type of packets that are logged per VLAN. Use the **no** form of this command to disable this logging control.

```
ip arp inspection vlan vlan-range logging {acl-match {matchlog | none} | dhcp-bindings {all | none | permit}}
```

```
no ip arp inspection vlan vlan-range logging {acl-match | dhcp-bindings}
```

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description

<i>vlan-range</i>	Specify the VLANs configured for logging. You can specify a single VLAN identified by VLAN ID number, a range of VLANs separated by a hyphen, or a series of VLANs separated by a comma. The range is 1 to 4094.
acl-match { matchlog none }	Specify that the logging of packets is based on access control list (ACL) matches. The keywords have these meanings: <ul style="list-style-type: none"> • matchlog—Log packets based on the logging configuration specified in the access control entries (ACE). If you specify the matchlog keyword in this command and the log keyword in the permit or deny ARP access-list configuration command, Address Resolution Protocol (ARP) packets permitted or denied by the ACL are logged. • none—Do not log packets that match ACLs.
dhcp-bindings { permit all none }	Specify the logging of packets is based on Dynamic Host Configuration Protocol (DHCP) binding matches. The keywords have these meanings: <ul style="list-style-type: none"> • all—Log all packets that match DHCP bindings. • none—Do not log packets that match DHCP bindings. • permit—Log DHCP-binding permitted packets.

Defaults

All denied or all dropped packets are logged.

Command Modes

Global configuration

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

The term *logged* means that the entry is placed into the log buffer and that a system message is generated. The **acl-match** and **dhcp-bindings** keywords merge with each other; that is, when you configure an ACL match, the DHCP bindings configuration is not disabled. Use the **no** form of the command to reset the logging criteria to their defaults. If neither option is specified, all types of logging are reset to log when ARP packets are denied. These are the options:

- **acl-match**—Logging on ACL matches is reset to log on deny.
- **dhcp-bindings**—Logging on DHCP binding matches is reset to log on deny.

If neither the **acl-match** or the **dhcp-bindings** keywords are specified, all denied packets are logged.

The implicit deny at the end of an ACL does not include the **log** keyword. This means that when you use the **static** keyword in the **ip arp inspection filter vlan** global configuration command, the ACL overrides the DHCP bindings. Some denied packets might not be logged unless you explicitly specify the **deny ip any mac any log** ACE at the end of the ARP ACL.

Examples

This example shows how to configure ARP inspection on VLAN 1 to log packets that match the **permit** commands in the ACL:

```
Switch(config)# arp access-list test1
Switch(config-arp-nacl)# permit request ip any mac any log
Switch(config-arp-nacl)# permit response ip any any mac any any log
Switch(config-arp-nacl)# exit
Switch(config)# ip arp inspection vlan 1 logging acl-match matchlog
```

You can verify your settings by entering the **show ip arp inspection vlan *vlan-range*** privileged EXEC command.

Related Commands

Command	Description
arp access-list	Defines an ARP ACL.
clear ip arp inspection log	Clears the dynamic ARP inspection log buffer.
ip arp inspection log-buffer	Configures the dynamic ARP inspection logging buffer.
show inventory log	Displays the configuration and contents of the dynamic ARP inspection log buffer.
show inventory vlan <i>vlan-range</i>	Displays the configuration and the operating state of dynamic ARP inspection for the specified VLAN.

ip dhcp snooping

Use the **ip dhcp snooping** global configuration command to globally enable DHCP snooping. Use the **no** form of this command to return to the default setting.

ip dhcp snooping

no ip dhcp snooping

Syntax Description This command has no arguments or keywords.

Defaults DHCP snooping is disabled.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines For any DHCP snooping configuration to take effect, you must globally enable DHCP snooping. DHCP snooping is not active until you enable snooping on a VLAN by using the **ip dhcp snooping vlan *vlan-id*** global configuration command.

Examples This example shows how to enable DHCP snooping:

```
Switch(config)# ip dhcp snooping
```

You can verify your settings by entering the **show ip dhcp snooping** privileged EXEC command.

Related Commands	Command	Description
	ip dhcp snooping vlan	Enables DHCP snooping on a VLAN.
	show ip dhcp snooping	Displays the DHCP snooping configuration.
	show ip dhcp snooping binding	Displays the DHCP snooping binding information.

ip dhcp snooping binding

Use the **ip dhcp snooping binding** privileged EXEC command to configure the DHCP snooping binding database and to add binding entries to the database. Use the **no** form of this command to delete entries from the binding database.

```
ip dhcp snooping binding mac-address vlan vlan-id ip-address interface interface-id expiry
seconds
```

```
no ip dhcp snooping binding mac-address vlan vlan-id ip-address interface interface-id
```

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description

<i>mac-address</i>	Specify a MAC address.
vlan <i>vlan-id</i>	Specify a VLAN number. The range is 1 to 4094.
<i>ip-address</i>	Specify an IP address.
interface <i>interface-id</i>	Specify an interface on which to add or delete a binding entry.
expiry <i>seconds</i>	Specify the interval (in seconds) after which the binding entry is no longer valid. The range is 1 to 4294967295.

Defaults

No default database is defined.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

Use this command when you are testing or debugging the switch.

In the DHCP snooping binding database, each database entry, also referred to a binding, has an IP address, an associated MAC address, the lease time (in hexadecimal format), the interface to which the binding applies, and the VLAN to which the interface belongs. The database can have up to 8192 bindings.

Use the **show ip dhcp snooping binding** privileged EXEC command to display only the configured bindings. Use the **show ip source binding** privileged EXEC command to display the dynamically and statically configured bindings.

Examples

This example shows how to generate a DHCP binding configuration with an expiration time of 1000 seconds on a port in VLAN 1:

```
Switch# ip dhcp snooping binding 0001.1234.1234 vlan 1 172.20.50.5 interface
gigabitethernet0/1 expiry 1000
```

You can verify your settings by entering the **show ip dhcp snooping binding** or the **show ip dhcp source binding** privileged EXEC command.

Related Commands

Command	Description
ip dhcp snooping	Enables DHCP snooping on a VLAN.
show ip dhcp snooping binding	Displays the dynamically configured bindings in the DHCP snooping binding database and the configuration information.
show ip source binding	Displays the dynamically and statically configured bindings in the DHCP snooping binding database.

ip dhcp snooping database

Use the **ip dhcp snooping database** global configuration command to configure the DHCP snooping binding database agent. Use the **no** form of this command to disable the agent, to reset the timeout value, or to reset the write-delay value.

```
ip dhcp snooping database { flash:/filename | ftp://user:password@host/filename |
http://[[username:password]@]{hostname \ host-ip}[/directory]/image-name.tar |
rnp://user@host/filename | tftp://host/filename } | timeout seconds | write-delay seconds }
```

```
no ip dhcp snooping database [timeout | write-delay]
```

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description		
flash:/filename		Specify that the database agent or the binding file is in the flash memory.
ftp://user:password@host/filename		Specify that the database agent or the binding file is on an FTP server.
http://[[username:password]@]{hostname \ host-ip}[/directory]/image-name.tar		Specify that the database agent or the binding file is on an FTP server.
rnp://user@host/filename		Specify that the database agent or the binding file is on a Remote Control Protocol (RCP) server.
tftp://host/filename		Specify that the database agent or the binding file is on a TFTP server.
timeout <i>seconds</i>		Specify (in seconds) how long to wait for the database transfer process to finish before stopping. The default is 300 seconds. The range is 0 to 86400. Use 0 to define an infinite duration, which means to continue trying the transfer indefinitely.
write-delay <i>seconds</i>		Specify (in seconds) the duration for which the transfer should be delayed after the binding database changes. The default is 300 seconds. The range is 15 to 86400.

Defaults

The URL for the database agent or binding file is not defined.

The timeout value is 300 seconds (5 minutes).

The write-delay value is 300 seconds (5 minutes).

Command Modes

Global configuration

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

The DHCP snooping binding database can have up to 8192 bindings.

To ensure that the lease time in the database is accurate, we recommend that Network Time Protocol (NTP) is enabled and configured for these features:

- NTP authentication
- NTP peer and server associations
- NTP broadcast service
- NTP access restrictions
- NTP packet source IP address

If NTP is configured, the switch writes binding changes to the binding file only when the switch system clock is synchronized with NTP.

Because both NVRAM and the flash memory have limited storage capacities, we recommend that you store a binding file on a TFTP server. You must create an empty file at the configured URL on network-based URLs (such as TFTP and FTP) before the switch can first write bindings to the binding file at that URL.

Use the **ip dhcp snooping database flash:*filename*** command to save the DHCP snooping binding database in the NVRAM. If you set the **ip dhcp snooping database timeout** command to 0 seconds and the database is being written to a TFTP file, if the TFTP server goes down, the database agent continues to try the transfer indefinitely. No other transfer can be initiated while this one is in progress. This might be inconsequential because if the server is down, no file can be written to it.

Use the **no ip dhcp snooping database** command to disable the agent.

Use the **no ip dhcp snooping database timeout** command to reset the timeout value.

Use the **no ip dhcp snooping database write-delay** command to reset the write-delay value.

Examples

This example shows how to store a binding file at an IP address of 10.1.1.1 that is in a directory called *directory*. A file named *file* must be present on the TFTP server.

```
Switch(config)# ip dhcp snooping database tftp://10.1.1.1/directory/file
```

This example shows how to store a binding file called *file01.txt* in the NVRAM:

```
Switch(config)# ip dhcp snooping database flash:file01.txt
```

You can verify your settings by entering the **show ip dhcp snooping database** privileged EXEC command.

Related Commands

Command	Description
ip dhcp snooping	Enables DHCP snooping on a VLAN.
ip dhcp snooping binding	Configures the DHCP snooping binding database.
show ip dhcp snooping database	Displays the status of DHCP snooping database agent.

ip dhcp snooping information option

Use the **ip dhcp snooping information option** global configuration command to enable DHCP option-82 data insertion. Use the **no** form of this command to disable DHCP option-82 data insertion.

ip dhcp snooping information option

no ip dhcp snooping information option

Syntax Description This command has no arguments or keywords.

Defaults DHCP option-82 data is inserted.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You must globally enable DHCP snooping by using the **ip dhcp snooping** global configuration command for any DHCP snooping configuration to take effect.

When the option-82 feature is enabled and a switch receives a DHCP request from a host, it adds the option-82 information in the packet. The option-82 information contains the switch MAC address (the remote ID suboption) and the port identifier, **vlan-mod-port**, from which the packet is received (circuit ID suboption). The switch forwards the DHCP request that includes the option-82 field to the DHCP server.

When the DHCP server receives the packet, it can use the remote ID, the circuit ID, or both to assign IP addresses and implement policies, such as restricting the number of IP addresses that can be assigned to a single remote ID or a circuit ID. Then the DHCP server echoes the option-82 field in the DHCP reply.

The DHCP server unicasts the reply to the switch if the request was relayed to the server by the switch. When the client and server are on the same subnet, the server broadcasts the reply. The switch inspects the remote ID and possibly the circuit ID fields to verify that it originally inserted the option-82 data. The switch removes the option-82 field and forwards the packet to the switch port that connects to the DHCP host that sent the DHCP request.

Examples This example shows how to enable DHCP option-82 data insertion:

```
Switch(config)# ip dhcp snooping information option
```

You can verify your settings by entering the **show ip dhcp snooping** privileged EXEC command.

Related Commands	Command	Description
	show ip dhcp snooping	Displays the DHCP snooping configuration.
	show ip dhcp snooping binding	Displays the DHCP snooping binding information.

ip dhcp snooping information option allow-untrusted

Use the **ip dhcp snooping information option allow-untrusted** global configuration command on an aggregation switch to configure it to accept DHCP packets with option-82 information that are received on untrusted ports that might be connected to an edge switch. Use the **no** form of this command to return to the default setting.

ip dhcp snooping information option allow-untrusted

no ip dhcp snooping information option allow-untrusted

Syntax Description This command has no arguments or keywords.

Defaults The switch drops DHCP packets with option-82 information that are received on untrusted ports that might be connected to an edge switch.

Command Modes Global configuration

Command History	Release	Modification
	12.2(25)SEA	This command was introduced.

Usage Guidelines You might want an edge switch to which a host is connected to insert DHCP option-82 information at the edge of your network. You might also want to enable DHCP security features, such as DHCP snooping, IP source guard, or dynamic Address Resolution Protocol (ARP) inspection, on an aggregation switch. However, if DHCP snooping is enabled on the aggregation switch, the switch drops packets with option-82 information that are received on an untrusted port and does not learn DHCP snooping bindings for connected devices on a trusted interface.

If the edge switch to which a host is connected inserts option-82 information and you want to use DHCP snooping on an aggregation switch, enter the **ip dhcp snooping information option allow-untrusted** command on the aggregation switch. The aggregation switch can learn the bindings for a host even though the aggregation switch receives DHCP snooping packets on an untrusted port. You can also enable DHCP security features on the aggregation switch. The port on the edge switch to which the aggregation switch is connected must be configured as a trusted port.



Note Do not enter the **ip dhcp snooping information option allow-untrusted** command on an aggregation switch to which an untrusted device is connected. If you enter this command, an untrusted device might spoof the option-82 information.

Examples

This example shows how to configure an access switch to not check the option-82 information in untrusted packets from an edge switch and to accept the packets:

```
Switch(config)# ip dhcp snooping information option allow-untrusted
```

You can verify your settings by entering the **show ip dhcp snooping** privileged EXEC command.

Related Commands

Command	Description
show ip dhcp snooping	Displays the DHCP snooping configuration.
show ip dhcp snooping binding	Displays the DHCP snooping binding information.

ip dhcp snooping limit rate

Use the **ip dhcp snooping limit rate** interface configuration command to configure the number of DHCP messages an interface can receive per second. Use the **no** form of this command to return to the default setting.

ip dhcp snooping limit rate *rate*

no ip dhcp snooping limit rate

Syntax Description	<i>rate</i>	Number of DHCP messages an interface can receive per second. The range is 1 to 2048.
---------------------------	-------------	--

Defaults	DHCP snooping rate limiting is disabled.
-----------------	--

Command Modes	Interface configuration
----------------------	-------------------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
12.2(18)SE	The range was changed to 1 to 2048.	

Usage Guidelines Normally, the rate limit applies to untrusted interfaces. If you want to configure rate limiting for trusted interfaces, keep in mind that trusted interfaces might aggregate DHCP traffic on multiple VLANs (some of which might not be snooped) in the switch, and you will need to adjust the interface rate limits to a higher value.

If the rate limit is exceeded, the interface is error-disabled. If you enabled error recovery by entering the **errdisable recovery dhcp-rate-limit** global configuration command, the interface retries the operation again when all the causes have timed out. If the error-recovery mechanism is not enabled, the interface stays in the error-disabled state until you enter the **shutdown** and **no shutdown** interface configuration commands.

Examples This example shows how to set a message rate limit of 150 messages per second on an interface:

```
Switch(config-if)# ip dhcp snooping limit rate 150
```

You can verify your settings by entering the **show ip dhcp snooping** privileged EXEC command.

Related Commands	Command	Description
	errdisable recovery	Configures the recover mechanism.
	show ip dhcp snooping	Displays the DHCP snooping configuration.
	show ip dhcp snooping binding	Displays the DHCP snooping binding information.

ip dhcp snooping trust

Use the **ip dhcp snooping trust** interface configuration command to configure a port as trusted for DHCP snooping purposes. Use the **no** form of this command to return to the default setting.

ip dhcp snooping trust

no ip dhcp snooping trust

Syntax Description This command has no arguments or keywords.

Defaults DHCP snooping trust is disabled.

Command Modes Interface configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Configure as trusted ports those that are connected to a DHCP server or to other switches or routers. Configure as untrusted ports those that are connected to DHCP clients.

Examples This example shows how to enable DHCP snooping trust on a port:

```
Switch(config-if)# ip dhcp snooping trust
```

You can verify your settings by entering the **show ip dhcp snooping** privileged EXEC command.

Related Commands	Command	Description
	show ip dhcp snooping	Displays the DHCP snooping configuration.
	show ip dhcp snooping binding	Displays the DHCP snooping binding information.

ip dhcp snooping verify

Use the **ip dhcp snooping verify** global configuration command to configure the switch to verify on an untrusted port that the source MAC address in a DHCP packet matches the client hardware address. Use the **no** form of this command to configure the switch to not verify the MAC addresses.

ip dhcp snooping verify mac-address

no ip dhcp snooping verify mac-address

Syntax Description This command has no arguments or keywords.

Defaults The switch verifies the source MAC address in a DHCP packet that is received on untrusted ports matches the client hardware address in the packet.

Command Modes Global configuration

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines In a service-provider network, when a switch receives a packet from a DHCP client on an untrusted port, it automatically verifies that the source MAC address and the DHCP client hardware address match. If the addresses match, the switch forwards the packet. If the addresses do not match, the switch drops the packet.

Examples This example shows how to disable the MAC address verification:

```
Switch(config)# no ip dhcp snooping verify mac-address
```

You can verify your settings by entering the **show ip dhcp snooping** privileged EXEC command.

Related Commands	Command	Description
	show ip dhcp snooping	Displays the DHCP snooping configuration.

ip dhcp snooping vlan

Use the **ip dhcp snooping vlan** global configuration command to enable DHCP snooping on a VLAN. Use the **no** form of this command to return to the default setting.

ip dhcp snooping vlan *vlan-range*

no ip dhcp snooping vlan *vlan-range*

Syntax Description

vlan *vlan-range* Specify a VLAN ID or a range of VLANs on which to enable DHCP snooping. The range is 1 to 4094.

You can enter a single VLAN ID identified by VLAN ID number, a series of VLAN IDs separated by commas, a range of VLAN IDs separated by hyphens, or a range of VLAN IDs separated by entering the starting and ending VLAN IDs separated by a space.

Defaults

DHCP snooping is disabled on all VLANs.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You must first globally enable DHCP snooping before enabling DHCP snooping on a VLAN.

Examples

This example shows how to enable DHCP snooping on VLAN 10:

```
Switch(config)# ip dhcp snooping vlan 10
```

You can verify your settings by entering the **show ip dhcp snooping** privileged EXEC command.

Related Commands

Command	Description
show ip dhcp snooping	Displays the DHCP snooping configuration.
show ip dhcp snooping binding	Displays the DHCP snooping binding information.

ip igmp filter

Use the **ip igmp filter** interface configuration command to control whether or not all hosts on a Layer 2 interface can join one or more IP multicast groups by applying an Internet Group Management Protocol (IGMP) profile to the interface. Use the **no** form of this command to remove the specified profile from the interface.

ip igmp filter *profile number*

no ip igmp filter

Syntax Description	<i>profile number</i> The IGMP profile number to be applied. The range is 1 to 4294967295.
---------------------------	--

Defaults	No IGMP filters are applied.
-----------------	------------------------------

Command Modes	Interface configuration
----------------------	-------------------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	<p>You can apply IGMP filters only to Layer 2 physical interfaces; you cannot apply IGMP filters to routed ports, switch virtual interfaces (SVIs), or ports that belong to an EtherChannel group.</p> <p>An IGMP profile can be applied to one or more switch port interfaces, but one port can have only one profile applied to it.</p>
-------------------------	---

Examples	This example shows how to apply IGMP profile 22 to a port:
-----------------	--

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# ip igmp filter 22
```

You can verify your setting by using the **show running-config** privileged EXEC command and by specifying an interface.

Related Commands	Command	Description
	ip igmp profile	Configures the specified IGMP profile number.
	show ip igmp profile	Displays the characteristics of the specified IGMP profile.
	show running-config interface interface-id	Displays the running configuration on the switch interface, including the IGMP profile (if any) that is applied to an interface. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

ip igmp max-groups

Use the **ip igmp max-groups** interface configuration command to set the maximum number of Internet Group Management Protocol (IGMP) groups that a Layer 2 interface can join or to configure the IGMP throttling action when the maximum number of entries is in the forwarding table. Use the **no** form of this command to set the maximum back to the default, which is to have no maximum limit, or to return to the default throttling action, which is to drop the report.

```
ip igmp max-groups {number | action {deny | replace} }
```

```
no ip igmp max-groups {number | action }
```

Syntax Description

<i>number</i>	The maximum number of IGMP groups that an interface can join. The range is 0 to 4294967294. The default is no limit.
action deny	When the maximum number of entries is in the IGMP snooping forwarding table, drop the next IGMP join report. This is the default action.
action replace	When the maximum number of entries is in the IGMP snooping forwarding table, replace the existing group with the new group for which the IGMP report was received.

Defaults

The default maximum number of groups is no limit.

After the switch learns the maximum number of IGMP group entries on an interface, the default throttling action is to drop the next IGMP report that the interface receives and to not add an entry for the IGMP group to the interface.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You can use this command only on Layer 2 physical interfaces and on logical EtherChannel interfaces. You cannot set IGMP maximum groups for routed ports, switch virtual interfaces (SVIs), or ports that belong to an EtherChannel group.

Follow these guidelines when configuring the IGMP throttling action:

- If you configure the throttling action as **deny** and set the maximum group limitation, the entries that were previously in the forwarding table are not removed but are aged out. After these entries are aged out, when the maximum number of entries is in the forwarding table, the switch drops the next IGMP report received on the interface.
- If you configure the throttling action as **replace** and set the maximum group limitation, the entries that were previously in the forwarding table are removed. When the maximum number of entries is in the forwarding table, the switch replaces a randomly selected multicast entry with the received IGMP report.
- When the maximum group limitation is set to the default (no maximum), entering the **ip igmp max-groups {deny | replace}** command has no effect.

Examples

This example shows how to limit to 25 the number of IGMP groups that a port can join:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# ip igmp max-groups 25
```

This example shows how to configure the switch to replace the existing group with the new group for which the IGMP report was received when the maximum number of entries is in the forwarding table:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# ip igmp max-groups action replace
```

You can verify your setting by using the **show running-config** privileged EXEC command and by specifying an interface.

Related Commands

Command	Description
show running-config interface interface-id	Displays the running configuration on the switch interface, including the maximum number of IGMP groups that an interface can join and the throttling action. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

ip igmp profile

Use the **ip igmp profile** global configuration command to create an Internet Group Management Protocol (IGMP) profile and enter IGMP profile configuration mode. From this mode, you can specify the configuration of the IGMP profile to be used for filtering IGMP membership reports from a switchport. Use the **no** form of this command to delete the IGMP profile.

ip igmp profile *profile number*

no ip igmp profile *profile number*

Syntax Description	<i>profile number</i> The IGMP profile number being configured. The range is 1 to 4294967295.
---------------------------	---

Defaults	No IGMP profiles are defined. When configured, the default action for matching an IGMP profile is to deny matching addresses.
-----------------	---

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	<p>When you are in IGMP profile configuration mode, you can create the profile by using these commands:</p> <ul style="list-style-type: none"> • deny: specifies that matching addresses are denied; this is the default condition. • exit: exits from igmp-profile configuration mode. • no: negates a command or resets to its defaults. • permit: specifies that matching addresses are permitted. • range: specifies a range of IP addresses for the profile. This can be a single IP address or a range with a start and an end address.
-------------------------	---

When entering a range, enter the low IP multicast address, a space, and the high IP multicast address.

You can apply an IGMP profile to one or more Layer 2 interfaces, but each interface can have only one profile applied to it.

Examples	This example shows how to configure IGMP profile 40 that permits the specified range of IP multicast addresses:
-----------------	---

```
Switch(config)# ip igmp profile 40
Switch(config-igmp-profile)# permit
Switch(config-igmp-profile)# range 233.1.1.1 233.255.255.255
```

You can verify your settings by using the **show ip igmp profile** privileged EXEC command.

Related Commands

Command	Description
ip igmp filter	Applies the IGMP profile to the specified interface.
show ip igmp profile	Displays the characteristics of all IGMP profiles or the specified IGMP profile number.

ip igmp snooping

Use the **ip igmp snooping** global configuration command to globally enable Internet Group Management Protocol (IGMP) snooping on the switch or to enable it on a per-VLAN basis. Use the **no** form of this command to return to the default setting.

ip igmp snooping [**vlan** *vlan-id*]

no ip igmp snooping [**vlan** *vlan-id*]

Syntax Description

vlan <i>vlan-id</i>	(Optional) Enable IGMP snooping on the specified VLAN. The range is 1 to 1001 and 1006 to 4094.
----------------------------	---

Defaults

IGMP snooping is globally enabled on the switch.
IGMP snooping is enabled on VLAN interfaces.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

When IGMP snooping is enabled globally, it is enabled in all the existing VLAN interfaces. When IGMP snooping is globally disabled, it is disabled on all the existing VLAN interfaces.

VLAN IDs 1002 to 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in IGMP snooping.

Examples

This example shows how to globally enable IGMP snooping:

```
Switch(config)# ip igmp snooping
```

This example shows how to enable IGMP snooping on VLAN 1:

```
Switch(config)# ip igmp snooping vlan 1
```

You can verify your settings by entering the **show ip igmp snooping** privileged EXEC command.

Related Commands

Command	Description
ip igmp snooping report-suppression	Enables IGMP report suppression.
show ip igmp snooping	Displays the snooping configuration.
show ip igmp snooping groups	Displays IGMP snooping multicast information.
show ip igmp snooping mrouter	Displays the IGMP snooping router ports.
show ip igmp snooping querier	Displays the configuration and operation information for the IGMP querier configured on a switch.

ip igmp snooping last-member-query-interval

Use the **ip igmp snooping last-member-query-interval** global configuration command to enable the Internet Group Management Protocol (IGMP) configurable-leave timer globally or on a per-VLAN basis. Use the **no** form of this command to return to the default setting.

ip igmp snooping [**vlan** *vlan-id*] **last-member-query-interval** *time*

no ip igmp snooping [**vlan** *vlan-id*] **last-member-query-interval**

Syntax Description	Parameter	Description
	vlan <i>vlan-id</i>	(Optional) Enable IGMP snooping and the leave timer on the specified VLAN. The range is 1 to 1001 and 1006 to 4094.
	<i>time</i>	Interval time out in seconds. The range is 100 to 5000 milliseconds.

Defaults The default timeout setting is 1000 milliseconds.

Command Modes Global configuration

Command History	Release	Modification
	12.2(25)SEB	This command was introduced.

Usage Guidelines

When IGMP snooping is globally enabled, IGMP snooping is enabled on all the existing VLAN interfaces. When IGMP snooping is globally disabled, IGMP snooping is disabled on all the existing VLAN interfaces.

VLAN IDs 1002 to 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in IGMP snooping.

Configuring the leave timer on a VLAN overrides the global setting.

The IGMP configurable leave time is only supported on devices running IGMP Version 2.

The configuration is saved in NVRAM.

Examples This example shows how to globally enable the IGMP leave timer for 2000 milliseconds:

```
Switch(config)# ip igmp snooping last-member-query-interval 2000
```

This example shows how to configure the IGMP leave timer for 3000 milliseconds on VLAN 1:

```
Switch(config)# ip igmp snooping vlan 1 last-member-query-interval 3000
```

You can verify your settings by entering the **show ip igmp snooping** privileged EXEC command.

Related Commands	Command	Description
	ip igmp snooping	Enables IGMP snooping on the switch or on a VLAN.
	ip igmp snooping vlan immediate-leave	Enables IGMP Immediate-Leave processing.
	ip igmp snooping vlan mrouter	Configures a Layer 2 port as a multicast router port.
	ip igmp snooping vlan static	Configures a Layer 2 port as a member of a group.
	show ip igmp snooping	Displays the IGMP snooping configuration.

ip igmp snooping querier

Use the **ip igmp snooping querier** global configuration command to globally enable the Internet Group Management Protocol (IGMP) querier function in Layer 2 networks. Use the command with keywords to enable and configure the IGMP querier feature on a VLAN interface. Use the **no** form of this command to return to the default settings.

```
ip igmp snooping querier [vlan vlan-id] [address ip-address | max-response-time response-time
| query-interval interval-count | tcn query [count count | interval interval] | timer expiry |
version version]
```

```
no ip igmp snooping querier [vlan vlan-id] [address | max-response-time | query-interval | tcn
query { count count | interval interval } | timer expiry | version]
```

Syntax Description		
vlan <i>vlan-id</i>	(Optional) Enable IGMP snooping and the IGMP querier function on the specified VLAN. The range is 1 to 1001 and 1006 to 4094.	
address <i>ip-address</i>	(Optional) Specify a source IP address. If you do not specify an IP address, the querier tries to use the global IP address configured for the IGMP querier.	
max-response-time <i>response-time</i>	(Optional) Set the maximum time to wait for an IGMP querier report. The range is 1 to 25 seconds.	
query-interval <i>interval-count</i>	(Optional) Set the interval between IGMP queriers. The range is 1 to 18000 seconds.	
tcn query [count <i>count</i> interval <i>interval</i>]	(Optional) Set parameters related to Topology Change Notifications (TCNs). The keywords have these meanings: <ul style="list-style-type: none"> count <i>count</i>—Set the number of TCN queries to be executed during the TCN interval time. The range is 1 to 10. interval <i>interval</i>—Set the TCN query interval time. The range is 1 to 255. 	
timer expiry	(Optional) Set the length of time until the IGMP querier expires. The range is 60 to 300 seconds.	
version <i>version</i>	(Optional) Select the IGMP version number that the querier feature uses. Select 1 or 2.	

Defaults

The IGMP snooping querier feature is globally disabled on the switch.

When enabled, the IGMP snooping querier disables itself if it detects IGMP traffic from a multicast-enabled device.

Command Modes

Global configuration

Command History

Release	Modification
12.2(25)SEA	This command was introduced.

Usage Guidelines

Use this command to enable IGMP snooping to detect the IGMP version and IP address of a device that sends IGMP query messages, which is also called a *querier*.

By default, the IGMP snooping querier is configured to detect devices that use IGMP *Version 2* (IGMPv2) but does not detect clients that are using IGMP *Version 1* (IGMPv1). You can manually configure the **max-response-time** value when devices use IGMPv2. You cannot configure the **max-response-time** when devices use IGMPv1. (The value cannot be configured and is set to zero).

Non-RFC compliant devices running IGMPv1 might reject IGMP general query messages that have a non-zero value as the **max-response-time** value. If you want the devices to accept the IGMP general query messages, configure the IGMP snooping querier to run IGMPv1.

VLAN IDs 1002 to 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in IGMP snooping.

Examples

This example shows how to globally enable the IGMP snooping querier feature:

```
Switch(config)# ip igmp snooping querier
```

This example shows how to set the IGMP snooping querier maximum response time to 25 seconds:

```
Switch(config)# ip igmp snooping querier max-response-time 25
```

This example shows how to set the IGMP snooping querier interval time to 60 seconds:

```
Switch(config)# ip igmp snooping querier query-interval 60
```

This example shows how to set the IGMP snooping querier TCN query count to 25:

```
Switch(config)# ip igmp snooping querier tcn count 25
```

This example shows how to set the IGMP snooping querier timeout to 60 seconds:

```
Switch(config)# ip igmp snooping querier timeout expiry 60
```

This example shows how to set the IGMP snooping querier feature to version 2:

```
Switch(config)# ip igmp snooping querier version 2
```

You can verify your settings by entering the **show ip igmp snooping** privileged EXEC command.

Related Commands

Command	Description
ip igmp snooping report-suppression	Enables IGMP report suppression.
show ip igmp snooping	Displays the IGMP snooping configuration.
show ip igmp snooping groups	Displays IGMP snooping multicast information.
show ip igmp snooping mrouter	Displays the IGMP snooping router ports.

ip igmp snooping report-suppression

Use the **ip igmp snooping report-suppression** global configuration command to enable Internet Group Management Protocol (IGMP) report suppression. Use the **no** form of this command to disable IGMP report suppression and to forward all IGMP reports to multicast routers.

ip igmp snooping report-suppression

no ip igmp snooping report-suppression

Syntax Description This command has no arguments or keywords.

Defaults IGMP report suppression is enabled.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines IGMP report suppression is supported only when the multicast query has IGMPv1 and IGMPv2 reports. This feature is not supported when the query includes IGMPv3 reports.

The switch uses IGMP report suppression to forward only one IGMP report per multicast router query to multicast devices. When IGMP router suppression is enabled (the default), the switch sends the first IGMP report from all hosts for a group to all the multicast routers. The switch does not send the remaining IGMP reports for the group to the multicast routers. This feature prevents duplicate reports from being sent to the multicast devices.

If the multicast router query includes requests only for IGMPv1 and IGMPv2 reports, the switch forwards only the first IGMPv1 or IGMPv2 report from all hosts for a group to all the multicast routers. If the multicast router query also includes requests for IGMPv3 reports, the switch forwards all IGMPv1, IGMPv2, and IGMPv3 reports for a group to the multicast devices.

If you disable IGMP report suppression by entering the **no ip igmp snooping report-suppression** command, all IGMP reports are forwarded to all the multicast routers.

Examples This example shows how to disable report suppression:

```
Switch(config)# no ip igmp snooping report-suppression
```

You can verify your settings by entering the **show ip igmp snooping** privileged EXEC command.

Related Commands	Command	Description
	ip igmp snooping	Enables IGMP snooping on the switch or on a VLAN.
	show ip igmp snooping	Displays the IGMP snooping configuration of the switch or the VLAN.

ip igmp snooping tcn

Use the **ip igmp snooping tcn** global configuration command to configure the Internet Group Management Protocol (IGMP) Topology Change Notification (TCN) behavior. Use the **no** form of this command to return to the default settings.

```
ip igmp snooping tcn {flood query count count | query solicit}
```

```
no ip igmp snooping tcn {flood query count | query solicit}
```

Syntax Description

flood query count *count* Specify the number of IGMP general queries for which the multicast traffic is flooded. The range is 1 to 10.

query solicit Send an IGMP leave message (global leave) to speed the process of recovering from the flood mode caused during a TCN event.

Defaults

The TCN flood query count is 2.

The TCN query solicitation is disabled.

Command Modes

Global configuration

Command History

Release	Modification
12.2(25)SEB	This command was introduced.

Usage Guidelines

Use **ip igmp snooping tcn flood query count** global configuration command to control the time that multicast traffic is flooded after a TCN event. If you set the TCN flood query count to 1 by using the **ip igmp snooping tcn flood query count** command, the flooding stops after receiving 1 general query. If you set the count to 7, the flooding of multicast traffic due to the TCN event lasts until 7 general queries are received. Groups are relearned based on the general queries received during the TCN event.

Use the **ip igmp snooping tcn query solicit** global configuration command to enable the switch to send the global leave message whether or not it is the spanning-tree root. This command also speeds the process of recovering from the flood mode caused during a TCN event.

Examples

This example shows how to specify 7 as the number of IGMP general queries for which the multicast traffic is flooded:

```
Switch(config)# no ip igmp snooping tcn flood query count 7
```

You can verify your settings by entering the **show ip igmp snooping** privileged EXEC command.

Related Commands

Command	Description
ip igmp snooping	Enables IGMP snooping on the switch or on a VLAN.
ip igmp snooping tcn flood	Specifies flooding on an interface as the IGMP snooping spanning-tree TCN behavior.
show ip igmp snooping	Displays the IGMP snooping configuration of the switch or the VLAN.

ip igmp snooping tcn flood

Use the **ip igmp snooping tcn flood** interface configuration command to specify multicast flooding as the Internet Group Management Protocol (IGMP) snooping spanning-tree Topology Change Notification (TCN) behavior. Use the **no** form of this command to disable the multicast flooding.

ip igmp snooping tcn flood

no ip igmp snooping tcn flood

Syntax Description This command has no arguments or keywords.

Defaults Multicast flooding is enabled on an interface during a spanning-tree TCN event.

Command Modes Interface configuration

Command History	Release	Modification
	12.2(25)SEB	This command was introduced.

Usage Guidelines When the switch receives a TCN, multicast traffic is flooded to all the ports until two general queries are received. If the switch has many ports with attached hosts that are subscribed to different multicast groups, the flooding might exceed the capacity of the link and cause packet loss.

You can change the flooding query count by using the **ip igmp snooping tcn flood query count** *count* global configuration command.

Examples This example shows how to disable the multicast flooding on an interface:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# no ip igmp snooping tcn flood
```

You can verify your settings by entering the **show ip igmp snooping** privileged EXEC command.

Related Commands	Command	Description
	ip igmp snooping	Enables IGMP snooping on the switch or on a VLAN.
	ip igmp snooping tcn	Configures the IGMP TCN behavior on the switch.
	show ip igmp snooping	Displays the IGMP snooping configuration of the switch or the VLAN.

ip igmp snooping vlan immediate-leave

Use the **ip igmp snooping immediate-leave** global configuration command to enable Internet Group Management Protocol (IGMP) snooping immediate-leave processing on a per-VLAN basis. Use the **no** form of this command to return to the default setting.

ip igmp snooping vlan *vlan-id* immediate-leave

no ip igmp snooping vlan *vlan-id* immediate-leave

Syntax Description	<i>vlan-id</i>	Enable IGMP snooping and the Immediate-Leave feature on the specified VLAN. The range is 1 to 1001 and 1006 to 4094.
---------------------------	----------------	--

Defaults	IGMP immediate-leave processing is disabled.
-----------------	--

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	VLAN IDs 1002 to 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in IGMP snooping.
-------------------------	---

You should configure the Immediate-Leave feature only when there is a maximum of one receiver on every port in the VLAN. The configuration is saved in NVRAM.

The Immediate-Leave feature is supported only with IGMP Version 2 hosts.

Examples	This example shows how to enable IGMP immediate-leave processing on VLAN 1:
-----------------	---

```
Switch(config)# ip igmp snooping vlan 1 immediate-leave
```

You can verify your settings by entering the **show ip igmp snooping** privileged EXEC command.

Related Commands	Command	Description
	ip igmp snooping report-suppression	Enables IGMP report suppression.
	show ip igmp snooping	Displays the snooping configuration.
	show ip igmp snooping groups	Displays IGMP snooping multicast information.
	show ip igmp snooping mrouter	Displays the IGMP snooping router ports.
	show ip igmp snooping querier	Displays the configuration and operation information for the IGMP querier configured on a switch.

ip igmp snooping vlan mrouter

Use the **ip igmp snooping mrouter** global configuration command to add a multicast router port or to configure the multicast learning method. Use the **no** form of this command to return to the default settings.

```
ip igmp snooping vlan vlan-id mrouter {interface interface-id | learn {cgmp | pim-dvmrp}}
```

```
no ip igmp snooping vlan vlan-id mrouter {interface interface-id | learn {cgmp | pim-dvmrp}}
```

Syntax Description

<i>vlan-id</i>	Enable IGMP snooping, and add the port in the specified VLAN as the multicast router port. The range is 1 to 1001 and 1006 to 4094.
interface <i>interface-id</i>	Specify the next-hop interface to the multicast router. The keywords have these meanings: <ul style="list-style-type: none"> fastethernet <i>interface number</i>—a Fast Ethernet IEEE 802.3 interface. gigabitethernet <i>interface number</i>—a Gigabit Ethernet IEEE 802.3z interface. port-channel <i>interface number</i>—a channel interface. The range is 0 to 48.
learn { cgmp pim-dvmrp }	Specify the multicast router learning method. The keywords have these meanings: <ul style="list-style-type: none"> cgmp—Set the switch to learn multicast router ports by snooping on Cisco Group Management Protocol (CGMP) packets. pim-dvmrp—Set the switch to learn multicast router ports by snooping on IGMP queries and Protocol-Independent Multicast-Distance Vector Multicast Routing Protocol (PIM-DVMRP) packets.

Defaults

By default, there are no multicast router ports.

The default learning method is **pim-dvmrp**—to snoop IGMP queries and PIM-DVMRP packets.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

VLAN IDs 1002 to 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in IGMP snooping.

The CGMP learn method is useful for reducing control traffic.

The configuration is saved in NVRAM.

Examples

This example shows how to configure a port as a multicast router port:

```
Switch(config)# ip igmp snooping vlan 1 mrouter interface gigabitethernet0/2
```

This example shows how to specify the multicast router learning method as CGMP:

```
Switch(config)# ip igmp snooping vlan 1 mrouter learn cgmp
```

You can verify your settings by entering the **show ip igmp snooping** privileged EXEC command.

Related Commands

Command	Description
ip igmp snooping report-suppression	Enables IGMP report suppression.
show ip igmp snooping	Displays the snooping configuration.
show ip igmp snooping groups	Displays IGMP snooping multicast information.
show ip igmp snooping mrouter	Displays the IGMP snooping router ports.
show ip igmp snooping querier	Displays the configuration and operation information for the IGMP querier configured on a switch.

ip igmp snooping vlan static

Use the **ip igmp snooping static** global configuration command to enable Internet Group Management Protocol (IGMP) snooping and to statically add a Layer 2 port as a member of a multicast group. Use the **no** form of this command to remove ports specified as members of a static multicast group.

ip igmp snooping vlan *vlan-id* **static** *ip-address* **interface** *interface-id*

no ip igmp snooping vlan *vlan-id* **static** *ip-address* **interface** *interface-id*

Syntax Description

<i>vlan-id</i>	Enable IGMP snooping on the specified VLAN. The range is 1 to 1001 and 1006 to 4094.
<i>ip-address</i>	Add a Layer 2 port as a member of a multicast group with the specified group IP address.
interface <i>interface-id</i>	Specify the interface of the member port. The keywords have these meanings: <ul style="list-style-type: none"> • fastethernet <i>interface number</i>—a Fast Ethernet IEEE 802.3 interface. • gigabitethernet <i>interface number</i>—a Gigabit Ethernet IEEE 802.3z interface. • port-channel <i>interface number</i>—a channel interface. The range is 0 to 48.

Defaults

By default, there are no ports statically configured as members of a multicast group.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

VLAN IDs 1002 to 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in IGMP snooping.

The configuration is saved in NVRAM.

Examples

This example shows how to statically configure a host on an interface:

```
Switch(config)# ip igmp snooping vlan 1 static 0100.5e02.0203 interface gigabitethernet0/1
Configuring port gigabitethernet0/1 on group 0100.5e02.0203
```

You can verify your settings by entering the **show ip igmp snooping** privileged EXEC command.

Related Commands	Command	Description
	ip igmp snooping report-suppression	Enables IGMP report suppression.
	show ip igmp snooping	Displays the snooping configuration.
	show ip igmp snooping groups	Displays IGMP snooping multicast information.
	show ip igmp snooping mrouter	Displays the IGMP snooping router ports.
	show ip igmp snooping querier	Displays the configuration and operation information for the IGMP querier configured on a switch.

ip source binding

Use the **ip source binding** global configuration command to configure static IP source bindings on the switch. Use the **no** form of this command to delete static bindings.

ip source binding *mac-address* **vlan** *vlan-id* *ip-address* **interface** *interface-id*

no source binding *mac-address* **vlan** *vlan-id* *ip-address* **interface** *interface-id*

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description

<i>mac-address</i>	Specify a MAC address.
vlan <i>vlan-id</i>	Specify a VLAN number. The range is from 1 to 4094.
<i>ip-address</i>	Specify an IP address.
interface <i>interface-id</i>	Specify an interface on which to add or delete an IP source binding.

Defaults

No IP source bindings are configured.

Command Modes

Global configuration

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

A static IP source binding entry has an IP address, its associated MAC address, and its associated VLAN number. The entry is based on the MAC address and the VLAN number. If you modify an entry by changing only the IP address, the switch updates the entry instead creating a new one.

Examples

This example shows how to add a static IP source binding:

```
Switch(config)# ip source binding 0001.1234.1234 vlan 1 172.20.50.5 interface
gigabitethernet0/1
```

This example shows how to add a static binding and then modify the IP address for it:

```
Switch(config)# ip source binding 0001.1357.0007 vlan 1 172.20.50.25 interface
gigabitethernet0/1
Switch(config)# ip source binding 0001.1357.0007 vlan 1 172.20.50.30 interface
gigabitethernet0/1
```

You can verify your settings by entering the **show ip source binding** privileged EXEC command.

Related Commands

Command	Description
ip verify source	Enables IP source guard on an interface.
show ip source binding	Displays the IP source bindings on the switch.
show ip verify source	Displays the IP source guard configuration on the switch or on a specific interface.

ip ssh

Use the **ip ssh** global configuration command to configure the switch to run Secure Shell (SSH) Version 1 or SSH Version 2. This command is available only when your switch is running the cryptographic (encrypted) software image. Use the **no** form of this command to return to the default setting.

ip ssh version [1 | 2]

no ip ssh version [1 | 2]

Syntax Description

- | | |
|----------|---|
| 1 | (Optional) Configure the switch to run SSH Version 1 (SSHv1). |
| 2 | (Optional) Configure the switch to run SSH Version 2 (SSHv1). |

Defaults

The default version is the latest SSH version supported by the SSH client.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

If you do not enter this command or if you do not specify a keyword, the SSH server selects the latest SSH version supported by the SSH client. For example, if the SSH client supports SSHv1 and SSHv2, the SSH server selects SSHv2.

The switch supports an SSHv1 or an SSHv2 server. It also supports an SSHv1 client. For more information about the SSH server and the SSH client, see the software configuration guide for this release.

A Rivest, Shamir, and Adelman (RSA) key pair generated by an SSHv1 server can be used by an SSHv2 server and the reverse.

Examples

This example shows how to configure the switch to run SSH Version 2:

```
Switch(config)# ip ssh version 2
```

You can verify your settings by entering the **show ip ssh** or **show ssh** privileged EXEC command.

Related Commands	Command	Description
	show ip ssh	Displays if the SSH server is enabled and displays the version and configuration information for the SSH server. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Security Command Reference, Release 12.2 > Other Security Features > Secure Shell Commands .
	show ssh	Displays the status of the SSH server. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Security Command Reference, Release 12.2 > Other Security Features > Secure Shell Commands .

ip verify source

Use the **ip verify source** interface configuration command to enable IP source guard on an interface. Use the **no** form of this command to disable IP source guard.

ip verify source [**port-security**]

no ip verify source

Syntax Description	port-security	(Optional) Enable IP source guard with IP and MAC address filtering. If you do not enter the port-security keyword, IP source guard with IP address filtering is enabled.
---------------------------	----------------------	---

Defaults	IP source guard is disabled.
-----------------	------------------------------

Command Modes	Interface configuration
----------------------	-------------------------

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines	<p>To enable IP source guard with source IP address filtering, use the ip verify source interface configuration command.</p> <p>To enable IP source guard with source IP and MAC address filtering, use the ip verify source port-security interface configuration command.</p> <p>To enable IP source guard with source IP and MAC address filtering, you must enable port security on the interface.</p>
-------------------------	--

Examples	<p>This example shows how to enable IP source guard with source IP address filtering:</p> <pre>Switch(config-if)# ip verify source</pre> <p>This example shows how to enable IP source guard with source IP and MAC address filtering:</p> <pre>Switch(config-if)# ip verify source port-security</pre> <p>You can verify your settings by entering the show ip source binding privileged EXEC command.</p>
-----------------	--

Related Commands	Command	Description
	ip source binding	Configures static bindings on the switch.
	show ip verify source	Displays the IP source guard configuration on the switch or on a specific interface.

ipv6 access-list

Use the **ipv6 access-list** global configuration command to define an IPv6 access list and to place the switch in IPv6 access list configuration mode. To remove the access list, use the **no** form of this command.

ipv6 access-list *access-list-name*

no ipv6 access-list *access-list-name*



Note

This command is available only if the switch is running the advanced IP services image and you have configured a dual IPv4 and IPv6 Switch Database Management (SDM) template on the switch.

Syntax Description

<i>access-list-name</i>	Name of the IPv6 access list. Names cannot contain a space or quotation mark or begin with a numeric.
-------------------------	---

Defaults

No IPv6 access list is defined.

Command Modes

Global configuration

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

To configure the dual IPv4 and IPv6 template, enter the **sdm prefer dual-ipv4-and-ipv6 { default | vlan }** global configuration command and reload the switch.

The **ipv6 access-list** command is similar to the **ip access-list** command, except that it is IPv6-specific.



Note

IPv6 ACLs are defined by a unique name (IPv6 does not support numbered ACLs). An IPv4 ACL and an IPv6 ACL cannot share the same name.

See the **ipv6 access-list** and **permit (IPv6 access-list configuration)** commands for more information on filtering IPv6 traffic based on IPv6 option headers and optional, upper-layer protocol-type information. See the “Examples” section for an example of a translated IPv6 ACL configuration.

**Note**

Every IPv6 ACL has implicit **permit icmp any any nd-na**, **permit icmp any any nd-ns**, and **deny ipv6 any any** statements as its last match conditions. The two **permit** conditions allow ICMPv6 neighbor discovery. To disallow ICMPv6 neighbor discovery and to deny **icmp any any nd-na** or **icmp any any nd-ns**, there must be an explicit **deny** entry in the ACL. For the implicit **deny ipv6 any any** statement to take effect, an IPv6 ACL must contain at least one entry.

The IPv6 neighbor discovery process makes use of the IPv6 network layer service; therefore, by default, IPv6 ACLs implicitly allow IPv6 neighbor discovery packets to be sent and received on an interface. In IPv4, the Address Resolution Protocol (ARP), which is equivalent to the IPv6 neighbor discovery process, uses a separate data-link layer protocol; therefore, by default, IPv4 ACLs implicitly allow ARP packets to be sent and received on an interface.

Use the **ipv6 traffic-filter** interface configuration command with the *access-list-name* argument to apply an IPv6 ACL to an IPv6 interface. You can apply inbound and outbound IPv6 ACLs to Layer 3 physical interfaces or switch virtual interfaces for routed ACLs, but only inbound IPv6 ACLs to Layer 2 interfaces for port ACLs.

**Note**

An IPv6 ACL applied to an interface with the **ipv6 traffic-filter** command filters traffic that is forwarded by the switch and does not filter traffic generated by the switch.

Examples

This example puts the switch in IPv6 access list configuration mode and configures the IPv6 ACL named list2 and applies the ACL to outbound traffic on an interface. The first ACL entry prevents all packets from the network FE80:0:0:2::/64 (packets that have the link-local prefix FE80:0:0:2 as the first 64 bits of their source IPv6 address) from leaving the interface. The second entry in the ACL permits all other traffic to leave the interface. The second entry is necessary because an implicit deny-all condition is at the end of each IPv6 ACL.

```
Switch(config)# ipv6 access-list list2
Switch(config-ipv6-acl)# deny FE80:0:0:2::/64 any
Switch(config-ipv6-acl)# permit any any
Switch(config-ipv6-acl)# exit
Switch(config)# interface gigabitethernet0/3
Switch(config-if)# no switchport
Switch(config-if)# ipv6 address 2001::/64 eui-64
Switch(config-if)# ipv6 traffic-filter list2 out
```

**Note**

IPv6 ACLs that rely on the implicit deny condition or specify a **deny any any** statement to filter traffic should contain **permit** statements for link-local addresses to avoid the filtering of protocol packets. Additionally IPv6 ACLs that use **deny** statements to filter traffic should also use a **permit any any** statement as the last statement in the list.

Related Commands

Command	Description
deny (IPv6 access-list configuration)	Sets deny conditions for an IPv6 access list.
ipv6 traffic-filter	Filters incoming or outgoing IPv6 traffic on an interface.
permit (IPv6 access-list configuration)	Sets permit conditions for an IPv6 access list.
show ipv6 access-list	Displays the contents of all current IPv6 access lists.

ipv6 mld snooping

Use the **ipv6 mld snooping** global configuration command without keywords to enable IP version 6 (IPv6) Multicast Listener Discovery (MLD) snooping globally or on the specified VLAN. Use the **no** form of this command to disable MLD snooping on the switch or the VLAN.

```
ipv6 mld snooping [vlan vlan-id]
```

```
no ipv6 mld snooping [vlan vlan-id]
```



Note

This command is available only if the switch is running the advanced IP services image and you have configured a dual IPv4 and IPv6 Switch Database Management (SDM) template on the switch.

Syntax Description

vlan <i>vlan-id</i>	(Optional) Enable or disable IPv6 MLD snooping on the specified VLAN. The VLAN ID range is 1 to 1001 and 1006 to 4094.
----------------------------	--

Defaults

MLD snooping is globally disabled on the switch.

MLD snooping is enabled on all VLANs. However, MLD snooping must be globally enabled before VLAN snooping will take place.

Command Modes

Global configuration

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

To configure the dual IPv4 and IPv6 template, enter the **sdm prefer dual-ipv4-and-ipv6 {default | vlan}** global configuration command and reload the switch.

When MLD snooping is globally disabled, it is disabled on all the existing VLAN interfaces. When you globally enable MLD snooping, it is enabled on all VLAN interfaces that are in the default state (enabled). VLAN configuration will override global configuration on interfaces on which MLD snooping has been disabled.

If MLD snooping is globally disabled, you cannot enable it on a VLAN. If MLD snooping is globally enabled, you can disable it on individual VLANs.

When the IPv6 multicast router is a Catalyst 6500 switch and you are using extended VLANs (in the range 1006 to 4094), IPv6 MLD snooping must be enabled on the extended VLAN on the Catalyst 6500 switch in order for the Catalyst 3750 or Catalyst 3560 switch to receive queries on the VLAN. For normal-range VLANs (1 to 1005), it is not necessary to enable IPv6 MLD snooping on the VLAN on the Catalyst 6500 switch.

VLAN numbers 1002 through 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in MLD snooping.

Examples

This example shows how to globally enable MLD snooping:

```
Switch(config)# ipv6 mld snooping
```

This example shows how to disable MLD snooping on a VLAN:

```
Switch(config)# no ipv6 mld snooping vlan 11
```

You can verify your settings by entering the **show ipv6 mld snooping** user EXEC command.

Related Commands

Command	Description
sdm prefer	Configures an SDM template to optimize system resources based on how the switch is being used.
show ipv6 mld snooping	Displays MLD snooping configuration.

ipv6 mld snooping last-listener-query-count

Use the **ipv6 mld snooping last-listener-query-count** global configuration command to configure IP version 6 (IPv6) Multicast Listener Discovery Multicast Address Specific Queries (MASQs) or that will be sent before aging out a client. Use the **no** form of this command to reset the query count to the default settings.

```
ipv6 mld snooping [vlan vlan-id] last-listener-query-count integer_value
```

```
no ipv6 mld snooping [vlan vlan-id] last-listener-query-count
```



Note

This command is available only if the switch is running the advanced IP services image and you have configured a dual IPv4 and IPv6 Switch Database Management (SDM) template on the switch.

Syntax Description

vlan <i>vlan-id</i>	(Optional) Configure last-listener query count on the specified VLAN. The VLAN ID range is 1 to 1001 and 1006 to 4094.
<i>integer_value</i>	The range is 1 to 7.

Command Default

The default global count is 2.

The default VLAN count is 0 (the global count is used).

Command Modes

Global configuration

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

To configure the dual IPv4 and IPv6 template, enter the **sdm prefer dual-ipv4-and-ipv6 {default | vlan}** global configuration command and reload the switch.

In MLD snooping, the IPv6 multicast router periodically sends out queries to hosts belonging to the multicast group. If a host wants to leave a multicast group, it can silently leave or it can respond to the query with a Multicast Listener Done message (equivalent to an IGMP Leave message). When Immediate Leave is not configured (which it should not be if multiple clients for a group exist on the same port), the configured last-listener query count determines the number of MASQs that are sent before an MLD client is aged out.

When the last-listener query count is set for a VLAN, this count overrides the value configured globally. When the VLAN count is not configured (set to the default of 0), the global count is used.

VLAN numbers 1002 through 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in MLD snooping.

Examples

This example shows how to globally set the last-listener query count:

```
Switch(config)# ipv6 mld snooping last-listener-query-count 1
```

This example shows how to set the last-listener query count for VLAN 10:

```
Switch(config)# ipv6 mld snooping vlan 10 last-listener-query-count 3
```

You can verify your settings by entering the **show ipv6 mld snooping [vlan *vlan-id*]** user EXEC command.

Related Commands

Command	Description
ipv6 mld snooping last-listener-query-interval	Sets IPv6 MLD snooping last-listener query interval.
sdm prefer	Configures an SDM template to optimize system resources based on how the switch is being used.
show ipv6 mld snooping querier	Displays MLD snooping configuration.

ipv6 mld snooping last-listener-query-interval

Use the **ipv6 mld snooping last-listener-query-interval** global configuration command to configure IP version 6 (IPv6) Multicast Listener Discovery (MLD) snooping last-listener query interval on the switch or on a VLAN. This time interval is the maximum time that a multicast router waits after issuing a Multicast Address Specific Query (MASQ) before deleting a port from the multicast group. Use the **no** form of this command to reset the query time to the default settings.

ipv6 mld snooping [**vlan** *vlan-id*] **last-listener-query-interval** *integer_value*

no ipv6 mld snooping [**vlan** *vlan-id*] **last-listener-query-interval**



Note

This command is available only if the switch is running the advanced IP services image and you have configured a dual IPv4 and IPv6 Switch Database Management (SDM) template on the switch.

Syntax Description

vlan <i>vlan-id</i>	(Optional) Configure last-listener query interval on the specified VLAN. The VLAN ID range is 1 to 1001 and 1006 to 4094.
<i>integer_value</i>	Set the time period (in thousands of a second) that a multicast router to wait after issuing a MASQ before deleting a port from the multicast group. The range is 100 to 32,768. The default is 1000 (1 second),

Command Default

The default global query interval (maximum response time) is 1000 (1 second).
The default VLAN query interval (maximum response time) is 0 (the global count is used).

Command Modes

Global configuration

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

To configure the dual IPv4 and IPv6 template, enter the **sdm prefer dual-ipv4-and-ipv6 {default | vlan}** global configuration command and reload the switch.

In MLD snooping, when the IPv6 multicast router receives an MLD leave message, it sends out queries to hosts belonging to the multicast group. If there are no responses from a port to a MASQ for a length of time, the router deletes the port from the membership database of the multicast address. The last listener query interval is the maximum time that the router waits before deleting a nonresponsive port from the multicast group.

When a VLAN query interval is set, this overrides the global query interval. When the VLAN interval is set at 0, the global value is used.

VLAN numbers 1002 through 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in MLD snooping.

Examples

This example shows how to globally set the last-listener query interval to 2 seconds:

```
Switch(config)# ipv6 mld snooping last-listener-query-interval 2000
```

This example shows how to set the last-listener query interval for VLAN 1 to 5.5 seconds:

```
Switch(config)# ipv6 mld snooping vlan 1 last-listener-query-interval 5500
```

You can verify your settings by entering the **show ipv6 MLD snooping [vlan *vlan-id*]** user EXEC command.

Related Commands

Command	Description
ipv6 mld snooping last-listener-query-count	Sets IPv6 MLD snooping last-listener query count.
sdm prefer	Configures an SDM template to optimize system resources based on how the switch is being used.
show ipv6 mld snooping querier	Sets IPv6 MLD snooping last-listener query interval.

ipv6 mld snooping listener-message-suppression

Use the **ipv6 mld snooping listener-message-suppression** global configuration command to enable IP version 6 (IPv6) Multicast Listener Discovery (MLD) snooping listener message suppression. Use the **no** form of this command to disable MLD snooping listener message suppression.

ipv6 mld snooping listener-message-suppression

no ipv6 mld snooping listener-message-suppression



Note

This command is available only if the switch is running the advanced IP services image and you have configured a dual IPv4 and IPv6 Switch Database Management (SDM) template on the switch.

Command Default

The default is for MLD snooping listener message suppression to be disabled.

Command Modes

Global configuration

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

To configure the dual IPv4 and IPv6 template, enter the **sdm prefer dual-ipv4-and-ipv6 {default | vlan}** global configuration command and reload the switch.

MLD snooping listener message suppression is equivalent to IGMP snooping report suppression. When enabled, received MLDv1 reports to a group are forwarded to IPv6 multicast routers only once in every report-forward time. This prevents the forwarding of duplicate reports.

Examples

This example shows how to enable MLD snooping listener-message-suppression:

```
Switch(config)# ipv6 mld snooping listener-message-suppression
```

This example shows how to disable MLD snooping listener-message-suppression:

```
Switch(config)# no ipv6 mld snooping listener-message-suppression
```

You can verify your settings by entering the **show ipv6 mld snooping [vlan vlan-id]** user EXEC command.

Related Commands	Command	Description
	ipv6 mld snooping	Enables IPv6 MLD snooping.
	sdm prefer	Configures an SDM template to optimize system resources based on how the switch is being used.
	show ipv6 mld snooping	Displays MLD snooping configuration.

ipv6 mld snooping robustness-variable

Use the **ipv6 mld snooping robustness-variable** global configuration command to configure the number of IP version 6 (IPv6) Multicast Listener Discovery (MLD) queries that the switch sends before deleting a listener that does not respond, or enter a VLAN ID to configure on a per-VLAN basis. Use the **no** form of this command to reset the variable to the default settings.

ipv6 mld snooping [**vlan** *vlan-id*] **robustness-variable** *integer_value*

no ipv6 mld snooping [**vlan** *vlan-id*] **robustness-variable**



Note

This command is available only if the switch is running the advanced IP services image and you have configured a dual IPv4 and IPv6 Switch Database Management (SDM) template on the switch.

Syntax Description

vlan <i>vlan-id</i>	(Optional) Configure the robustness variable on the specified VLAN. The VLAN ID range is 1 to 1001 and 1006 to 4094.
<i>integer_value</i>	The range is 1 to 3.

Command Default

The default global robustness variable (number of queries before deleting a listener) is 2.

The default VLAN robustness variable (number of queries before aging out a multicast address) is 0, which means that the system uses the global robustness variable for aging out the listener.

Command Modes

Global configuration

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

To configure the dual IPv4 and IPv6 template, enter the **sdm prefer dual-ipv4-and-ipv6 {default | vlan}** global configuration command and reload the switch.

Robustness is measured in terms of the number of MLDv1 queries sent with no response before a port is removed from a multicast group. A port is deleted when there are no MLDv1 reports received for the configured number of MLDv1 queries. The global value determines the number of queries that the switch waits before deleting a listener that does not respond and applies to all VLANs that do not have a VLAN value set.

The robustness value configured for a VLAN overrides the global value. If the VLAN robustness value is 0 (the default), the global value is used.

VLAN numbers 1002 through 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in MLD snooping.

Examples

This example shows how to configure the global robustness variable so that the switch sends out three queries before it deletes a listener port that does not respond:

```
Switch(config)# ipv6 mld snooping robustness-variable 3
```

This example shows how to configure the robustness variable for VLAN 1. This value overrides the global configuration for the VLAN:

```
Switch(config)# ipv6 mld snooping vlan 1 robustness-variable 1
```

You can verify your settings by entering the **show ipv6 MLD snooping [vlan *vlan-id*]** user EXEC command.

Related Commands

Command	Description
ipv6 mld snooping last-listener-query-count	Sets IPv6 MLD snooping last-listener query count.
sdm prefer	Configures an SDM template to optimize system resources based on how the switch is being used.
show ipv6 mld snooping	Displays MLD snooping configuration.

ipv6 mld snooping tcn

Use the **ipv6 mld snooping tcn** global configuration commands to configure IP version 6 (IPv6) Multicast Listener Discovery (MLD) Topology Change Notifications (TCNs). Use the **no** form of the commands to reset the default settings.

```
ipv6 mld snooping tcn {flood query count integer_value | query solicit}
```

```
no ipv6 mld snooping tcn {flood query count integer_value | query solicit}
```



Note

This command is available only if the switch is running the advanced IP services image and you have configured a dual IPv4 and IPv6 Switch Database Management (SDM) template on the switch.

Syntax Description

flood query count <i>integer_value</i>	Set the flood query count, which is the number of queries that are sent before forwarding multicast data to only those ports requesting to receive it. The range is 1 to 10.
query solicit	Enable soliciting of TCN queries.

Command Default

TCN query soliciting is disabled.
When enabled, the default flood query count is 2.

Command Modes

Global configuration

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

To configure the dual IPv4 and IPv6 template, enter the **sdm prefer dual-ipv4-and-ipv6 {default | vlan}** global configuration command and reload the switch.

Examples

This example shows how to enable TCN query soliciting:

```
Switch(config)# ipv6 mld snooping tcn query solicit.
```

This example shows how to set the flood query count to 5:

```
Switch(config)# ipv6 mld snooping tcn flood query count 5.
```

You can verify your settings by entering the **show ipv6 MLD snooping [vlan *vlan-id*]** user EXEC command.

Related Commands

Command	Description
sdm prefer	Configures an SDM template to optimize system resources based on how the switch is being used.
show ipv6 mld snooping	Displays MLD snooping configuration.

ipv6 mld snooping vlan

Use the **ipv6 mld snooping vlan** global configuration command to configure IP version 6 (IPv6) Multicast Listener Discovery (MLD) snooping parameters on the VLAN interface. Use the **no** form of this command to reset the parameters to the default settings.

```
ipv6 mld snooping vlan vlan-id [immediate-leave | mrouter interface interface-id | static
ipv6-multicast-address interface interface-id]
```

```
no ipv6 mld snooping vlan vlan-id [immediate-leave | mrouter interface interface-id | static
ip-address interface interface-id]
```



Note

This command is available only if the switch is running the advanced IP services image and you have configured a dual IPv4 and IPv6 Switch Database Management (SDM) template on the switch.

Syntax Description

vlan <i>vlan-id</i>	Specify a VLAN number. The range is 1 to 1001 and 1006 to 4094.
immediate-leave	(Optional) Enable MLD Immediate-Leave processing on a VLAN interface. Use the no form of the command to disable the Immediate Leave feature on the interface.
mrouter interface	(Optional) Configure a multicast router port. The no form of the command removes the configuration.
static <i>ipv6-multicast-address</i>	(Optional) Configure a multicast group with the specified IPv6 multicast address.
interface <i>interface-id</i>	Add a Layer 2 port to the group. The mrouter or static interface can be a physical port or a port-channel interface in the range of 1 to 48.

Command Default

MLD snooping Immediate-Leave processing is disabled.
By default, there are no static IPv6 multicast groups.
By default, there are no multicast router ports.

Command Modes

Global configuration

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

To configure the dual IPv4 and IPv6 template, enter the **sdm prefer dual-ipv4-and-ipv6 { default | vlan }** global configuration command and reload the switch.

You should only configure the Immediate-Leave feature when there is only one receiver on every port in the VLAN. The configuration is saved in NVRAM.

The **static** keyword is used for configuring the MLD member ports statically.

The configuration and the static ports and groups are saved in NVRAM.

When the IPv6 multicast router is a Catalyst 6500 switch and you are using extended VLANs (in the range 1006 to 4094), IPv6 MLD snooping must be enabled on the extended VLAN on the Catalyst 6500 switch in order for the Catalyst 3750 or Catalyst 3560 switch to receive queries on the VLAN. For normal-range VLANs (1 to 1005), it is not necessary to enable IPv6 MLD snooping on the VLAN on the Catalyst 6500 switch.

VLAN numbers 1002 through 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in MLD snooping.

Examples

This example shows how to enable MLD Immediate-Leave processing on VLAN 1:

```
Switch(config)# ipv6 mld snooping vlan 1 immediate-leave
```

This example shows how to disable MLD Immediate-Leave processing on VLAN 1:

```
Switch(config)# no ipv6 mld snooping vlan 1 immediate-leave
```

This example shows how to configure a port as a multicast router port:

```
Switch(config)# ipv6 mld snooping vlan 1 mrouter interface gigabitethernet1/0/2
```

This example shows how to configure a static multicast group:

```
Switch(config)# ipv6 mld snooping vlan 2 static FF12::34 interface gigabitethernet1/0/2
```

You can verify your settings by entering the **show ipv6 mld snooping vlan *vlan-id*** user EXEC command.

Related Commands

Command	Description
ipv6 mld snooping	Enables IPv6 MLD snooping.
ipv6 mld snooping vlan	Configures IPv6 MLD snooping on the VLAN.
sdm prefer	Configures an SDM template to optimize system resources based on how the switch is being used.
show ipv6 mld snooping	Displays IPv6 MLD snooping configuration.

ipv6 traffic-filter

Use the **ipv6 traffic-filter** interface configuration command to filter IPv6 traffic on an interface. You can filter both incoming or outgoing IPv6 traffic on Layer 3 interfaces (router ACLs), but only incoming traffic on Layer 2 interfaces (port ACLs). Use the **no** form of this command to disable the filtering of IPv6 traffic on an interface.

```
ipv6 traffic-filter access-list-name {in | out}
```

```
no ipv6 traffic-filter access-list-name {in | out}
```



Note

This command is available only if the switch is running the advanced IP services image and you have configured a dual IPv4 and IPv6 Switch Database Management (SDM) template on the switch.

Syntax Description

<i>access-list-name</i>	Specify an IPv6 access name.
in	Specify incoming IPv6 traffic.
out	Specify outgoing IPv6 traffic.
Note	This keyword is not supported on Layer 2 interfaces.

Defaults

Filtering of IPv6 traffic on an interface is not configured.

Command Modes

Interface configuration

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

To configure the dual IPv4 and IPv6 template, enter the **sdm prefer dual-ipv4-and-ipv6 {default | vlan}** global configuration command and reload the switch.

You can use the **ipv6 traffic-filter** command on physical interfaces (Layer 2 or Layer 3 ports), Layer 3 port channels, or switch virtual interfaces (SVIs).

The switch supports inbound and outbound filtering on Layer 3 interfaces (router ACLs), but only inbound filtering on Layer 2 ports (port ACLs).

If *any* port ACL (IPv4, IPv6, or MAC) is applied to an interface, that port ACL is used to filter packets, and any router ACLs attached to the SVI of the port VLAN are ignored.

Examples

This example filters inbound IPv6 traffic on an IPv6-configured interface as defined by the access list named *cisco*:

```
Switch (config)# interface gigabitethernet0/1
Switch(config-if)# no switchport
Switch(config-if)# ipv6 address 2001::/64 eui-64
Switch(config-if)# ipv6 traffic-filter cisco in
```

Related Commands

Command	Description
ipv6 access-list	Defines an IPv6 access list and sets deny or permit conditions for the defined access list.
show ipv6 access-list	Displays the contents of all current IPv6 access lists.
show ipv6 interface	Displays the usability status of interfaces configured for IPv6.

l2protocol-tunnel

Use the **l2protocol-tunnel** interface configuration command to enable tunneling of Layer 2 protocols on an access port, IEEE 802.1Q tunnel port, or a port channel. You can enable tunneling for Cisco Discovery Protocol (CDP), Spanning Tree Protocol (STP), or VLAN Trunking Protocol (VTP) packets. You can also enable point-to-point tunneling for Port Aggregation Protocol (PAgP), Link Aggregation Control Protocol (LACP), or UniDirectional Link Detection (UDLD) packets. Use the **no** form of this command to disable tunneling on the interface.

```
l2protocol-tunnel [cdp | stp | vtp] [point-to-point [pagp | lACP | udld]] | [shutdown-threshold
[cdp | stp | vtp] [point-to-point [pagp | lACP | udld]]] value | [drop-threshold [cdp | stp | vtp]
[point-to-point [pagp | lACP | udld]]] value
```

```
no l2protocol-tunnel [cdp | stp | vtp] [point-to-point [pagp | lACP | udld]] | [shutdown-threshold
[cdp | stp | vtp] [point-to-point [pagp | lACP | udld]]] | [drop-threshold [cdp | stp | vtp]
[point-to-point [pagp | lACP | udld]]]
```

Syntax Description	l2protocol-tunnel	Enable point-to-multipoint tunneling of CDP, STP, and VTP packets.
	cdp	(Optional) Enable tunneling of CDP, specify a shutdown threshold for CDP, or specify a drop threshold for CDP.
	stp	(Optional) Enable tunneling of STP, specify a shutdown threshold for STP, or specify a drop threshold for STP.
	vtp	(Optional) Enable tunneling or VTP, specify a shutdown threshold for VTP, or specify a drop threshold for VTP.
	point-to-point	(Optional) Enable point-to-point tunneling of PAgP, LACP, and UDLD packets.
	pagp	(Optional) Enable point-to-point tunneling of PAgP, specify a shutdown threshold for PAgP, or specify a drop threshold for PAgP.
	lACP	(Optional) Enable point-to-point tunneling of LACP, specify a shutdown threshold for LACP, or specify a drop threshold for LACP.
	udld	(Optional) Enable point-to-point tunneling of UDLD, specify a shutdown threshold for UDLD, or specify a drop threshold for UDLD.
	shutdown-threshold	(Optional) Set a shutdown threshold for the maximum rate of Layer 2 protocol packets per second to be received before an interface is shut down.
	drop-threshold	(Optional) Set a drop threshold for the maximum rate of Layer 2 protocol packets per second to be received before an interface drops packets.
	<i>value</i>	Specify a threshold in packets per second to be received for encapsulation before the interface shuts down, or specify the threshold before the interface drops packets. The range is 1 to 4096. The default is no threshold.

Defaults

The default is that no Layer 2 protocol packets are tunneled.

The default is no shutdown threshold for the number of Layer 2 protocol packets.

The default is no drop threshold for the number of Layer 2 protocol packets.

Command Modes

Interface configuration

Command History

Release	Modification
12.2(25)SE	This command was introduced.

Usage Guidelines

You must enter this command, with or without protocol types, to tunnel Layer 2 packets.

If you enter this command for a port channel, all ports in the channel must have the same configuration.

Layer 2 protocol tunneling across a service-provider network ensures that Layer 2 information is propagated across the network to all customer locations. When protocol tunneling is enabled, protocol packets are encapsulated with a well-known Cisco multicast address for transmission across the network. When the packets reach their destination, the well-known MAC address is replaced by the Layer 2 protocol MAC address.

You can enable Layer 2 protocol tunneling for CDP, STP, and VTP individually or for all three protocols.

In a service-provider network, you can use Layer 2 protocol tunneling to enhance the creation of EtherChannels by emulating a point-to-point network topology. When protocol tunneling is enabled on the service-provider switch for PAgP or LACP, remote customer switches receive the protocol data units (PDUs) and can negotiate automatic creation of EtherChannels.

To enable tunneling of PAgP, LACP, and UDLD packets, you must have a point-to-point network topology. To decrease the link-down detection time, you should also enable UDLD on the interface when you enable tunneling of PAgP or LACP packets.

You can enable point-to-point protocol tunneling for PAgP, LACP, and UDLD individually or for all three protocols.

**Caution**

PAgP, LACP, and UDLD tunneling is only intended to emulate a point-to-point topology. An erroneous configuration that sends tunneled packets to many ports could lead to a network failure.

Enter the **shutdown-threshold** keyword to control the number of protocol packets per second that are received on an interface before it shuts down. When no protocol option is specified with the keyword, the threshold is applied to each of the tunneled Layer 2 protocol types. If you also set a drop threshold on the interface, the shutdown-threshold value must be greater than or equal to the drop-threshold value.

When the shutdown threshold is reached, the interface is error-disabled. If you enable error recovery by entering the **errdisable recovery cause l2ptguard** global configuration command, the interface is brought out of the error-disabled state and allowed to retry the operation again when all the causes have timed out. If the error recovery mechanism is not enabled for **l2ptguard**, the interface stays in the error-disabled state until you enter the **shutdown** and **no shutdown** interface configuration commands.

Enter the **drop-threshold** keyword to control the number of protocol packets per second that are received on an interface before it drops packets. When no protocol option is specified with a keyword, the threshold is applied to each of the tunneled Layer 2 protocol types. If you also set a shutdown threshold on the interface, the drop-threshold value must be less than or equal to the shutdown-threshold value.

When the drop threshold is reached, the interface drops Layer 2 protocol packets until the rate at which they are received is below the drop threshold.

The configuration is saved in NVRAM.

For more information about Layer 2 protocol tunneling, see the software configuration guide for this release.

Examples

This example shows how to enable protocol tunneling for CDP packets and to configure the shutdown threshold as 50 packets per second:

```
Switch(config-if)# l2protocol-tunnel cdp
Switch(config-if)# l2protocol-tunnel shutdown-threshold cdp 50
```

This example shows how to enable protocol tunneling for STP packets and to configure the drop threshold as 400 packets per second:

```
Switch(config-if)# l2protocol-tunnel stp
Switch(config-if)# l2protocol-tunnel drop-threshold stp 400
```

This example shows how to enable point-to-point protocol tunneling for PAgP and UDLD packets and to configure the PAgP drop threshold as 1000 packets per second:

```
Switch(config-if)# l2protocol-tunnel point-to-point pagp
Switch(config-if)# l2protocol-tunnel point-to-point udld
Switch(config-if)# l2protocol-tunnel drop-threshold point-to-point pagp 1000
```

Related Commands

Command	Description
l2protocol-tunnel cos	Configures a class of service (CoS) value for all tunneled Layer 2 protocol packets.
show errdisable recovery	Displays error-disabled recovery timer information.
show l2protocol-tunnel	Displays information about ports configured for Layer 2 protocol tunneling, including port, protocol, class of service (CoS), and threshold.

l2protocol-tunnel cos

Use the **l2protocol-tunnel cos** global configuration command to configure class of service (CoS) value for all tunneled Layer 2 protocol packets. Use the **no** form of this command to return to the default setting.

l2protocol-tunnel cos *value*

no l2protocol-tunnel cos

Syntax Description

<i>value</i>	Specify CoS priority value for tunneled Layer 2 protocol packets. If a CoS value is configured for data packets for the interface, the default is to use this CoS value. If no CoS value is configured for the interface, the default is 5. The range is 0 to 7, with 7 being the highest priority.
--------------	---

Defaults

The default is to use the CoS value configured for data on the interface. If no CoS value is configured, the default is 5 for all tunneled Layer 2 protocol packets.

Command Modes

Global configuration

Command History

Release	Modification
12.2(25)SE	This command was introduced.

Usage Guidelines

When enabled, the tunneled Layer 2 protocol packets use this CoS value.
The value is saved in NVRAM.

Examples

This example shows how to configure a Layer-2 protocol-tunnel CoS value of 7:

```
Switch(config)# l2protocol-tunnel cos 7
```

Related Commands

Command	Description
show l2protocol-tunnel	Displays information about ports configured for Layer 2 protocol tunneling, including CoS.

lacp port-priority

Use the **lacp port-priority** interface configuration command to configure the port priority for the Link Aggregation Control Protocol (LACP). Use the **no** form of this command to return to the default setting.

lacp port-priority *priority*

no lacp port-priority

Syntax Description

priority Port priority for LACP. The range is 1 to 65535.

Defaults

The default is 32768.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **lacp port-priority** interface configuration command determines which ports are bundled and which ports are put in hot-standby mode when there are more than eight ports in an LACP channel group.

An LACP channel group can have up to 16 Ethernet ports of the same type. Up to eight ports can be active, and up to eight ports can be in standby mode.

In port-priority comparisons, a numerically *lower* value has a *higher* priority: When there are more than eight ports in an LACP channel-group, the eight ports with the numerically lowest values (highest priority values) for LACP port priority are bundled into the channel group, and the lower-priority ports are put in hot-standby mode. If two or more ports have the same LACP port priority (for example, they are configured with the default setting of 65535) an internal value for the port number determines the priority.



Note

The LACP port priorities are only effective if the ports are on the switch that controls the LACP link. See the **lacp system-priority** global configuration command for determining which switch controls the link.

Use the **show lacp internal** privileged EXEC command to display LACP port priorities and internal port number values.

For information about configuring LACP on physical ports, see the “Configuring EtherChannels” chapter in the software configuration guide for this release.

Examples

This example shows how to configure the LACP port priority on a port:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# lacp port-priority 1000
```

You can verify your settings by entering the **show lacp** [*channel-group-number*] **internal** privileged EXEC command.

Related Commands

Command	Description
channel-group	Assigns an Ethernet port to an EtherChannel group.
lacp system-priority	Configures the LACP system priority.
show lacp [<i>channel-group-number</i>] internal	Displays internal information for all channel groups or for the specified channel group.

lACP system-priority

Use the **lACP system-priority** global configuration command to configure the system priority for the Link Aggregation Control Protocol (LACP). Use the **no** form of this command to return to the default setting.

lACP system-priority *priority*

no lACP system-priority

Syntax Description

priority System priority for LACP. The range is 1 to 65535.

Defaults

The default is 32768.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **lACP system-priority** command determines which switch in an LACP link controls port priorities.

An LACP channel group can have up to 16 Ethernet ports of the same type. Up to eight ports can be active, and up to eight ports can be in standby mode. When there are more than eight ports in an LACP channel-group, the switch on the controlling end of the link uses port priorities to determine which ports are bundled into the channel and which ports are put in hot-standby mode. Port priorities on the other switch (the noncontrolling end of the link) are ignored.

In priority comparisons, numerically lower values have higher priority. Therefore, the system with the numerically lower value (higher priority value) for LACP system priority becomes the controlling system. If both switches have the same LACP system priority (for example, they are both configured with the default setting of 32768), the LACP system ID (the switch MAC address) determines which switch is in control.

The **lACP system-priority** command applies to all LACP EtherChannels on the switch.

Use the **show etherchannel summary** privileged EXEC command to see which ports are in the hot-standby mode (denoted with an H port-state flag in the output display).

For more information about configuring LACP on physical ports, see the “Configuring EtherChannels” chapter in the software configuration guide for this release.

Examples

This example shows how to set the LACP system priority:

```
Switch(config)# lACP system-priority 20000
```

You can verify your settings by entering the **show lACP sys-id** privileged EXEC command.

■ lacp system-priority

Related Commands

Command	Description
channel-group	Assigns an Ethernet port to an EtherChannel group.
lacp port-priority	Configures the LACP port priority.
show lacp sys-id	Displays the system identifier that is being used by LACP.

logging event power-inline-status

Use the **logging event power-inline-status** interface configuration command to enable the logging of Power over Ethernet (PoE) events. Use the **no** form of this command to disable the logging of PoE status events; however, the **no** form of this command does not disable PoE error events.

logging event power-inline-status

no logging event power-inline-status

Syntax Description

power-inline-status Enable the logging of PoE messages.

Defaults

Logging of PoE events is enabled.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **power-inline-status** keyword is available only on PoE interfaces.

Examples

This example shows how to enable logging of PoE events on a port:

```
Switch(config-if)# interface fastethernet0/1
Switch(config-if)# logging event power-inline-status
Switch(config-if)#
```

Related Commands

Command	Description
power inline	Configures the power management mode for the specified PoE port or for all PoE ports.
show controllers power inline	Displays the values in the registers of the specified PoE controller.

logging file

Use the **logging file** global configuration command to set logging file parameters. Use the **no** form of this command to return to the default setting.

logging file *filesystem:filename* [*max-file-size* | **nomax** [*min-file-size*]] [*severity-level-number* | *type*]

no logging file *filesystem:filename* [*severity-level-number* | *type*]

Syntax Description

<i>filesystem:filename</i>	Alias for a flash file system. Contains the path and name of the file that contains the log messages. The syntax for the local flash file system: flash:
<i>max-file-size</i>	(Optional) Specify the maximum logging file size. The range is 4096 to 2147483647.
nomax	(Optional) Specify the maximum file size of 2147483647.
<i>min-file-size</i>	(Optional) Specify the minimum logging file size. The range is 1024 to 2147483647.
<i>severity-level-number</i>	(Optional) Specify the logging severity level. The range is 0 to 7. See the <i>type</i> option for the meaning of each level.
<i>type</i>	(Optional) Specify the logging type. These keywords are valid: <ul style="list-style-type: none"> • emergencies—System is unusable (severity 0). • alerts—Immediate action needed (severity 1). • critical—Critical conditions (severity 2). • errors—Error conditions (severity 3). • warnings—Warning conditions (severity 4). • notifications—Normal but significant messages (severity 5). • informational—Information messages (severity 6). • debugging—Debugging messages (severity 7).

Defaults

The minimum file size is 2048 bytes; the maximum file size is 4096 bytes.

The default severity level is 7 (**debugging** messages and numerically lower levels).

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The log file is stored in ASCII text format in an internal buffer on the switch. You can access logged system messages by using the switch command-line interface (CLI) or by saving them to a properly configured syslog server. If the switch fails, the log is lost unless you had previously saved it to flash memory by using the **logging file flash:filename** global configuration command.

After saving the log to flash memory by using the **logging file flash:filename** global configuration command, you can use the **more flash:filename** privileged EXEC command to display its contents.

The command rejects the minimum file size if it is greater than the maximum file size minus 1024; the minimum file size then becomes the maximum file size minus 1024.

Specifying a *level* causes messages at that level and numerically lower levels to be displayed.

Examples

This example shows how to save informational log messages to a file in flash memory:

```
Switch(config)# logging file flash:logfile informational
```

You can verify your setting by entering the **show running-config** privileged EXEC command.

Related Commands

Command	Description
show running-config	Displays the running configuration on the switch. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

mac access-group

Use the **mac access-group** interface configuration command to apply a MAC access control list (ACL) to a Layer 2 interface. Use the **no** form of this command to remove all MAC ACLs or the specified MAC ACL from the interface. You create the MAC ACL by using the **mac access-list extended** global configuration command.

mac access-group {*name*} **in**

no mac access-group {*name*}

Syntax Description		
	<i>name</i>	Specify a named MAC access list.
	in	Specify that the ACL is applied in the ingress direction. Outbound ACLs are not supported on Layer 2 interfaces.

Defaults No MAC ACL is applied to the interface.

Command Modes Interface configuration (Layer 2 interfaces only)

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You can apply MAC ACLs only to ingress Layer 2 interfaces. You cannot apply MAC ACLs to Layer 3 interfaces.

On Layer 2 interfaces, you can filter IP traffic by using IP access lists and non-IP traffic by using MAC access lists. You can filter both IP and non-IP traffic on the same Layer 2 interface by applying both an IP ACL and a MAC ACL to the interface. You can apply no more than one IP access list and one MAC access list to the same Layer 2 interface.

If a MAC ACL is already configured on a Layer 2 interface and you apply a new MAC ACL to the interface, the new ACL replaces the previously configured one.

If you apply an ACL to a Layer 2 interface on a switch, and the switch has an input Layer 3 ACL or a VLAN map applied to a VLAN that the interface is a member of, the ACL applied to the Layer 2 interface takes precedence.

When an inbound packet is received on an interface with a MAC ACL applied, the switch checks the match conditions in the ACL. If the conditions are matched, the switch forwards or drops the packet, according to the ACL.

If the specified ACL does not exist, the switch forwards all packets.

For more information about configuring MAC extended ACLs, see the “Configuring Network Security with ACLs” chapter in the software configuration guide for this release.

Examples

This example shows how to apply a MAC extended ACL named *macacl2* to an interface:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# mac access-group macacl2 in
```

You can verify your settings by entering the **show mac access-group** privileged EXEC command. You can see configured ACLs on the switch by entering the **show access-lists** privileged EXEC command.

Related Commands

Command	Description
show access-lists	Displays the ACLs configured on the switch.
show mac access-group	Displays the MAC ACLs configured on the switch.
show running-config	Displays the running configuration on the switch. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

mac access-list extended

Use the **mac access-list extended** global configuration command to create an access list based on MAC addresses for non-IP traffic. Using this command puts you in the extended MAC access-list configuration mode. Use the **no** form of this command to return to the default setting.

mac access-list extended *name*

no mac access-list extended *name*

Syntax Description

<i>name</i>	Assign a name to the MAC extended access list.
-------------	--

Defaults

By default, there are no MAC access lists created.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

MAC named extended lists are used with VLAN maps and class maps.

You can apply named MAC extended ACLs to VLAN maps or to Layer 2 interfaces; you cannot apply named MAC extended ACLs to Layer 3 interfaces.

Entering the **mac access-list extended** command enables the MAC access-list configuration mode. These configuration commands are available:

- **default:** sets a command to its default.
- **deny:** specifies packets to reject. For more information, see the [deny \(MAC access-list configuration\)](#) MAC access-list configuration command.
- **exit:** exits from MAC access-list configuration mode.
- **no:** negates a command or sets its defaults.
- **permit:** specifies packets to forward. For more information, see the [permit \(MAC access-list configuration\)](#) command.

For more information about MAC extended access lists, see the software configuration guide for this release.

Examples

This example shows how to create a MAC named extended access list named *mac1* and to enter extended MAC access-list configuration mode:

```
Switch(config)# mac access-list extended mac1
Switch(config-ext-macl)#
```

This example shows how to delete MAC named extended access list *mac1*:

```
Switch(config)# no mac access-list extended mac1
```

You can verify your settings by entering the **show access-lists** privileged EXEC command.

Related Commands

Command	Description
deny (MAC access-list configuration)	Configures the MAC ACL (in extended MAC-access list configuration mode).
permit (MAC access-list configuration)	
show access-lists	Displays the access lists configured on the switch.
vlan access-map	Defines a VLAN map and enters access-map configuration mode where you can specify a MAC ACL to match and the action to be taken.

mac address-table aging-time

Use the **mac address-table aging-time** global configuration command to set the length of time that a dynamic entry remains in the MAC address table after the entry is used or updated. Use the **no** form of this command to return to the default setting. The aging time applies to all VLANs or a specified VLAN.

mac address-table aging-time {0 | 10-1000000} [vlan *vlan-id*]

no mac address-table aging-time {0 | 10-1000000} [vlan *vlan-id*]

Syntax Description	0	This value disables aging. Static address entries are never aged or removed from the table.
	10-1000000	Aging time in seconds. The range is 10 to 1000000 seconds.
	vlan <i>vlan-id</i>	(Optional) Specify the VLAN ID to which to apply the aging time. The range is 1 to 4094.

Defaults The default is 300 seconds.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines If hosts do not send continuously, increase the aging time to record the dynamic entries for a longer time. Increasing the time can reduce the possibility of flooding when the hosts send again.
If you do not specify a specific VLAN, this command sets the aging time for all VLANs.

Examples This example shows how to set the aging time to 200 seconds for all VLANs:

```
Switch(config)# mac address-table aging-time 200
```

You can verify your setting by entering the **show mac address-table aging-time** privileged EXEC command.

Related Commands	Command	Description
	show mac address-table aging-time	Displays the MAC address table aging time for all VLANs or the specified VLAN.

mac address-table move update

Use the **mac address-table move update** global configuration command to enable the MAC address-table move update feature. Use the **no** form of this command to return to the default setting.

```
mac address-table move update {receive | transmit}
```

```
no mac address-table move update {receive | transmit}
```

Syntax Description

receive	Specify that the switch processes MAC address-table move update messages.
transmit	Specify that the switch sends MAC address-table move update messages to other switches in the network if the primary link goes down and the standby link comes up.

Command Modes

Global configuration.

Defaults

By default, the MAC address-table move update feature is disabled.

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

The MAC address-table move update feature allows the switch to provide rapid bidirectional convergence if a primary (forwarding) link goes down and the standby link begins forwarding traffic.

You can configure the access switch to send the MAC address-table move update messages if the primary link goes down and the standby link comes up. You can configure the uplink switches to receive and process the MAC address-table move update messages.

Examples

This example shows how to configure an access switch to send MAC address-table move update messages:

```
Switch# configure terminal
Switch(conf)# mac address-table move update transmit
Switch(conf)# end
```

This example shows how to configure an uplink switch to get and process MAC address-table move update messages:

```
Switch# configure terminal
Switch(conf)# mac address-table move update receive
Switch(conf)# end
```

You can verify your settings by entering the **show mac address-table move update** privileged EXEC command.

Related Commands	Command	Description
	clear mac address-table move update	Clears the MAC address-table move update global counters.
	debug matm move update	Debugs the MAC address-table move update message processing.
	show mac address-table move update	Displays the MAC address-table move update information on the switch.

mac address-table notification

Use the **mac address-table notification** global configuration command to enable the MAC address notification feature on the switch. Use the **no** form of this command to return to the default setting.

mac address-table notification [**history-size** *value*] | [**interval** *value*]

no mac address-table notification [**history-size** | **interval**]

Syntax Description

history-size <i>value</i>	(Optional) Configure the maximum number of entries in the MAC notification history table. The range is 0 to 500 entries.
interval <i>value</i>	(Optional) Set the notification trap interval. The switch sends the notification traps when this amount of time has elapsed. The range is 0 to 2147483647 seconds.

Defaults

By default, the MAC address notification feature is disabled.

The default trap interval value is 1 second.

The default number of entries in the history table is 1.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The MAC address notification feature sends Simple Network Management Protocol (SNMP) traps to the network management system (NMS) whenever a new MAC address is added or an old address is deleted from the forwarding tables. MAC notifications are generated only for dynamic and secure MAC addresses. Events are not generated for self addresses, multicast addresses, or other static addresses.

When you configure the **history-size** option, the existing MAC address history table is deleted, and a new table is created.

You enable the MAC address notification feature by using the **mac address-table notification** command. You must also enable MAC address notification traps on an interface by using the **snmp trap mac-notification** interface configuration command and configure the switch to send MAC address traps to the NMS by using the **snmp-server enable traps mac-notification** global configuration command.

Examples

This example shows how to enable the MAC address-table notification feature, set the interval time to 60 seconds, and set the history-size to 100 entries:

```
Switch(config)# mac address-table notification
Switch(config)# mac address-table notification interval 60
Switch(config)# mac address-table notification history-size 100
```

You can verify your settings by entering the **show mac address-table notification** privileged EXEC command.

Related Commands

Command	Description
clear mac address-table notification	Clears the MAC address notification global counters.
show mac address-table notification	Displays the MAC address notification settings on all interfaces or on the specified interface.
snmp-server enable traps	Sends the SNMP MAC notification traps when the mac-notification keyword is appended.
snmp trap mac-notification	Enables the SNMP MAC notification trap on a specific interface.

mac address-table static

Use the **mac address-table static** global configuration command to add static addresses to the MAC address table. Use the **no** form of this command to remove static entries from the table.

mac address-table static *mac-addr* **vlan** *vlan-id* **interface** *interface-id*

no mac address-table static *mac-addr* **vlan** *vlan-id* [**interface** *interface-id*]

Syntax Description

<i>mac-addr</i>	Destination MAC address (unicast or multicast) to add to the address table. Packets with this destination address received in the specified VLAN are forwarded to the specified interface.
vlan <i>vlan-id</i>	Specify the VLAN for which the packet with the specified MAC address is received. The range is 1 to 4094.
interface <i>interface-id</i>	Interface to which the received packet is forwarded. Valid interfaces include physical ports and port channels.

Defaults

No static addresses are configured.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Examples

This example shows how to add the static address c2f3.220a.12f4 to the MAC address table. When a packet is received in VLAN 4 with this MAC address as its destination, the packet is forwarded to the specified interface:

```
Switch(config)# mac address-table static c2f3.220a.12f4 vlan 4 interface
gigabitethernet0/1
```

You can verify your setting by entering the **show mac address-table** privileged EXEC command.

Related Commands

Command	Description
show mac address-table static	Displays static MAC address table entries only.

mac address-table static drop

Use the **mac address-table static drop** global configuration command to enable unicast MAC address filtering and to configure the switch to drop traffic with a specific source or destination MAC address. Use the **no** form of this command to return to the default setting.

mac address-table static *mac-addr* **vlan** *vlan-id* **drop**

no mac address-table static *mac-addr* **vlan** *vlan-id*

Syntax Description

<i>mac-addr</i>	Unicast source or destination MAC address. Packets with this MAC address are dropped.
vlan <i>vlan-id</i>	Specify the VLAN for which the packet with the specified MAC address is received. Valid VLAN IDs are 1 to 4094.

Defaults

Unicast MAC address filtering is disabled. The switch does not drop traffic for specific source or destination MAC addresses.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Follow these guidelines when using this feature:

- Multicast MAC addresses, broadcast MAC addresses, and router MAC addresses are not supported. Packets that are forwarded to the CPU are also not supported.
- If you add a unicast MAC address as a static address and configure unicast MAC address filtering, the switch either adds the MAC address as a static address or drops packets with that MAC address, depending on which command was entered last. The second command that you entered overrides the first command.

For example, if you enter the **mac address-table static** *mac-addr* **vlan** *vlan-id* **interface** *interface-id* global configuration command followed by the **mac address-table static** *mac-addr* **vlan** *vlan-id* **drop** command, the switch drops packets with the specified MAC address as a source or destination.

If you enter the **mac address-table static** *mac-addr* **vlan** *vlan-id* **drop** global configuration command followed by the **mac address-table static** *mac-addr* **vlan** *vlan-id* **interface** *interface-id* command, the switch adds the MAC address as a static address.

Examples

This example shows how to enable unicast MAC address filtering and to configure the switch to drop packets that have a source or destination address of c2f3.220a.12f4. When a packet is received in VLAN 4 with this MAC address as its source or destination, the packet is dropped:

```
Switch(config)# mac address-table static c2f3.220a.12f4 vlan 4 drop
```

This example shows how to disable unicast MAC address filtering:

```
Switch(config)# no mac address-table static c2f3.220a.12f4 vlan 4
```

You can verify your setting by entering the **show mac address-table static** privileged EXEC command.

Related Commands

Command	Description
show mac address-table static	Displays only static MAC address table entries.

macro apply

Use the **macro apply** interface configuration command to apply a macro to an interface or to apply and trace a macro configuration on an interface.

```
macro {apply | trace} macro-name [parameter {value}] [parameter {value}]
      [parameter {value}]
```

Syntax Description

apply	Apply a macro to the specified interface.
trace	Use the trace keyword to apply a macro to an interface and to debug the macro.
<i>macro-name</i>	Specify the name of the macro.
parameter value	(Optional) Specify unique parameter values that are specific to the interface. You can enter up to three keyword-value pairs. Parameter keyword matching is case sensitive. All matching occurrences of the keyword are replaced with the corresponding value.

Defaults

This command has no default setting.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(18)SE	The parameter value keywords were added.

Usage Guidelines

You can use the **macro trace** *macro-name* interface configuration command to apply and show the macros running on an interface or to debug the macro to find any syntax or configuration errors.

If a command fails because of a syntax error or a configuration error when you apply a macro, the macro continues to apply the remaining commands to the interface.

When creating a macro that requires the assignment of unique values, use the **parameter value** keywords to designate values specific to the interface.

Keyword matching is case sensitive. All matching occurrences of the keyword are replaced with the corresponding value. Any full match of a keyword, even if it is part of a larger string, is considered a match and is replaced by the corresponding value.

Some macros might contain keywords that require a parameter value. You can use the **macro apply** *macro-name* ? command to display a list of any required values in the macro. If you apply a macro without entering the keyword values, the commands are invalid and are not applied.

There are Cisco-default Smartports macros embedded in the switch software. You can display these macros and the commands they contain by using the **show parser macro** user EXEC command.

Follow these guidelines when you apply a Cisco-default Smartports macro on an interface:

- Display all macros on the switch by using the **show parser macro** user EXEC command. Display the contents of a specific macro by using the **show parser macro name** *macro-name* user EXEC command.
- Keywords that begin with \$ mean that a unique parameter value is required. Append the Cisco-default macro with the required values by using the **parameter** *value* keywords.

The Cisco-default macros use the \$ character to help identify required keywords. There is no restriction on using the \$ character to define keywords when you create a macro.

When you apply a macro to an interface, the macro name is automatically added to the interface. You can display the applied commands and macro names by using the **show running-configuration interface** *interface-id* user EXEC command.

A macro applied to an interface range behaves the same way as a macro applied to a single interface. When you use an interface range, the macro is applied sequentially to each interface within the range. If a macro command fails on one interface, it is still applied to the remaining interfaces.

You can delete a macro-applied configuration on an interface by entering the **default interface** *interface-id* interface configuration command.

Examples

After you have created a macro by using the **macro name** global configuration command, you can apply it to an interface. This example shows how to apply a user-created macro called **duplex** to an interface:

```
Switch(config-if)# macro apply duplex
```

To debug a macro, use the **macro trace** interface configuration command to find any syntax or configuration errors in the macro as it is applied to an interface. This example shows how troubleshoot the user-created macro called **duplex** on an interface:

```
Switch(config-if)# macro trace duplex
Applying command...`duplex auto`
%Error Unknown error.
Applying command...`speed nonegotiate`
```

This example shows how to display the Cisco-default **cisco-desktop** macro and how to apply the macro and set the access VLAN ID to 25 on an interface:

```
Switch# show parser macro cisco-desktop
-----
Macro name : cisco-desktop
Macro type : default

# Basic interface - Enable data VLAN only
# Recommended value for access vlan (AVID) should not be 1
switchport access vlan $AVID
switchport mode access

# Enable port security limiting port to a single
# MAC address -- that of desktop
switchport port-security
switchport port-security maximum 1

# Ensure port-security age is greater than one minute
# and use inactivity timer
switchport port-security violation restrict
switchport port-security aging time 2
switchport port-security aging type inactivity
```

macro apply

```
# Configure port as an edge network port
spanning-tree portfast
spanning-tree bpduguard enable
-----
Switch#
Switch# configure terminal
Switch(config)# interface gigabitethernet0/4
Switch(config-if)# macro apply cisco-desktop $AVID 25
```

Related Commands

Command	Description
macro description	Adds a description about the macros that are applied to an interface.
macro global	Applies a macro on a switch or applies and traces a macro on a switch.
macro global description	Adds a description about the macros that are applied to the switch.
macro name	Creates a macro.
show parser macro	Displays the macro definition for all macros or for the specified macro.

macro description

Use the **macro description** interface configuration command to enter a description about which macros are applied to an interface. Use the **no** form of this command to remove the description.

macro description *text*

no macro description *text*

Syntax Description

description *text* Enter a description about the macros that are applied to the specified interface.

Defaults

This command has no default setting.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Use the **description** keyword to associate comment text, or the macro name, with an interface. When multiple macros are applied on a single interface, the description text will be from the last applied macro.

This example shows how to add a description to an interface:

```
Switch(config-if)# macro description duplex settings
```

You can verify your settings by entering the **show parser macro description** privileged EXEC command.

Related Commands

Command	Description
macro apply	Applies a macro on an interface or applies and traces a macro on an interface.
macro global	Applies a macro on a switch or applies and traces a macro on a switch
macro global description	Adds a description about the macros that are applied to the switch.
macro name	Creates a macro.
show parser macro	Displays the macro definition for all macros or for the specified macro.

macro global

Use the **macro global** global configuration command to apply a macro to a switch or to apply and trace a macro configuration on a switch.

```
macro global {apply | trace} macro-name [parameter {value}] [parameter {value}]
[parameter {value}]
```

Syntax Description		
apply		Apply a macro to the switch.
trace		Apply a macro to a switch and to debug the macro.
<i>macro-name</i>		Specify the name of the macro.
parameter value	(Optional)	Specify unique parameter values that are specific to the switch. You can enter up to three keyword-value pairs. Parameter keyword matching is case sensitive. All matching occurrences of the keyword are replaced with the corresponding value.

Defaults This command has no default setting.

Command Modes Global configuration

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines

You can use the **macro trace** *macro-name* global configuration command to apply and to show the macros running on a switch or to debug the macro to find any syntax or configuration errors.

If a command fails because of a syntax error or a configuration error when you apply a macro, the macro continues to apply the remaining commands to the switch.

When creating a macro that requires the assignment of unique values, use the **parameter value** keywords to designate values specific to the switch.

Keyword matching is case sensitive. All matching occurrences of the keyword are replaced with the corresponding value. Any full match of a keyword, even if it is part of a larger string, is considered a match and is replaced by the corresponding value.

Some macros might contain keywords that require a parameter value. You can use the **macro global apply** *macro-name* ? command to display a list of any required values in the macro. If you apply a macro without entering the keyword values, the commands are invalid and are not applied.

There are Cisco-default Smartports macros embedded in the switch software. You can display these macros and the commands they contain by using the **show parser macro** user EXEC command.

Follow these guidelines when you apply a Cisco-default Smartports macro on a switch:

- Display all macros on the switch by using the **show parser macro** user EXEC command. Display the contents of a specific macro by using the **show parser macro name** *macro-name* user EXEC command.
- Keywords that begin with \$ mean that a unique parameter value is required. Append the Cisco-default macro with the required values by using the **parameter** *value* keywords.

The Cisco-default macros use the \$ character to help identify required keywords. There is no restriction on using the \$ character to define keywords when you create a macro.

When you apply a macro to a switch, the macro name is automatically added to the switch. You can display the applied commands and macro names by using the **show running-configuration** user EXEC command.

You can delete a global macro-applied configuration on a switch only by entering the **no** version of each command contained in the macro.

Examples

After you have created a new macro by using the **macro name** global configuration command, you can apply it to a switch. This example shows how see the **snmp** macro and how to apply the macro and set the hostname to test-server and set the IP precedence value to 7:

```
Switch# show parser macro name snmp
Macro name : snmp
Macro type : customizable

#enable port security, linkup, and linkdown traps
snmp-server enable traps port-security
snmp-server enable traps linkup
snmp-server enable traps linkdown
#set snmp-server host
snmp-server host ADDRESS
#set SNMP trap notifications precedence
snmp-server ip precedence VALUE

-----
Switch(config)# macro global apply snmp ADDRESS test-server VALUE 7
```

To debug a macro, use the **macro global trace** global configuration command to find any syntax or configuration errors in the macro when it is applied to a switch. In this example, the **ADDRESS** parameter value was not entered, causing the **snmp-server host** command to fail while the remainder of the macro is applied to the switch:

```
Switch(config)# macro global trace snmp VALUE 7
Applying command...'snmp-server enable traps port-security'
Applying command...'snmp-server enable traps linkup'
Applying command...'snmp-server enable traps linkdown'
Applying command...'snmp-server host'
%Error Unknown error.
Applying command...'snmp-server ip precedence 7'
```

Related Commands	Command	Description
	macro apply	Applies a macro on an interface or applies and traces a macro on an interface.
	macro description	Adds a description about the macros that are applied to an interface.
	macro global description	Adds a description about the macros that are applied to the switch.
	macro name	Creates a macro.
	show parser macro	Displays the macro definition for all macros or for the specified macro.

macro global description

Use the **macro global description** global configuration command to enter a description about the macros that are applied to the switch. Use the **no** form of this command to remove the description.

macro global description *text*

no macro global description *text*

Syntax Description

description *text* Enter a description about the macros that are applied to the switch.

Defaults

This command has no default setting.

Command Modes

Global configuration

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

Use the **description** keyword to associate comment text, or the macro name, with a switch. When multiple macros are applied on a switch, the description text will be from the last applied macro.

This example shows how to add a description to a switch:

```
Switch(config)# macro global description uddld aggressive mode enabled
```

You can verify your settings by entering the **show parser macro description** privileged EXEC command.

Related Commands

Command	Description
macro apply	Applies a macro on an interface or applies and traces a macro on an interface.
macro description	Adds a description about the macros that are applied to an interface.
macro global	Applies a macro on a switch or applies and traces a macro on a switch.
macro name	Creates a macro.
show parser macro	Displays the macro definition for all macros or for the specified macro.

macro name

Use the **macro name** global configuration command to create a configuration macro. Use the **no** form of this command to delete the macro definition.

macro name *macro-name*

no macro name *macro-name*

Syntax Description	<i>macro-name</i> Name of the macro.
---------------------------	--------------------------------------

Defaults	This command has no default setting.
-----------------	--------------------------------------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
12.2(20)SE	The help string # macro keywords was added.	

Usage Guidelines A macro can contain up to 3000 characters. Enter one macro command per line. Use the @ character to end the macro. Use the # character at the beginning of a line to enter comment text within the macro.

You can define mandatory keywords within a macro by using a help string to specify the keywords. Enter **# macro keywords word** to define the keywords that are available for use with the macro. You can enter up to three help string keywords separated by a space. If you enter more than three macro keywords, only the first three are shown.

Macro names are case sensitive. For example, the commands **macro name Sample-Macro** and **macro name sample-macro** will result in two separate macros.

When creating a macro, do not use the **exit** or **end** commands or change the command mode by using **interface interface-id**. This could cause commands that follow **exit**, **end**, or **interface interface-id** to execute in a different command mode.

The **no** form of this command only deletes the macro definition. It does not affect the configuration of those interfaces on which the macro is already applied. You can delete a macro-applied configuration on an interface by entering the **default interface interface-id** interface configuration command.

Alternatively, you can create an *anti-macro* for an existing macro that contains the **no** form of all the corresponding commands in the original macro. Then apply the anti-macro to the interface.

You can modify a macro by creating a new macro with the same name as the existing macro. The newly created macro overwrites the existing macro but does not affect the configuration of those interfaces on which the original macro was applied.

Examples

This example shows how to create a macro that defines the duplex mode and speed:

```
Switch(config)# macro name duplex
Enter macro commands one per line. End with the character '@'.
duplex full
speed auto
@
```

This example shows how create a macro with **# macro keywords**:

```
Switch(config)# macro name test
switchport access vlan $VLANID
switchport port-security maximum $MAX
#macro keywords $VLANID $MAX
@
```

This example shows how to display the mandatory keyword values before you apply the macro to an interface:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# macro apply test ?
WORD keyword to replace with a value e.g $VLANID,$MAX
<cr>
```

```
Switch(config-if)# macro apply test $VLANID ?
WORD Value of first keyword to replace
```

```
Switch(config-if)# macro apply test $VLANID 2
WORD keyword to replace with a value e.g $VLANID,$MAX
<cr>
```

```
Switch(config-if)# macro apply test $VLANID 2 $MAX ?
WORD Value of second keyword to replace
```

Related Commands

Command	Description
macro apply	Applies a macro on an interface or applies and traces a macro on an interface.
macro description	Adds a description about the macros that are applied to an interface.
macro global	Applies a macro on a switch or applies and traces a macro on a switch
macro global description	Adds a description about the macros that are applied to the switch.
show parser macro	Displays the macro definition for all macros or for the specified macro.

match (access-map configuration)

Use the **match** access-map configuration command to set the VLAN map to match packets against one or more access lists. Use the **no** form of this command to remove the match parameters.

```
match {ip address {name | number} [name | number] [name | number]...} | {mac address {name} [name] [name]...}
```

```
no match {ip address {name | number} [name | number] [name | number]...} | {mac address {name} [name] [name]...}
```

Syntax Description	
ip address	Set the access map to match packets against an IP address access list.
mac address	Set the access map to match packets against a MAC address access list.
<i>name</i>	Name of the access list to match packets against.
<i>number</i>	Number of the access list to match packets against. This option is not valid for MAC access lists.

Defaults The default action is to have no match parameters applied to a VLAN map.

Command Modes Access-map configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You enter access-map configuration mode by using the **vlan access-map** global configuration command. You must enter one access list name or number; others are optional. You can match packets against one or more access lists. Matching any of the lists counts as a match of the entry.

In access-map configuration mode, use the **match** command to define the match conditions for a VLAN map applied to a VLAN. Use the **action** command to set the action that occurs when the packet matches the conditions.

Packets are matched only against access lists of the same protocol type; IP packets are matched against IP access lists, and all other packets are matched against MAC access lists.

Both IP and MAC addresses can be specified for the same map entry.

Examples

This example shows how to define and apply a VLAN access map *vmap4* to VLANs 5 and 6 that will cause the interface to drop an IP packet if the packet matches the conditions defined in access list *a12*.

```
Switch(config)# vlan access-map vmap4
Switch(config-access-map)# match ip address a12
Switch(config-access-map)# action drop
Switch(config-access-map)# exit
Switch(config)# vlan filter vmap4 vlan-list 5-6
```

You can verify your settings by entering the **show vlan access-map** privileged EXEC command.

Related Commands

Command	Description
access-list	Configures a standard numbered ACL. For syntax information, select Cisco IOS IP Command Reference, Volume 1 of 3:Addressing and Services, Release 12.2 > IP Services Commands .
action	Specifies the action to be taken if the packet matches an entry in an access control list (ACL).
ip access list	Creates a named access list. For syntax information, select Cisco IOS IP Command Reference, Volume 1 of 3:Addressing and Services, Release 12.2 > IP Services Commands .
mac access-list extended	Creates a named MAC address access list.
show vlan access-map	Displays the VLAN access maps created on the switch.
vlan access-map	Creates a VLAN access map.

match (class-map configuration)

Use the **match** class-map configuration command to define the match criteria to classify traffic. Use the **no** form of this command to remove the match criteria.

```
match { access-group acl-index-or-name | input-interface interface-id-list | ip dscp dscp-list | ip precedence ip-precedence-list }
```

```
no match { access-group acl-index-or-name | input-interface interface-id-list | ip dscp dscp-list | ip precedence ip-precedence-list }
```

Syntax Description

access-group <i>acl-index-or-name</i>	Number or name of an IP standard or extended access control list (ACL) or MAC ACL. For an IP standard ACL, the ACL index range is 1 to 99 and 1300 to 1999. For an IP extended ACL, the ACL index range is 100 to 199 and 2000 to 2699.
input-interface <i>interface-id-list</i>	Specify the physical ports to which the interface-level class map in a hierarchical policy map applies. You can specify up to six entries in the list by specifying a port (counts as one entry), a list of ports separated by a space (each port counts as an entry), or a range of ports separated by a hyphen (counts as two entries).
ip dscp <i>dscp-list</i>	List of up to eight IP Differentiated Services Code Point (DSCP) values to match against incoming packets. Separate each value with a space. The range is 0 to 63. You also can enter a mnemonic name for a commonly-used value.
ip precedence <i>ip-precedence-list</i>	List of up to eight IP-precedence values to match against incoming packets. Separate each value with a space. The range is 0 to 7. You also can enter a mnemonic name for a commonly-used value.

Defaults

No match criteria are defined.

Command Modes

Class-map configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	The input-interface <i>interface-id-list</i> keyword was added.

Usage Guidelines

The **match** command is used to specify which fields in the incoming packets are examined to classify the packets. Only the IP access group or the MAC access group matching to the Ether Type/Len are supported.

To define packet classification on a physical-port basis, only one **match** command per class map is supported. In this situation, the **match-all** and **match-any** keywords are equivalent.

For the **match ip dscp** *dscp-list* or the **match ip precedence** *ip-precedence-list* command, you can enter a mnemonic name for a commonly used value. For example, you can enter the **match ip dscp af11** command, which is the same as entering the **match ip dscp 10** command. You can enter the **match ip precedence critical** command, which is the same as entering the **match ip precedence 5** command. For a list of supported mnemonics, enter the **match ip dscp ?** or the **match ip precedence ?** command to see the command-line help strings.

Use the **input-interface** *interface-id-list* keyword when you are configuring an interface-level class map in a hierarchical policy map. For the *interface-id-list*, you can specify up to six entries.

Examples

This example shows how to create a class map called *class2*, which matches all the incoming traffic with DSCP values of 10, 11, and 12:

```
Switch(config)# class-map class2
Switch(config-cmap)# match ip dscp 10 11 12
Switch(config-cmap)# exit
```

This example shows how to create a class map called *class3*, which matches all the incoming traffic with IP-precedence values of 5, 6, and 7:

```
Switch(config)# class-map class3
Switch(config-cmap)# match ip precedence 5 6 7
Switch(config-cmap)# exit
```

This example shows how to delete the IP-precedence match criteria and to classify traffic using *acl1*:

```
Switch(config)# class-map class2
Switch(config-cmap)# match ip precedence 5 6 7
Switch(config-cmap)# no match ip precedence
Switch(config-cmap)# match access-group acl1
Switch(config-cmap)# exit
```

This example shows how to specify a list of physical ports to which an interface-level class map in a hierarchical policy map applies:

```
Switch(config)# class-map match-all class4
Switch(config-cmap)# match input-interface gigabitethernet0/1 gigabitethernet0/2
Switch(config-cmap)# exit
```

This example shows how to specify a range of physical ports to which an interface-level class map in a hierarchical policy map applies:

```
Switch(config)# class-map match-all class4
Switch(config-cmap)# match input-interface gigabitethernet0/1 - gigabitethernet0/5
Switch(config-cmap)# exit
```

You can verify your settings by entering the **show class-map** privileged EXEC command.

Related Commands

Command	Description
class-map	Creates a class map to be used for matching packets to the class whose name you specify.
show class-map	Displays quality of service (QoS) class maps.

mdix auto

Use the **mdix auto** interface configuration command to enable the automatic medium-dependent interface crossover (auto-MDIX) feature on the interface. When auto-MDIX is enabled, the interface automatically detects the required cable connection type (straight-through or crossover) and configures the connection appropriately. Use the **no** form of this command to disable auto-MDIX.

mdix auto

no mdix auto

Syntax Description This command has no arguments or keywords.

Defaults Auto-MDIX is enabled.

Command Modes Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(20)SE	The default setting changed from <i>disabled</i> to <i>enabled</i> .

Usage Guidelines

When you enable auto-MDIX on an interface, you must also set the interface speed and duplex to **auto** so that the feature operates correctly.

When auto-MDIX (and autonegotiation of speed and duplex) is enabled on one or both of connected interfaces, link up occurs, even if the cable type (straight-through or crossover) is incorrect.

Auto-MDIX is supported on all 10/100 and 10/100/1000 Mbps interfaces and on 10/100/1000BASE-TX small form-factor pluggable (SFP) module interfaces. It is not supported on 1000BASE-SX or -LX SFP module interfaces.

Examples

This example shows how to enable auto-MDIX on a port:

```
Switch# configure terminal
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# speed auto
Switch(config-if)# duplex auto
Switch(config-if)# mdix auto
Switch(config-if)# end
```

You can verify the operational state of auto-MDIX on the interface by entering the **show controllers ethernet-controller interface-id phy** privileged EXEC command.

Related Commands	Command	Description
	<code>show controllers ethernet-controller interface-id phy</code>	Displays general information about internal registers of an interface, including the operational state of auto-MDIX.

mls qos

Use the **mls qos** global configuration command to enable quality of service (QoS) for the entire switch. When the **mls qos** command is entered, QoS is enabled with the default parameters on all ports in the system. Use the **no** form of this command to reset all the QoS-related statistics and to disable the QoS features for the entire switch.

mls qos

no mls qos

Syntax Description This command has no arguments or keywords.

Defaults QoS is disabled. There is no concept of trusted or untrusted ports because the packets are not modified (the CoS, DSCP, and IP precedence values in the packet are not changed). Traffic is switched in pass-through mode (packets are switched without any rewrites and classified as best effort without any policing).

When QoS is enabled with the **mls qos** global configuration command and all other QoS settings are set to their defaults, traffic is classified as best effort (the DSCP and CoS value is set to 0) without any policing. No policy maps are configured. The default port trust state on all ports is untrusted. The default ingress and egress queue settings are in effect.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines QoS must be globally enabled to use QoS classification, policing, mark down or drop, queueing, and traffic shaping features. You can create a policy-map and attach it to a port before entering the **mls qos** command. However, until you enter the **mls qos** command, QoS processing is disabled.

Policy-maps and class-maps used to configure QoS are not deleted from the configuration by the **no mls qos** command, but entries corresponding to policy maps are removed from the switch hardware to save system resources. To re-enable QoS with the previous configurations, use the **mls qos** command.

Toggling the QoS status of the switch with this command modifies (reallocates) the sizes of the queues. During the queue size modification, the queue is temporarily shut down during the hardware reconfiguration, and the switch drops newly arrived packets for this queue.

Examples This example shows how to enable QoS on the switch:

```
Switch(config)# mls qos
```

You can verify your settings by entering the **show mls qos** privileged EXEC command.

Related Commands

Command	Description
show mls qos	Displays QoS information.

mls qos aggregate-policer

Use the **mls qos aggregate-policer** global configuration command to define policer parameters, which can be shared by multiple classes within the same policy map. A policer defines a maximum permissible rate of transmission, a maximum burst size for transmissions, and an action to take if either maximum is exceeded. Use the **no** form of this command to delete an aggregate policer.

```
mls qos aggregate-policer aggregate-policer-name rate-bps burst-byte exceed-action { drop | policed-dscp-transmit }
```

```
no mls qos aggregate-policer aggregate-policer-name
```

Syntax Description		
<i>aggregate-policer-name</i>	Name of the aggregate policer referenced by the police aggregate policy-map class configuration command.	
<i>rate-bps</i>	Specify the average traffic rate in bits per second (bps). The range is 8000 to 1000000000.	
<i>burst-byte</i>	Specify the normal burst size in bytes. The range is 8000 to 1000000.	
exceed-action drop	When the specified rate is exceeded, specify that the switch drop the packet.	
exceed-action policed-dscp-transmit	When the specified rate is exceeded, specify that the switch change the Differentiated Services Code Point (DSCP) of the packet to that specified in the policed-DSCP map and then send the packet.	

Defaults No aggregate policers are defined.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Define an aggregate policer if the policer is shared with multiple classes. Policers for a port cannot be shared with other policers for another port; traffic from two different ports cannot be aggregated for policing purposes.

The port ASIC device, which controls more than one physical port, supports 256 policers (255 policers plus 1 **no** policer). The maximum number of policers supported per port is 64. Policers are allocated on demand by the software and are constrained by the hardware and ASIC boundaries. You cannot reserve policers per port (there is no guarantee that a port will be assigned to any policer).

You apply an aggregate policer to multiple classes in the same policy map; you cannot use an aggregate policer across different policy maps.

You cannot delete an aggregate policer if it is being used in a policy map. You must first use the **no police aggregate** *aggregate-policer-name* policy-map class configuration command to delete the aggregate policer from all policy maps before using the **no mls qos aggregate-policer** *aggregate-policer-name* command.

Policing uses a token-bucket algorithm. You configure the bucket depth (the maximum burst that is tolerated before the bucket overflows) by using the *burst-byte* option of the **police** policy-map class configuration command or the **mls qos aggregate-policer** global configuration command. You configure how fast (the average rate) that the tokens are removed from the bucket by using the *rate-bps* option of the **police** policy-map class configuration command or the **mls qos aggregate-policer** global configuration command. For more information, see the software configuration guide for this release.

Examples

This example shows how to define the aggregate policer parameters and how to apply the policer to multiple classes in a policy map:

```
Switch(config)# mls qos aggregate-policer agg_policer1 1000000 1000000 exceed-action drop
Switch(config)# policy-map policy2
Switch(config-pmap)# class class1
Switch(config-pmap-c)# police aggregate agg_policer1
Switch(config-pmap-c)# exit
Switch(config-pmap)# class class2
Switch(config-pmap-c)# set dscp 10
Switch(config-pmap-c)# police aggregate agg_policer1
Switch(config-pmap-c)# exit
Switch(config-pmap)# class class3
Switch(config-pmap-c)# trust dscp
Switch(config-pmap-c)# police aggregate agg_policer2
Switch(config-pmap-c)# exit
```

You can verify your settings by entering the **show mls qos aggregate-policer** privileged EXEC command.

Related Commands

Command	Description
police aggregate	Creates a policer that is shared by different classes.
show mls qos aggregate-policer	Displays the quality of service (QoS) aggregate policer configuration.

mls qos cos

Use the **mls qos cos** interface configuration command to define the default class of service (CoS) value of a port or to assign the default CoS to all incoming packets on the port. Use the **no** form of this command to return to the default setting.

```
mls qos cos {default-cos | override}
```

```
no mls qos cos {default-cos | override}
```

Syntax Description

<i>default-cos</i>	Assign a default CoS value to a port. If packets are untagged, the default CoS value becomes the packet CoS value. The CoS range is 0 to 7.
override	Override the CoS of the incoming packets, and apply the default CoS value on the port to all incoming packets.

Defaults

The default CoS value for a port is 0.
CoS override is disabled.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You can use the default value to assign a CoS and Differentiated Services Code Point (DSCP) value to all incoming packets that are untagged (if the incoming packet does not have a CoS value). You also can assign a default CoS and DSCP value to all incoming packets by using the **override** keyword.

Use the **override** keyword when all incoming packets on certain ports deserve higher or lower priority than packets entering from other ports. Even if a port is previously set to trust DSCP, CoS, or IP precedence, this command overrides the previously configured trust state, and all the incoming CoS values are assigned the default CoS value configured with the **mls qos cos** command. If an incoming packet is tagged, the CoS value of the packet is modified with the default CoS of the port at the ingress port.

Examples

This example shows how to configure the default port CoS to 4 on a port:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# mls qos trust cos
Switch(config-if)# mls qos cos 4
```

This example shows how to assign all the packets entering a port to the default port CoS value of 4 on a port:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# mls qos cos 4
Switch(config-if)# mls qos cos override
```

You can verify your settings by entering the **show mls qos interface** privileged EXEC command.

Related Commands

Command	Description
show mls qos interface	Displays quality of service (QoS) information.

mls qos dscp-mutation

Use the **mls qos dscp-mutation** interface configuration command to apply a Differentiated Services Code Point (DSCP)-to-DSCP-mutation map to a DSCP-trusted port. Use the **no** form of this command to return the map to the default settings (no DSCP mutation).

mls qos dscp-mutation *dscp-mutation-name*

no mls qos dscp-mutation *dscp-mutation-name*

Syntax Description	<i>dscp-mutation-name</i>	Name of the DSCP-to-DSCP-mutation map. This map was previously defined with the mls qos map dscp-mutation global configuration command.
---------------------------	---------------------------	--

Defaults	The default DSCP-to-DSCP-mutation map is a null map, which maps incoming DSCPs to the same DSCP values.
-----------------	---

Command Modes	Interface configuration
----------------------	-------------------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	<p>If two quality of service (QoS) domains have different DSCP definitions, use the DSCP-to-DSCP-mutation map to translate one set of DSCP values to match the definition of another domain. You apply the DSCP-to-DSCP-mutation map to the receiving port (ingress mutation) at the boundary of a quality of service (QoS) administrative domain.</p> <p>With ingress mutation, the new DSCP value overwrites the one in the packet, and QoS handles the packet with this new value. The switch sends the packet out the port with the new DSCP value.</p> <p>You can configure multiple DSCP-to-DSCP-mutation maps on ingress ports.</p> <p>You apply the map only to DSCP-trusted ports. If you apply the DSCP mutation map to an untrusted port, to class of service (CoS) or IP-precedence trusted port, the command has no immediate effect until the port becomes DSCP-trusted.</p>
-------------------------	--

Examples	This example shows how to define the DSCP-to-DSCP-mutation map named <i>dscpmutation1</i> and to apply the map to a port:
-----------------	---

```
Switch(config)# mls qos map dscp-mutation dscpmutation1 10 11 12 13 to 30
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# mls qos trust dscp
Switch(config-if)# mls qos dscp-mutation dscpmutation1
```

This example show how to remove the DSCP-to-DSCP-mutation map name *dscpmutation1* from the port and to reset the map to the default:

```
Switch(config-if)# no mls qos dscp-mutation dscpmutation1
```

You can verify your settings by entering the **show mls qos maps** privileged EXEC command.

Related Commands	Command	Description
	mls qos map dscp-mutation	Defines the DSCP-to-DSCP-mutation map.
	mls qos trust	Configures the port trust state.
	show mls qos maps	Displays QoS mapping information.

mls qos map

Use the **mls qos map** global configuration command to define the class of service (CoS)-to-Differentiated Services Code Point (DSCP) map, DSCP-to-CoS map, the DSCP-to-DSCP-mutation map, the IP-precedence-to-DSCP map, and the policed-DSCP map. Use the **no** form of this command to return to the default map.

```
mls qos map { cos-dscp dscp1...dscp8 | dscp-cos dscp-list to cos | dscp-mutation
dscp-mutation-name in-dscp to out-dscp | ip-prec-dscp dscp1...dscp8 | policed-dscp dscp-list
to mark-down-dscp }
```

```
no mls qos map { cos-dscp | dscp-cos | dscp-mutation dscp-mutation-name | ip-prec-dscp |
policed-dscp }
```

Syntax Description

cos-dscp <i>dscp1...dscp8</i>	Define the CoS-to-DSCP map. For <i>dscp1...dscp8</i> , enter eight DSCP values that correspond to CoS values 0 to 7. Separate each DSCP value with a space. The range is 0 to 63.
dscp-cos <i>dscp-list</i> to <i>cos</i>	Define the DSCP-to-CoS map. For <i>dscp-list</i> , enter up to eight DSCP values, with each value separated by a space. The range is 0 to 63. Then enter the to keyword. For <i>cos</i> , enter a single CoS value to which the DSCP values correspond. The range is 0 to 7.
dscp-mutation <i>dscp-mutation-name in-dscp</i> to <i>out-dscp</i>	Define the DSCP-to-DSCP-mutation map. For <i>dscp-mutation-name</i> , enter the mutation map name. For <i>in-dscp</i> , enter up to eight DSCP values, with each value separated by a space. Then enter the to keyword. For <i>out-dscp</i> , enter a single DSCP value. The range is 0 to 63.
ip-prec-dscp <i>dscp1...dscp8</i>	Define the IP-precedence-to-DSCP map. For <i>dscp1...dscp8</i> , enter eight DSCP values that correspond to the IP precedence values 0 to 7. Separate each DSCP value with a space. The range is 0 to 63.
policed-dscp <i>dscp-list</i> to <i>mark-down-dscp</i>	Define the policed-DSCP map. For <i>dscp-list</i> , enter up to eight DSCP values, with each value separated by a space. Then enter the to keyword. For <i>mark-down-dscp</i> , enter the corresponding policed (marked down) DSCP value. The range is 0 to 63.

Defaults

Table 2-6 shows the default CoS-to-DSCP map:

Table 2-6 *Default CoS-to-DSCP Map*

CoS Value	DSCP Value
0	0
1	8
2	16
3	24
4	32
5	40
6	48
7	56

Table 2-7 shows the default DSCP-to-CoS map:

Table 2-7 *Default DSCP-to-CoS Map*

DSCP Value	CoS Value
0–7	0
8–15	1
16–23	2
24–31	3
32–39	4
40–47	5
48–55	6
56–63	7

Table 2-8 shows the default IP-precedence-to-DSCP map:

Table 2-8 *Default IP-Precedence-to-DSCP Map*

IP Precedence Value	DSCP Value
0	0
1	8
2	16
3	24
4	32
5	40
6	48
7	56

The default DSCP-to-DSCP-mutation map is a null map, which maps an incoming DSCP value to the same DSCP value.

The default policed-DSCP map is a null map, which maps an incoming DSCP value to the same DSCP value.

Command Modes Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

All the maps are globally defined. All the maps, except the DSCP-to-DSCP-mutation map, are applied to all ports. The DSCP-to-DSCP-mutation map is applied to a specific port.

Examples

This example shows how to define the IP-precedence-to-DSCP map and to map IP-precedence values 0 to 7 to DSCP values of 0, 10, 20, 30, 40, 50, 55, and 60:

```
Switch# configure terminal
Switch(config)# mls qos map ip-prec-dscp 0 10 20 30 40 50 55 60
```

This example shows how to define the policed-DSCP map. DSCP values 1, 2, 3, 4, 5, and 6 are marked down to DSCP value 0. Marked DSCP values that not explicitly configured are not modified:

```
Switch# configure terminal
Switch(config)# mls qos map policed-dscp 1 2 3 4 5 6 to 0
```

This example shows how to define the DSCP-to-CoS map. DSCP values 20, 21, 22, 23, and 24 are mapped to CoS 1. DSCP values 10, 11, 12, 13, 14, 15, 16, and 17 are mapped to CoS 0:

```
Switch# configure terminal
Switch(config)# mls qos map dscp-cos 20 21 22 23 24 to 1
Switch(config)# mls qos map dscp-cos 10 11 12 13 14 15 16 17 to 0
```

This example shows how to define the CoS-to-DSCP map. CoS values 0 to 7 are mapped to DSCP values 0, 5, 10, 15, 20, 25, 30, and 35:

```
Switch# configure terminal
Switch(config)# mls qos map cos-dscp 0 5 10 15 20 25 30 35
```

This example shows how to define the DSCP-to-DSCP-mutation map. All the entries that are not explicitly configured are not modified (remain as specified in the null map):

```
Switch# configure terminal
Switch(config)# mls qos map dscp-mutation mutation1 1 2 3 4 5 6 7 to 10
Switch(config)# mls qos map dscp-mutation mutation1 8 9 10 11 12 13 to 10
Switch(config)# mls qos map dscp-mutation mutation1 20 21 22 to 20
Switch(config)# mls qos map dscp-mutation mutation1 0 31 32 33 34 to 30
```

You can verify your settings by entering the **show mls qos maps** privileged EXEC command.

Related Commands	Command	Description
	mls qos dscp-mutation	Applies a DSCP-to-DSCP-mutation map to a DSCP-trusted port.
	show mls qos maps	Displays quality of service (QoS) mapping information.

mls qos queue-set output buffers

Use the **mls qos queue-set output buffers** global configuration command to allocate buffers to a queue-set (four egress queues per port). Use the **no** form of this command to return to the default setting.

mls qos queue-set output *qset-id* **buffers** *allocation1 ... allocation4*

no mls qos queue-set output *qset-id* **buffers**

Syntax Description		
<i>qset-id</i>	ID of the queue-set. Each port belongs to a queue-set, which defines all the characteristics of the four egress queues per port. The range is 1 to 2.	
<i>allocation1 ... allocation4</i>	Buffer space allocation (percentage) for each queue (four values for queues 1 to 4). For <i>allocation1</i> , <i>allocation3</i> , and <i>allocation4</i> , the range is 0 to 99. For <i>allocation2</i> , the range is 1 to 100 (including the CPU buffer). Separate each value with a space.	

Defaults All allocation values are equally mapped among the four queues (25, 25, 25, 25). Each queue has 1/4 of the buffer space.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
	12.2(20)SE	The range for <i>allocation1</i> , <i>allocation3</i> , and <i>allocation4</i> changed from 0 to 100 to 0 to 99. The range for <i>allocation2</i> changed from 20 to 100 to 1 to 100.

Usage Guidelines Specify four allocation values, and separate each with a space.

Allocate buffers according to the importance of the traffic; for example, give a large percentage of the buffer to the queue with the highest-priority traffic.

To configure different classes of traffic with different characteristics, use this command with the **mls qos queue-set output** *qset-id* **threshold** global configuration command.



Note

The egress queue default settings are suitable for most situations. You should change them only when you have a thorough understanding of the egress queues and if these settings do not meet your QoS solution.

Examples

This example shows how to map a port to queue-set 2. It allocates 40 percent of the buffer space to egress queue 1 and 20 percent to egress queues 2, 3, and 4:

```
Switch(config)# mls qos queue-set output 2 buffers 40 20 20 20
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# queue-set 2
```

You can verify your settings by entering the **show mls qos interface** *[interface-id]* **buffers** or the **show mls qos queue-set** privileged EXEC command.

Related Commands

Command	Description
mls qos queue-set output threshold	Configures the weighted tail-drop (WTD) thresholds, guarantees the availability of buffers, and configures the maximum memory allocation to a queue-set.
queue-set	Maps a port to a queue-set.
show mls qos interface buffers	Displays quality of service (QoS) information.
show mls qos queue-set	Displays egress queue settings for the queue-set.

mls qos queue-set output threshold

Use the **mls qos queue-set output threshold** global configuration command to configure the weighted tail-drop (WTD) thresholds, to guarantee the availability of buffers, and to configure the maximum memory allocation to a queue-set (four egress queues per port). Use the **no** form of this command to return to the default setting.

mls qos queue-set output *qset-id* **threshold** *queue-id* *drop-threshold1* *drop-threshold2*
reserved-threshold *maximum-threshold*

no mls qos queue-set output *qset-id* **threshold** [*queue-id*]

Syntax Description

<i>qset-id</i>	ID of the queue-set. Each port belongs to a queue-set, which defines all the characteristics of the four egress queues per port. The range is 1 to 2.
<i>queue-id</i>	Specific queue in the queue-set on which the command is performed. The range is 1 to 4.
<i>drop-threshold1</i> <i>drop-threshold2</i>	Two WTD thresholds expressed as a percentage of the queue's allocated memory. The range is 1 to 400 percent.
<i>reserved-threshold</i>	Amount of memory to be guaranteed (reserved) for the queue and expressed as a percentage of the allocated memory. The range is 1 to 100 percent.
<i>maximum-threshold</i>	Enable a queue in the full condition to get more buffers than are reserved for it. This is the maximum memory the queue can have before the packets are dropped. The range is 1 to 400 percent.

Defaults

When quality of service (QoS) is enabled, WTD is enabled.

[Table 2-9](#) shows the default WTD threshold settings.

Table 2-9 Default Egress Queue WTD Threshold Settings

Feature	Queue 1	Queue 2	Queue 3	Queue 4
WTD Drop Threshold 1	100 percent	200 percent	100 percent	100 percent
WTD Drop Threshold 2	100 percent	200 percent	100 percent	100 percent
Reserved Threshold	50 percent	100 percent	50 percent	50 percent
Maximum Threshold	400 percent	400 percent	400 percent	400 percent

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Use the **mls qos queue-set output *qset-id* buffers** global configuration command to allocate a fixed number of buffers to the four queues in a queue-set.

The drop-threshold percentages can exceed 100 percent and can be up to the maximum (if the maximum threshold exceeds 100 percent).

**Note**

The egress queue default settings are suitable for most situations. You should change them only when you have a thorough understanding of the egress queues and if these settings do not meet your QoS solution.

The switch uses a buffer allocation scheme to reserve a minimum amount of buffers for each egress queue, to prevent any queue or port from consuming all the buffers and depriving other queues, and to decide whether to grant buffer space to a requesting queue. The switch decides whether the target queue has not consumed more buffers than its reserved amount (under-limit), whether it has consumed all of its maximum buffers (over-limit), and whether the common pool is empty (no free buffers) or not empty (free buffers). If the queue is not over-limit, the switch can allocate buffer space from the reserved pool or from the common pool (if it is not empty). If there are no free buffers in the common pool or if the queue is over-limit, the switch drops the frame.

Examples

This example shows how to map a port to queue-set 2. It configures the drop thresholds for queue 2 to 40 and 60 percent of the allocated memory, guarantees (reserves) 100 percent of the allocated memory, and configures 200 percent as the maximum memory this queue can have before packets are dropped:

```
Switch(config)# mls qos queue-set output 2 threshold 2 40 60 100 200
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# queue-set 2
```

You can verify your settings by entering the **show mls qos interface *interface-id* buffers** or the **show mls qos queue-set** privileged EXEC command.

Related Commands

Command	Description
mls qos queue-set output buffers	Allocates buffers to a queue-set.
queue-set	Maps a port to a queue-set.
show mls qos interface buffers	Displays QoS information.
show mls qos queue-set	Displays egress queue settings for the queue-set.

mls qos rewrite ip dscp

Use the **mls qos rewrite ip dscp** global configuration command to configure the switch to change (rewrite) the Differentiated Services Code Point (DSCP) field of an incoming IP packet. Use the **no** form of this command to configure the switch to not modify (rewrite) the DSCP field of the packet and to enable DSCP transparency.

mls qos rewrite ip dscp

no mls qos rewrite ip dscp

Syntax Description This command has no arguments or keywords.

Defaults DSCP transparency is disabled. The switch changes the DSCP field of the incoming IP packet.

Command Modes Global configuration

Command History	Release	Modification
	12.2(25)SE	This command was introduced.

Usage Guidelines DSCP transparency affects only the DSCP field of a packet at the egress. If DSCP transparency is enabled by using the **no mls qos rewrite ip dscp** command, the switch does not modify the DSCP field in the incoming packet, and the DSCP field in the outgoing packet is the same as that in the incoming packet.



Note Enabling DSCP transparency does not affect the port trust settings on IEEE 802.1Q tunneling ports.

By default, DSCP transparency is disabled. The switch modifies the DSCP field in an incoming packet, and the DSCP field in the outgoing packet is based on the quality of service (QoS) configuration, including the port trust setting, policing and marking, and the DSCP-to-DSCP mutation map.

Regardless of the DSCP transparency configuration, the switch modifies the internal DSCP value of the packet that the switch uses to generate a class of service (CoS) value representing the priority of the traffic. The switch also uses the internal DSCP value to select an egress queue and threshold.

For example, if QoS is enabled and an incoming packet has a DSCP value of 32, the switch might modify the internal DSCP value based on the policy-map configuration and change the internal DSCP value to 16. If DSCP transparency is enabled, the outgoing DSCP value is 32 (same as the incoming value). If DSCP transparency is disabled, the outgoing DSCP value is 16 because it is based on the internal DSCP value.

Examples

This example shows how to enable DSCP transparency and configure the switch to not change the DSCP value of the incoming IP packet:

```
Switch(config)# mls qos
Switch(config)# no mls qos rewrite ip dscp
```

This example shows how to disable DSCP transparency and configure the switch to change the DSCP value of the incoming IP packet:

```
Switch(config)# mls qos
Switch(config)# mls qos rewrite ip dscp
```

You can verify your settings by entering the **show running-config | include rewrite** privileged EXEC command.

Related Commands

Command	Description
mls qos	Enables QoS globally.
show mls qos	Displays QoS information.
show running-config include rewrite	Displays the DSCP transparency setting. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

mls qos srr-queue input bandwidth

Use the **mls qos srr-queue input bandwidth** global configuration command to assign shaped round robin (SRR) weights to an ingress queue. The ratio of the weights is the ratio of the frequency in which the SRR scheduler dequeues packets from each queue. Use the **no** form of this command to return to the default setting.

```
mls qos srr-queue input bandwidth weight1 weight2
```

```
no mls qos srr-queue input bandwidth
```

Syntax Description	<i>weight1 weight2</i>	Ratio of <i>weight1</i> and <i>weight2</i> determines the ratio of the frequency in which the SRR scheduler dequeues packets from ingress queues 1 and 2. The range is 1 to 100. Separate each value with a space.
---------------------------	------------------------	--

Defaults	Weight1 and weight2 are 4 (1/2 of the bandwidth is equally shared between the two queues).
-----------------	--

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	SRR services the priority queue for its configured weight as specified by the bandwidth keyword in the mls qos srr-queue input priority-queue <i>queue-id</i> bandwidth <i>weight</i> global configuration command. Then SRR shares the remaining bandwidth with both ingress queues and services them as specified by the weights configured with the mls qos srr-queue input bandwidth <i>weight1 weight2</i> global configuration command.
-------------------------	--

You specify which ingress queue is the priority queue by using the **mls qos srr-queue input priority-queue** global configuration command.

Examples	This example shows how to assign the ingress bandwidth for the queues. Priority queueing is disabled, and the shared bandwidth ratio allocated to queue 1 is 25/(25+75) and to queue 2 is 75/(25+75):
-----------------	---

```
Switch(config)# mls qos srr-queue input priority-queue 2 bandwidth 0
Switch(config)# mls qos srr-queue input bandwidth 25 75
```

In this example, queue 2 has three times the bandwidth of queue 1; queue 2 is serviced three times as often as queue 1.

This example shows how to assign the ingress bandwidths for the queues. Queue 1 is the priority queue with 10 percent of the bandwidth allocated to it. The bandwidth ratio allocated to queues 1 and 2 is 4/(4+4). SRR services queue 1 (the priority queue) first for its configured 10 percent bandwidth. Then SRR equally shares the remaining 90 percent of the bandwidth between queues 1 and 2 by allocating 45 percent to each queue:

```
Switch(config)# mls qos srr-queue input priority-queue 1 bandwidth 10
Switch(config)# mls qos srr-queue input bandwidth 4 4
```

You can verify your settings by entering the **show mls qos interface** [*interface-id*] **queueing** or the **show mls qos input-queue** privileged EXEC command.

Related Commands

Command	Description
mls qos srr-queue input buffers	Allocates the buffers between the ingress queues.
mls qos srr-queue input cos-map	Maps class of service (CoS) values to an ingress queue or maps CoS values to a queue and to a threshold ID.
mls qos srr-queue input dscp-map	Maps Differentiated Services Code Point (DSCP) values to an ingress queue or maps DSCP values to a queue and to a threshold ID.
mls qos srr-queue input priority-queue	Configures the ingress priority queue and guarantees bandwidth.
mls qos srr-queue input threshold	Assigns weighted tail-drop (WTD) threshold percentages to an ingress queue.
show mls qos input-queue	Displays ingress queue settings.
show mls qos interface queueing	Displays quality of service (QoS) information.

mls qos srr-queue input buffers

Use the **mls qos srr-queue input buffers** global configuration command to allocate the buffers between the ingress queues. Use the **no** form of this command to return to the default setting.

```
mls qos srr-queue input buffers percentage1 percentage2
```

```
no mls qos srr-queue input buffers
```

Syntax Description	<i>percentage1</i> <i>percentage2</i>	Percentage of buffers allocated to ingress queues 1 and 2. The range is 0 to 100. Separate each value with a space.
Defaults	Ninety percent of the buffers is allocated to queue 1, and 10 percent of the buffers is allocated to queue 2.	
Command Modes	Global configuration	
Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
Usage Guidelines	You should allocate the buffers so that the queues can handle any incoming bursty traffic.	
Examples	<p>This example shows how to allocate 60 percent of the buffer space to ingress queue 1 and 40 percent of the buffer space to ingress queue 2:</p> <pre>Switch(config)# mls qos srr-queue input buffers 60 40</pre> <p>You can verify your settings by entering the show mls qos interface [interface-id] buffers or the show mls qos input-queue privileged EXEC command.</p>	
Related Commands	Command	Description
	mls qos srr-queue input bandwidth	Assigns shaped round robin (SRR) weights to an ingress queue.
	mls qos srr-queue input cos-map	Maps class of service (CoS) values to an ingress queue or maps CoS values to a queue and to a threshold ID.
	mls qos srr-queue input dscp-map	Maps Differentiated Services Code Point (DSCP) values to an ingress queue or maps DSCP values to a queue and to a threshold ID.
	mls qos srr-queue input priority-queue	Configures the ingress priority queue and guarantees bandwidth.
	mls qos srr-queue input threshold	Assigns weighted tail-drop (WTD) threshold percentages to an ingress queue.

Command	Description
<code>show mls qos input-queue</code>	Displays ingress queue settings.
<code>show mls qos interface buffers</code>	Displays quality of service (QoS) information.

mls qos srr-queue input cos-map

Use the **mls qos srr-queue input cos-map** global configuration command to map class of service (CoS) values to an ingress queue or to map CoS values to a queue and to a threshold ID. Use the **no** form of this command to return to the default setting.

```
mls qos srr-queue input cos-map queue queue-id {cos1...cos8 | threshold threshold-id
cos1...cos8}
```

```
no mls qos srr-queue input cos-map
```

Syntax Description

queue <i>queue-id</i>	Specify a queue number. For <i>queue-id</i> , the range is 1 to 2.
<i>cos1...cos8</i>	Map CoS values to an ingress queue. For <i>cos1...cos8</i> , enter up to eight values, and separate each value with a space. The range is 0 to 7.
threshold <i>threshold-id</i> <i>cos1...cos8</i>	Map CoS values to a queue threshold ID. For <i>threshold-id</i> , the range is 1 to 3. For <i>cos1...cos8</i> , enter up to eight values, and separate each value with a space. The range is 0 to 7.

Defaults

Table 2-10 shows the default CoS input queue threshold map:

Table 2-10 Default CoS Input Queue Threshold Map

CoS Value	Queue ID - Threshold ID
0–4	1–1
5	2–1
6, 7	1–1

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The CoS assigned at the ingress port selects an ingress or egress queue and threshold.

The drop-threshold percentage for threshold 3 is predefined. It is set to the queue-full state. You can assign two weighted tail-drop (WTD) threshold percentages to an ingress queue by using the **mls qos srr-queue input threshold** global configuration command.

You can map each CoS value to a different queue and threshold combination, allowing the frame to follow different behavior.

Examples

This example shows how to map CoS values 0 to 3 to ingress queue 1 and to threshold ID 1 with a drop threshold of 50 percent. It maps CoS values 4 and 5 to ingress queue 1 and to threshold ID 2 with a drop threshold of 70 percent:

```
Switch(config)# mls qos srr-queue input cos-map queue 1 threshold 1 0 1 2 3
Switch(config)# mls qos srr-queue input cos-map queue 1 threshold 2 4 5
Switch(config)# mls qos srr-queue input threshold 1 50 70
```

You can verify your settings by entering the **show mls qos maps** privileged EXEC command.

Related Commands

Command	Description
mls qos srr-queue input bandwidth	Assigns shaped round robin (SRR) weights to an ingress queue.
mls qos srr-queue input buffers	Allocates the buffers between the ingress queues.
mls qos srr-queue input dscp-map	Maps Differentiated Services Code Point (DSCP) values to an ingress queue or maps DSCP values to a queue and to a threshold ID.
mls qos srr-queue input priority-queue	Configures the ingress priority queue and guarantees bandwidth.
mls qos srr-queue input threshold	Assigns WTD threshold percentages to an ingress queue.
show mls qos maps	Displays QoS mapping information.

mls qos srr-queue input dscp-map

Use the **mls qos srr-queue input dscp-map** global configuration command to map Differentiated Services Code Point (DSCP) values to an ingress queue or to map DSCP values to a queue and to a threshold ID. Use the **no** form of this command to return to the default setting.

```
mls qos srr-queue input dscp-map queue queue-id {dscp1...dscp8 | threshold threshold-id
dscp1...dscp8}
```

```
no mls qos srr-queue input dscp-map
```

Syntax Description

queue <i>queue-id</i>	Specify a queue number. For <i>queue-id</i> , the range is 1 to 2.
<i>dscp1...dscp8</i>	Map DSCP values to an ingress queue. For <i>dscp1...dscp8</i> , enter up to eight values, and separate each value with a space. The range is 0 to 63.
threshold <i>threshold-id</i> <i>dscp1...dscp8</i>	Map DSCP values to a queue threshold ID. For <i>threshold-id</i> , the range is 1 to 3. For <i>dscp1...dscp8</i> , enter up to eight values, and separate each value with a space. The range is 0 to 63.

Defaults

Table 2-11 shows the default DSCP input queue threshold map:

Table 2-11 Default DSCP Input Queue Threshold Map

DSCP Value	Queue ID–Threshold ID
0–39	1–1
40–47	2–1
48–63	1–1

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The DSCP assigned at the ingress port selects an ingress or egress queue and threshold.

The drop-threshold percentage for threshold 3 is predefined. It is set to the queue-full state. You can assign two weighted tail-drop (WTD) threshold percentages to an ingress queue by using the **mls qos srr-queue input threshold** global configuration command.

You can map each DSCP value to a different queue and threshold combination, allowing the frame to follow different behavior.

You can map up to eight DSCP values per command.

Examples

This example shows how to map DSCP values 0 to 6 to ingress queue 1 and to threshold 1 with a drop threshold of 50 percent. It maps DSCP values 20 to 26 to ingress queue 1 and to threshold 2 with a drop threshold of 70 percent:

```
Switch(config)# mls qos srr-queue input dscp-map queue 1 threshold 1 0 1 2 3 4 5 6
Switch(config)# mls qos srr-queue input dscp-map queue 1 threshold 2 20 21 22 23 24 25 26
Switch(config)# mls qos srr-queue input threshold 1 50 70
```

You can verify your settings by entering the **show mls qos maps** privileged EXEC command.

Related Commands

Command	Description
mls qos srr-queue input bandwidth	Assigns shaped round robin (SRR) weights to an ingress queue.
mls qos srr-queue input buffers	Allocates the buffers between the ingress queues.
mls qos srr-queue input cos-map	Maps class of service (CoS) values to an ingress queue or maps CoS values to a queue and to threshold ID.
mls qos srr-queue input priority-queue	Configures the ingress priority queue and guarantees bandwidth.
mls qos srr-queue input threshold	Assigns WTD threshold percentages to an ingress queue.
show mls qos maps	Displays QoS mapping information.

mls qos srr-queue input priority-queue

Use the **mls qos srr-queue input priority-queue** global configuration command to configure the ingress priority queue and to guarantee bandwidth on the internal ring if the ring is congested. Use the **no** form of this command to return to the default setting.

mls qos srr-queue input priority-queue *queue-id* **bandwidth** *weight*

no mls qos srr-queue input priority-queue *queue-id*

Syntax Description

<i>queue-id</i>	Ingress queue ID. The range is 1 to 2.
bandwidth <i>weight</i>	Bandwidth percentage of the internal ring. The range is 0 to 40.

Defaults

The priority queue is queue 2, and 10 percent of the bandwidth is allocated to it.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You should use the priority queue only for traffic that needs to be expedited (for example, voice traffic, which needs minimum delay and jitter).

The priority queue is guaranteed part of the bandwidth on the internal ring, which reduces the delay and jitter under heavy network traffic on an oversubscribed ring (when there is more traffic than the backplane can carry, and the queues are full and dropping frames).

Shaped round robin (SRR) services the priority queue for its configured weight as specified by the **bandwidth** keyword in the **mls qos srr-queue input priority-queue** *queue-id* **bandwidth** *weight* global configuration command. Then SRR shares the remaining bandwidth with both ingress queues and services them as specified by the weights configured with the **mls qos srr-queue input bandwidth** *weight1* *weight2* global configuration command.

To disable priority queueing, set the bandwidth weight to 0, for example, **mls qos srr-queue input priority-queue** *queue-id* **bandwidth 0**.

Examples

This example shows how to assign the ingress bandwidths for the queues. Queue 1 is the priority queue with 10 percent of the bandwidth allocated to it. The bandwidth ratio allocated to queues 1 and 2 is 4/(4+4). SRR services queue 1 (the priority queue) first for its configured 10 percent bandwidth. Then SRR equally shares the remaining 90 percent of the bandwidth between queues 1 and 2 by allocating 45 percent to each queue:

```
Switch(config)# mls qos srr-queue input priority-queue 1 bandwidth 10
Switch(config)# mls qos srr-queue input bandwidth 4 4
```

You can verify your settings by entering the **show mls qos interface** *[interface-id]* **queueing** or the **show mls qos input-queue** privileged EXEC command.

Related Commands

Command	Description
mls qos srr-queue input bandwidth	Assigns shaped round robin (SRR) weights to an ingress queue.
mls qos srr-queue input buffers	Allocates the buffers between the ingress queues.
mls qos srr-queue input cos-map	Maps class of service (CoS) values to an ingress queue or maps CoS values to a queue and to a threshold ID.
mls qos srr-queue input dscp-map	Maps Differentiated Services Code Point (DSCP) values to an ingress queue or maps DSCP values to a queue and to a threshold ID.
mls qos srr-queue input threshold	Assigns weighted tail-drop (WTD) threshold percentages to an ingress queue.
show mls qos input-queue	Displays ingress queue settings.
show mls qos interface queueing	Displays quality of service (QoS) information.

mls qos srr-queue input threshold

Use the **mls qos srr-queue input threshold** global configuration command to assign weighted tail-drop (WTD) threshold percentages to an ingress queue. Use the **no** form of this command to return to the default setting.

```
mls qos srr-queue input threshold queue-id threshold-percentage1 threshold-percentage2
```

```
no mls qos srr-queue input threshold queue-id
```

Syntax Description

<i>queue-id</i>	ID of the ingress queue. The range is 1 to 2.
<i>threshold-percentage1</i> <i>threshold-percentage2</i>	Two WTD threshold percentage values. Each threshold value is a percentage of the total number of queue descriptors allocated for the queue. Separate each value with a space. The range is 1 to 100.

Defaults

When quality of service (QoS) is enabled, WTD is enabled.

The two WTD thresholds are set to 100 percent.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

QoS uses the CoS-to-threshold map or the DSCP-to-threshold map to decide which class of service (CoS) or Differentiated Services Code Points (DSCPs) values are mapped to threshold 1 and to threshold 2. If threshold 1 is exceeded, packets with CoS or DSCPs assigned to this threshold are dropped until the threshold is no longer exceeded. However, packets assigned to threshold 2 continue to be queued and sent as long as the second threshold is not exceeded.

Each queue has two configurable (explicit) drop threshold and one preset (implicit) drop threshold (full).

You configure the CoS-to-threshold map by using the **mls qos srr-queue input cos-map** global configuration command. You configure the DSCP-to-threshold map by using the **mls qos srr-queue input dscp-map** global configuration command.

Examples

This example shows how to configure the tail-drop thresholds for the two queues. The queue 1 thresholds are 50 percent and 100 percent, and the queue 2 thresholds are 70 percent and 100 percent:

```
Switch(config)# mls qos srr-queue input threshold 1 50 100
Switch(config)# mls qos srr-queue input threshold 2 70 100
```

You can verify your settings by entering the **show mls qos interface** [*interface-id*] **buffers** or the **show mls qos input-queue** privileged EXEC command.

Related Commands

Command	Description
mls qos srr-queue input bandwidth	Assigns shaped round robin (SRR) weights to an ingress queue.
mls qos srr-queue input buffers	Allocates the buffers between the ingress queues.
mls qos srr-queue input cos-map	Maps class of service (CoS) values to an ingress queue or maps CoS values to a queue and to a threshold ID.
mls qos srr-queue input dscp-map	Maps Differentiated Services Code Point (DSCP) values to an ingress queue or maps DSCP values to a queue and to a threshold ID.
mls qos srr-queue input priority-queue	Configures the ingress priority queue and guarantees bandwidth.
show mls qos input-queue	Displays ingress queue settings.
show mls qos interface buffers	Displays quality of service (QoS) information.

mls qos srr-queue output cos-map

Use the **mls qos srr-queue output cos-map** global configuration command to map class of service (CoS) values to an egress queue or to map CoS values to a queue and to a threshold ID. Use the **no** form of this command to return to the default setting.

```
mls qos srr-queue output cos-map queue queue-id {cos1...cos8 | threshold threshold-id
cos1...cos8}
```

```
no mls qos srr-queue output cos-map
```

Syntax Description

queue <i>queue-id</i>	Specify a queue number. For <i>queue-id</i> , the range is 1 to 4.
<i>cos1...cos8</i>	Map CoS values to an egress queue. For <i>cos1...cos8</i> , enter up to eight values, and separate each value with a space. The range is 0 to 7.
threshold <i>threshold-id</i> <i>cos1...cos8</i>	Map CoS values to a queue threshold ID. For <i>threshold-id</i> , the range is 1 to 3. For <i>cos1...cos8</i> , enter up to eight values, and separate each value with a space. The range is 0 to 7.

Defaults

Table 2-12 shows the default CoS output queue threshold map:

Table 2-12 Default Cos Output Queue Threshold Map

CoS Value	Queue ID–Threshold ID
0, 1	2–1
2, 3	3–1
4	4–1
5	1–1
6, 7	4–1

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The drop-threshold percentage for threshold 3 is predefined. It is set to the queue-full state.

**Note**

The egress queue default settings are suitable for most situations. You should change them only when you have a thorough understanding of the egress queues and if these settings do not meet your quality of service (QoS) solution.

You can assign two weighted tail-drop (WTD) threshold percentages to an egress queue by using the **mls qos queue-set output *qset-id* threshold** global configuration command.

You can map each CoS value to a different queue and threshold combination, allowing the frame to follow different behavior.

Examples

This example shows how to map a port to queue-set 1. It maps CoS values 0 to 3 to egress queue 1 and to threshold ID 1. It configures the drop thresholds for queue 1 to 50 and 70 percent of the allocated memory, guarantees (reserves) 100 percent of the allocated memory, and configures 200 percent as the maximum memory that this queue can have before packets are dropped.

```
Switch(config)# mls qos srr-queue output cos-map queue 1 threshold 1 0 1 2 3
Switch(config)# mls qos queue-set output 1 threshold 1 50 70 100 200
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# queue-set 1
```

You can verify your settings by entering the **show mls qos maps**, the **show mls qos interface [*interface-id*] buffers**, or the **show mls qos queue-set** privileged EXEC command.

Related Commands

Command	Description
mls qos srr-queue output dscp-map	Maps Differentiated Services Code Point (DSCP) values to an egress queue or maps DSCP values to a queue and to a threshold ID.
mls qos queue-set output threshold	Configures the WTD thresholds, guarantees the availability of buffers, and configures the maximum memory allocation to a queue-set.
queue-set	Maps a port to a queue-set.
show mls qos interface buffers	Displays QoS information.
show mls qos maps	Displays QoS mapping information.
show mls qos queue-set	Displays egress queue settings for the queue-set.

mls qos srr-queue output dscp-map

Use the **mls qos srr-queue output dscp-map** global configuration command to map Differentiated Services Code Point (DSCP) values to an egress or to map DSCP values to a queue and to a threshold ID. Use the **no** form of this command to return to the default setting.

```
mls qos srr-queue output dscp-map queue queue-id {dscp1...dscp8 | threshold threshold-id
dscp1...dscp8}
```

```
no mls qos srr-queue output dscp-map
```

Syntax Description

queue <i>queue-id</i>	Specify a queue number. For <i>queue-id</i> , the range is 1 to 4.
<i>dscp1...dscp8</i>	Map DSCP values to an egress queue. For <i>dscp1...dscp8</i> , enter up to eight values, and separate each value with a space. The range is 0 to 63.
threshold <i>threshold-id</i> <i>dscp1...dscp8</i>	Map DSCP values to a queue threshold ID. For <i>threshold-id</i> , the range is 1 to 3. For <i>dscp1...dscp8</i> , enter up to eight values, and separate each value with a space. The range is 0 to 63.

Defaults

Table 2-13 shows the default DSCP output queue threshold map:

Table 2-13 Default DSCP Output Queue Threshold Map

DSCP Value	Queue ID–Threshold ID
0–15	2–1
16–31	3–1
32–39	4–1
40–47	1–1
48–63	4–1

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The drop-threshold percentage for threshold 3 is predefined. It is set to the queue-full state.

**Note**

The egress queue default settings are suitable for most situations. You should change them only when you have a thorough understanding of the egress queues and if these settings do not meet your QoS solution.

You can assign two weighted tail-drop (WTD) threshold percentages to an egress queue by using the **mls qos queue-set output *qset-id* threshold** global configuration command.

You can map each DSCP value to a different queue and threshold combination, allowing the frame to follow different behavior.

You can map up to eight DSCP values per command.

Examples

This example shows how to map a port to queue-set 1. It maps DSCP values 0 to 3 to egress queue 1 and to threshold ID 1. It configures the drop thresholds for queue 1 to 50 and 70 percent of the allocated memory, guarantees (reserves) 100 percent of the allocated memory, and configures 200 percent as the maximum memory that this queue can have before packets are dropped.

```
Switch(config)# mls qos srr-queue output dscp-map queue 1 threshold 1 0 1 2 3
Switch(config)# mls qos queue-set output 1 threshold 1 50 70 100 200
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# queue-set 1
```

You can verify your settings by entering the **show mls qos maps**, the **show mls qos interface *[interface-id]* buffers**, or the **show mls qos queue-set** privileged EXEC command.

Related Commands

Command	Description
mls qos srr-queue output cos-map	Maps class of service (CoS) values to an egress queue or maps CoS values to a queue and to a threshold ID.
mls qos queue-set output threshold	Configures the WTD thresholds, guarantees the availability of buffers, and configures the maximum memory allocation to a queue-set.
queue-set	Maps a port to a queue-set.
show mls qos interface buffers	Displays quality of service (QoS) information.
show mls qos maps	Displays QoS mapping information.
show mls qos queue-set	Displays egress queue settings for the queue-set.

mls qos trust

Use the **mls qos trust** interface configuration command to configure the port trust state. Ingress traffic can be trusted, and classification is performed by examining the packet Differentiated Services Code Point (DSCP), class of service (CoS), or IP-precedence field. Use the **no** form of this command to return a port to its untrusted state.

mls qos trust [**cos** | **device cisco-phone** | **dscp** | **ip-precedence**]

no mls qos trust [**cos** | **device** | **dscp** | **ip-precedence**]

Syntax Description	
cos	(Optional) Classify an ingress packet by using the packet CoS value. For an untagged packet, use the port default CoS value.
device cisco-phone	(Optional) Classify an ingress packet by trusting the CoS or DSCP value sent from the Cisco IP Phone (trusted boundary), depending on the trust setting.
dscp	(Optional) Classify an ingress packet by using the packet DSCP value (most significant 6 bits of 8-bit service-type field). For a non-IP packet, the packet CoS is used if the packet is tagged. For an untagged packet, the default port CoS value is used.
ip-precedence	(Optional) Classify an ingress packet by using the packet IP-precedence value (most significant 3 bits of 8-bit service-type field). For a non-IP packet, the packet CoS is used if the packet is tagged. For an untagged packet, the port default CoS value is used.

Defaults The port is not trusted. If no keyword is specified when the command is entered, the default is **dscp**.

Command Modes Interface configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
	12.2(20)SE	The usage guidelines were revised to describe how the switch sets the trust state when a Cisco IP Phone is connected to a switch or routed port.

Usage Guidelines Packets entering a quality of service (QoS) domain are classified at the edge of the domain. When the packets are classified at the edge, the switch port within the QoS domain can be configured to one of the trusted states because there is no need to classify the packets at every switch within the domain. Use this command to specify whether the port is trusted and which fields of the packet to use to classify traffic.

When a port is configured with trust DSCP or trust IP precedence and the incoming packet is a non-IP packet, the CoS-to-DSCP map is used to derive the corresponding DSCP value from the CoS value. The CoS can be the packet CoS for trunk ports or the port default CoS for nontrunk ports.

If the DSCP is trusted, the DSCP field of the IP packet is not modified. However, it is still possible that the CoS value of the packet is modified (according to DSCP-to-CoS map).

If the CoS is trusted, the CoS field of the packet is not modified, but the DSCP can be modified (according to CoS-to-DSCP map) if the packet is an IP packet.

The trusted boundary feature prevents security problems if users disconnect their PCs from networked Cisco IP Phones and connect them to the switch port to take advantage of trusted CoS or DSCP settings. You must globally enable the Cisco Discovery Protocol (CDP) on the switch and on the port connected to the IP phone. If the telephone is not detected, trusted boundary disables the trusted setting on the switch or routed port and prevents misuse of a high-priority queue.

If you configure the trust setting for DSCP or IP precedence, the DSCP or IP precedence values in the incoming packets are trusted. If you configure the **mls qos cos override** interface configuration command on the switch port connected to the IP phone, the switch overrides the CoS of the incoming voice and data packets and assigns the default CoS value to them.

For an inter-QoS domain boundary, you can configure the port to the DSCP-trusted state and apply the DSCP-to-DSCP-mutation map if the DSCP values are different between the QoS domains.

Classification using a port trust state (for example, **mls qos trust [cos | dscp | ip-precedence]**) and a policy map (for example, **service-policy input policy-map-name**) are mutually exclusive. The last one configured overwrites the previous configuration.

Examples

This example shows how to configure a port to trust the IP precedence field in the incoming packet:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# mls qos trust ip-precedence
```

This example shows how to specify that the Cisco IP Phone connected on a port is a trusted device:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# mls qos trust device cisco-phone
```

You can verify your settings by entering the **show mls qos interface** privileged EXEC command.

Related Commands

Command	Description
mls qos cos	Defines the default CoS value of a port or assigns the default CoS to all incoming packets on the port.
mls qos dscp-mutation	Applies a DSCP-to DSCP-mutation map to a DSCP-trusted port.
mls qos map	Defines the CoS-to-DSCP map, DSCP-to-CoS map, the DSCP-to-DSCP-mutation map, the IP-precedence-to-DSCP map, and the policed-DSCP map.
show mls qos interface	Displays QoS information.

mls qos vlan-based

Use the **mls qos vlan-based** interface configuration command to enable VLAN-based quality of service (QoS) on the physical port. Use the **no** form of this command to disable this feature.

mls qos vlan-based

no mls qos vlan-based

Syntax Description There are no arguments or keywords.

Defaults VLAN-based QoS is disabled.

Command Modes Interface configuration

Command History	Release	Modification
	12.2(25)SE	This command was introduced.

Usage Guidelines Before attaching a hierarchical policy map to a switch virtual interface (SVI), use the **mls qos vlan-based** interface configuration command on a physical port if the port is to be specified in the secondary interface level of the hierarchical policy map.

When you configure hierarchical policing, the hierarchical policy map is attached to the SVI and affects all traffic belonging to the VLAN. The individual policer in the interface-level traffic classification only affects the physical ports specified for that classification.

For detailed instructions about configuring hierarchical policy maps, see the “Classifying, Policing, and Marking Traffic by Using Hierarchical Policy Maps” section in the software configuration guide for this release.

Examples This example shows how to enable VLAN-based policing on a physical port:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# mls qos vlan-based
```

You can verify your settings by entering the **show mls qos interface** privileged EXEC command.

Related Commands	Command	Description
	show mls qos interface	Displays QoS information.

monitor session

Use the **monitor session** global configuration command to start a new Switched Port Analyzer (SPAN) session or Remote SPAN (RSPAN) source or destination session, to enable ingress traffic on the destination port for a network security device (such as a Cisco IDS Sensor Appliance), to add or delete interfaces or VLANs to or from an existing SPAN or RSPAN session, and to limit (filter) SPAN source traffic to specific VLANs. Use the **no** form of this command to remove the SPAN or RSPAN session or to remove source or destination interfaces or filters from the SPAN or RSPAN session. For destination interfaces, the encapsulation options are ignored with the **no** form of the command.

```
monitor session session_number destination {interface interface-id [, | -] [encapsulation
replicate] [ingress {dot1q vlan vlan-id | isl | untagged vlan vlan-id | vlan vlan-id}}] | {remote
vlan vlan-id}
```

```
monitor session session_number filter vlan vlan-id [, | -]
```

```
monitor session session_number source {interface interface-id [, | -] [both | rx | tx]} | {vlan
vlan-id [, | -] [both | rx | tx]} | {remote vlan vlan-id}
```

```
no monitor session {session_number | all | local | remote}
```

```
no monitor session session_number destination {interface interface-id [, | -] [encapsulation
replicate] [ingress {dot1q vlan vlan-id | isl | untagged vlan vlan-id | vlan vlan-id}}] | {remote
vlan vlan-id}
```

```
no monitor session session_number filter vlan vlan-id [, | -]
```

```
no monitor session session_number source {interface interface-id [, | -] [both | rx | tx]} | {vlan
vlan-id [, | -] [both | rx | tx]} | {remote vlan vlan-id}
```

Syntax Description

<i>session_number</i>	Specify the session number identified with the SPAN or RSPAN session. The range is 1 to 66.
destination	Specify the SPAN or RSPAN destination. A destination must be a physical port.
interface <i>interface-id</i>	Specify the destination or source interface for a SPAN or RSPAN session. Valid interfaces are physical ports (including type and port number). For source interface , port channel is also a valid interface type, and the valid range is 1 to 48.
encapsulation replicate	(Optional) Specify that the destination interface replicates the source interface encapsulation method. If not selected, the default is to send packets in native form (untagged). These keywords are valid only for local SPAN. For RSPAN, the RSPAN VLAN ID overwrites the original VLAN ID; therefore, packets are always sent untagged.
ingress	(Optional) Enable ingress traffic forwarding.
dot1q vlan <i>vlan-id</i>	Accept incoming packets with IEEE 802.1Q encapsulation with the specified VLAN as the default VLAN.
isl	Specify ingress forwarding using ISL encapsulation.

untagged vlan <i>vlan-id</i>	Accept incoming packets with untagged encapsulation with the specified VLAN as the default VLAN.
vlan <i>vlan-id</i>	When used with only the ingress keyword, set default VLAN for ingress traffic.
remote vlan <i>vlan-id</i>	Specify the remote VLAN for an RSPAN source or destination session. The range is 2 to 1001 and 1006 to 4094. The RSPAN VLAN cannot be VLAN 1 (the default VLAN) or VLAN IDs 1002 to 1005 (reserved for Token Ring and FDDI VLANs).
,	(Optional) Specify a series of interfaces or VLANs, or separate a range of interfaces or VLANs from a previous range. Enter a space before and after the comma.
-	(Optional) Specify a range of interfaces or VLANs. Enter a space before and after the hyphen.
filter vlan <i>vlan-id</i>	Specify a list of VLANs as filters on trunk source ports to limit SPAN source traffic to specific VLANs. The <i>vlan-id</i> range is 1 to 4094.
source	Specify the SPAN or RSPAN source. A source can be a physical port, a port channel, or a VLAN.
both, rx, tx	(Optional) Specify the traffic direction to monitor. If you do not specify a traffic direction, the source interface sends both transmitted and received traffic.
source vlan <i>vlan-id</i>	Specify the SPAN source interface as a VLAN ID. The range is 1 to 4094.
all, local, remote	Specify all , local , or remote with the no monitor session command to clear all SPAN and RSPAN, all local SPAN, or all RSPAN sessions.

Defaults

No monitor sessions are configured.

On a source interface, the default is to monitor both received and transmitted traffic.

On a trunk interface used as a source port, all VLANs are monitored.

If **encapsulation replicate** is not specified on a local SPAN destination port, packets are sent in native form with no encapsulation tag.

Ingress forwarding is disabled on destination ports.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Traffic that enters or leaves source ports or source VLANs can be monitored by using SPAN or RSPAN. Traffic routed to source ports or source VLANs cannot be monitored.

You can set a combined maximum of two local SPAN sessions and RSPAN source sessions. You can have a total of 66 SPAN and RSPAN sessions on a switch.

You can have a maximum of 64 destination ports on a switch.

Each session can include multiple ingress or egress source ports or VLANs, but you cannot combine source ports and source VLANs in a single session. Each session can include multiple destination ports.

When you use VLAN-based SPAN (VSPAN) to analyze network traffic in a VLAN or set of VLANs, all active ports in the source VLANs become source ports for the SPAN or RSPAN session. Trunk ports are included as source ports for VSPAN, and only packets with the monitored VLAN ID are sent to the destination port.

You can monitor traffic on a single port or VLAN or on a series or range of ports or VLANs. You select a series or range of interfaces or VLANs by using the [, | -] options.

If you specify a series of VLANs or interfaces, you must enter a space before and after the comma. If you specify a range of VLANs or interfaces, you must enter a space before and after the hyphen (-).

EtherChannel ports cannot be configured as SPAN or RSPAN destination ports. A physical port that is a member of an EtherChannel group can be used as a destination port, but it cannot participate in the EtherChannel group while it is as a SPAN destination.

A private-VLAN port cannot be configured as a SPAN destination port.

You can monitor individual ports while they participate in an EtherChannel, or you can monitor the entire EtherChannel bundle by specifying the **port-channel** number as the RSPAN source interface.

A port used as a destination port cannot be a SPAN or RSPAN source, nor can a port be a destination port for more than one session at a time.

You can enable IEEE 802.1x on a port that is a SPAN or RSPAN destination port; however, IEEE 802.1x is disabled until the port is removed as a SPAN destination. (If IEEE 802.1x is not available on the port, the switch returns an error message.) You can enable IEEE 802.1x on a SPAN or RSPAN source port.

VLAN filtering refers to analyzing network traffic on a selected set of VLANs on trunk source ports. By default, all VLANs are monitored on trunk source ports. You can use the **monitor session session_number filter vlan vlan-id** command to limit SPAN traffic on trunk source ports to only the specified VLANs.

VLAN monitoring and VLAN filtering are mutually exclusive. If a VLAN is a source, VLAN filtering cannot be enabled. If VLAN filtering is configured, a VLAN cannot become a source.

If ingress traffic forwarding is enabled for a network security device, the destination port forwards traffic at Layer 2.

Destination ports can be configured to act in these ways:

- When you enter **monitor session session_number destination interface interface-id** with no other keywords, egress encapsulation is untagged, and ingress forwarding is not enabled.
- When you enter **monitor session session_number destination interface interface-id ingress**, egress encapsulation is untagged; ingress encapsulation depends on the keywords that follow—**dot1q**, **isl**, or **untagged**.

- When you enter **monitor session** *session_number* **destination interface** *interface-id* **encapsulation replicate** with no other keywords, egress encapsulation replicates the source interface encapsulation; ingress forwarding is not enabled. (This applies to local SPAN only; RSPAN does not support encapsulation replication.)
- When you enter **monitor session** *session_number* **destination interface** *interface-id* **encapsulation replicate ingress**, egress encapsulation replicates the source interface encapsulation; ingress encapsulation depends on the keywords that follow—**dot1q**, **isl**, or **untagged**. (This applies to local SPAN only; RSPAN does not support encapsulation replication.)

Examples

This example shows how to create a local SPAN session 1 to monitor both sent and received traffic on source port 1 to destination port 2:

```
Switch(config)# monitor session 1 source interface gigabitethernet0/1 both
Switch(config)# monitor session 1 destination interface gigabitethernet0/2
```

This example shows how to delete a destination port from an existing local SPAN session:

```
Switch(config)# no monitor session 2 destination gigabitethernet0/2
```

This example shows how to limit SPAN traffic in an existing session only to specific VLANs:

```
Switch(config)# monitor session 1 filter vlan 100 - 304
```

This example shows how to configure RSPAN source session 1 to monitor multiple source interfaces and to configure the destination RSPAN VLAN 900.

```
Switch(config)# monitor session 1 source interface gigabitethernet0/1
Switch(config)# monitor session 1 source interface port-channel 2 tx
Switch(config)# monitor session 1 destination remote vlan 900
Switch(config)# end
```

This example shows how to configure an RSPAN destination session 10 in the switch receiving the monitored traffic.

```
Switch(config)# monitor session 10 source remote vlan 900
Switch(config)# monitor session 10 destination interface gigabitethernet0/2
```

This example shows how to configure the destination port for ingress traffic on VLAN 5 by using a security device that supports IEEE 802.1Q encapsulation. Egress traffic replicates the source; ingress traffic uses IEEE 802.1Q encapsulation.

```
Switch(config)# monitor session 2 destination interface gigabitethernet0/2 encapsulation
replicate ingress dot1q vlan 5
```

This example shows how to configure the destination port for ingress traffic on VLAN 5 by using a security device that does not support encapsulation. Egress traffic replicates the source encapsulation; ingress traffic is untagged.

```
Switch(config)# monitor session 2 destination interface gigabitethernet0/2 encapsulation
replicate ingress untagged vlan 5
```

You can verify your settings by entering the **show monitor** privileged EXEC command. You can display SPAN and RSPAN configuration on the switch by entering the **show running-config** privileged EXEC command. SPAN information appears near the end of the output.

Related Commands

Command	Description
remote-span	Configures an RSPAN VLAN in vlan configuration mode.
show monitor	Displays SPAN and RSPAN session information.
show running-config	Displays the current operating configuration. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

mvr (global configuration)

Use the **mvr** global configuration command without keywords to enable the multicast VLAN registration (MVR) feature on the switch. Use the command with keywords to set the MVR mode for a switch, configure the MVR IP multicast address, set the maximum time to wait for a query reply before removing a port from group membership, and to specify the MVR multicast VLAN. Use the **no** form of this command to return to the default settings.

```
mvr [group ip-address [count] | mode [compatible | dynamic] | querytime value | vlan vlan-id]
```

```
no mvr [group ip-address | mode [compatible | dynamic] | querytime value | vlan vlan-id]
```

Syntax Description	
group <i>ip-address</i>	Statically configure an MVR group IP multicast address on the switch. Use the no form of this command to remove a statically configured IP multicast address or contiguous addresses or, when no IP address is entered, to remove all statically configured MVR IP multicast addresses.
<i>count</i>	(Optional) Configure multiple contiguous MVR group addresses. The range is 1 to 256; the default is 1.
mode	(Optional) Specify the MVR mode of operation. The default is compatible mode.
compatible	Set MVR mode to provide compatibility with Catalyst 2900 XL and Catalyst 3500 XL switches. This mode does not allow dynamic membership joins on source ports.
dynamic	Set MVR mode to allow dynamic MVR membership on source ports.
querytime <i>value</i>	(Optional) Set the maximum time to wait for IGMP report memberships on a receiver port. This time applies only to receiver-port leave processing. When an IGMP query is sent from a receiver port, the switch waits for the default or configured MVR querytime for an IGMP group membership report before removing the port from multicast group membership. The value is the response time in units of tenths of a second. The range is 1 to 100; the default is 5 tenths or one-half second. Use the no form of the command to return to the default setting.
vlan <i>vlan-id</i>	(Optional) Specify the VLAN on which MVR multicast data is expected to be received. This is also the VLAN to which all the source ports belong. The range is 1 to 4094; the default is VLAN 1.

Defaults

MVR is disabled by default.

The default MVR mode is compatible mode.

No IP multicast addresses are configured on the switch by default.

The default group ip address count is 0.

The default query response time is 5 tenths of or one-half second.

The default multicast VLAN for MVR is VLAN 1.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines A maximum of 256 MVR multicast groups can be configured on a switch.

Use the **mvr group** command to statically set up all the IP multicast addresses that will take part in MVR. Any multicast data sent to a configured multicast address is sent to all the source ports on the switch and to all receiver ports that have registered to receive data on that IP multicast address.

MVR supports aliased IP multicast addresses on the switch. However, if the switch is interoperating with Catalyst 3550 or Catalyst 3500 XL switches, you should not configure IP addresses that alias between themselves or with the reserved IP multicast addresses (in the range 224.0.0.xxx).

The **mvr querytime** command applies only to receiver ports.

If the switch MVR is interoperating with Catalyst 2900 XL or Catalyst 3500 XL switches, set the multicast mode to compatible.

When operating in compatible mode, MVR does not support IGMP dynamic joins on MVR source ports.

MVR can coexist with IGMP snooping on a switch.

Multicast routing and MVR cannot coexist on a switch. If you enable multicast routing and a multicast routing protocol while MVR is enabled, MVR is disabled and a warning message appears. If you try to enable MVR while multicast routing and a multicast routing protocol are enabled, the operation to enable MVR is cancelled with an Error message.

Examples This example shows how to enable MVR:

```
Switch(config)# mvr
```

Use the **show mvr** privileged EXEC command to display the current setting for maximum multicast groups.

This example shows how to configure 228.1.23.4 as an IP multicast address:

```
Switch(config)# mvr group 228.1.23.4
```

This example shows how to configure ten contiguous IP multicast groups with multicast addresses from 228.1.23.1 to 228.1.23.10:

```
Switch(config)# mvr group 228.1.23.1 10
```

Use the **show mvr members** privileged EXEC command to display the IP multicast group addresses configured on the switch.

This example shows how to set the maximum query response time as one second (10 tenths):

```
Switch(config)# mvr querytime 10
```

This example shows how to set VLAN 2 as the multicast VLAN:

```
Switch(config)# mvr vlan 2
```

You can verify your settings by entering the **show mvr** privileged EXEC command.

Related Commands	Command	Description
	mvr (interface configuration)	Configures MVR ports.
	show mvr	Displays MVR global parameters or port parameters.
	show mvr interface	Displays the configured MVR interfaces with their type, status, and Immediate Leave configuration. Also displays all MVR groups of which the interface is a member.
	show mvr members	Displays all ports that are members of an MVR multicast group; if the group has no members, its status is shown as Inactive.

mvr (interface configuration)

Use the `mvr` interface configuration command to configure a Layer 2 port as a multicast VLAN registration (MVR) receiver or source port, to set the Immediate Leave feature, and to statically assign a port to an IP multicast VLAN and IP address. Use the `no` form of this command to return to the default settings.

```
mvr [immediate | type {receiver | source} | vlan vlan-id group [ip-address]]
```

```
no mvr [immediate | type {source | receiver} | vlan vlan-id group [ip-address]]
```

Syntax Description	
immediate	(Optional) Enable the Immediate Leave feature of MVR on a port. Use the no mvr immediate command to disable the feature.
type	(Optional) Configure the port as an MVR receiver port or a source port. The default port type is neither an MVR source nor a receiver port. The no mvr type command resets the port as neither a source or a receiver port.
receiver	Configure the port as a subscriber port that can only receive multicast data. Receiver ports cannot belong to the multicast VLAN.
source	Configure the port as an uplink port that can send and receive multicast data for the configured multicast groups. All source ports on a switch belong to a single multicast VLAN.
vlan <i>vlan-id</i> group	(Optional) Add the port as a static member of the multicast group with the specified VLAN ID. The no mvr vlan <i>vlan-id</i> group command removes a port on a VLAN from membership in an IP multicast address group.
<i>ip-address</i>	(Optional) Statically configure the specified MVR IP multicast group address for the specified multicast VLAN ID. This is the IP address of the multicast group that the port is joining.

Defaults

A port is configured as neither a receiver nor a source.
The Immediate Leave feature is disabled on all ports.
No receiver port is a member of any configured multicast group.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Configure a port as a source port if that port should be able to both send and receive multicast data bound for the configured multicast groups. Multicast data is received on all ports configured as source ports.

Receiver ports cannot be trunk ports. Receiver ports on a switch can be in different VLANs, but should not belong to the multicast VLAN.

A port that is not taking part in MVR should not be configured as an MVR receiver port or a source port. A non-MVR port is a normal switch port, able to send and receive multicast data with normal switch behavior.

When Immediate Leave is enabled, a receiver port leaves a multicast group more quickly. Without Immediate Leave, when the switch receives an IGMP leave message from a group on a receiver port, it sends out an IGMP MAC-based query on that port and waits for IGMP group membership reports. If no reports are received in a configured time period, the receiver port is removed from multicast group membership. With Immediate Leave, an IGMP MAC-based query is not sent from the receiver port on which the IGMP leave was received. As soon as the leave message is received, the receiver port is removed from multicast group membership, which speeds up leave latency.

The Immediate Leave feature should be enabled only on receiver ports to which a single receiver device is connected.

The **mvr vlan group** command statically configures ports to receive multicast traffic sent to the IP multicast address. A port statically configured as a member of group remains a member of the group until statically removed. In compatible mode, this command applies only to receiver ports; in dynamic mode, it can also apply to source ports. Receiver ports can also dynamically join multicast groups by using IGMP join messages.

When operating in compatible mode, MVR does not support IGMP dynamic joins on MVR source ports.

An MVR port cannot be a private-VLAN port.

Examples

This example shows how to configure a port as an MVR receiver port:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# mvr type receiver
```

Use the **show mvr interface** privileged EXEC command to display configured receiver ports and source ports.

This example shows how to enable Immediate Leave on a port:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# mvr immediate
```

This example shows how to add a port on VLAN 1 as a static member of IP multicast group 228.1.23.4:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# mvr vlan1 group 230.1.23.4
```

You can verify your settings by entering the **show mvr members** privileged EXEC command.

Related Commands	Command	Description
	mvr (global configuration)	Enables and configures multicast VLAN registration on the switch.
	show mvr	Displays MVR global parameters or port parameters.
	show mvr interface	Displays the configured MVR interfaces or displays the multicast groups to which a receiver port belongs. Also displays all MVR groups of which the interface is a member.
	show mvr members	Displays all receiver ports that are members of an MVR multicast group.

pagp learn-method

Use the **pagp learn-method** interface configuration command to learn the source address of incoming packets received from an EtherChannel port. Use the **no** form of this command to return to the default setting.

pagp learn-method {aggregation-port | physical-port}

no pagp learn-method

Syntax Description

aggregation-port	Specify address learning on the logical port-channel. The switch sends packets to the source using any of the ports in the EtherChannel. This setting is the default. With aggregate-port learning, it is not important on which physical port the packet arrives.
physical-port	Specify address learning on the physical port within the EtherChannel. The switch sends packets to the source using the same port in the EtherChannel from which it learned the source address. The other end of the channel uses the same port in the channel for a particular destination MAC or IP address.

Defaults

The default is aggregation-port (logical port channel).

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The learn method must be configured the same at both ends of the link.



Note

The Catalyst 3560 switch supports address learning only on aggregate ports even though the **physical-port** keyword is provided in the command-line interface (CLI). The **pagp learn-method** and the **pagp port-priority** interface configuration commands have no effect on the switch hardware, but they are required for PAgP interoperability with devices that only support address learning by physical ports, such as the Catalyst 1900 switch.

When the link partner to the Catalyst 3560 switch is a physical learner, we recommend that you configure the switch as a physical-port learner by using the **pagp learn-method physical-port** interface configuration command and to set the load-distribution method based on the source MAC address by using the **port-channel load-balance src-mac** global configuration command. Use the **pagp learn-method** interface configuration command only in this situation.

Examples

This example shows how to set the learning method to learn the address on the physical port within the EtherChannel:

```
Switch(config-if)# pagp learn-method physical-port
```

This example shows how to set the learning method to learn the address on the port-channel within the EtherChannel:

```
Switch(config-if)# pagp learn-method aggregation-port
```

You can verify your settings by entering the **show running-config** privileged EXEC command or the **show pagp channel-group-number internal** privileged EXEC command.

Related Commands

Command	Description
pagp port-priority	Selects a port over which all traffic through the EtherChannel is sent.
show pagp	Displays PAgP channel-group information.
show running-config	Displays the current operating configuration. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

pagp port-priority

Use the **pagp port-priority** interface configuration command to select a port over which all Port Aggregation Protocol (PAgP) traffic through the EtherChannel is sent. If all unused ports in the EtherChannel are in hot-standby mode, they can be placed into operation if the currently selected port and link fails. Use the **no** form of this command to return to the default setting.

pagp port-priority *priority*

no pagp port-priority

Syntax Description	<i>priority</i>	A priority number ranging from 0 to 255.
---------------------------	-----------------	--

Defaults	The default is 128.	
-----------------	---------------------	--

Command Modes	Interface configuration	
----------------------	-------------------------	--

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	The physical port with the highest priority that is operational and has membership in the same EtherChannel is the one selected for PAgP transmission.	
-------------------------	--	--



Note

The Catalyst 3560 switch supports address learning only on aggregate ports even though the **physical-port** keyword is provided in the command-line interface (CLI). The **pagp learn-method** and the **pagp port-priority** interface configuration commands have no effect on the switch hardware, but they are required for PAgP interoperability with devices that only support address learning by physical ports, such as the Catalyst 1900 switch.

When the link partner to the Catalyst 3560 switch is a physical learner, we recommend that you configure the switch as a physical-port learner by using the **pagp learn-method physical-port** interface configuration command and to set the load-distribution method based on the source MAC address by using the **port-channel load-balance src-mac** global configuration command. Use the **pagp learn-method** interface configuration command only in this situation.

Examples	This example shows how to set the port priority to 200:	
-----------------	---	--

```
Switch(config-if)# pagp port-priority 200
```

You can verify your setting by entering the **show running-config** privileged EXEC command or the **show pagp channel-group-number internal** privileged EXEC command.

Related Commands

Command	Description
pagp learn-method	Provides the ability to learn the source address of incoming packets.
show pagp	Displays PAgP channel-group information.
show running-config	Displays the current operating configuration. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

permit (ARP access-list configuration)

Use the **permit** Address Resolution Protocol (ARP) access-list configuration command to permit an ARP packet based on matches against the Dynamic Host Configuration Protocol (DHCP) bindings. Use the **no** form of this command to remove the specified access control entry (ACE) from the access control list.

```
permit [[request] ip { any | host sender-ip | sender-ip sender-ip-mask } mac { any | host sender-mac | sender-mac sender-mac-mask } | response ip { any | host sender-ip | sender-ip sender-ip-mask }
[ { any | host target-ip | target-ip target-ip-mask } ] mac { any | host sender-mac | sender-mac sender-mac-mask } [ { any | host target-mac | target-mac target-mac-mask } ] [log]
```

```
no permit [[request] ip { any | host sender-ip | sender-ip sender-ip-mask } mac { any | host sender-mac | sender-mac sender-mac-mask } | response ip { any | host sender-ip | sender-ip sender-ip-mask }
[ { any | host target-ip | target-ip target-ip-mask } ] mac { any | host sender-mac | sender-mac sender-mac-mask } [ { any | host target-mac | target-mac target-mac-mask } ] [log]
```

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description

request	(Optional) Requests a match for the ARP request. When request is not specified, matching is performed against all ARP packets.
ip	Specify the sender IP address.
any	Accept any IP or MAC address.
host <i>sender-ip</i>	Accept the specified sender IP address.
<i>sender-ip</i> <i>sender-ip-mask</i>	Accept the specified range of sender IP addresses.
mac	Specify the sender MAC address.
host <i>sender-mac</i>	Accept the specified sender MAC address.
<i>sender-mac</i> <i>sender-mac-mask</i>	Accept the specified range of sender MAC addresses.
response ip	Define the IP address values for the ARP responses.
host <i>target-ip</i>	(Optional) Accept the specified target IP address.
<i>target-ip target-ip-mask</i>	(Optional) Accept the specified range of target IP addresses.
mac	Specify the MAC address values for the ARP responses.
host <i>target-mac</i>	(Optional) Accept the specified target MAC address.
<i>target-mac</i> <i>target-mac-mask</i>	(Optional) Accept the specified range of target MAC addresses.
log	(Optional) Log a packet when it matches the ACE. Matches are logged if you also configure the matchlog keyword in the ip arp inspection vlan logging global configuration command.

Defaults

There are no default settings.

Command Modes ARP access-list configuration

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines You can add permit clauses to forward ARP packets based on some matching criteria.

Examples This example shows how to define an ARP access list and to permit both ARP requests and ARP responses from a host with an IP address of 1.1.1.1 and a MAC address of 0000.0000.abcd:

```
Switch(config)# arp access-list static-hosts
Switch(config-arp-nacl)# permit ip host 1.1.1.1 mac host 0000.0000.abcd
Switch(config-arp-nacl)# end
```

You can verify your settings by entering the **show arp access-list** privileged EXEC command.

Related Commands	Command	Description
	arp access-list	Defines an ARP access control list (ACL).
	deny (ARP access-list configuration)	Denies an ARP packet based on matches against the DHCP bindings.
	ip arp inspection filter vlan	Permits ARP requests and responses from a host configured with a static IP address.
	show arp access-list	Displays detailed information about ARP access lists.

permit (IPv6 access-list configuration)

Use the **permit** IPv6 access list configuration command to set permit conditions for an IPv6 access list. Use the **no** form of this command to remove the permit conditions.

```
permit {protocol} {source-ipv6-prefix/prefix-length | any | host source-ipv6-address} [operator
[port-number]] {destination-ipv6-prefix/prefix-length | any | host destination-ipv6-address}
[operator [port-number]] [dscp value] [fragments] [log] [log-input] [sequence value]
[time-range name]
```

```
no permit {protocol} {source-ipv6-prefix/prefix-length | any | host source-ipv6-address} [operator
[port-number]] {destination-ipv6-prefix/prefix-length | any | host destination-ipv6-address}
[operator [port-number]] [dscp value] [fragments] [log] [log-input] [sequence value]
[time-range name]
```



Note

Although visible in the command-line help strings, the **flow-label**, **reflect**, and **routing** keywords are not supported.

Internet Control Message Protocol

```
permit icmp {source-ipv6-prefix/prefix-length | any | host source-ipv6-address} [operator
[port-number]] {destination-ipv6-prefix/prefix-length | any | host destination-ipv6-address}
[operator [port-number]] [icmp-type [icmp-code] | icmp-message] [dscp value] [log]
[log-input] [sequence value] [time-range name]
```

Transmission Control Protocol

```
permit tcp {source-ipv6-prefix/prefix-length | any | host source-ipv6-address} [operator
[port-number]] {destination-ipv6-prefix/prefix-length | any | host destination-ipv6-address}
[operator [port-number]] [ack] [dscp value] [established] [fin] [log] [log-input] [neq {port |
protocol}] [psb] [range {port | protocol}] [rst] [sequence value] [syn] [time-range name]
[urg]
```

User Datagram Protocol

```
permit udp {source-ipv6-prefix/prefix-length | any | host source-ipv6-address} [operator
[port-number]] {destination-ipv6-prefix/prefix-length | any | host destination-ipv6-address}
[operator [port-number]] [dscp value] [log] [log-input] [neq {port | protocol}] [range {port |
protocol}] [sequence value] [time-range name]
```



Note

Although visible in the command-line help strings, the **flow-label**, **reflect**, and **routing** keywords are not supported.

This command is available only if your switch is running the advanced IP services image and has a switch database management (SDM) dual IPv4 and IPv6 template configured.

Syntax Description

<i>protocol</i>	Name or number of an Internet protocol. It can be one of the keywords ahp , esp , icmp , ipv6 , pcp , sctp , tcp , or udp , or an integer in the range from 0 to 255 representing an IPv6 protocol number.
<i>source-ipv6-prefix/prefix-length</i>	<p>The source IPv6 network or class of networks for which to set permit conditions.</p> <p>This argument must be in the form documented in RFC 2373 where the address is specified in hexadecimal using 16-bit values between colons.</p> <p>Note Although the CLI help shows a prefix-length range of /0 to /128, the switch supports IPv6 address-matching only for prefixes in the range of /0 to /64 and extended universal identifier (EUI)-based /128 prefixes for aggregatable global unicast and link-local host addresses.</p>
any	An abbreviation for the IPv6 prefix ::/0.
host <i>source-ipv6-address</i>	<p>The source IPv6 host address for which to set permit conditions.</p> <p>This <i>source-ipv6-address</i> argument must be in the form documented in RFC 2373 where the address is specified in hexadecimal using 16-bit values between colons.</p>
<i>operator</i> [<i>port-number</i>]	<p>(Optional) Specify an operator that compares the source or destination ports of the specified protocol. Operators are lt (less than), gt (greater than), eq (equal), neq (not equal), and range (inclusive range).</p> <p>If the operator is positioned after the <i>source-ipv6-prefix/prefix-length</i> argument, it must match the source port.</p> <p>If the operator is positioned after the <i>destination-ipv6-prefix/prefix-length</i> argument, it must match the destination port.</p> <p>The range operator requires two port numbers. All other operators require one port number.</p> <p>The optional <i>port-number</i> argument is a decimal number or the name of a TCP or a UDP port. A port number is a number from 0 to 65535. TCP port names can be used only when filtering TCP. UDP port names can be used only when filtering UDP.</p>
<i>destination-ipv6-prefix/prefix-length</i>	<p>The destination IPv6 network or class of networks for which to set permit conditions.</p> <p>This argument must be in the form documented in RFC 2373 where the address is specified in hexadecimal using 16-bit values between colons.</p> <p>Note Although the CLI help shows a prefix-length range of /0 to /128, the switch supports IPv6 address-matching only for prefixes in the range of /0 to /64 and EUI-based /128 prefixes for aggregatable global unicast and link-local host addresses.</p>
host <i>destination-ipv6-address</i>	<p>The destination IPv6 host address for which to set permit conditions.</p> <p>This <i>destination-ipv6-address</i> argument must be in the form documented in RFC 2373 where the address is specified in hexadecimal using 16-bit values between colons.</p>
dscp <i>value</i>	(Optional) Match a differentiated services codepoint value against the traffic class value in the Traffic Class field of each IPv6 packet header. The acceptable range is from 0 to 63.

fragments	(Optional) Match noninitial fragmented packets where the fragment extension header contains a nonzero fragment offset. The fragments keyword is an option only if the protocol is ipv6 and the <i>operator</i> [<i>port-number</i>] arguments are not specified.
log	(Optional) Send an informational logging message to the console about the packet that matches the entry. (The level of messages logged to the console is controlled by the logging console command.) The message includes the access list name and sequence number; whether the packet was permitted; the protocol, whether it was TCP, UDP, ICMP, or a number; and, if appropriate, the source and destination addresses and source and destination port numbers. The message is generated for the first packet that matches, and then at 5-minute intervals, including the number of packets permitted in the prior 5-minute interval.
log-input	(Optional) Provide the same function as the log keyword, except that the logging message also includes the receiving interface.
timeout <i>value</i>	(Optional) Interval of idle time (in seconds) after which a reflexive IPv6 access list times out. The acceptable range is from 1 to 4294967295. The default is 180 seconds.
sequence <i>value</i>	(Optional) Specify the sequence number for the access list statement. The acceptable range is from 1 to 4294967295.
time-range <i>name</i>	(Optional) Specify the time range that applies to the permit statement. The name of the time range and its restrictions are specified by the time-range and absolute or periodic commands, respectively.
<i>icmp-type</i>	(Optional) Specify an ICMP message type for filtering ICMP packets. ICMP packets can be filtered by the ICMP message type. The type is a number from 0 to 255.
<i>icmp-code</i>	(Optional) Specify an ICMP message code for filtering ICMP packets. ICMP packets that are filtered by the ICMP message type can also be filtered by the ICMP message code. The code is a number from 0 to 255.
<i>icmp-message</i>	(Optional) Specify an ICMP message name for filtering ICMP packets. ICMP packets can be filtered by an ICMP message name or ICMP message type and code. The possible names are listed in the “Usage Guidelines” section.
ack	(Optional) Only for the TCP protocol: acknowledgment (ACK) bit set.
established	(Optional) Only for the TCP protocol: Means the connection has been established. A match occurs if the TCP datagram has the ACK or RST bits set. The nonmatching case is that of the initial TCP datagram to form a connection.
fin	(Optional) Only for the TCP protocol: Fin bit set; no more data from sender.
neq { <i>port</i> <i>protocol</i> }	(Optional) Match only packets that are not on a given port number.
psh	(Optional) Only for the TCP protocol: Push function bit set.
range { <i>port</i> <i>protocol</i> }	(Optional) Match only packets in the range of port numbers.
rst	(Optional) Only for the TCP protocol: Reset bit set.
syn	(Optional) Only for the TCP protocol: Synchronize bit set.
urg	(Optional) Only for the TCP protocol: Urgent pointer bit set.

Defaults

No IPv6 access list is defined.

Command Modes

IPv6 access-list configuration

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

The **permit** (IPv6 access-list configuration mode) command is similar to the **permit** (IPv4 access-list configuration mode) command, except that it is IPv6-specific.

Use the **permit** (IPv6) command after the **ipv6 access-list** command to enter IPv6 access-list configuration mode and to define the conditions under which a packet passes the access list.

Specifying IPv6 for the *protocol* argument matches against the IPv6 header of the packet.

By default, the first statement in an access list is number 10, and the subsequent statements are incremented by 10.

You can add **permit**, **deny**, or **remark** statements to an existing access list without re-entering the entire list. To add a new statement anywhere other than at the end of the list, create a new statement with an appropriate entry number that falls between two existing entry numbers to show where it belongs.

See the **ipv6 access-list** command for more information on defining IPv6 ACLs.

**Note**

Every IPv6 ACL has implicit **permit icmp any any nd-na**, **permit icmp any any nd-ns**, and **deny ipv6 any any** statements as its last match conditions. The two **permit** conditions allow ICMPv6 neighbor discovery. To disallow ICMPv6 neighbor discovery and to deny **icmp any any nd-na** or **icmp any any nd-ns**, there must be an explicit **deny** entry in the ACL. For the implicit **deny ipv6 any any** statement to take effect, an IPv6 ACL must contain at least one entry.

The IPv6 neighbor discovery process uses the IPv6 network layer service. Therefore, by default, IPv6 ACLs implicitly allow IPv6 neighbor discovery packets to be sent and received on an interface. In IPv4, the Address Resolution Protocol (ARP), which is equivalent to the IPv6 neighbor discovery process, uses a separate data link layer protocol. Therefore, by default, IPv4 ACLs implicitly allow ARP packets to be sent and received on an interface.

Both the *source-ipv6-prefix/prefix-length* and *destination-ipv6-prefix/prefix-length* arguments are used for traffic filtering (the source prefix filters traffic based upon the traffic source; the destination prefix filters traffic based upon the traffic destination).

The switch supports only prefixes from /0 to /64 and EUI-based /128 prefixes for aggregatable global unicast and link-local host addresses.

The **fragments** keyword is an option only if the *operator [port-number]* arguments are not specified.

This is a list of ICMP message names:

beyond-scope	destination-unreachable
echo-reply	echo-request
header	hop-limit
mld-query	mld-reduction
mld-report	nd-na
nd-ns	next-header
no-admin	no-route
packet-too-big	parameter-option
parameter-problem	port-unreachable
reassembly-timeout	renum-command
renum-result	renum-seq-number
router-advertisement	router-renumbering
router-solicitation	time-exceeded
unreachable	

Examples

This example configures two IPv6 access lists named OUTBOUND and INBOUND and applies both access lists to outbound and inbound traffic on a Layer 3 interface. The first and second permit entries in the OUTBOUND list permit all TCP and UDP packets from network 2001:0DB8:0300:0201::/64 to leave the interface. The deny entry in the OUTBOUND list prevents all packets from the network FE80:0:0:0201::/64 (packets that have the link-local prefix FE80:0:0:0201 as the first 64 bits of their source IPv6 address) from leaving the interface. The third permit entry in the OUTBOUND list permits all ICMP packets to exit the interface.

The permit entry in the INBOUND list permits all ICMP packets to enter the interface.

```
Switch(config)#ipv6 access-list OUTBOUND
Switch(config-ipv6-acl)# permit tcp 2001:0DB8:0300:0201::/64 any
Switch(config-ipv6-acl)# permit udp 2001:0DB8:0300:0201::/64 any
Switch(config-ipv6-acl)# deny FE80:0:0:0201::/64 any
Switch(config-ipv6-acl)# permit icmp any any
Switch(config-ipv6-acl)# exit
Switch(config)#ipv6 access-list INBOUND
Switch(config-ipv6-acl)# permit icmp any any
Switch(config-ipv6-acl)# exit
Switch(config)# interface gigabitethernet0/3
Switch(config-if)# no switchport
Switch(config-if)# ipv6 address 2001::/64 eui-64
Switch(config-if)# ipv6 traffic-filter OUTBOUND out
Switch(config-if)# ipv6 traffic-filter INBOUND in
```



Note

Given that a **permit any any** statement is not included as the last entry in the OUTBOUND or INBOUND access list, only TCP, UDP, and ICMP packets are permitted out of and into the interface (the implicit deny-all condition at the end of the access list denies all other packet types on the interface).

Related Commands

Command	Description
ipv6 access-list	Defines an IPv6 access list and enters IPv6 access list configuration mode.
ipv6 traffic-filter	Filters incoming or outgoing IPv6 traffic on an interface.
deny (IPv6 access-list configuration)	Sets deny conditions for an IPv6 access list.
show ipv6 access-list	Displays the contents of all current IPv6 access lists.

permit (MAC access-list configuration)

Use the **permit** MAC access-list configuration command to allow non-IP traffic to be forwarded if the conditions are matched. Use the **no** form of this command to remove a permit condition from the extended MAC access list.

```
{permit | deny} {any | host src-MAC-addr | src-MAC-addr mask} {any | host dst-MAC-addr |
dst-MAC-addr mask} [type mask | cos cos | aarp | amber | dec-spanning | decnet-iv |
diagnostic | dsm | etype-6000 | etype-8042 | lat | larc-sca | lsap lsap mask | mop-console |
mop-dump | msdos | mumps | netbios | vines-echo | vines-ip | xns-idp]
```

```
no {permit | deny} {any | host src-MAC-addr | src-MAC-addr mask} {any | host dst-MAC-addr |
dst-MAC-addr mask} [type mask | cos cos | aarp | amber | dec-spanning | decnet-iv |
diagnostic | dsm | etype-6000 | etype-8042 | lat | larc-sca | lsap lsap mask | mop-console |
mop-dump | msdos | mumps | netbios | vines-echo | vines-ip | xns-idp]
```



Note

Though visible in the command-line help strings, **appletalk** is not supported as a matching condition.

Syntax Description

any	Keyword to specify to deny any source or destination MAC address.
host <i>src-MAC-addr</i> <i>src-MAC-addr mask</i>	Define a host MAC address and optional subnet mask. If the source address for a packet matches the defined address, non-IP traffic from that address is denied.
host <i>dst-MAC-addr</i> <i>dst-MAC-addr mask</i>	Define a destination MAC address and optional subnet mask. If the destination address for a packet matches the defined address, non-IP traffic to that address is denied.
<i>type mask</i>	(Optional) Use the Ethertype number of a packet with Ethernet II or SNAP encapsulation to identify the protocol of the packet. <ul style="list-style-type: none"> <i>type</i> is 0 to 65535, specified in hexadecimal. <i>mask</i> is a mask of <i>don't care</i> bits applied to the Ethertype before testing for a match.
aarp	(Optional) Select Ethertype AppleTalk Address Resolution Protocol that maps a data-link address to a network address.
amber	(Optional) Select EtherType DEC-Amber.
cos <i>cos</i>	(Optional) Select an arbitrary class of service (CoS) number from 0 to 7 to set priority. Filtering on CoS can be performed only in hardware. A warning message appears if the cos option is configured.
dec-spanning	(Optional) Select EtherType Digital Equipment Corporation (DEC) spanning tree.
decnet-iv	(Optional) Select EtherType DECnet Phase IV protocol.
diagnostic	(Optional) Select EtherType DEC-Diagnostic.
dsm	(Optional) Select EtherType DEC-DSM.
etype-6000	(Optional) Select EtherType 0x6000.
etype-8042	(Optional) Select EtherType 0x8042.
lat	(Optional) Select EtherType DEC-LAT.
larc-sca	(Optional) Select EtherType DEC-LARC-SCA.

lsap <i>lsap-number mask</i>	(Optional) Use the LSAP number (0 to 65535) of a packet with 802.2 encapsulation to identify the protocol of the packet. The <i>mask</i> is a mask of <i>don't care</i> bits applied to the LSAP number before testing for a match.
mop-console	(Optional) Select EtherType DEC-MOP Remote Console.
mop-dump	(Optional) Select EtherType DEC-MOP Dump.
msdos	(Optional) Select EtherType DEC-MSDOS.
mumps	(Optional) Select EtherType DEC-MUMPS.
netbios	(Optional) Select EtherType DEC- Network Basic Input/Output System (NETBIOS).
vines-echo	(Optional) Select EtherType Virtual Integrated Network Service (VINES) Echo from Banyan Systems.
vines-ip	(Optional) Select EtherType VINES IP.
xns-idp	(Optional) Select EtherType Xerox Network Systems (XNS) protocol suite.

To filter IPX traffic, you use the *type mask* or **lsap** *lsap mask* keywords, depending on the type of IPX encapsulation being used. Filter criteria for IPX encapsulation types as specified in Novell terminology and Cisco IOS terminology are listed in [Table 2-14](#).

Table 2-14 IPX Filtering Criteria

IPX Encapsulation Type		
Cisco IOS Name	Novell Name	Filter Criterion
arpa	Ethernet II	Ethertype 0x8137
snap	Ethernet-snap	Ethertype 0x8137
sap	Ethernet 802.2	LSAP 0xE0E0
novell-ether	Ethernet 802.3	LSAP 0xFFFF

Defaults

This command has no defaults. However, the default action for a MAC-named ACL is to deny.

Command Modes

MAC access-list configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You enter MAC access-list configuration mode by using the **mac access-list extended** global configuration command.

If you use the **host** keyword, you cannot enter an address mask; if you do not use the **any** or **host** keywords, you must enter an address mask.

After an access control entry (ACE) is added to an access control list, an implied **deny-any-any** condition exists at the end of the list. That is, if there are no matches, the packets are denied. However, before the first ACE is added, the list permits all packets.

For more information about MAC-named extended access lists, see the software configuration guide for this release.

Examples

This example shows how to define the MAC-named extended access list to allow NETBIOS traffic from any source to MAC address 00c0.00a0.03fa. Traffic matching this list is allowed.

```
Switch(config-ext-macl)# permit any host 00c0.00a0.03fa netbios
```

This example shows how to remove the permit condition from the MAC-named extended access list:

```
Switch(config-ext-macl)# no permit any 00c0.00a0.03fa 0000.0000.0000 netbios
```

This example permits all packets with Ethertype 0x4321:

```
Switch(config-ext-macl)# permit any any 0x4321 0
```

You can verify your settings by entering the **show access-lists** privileged EXEC command.

Related Commands

Command	Description
deny (MAC access-list configuration)	Denies non-IP traffic to be forwarded if conditions are matched.
mac access-list extended	Creates an access list based on MAC addresses for non-IP traffic.
show access-lists	Displays access control lists configured on a switch.

police

Use the **police** policy-map class configuration command to define a policer for classified traffic. A policer defines a maximum permissible rate of transmission, a maximum burst size for transmissions, and an action to take if either maximum is exceeded. Use the **no** form of this command to remove an existing policer.

```
police rate-bps burst-byte [exceed-action { drop | policed-dscp-transmit }]
```

```
no police rate-bps burst-byte [exceed-action { drop | policed-dscp-transmit }]
```

Syntax Description		
<i>rate-bps</i>		Specify the average traffic rate in bits per second (bps). The range is 1000000 to 1000000000.
<i>burst-byte</i>		Specify the normal burst size in bytes. The range is 8000 to 1000000.
exceed-action drop	(Optional)	When the specified rate is exceeded, specify that the switch drop the packet.
exceed-action policed-dscp-transmit	(Optional)	When the specified rate is exceeded, specify that the switch changes the Differentiated Services Code Point (DSCP) of the packet to that specified in the policed-DSCP map and then sends the packet.

Defaults No policers are defined.

Command Modes Policy-map class configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines When configuring hierarchical policy maps, you can only use the **police** policy-map command in a secondary interface-level policy map.

The port ASIC device, which controls more than one physical port, supports 256 policers (255 policers plus 1 **no** policer). The maximum number of policers supported per port is 64. Policers are allocated on demand by the software and are constrained by the hardware and ASIC boundaries. You cannot reserve policers per port. There is no guarantee that a port will be assigned to any policer.

To return to policy-map configuration mode, use the **exit** command. To return to privileged EXEC mode, use the **end** command.

Policing uses a token-bucket algorithm. You configure the bucket depth (the maximum burst that is tolerated before the bucket overflows) by using the *burst-byte* option of the **police** policy-map class configuration command or the **mls qos aggregate-policer** global configuration command. You configure how quickly (the average rate) the tokens are removed from the bucket by using the *rate-bps* option of the **police** policy-map class configuration command or the **mls qos aggregate-policer** global configuration command. For more information, see the software configuration guide for this release.

Examples

This example shows how to configure a policer that drops packets if traffic exceeds 1 Mbps average rate with a burst size of 20 KB. The DSCPs of incoming packets are trusted, and there is no packet modification.

```
Switch(config)# policy-map policy1
Switch(config-pmap)# class class1
Switch(config-pmap-c)# trust dscp
Switch(config-pmap-c)# police 1000000 20000 exceed-action drop
Switch(config-pmap-c)# exit
```

This example shows how to configure a policer, which marks down the DSCP values with the values defined in policed-DSCP map and sends the packet:

```
Switch(config)# policy-map policy2
Switch(config-pmap)# class class2
Switch(config-pmap-c)# police 1000000 20000 exceed-action policed-dscp-transmit
Switch(config-pmap-c)# exit
```

You can verify your settings by entering the **show policy-map** privileged EXEC command.

Related Commands

Command	Description
class	Defines a traffic classification match criteria (through the police , set , and trust policy-map class configuration commands) for the specified class-map name.
mls qos map policed-dscp	Applies a policed-DSCP map to a DSCP-trusted port.
policy-map	Creates or modifies a policy map that can be attached to multiple ports to specify a service policy.
set	Classifies IP traffic by setting a DSCP or IP-precedence value in the packet.
show policy-map	Displays quality of service (QoS) policy maps.
trust	Defines a trust state for traffic classified through the class policy-map configuration or the class-map global configuration command.

police aggregate

Use the **police aggregate** policy-map class configuration command to apply an aggregate policer to multiple classes in the same policy map. A policer defines a maximum permissible rate of transmission, a maximum burst size for transmissions, and an action to take if either maximum is exceeded. Use the **no** form of this command to remove the specified policer.

police aggregate *aggregate-policer-name*

no police aggregate *aggregate-policer-name*

Syntax Description	
	<i>aggregate-policer-name</i> Name of the aggregate policer.

Defaults	
	No aggregate policers are defined.

Command Modes	
	Policy-map class configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	
	The port ASIC device, which controls more than one physical port, supports 256 policers (255 policers plus 1 no policer). The maximum number of policers supported per port is 64. Policers are allocated on demand by the software and are constrained by the hardware and ASIC boundaries. You cannot reserve policers per port. There is no guarantee that a port will be assigned to any policer.

You set aggregate policer parameters by using the **mls qos aggregate-policer** global configuration command. You apply an aggregate policer to multiple classes in the same policy map; you cannot use an aggregate policer across different policy maps.

To return to policy-map configuration mode, use the **exit** command. To return to privileged EXEC mode, use the **end** command.

You cannot configure aggregate policers in hierarchical policy maps.

Examples

This example shows how to define the aggregate policer parameters and to apply the policer to multiple classes in a policy map:

```
Switch(config)# mls qos aggregate-policer agg_policer1 10000 1000000 exceed-action drop
Switch(config)# policy-map policy2
Switch(config-pmap)# class class1
Switch(config-pmap-c)# police aggregate agg_policer1
Switch(config-pmap-c)# exit
Switch(config-pmap)# class class2
Switch(config-pmap-c)# set dscp 10
Switch(config-pmap-c)# police aggregate agg_policer1
Switch(config-pmap-c)# exit
Switch(config-pmap)# class class3
Switch(config-pmap-c)# trust dscp
Switch(config-pmap-c)# police aggregate agg_policer2
Switch(config-pmap-c)# exit
```

You can verify your settings by entering the **show mls qos aggregate-policer** privileged EXEC command.

Related Commands

Command	Description
mls qos aggregate-policer	Defines policer parameters, which can be shared by multiple classes within a policy map.
show mls qos aggregate-policer	Displays the quality of service (QoS) aggregate policer configuration.

policy-map

Use the **policy-map** global configuration command to create or modify a policy map that can be attached to multiple physical ports or switch virtual interfaces (SVIs) and to enter policy-map configuration mode. Use the **no** form of this command to delete an existing policy map and to return to global configuration mode.

policy-map *policy-map-name*

no policy-map *policy-map-name*

Syntax Description

<i>policy-map-name</i>	Name of the policy map.
------------------------	-------------------------

Defaults

No policy maps are defined.

The default behavior is to set the Differentiated Services Code Point (DSCP) to 0 if the packet is an IP packet and to set the class of service (CoS) to 0 if the packet is tagged. No policing is performed.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	Support for policy maps on SVIs was added.

Usage Guidelines

After entering the **policy-map** command, you enter policy-map configuration mode, and these configuration commands are available:

- **class**: defines the classification match criteria for the specified class map. For more information, see the “[class](#)” section on page 2-34.
- **description**: describes the policy map (up to 200 characters).
- **exit**: exits policy-map configuration mode and returns you to global configuration mode.
- **no**: removes a previously defined policy map.
- **rename**: renames the current policy map.

To return to global configuration mode, use the **exit** command. To return to privileged EXEC mode, use the **end** command.

Before configuring policies for classes whose match criteria are defined in a class map, use the **policy-map** command to specify the name of the policy map to be created, added to, or modified. Entering the **policy-map** command also enables the policy-map configuration mode in which you can configure or modify the class policies for that policy map.

You can configure class policies in a policy map only if the classes have match criteria defined for them. To configure the match criteria for a class, use the **class-map** global configuration and **match** class-map configuration commands. You define packet classification on a physical-port basis.

Only one policy map per ingress port or SVI is supported. You can apply the same policy map to multiple physical ports or SVIs.

In software releases earlier than Cisco IOS Release 12.2(25)SE, you can apply a policy map and configure policing only on physical ports. You can configure the trust state, set a new DSCP or IP precedence value in the packet, or define an individual or aggregate policer. For more information, see the “Policing on Physical Ports” section in the “Configuring QoS” chapter of the software configuration guide for this release.

In Cisco IOS Release 12.2(25)SE or later, you can apply a nonhierarchical policy maps to physical ports or to SVIs. A nonhierarchical policy map is the same as a port-based policy maps in software releases earlier than Cisco IOS Release 12.2(25)SE. However, a hierarchical policy map can only be applied to SVIs.

A hierarchical policy map has two levels. The first level, the VLAN level, specifies the actions to be taken against a traffic flow on an SVI. The second level, the interface level, specifies the actions to be taken against the traffic on the physical ports that belong to the SVI and are specified in the interface-level policy map.

In a primary VLAN-level policy map, you can only configure the trust state or set a new DSCP or IP precedence value in the packet. In a secondary interface-level policy map, you can only configure individual policers on physical ports that belong to the SVI.

After the hierarchical policy map is attached to an SVI, an interface-level policy map cannot be modified or removed from the hierarchical policy map. A new interface-level policy map also cannot be added to the hierarchical policy map. If you want these changes to occur, the hierarchical policy map must first be removed from the SVI.

For more information about hierarchical policy maps, see the “Policing on SVIs” section in the “Configuring QoS” chapter of the software configuration guide for this release.

Examples

This example shows how to create a policy map called *policy1*. When attached to the ingress port, it matches all the incoming traffic defined in *class1*, sets the IP DSCP to 10, and polices the traffic at an average rate of 1 Mbps and bursts at 20 KB. Traffic exceeding the profile is marked down to a DSCP value gotten from the policed-DSCP map and then sent.

```
Switch(config)# policy-map policy1
Switch(config-pmap)# class class1
Switch(config-pmap-c)# set dscp 10
Switch(config-pmap-c)# police 1000000 20000 exceed-action policed-dscp-transmit
Switch(config-pmap-c)# exit
```

This example shows how to configure multiple classes in a policy map called *polycymap2*:

```
Switch(config)# policy-map polycymap2
Switch(config-pmap)# class class1
Switch(config-pmap-c)# set dscp 10
Switch(config-pmap-c)# police 100000 20000 exceed-action policed-dscp-transmit
Switch(config-pmap-c)# exit
Switch(config-pmap)# class class2
Switch(config-pmap-c)# trust dscp
Switch(config-pmap-c)# police 100000 20000 exceed-action drop
Switch(config-pmap-c)# exit
Switch(config-pmap)# class class3
Switch(config-pmap-c)# set dscp 0 (no policer)
Switch(config-pmap-c)# exit
```

This example shows how to create a hierarchical policy map and attach it to an SVI:

```
Switch(config)# class-map cm-non-int
Switch(config-cmap)# match access-group 101
Switch(config-cmap)# exit
Switch(config)# class-map cm-non-int-2
Switch(config-cmap)# match access-group 102
Switch(config-cmap)# exit
Switch(config)# class-map cm-test-int
Switch(config-cmap)# match input-interface gigabitethernet0/2 - gigabitethernet0/3
Switch(config-cmap)# exit
Switch(config)# policy-map pm-test-int
Switch(config-pmap)# class cm-test-int
Switch(config-pmap-c)# police 18000000 8000 exceed-action drop
Switch(config-pmap-c)# exit
Switch(config-pmap)# exit
Switch(config)# policy-map pm-test-pm-2
Switch(config-pmap)# class cm-non-int
Switch(config-pmap-c)# set dscp 7
Switch(config-pmap-c)# service-policy pm-test-int
Switch(config-pmap)# class cm-non-int-2
Switch(config-pmap-c)# set dscp 15
Switch(config-pmap-c)# service-policy pm-test-int
Switch(config-pmap-c)# end
Switch(config-cmap)# exit
Switch(config)# interface vlan 10
Switch(config-if)# service-policy input pm-test-pm-2
```

This example shows how to delete *polycymap2*:

```
Switch(config)# no policy-map polycymap2
```

You can verify your settings by entering the **show policy-map** privileged EXEC command.

Related Commands

Command	Description
class	Defines a traffic classification match criteria (through the police , set , and trust policy-map class configuration command) for the specified class-map name.
class-map	Creates a class map to be used for matching packets to the class whose name you specify.
service-policy	Applies a policy map to a port.
show mls qos vlan	Displays the quality of service (QoS) policy maps attached to an SVI.
show policy-map	Displays QoS policy maps.

port-channel load-balance

Use the **port-channel load-balance** global configuration command to set the load-distribution method among the ports in the EtherChannel. Use the **no** form of this command to return to the default setting.

port-channel load-balance { **dst-ip** | **dst-mac** | **src-dst-ip** | **src-dst-mac** | **src-ip** | **src-mac** }

no port-channel load-balance

Syntax Description	
dst-ip	Load distribution is based on the destination host IP address.
dst-mac	Load distribution is based on the destination host MAC address. Packets to the same destination are sent on the same port, but packets to different destinations are sent on different ports in the channel.
src-dst-ip	Load distribution is based on the source and destination host IP address.
src-dst-mac	Load distribution is based on the source and destination host MAC address.
src-ip	Load distribution is based on the source host IP address.
src-mac	Load distribution is based on the source MAC address. Packets from different hosts use different ports in the channel, but packets from the same host use the same port.

Defaults The default is **src-mac**.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines For information about when to use these forwarding methods, see the “Configuring EtherChannels” chapter in the software configuration guide for this release.

Examples This example shows how to set the load-distribution method to **dst-mac**:

```
Switch(config)# port-channel load-balance dst-mac
```

You can verify your setting by entering the **show running-config** privileged EXEC command or the **show etherchannel load-balance** privileged EXEC command.

Related Commands

Command	Description
interface port-channel	Accesses or creates the port channel.
show etherchannel	Displays EtherChannel information for a channel.
show running-config	Displays the current operating configuration. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

power inline

Use the **power inline** interface configuration command to configure the power management mode on the Power over Ethernet (PoE) ports. Use the **no** form of this command to return to the default settings.

```
power inline { auto [max max-wattage] | never | static [max max-wattage] }
```

```
no power inline { auto | never | static }
```

Syntax Description

auto	Enable powered-device detection. If enough power is available, automatically allocate power to the PoE port after device detection.
max <i>max-wattage</i>	(Optional) Limit the power allowed on the port. The range is 4000 to 15400 milliwatts. If no value is specified, the maximum is allowed.
never	Disable device detection, and disable power to the port.
static	Enable powered-device detection. Pre-allocate (reserve) power for a port before the switch discovers the powered device.

Defaults

The default is **auto** (enabled).

The maximum wattage is 15400 milliwatts.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	The static and max <i>max-wattage</i> options were added.

Usage Guidelines

This command is supported only on PoE-capable ports. If you enter this command on a port that does not support PoE, this error message appears:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# power inline auto
                        ^
% Invalid input detected at '^' marker.
```

Use the **max** *max-wattage* option to disallow higher-power powered devices. With this configuration, when the powered device sends Cisco Discovery Protocol (CDP) messages requesting more power than the maximum wattage, the switch removes power from the port. If the powered-device IEEE class maximum is greater than the maximum wattage, the switch does not power the device. The power is reclaimed into the global power budget.



Note

The switch never powers any Class 0 or Class 3 device if the **power inline max** *max-wattage* command is configured for less than 15.4 W.

If the switch denies power to a powered device (the powered device requests more power through CDP messages or if the IEEE class maximum is greater than the maximum wattage), the PoE port is in a power-deny state. The switch generates a system message, and the Oper column in the **show power inline** user EXEC command output shows *power-deny*.

Use the **power inline static max** *max-wattage* command to give a port high priority. The switch allocates PoE to a port configured in static mode before allocating power to a port configured in auto mode. The switch reserves power for the static port when it is configured rather than upon device discovery. The switch reserves the power on a static port even when there is no connected device and whether or not the port is in a shutdown or in a no shutdown state. The switch allocates the configured maximum wattage to the port, and the amount is never adjusted through the IEEE class or by CDP messages from the powered device. Because power is pre-allocated, any powered device that uses less than or equal to the maximum wattage is guaranteed power when it is connected to a static port. However, if the powered device IEEE class is greater than the maximum wattage, the switch does not supply power to it. If the switch learns through CDP messages that the powered device needs more than the maximum wattage, the powered device is shut down.

If the switch cannot pre-allocate power when a port is in static mode (for example, because the entire power budget is already allocated to other auto or static ports), this message appears: `Command rejected: power inline static: pwr not available`. The port configuration remains unchanged.

When you configure a port by using the **power inline auto** or the **power inline static** interface configuration command, the port autonegotiates by using the configured speed and duplex settings. This is necessary to determine the power requirements of the connected device (whether or not it is a powered device). After the power requirements have been determined, the switch hardcodes the interface by using the configured speed and duplex settings without resetting the interface.

When you configure a port by using the **power inline never** command, the port reverts to the configured speed and duplex settings.

If a port has a Cisco powered device connected to it, you should not use the **power inline never** command to configure the port. A false link-up can occur on the port, placing it into an error-disabled state.

**Caution**

In releases earlier than Cisco IOS Release 12.2(20)SE1, power was sometimes still applied to a PoE port even after a powered device was removed. This could cause damage to a nonpowered device when it was later connected to that port. Make sure that your switch is running Cisco IOS Release 12.2(20)SE1 or later.

Examples

This example shows how to enable detection of a powered device and to automatically power a PoE port:

```
Switch(config)# interface fastethernet0/2
Switch(config-if)# power inline auto
```

This example shows how to configure a PoE port to allow a Class 1 or a Class 2 powered device:

```
Switch(config)# interface fastethernet0/2
Switch(config-if)# power inline auto max 7000
```

This example shows how to disable powered-device detection and to not power a PoE port:

```
Switch(config)# interface fastethernet0/2
Switch(config-if)# power inline never
```

You can verify your settings by entering the **show power inline** user EXEC command.

Related Commands	Command	Description
	logging event power-inline-status	Enables the logging of PoE events.
	show controllers power inline	Displays the values in the registers of the specified PoE controller.
	show power inline	Displays the PoE status for the specified PoE port or for all PoE ports.

power inline consumption

Use the **power inline consumption** global or interface configuration command on the switch stack or on a standalone switch to override the amount of power specified by the IEEE classification for the device by specifying the wattage used by each powered device. Use the **no** form of this command to return to the default power setting.

power inline consumption default *wattage*

no power inline consumption default

Syntax Description	<i>wattage</i>	Specify the power that the switch budgets for the port. The range is 4000 to 15400 milliwatts.
---------------------------	----------------	--

Defaults The default power on each Power over Ethernet (PoE) port is 15400 milliwatts.

Command Modes Global configuration
Interface configuration

Command History	Release	Modification
	12.2(25)SEC	This command was introduced.

Usage Guidelines When Cisco powered devices are connected to PoE ports, the switch uses Cisco Discovery Protocol (CDP) to determine the *actual* power consumption of the devices, and the switch adjusts the power budget accordingly. This does not apply to IEEE third-party powered devices. For these devices, when the switch grants a power request, the switch adjusts the power budget according to the powered-device IEEE classification. If the powered device is a Class 0 (class status unknown) or a Class 3, the switch budgets 15400 milliwatts for the device, regardless of the actual amount of power needed. If the powered device reports a higher class than its actual consumption or does not support power classification (defaults to Class 0), the switch can power fewer devices because it uses the IEEE class information to track the global power budget.

By using the **power inline consumption** *wattage* configuration command, you can override the default power requirement specified by the IEEE classification. The difference between what is mandated by the IEEE classification and what is actually needed by the device is reclaimed into the global power budget for use by additional devices. You can then extend the switch power budget and use it more effectively.

For example, if the switch budgets 15400 milliwatts on each PoE port, you can connect only 24 Class 0 powered devices. If your Class 0 device power requirement is actually 5000 milliwatts, you can set the consumption wattage to 5000 milliwatts and connect up to 48 devices. The total PoE output power available on a 24-port or 48-port switch is 370,000 milliwatts.



Caution

You should carefully plan your switch power budget and make certain not to oversubscribe the power supply.

When you enter the **power inline consumption default** *wattage* or the **no power inline consumption default** command, this caution message appears:

```
%CAUTION: Interface interface-id: Misconfiguring the 'power inline consumption/allocation'
command may cause damage to the switch and void your warranty. Take precaution not to
oversubscribe the power supply. Refer to documentation.
```

**Note**

When you manually configure the power budget, you must also consider the power loss over the cable between the switch and the powered device.

For more information about the IEEE power classifications, see the “Configuring Interface Characteristics” chapter in the software configuration guide for this release.

This command is supported only on PoE-capable ports. If you enter this command on a switch or port that does not support PoE, an error message appears.

Examples

By using the global configuration command, this example shows how to configure the switch to budget 5000 milliwatts to each PoE port:

```
Switch(config)# power inline consumption default 5000
%CAUTION: Interface Gi0/1: Misconfiguring the 'power inline consumption/allocation'
command may cause damage to the switch and void your warranty. Take precaution not to
oversubscribe the power supply. Refer to documentation.
```

By using the interface configuration command, this example shows how to configure the switch to budget 12000 milliwatts to the powered device connected to a specific PoE port:

```
Switch(config)# interface gigabitethernet1/0/2
Switch(config-if)# power inline consumption default 12000
%CAUTION: Interface Gi0/2: Misconfiguring the 'power inline consumption/allocation'
command may cause damage to the switch and void your warranty. Take precaution not to
oversubscribe the power supply. Refer to documentation.
```

You can verify your settings by entering the **show power inline consumption default** privileged EXEC command.

Related Commands

Command	Description
power inline	Configures the power management mode on PoE ports.
show power inline	Displays the PoE status for the specified PoE port or for all PoE ports.

priority-queue

Use the **priority-queue** interface configuration command to enable the egress expedite queue on a port. Use the **no** form of this command to return to the default setting.

priority-queue out

no priority-queue out

Syntax Description

out	Enable the egress expedite queue.
------------	-----------------------------------

Defaults

The egress expedite queue is disabled.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

When you configure the **priority-queue out** command, the shaped round robin (SRR) weight ratios are affected because there is one fewer queue participating in SRR. This means that *weight1* in the **srr-queue bandwidth shape** or the **srr-queue bandwidth shape** interface configuration command is ignored (not used in the ratio calculation). The expedite queue is a priority queue, and it is serviced until empty before the other queues are serviced.

Follow these guidelines when the expedite queue is enabled or the egress queues are serviced based on their SRR weights:

- If the egress expedite queue is enabled, it overrides the SRR shaped and shared weights for queue 1.
- If the egress expedite queue is disabled and the SRR shaped and shared weights are configured, the shaped mode overrides the shared mode for queue 1, and SRR services this queue in shaped mode.
- If the egress expedite queue is disabled and the SRR shaped weights are not configured, SRR services the queue in shared mode.

Examples

This example shows how to enable the egress expedite queue when the SRR weights are configured. The egress expedite queue overrides the configured SRR weights.

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# srr-queue bandwidth shape 25 0 0 0
Switch(config-if)# srr-queue bandwidth share 30 20 25 25
Switch(config-if)# priority-queue out
```

This example shows how to disable the egress expedite queue after the SRR shaped and shared weights are configured. The shaped mode overrides the shared mode.

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# srr-queue bandwidth shape 25 0 0 0
Switch(config-if)# srr-queue bandwidth share 30 20 25 25
Switch(config-if)# no priority-queue out
```

You can verify your settings by entering the **show mls qos interface *interface-id* queueing** or the **show running-config** privileged EXEC command.

Related Commands

Command	Description
show mls qos interface queueing	Displays the queueing strategy (SRR, priority queueing), the weights corresponding to the queues, and the CoS-to-egress-queue map.
srr-queue bandwidth shape	Assigns the shaped weights and enables bandwidth shaping on the four egress queues mapped to a port.
srr-queue bandwidth share	Assigns the shared weights and enables bandwidth sharing on the four egress queues mapped to a port.

private-vlan

Use the **private-vlan** VLAN configuration command to configure private VLANs and to configure the association between private-VLAN primary and secondary VLANs. Use the **no** form of this command to return the VLAN to normal VLAN configuration.

private-vlan {association [add | remove] *secondary-vlan-list* | community | isolated | primary}

no private-vlan {association | community | isolated | primary}

Syntax Description

association	Create an association between the primary VLAN and a secondary VLAN.
<i>secondary-vlan-list</i>	Specify one or more secondary VLANs to be associated with a primary VLAN in a private VLAN.
add	Associate a secondary VLAN to a primary VLAN.
remove	Clear the association between a secondary VLAN and a primary VLAN.
community	Designate the VLAN as a community VLAN.
isolated	Designate the VLAN as a community VLAN.
primary	Designate the VLAN as a community VLAN.

Defaults

The default is to have no private VLANs configured.

Command Modes

VLAN configuration

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

Before configuring private VLANs, you must disable VTP (VTP mode transparent). After you configure a private VLAN, you should not change the VTP mode to client or server.

VTP does not propagate private-VLAN configuration. You must manually configure private VLANs on all switches in the Layer 2 network to merge their Layer 2 databases and to prevent flooding of private-VLAN traffic.

You cannot include VLAN 1 or VLANs 1002 to 1005 in the private-VLAN configuration. Extended VLANs (VLAN IDs 1006 to 4094) can be configured in private VLANs.

You can **associate** a secondary (isolated or community) VLAN with only one primary VLAN. A primary VLAN can have one isolated VLAN and multiple community VLANs associated with it.

- A secondary VLAN cannot be configured as a primary VLAN.
- The *secondary_vlan_list* parameter cannot contain spaces. It can contain multiple comma-separated items. Each item can be a single private-VLAN ID or a hyphenated range of private-VLAN IDs. The list can contain one isolated VLAN and multiple community VLANs.
- If you delete either the primary or secondary VLANs, the ports associated with the VLAN become inactive.

A **community** VLAN carries traffic among community ports and from community ports to the promiscuous ports on the corresponding primary VLAN.

An **isolated** VLAN is used by isolated ports to communicate with promiscuous ports. It does not carry traffic to other community ports or isolated ports with the same primary vlan domain.

A **primary** VLAN is the VLAN that carries traffic from a gateway to customer end stations on private ports.

Configure Layer 3 VLAN interfaces (SVIs) only for primary VLANs. You cannot configure Layer 3 VLAN interfaces for secondary VLANs. SVIs for secondary VLANs are inactive while the VLAN is configured as a secondary VLAN.

The **private-vlan** commands do not take effect until you exit from VLAN configuration mode.

Do not configure private-VLAN ports as EtherChannels. While a port is part of the private-VLAN configuration, any EtherChannel configuration for it is inactive.

Do not configure a private VLAN as a Remote Switched Port Analyzer (RSPAN) VLAN.

Do not configure a private VLAN as a voice VLAN.

Do not configure fallback bridging on switches with private VLANs.

Although a private VLAN contains more than one VLAN, only one STP instance runs for the entire private VLAN. When a secondary VLAN is associated with the primary VLAN, the STP parameters of the primary VLAN are propagated to the secondary VLAN.

For information about configuring host ports and promiscuous ports, see the [switchport mode private-vlan](#) command.

For more information about private-VLAN interaction with other features, see the software configuration guide for this release.

Examples

This example shows how to configure VLAN 20 as a primary VLAN, VLAN 501 as an isolated VLAN, and VLANs 502 and 503 as community VLANs, and to associate them in a private VLAN:

```
Switch# configure terminal
Switch(config)# vlan 20
Switch(config-vlan)# private-vlan primary
Switch(config-vlan)# exit
Switch(config)# vlan 501
Switch(config-vlan)# private-vlan isolated
Switch(config-vlan)# exit
Switch(config)# vlan 502
Switch(config-vlan)# private-vlan community
Switch(config-vlan)# exit
Switch(config)# vlan 503
Switch(config-vlan)# private-vlan community
Switch(config-vlan)# exit
Switch(config)# vlan 20
Switch(config-vlan)# private-vlan association 501-503
Switch(config-vlan)# end
```

You can verify your setting by entering the **show vlan private-vlan** or **show interfaces status** privileged EXEC command.

Related Commands

Command	Description
show interfaces status	Displays the status of interfaces, including the VLANs to which they belong.
show vlan private-vlan	Displays the private VLANs and VLAN associations configured on the switch.
switchport mode private-vlan	Configures a private-VLAN port as a host port or promiscuous port.

private-vlan mapping

Use the **private-vlan mapping** interface configuration command on a switch virtual interface (SVI) to create a mapping between a private-VLAN primary and secondary VLANs so that both VLANs share the same primary VLAN SVI. Use the **no** form of this command to remove private-VLAN mappings from the SVI.

private-vlan mapping {[add | remove] *secondary-vlan-list*}

no private-vlan mapping

Syntax Description	
<i>secondary-vlan-list</i>	Specify one or more secondary VLANs to be mapped to the primary VLAN SVI.
add	(Optional) Map the secondary VLAN to the primary VLAN SVI.
remove	(Optional) Remove the mapping between the secondary VLAN and the primary VLAN SVI.

Defaults The default is to have no private VLAN SVI mapping configured.

Command Modes Interface configuration

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines

The switch must be in VTP transparent mode when you configure private VLANs.

The SVI of the primary VLAN is created at Layer 3.

Configure Layer 3 VLAN interfaces (SVIs) only for primary VLANs. You cannot configure Layer 3 VLAN interfaces for secondary VLANs. SVIs for secondary VLANs are inactive while the VLAN is configured as a secondary VLAN.

The *secondary_vlan_list* parameter cannot contain spaces. It can contain multiple comma-separated items. Each item can be a single private-VLAN ID or a hyphenated range of private-VLAN IDs. The list can contain one isolated VLAN and multiple community VLANs.

Traffic that is received on the secondary VLAN is routed by the SVI of the primary VLAN.

A secondary VLAN can be mapped to only one primary SVI. IF you configure the primary VLAN as a secondary VLAN, all SVIs specified in this command are brought down.

If you configure a mapping between two VLANs that do not have a valid Layer 2 private-VLAN association, the mapping configuration does not take effect.

Examples

This example shows how to map the interface of VLAN 20 to the SVI of VLAN 18:

```
Switch# configure terminal
Switch# interface vlan 18
Switch(config-if)# private-vlan mapping 20
Switch(config-vlan)# end
```

This example shows how to permit routing of secondary VLAN traffic from secondary VLANs 303 to 305 and 307 through VLAN 20 SVI:

```
Switch# configure terminal
Switch# interface vlan 20
Switch(config-if)# private-vlan mapping 303-305, 307
Switch(config-vlan)# end
```

You can verify your setting by entering the **show interfaces private-vlan mapping** privileged EXEC command.

Related Commands

Command	Description
show interfaces private-vlan mapping	Display private-VLAN mapping information for the VLAN SVIs.

queue-set

Use the **queue-set** interface configuration command to map a port to a queue-set. Use the **no** form of this command to return to the default setting.

queue-set *qset-id*

no queue-set *qset-id*

Syntax Description	<i>qset-id</i>	ID of the queue-set. Each port belongs to a queue-set, which defines all the characteristics of the four egress queues per port. The range is 1 to 2.								
Defaults	The queue-set ID is 1.									
Command Modes	Interface configuration									
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>12.1(19)EA1</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	12.1(19)EA1	This command was introduced.					
Release	Modification									
12.1(19)EA1	This command was introduced.									
Examples	<p>This example shows how to map a port to queue-set 2:</p> <pre>Switch(config)# interface gigabitethernet0/1 Switch(config-if)# queue-set 2</pre> <p>You can verify your settings by entering the show mls qos interface [interface-id] buffers privileged EXEC command.</p>									
Related Commands	<table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>mls qos queue-set output buffers</td> <td>Allocates buffers to a queue-set.</td> </tr> <tr> <td>mls qos queue-set output threshold</td> <td>Configures the weighted tail-drop (WTD) thresholds, guarantees the availability of buffers, and configures the maximum memory allocation to a queue-set.</td> </tr> <tr> <td>show mls qos interface buffers</td> <td>Displays quality of service (QoS) information.</td> </tr> </tbody> </table>	Command	Description	mls qos queue-set output buffers	Allocates buffers to a queue-set.	mls qos queue-set output threshold	Configures the weighted tail-drop (WTD) thresholds, guarantees the availability of buffers, and configures the maximum memory allocation to a queue-set.	show mls qos interface buffers	Displays quality of service (QoS) information.	
Command	Description									
mls qos queue-set output buffers	Allocates buffers to a queue-set.									
mls qos queue-set output threshold	Configures the weighted tail-drop (WTD) thresholds, guarantees the availability of buffers, and configures the maximum memory allocation to a queue-set.									
show mls qos interface buffers	Displays quality of service (QoS) information.									

rcommand

Use the **rcommand** user EXEC command to start a Telnet session and to execute commands on a cluster member switch from the cluster command switch. To end the session, enter the **exit** command.

```
rcommand { n | commander | mac-address hw-addr }
```

Syntax Description

<i>n</i>	Provide the number that identifies a cluster member. The range is 0 to 15.
commander	Provide access to the cluster command switch from a cluster member switch.
mac-address <i>hw-addr</i>	MAC address of the cluster member switch.

Command Modes

User EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

This command is available only on the cluster command switch.

If the switch is the cluster command switch but the cluster member switch *n* does not exist, an error message appears. To get the switch number, enter the **show cluster members** privileged EXEC command on the cluster command switch.

You can use this command to access a cluster member switch from the cluster command-switch prompt or to access a cluster command switch from the member-switch prompt.

For Catalyst 2900 XL, 3500 XL, 2950, 2960, 2970, 3550, 3560, and 3750 switches, the Telnet session accesses the member-switch command-line interface (CLI) at the same privilege level as on the cluster command switch. For example, if you execute this command at user level on the cluster command switch, the cluster member switch is accessed at user level. If you use this command on the cluster command switch at privileged level, the command accesses the remote device at privileged level. If you use an intermediate enable-level lower than *privileged*, access to the cluster member switch is at user level.

For Catalyst 1900 and 2820 switches running standard edition software, the Telnet session accesses the menu console (the menu-driven interface) if the cluster command switch is at privilege level 15. If the cluster command switch is at privilege level 1, you are prompted for the password before being able to access the menu console. Cluster command switch privilege levels map to the cluster member switches running standard edition software as follows:

- If the cluster command switch privilege level is from 1 to 14, the cluster member switch is accessed at privilege level 1.
- If the cluster command switch privilege level is 15, the cluster member switch is accessed at privilege level 15.

The Catalyst 1900 and 2820 CLI is available only on switches running Enterprise Edition Software.

This command will not work if the vty lines of the cluster command switch have access-class configurations.

You are not prompted for a password because the cluster member switches inherited the password of the cluster command switch when they joined the cluster.

Examples

This example shows how to start a session with member 3. All subsequent commands are directed to member 3 until you enter the **exit** command or close the session.

```
Switch# rcommand 3
Switch-3# show version
Cisco Internet Operating System Software ...
...
Switch-3# exit
Switch#
```

Related Commands

Command	Description
show cluster members	Displays information about the cluster members.

remote-span

Use the **remote-span** VLAN configuration command to configure a VLAN as a Remote Switched Port Analyzer (RSPAN) VLAN. Use the **no** form of this command to remove the RSPAN designation from the VLAN.

remote-span

no remote-span

Syntax Description This command has no arguments or keywords.

Defaults No RSPAN VLANs are defined.

Command Modes VLAN configuration (config-VLAN)

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You can configure RSPAN VLANs only in config-VLAN mode (entered by using the **vlan** global configuration command), not the VLAN configuration mode entered by using the **vlan database** privileged EXEC command.

If VLAN Trunking Protocol (VTP) is enabled, the RSPAN feature is propagated by VTP for VLAN-IDs that are lower than 1005. If the RSPAN VLAN ID is in the extended range, you must manually configure intermediate switches (those in the RSPAN VLAN between the source switch and the destination switch).

Before you configure the RSPAN **remote-span** command, use the **vlan** (global configuration) command to create the VLAN.

The RSPAN VLAN has these characteristics:

- No MAC address learning occurs on it.
- RSPAN VLAN traffic flows only on trunk ports.
- Spanning Tree Protocol (STP) can run in the RSPAN VLAN, but it does not run on RSPAN destination ports.

When an existing VLAN is configured as an RSPAN VLAN, the VLAN is first deleted and then recreated as an RSPAN VLAN. Any access ports are made inactive until the RSPAN feature is disabled.

Examples

This example shows how to configure a VLAN as an RSPAN VLAN.

```
Switch(config)# vlan 901
Switch(config-vlan)# remote-span
```

This example shows how to remove the RSPAN feature from a VLAN.

```
Switch(config)# vlan 901
Switch(config-vlan)# no remote-span
```

You can verify your settings by entering the **show vlan remote-span** user EXEC command.

Related Commands

Command	Description
monitor session	Enables Switched Port Analyzer (SPAN) and RSPAN monitoring on a port and configures a port as a source or destination port.
vlan (global configuration)	Changes to config-vlan mode where you can configure VLANs 1 to 4094.

renew ip dhcp snooping database

Use the **renew ip dhcp snooping database** privileged EXEC command to renew the DHCP snooping binding database.

```
renew ip dhcp snooping database [{ flash://filename | ftp://user:password@host/filename |
nvram://filename | rcp://user@host/filename | tftp://host/filename}] [validation none]
```

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description

flash ://filename	(Optional) Specify that the database agent or the binding file is in the flash memory.
ftp ://user:password@host/filename	(Optional) Specify that the database agent or the binding file is on an FTP server.
nvr am://filename	(Optional) Specify that the database agent or the binding file is in the NVRAM.
r cp://user@host/filename	(Optional) Specify that the database agent or the binding file is on a Remote Control Protocol (RCP) server.
tftp ://host/filename	(Optional) Specify that the database agent or the binding file is on a TFTP server.
validation none	(Optional) Specify that the switch does not verify the cyclic redundancy check (CRC) for the entries in the binding file specified by the URL.

Defaults

No default is defined.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

If you do not specify a URL, the switch tries to read the file from the configured URL.

Examples

This example shows how to renew the DHCP snooping binding database without checking CRC values in the file:

```
Switch# renew ip dhcp snooping database validation none
```

You can verify your settings by entering the **show ip dhcp snooping database** privileged EXEC command.

renew ip dhcp snooping database**Related Commands**

Command	Description
ip dhcp snooping	Enables DHCP snooping on a VLAN.
ip dhcp snooping binding	Configures the DHCP snooping binding database.
show ip dhcp snooping database	Displays the status of the DHCP snooping database agent.

rmon collection stats

Use the **rmon collection stats** interface configuration command to collect Ethernet group statistics, which include usage statistics about broadcast and multicast packets, and error statistics about cyclic redundancy check (CRC) alignment errors and collisions. Use the **no** form of this command to return to the default setting.

rmon collection stats *index* [*owner name*]

no rmon collection stats *index* [*owner name*]

Syntax Description	
<i>index</i>	Remote Network Monitoring (RMON) collection control index. The range is 1 to 65535.
<i>owner name</i>	(Optional) Owner of the RMON collection.

Defaults The RMON statistics collection is disabled.

Command Modes Interface configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The RMON statistics collection command is based on hardware counters.

Examples This example shows how to collect RMON statistics for the owner *root*:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# rmon collection stats 2 owner root
```

You can verify your setting by entering the **show rmon statistics** privileged EXEC command.

Related Commands	Command	Description
	show rmon statistics	Displays RMON statistics. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > System Management Commands > RMON Commands .

sdm prefer

Use the **sdm prefer** global configuration command on the switch to configure the template used in Switch Database Management (SDM) resource allocation. You can use a template to allocate system resources to best support the features being used in your application. Use a template to provide maximum system usage for unicast routing or for VLAN configuration, or to select the dual IPv4 and IPv6 template to support IPv6 forwarding (supported only when the switch is running the advanced IP services image). Use the **no** form of this command to return to the default template.

```
sdm prefer {access | default | dual-ipv4-and-ipv6 {default | vlan} | routing | vlan}
```

```
no sdm prefer
```

Syntax Description	
access	Provide maximum system usage for access control lists (ACLs). Use this template if you have a large number of ACLs.
default	Give balance to all functions.
dual-ipv4-and-ipv6 {default vlan}	Select a template that supports both IPv4 and IPv6 routing. <ul style="list-style-type: none"> default—Provide balance to IPv4 and IPv6 Layer 2 and Layer 3 functionality. vlan—Provide maximum system usage for IPv4 and IPv6 VLANs. <p>Note Though visible on all switches, this option is supported only if the switch is running the advanced IP services image.</p>
routing	Provide maximum system usage for unicast routing. You would typically use this template for a router or aggregator in the middle of a network.
vlan	Provide maximum system usage for VLANs. This template maximizes system resources for use as a Layer 2 switch with no routing.

Defaults The default template provides a balance to all features.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
	12.2(25)SEA	The dual-ipv4-and-ipv6 templates were added.
	12.2(25)SED	The access templates were added.

Usage Guidelines You must reload the switch for the configuration to take effect. If you enter the **show sdm prefer** command before you enter the **reload** privileged EXEC command, the **show sdm prefer** command shows the template currently in use and the template that will become active after a reload.

Use the **no sdm prefer** command to set the switch to the default desktop template.

The access template maximizes system resources for access control lists (ACLs) as required to accommodate a large number of ACLs.

The default template balances the use of system resources.

Use the **sdm prefer vlan** global configuration command only on switches intended for Layer 2 switching with no routing. When you use the VLAN template, no system resources are reserved for routing entries, and any routing is done through software. This overloads the CPU and severely degrades routing performance.

Do not use the routing template if you do not have routing enabled on your switch. Entering the **sdm prefer routing** global configuration command prevents other features from using the memory allocated to unicast routing in the routing template.

Do not use the **ipv4-and-ipv6** templates if you do not plan to enable IPv6 routing on the switch. Entering the **sdm prefer ipv4-and-ipv6 {default | vlan}** global configuration command divides resources between IPv4 and IPv6, limiting those allocated to IPv4 forwarding.

Table 2-15 lists the approximate number of each resource supported in each of the IPv4-only templates for a switch. The values in the template are based on eight routed interfaces and approximately one thousand VLANs and represent the approximate hardware boundaries set when a template is selected. If a section of a hardware resource is full, all processing overflow is sent to the CPU, seriously impacting switch performance.

Table 2-15 Approximate Number of Feature Resources Allowed by Each Template

Resource	Access	Default	Routing	VLAN
Unicast MAC addresses	4 K	6 K	3 K	12 K
IGMP groups and multicast routes	1 K	1 K	1 K	1 K
Unicast routes	6 K	8 K	11 K	0
• Directly connected hosts	4 K	6 K	3 K	0
• Indirect routes	2 K	2 K	8 K	0
Policy-based routing access control entries (ACEs)	512	0	512	0
Quality of service (QoS) classification ACEs	512	512	512	512
Security ACEs	2 K	1 K	1 K	1 K
Layer 2 VLANs	1 K	1 K	1 K	1 K

Table 2-16 lists the approximate number of each resource supported in each of the IPv4-and IPv6 templates for a switch.

Table 2-16 Approximate Feature Resources Allowed by Dual IPv4-IPv6 Templates

Resource	Default	VLAN
Unicast MAC addresses	2 K	8 K
IPv4 IGMP groups and multicast routes	1 K	1 K
Total IPv4 unicast routes:	3 K	0
• Directly connected IPv4 hosts	2 K	0
• Indirect IPv4 routes	1 K	0
IPv6 multicast groups	1 K	1 K

Table 2-16 Approximate Feature Resources Allowed by Dual IPv4-IPv6 Templates (continued)

Resource	Default	VLAN
Total IPv6 unicast routes:	3 K	0
• Directly connected IPv6 addresses	2 K	0
• Indirect IPv6 unicast routes	1 K	0
IPv4 policy-based routing ACEs	0	0
IPv4 or MAC QoS ACEs (total)	512	512
IPv4 or MAC security ACEs (total)	1 K	1 K
IPv6 policy-based routing ACEs	0	0
IPv6 QoS ACEs	510	510
IPv6 security ACEs	510	510

Examples

This example shows how to configure the access template on a switch:

```
Switch(config)# sdm prefer access
Switch(config)# exit
Switch# reload
```

This example shows how to configure the routing template on a switch:

```
Switch(config)# sdm prefer routing
Switch(config)# exit
Switch# reload
```

This example shows how to configure the dual IPv4-and-IPv6 default template on a switch:

```
Switch(config)# sdm prefer dual-ipv4-and-ipv6 default
Switch(config)# exit
Switch# reload
```

This example shows how to change a switch template to the default template.

```
Switch(config)# no sdm prefer
Switch(config)# exit
Switch# reload
```

You can verify your settings by entering the **show sdm prefer** privileged EXEC command.

Related Commands

Command	Description
show sdm prefer	Displays the current SDM template in use or displays the templates that can be used, with approximate resource allocation per feature.

service password-recovery

Use the **service password-recovery** global configuration command to enable the password-recovery mechanism (the default). This mechanism allows an end user with physical access to the switch to hold down the **Mode** button and interrupt the boot process while the switch is powering up and to assign a new password. Use the **no** form of this command to disable part of the password-recovery functionality. When the password-recovery mechanism is disabled, interrupting the boot process is allowed only if the user agrees to set the system back to the default configuration.

service password-recovery

no service password-recovery

Syntax Description This command has no arguments or keywords.

Defaults The password-recovery mechanism is enabled.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines As a system administrator, you can use the **no service password-recovery** command to disable some of the functionality of the password recovery feature by allowing an end user to reset a password only by agreeing to return to the default configuration.

To use the password-recovery procedure, a user with physical access to the switch holds down the **Mode** button while the unit powers up and for a second or two after the LED above port 1X turns off. When the button is released, the system continues with initialization. If the password-recovery mechanism is disabled, this message appears:

```
The password-recovery mechanism has been triggered, but
is currently disabled. Access to the boot loader prompt
through the password-recovery mechanism is disallowed at
this point. However, if you agree to let the system be
reset back to the default system configuration, access
to the boot loader prompt can still be allowed.
```

```
Would you like to reset the system back to the default configuration (y/n)?
```

If the user chooses not to reset the system to the default configuration, the normal boot process continues, as if the **Mode** button had not been pressed. If you choose to reset the system to the default configuration, the configuration file in flash memory is deleted, and the VLAN database file, *flash:vlan.dat* (if present), is deleted.

**Note**

If you use the **no service password-recovery** command to control end user access to passwords, we recommend that you save a copy of the config file in a location away from the switch in case the end user uses the password recovery procedure and sets the system back to default values. Do not keep a backup copy of the config file on the switch.

If the switch is operating in VTP transparent mode, we recommend that you also save a copy of the vlan.dat file in a location away from the switch.

You can verify if password recovery is enabled or disabled by entering the **show version** privileged EXEC command.

Examples

This example shows how to disable password recovery on a switch so that a user can only reset a password by agreeing to return to the default configuration.

```
Switch(config)# no service-password recovery
Switch(config)# exit
```

Related Commands

Command	Description
show version	Displays version information for the hardware and firmware.

service-policy

Use the **service-policy** interface configuration command on the switch stack or on a standalone switch to apply a policy map defined by the **policy-map** command to the input of a physical port or a switch virtual interface (SVI). Use the **no** form of this command to remove the policy map and port association.

service-policy input *policy-map-name*

no service-policy input *policy-map-name*

Syntax Description

input *policy-map-name* Apply the specified policy map to the input of a physical port or an SVI.



Note

Though visible in the command-line help strings, the **history** keyword is not supported, and you should ignore the statistics that it gathers. The **output** keyword is also not supported.

Defaults

No policy maps are attached to the port.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	A policy map can now be applied to a physical port or an SVI.
12.2(25)SED	Hierarchical policy-maps can now be applied to an SVI.

Usage Guidelines

Only one policy map per ingress port is supported. In software releases earlier than Cisco IOS Release 12.2(25)SE, policy maps can be configured only on physical ports.

In Cisco IOS Release 12.2(25)SE or later, policy maps can be configured on physical ports or on SVIs. When VLAN-based quality of service (QoS) is disabled by using the **no mls qos vlan-based** interface configuration command on a physical port, you can configure a port-based policy map on the port. If VLAN-based QoS is enabled by using the **mls qos vlan-based** interface configuration command on a physical port, the switch removes the previously configured port-based policy map. After a hierarchical policy map is configured and applied on an SVI, the interface-level policy map takes effect on the interface.

In software releases earlier than Cisco IOS Release 12.2(25)SE, you can apply a policy map only to the incoming traffic on a physical port. In Cisco IOS Release 12.2(25)SE or later, you can apply a policy map to incoming traffic on a physical port or on an SVI. In Cisco IOS Release 12.2(25)SED or later, you can configure different interface-level policy maps for each class defined in the VLAN-level policy map. For more information about hierarchical policy maps, see the “Configuring QoS” chapter in the software configuration guide for this release.

Classification using a port trust state (for example, **mls qos trust [cos | dsep | ip-precedence]**) and a policy map (for example, **service-policy input *policy-map-name***) are mutually exclusive. The last one configured overwrites the previous configuration.

Examples

This example shows how to apply *plcmap1* to an physical ingress port:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# service-policy input plcmap1
```

This example shows how to remove *plcmap2* from a physical port:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# no service-policy input plcmap2
```

This example shows how to apply *plcmap1* to an ingress SVI when VLAN-based QoS is enabled:

```
Switch(config)# interface vlan 10
Switch(config-if)# service-policy input plcmap1
```


This example shows how to create a hierarchical policy map and attach it to an SVI:

```
Switch>enable
Switch#config t
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)#access-list 101 permit ip any any
Switch(config)#class-map cm-1
Switch(config-cmap)#match access 101
Switch(config-cmap)#exit
Switch(config)#exit
Switch#
Switch#
Switch#config t
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)#class-map cm-interface-1
Switch(config-cmap)#match input g3/0/1 - g3/0/2
Switch(config-cmap)#exit
Switch(config)#policy-map port-plcmap
Switch(config-pmap)#class-map cm-interface-1
Switch(config-pmap-c)#police 900000 9000 exc policed-dscp-transmit
Switch(config-pmap-c)#exit
Switch(config-pmap)#exit
Switch(config)#policy-map vlan-plcmap
Switch(config-pmap)#class-map cm-1
Switch(config-pmap-c)#set dscp 7
Switch(config-pmap-c)#service-policy port-plcmap-1
Switch(config-pmap-c)#exit
Switch(config-pmap)#class-map cm-2
Switch(config-pmap-c)#match ip dscp 2
Switch(config-pmap-c)#service-policy port-plcmap-1
Switch(config-pmap)#exit
Switch(config-pmap)#class-map cm-3
Switch(config-pmap-c)#match ip dscp 3
Switch(config-pmap-c)#service-policy port-plcmap-2
Switch(config-pmap)#exit
Switch(config-pmap)#class-map cm-4
Switch(config-pmap-c)#trust dscp
Switch(config-pmap)#exit
Switch(config)#int vlan 10
Switch(config-if)#
Switch(config-if)#ser input vlan-plcmap
Switch(config-if)#exit
Switch(config)#exit
Switch#
```

You can verify your settings by entering the **show running-config** privileged EXEC command.

Related Commands

Command	Description
policy-map	Creates or modifies a policy map that can be attached to multiple ports to specify a service policy.
show policy-map	Displays QoS policy maps.
show running-config	Displays the running configuration on the switch. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

set

Use the **set** policy-map class configuration command to classify IP traffic by setting a Differentiated Services Code Point (DSCP) or an IP-precedence value in the packet. Use the **no** form of this command to remove traffic classification.

```
set {dscp new-dscp | [ip] precedence new-precedence}
```

```
no set {dscp new-dscp | [ip] precedence new-precedence}
```

Syntax Description

dscp <i>new-dscp</i>	New DSCP value assigned to the classified traffic. The range is 0 to 63. You also can enter a mnemonic name for a commonly used value.
[ip] precedence <i>new-precedence</i>	New IP-precedence value assigned to the classified traffic. The range is 0 to 7. You also can enter a mnemonic name for a commonly used value.

Defaults

No traffic classification is defined.

Command Modes

Policy-map class configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	The ip dscp <i>new-dscp</i> keyword was changed to dscp <i>new-dscp</i> . The set dscp <i>new-dscp</i> command replaces the set ip dscp <i>new-dscp</i> command.
12.2(25)SEC	The ip keyword is optional.

Usage Guidelines

In Cisco IOS Release 12.2(25)SE or later, if you have used the **set ip dscp** command, the switch changes this command to **set dscp** in the switch configuration. If you enter the **set ip dscp** command, this setting appears as **set dscp** in the switch configuration.

In Cisco IOS Release 12.2(25)SEC or later, you can use the **set ip precedence** or the **set precedence** command. This setting appears as **set ip precedence** in the switch configuration.

The **set** command is mutually exclusive with the **trust** policy-map class configuration command within the same policy map.

For the **set dscp** *new-dscp* or the **set ip precedence** *new-precedence* command, you can enter a mnemonic name for a commonly used value. For example, you can enter the **set dscp af11** command, which is the same as entering the **set dscp 10** command. You can enter the **set ip precedence critical** command, which is the same as entering the **set ip precedence 5** command. For a list of supported mnemonics, enter the **set dscp ?** or the **set ip precedence ?** command to see the command-line help strings.

To return to policy-map configuration mode, use the **exit** command. To return to privileged EXEC mode, use the **end** command.

Examples

This example shows how to assign DSCP 10 to all FTP traffic without any policers:

```
Switch(config)# policy-map policy_ftp
Switch(config-pmap)# class ftp_class
Switch(config-pmap-c)# set dscp 10
Switch(config-pmap)# exit
```

You can verify your settings by entering the **show policy-map** privileged EXEC command.

Related Commands

Command	Description
class	Defines a traffic classification match criteria (through the police , set , and trust policy-map class configuration commands) for the specified class-map name.
police	Defines a policer for classified traffic.
policy-map	Creates or modifies a policy map that can be attached to multiple ports to specify a service policy.
show policy-map	Displays QoS policy maps.
trust	Defines a trust state for traffic classified through the class policy-map configuration command or the class-map global configuration command.

setup

Use the **setup** privileged EXEC command to configure the switch with its initial configuration.

setup

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines When you use the **setup** command, make sure that you have this information:

- IP address and network mask
- Password strategy for your environment
- Whether the switch will be used as the cluster command switch and the cluster name

When you enter the **setup** command, an interactive dialog, called the System Configuration Dialog, appears. It guides you through the configuration process and prompts you for information. The values shown in brackets next to each prompt are the default values last set by using either the **setup** command facility or the **configure** privileged EXEC command.

Help text is provided for each prompt. To access help text, press the question mark (?) key at a prompt.

To return to the privileged EXEC prompt without making changes and without running through the entire System Configuration Dialog, press **Ctrl-C**.

When you complete your changes, the setup program shows you the configuration command script that was created during the setup session. You can save the configuration in NVRAM or return to the setup program or the command-line prompt without saving it.

Examples This is an example of output from the **setup** command:

```
Switch# setup
--- System Configuration Dialog ---
```

```
Continue with configuration dialog? [yes/no]: yes
```

```
At any point you may enter a question mark '?' for help.
Use ctrl-c to abort configuration dialog at any prompt.
Default settings are in square brackets '[]'.
```

```
Basic management setup configures only enough connectivity
for management of the system, extended setup will ask you
to configure each interface on the system.
```

Would you like to enter basic management setup? [yes/no]: **yes**
 Configuring global parameters:

Enter host name [Switch]:*host-name*

The enable secret is a password used to protect access to privileged EXEC and configuration modes. This password, after entered, becomes encrypted in the configuration.

Enter enable secret: *enable-secret-password*

The enable password is used when you do not specify an enable secret password, with some older software versions, and some boot images.

Enter enable password: *enable-password*

The virtual terminal password is used to protect access to the router over a network interface.

Enter virtual terminal password: *terminal-password*

Configure SNMP Network Management? [no]: **yes**

Community string [public]:

Current interface summary

Any interface listed with OK? value "NO" does not have a valid configuration

Interface	IP-Address	OK?	Method	Status	Protocol
Vlan1	172.20.135.202	YES	NVRAM	up	up
GigabitEthernet0/1	unassigned	YES	unset	up	up
GigabitEthernet0/2	unassigned	YES	unset	up	down
<output truncated>					
Port-channel1	unassigned	YES	unset	up	down

Enter interface name used to connect to the management network from the above interface summary: **vlan1**

Configuring interface vlan1:

Configure IP on this interface? [yes]: **yes**

IP address for this interface: *ip_address*

Subnet mask for this interface [255.0.0.0]: *subnet_mask*

Would you like to enable as a cluster command switch? [yes/no]: **yes**

Enter cluster name: *cluster-name*

The following configuration command script was created:

```
hostname host-name
enable secret 5 $1$LiBw$0Xc1wyT.PXPkuhFwqyhVi0
enable password enable-password
line vty 0 15
password terminal-password
snmp-server community public
!
no ip routing
!
interface GigabitEthernet0/1
no ip address
!
interface GigabitEthernet0/2
no ip address
```

```

!
cluster enable cluster-name
!
end
Use this configuration? [yes/no]: yes
!
[0] Go to the IOS command prompt without saving this config.

[1] Return back to the setup without saving this config.

[2] Save this configuration to nvram and exit.

Enter your selection [2]:

```

Related Commands

Command	Description
show running-config	Displays the running configuration on the switch. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .
show version	Displays version information for the hardware and firmware.

setup express

Use the **setup express** global configuration command to enable Express Setup mode. Use the **no** form of this command to disable Express Setup mode.

setup express

no setup express

Syntax Description This command has no arguments or keywords.

Defaults Express Setup is enabled.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines When Express Setup is enabled on a new (unconfigured) switch, pressing the Mode button for 2 seconds activates Express Setup. You can access the switch through an Ethernet port by using the IP address 10.0.0.1 and then can configure the switch with the web-based Express Setup program or the command-line interface (CLI)-based setup program.

When you press the Mode button for 2 seconds on a configured switch, the LEDs above the Mode button start blinking. If you press the Mode button for a total of 10 seconds, the switch configuration is deleted, and the switch reboots. The switch can then be configured like a new switch, either through the web-based Express Setup program or the CLI-based setup program.



Note

As soon as you make any change to the switch configuration (including entering *no* at the beginning of the CLI-based setup program), configuration by Express Setup is no longer available. You can only run Express Setup again by pressing the Mode button for 10 seconds. This deletes the switch configuration and reboots the switch.

If Express Setup is active on the switch, entering the **write memory** or **copy running-configuration startup-configuration** privileged EXEC commands deactivates Express Setup. The IP address 10.0.0.1 is no longer valid on the switch, and your connection using this IP address ends.

The primary purpose of the **no setup express** command is to prevent someone from deleting the switch configuration by pressing the Mode button for 10 seconds.

Examples

This example shows how to enable Express Setup mode:

```
Switch(config)# setup express
```

You can verify that Express Setup mode is enabled by pressing the Mode button:

- On an unconfigured switch, the LEDs above the Mode button turn solid green after 3 seconds.
- On a configured switch, the mode LEDs begin blinking after 2 seconds and turn solid green after 10 seconds.

**Caution**

If you *hold* the Mode button down for a total of 10 seconds, the configuration is deleted, and the switch reboots.

This example shows how to disable Express Setup mode:

```
Switch(config)# no setup express
```

You can verify that Express Setup mode is disabled by pressing the Mode button. The mode LEDs do not turn solid green *or* begin blinking green if Express Setup mode is not enabled on the switch.

Related Commands

Command	Description
show setup express	Displays if Express Setup mode is active.

show access-lists

Use the **show access-lists** privileged EXEC command to display access control lists (ACLs) configured on the switch.

```
show access-lists [name | number | hardware counters | ipc] [ | {begin | exclude | include}
expression]
```

Syntax Description	
<i>name</i>	(Optional) Name of the ACL.
<i>number</i>	(Optional) ACL number. The range is 1 to 2699.
hardware counters	(Optional) Display global hardware ACL statistics for switched and routed packets.
ipc	(Optional) Display Interprocess Communication (IPC) protocol access-list configuration download information.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.



Note

Though visible in the command-line help strings, the **rate-limit** keywords are not supported.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The switch supports only IP standard and extended access lists. Therefore, the allowed numbers are only 1 to 199 and 1300 to 2699.

This command also displays the MAC ACLs that are configured.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples

This is an example of output from the **show access-lists** command:

```
Switch# show access-lists
Standard IP access list 1
  10 permit 1.1.1.1
  20 permit 2.2.2.2
  30 permit any
  40 permit 0.255.255.255, wildcard bits 12.0.0.0
Standard IP access list videowizard_1-1-1-1
  10 permit 1.1.1.1
Standard IP access list videowizard_10-10-10-10
  10 permit 10.10.10.10
Extended IP access list 121
  10 permit ahp host 10.10.10.10 host 20.20.10.10 precedence routine
Extended IP access list CMP-NAT-ACL
  Dynamic Cluster-HSRP deny ip any any
  10 deny ip any host 19.19.11.11
  20 deny ip any host 10.11.12.13
  Dynamic Cluster-NAT permit ip any any
  10 permit ip host 10.99.100.128 any
  20 permit ip host 10.46.22.128 any
  30 permit ip host 10.45.101.64 any
  40 permit ip host 10.45.20.64 any
  50 permit ip host 10.213.43.128 any
  60 permit ip host 10.91.28.64 any
  70 permit ip host 10.99.75.128 any
  80 permit ip host 10.38.49.0 any
```

This is an example of output from the **show access-lists hardware counters** command:

```
Switch# show access-lists hardware counters
L2 ACL INPUT Statistics
  Drop: All frame count: 855
  Drop: All bytes count: 94143
  Drop And Log: All frame count: 0
  Drop And Log: All bytes count: 0
  Bridge Only: All frame count: 0
  Bridge Only: All bytes count: 0
  Bridge Only And Log: All frame count: 0
  Bridge Only And Log: All bytes count: 0
  Forwarding To CPU: All frame count: 0
  Forwarding To CPU: All bytes count: 0
  Forwarded: All frame count: 2121
  Forwarded: All bytes count: 180762
  Forwarded And Log: All frame count: 0
  Forwarded And Log: All bytes count: 0

L3 ACL INPUT Statistics
  Drop: All frame count: 0
  Drop: All bytes count: 0
  Drop And Log: All frame count: 0
  Drop And Log: All bytes count: 0
  Bridge Only: All frame count: 0
  Bridge Only: All bytes count: 0
  Bridge Only And Log: All frame count: 0
  Bridge Only And Log: All bytes count: 0
  Forwarding To CPU: All frame count: 0
  Forwarding To CPU: All bytes count: 0
  Forwarded: All frame count: 13586
  Forwarded: All bytes count: 1236182
  Forwarded And Log: All frame count: 0
  Forwarded And Log: All bytes count: 0
```

```

L2 ACL OUTPUT Statistics
  Drop: All frame count: 0
  Drop: All bytes count: 0
  Drop And Log: All frame count: 0
  Drop And Log: All bytes count: 0
  Bridge Only: All frame count: 0
  Bridge Only: All bytes count: 0
  Bridge Only And Log: All frame count: 0
  Bridge Only And Log: All bytes count: 0
  Forwarding To CPU: All frame count: 0
  Forwarding To CPU: All bytes count: 0
  Forwarded: All frame count: 232983
  Forwarded: All bytes count: 16825661
  Forwarded And Log: All frame count: 0
  Forwarded And Log: All bytes count: 0

L3 ACL OUTPUT Statistics
  Drop: All frame count: 0
  Drop: All bytes count: 0
  Drop And Log: All frame count: 0
  Drop And Log: All bytes count: 0
  Bridge Only: All frame count: 0
  Bridge Only: All bytes count: 0
  Bridge Only And Log: All frame count: 0
  Bridge Only And Log: All bytes count: 0
  Forwarding To CPU: All frame count: 0
  Forwarding To CPU: All bytes count: 0
  Forwarded: All frame count: 514434
  Forwarded: All bytes count: 39048748
  Forwarded And Log: All frame count: 0
  Forwarded And Log: All bytes count: 0

```

Related Commands

Command	Description
access-list	Configures a standard or extended numbered access list on the switch. For syntax information, select Cisco IOS IP Command Reference, Volume 1 of 3:Addressing and Services, Release 12.2 > IP Services Commands .
ip access list	Configures a named IP access list on the switch. For syntax information, select Cisco IOS IP Command Reference, Volume 1 of 3:Addressing and Services, Release 12.2 > IP Services Commands .
mac access-list extended	Configures a named or numbered MAC access list on the switch.

show archive status

Use the **show archive status** privileged EXEC command to display the status of a new image being downloaded to a switch with the HTTP or the TFTP protocol.

```
show archive status [ | {begin | exclude | include} expression]
```

Syntax Description	
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes	
	Privileged EXEC

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines	
	<p>If you use the archive download-sw privileged EXEC command to download an image to a TFTP server, the output of the archive download-sw command shows the status of the download.</p> <p>If you do not have a TFTP server, you can use Network Assistant or the embedded device manager to download the image by using HTTP. The show archive status command shows the progress of the download.</p> <p>Expressions are case sensitive. For example, if you enter exclude output, the lines that contain <i>output</i> are not displayed, but the lines that contain <i>Output</i> are displayed.</p>

Examples	
	<p>These are examples of output from the show archive status command:</p>

```
Switch# show archive status
IDLE: No upgrade in progress
```

```
Switch# show archive status
LOADING: Upgrade in progress
```

```
Switch# show archive status
EXTRACT: Extracting the image
```

```
Switch# show archive status
VERIFY: Verifying software
```

```
Switch# show archive status
RELOAD: Upgrade completed. Reload pending
```

Related Commands	Command	Description
	archive download-sw	Downloads a new image from a TFTP server to the switch.

show arp access-list

Use the **show arp access-list** user EXEC command to display detailed information about Address Resolution Protocol (ARP) access control (lists).

```
show arp access-list [acl-name] [ | { begin | exclude | include } expression ]
```

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description

<i>acl-name</i>	(Optional) Name of the ACL.
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples

This is an example of output from the **show arp access-list** command:

```
Switch> show arp access-list
ARP access list rose
  permit ip 10.101.1.1 0.0.0.255 mac any
  permit ip 20.3.1.0 0.0.0.255 mac any
```

Related Commands

Command	Description
arp access-list	Defines an ARP ACL.
deny (ARP access-list configuration)	Denies an ARP packet based on matches against the Dynamic Host Configuration Protocol (DHCP) bindings.
ip arp inspection filter vlan	Permits ARP requests and responses from a host configured with a static IP address.
permit (ARP access-list configuration)	Permits an ARP packet based on matches against the DHCP bindings.

show auto qos

Use the **show auto qos** user EXEC command to display the quality of service (QoS) commands entered on the interfaces on which automatic QoS (auto-QoS) is enabled.

```
show auto qos [interface interface-id]
```

Syntax Description	interface <i>interface-id</i>	(Optional) Display auto-QoS information for the specified port or for all ports. Valid interfaces include physical ports.
---------------------------	--------------------------------------	---

Command Modes	User EXEC
----------------------	-----------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
12.2(20)SE	The information in the command output changed, and the user guidelines were updated.	

Usage Guidelines	<p>In releases earlier than Cisco IOS Release 12.2(20)SE, the show auto qos [interface <i>interface-id</i>] command output shows the initial generated auto-QoS configuration.</p> <p>In Cisco IOS Release 12.2(20)SE or later, the show auto qos command output shows only the auto-QoS command entered on each interface. The show auto qos interface <i>interface-id</i> command output shows the auto-QoS command entered on a specific interface.</p> <p>Use the show running-config privileged EXEC command to display the auto-QoS configuration and the user modifications.</p> <p>To display information about the QoS configuration that might be affected by auto-QoS, use one of these commands:</p> <ul style="list-style-type: none"> • show mls qos • show mls qos maps cos-dscp • show mls qos interface <i>interface-id</i> [buffers queueing] • show mls qos maps [cos-dscp cos-input-q cos-output-q dscp-cos dscp-input-q dscp-output-q] • show mls qos input-queue • show running-config
-------------------------	--

Examples

This is an example of output from the **show auto qos** command after the **auto qos voip cisco-phone** and the **auto qos voip cisco-softphone** interface configuration commands are entered:

```
Switch> show auto qos
GigabitEthernet0/4
auto qos voip cisco-softphone

GigabitEthernet0/5
auto qos voip cisco-phone

GigabitEthernet0/6
auto qos voip cisco-phone
```

This is an example of output from the **show auto qos interface interface-id** command when the **auto qos voip cisco-phone** interface configuration command is entered:

```
Switch> show auto qos interface gigabitethernet 0/5
GigabitEthernet0/5
auto qos voip cisco-phone
```

This is an example of output from the **show running-config** privileged EXEC command when the **auto qos voip cisco-phone** and the **auto qos voip cisco-softphone** interface configuration commands are entered:

```
Switch# show running-config
Building configuration...
...
mls qos map policed-dscp 24 26 46 to 0
mls qos map cos-dscp 0 8 16 26 32 46 48 56
mls qos srr-queue input bandwidth 90 10
mls qos srr-queue input threshold 1 8 16
mls qos srr-queue input threshold 2 34 66
mls qos srr-queue input buffers 67 33
mls qos srr-queue input cos-map queue 1 threshold 2 1
mls qos srr-queue input cos-map queue 1 threshold 3 0
mls qos srr-queue input cos-map queue 2 threshold 1 2
mls qos srr-queue input cos-map queue 2 threshold 2 4 6 7
mls qos srr-queue input cos-map queue 2 threshold 3 3 5
mls qos srr-queue input dscp-map queue 1 threshold 2 9 10 11 12 13 14 15
mls qos srr-queue input dscp-map queue 1 threshold 3 0 1 2 3 4 5 6 7
mls qos srr-queue input dscp-map queue 1 threshold 3 32
mls qos srr-queue input dscp-map queue 2 threshold 1 16 17 18 19 20 21 22 23
mls qos srr-queue input dscp-map queue 2 threshold 2 33 34 35 36 37 38 39 48
mls qos srr-queue input dscp-map queue 2 threshold 2 49 50 51 52 53 54 55 56
mls qos srr-queue input dscp-map queue 2 threshold 2 57 58 59 60 61 62 63
mls qos srr-queue input dscp-map queue 2 threshold 3 24 25 26 27 28 29 30 31
mls qos srr-queue input dscp-map queue 2 threshold 3 40 41 42 43 44 45 46 47
mls qos srr-queue output cos-map queue 1 threshold 3 5
mls qos srr-queue output cos-map queue 2 threshold 3 3 6 7
mls qos srr-queue output cos-map queue 3 threshold 3 2 4
mls qos srr-queue output cos-map queue 4 threshold 2 1
mls qos srr-queue output cos-map queue 4 threshold 3 0
mls qos srr-queue output dscp-map queue 1 threshold 3 40 41 42 43 44 45 46 47
mls qos srr-queue output dscp-map queue 2 threshold 3 24 25 26 27 28 29 30 31
mls qos srr-queue output dscp-map queue 2 threshold 3 48 49 50 51 52 53 54 55
mls qos srr-queue output dscp-map queue 2 threshold 3 56 57 58 59 60 61 62 63
mls qos srr-queue output dscp-map queue 3 threshold 3 16 17 18 19 20 21 22 23
mls qos srr-queue output dscp-map queue 3 threshold 3 32 33 34 35 36 37 38 39
mls qos srr-queue output dscp-map queue 4 threshold 1 8
mls qos srr-queue output dscp-map queue 4 threshold 2 9 10 11 12 13 14 15
mls qos srr-queue output dscp-map queue 4 threshold 3 0 1 2 3 4 5 6 7
mls qos queue-set output 1 threshold 1 100 100 100 100
mls qos queue-set output 1 threshold 2 75 75 75 250
```

```

mls qos queue-set output 1 threshold 3 75 150 100 300
mls qos queue-set output 1 threshold 4 50 100 75 400
mls qos queue-set output 2 threshold 1 100 100 100 100
mls qos queue-set output 2 threshold 2 35 35 35 35
mls qos queue-set output 2 threshold 3 55 82 100 182
mls qos queue-set output 2 threshold 4 90 250 100 400
mls qos queue-set output 1 buffers 15 20 20 45
mls qos queue-set output 2 buffers 24 20 26 30
mls qos
...
!
class-map match-all AutoQoS-VoIP-RTP-Trust
  match ip dscp ef
class-map match-all AutoQoS-VoIP-Control-Trust
  match ip dscp cs3 af31
!
policy-map AutoQoS-Police-SoftPhone
  class AutoQoS-VoIP-RTP-Trust
    set dscp ef
    police 32000 8000 exceed-action policed-dscp-transmit
  class AutoQoS-VoIP-Control-Trust
    set dscp cs3
    police 32000 8000 exceed-action policed-dscp-transmit
!
...
!
interface GigabitEthernet0/4
  switchport mode access
  switchport port-security maximum 400
  service-policy input AutoQoS-Police-SoftPhone
  speed 100
  duplex half
  srr-queue bandwidth share 10 10 60 20
  srr-queue bandwidth shape 10 0 0 0
  auto qos voip cisco-softphone
!
interface GigabitEthernet0/5
  switchport mode access
  switchport port-security maximum 1999
  speed 100
  duplex full
  srr-queue bandwidth share 10 10 60 20
  srr-queue bandwidth shape 10 0 0 0
  mls qos trust device cisco-phone
  mls qos trust cos
  auto qos voip cisco-phone
!
interface GigabitEthernet0/6
  switchport trunk encapsulation dot1q
  switchport trunk native vlan 2
  switchport mode access
  speed 10
  srr-queue bandwidth share 10 10 60 20
  srr-queue bandwidth shape 10 0 0 0
  mls qos trust device cisco-phone
  mls qos trust cos
  auto qos voip cisco-phone
!
<output truncated>

```


This is an example of output from the **show auto qos interface *interface-id*** command when the **auto qos voip cisco-phone** interface configuration command is entered:

```
Switch> show auto qos interface fastethernet0/2
FastEthernet0/2
auto qos voip cisco-phone
```

These are examples of output from the **show auto qos** command when auto-QoS is disabled on the switch:

```
Switch> show auto qos
AutoQoS not enabled on any interface
```

These are examples of output from the **show auto qos interface *interface-id*** command when auto-QoS is disabled on an interface:

```
Switch> show auto qos interface gigabitethernet0/1
AutoQoS is disabled
```

Related Commands

Command	Description
auto qos voip	Automatically configures QoS for VoIP within a QoS domain.
debug auto qos	Enables debugging of the auto-QoS feature.

show boot

Use the **show boot** privileged EXEC command to display the settings of the boot environment variables.

```
show boot [ | {begin | exclude | include} expression]
```

Syntax Description	
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples This is an example of output from the **show boot** command. [Table 2-17](#) describes each field in the display.

```
Switch# show boot
BOOT path-list: flash:c3560-ipservices-mz.122-25.SEB/c3560-ipservices-mz.122-25.SEB.bin
Config file:      flash:/config.text
Private Config file: flash:/private-config
Enable Break:    no
Manual Boot:     yes
HELPER path-list:
NVRAM/Config file
    buffer size:  32768
```

Table 2-17 *show boot Field Descriptions*

Field	Description
BOOT path-list	<p>Displays a semicolon separated list of executable files to try to load and execute when automatically booting.</p> <p>If the BOOT environment variable is not set, the system attempts to load and execute the first executable image it can find by using a recursive, depth-first search through the flash file system. In a depth-first search of a directory, each encountered subdirectory is completely searched before continuing the search in the original directory.</p> <p>If the BOOT variable is set but the specified images cannot be loaded, the system attempts to boot the first bootable file that it can find in the flash file system.</p>
Config file	Displays the filename that Cisco IOS uses to read and write a nonvolatile copy of the system configuration.
Private Config file	Displays the filename that Cisco IOS uses to read and write a nonvolatile copy of the system configuration.
Enable Break	Displays whether a break during booting is enabled or disabled. If it is set to yes, on, or 1, you can interrupt the automatic boot process by pressing the Break key on the console after the flash file system is initialized.
Manual Boot	Displays whether the switch automatically or manually boots. If it is set to no or 0, the boot loader attempts to automatically boot the system. If it is set to anything else, you must manually boot the switch from the boot loader mode.
Helper path-list	Displays a semicolon separated list of loadable files to dynamically load during the boot loader initialization. Helper files extend or patch the functionality of the boot loader.
NVRAM/Config file buffer size	Displays the buffer size that Cisco IOS uses to hold a copy of the configuration file in memory. The configuration file cannot be larger than the buffer size allocation.

Related Commands	Command	Description
	boot config-file	Specifies the filename that Cisco IOS uses to read and write a nonvolatile copy of the system configuration.
	boot enable-break	Enables interrupting the automatic boot process.
	boot manual	Enables manually booting the switch during the next boot cycle.
	boot private-config-file	Specifies the filename that Cisco IOS uses to read and write a nonvolatile copy of the private configuration.
	boot system	Specifies the Cisco IOS image to load during the next boot cycle.

show cable-diagnostics tdr

Use the **show cable-diagnostics tdr** privileged EXEC command to display the Time Domain Reflector (TDR) results.

```
show cable-diagnostics tdr interface interface-id [ | {begin | exclude | include} expression ]
```

Syntax Description

<i>interface-id</i>	Specify the interface on which TDR was run.
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(20)SE3	This command was introduced.

Usage Guidelines

TDR is supported only on 10/100/1000 copper Ethernet ports. It is not supported on 10/100 ports or on SFP module ports. For more information about TDR, see the software configuration guide for this release.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show cable-diagnostics tdr interface *interface-id*** command on a switch other than a Catalyst 3560G-24PS or 3560G-48PS switch:

```
Switch# show cable-diagnostics tdr interface gigabitethernet0/2
TDR test last run on: March 01 20:15:40
Interface Speed Local pair Pair length Remote pair Pair status
-----
Gi0/2 auto Pair A 0 +/- 2 meters N/A Open
          Pair B 0 +/- 2 meters N/A Open
          Pair C 0 +/- 2 meters N/A Open
          Pair D 0 +/- 2 meters N/A Open
```

This is an example of output from the **show cable-diagnostics tdr interface *interface-id*** command on a Catalyst 3560G-24PS or 3560G-48PS switch:

```
Switch# show cable-diagnostics tdr interface gigabitethernet0/2
TDR test last run on: March 01 20:15:40
Interface Speed Local pair Pair length Remote pair Pair status
-----
Gi0/2     auto  Pair A      0   +/- 4 meters N/A      Open
          Pair B      0   +/- 4 meters N/A      Open
          Pair C      0   +/- 4 meters N/A      Open
          Pair D      0   +/- 4 meters N/A      Open
```

Table 2-18 lists the descriptions of the fields in the **show cable-diagnostics tdr** command output.

Table 2-18 Fields Descriptions for the show cable-diagnostics tdr Command Output

Field	Description
Interface	Interface on which TDR was run.
Speed	Speed of connection.
Local pair	Name of the pair of wires that TDR is testing on the local interface.
Pair length	Location on the cable where the problem is, with respect to your switch. TDR can only find the location in one of these cases: <ul style="list-style-type: none"> The cable is properly connected, the link is up, and the interface speed is 1000 Mbps. The cable is open. The cable has a short.
Remote pair	Name of the pair of wires to which the local pair is connected. TDR can learn about the remote pair only when the cable is properly connected and the link is up.
Pair status	The status of the pair of wires on which TDR is running: <ul style="list-style-type: none"> Normal—The pair of wires is properly connected. Not completed—The test is running and is not completed. Not supported—The interface does not support TDR. Open—The pair of wires is open. Shorted—The pair of wires is shorted.

This is an example of output from the **show interface *interface-id*** command when TDR is running:

```
Switch# show interface gigabitethernet0/2
gigabitethernet0/2 is up, line protocol is up (connected: TDR in Progress)
```

This is an example of output from the **show cable-diagnostics tdr interface *interface-id*** command when TDR is not running:

```
Switch# show cable-diagnostics tdr interface gigabitethernet0/2
% TDR test was never issued on Gi0/2
```

If an interface does not support TDR, this message appears:

```
% TDR test is not supported on switch 1
```

■ show cable-diagnostics tdr

Related Commands	Command	Description
	test cable-diagnostics tdr	Enables and runs TDR on an interface.

show class-map

Use the **show class-map** user EXEC command to display quality of service (QoS) class maps, which define the match criteria to classify traffic.

```
show class-map [class-map-name] [ | {begin | exclude | include} expression]
```

Syntax Description	
<i>class-map-name</i>	(Optional) Display the contents of the specified class map.
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples This is an example of output from the **show class-map** command:

```
Switch> show class-map
Class Map match-all videowizard_10-10-10-10 (id 2)
  Match access-group name videowizard_10-10-10-10

Class Map match-any class-default (id 0)
  Match any
Class Map match-all dscp5 (id 3)
  Match ip dscp 5
```

Related Commands	Command	Description
	class-map	Creates a class map to be used for matching packets to the class whose name you specify.
	match (class-map configuration)	Defines the match criteria to classify traffic.

show cluster

Use the **show cluster** user EXEC command to display the cluster status and a summary of the cluster to which the switch belongs. This command can be entered on the cluster command switch and cluster member switches.

```
show cluster [ | {begin | exclude | include} expression]
```

Syntax Description	
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines If you enter this command on a switch that is not a cluster member, the error message `Not a management cluster member` appears.

On a cluster member switch, this command displays the identity of the cluster command switch, the switch member number, and the state of its connectivity with the cluster command switch.

On a cluster command switch, this command displays the cluster name and the total number of members. It also shows the cluster status and time since the status changed. If redundancy is enabled, it displays the primary and secondary command-switch information.

Expressions are case sensitive. For example, if you enter `| exclude output`, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples This is an example of output when the **show cluster** command is entered on the active cluster command switch:

```
Switch> show cluster
Command switch for cluster "Ajang"
Total number of members:      7
Status:                       1 members are unreachable
Time since last status change: 0 days, 0 hours, 2 minutes
Redundancy:                   Enabled
    Standby command switch: Member 1
    Standby Group:            Ajang_standby
    Standby Group Number:    110
Heartbeat interval:          8
Heartbeat hold-time:        80
Extended discovery hop count: 3
```


This is an example of output when the **show cluster** command is entered on a cluster member switch:

```
Switch1> show cluster
Member switch for cluster "hapuna"
  Member number:                3
  Management IP address:        192.192.192.192
  Command switch mac address:   0000.0c07.ac14
  Heartbeat interval:           8
  Heartbeat hold-time:          80
```

This is an example of output when the **show cluster** command is entered on a cluster member switch that is configured as the standby cluster command switch:

```
Switch> show cluster
Member switch for cluster "hapuna"
  Member number:                3 (Standby command switch)
  Management IP address:        192.192.192.192
  Command switch mac address:   0000.0c07.ac14
  Heartbeat interval:           8
  Heartbeat hold-time:          80
```

This is an example of output when the **show cluster** command is entered on the cluster command switch that has lost connectivity with member 1:

```
Switch> show cluster
Command switch for cluster "Ajang"
  Total number of members:      7
  Status:                       1 members are unreachable
  Time since last status change: 0 days, 0 hours, 5 minutes
  Redundancy:                   Disabled
  Heartbeat interval:           8
  Heartbeat hold-time:          80
  Extended discovery hop count: 3
```

This is an example of output when the **show cluster** command is entered on a cluster member switch that has lost connectivity with the cluster command switch:

```
Switch> show cluster
Member switch for cluster "hapuna"
  Member number:                <UNKNOWN>
  Management IP address:        192.192.192.192
  Command switch mac address:   0000.0c07.ac14
  Heartbeat interval:           8
  Heartbeat hold-time:          80
```

Related Commands

Command	Description
cluster enable	Enables a command-capable switch as the cluster command switch, assigns a cluster name, and optionally assigns a member number to it.
show cluster candidates	Displays a list of candidate switches.
show cluster members	Displays information about the cluster members.

show cluster candidates

Use the **show cluster candidates** privileged EXEC command to display a list of candidate switches.

```
show cluster candidates [detail | mac-address H.H.H.] [ | {begin | exclude | include} expression]
```

Syntax Description	detail	(Optional) Display detailed information for all candidates.
	mac-address H.H.H.	(Optional) MAC address of the cluster candidate.
	begin	(Optional) Display begins with the line that matches the <i>expression</i> .
	exclude	(Optional) Display excludes lines that match the <i>expression</i> .
	include	(Optional) Display includes lines that match the specified <i>expression</i> .
	<i>expression</i>	Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines This command is available only on the cluster command switch.

If the switch is not a cluster command switch, the command displays an empty line at the prompt.

The SN in the display means *switch member number*. If E appears in the SN column, it means that the switch is discovered through extended discovery. If E does not appear in the SN column, it means that the *switch member number* is the upstream neighbor of the candidate switch. The hop count is the number of devices the candidate is from the cluster command switch.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples This is an example of output from the **show cluster candidates** command:

```
Switch> show cluster candidates
                                     |---Upstream---|
MAC Address   Name           Device Type   PortIf  FEC Hops  SN PortIf  FEC
00d0.7961.c4c0 StLouis-2     WS-C3560-12T Gi0/1   2   1   Fa0/11
00d0.bbf5.e900 ldf-dist-128 WS-C3524-XL   Fa0/7   1   0   Fa0/24
00e0.1e7e.be80 1900_Switch   1900         3       0   1   0   Fa0/11
00e0.1e9f.7a00 Surfers-24    WS-C2924-XL   Fa0/5   1   0   Fa0/3
00e0.1e9f.8c00 Surfers-12-2  WS-C2912-XL   Fa0/4   1   0   Fa0/7
00e0.1e9f.8c40 Surfers-12-1  WS-C2912-XL   Fa0/1   1   0   Fa0/9
```

This is an example of output from the **show cluster candidates** command that uses the MAC address of a cluster member switch directly connected to the cluster command switch:

```
Switch> show cluster candidates mac-address 00d0.7961.c4c0
Device 'Tahiti-12' with mac address number 00d0.7961.c4c0
  Device type:          cisco WS-C3560-12T
  Upstream MAC address: 00d0.796d.2f00 (Cluster Member 0)
  Local port:          Gi0/1   FEC number:
  Upstream port:       GI0/11  FEC Number:
Hops from cluster edge: 1
Hops from command device: 1
```

This is an example of output from the **show cluster candidates** command that uses the MAC address of a cluster member switch three hops from the cluster edge:

```
Switch> show cluster candidates mac-address 0010.7bb6.1cc0
Device 'Ventura' with mac address number 0010.7bb6.1cc0
  Device type:          cisco WS-C2912MF-XL
  Upstream MAC address: 0010.7bb6.1cd4
  Local port:          Fa2/1   FEC number:
  Upstream port:       Fa0/24  FEC Number:
Hops from cluster edge: 3
Hops from command device: -
```

This is an example of output from the **show cluster candidates detail** command:

```
Switch> show cluster candidates detail
Device 'Tahiti-12' with mac address number 00d0.7961.c4c0
  Device type:          cisco WS-C3512-XL
  Upstream MAC address: 00d0.796d.2f00 (Cluster Member 1)
  Local port:          Fa0/3   FEC number:
  Upstream port:       Fa0/13  FEC Number:
Hops from cluster edge: 1
Hops from command device: 2
Device '1900_Switch' with mac address number 00e0.1e7e.be80
  Device type:          cisco 1900
  Upstream MAC address: 00d0.796d.2f00 (Cluster Member 2)
  Local port:          3       FEC number: 0
  Upstream port:       Fa0/11  FEC Number:
Hops from cluster edge: 1
Hops from command device: 2
Device 'Surfers-24' with mac address number 00e0.1e9f.7a00
  Device type:          cisco WS-C2924-XL
  Upstream MAC address: 00d0.796d.2f00 (Cluster Member 3)
  Local port:          Fa0/5   FEC number:
  Upstream port:       Fa0/3   FEC Number:
Hops from cluster edge: 1
Hops from command device: 2
```

Related Commands

Command	Description
show cluster	Displays the cluster status and a summary of the cluster to which the switch belongs.
show cluster members	Displays information about the cluster members.

show cluster members

Use the **show cluster members** privileged EXEC command to display information about the cluster members.

```
show cluster members [n | detail] [ | {begin | exclude | include} expression]
```

Syntax Description	
<i>n</i>	(Optional) Number that identifies a cluster member. The range is 0 to 15.
detail	(Optional) Display detailed information for all cluster members.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines This command is available only on the cluster command switch.

If the cluster has no members, this command displays an empty line at the prompt.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples This is an example of output from the **show cluster members** command. The SN in the display means *switch number*.

```
Switch# show cluster members
SN MAC Address      Name                PortIf FEC Hops  |---Upstream---|
0  0002.4b29.2e00 StLouis1           0
1  0030.946c.d740 tal-switch-1 Fa0/13 1 0 Gi0/1 Up (Cmdr)
2  0002.b922.7180 nms-2820 10 0 2 1 Fa0/18 Up
3  0002.4b29.4400 SanJuan2 Gi0/1 2 1 Fa0/11 Up
4  0002.4b28.c480 GenieTest Gi0/2 2 1 Fa0/9 Up
```

This is an example of output from the **show cluster members** for cluster member 3:

```
Switch# show cluster members 3
Device 'SanJuan2' with member number 3
Device type:          cisco WS-C3560
MAC address:          0002.4b29.4400
Upstream MAC address: 0030.946c.d740 (Cluster member 1)
Local port:           Gi0/1   FEC number:
Upstream port:        GI0/11  FEC Number:
Hops from command device: 2
```

This is an example of output from the **show cluster members detail** command:

```
Switch# show cluster members detail
Device 'StLouis1' with member number 0 (Command Switch)
  Device type:          cisco WS-C3560
  MAC address:         0002.4b29.2e00
  Upstream MAC address:
  Local port:          FEC number:
  Upstream port:       FEC Number:
  Hops from command device: 0
Device 'tal-switch-14' with member number 1
  Device type:          cisco WS-C3548-XL
  MAC address:         0030.946c.d740
  Upstream MAC address: 0002.4b29.2e00 (Cluster member 0)
  Local port:          Fa0/13  FEC number:
  Upstream port:       Gi0/1   FEC Number:
  Hops from command device: 1
Device 'nms-2820' with member number 2
  Device type:          cisco 2820
  MAC address:         0002.b922.7180
  Upstream MAC address: 0030.946c.d740 (Cluster member 1)
  Local port:          10      FEC number: 0
  Upstream port:       Fa0/18  FEC Number:
  Hops from command device: 2
Device 'SanJuan2' with member number 3
  Device type:          cisco WS-C3560
  MAC address:         0002.4b29.4400
  Upstream MAC address: 0030.946c.d740 (Cluster member 1)
  Local port:          Gi0/1   FEC number:
  Upstream port:       Fa0/11  FEC Number:
  Hops from command device: 2
Device 'GenieTest' with member number 4
  Device type:          cisco SeaHorse
  MAC address:         0002.4b28.c480
  Upstream MAC address: 0030.946c.d740 (Cluster member 1)
  Local port:          Gi0/2   FEC number:
  Upstream port:       Fa0/9   FEC Number:
  Hops from command device: 2
Device 'Palpatine' with member number 5
  Device type:          cisco WS-C2924M-XL
  MAC address:         00b0.6404.f8c0
  Upstream MAC address: 0002.4b29.2e00 (Cluster member 0)
  Local port:          Gi2/1   FEC number:
  Upstream port:       Gi0/7   FEC Number:
  Hops from command device: 1
```

Related Commands

Command	Description
show cluster	Displays the cluster status and a summary of the cluster to which the switch belongs.
show cluster candidates	Displays a list of candidate switches.

show controllers cpu-interface

Use the **show controllers cpu-interface** privileged EXEC command to display the state of the CPU network interface ASIC and the send and receive statistics for packets reaching the CPU.

show controllers cpu-interface [| { **begin** | **exclude** | **include** } *expression*]

Syntax Description	
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines This display provides information that might be useful for Cisco technical support representatives troubleshooting the switch.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples This is a partial output example from the **show controllers cpu-interface** command:

```
Switch# show controllers cpu-interface
cpu-queue-frames  retrieved  dropped  invalid  hol-block
-----
rpc                4523063    0        0        0
stp                1545035    0        0        0
ipc                1903047    0        0        0
routing protocol  96145     0        0        0
L2 protocol        79596     0        0        0
remote console     0          0        0        0
sw forwarding      5756      0        0        0
host               225646    0        0        0
broadcast          46472     0        0        0
cbt-to-spt         0          0        0        0
igmp snooping     68411     0        0        0
icmp               0          0        0        0
logging            0          0        0        0
rpf-fail           0          0        0        0
queue14            0          0        0        0
cpu heartbeat      1710501   0        0        0
```

```

Supervisor ASIC receive-queue parameters
-----
queue 0 maxrecevsize 5EE pakhead 1419A20 paktail 13EAED4
queue 1 maxrecevsize 5EE pakhead 15828E0 paktail 157FBFC
queue 2 maxrecevsize 5EE pakhead 1470D40 paktail 1470FE4
queue 3 maxrecevsize 5EE pakhead 19CDDD0 paktail 19D02C8

<output truncated>

Supervisor ASIC Mic Registers
-----
MicDirectPollInfo          80000800
MicIndicationsReceived     00000000
MicInterruptsReceived      00000000
MicPcsInfo                  0001001F
MicPlbMasterConfiguration  00000000
MicRxFifosAvailable        00000000
MicRxFifosReady            0000BFFF
MicTimeOutPeriod:         FrameTOPeriod: 0000EA6 DirectTOPeriod: 00004000

<output truncated>

MicTransmitFifoInfo:
Fifo0:  StartPtrs:      038C2800      ReadPtr:      038C2C38
        WritePtrs:      038C2C38      Fifo_Flag:    8A800800
        Weights:        001E001E
Fifo1:  StartPtr:      03A9BC00      ReadPtr:      03A9BC60
        WritePtrs:      03A9BC60      Fifo_Flag:    89800400
        writeHeaderPtr: 03A9BC60
Fifo2:  StartPtr:      038C8800      ReadPtr:      038C88E0
        WritePtrs:      038C88E0      Fifo_Flag:    88800200
        writeHeaderPtr: 038C88E0
Fifo3:  StartPtr:      03C30400      ReadPtr:      03C30638
        WritePtrs:      03C30638      Fifo_Flag:    89800400
        writeHeaderPtr: 03C30638
Fifo4:  StartPtr:      03AD5000      ReadPtr:      03AD50A0
        WritePtrs:      03AD50A0      Fifo_Flag:    89800400
        writeHeaderPtr: 03AD50A0
Fifo5:  StartPtr:      03A7A600      ReadPtr:      03A7A600
        WritePtrs:      03A7A600      Fifo_Flag:    88800200
        writeHeaderPtr: 03A7A600
Fifo6:  StartPtr:      03BF8400      ReadPtr:      03BF87F0
        WritePtrs:      03BF87F0      Fifo_Flag:    89800400

<output truncated>

```

Related Commands

Command	Description
show controllers ethernet-controller	Displays per-interface send and receive statistics read from the hardware or the interface internal registers.
show interfaces	Displays the administrative and operational status of all interfaces or a specified interface.

show controllers ethernet-controller

Use the **show controllers ethernet-controller** privileged EXEC command without keywords to display per-interface send and receive statistics read from the hardware. Use with the **phy** keyword to display the interface internal registers or the **port-asic** keyword to display information about the port ASIC.

```
show controllers ethernet-controller [interface-id] [phy [detail]] [port-asic {configuration |  
statistics}] [ | {begin | exclude | include} expression]
```

Syntax Description		
<i>interface-id</i>		The physical interface (including type, module, and port number).
phy		(Optional) Display the status of the internal registers on the switch physical layer device (PHY) for the device or the interface. This display includes the operational state of the automatic medium-dependent interface crossover (auto-MDIX) feature on an interface.
detail		(Optional) Display details about the PHY internal registers.
port-asic		(Optional) Display information about the port ASIC internal registers.
configuration		Display port ASIC internal register configuration.
statistics		Display port ASIC statistics, including the Rx/Sup Queue and miscellaneous statistics.
begin		(Optional) Display begins with the line that matches the <i>expression</i> .
exclude		(Optional) Display excludes lines that match the <i>expression</i> .
include		(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes Privileged EXEC (only supported with the *interface-id* keywords in user EXEC mode)

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines This display without keywords provides traffic statistics, basically the RMON statistics for all interfaces or for the specified interface.

When you enter the **phy** or **port-asic** keywords, the displayed information is useful primarily for Cisco technical support representatives troubleshooting the switch.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples

This is an example of output from the **show controllers ethernet-controller** command for an interface. [Table 2-19](#) describes the *Transmit* fields, and [Table 2-20](#) describes the *Receive* fields.

```
Switch# show controllers ethernet-controller gigabitEthernet0/1
Transmit GigabitEthernet0/1          Receive
0 Bytes                                0 Bytes
0 Unicast frames                       0 Unicast frames
0 Multicast frames                     0 Multicast frames
0 Broadcast frames                     0 Broadcast frames
0 Too old frames                       0 Unicast bytes
0 Deferred frames                      0 Multicast bytes
0 MTU exceeded frames                  0 Broadcast bytes
0 1 collision frames                   0 Alignment errors
0 2 collision frames                   0 FCS errors
0 3 collision frames                   0 Oversize frames
0 4 collision frames                   0 Undersize frames
0 5 collision frames                   0 Collision fragments
0 6 collision frames
0 7 collision frames                   0 Minimum size frames
0 8 collision frames                   0 65 to 127 byte frames
0 9 collision frames                   0 128 to 255 byte frames
0 10 collision frames                  0 256 to 511 byte frames
0 11 collision frames                  0 512 to 1023 byte frames
0 12 collision frames                  0 1024 to 1518 byte frames
0 13 collision frames                  0 Overrun frames
0 14 collision frames                  0 Pause frames
0 15 collision frames                  0 Symbol error frames
0 Excessive collisions
0 Late collisions                      0 Invalid frames, too large
0 VLAN discard frames                  0 Valid frames, too large
0 Excess defer frames                  0 Invalid frames, too small
0 64 byte frames                       0 Valid frames, too small
0 127 byte frames
0 255 byte frames                      0 Too old frames
0 511 byte frames                      0 Valid oversize frames
0 1023 byte frames                     0 System FCS error frames
0 1518 byte frames                     0 RxPortFifoFull drop frame
0 Too large frames
0 Good (1 coll) frames
```

Table 2-19 Transmit Field Descriptions

Field	Description
Bytes	The total number of bytes sent on an interface.
Unicast Frames	The total number of frames sent to unicast addresses.
Multicast frames	The total number of frames sent to multicast addresses.
Broadcast frames	The total number of frames sent to broadcast addresses.
Too old frames	The number of frames dropped on the egress port because the packet aged out.
Deferred frames	The number of frames that are not sent after the time exceeds 2*maximum-packet time.
MTU exceeded frames	The number of frames that are larger than the maximum allowed frame size.
1 collision frames	The number of frames that are successfully sent on an interface after one collision occurs.
2 collision frames	The number of frames that are successfully sent on an interface after two collisions occur.
3 collision frames	The number of frames that are successfully sent on an interface after three collisions occur.
4 collision frames	The number of frames that are successfully sent on an interface after four collisions occur.

Table 2-19 Transmit Field Descriptions (continued)

Field	Description
5 collision frames	The number of frames that are successfully sent on an interface after five collisions occur.
6 collision frames	The number of frames that are successfully sent on an interface after six collisions occur.
7 collision frames	The number of frames that are successfully sent on an interface after seven collisions occur.
8 collision frames	The number of frames that are successfully sent on an interface after eight collisions occur.
9 collision frames	The number of frames that are successfully sent on an interface after nine collisions occur.
10 collision frames	The number of frames that are successfully sent on an interface after ten collisions occur.
11 collision frames	The number of frames that are successfully sent on an interface after 11 collisions occur.
12 collision frames	The number of frames that are successfully sent on an interface after 12 collisions occur.
13 collision frames	The number of frames that are successfully sent on an interface after 13 collisions occur.
14 collision frames	The number of frames that are successfully sent on an interface after 14 collisions occur.
15 collision frames	The number of frames that are successfully sent on an interface after 15 collisions occur.
Excessive collisions	The number of frames that could not be sent on an interface after 16 collisions occur.
Late collisions	After a frame is sent, the number of frames dropped because late collisions were detected while the frame was sent.
VLAN discard frames	The number of frames dropped on an interface because the CFI ¹ bit is set.
Excess defer frames	The number of frames that are not sent after the time exceeds the maximum-packet time.
64 byte frames	The total number of frames sent on an interface that are 64 bytes.
127 byte frames	The total number of frames sent on an interface that are from 65 to 127 bytes.
255 byte frames	The total number of frames sent on an interface that are from 128 to 255 bytes.
511 byte frames	The total number of frames sent on an interface that are from 256 to 511 bytes.
1023 byte frames	The total number of frames sent on an interface that are from 512 to 1023 bytes.
1518 byte frames	The total number of frames sent on an interface that are from 1024 to 1518 bytes.
Too large frames	The number of frames sent on an interface that are larger than the maximum allowed frame size.
Good (1 coll) frames	The number of frames that are successfully sent on an interface after one collision occurs. This value does not include the number of frames that are not successfully sent after one collision occurs.

1. CFI = Canonical Format Indicator

Table 2-20 Receive Field Descriptions

Field	Description
Bytes	The total amount of memory (in bytes) used by frames received on an interface, including the FCS ¹ value and the incorrectly formed frames. This value excludes the frame header bits.
Unicast frames	The total number of frames successfully received on the interface that are directed to unicast addresses.
Multicast frames	The total number of frames successfully received on the interface that are directed to multicast addresses.
Broadcast frames	The total number of frames successfully received on an interface that are directed to broadcast addresses.

Table 2-20 Receive Field Descriptions (continued)

Field	Description
Unicast bytes	The total amount of memory (in bytes) used by unicast frames received on an interface, including the FCS value and the incorrectly formed frames. This value excludes the frame header bits.
Multicast bytes	The total amount of memory (in bytes) used by multicast frames received on an interface, including the FCS value and the incorrectly formed frames. This value excludes the frame header bits.
Broadcast bytes	The total amount of memory (in bytes) used by broadcast frames received on an interface, including the FCS value and the incorrectly formed frames. This value excludes the frame header bits.
Alignment errors	The total number of frames received on an interface that have alignment errors.
FCS errors	The total number of frames received on an interface that have a valid length (in bytes) but do not have the correct FCS values.
Oversize frames	The number of frames received on an interface that are larger than the maximum allowed frame size.
Undersize frames	The number of frames received on an interface that are smaller than 64 bytes.
Collision fragments	The number of collision fragments received on an interface.
Minimum size frames	The total number of frames that are the minimum frame size.
65 to 127 byte frames	The total number of frames that are from 65 to 127 bytes.
128 to 255 byte frames	The total number of frames that are from 128 to 255 bytes.
256 to 511 byte frames	The total number of frames that are from 256 to 511 bytes.
512 to 1023 byte frames	The total number of frames that are from 512 to 1023 bytes.
1024 to 1518 byte frames	The total number of frames that are from 1024 to 1518 bytes.
Overrun frames	The total number of overrun frames received on an interface.
Pause frames	The number of pause frames received on an interface.
Symbol error frames	The number of frames received on an interface that have symbol errors.
Invalid frames, too large	The number of frames received that were larger than maximum allowed MTU ² size (including the FCS bits and excluding the frame header) and that have either an FCS error or an alignment error.
Valid frames, too large	The number of frames received on an interface that are larger than the maximum allowed frame size.
Invalid frames, too small	The number of frames received that are smaller than 64 bytes (including the FCS bits and excluding the frame header) and that have either an FCS error or an alignment error.
Valid frames, too small	The number of frames received on an interface that are smaller than 64 bytes (or 68 bytes for VLAN-tagged frames) and that have valid FCS values. The frame size includes the FCS bits but excludes the frame header bits.
Too old frames	The number of frames dropped on the ingress port because the packet aged out.
Valid oversize frames	The number of frames received on an interface that are larger than the maximum allowed frame size and have valid FCS values. The frame size includes the FCS value but does not include the VLAN tag.

Table 2-20 Receive Field Descriptions (continued)

Field	Description
System FCS error frames	The total number of frames received on an interface that have a valid length (in bytes) but that do not have the correct FCS values.
RxPortFifoFull drop frames	The total number of frames received on an interface that are dropped because the ingress queue is full.

1. FCS = frame check sequence
2. MTU = maximum transmission unit

This is an example of output from the **show controllers ethernet-controller phy** command for a specific interface:

```
Switch# show controllers ethernet-controller gigabitethernet0/2 phy
Control Register          : 0001 0001 0100 0000
Control STATUS           : 0111 1001 0100 1001
Phy ID 1                 : 0000 0001 0100 0001
Phy ID 2                 : 0000 1100 0010 0100
Auto-Negotiation Advertisement : 0000 0011 1110 0001
Auto-Negotiation Link Partner : 0000 0000 0000 0000
Auto-Negotiation Expansion Reg : 0000 0000 0000 0100
Next Page Transmit Register : 0010 0000 0000 0001
Link Partner Next page Register : 0000 0000 0000 0000
1000BASE-T Control Register : 0000 1111 0000 0000
1000BASE-T Status Register  : 0100 0000 0000 0000
Extended Status Register   : 0011 0000 0000 0000
PHY Specific Control Register : 0000 0000 0111 1000
PHY Specific Status Register : 1000 0001 0100 0000
Interrupt Enable          : 0000 0000 0000 0000
Interrupt Status         : 0000 0000 0100 0000
Extended PHY Specific Control : 0000 1100 0110 1000
Receive Error Counter     : 0000 0000 0000 0000
Reserved Register 1      : 0000 0000 0000 0000
Global Status            : 0000 0000 0000 0000
LED Control              : 0100 0001 0000 0000
Manual LED Override      : 0000 1000 0010 1010
Extended PHY Specific Control : 0000 0000 0001 1010
Disable Receiver 1       : 0000 0000 0000 1011
Disable Receiver 2       : 1000 0000 0000 0100
Extended PHY Specific Status : 1000 0100 1000 0000
Auto-MDIX                : On [AdminState=1 Flags=0x00052248]
```

This is an example of output from the **show controllers ethernet-controller port-asic configuration** command:

```
Switch# show controllers ethernet-controller port-asic configuration
=====
Switch 1, PortASIC 0 Registers
-----
DeviceType                : 000101BC
Reset                     : 00000000
PmadMicConfig             : 00000001
PmadMicDiag               : 00000003
SupervisorReceiveFifoSramInfo : 000007D0 000007D0 40000000
SupervisorTransmitFifoSramInfo : 000001D0 000001D0 40000000
GlobalStatus              : 00000800
IndicationStatus          : 00000000
IndicationStatusMask      : FFFFFFFF
InterruptStatus           : 00000000
InterruptStatusMask       : 01FFE800
```

```

SupervisorDiag          : 00000000
SupervisorFrameSizeLimit : 000007C8
SupervisorBroadcast    : 000A0F01
GeneralIO               : 000003F9 00000000 00000004
StackPcsInfo           : FFFF1000 860329BD 5555FFFF FFFFFFFF
                       FF0FFF00 86020000 5555FFFF 00000000
StackRacInfo           : 73001630 00000003 7F001644 00000003
                       24140003 FD632B00 18E418E0 FFFFFFFF
StackControlStatus     : 18E418E0
stackControlStatusMask : FFFFFFFF
TransmitBufferFreeListInfo : 00000854 00000800 00000FF8 00000000
                       0000088A 0000085D 00000FF8 00000000
TransmitRingFifoInfo   : 00000016 00000016 40000000 00000000
                       0000000C 0000000C 40000000 00000000
TransmitBufferInfo     : 00012000 00000FFF 00000000 00000030
TransmitBufferCommonCount : 00000F7A
TransmitBufferCommonCountPeak : 0000001E
TransmitBufferCommonCommonEmpty : 000000FF
NetworkActivity        : 00000000 00000000 00000000 02400000
DroppedStatistics      : 00000000
FrameLengthDeltaSelect : 00000001
SneakPortFifoInfo     : 00000000
MacInfo                : 0EC0801C 00000001 0EC0801B 00000001
                       00C0001D 00000001 00C0001E 00000001

```

<output truncated>

This is an example of output from the **show controllers ethernet-controller port-asic statistics** command:

```
Switch# show controllers ethernet-controller port-asic statistics
=====
Switch 1, PortASIC 0 Statistics
-----
      0 RxQ-0, wt-0 enqueue frames          0 RxQ-0, wt-0 drop frames
4118966 RxQ-0, wt-1 enqueue frames          0 RxQ-0, wt-1 drop frames
      0 RxQ-0, wt-2 enqueue frames          0 RxQ-0, wt-2 drop frames

      0 RxQ-1, wt-0 enqueue frames          0 RxQ-1, wt-0 drop frames
    296 RxQ-1, wt-1 enqueue frames          0 RxQ-1, wt-1 drop frames
2836036 RxQ-1, wt-2 enqueue frames          0 RxQ-1, wt-2 drop frames

      0 RxQ-2, wt-0 enqueue frames          0 RxQ-2, wt-0 drop frames
      0 RxQ-2, wt-1 enqueue frames          0 RxQ-2, wt-1 drop frames
158377 RxQ-2, wt-2 enqueue frames          0 RxQ-2, wt-2 drop frames

      0 RxQ-3, wt-0 enqueue frames          0 RxQ-3, wt-0 drop frames
      0 RxQ-3, wt-1 enqueue frames          0 RxQ-3, wt-1 drop frames
      0 RxQ-3, wt-2 enqueue frames          0 RxQ-3, wt-2 drop frames

15 TxBufferFull Drop Count                 0 Rx Fcs Error Frames
      0 TxBufferFrameDesc BadCrc16          0 Rx Invalid Oversize Frames
      0 TxBuffer Bandwidth Drop Cou         0 Rx Invalid Too Large Frames
      0 TxQueue Bandwidth Drop Coun         0 Rx Invalid Too Large Frames
      0 TxQueue Missed Drop Statist         0 Rx Invalid Too Small Frames
74 RxBuffer Drop DestIndex Cou             0 Rx Too Old Frames
      0 SneakQueue Drop Count               0 Tx Too Old Frames
      0 Learning Queue Overflow Fra         0 System Fcs Error Frames
      0 Learning Cam Skip Count

15 Sup Queue 0 Drop Frames                 0 Sup Queue 8 Drop Frames
      0 Sup Queue 1 Drop Frames             0 Sup Queue 9 Drop Frames
      0 Sup Queue 2 Drop Frames             0 Sup Queue 10 Drop Frames
      0 Sup Queue 3 Drop Frames             0 Sup Queue 11 Drop Frames
      0 Sup Queue 4 Drop Frames             0 Sup Queue 12 Drop Frames
      0 Sup Queue 5 Drop Frames             0 Sup Queue 13 Drop Frames
      0 Sup Queue 6 Drop Frames             0 Sup Queue 14 Drop Frames
      0 Sup Queue 7 Drop Frames             0 Sup Queue 15 Drop Frames
=====
Switch 1, PortASIC 1 Statistics
-----
      0 RxQ-0, wt-0 enqueue frames          0 RxQ-0, wt-0 drop frames
    52 RxQ-0, wt-1 enqueue frames          0 RxQ-0, wt-1 drop frames
      0 RxQ-0, wt-2 enqueue frames          0 RxQ-0, wt-2 drop frames

<output truncated>
```

Related Commands

Command	Description
show controllers cpu-interface	Displays the state of the CPU network ASIC and send and receive statistics for packets reaching the CPU.
show controllers tcam	Displays the state of registers for all ternary content addressable memory (TCAM) in the system and for TCAM interface ASICs that are CAM controllers.

show controllers power inline

Use the **show controllers power inline** user EXEC command to display the values in the registers of the specified Power over Ethernet (PoE) controller.

```
show controllers power inline [instance] [ | { begin | exclude | include } expression]
```

Syntax Description		
<i>instance</i>	(Optional) Power controller instance, where each instance corresponds to four ports. See the “Usage Guidelines” section for more information. If no instance is specified, information for all instances appear.	
begin	(Optional) Display begins with the line that matches the <i>expression</i> .	
exclude	(Optional) Display excludes lines that match the <i>expression</i> .	
include	(Optional) Display includes lines that match the specified <i>expression</i> .	
<i>expression</i>	Expression in the output to use as a reference point.	

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines

For the Catalyst 3560-48PS switches, the *instance* range is 0 to 11.

For the Catalyst 3560-24PS switches, the *instance* range is 0 to 5.

For the Catalyst 3560G-48PS switches, the *instance* range is 0 to 2. For instances other than 0 to 2, the switches provides no output.

For the Catalyst 3560G-24PS switches, the *instance* range is 0 to 1. For instances other than 0 to 1, the switches provides no output.

Though visible on all switches, this command is valid only for PoE switches. It provides no information for switches that do not support PoE.

The output provides information that might be useful for Cisco technical support representatives troubleshooting the switch.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show controllers power inline** command on a switch other than a Catalyst 3560G-48PS or 3560G-24PS switch:

```
Switch> show controllers power inline
Controller Instance 0, Address 0x40
Interrupt          Reg 0x0 = 0x0
Intr Mask          Reg 0x1 = 0xF6
Power Event        Reg 0x2 = 0x0
Detect Event       Reg 0x4 = 0x0
Fault Event        Reg 0x6 = 0x0
T-Start Event      Reg 0x8 = 0x0
Supply Event       Reg 0xA = 0x0
Port 1 Status      Reg 0xC = 0x64
Port 2 Status      Reg 0xD = 0x3
Port 3 Status      Reg 0xE = 0x3
Port 4 Status      Reg 0xF = 0x3
Power Status       Reg 0x10 = 0xFF
Pin Status         Reg 0x11 = 0x0
Operating Mode     Reg 0x12 = 0xAA
Disconnect Enable  Reg 0x13 = 0xF0
Detect/Class Enable Reg 0x14 = 0xFF
Reserved          Reg 0x15 = 0x0
Timing Config      Reg 0x16 = 0x0
Misc Config        Reg 0x17 = 0xA0
ID Revision        Reg 0x1A = 0x64
```

```
Controller Instance 1, Address 0x42
<output truncated>
```

This is an example of output from the **show controllers power inline** command on a Catalyst 3560G-24PS switch:

```
Switch> show controllers power inline
Alchemy instance 0, address 0
Pending event flag :N N N N N N N N N N N
Current State      :00 05 10 51 61 11
Current Event      :00 01 00 10 40 00
Timers             :00 C5 57 03 12 20 04 B2 05 06 07 07
Error State        :00 00 00 00 10 00
Error Code         :00 00 00 00 00 00 00 00 00 00 00 00
Power Status       :N Y N N Y N N N N N N N
Auto Config        :N Y Y N Y Y Y Y Y Y Y Y
Disconnect         :N N N N N N N N N N N N
Detection Status   :00 00 00 30 00 00
Current Class      :00 00 00 30 00 00
Tweetie debug      :00 00 00 00
POE Commands pending at sub:
  Command 0 on each port :00 00 00 00 00 00
  Command 1 on each port :00 00 00 00 00 00
  Command 2 on each port :00 00 00 00 00 00
  Command 3 on each port :00 00 00 00 00 00
```

Related Commands

Command	Description
logging event power-inline-status	Enables the logging of PoE events.
power inline	Configures the power management mode for the specified PoE port or for all PoE ports.
show power inline	Displays the PoE status for the specified PoE port or for all PoE ports.

show controllers tcam

Use the **show controllers tcam** privileged EXEC command to display the state of the registers for all ternary content addressable memory (TCAM) in the system and for all TCAM interface ASICs that are CAM controllers.

```
show controllers tcam [asic [number]] [detail] [ | {begin | exclude | include} expression]
```

Syntax Description		
asic	(Optional) Display port ASIC TCAM information.	
number	(Optional) Display information for the specified port ASIC number. The range is from 0 to 15.	
detail	(Optional) Display detailed TCAM register information.	
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .	
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .	
 include	(Optional) Display includes lines that match the specified <i>expression</i> .	
<i>expression</i>	Expression in the output to use as a reference point.	

Command Modes	
	Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines This display provides information that might be useful for Cisco technical support representatives troubleshooting the switch.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show controllers tcam** command:

```
Switch# show controllers tcam
```

```
-----  
TCAM-0 Registers  
-----
```

```
REV:    00B30103  
SIZE:   00080040  
ID:     00000000  
CCR:    00000000_F0000020  
  
RPID0:  00000000_00000000  
RPID1:  00000000_00000000  
RPID2:  00000000_00000000  
RPID3:  00000000_00000000
```

■ **show controllers tcam**

```
HRR0: 00000000_E000CAFC
HRR1: 00000000_00000000
HRR2: 00000000_00000000
HRR3: 00000000_00000000
HRR4: 00000000_00000000
HRR5: 00000000_00000000
HRR6: 00000000_00000000
HRR7: 00000000_00000000
<output truncated>
```

```
GMR31: FF_FFFFFFFF_FFFFFFFF
GMR32: FF_FFFFFFFF_FFFFFFFF
GMR33: FF_FFFFFFFF_FFFFFFFF
```

```
=====  
TCAM related PortASIC 1 registers  
=====
```

```
LookupType: 89A1C67D_24E35F00
LastCamIndex: 0000FFE0
LocalNoMatch: 000069E0
ForwardingRamBaseAddress:
                                00022A00 0002FE00 00040600 0002FE00 0000D400
                                00000000 003FBA00 00009000 00009000 00040600
                                00000000 00012800 00012900
```

Related Commands

Command	Description
show controllers cpu-interface	Displays the state of the CPU network ASIC and send and receive statistics for packets reaching the CPU.
show controllers ethernet-controller	Displays per-interface send and receive statistics read from the hardware or the interface internal registers.

show controllers utilization

Use the **show controllers utilization** user EXEC command to display bandwidth utilization on the switch or specific ports.

```
show controllers [interface-id] utilization [ | {begin | exclude | include} expression]
```

Syntax Description

<i>interface-id</i>	(Optional) ID of the switch interface.
 begin	(Optional) Display begins with the line that matches the specified <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the specified <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.2(25)SE	This command was introduced.

Usage Guidelines

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show controllers utilization** command.

```
Switch> show controllers utilization
Port          Receive Utilization  Transmit Utilization
Fa0/1          0                    0
Fa0/2          0                    0
Fa0/3          0                    0
Fa0/4          0                    0
Fa0/5          0                    0
Fa0/6          0                    0
Fa0/7          0                    0
<output truncated>

<output truncated>

Switch Receive Bandwidth Percentage Utilization : 0
Switch Transmit Bandwidth Percentage Utilization : 0

Switch Fabric Percentage Utilization : 0
```

This is an example of output from the **show controllers utilization** command on a specific port:

```
Switch> show controllers gigabitethernet0/1 utilization
Receive Bandwidth Percentage Utilization : 0
Transmit Bandwidth Percentage Utilization : 0
```

Table 2-21 *show controllers utilization Field Descriptions*

Field	Description
Receive Bandwidth Percentage Utilization	Displays the received bandwidth usage of the switch, which is the sum of the received traffic on all the ports divided by the switch receive capacity.
Transmit Bandwidth Percentage Utilization	Displays the transmitted bandwidth usage of the switch, which is the sum of the transmitted traffic on all the ports divided it by the switch transmit capacity.
Fabric Percentage Utilization	Displays the average of the transmitted and received bandwidth usage of the switch.

Related Commands

Command	Description
show controllers ethernet-controller	Displays the interface internal registers.

show dot1q-tunnel

Use the **show dot1q-tunnel** user EXEC command to display information about IEEE 802.1Q tunnel ports.

```
show dot1q-tunnel [interface interface-id] [ | { begin | exclude | include } expression]
```

Syntax Description	
interface <i>interface-id</i>	(Optional) Specify the interface for which to display IEEE 802.1Q tunneling information. Valid interfaces include physical ports and port channels.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.2(25)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples These are examples of output from the **show dot1q-tunnel** command:

```
Switch> show dot1q-tunnel
dot1q-tunnel mode LAN Port(s)
-----
Gi0/1
Gi0/2
Gi0/3
Gi0/6
Po2

Switch> show dot1q-tunnel interface gigabitethernet0/1
dot1q-tunnel mode LAN Port(s)
-----
Gi0/1
```

Related Commands	Command	Description
	show vlan dot1q tag native	Displays IEEE 802.1Q native VLAN tagging status.
	switchport mode dot1q-tunnel	Configures an interface as an IEEE 802.1Q tunnel port.

show dot1x

Use the **show dot1x** privileged EXEC command to display IEEE 802.1x statistics, administrative status, and operational status for the switch or for the specified port.

```
show dot1x [all | interface interface-id | statistics interface interface-id] [ | {begin | exclude | include} expression]
```

Syntax Description		
all	(Optional) Display the IEEE 802.1x status for all ports.	
interface <i>interface-id</i>	(Optional) Display the IEEE 802.1x status for the specified port (including type, module, and port number).	
statistics interface <i>interface-id</i>	(Optional) Display IEEE 802.1x statistics for the specified port (including type, module, and port number).	
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .	
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .	
 include	(Optional) Display includes lines that match the specified <i>expression</i> .	
<i>expression</i>	Expression in the output to use as a reference point.	

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(25)SED	The display was expanded to include auth-fail-vlan in the authorization state machine state and port status fields.
	12.1(19)EA1	This command was introduced.

Usage Guidelines If you do not specify a port, global parameters and a summary appear. If you specify a port, details for that port appear.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* appear.

Examples This is an example of output from the **show dot1x** and the **show dot1x all** privileged EXEC commands:

```
Switch# show dot1x
Sysauthcontrol                = Disabled
Supplicant Allowed In Guest Vlan = Disabled
Dot1x Protocol Version        = 1
802.1X AAA Server Status      = Alive
```

```
Switch# show dot1x all
Dot1x Info for interface GigabitEthernet0/1
-----
Supplicant MAC 00d0.b71b.35de
  AuthSM State      = CONNECTING
  BendSM State      = IDLE
PortStatus          = UNAUTHORIZED
MaxReq              = 2
HostMode            = Single
Port Control        = Auto
ControlDirection    = Both
QuietPeriod         = 60 Seconds
Re-authentication   = Disabled
ReAuthPeriod        = 3600 Seconds
ServerTimeout       = 30 Seconds
SuppTimeout         = 30 Seconds
TxPeriod            = 30 Seconds
Guest-Vlan          = 0
```

This is an example of output from the **show dot1x all** privileged EXEC command when a restricted VLAN is configured:

```
Switch# show dot1x all
Dot1x Info for interface GigabitEthernet2/0/3
-----
Supplicant MAC 0002.b3eb.0df6
AuthSM State        = AUTHENTICATED(AUTH-FAIL-VLAN)
BendSM State        = IDLE
Posture              = N/A
PortStatus          = AUTHORIZED(AUTH-FAIL-VLAN)
MaxReq              = 2
MaxAuthReq          = 2
HostMode            = Single
PortControl         = Auto
ControlDirection    = Both
QuietPeriod         = 10 Seconds
Re-authentication   = Disabled
ReAuthPeriod        = 3600 Seconds
ServerTimeout       = 30 Seconds
SuppTimeout         = 30 Seconds
TxPeriod            = 10 Seconds
Guest-Vlan          = 3
AuthFail-Vlan       = 4
AuthFail-Max-Attempts = 3
```

This is an example of output from the **show dot1x interface interface-id** privileged EXEC command when a restricted VLAN is configured:

```
Switch# show dot1x interface gigabitethernet0/1
Supplicant MAC 0010.a492.db59
AuthSM State        = AUTHENTICATED(AUTH-FAIL-VLAN)
BendSM State        = IDLE
Posture              = N/A
  ReAuthPeriod       = 3600 Seconds (Locally Configured)
  ReAuthAction       = Reauthenticate
  TimeToNextReauth   = 2753
PortStatus          = AUTHORIZED(AUTH-FAIL-VLAN)
MaxReq              = 2
MaxAuthReq          = 2
HostMode            = Single
PortControl         = Auto
ControlDirection    = Both
QuietPeriod         = 60 Seconds
Re-authentication   = Enabled
```

```

ReAuthPeriod      = 3600 Seconds
ServerTimeout     = 30 Seconds
SuppTimeout       = 30 Seconds
TxPeriod          = 30 Seconds
Guest-Vlan        = 0
AuthFail-Vlan     = 1001
AuthFail-Max-Attempts = 3
Critical Port     = Disabled

```

This is an example of output from the **show dot1x interface *interface-id*** privileged EXEC command when a restricted VLAN is configured, the inaccessible authentication feature is enabled, but the port is not in the critical-authentication state.

```

Switch# show dot1x interface gigabitethernet0/1
Supplicant MAC 0010.a492.db59
AuthSM State      = AUTHENTICATED (AUTH-FAIL-VLAN)
BendSM State      = IDLE
Posture           = N/A
  ReAuthPeriod    = 3600 Seconds (Locally Configured)
  ReAuthAction    = Reauthenticate
  TimeToNextReauth = 2946
PortStatus        = AUTHORIZED (AUTH-FAIL-VLAN)
MaxReq            = 2
MaxAuthReq        = 2
HostMode          = Single
PortControl       = Auto
ControlDirection = Both
QuietPeriod       = 60 Seconds
Re-authentication = Enabled
ReAuthPeriod     = 3600 Seconds
ServerTimeout     = 30 Seconds
SuppTimeout       = 30 Seconds
TxPeriod          = 30 Seconds
Guest-Vlan        = 0
AuthFail-Vlan     = 1001
AuthFail-Max-Attempts = 3
Critical Port     = Enabled

```

This is an example of output from the **show dot1x interface *interface-id*** privileged EXEC command when a restricted VLAN is configured, the inaccessible authentication feature is enabled, and the port is in the critical-authentication state.

```

Switch# show dot1x interface gigabitethernet0/1
Supplicant MAC 0010.a492.db59
AuthSM State      = AUTHENTICATED (AUTH-FAIL-VLAN)
BendSM State      = IDLE
Posture           = N/A
  ReAuthPeriod    = 3600 Seconds (Locally Configured)
  ReAuthAction    = Reauthenticate
  TimeToNextReauth = N/A
PortStatus        = AUTHORIZED (AUTH-FAIL-VLAN/CRITICAL)
MaxReq            = 2
MaxAuthReq        = 2
HostMode          = Single
PortControl       = Auto
ControlDirection = Both
QuietPeriod       = 60 Seconds
Re-authentication = Enabled
ReAuthPeriod     = 3600 Seconds
ServerTimeout     = 30 Seconds
SuppTimeout       = 30 Seconds
TxPeriod          = 30 Seconds
Guest-Vlan        = 0

```



```
AuthFail-Vlan          = 1001
AuthFail-Max-Attempts = 3
Critical Port          = Enabled
```

This is an example of output from the **show dot1x statistics interface interface-id** command. [Table 2-22](#) describes the fields in the display.

```
Switch# show dot1x statistics interface gigabitethernet0/1
PortStatistics Parameters for Dot1x
-----
TxReqId = 15      TxReq = 0      TxTotal = 15
RxStart = 4       RxLogoff = 0    RxRespId = 1    RxResp = 1
RxInvalid = 0    RxLenErr = 0    RxTotal = 6
RxVersion = 1    LastRxCsrcMac 00d0.b71b.35de
```

Table 2-22 show dot1x statistics Field Descriptions

Field	Description
TxReqId	Number of Extensible Authentication Protocol (EAP)-request/identity frames that have been sent.
TxReq	Number of EAP-request frames (other than request/identity frames) that have been sent.
TxTotal	Number of Extensible Authentication Protocol over LAN (EAPOL) frames of any type that have been sent.
RxStart	Number of valid EAPOL-start frames that have been received.
RxLogoff	Number of EAPOL-logoff frames that have been received.
RxRespId	Number of EAP-response/identity frames that have been received.
RxResp	Number of valid EAP-response frames (other than response/identity frames) that have been received.
RxInvalid	Number of EAPOL frames that have been received and have an unrecognized frame type.
RxLenError	Number of EAPOL frames that have been received in which the packet body length field is invalid.
RxTotal	Number of valid EAPOL frames of any type that have been received.
RxVersion	Number of received packets in the IEEE 802.1x Version 1 format.
LastRxCsrcMac	Source MAC address carried in the most recently received EAPOL frame.

Related Commands

Command	Description
dot1x default	Resets the IEEE 802.1x parameters to their default values.

show dtp

Use the **show dtp** privileged EXEC command to display Dynamic Trunking Protocol (DTP) information for the switch or for a specified interface.

```
show dtp [interface interface-id] [ | { begin | exclude | include } expression]
```

Syntax Description

interface	(Optional) Display port security settings for the specified interface. Valid interfaces include physical ports (including type, module, and port number).
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples

This is an example of output from the **show dtp** command:

```
Switch# show dtp
Global DTP information
    Sending DTP Hello packets every 30 seconds
    Dynamic Trunk timeout is 300 seconds
    21 interfaces using DTP
```

This is an example of output from the **show dtp interface** command:

```
Switch# show dtp interface gigabitethernet0/1
DTP information for GigabitEthernet0/1:
  TOS/TAS/TNS:                ACCESS/AUTO/ACCESS
  TOT/TAT/TNT:                NATIVE/NEGOTIATE/NATIVE
  Neighbor address 1:         000943A7D081
  Neighbor address 2:         000000000000
  Hello timer expiration (sec/state): 1/RUNNING
  Access timer expiration (sec/state): never/STOPPED
  Negotiation timer expiration (sec/state): never/STOPPED
  Multidrop timer expiration (sec/state): never/STOPPED
  FSM state:                  S2:ACCESS
  # times multi & trunk      0
  Enabled:                    yes
  In STP:                     no
```

```
Statistics
-----
3160 packets received (3160 good)
0 packets dropped
    0 nonegotiate, 0 bad version, 0 domain mismatches, 0 bad TLVs, 0 other
6320 packets output (6320 good)
    3160 native, 3160 software encap isl, 0 isl hardware native
0 output errors
0 trunk timeouts
1 link ups, last link up on Mon Mar 01 1993, 01:02:29
0 link downs
```

Related Commands

Command	Description
show interfaces trunk	Displays interface trunking information.

show env

Use the **show env** user EXEC command to display fan, temperature, redundant power system (RPS) availability, and power information for the switch.

```
show env {all | fan | power | rps | temperature [status]} [| {begin | exclude | include} expression]
```

Syntax Description

all	Display both fan and temperature environmental status.
fan	Display the switch fan status.
power	Display the switch power status.
rps	Display whether an RPS 300 Redundant Power System is connected to the switch.
temperature	Display the switch temperature status.
status	(Optional) Display the switch internal temperature (not the external temperature) and the threshold values. This keyword is available only on the Catalyst3560G-48TS, 3560G-48PS, 3560G-24TS, and 3560G-24PS switches.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(20)SE3	The temperature status keyword was added.

Usage Guidelines

Though visible on all switches, the **show env temperature status** command is valid only for the Catalyst 3560G-48TS, 3560G-48PS, 3560G-24TS, and 3560G-24PS switches. If you enter this command on these switches, the command output shows the switch temperature states and the threshold levels. If you enter the command on a switch other than these four switches, the output field shows *Not Applicable*.

On a Catalyst 3560G-48PS or 3560G-24PS switch, you can also use the **show env temperature** command to display the switch temperature status. The command output shows the green and yellow states as *OK* and the red state as *FAULTY*. If you enter the **show env all** command on this switch, the command output is the same as the **show env temperature status** command output.

For more information about the threshold levels, see the software configuration guide for this release.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples

This is an example of output from the **show env all** command:

```
Switch> show env all
FAN is OK
TEMPERATURE is OK
POWER is OK
RPS is AVAILABLE
```

This is an example of output from the **show env fan** command:

```
Switch> show env fan
FAN is OK
```

This example shows how to display the temperature value, state, and the threshold values. [Table 2-23](#) describes the temperature states in the command output.

```
Switch> show env temperature status
Temperature Value:28 Degree Celsius
Temperature State:GREEN
Yellow Threshold :70 Degree Celsius
Red Threshold    :75 Degree Celsius
```

Table 2-23 States in the show env temperature status Command Output

State	Description
Green	The switch temperature is in the <i>normal</i> operating range.
Yellow	The temperature is in the <i>warning</i> range. You should check the external temperature around the switch.
Red	The temperature is in the <i>critical</i> range. The switch might not run properly if the temperature is in this range.

show errdisable detect

Use the **show errdisable detect** user EXEC command to display error-disabled detection status.

```
show errdisable detect [ | {begin | exclude | include} expression]
```

Syntax Description	
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines A displayed `gbic-invalid` error reason refers to an invalid small form-factor pluggable (SFP) module. Expressions are case sensitive. For example, if you enter `| exclude output`, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples This is an example of output from the **show errdisable detect** command:

```
Switch> show errdisable detect
ErrDisable Reason      Detection status
-----
udld                   Enabled
bpduguard              Enabled
security-violatio     Enabled
channel-misconfig     Enabled
psecure-violation     Enabled
vmps                   Enabled
loopback               Enabled
pagp-flap              Enabled
dtp-flap               Enabled
l2ptguard              Enabled
link-flap              Enabled
gbic-invalid           Enabled
dhcp-rate-limit       Enabled
unicast-flood         Enabled
storm-control         Enabled
ilpower                Enabled
arp-inspection        Enabled
```



Note

Though visible in the output, the `ilpower`, `storm-control`, and `unicast-flood` fields are not valid.

Related Commands

Command	Description
errdisable detect cause	Enables error-disabled detection for a specific cause or all causes.
show errdisable flap-values	Displays error condition recognition information.
show errdisable recovery	Displays error-disabled recovery timer information.
show interfaces status	Displays interface status or a list of interfaces in error-disabled state.

show errdisable flap-values

Use the **show errdisable flap-values** user EXEC command to display conditions that cause an error to be recognized for a cause.

```
show errdisable flap-values [ | {begin | exclude | include} expression]
```

Syntax Description	
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes	
	User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines

The *Flaps* column in the display shows how many changes to the state within the specified time interval will cause an error to be detected and a port to be disabled. For example, the display shows that an error will be assumed and the port shut down if three Dynamic Trunking Protocol (DTP)-state (port mode access/trunk) or Port Aggregation Protocol (PAgP) flap changes occur during a 30-second interval, or if 5 link-state (link up/down) changes occur during a 10-second interval.

```
ErrDisable Reason      Flaps      Time (sec)
-----
pagp-flap              3           30
dtp-flap                3           30
link-flap               5           10
```

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples

This is an example of output from the **show errdisable flap-values** command:

```
Switch> show errdisable flap-values
ErrDisable Reason      Flaps      Time (sec)
-----
pagp-flap              3           30
dtp-flap                3           30
link-flap               5           10
```


Related Commands

Command	Description
errdisable detect cause	Enables error-disabled detection for a specific cause or all causes.
show errdisable detect	Displays error-disabled detection status.
show errdisable recovery	Displays error-disabled recovery timer information.
show interfaces status	Displays interface status or a list of interfaces in error-disabled state.

show errdisable recovery

Use the **show errdisable recovery** user EXEC command to display the error-disabled recovery timer information.

```
show errdisable recovery [ | { begin | exclude | include } expression]
```

Syntax Description	
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes	
	User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	
	<p>A <i>gbic-invalid error-disable</i> reason refers to an invalid small form-factor pluggable (SFP) module interface.</p> <p>Expressions are case sensitive. For example, if you enter exclude output, the lines that contain <i>output</i> are not displayed, but the lines that contain <i>Output</i> are displayed.</p>

Examples	
	<p>This is an example of output from the show errdisable recovery command:</p> <pre>Switch> show errdisable recovery ErrDisable Reason Timer Status ----- udld Disabled bpduguard Disabled security-violatio Disabled channel-misconfig Disabled vmps Disabled pagp-flap Disabled dtp-flap Disabled link-flap Enabled l2ptguard Disabled psecure-violation Disabled gbic-invalid Disabled dhcp-rate-limit Disabled unicast-flood Disabled storm-control Disabled arp-inspection Disabled loopback Disabled</pre>

```

Timer interval:300 seconds

Interfaces that will be enabled at the next timeout:

Interface      Errdisable reason      Time left(sec)
-----
Gi0/2          link-flap               279

```

**Note**

Though visible in the output, the unicast-flood field is not valid.

Related Commands

Command	Description
errdisable recovery	Configures the recover mechanism variables.
show errdisable detect	Displays error-disabled detection status.
show errdisable flap-values	Displays error condition recognition information.
show interfaces status	Displays interface status or a list of interfaces in error-disabled state.

show etherchannel

Use the **show etherchannel** user EXEC command to display EtherChannel information for a channel.

```
show etherchannel [channel-group-number {detail | port | port-channel | protocol | summary}]
                 {detail | load-balance | port | port-channel | protocol | summary} [| {begin | exclude |
include} expression]
```

Syntax Description

<i>channel-group-number</i>	(Optional) Number of the channel group. The range is 1 to 48.
detail	Display detailed EtherChannel information.
load-balance	Display the load-balance or frame-distribution scheme among ports in the port channel.
port	Display EtherChannel port information.
port-channel	Display port-channel information.
protocol	Display the protocol that is being used in the EtherChannel.
summary	Display a one-line summary per channel-group.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	The <i>channel-group-number</i> range was changed from 1 to 12 to 1 to 48.

Usage Guidelines

If you do not specify a *channel-group*, all channel groups are displayed.

In the output, the Passive port list field is displayed only for Layer 3 port channels. This field means that the physical port, which is still not up, is configured to be in the channel group (and indirectly is in the only port channel in the channel group).

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples

This is an example of output from the **show etherchannel 1 detail** command:

```
Switch> show etherchannel 1 detail
Group state = L2
Ports: 2   Maxports = 16
Port-channels: 1 Max Port-channels = 16
Protocol:  LACP
          Ports in the group:
          -----
Port: Gi0/1
-----

Port state      = Up Mstr In-Bndl
Channel group   = 1                Mode = Active      Gcchange = -
Port-channel    = Po1              GC = -            Pseudo port-channel = Po1
Port index      = 0                Load = 0x00       Protocol =  LACP

Flags:  S - Device is sending Slow LACPDU      F - Device is sending fast LACPDU
        A - Device is in active mode.          P - Device is in passive mode.

Local information:

Port          Flags  State      LACP port  Admin  Oper  Port  Port
Gi0/1        SA    bndl      32768      0x0    0x1   0x0   0x3D

Age of the port in the current state: 01d:20h:06m:04s

          Port-channels in the group:
          -----

Port-channel: Po1    (Primary Aggregator)
-----

Age of the Port-channel = 01d:20h:20m:26s
Logical slot/port = 10/1      Number of ports = 2
HotStandBy port = null
Port state        = Port-channel Ag-Inuse
Protocol          =  LACP

Ports in the Port-channel:

Index  Load  Port      EC state      No of bits
-----+-----+-----+-----+-----
  0    00   Gi0/1    Active        0
  0    00   Gi0/2    Active        0

Time since last port bundled:    01d:20h:20m:20s   Gi0/2
```

This is an example of output from the **show etherchannel 1 summary** command:

```
Switch> show etherchannel 1 summary
Flags: D - down          P - in port-channel
       I - stand-alone  s - suspended
       H - Hot-standby (LACP only)
       R - Layer3       S - Layer2
       u - unsuitable for bundling
       U - in use      f - failed to allocate aggregator
       d - default port
```

```
Number of channel-groups in use: 1
Number of aggregators:          1
```

Group	Port-channel	Protocol	Ports
1	Po1(SU)	LACP	Gi0/1(P) Gi0/2(P)

This is an example of output from the **show etherchannel 1 port-channel** command:

```
Switch> show etherchannel 1 port-channel
                Port-channels in the group:
                -----
Port-channel: Po1    (Primary Aggregator)

-----

Age of the Port-channel   = 01d:20h:24m:50s
Logical slot/port        = 10/1           Number of ports = 2
HotStandBy port         = null
Port state                = Port-channel Ag-Inuse
Protocol                  = LACP
```

Ports in the Port-channel:

Index	Load	Port	EC state	No of bits
0	00	Gi0/1	Active	0
0	00	Gi0/2	Active	0

```
Time since last port bundled: 01d:20h:24m:44s Gi0/2
```

This is an example of output from **show etherchannel protocol** command:

```
Switch# show etherchannel protocol
                Channel-group listing:
                -----
Group: 1
-----
Protocol: LACP

Group: 2
-----
Protocol: PAgP
```

Related Commands

Command	Description
channel-group	Assigns an Ethernet port to an EtherChannel group.
channel-protocol	Restricts the protocol used on a port to manage channeling.
interface port-channel	Accesses or creates the port channel.

show flowcontrol

Use the **show flowcontrol** user EXEC command to display the flow control status and statistics.

```
show flowcontrol [interface interface-id | module number] [ | { begin | exclude | include }
expression]
```

Syntax Description

interface <i>interface-id</i>	(Optional) Display the flow control status and statistics for a specific interface.
module <i>number</i>	(Optional) Display the flow control status and statistics for all interfaces on the switch. The only valid module number is 1. This option is not available if you have entered a specific interface ID.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.1(14)EA1	This command was introduced.
12.1(19)EA1	This command was introduced.

Usage Guidelines

Use this command to display the flow control status and statistics on the switch or for a specific interface.

Use the **show flowcontrol** command to display information about all the switch interfaces. The output from the **show flowcontrol** command is the same as the output from the **show flowcontrol module number** command.

Use the **show flowcontrol interface** *interface-id* command to display information about a specific interface.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show flowcontrol** command.

```
Switch> show flowcontrol
Port          Send FlowControl  Receive FlowControl  RxPause TxPause
              admin    oper      admin    oper
-----
Gi0/1         Unsupp.  Unsupp.   off      off      0      0
Gi0/2         desired  off       off      off      0      0
Gi0/3         desired  off       off      off      0      0
<output truncated>
```

This is an example of output from the **show flowcontrol interface** *interface-id* command:

```
Switch> show flowcontrol gigabitethernet0/2
Port          Send FlowControl  Receive FlowControl  RxPause TxPause
-----
              admin   oper      admin   oper
-----
Gi0/2         desired off       off     off     0       0
```

Related Commands

Command	Description
flowcontrol	Sets the receive flow-control state for an interface.

show interfaces

Use the **show interfaces** privileged EXEC command to display the administrative and operational status of all interfaces or a specified interface.

```
show interfaces [interface-id | vlan vlan-id] [accounting | capabilities [module number] |
counters | description | etherchannel | flowcontrol | private-vlan mapping | pruning | stats
| status [err-disabled] | switchport [backup | module number] | transceiver [properties |
detail] [module number] | trunk] [ | {begin | exclude | include} expression]
```

Syntax Description

<i>interface-id</i>	(Optional) Valid interfaces include physical ports (including type, module, and port number) and port channels. The port-channel range is 1 to 48.
vlan <i>vlan-id</i>	(Optional) VLAN identification. The range is 1 to 4094.
accounting	(Optional) Display accounting information on the interface, including active protocols and input and output packets and octets.
capabilities	(Optional) Display the capabilities of all interfaces or the specified interface, including the features and options that you can configure on the interface. Though visible in the command line help, this option is not available for VLAN IDs.
module <i>number</i>	(Optional) Display capabilities , switchport configuration, or transceiver characteristics (depending on preceding keyword) of all interfaces on the switch. The only valid module number is 1. This option is not available if you entered a specific interface ID.
counters	(Optional) See the show interfaces counters command.
description	(Optional) Display the administrative status and description set for an interface.
etherchannel	(Optional) Display interface EtherChannel information.
flowcontrol	(Optional) Display interface flowcontrol information
private-vlan mapping	(Optional) Display private-VLAN mapping information for the VLAN switch virtual interfaces (SVIs). This keyword is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).
pruning	(Optional) Display interface trunk VTP pruning information.
stats	(Optional) Display the input and output packets by switching path for the interface.
status	(Optional) Display the status of the interface. A status of <i>unsupported</i> in the Type field means that a non-Cisco small form-factor pluggable (SFP) module is inserted in the module slot.
err-disabled	(Optional) Display interfaces in error-disabled state.
switchport	(Optional) Display the administrative and operational status of a switching (nonrouting) port, including port blocking and port protection settings.
backup	(Optional) Display Flex Link backup interface configuration and status for the specified interface or all interfaces on the switch.
transceiver [detail properties]	(Optional) Display the physical properties of a CWDM ¹ or DWDM ² small form-factor (SFP) module interface. The keywords have these meanings: <ul style="list-style-type: none"> detail—(Optional) Display calibration properties, including high and low numbers and any alarm information. properties—(Optional) Display speed, duplex, and inline power settings on an interface.

trunk	Display interface trunk information. If you do not specify an interface, only information for active trunking ports appears.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

- coarse wavelength-division multiplexer
- dense wavelength-division multiplexer

**Note**

Though visible in the command-line help strings, the **crb**, **fair-queue**, **irb**, **mac-accounting**, **precedence**, **random-detect**, **rate-limit**, and **shape** keywords are not supported.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(20)SE	The private-vlan mapping , backup , transceiver calibration , detail , and properties , keywords were added.
12.2(25)SEA	The calibration keyword was removed.

Usage Guidelines

The **show interfaces capabilities** command with different keywords has these results:

- Use the **show interface capabilities module 1** to display the capabilities of all interfaces on the switch. Entering any other number is invalid.
- Use the **show interfaces *interface-id* capabilities** to display the capabilities of the specified interface.
- Use the **show interfaces capabilities** (with no module number or interface ID) to display the capabilities of all interfaces on the switch.
- Use the **show interface switchport module 1** to display the switch port characteristics of all interfaces on the switch. Entering any other number is invalid.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples

This is an example of output from the **show interfaces** command for an interface:

```
Switch# show interfaces gigabitethernet0/2
GigabitEthernet0/2 is down, line protocol is down
  Hardware is Gigabit Ethernet, address is 0009.43a7.d085 (bia 0009.43a7.d085)
  MTU 1500 bytes, BW 10000 Kbit, DLY 1000 usec,
    reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation ARPA, loopback not set
  Keepalive set (10 sec)
  Auto-duplex, Auto-speed
  input flow-control is off, output flow-control is off
  ARP type: ARPA, ARP Timeout 04:00:00 Last input never, output never, output hang never
  Last clearing of "show interface" counters never
  Input queue: 0/75/0/0 (size/max/drops/flushes); Total output drops: 0
  Queueing strategy: fifo
  Output queue :0/40 (size/max)
  5 minute input rate 0 bits/sec, 0 packets/sec
  5 minute output rate 0 bits/sec, 0 packets/sec
    2 packets input, 1040 bytes, 0 no buffer
  Received 0 broadcasts, 0 runts, 0 giants, 0 throttles
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored
  0 watchdog, 0 multicast, 0 pause input
  0 input packets with dribble condition detected
  4 packets output, 1040 bytes, 0 underruns
  0 output errors, 0 collisions, 3 interface resets
  0 babbles, 0 late collision, 0 deferred
  0 lost carrier, 0 no carrier, 0 PAUSE output
  0 output buffer failures, 0 output buffers swapped out
```

This is an example of output from the **show interfaces accounting** command.

```
Switch# show interfaces accounting
Vlan1
      Protocol  Pkts In   Chars In   Pkts Out   Chars Out
      IP        1094395   131900022   559555     84077157
      Spanning Tree 283896   17033760    42         2520
      ARP        63738    3825680     231        13860
Interface Vlan2 is disabled
Vlan7
      Protocol  Pkts In   Chars In   Pkts Out   Chars Out
No traffic sent or received on this interface.
Vlan31
      Protocol  Pkts In   Chars In   Pkts Out   Chars Out
No traffic sent or received on this interface.

GigabitEthernet0/1
      Protocol  Pkts In   Chars In   Pkts Out   Chars Out
No traffic sent or received on this interface.
GigabitEthernet0/2
      Protocol  Pkts In   Chars In   Pkts Out   Chars Out
No traffic sent or received on this interface.

<output truncated>
```

This is an example of output from the **show interfaces capabilities** command for an interface.

```
Switch# show interfaces gigabitethernet0/2 capabilities
GigabitEthernet0/2
  Model:                WS-C3560-24PS
  Type:                 10/100/1000BaseTX
  Speed:                10,100,1000,auto
  Duplex:               full,auto
  Trunk encap. type:    802.1Q,ISL
  Trunk mode:           on,off,desirable,nonegotiate
  Channel:              yes
  Broadcast suppression: percentage(0-100)
  Flowcontrol:          rx-(off,on,desired),tx-(none)
  Fast Start:           yes
  QoS scheduling:       rx-(not configurable on per port basis),tx-(4q2t)
  CoS rewrite:          yes
  ToS rewrite:          yes
  UDLD:                 yes
  Inline power:         no
  SPAN:                 source/destination
  PortSecure:           yes
  Dot1x:                yes
```

This is an example of output from the **show interfaces interface description** command when the interface has been described as *Connects to Marketing* by using the **description** interface configuration command.

```
Switch# show interfaces gigabitethernet0/2 description
Interface Status      Protocol Description
Gi0/2                up                down      Connects to Marketing
```

This is an example of output from the **show interfaces etherchannel** command when port channels are configured on the switch:

```
Switch# show interfaces etherchannel
----
Port-channel1:
Age of the Port-channel   = 03d:20h:17m:29s
Logical slot/port        = 10/1          Number of ports = 0
GC                       = 0x00000000      HotStandBy port = null
Port state                = Port-channel Ag-Not-Inuse

Port-channel2:
Age of the Port-channel   = 03d:20h:17m:29s
Logical slot/port        = 10/2          Number of ports = 0
GC                       = 0x00000000      HotStandBy port = null
Port state                = Port-channel Ag-Not-Inuse

Port-channel3:
Age of the Port-channel   = 03d:20h:17m:29s
Logical slot/port        = 10/3          Number of ports = 0
GC                       = 0x00000000      HotStandBy port = null
Port state                = Port-channel Ag-Not-Inuse
```

This is an example of output from the **show interfaces private-vlan mapping** command when the private-VLAN primary VLAN is VLAN 10 and the secondary VLANs are VLANs 501 and 502:

```
Switch# show interfaces private-vlan mapping
Interface Secondary VLAN Type
-----
vlan10      501          isolated
vlan10      502          community
```

This is an example of output from the **show interfaces interface-id pruning** command when pruning is enabled in the VTP domain:

```
Switch# show interfaces gigabitethernet0/2 pruning
Port      Vlans pruned for lack of request by neighbor
Gi0/2     3,4

Port      Vlans traffic requested of neighbor
Gi0/2     1-3
```

This is an example of output from the **show interfaces stats** command for a specified VLAN interface.

```
Switch# show interfaces vlan 1 stats
Switching path  Pkts In  Chars In  Pkts Out  Chars Out
Processor      1165354  136205310  570800    91731594
Route cache    0         0          0         0
Total          1165354  136205310  570800    91731594
```

This is an example of partial output from the **show interfaces status** command. It displays the status of all interfaces.

```
Switch# show interfaces status
Port      Name          Status      Vlan      Duplex  Speed  Type
Fa0/1     Fa0/1         connected   routed    a-half  a-100  10/100BaseTX
Fa0/2     Fa0/2         notconnect  121,40    auto    auto   10/100BaseTX
Fa0/3     Fa0/3         notconnect  1         auto    auto   10/100BaseTX
Fa0/4     Fa0/4         notconnect  18        auto    auto   Not Present
Fa0/5     Fa0/5         connected   121       a-full  a-1000 10/100BaseTX
Fa0/6     Fa0/6         connected   122,11    a-full  a-1000 10/100BaseTX

<output truncated>
Gi0/1     Gi0/1         notconnect  1         auto    auto   10/100/1000BaseTX
Gi0/2     Gi0/2         notconnect  1         auto    auto   unsupported
```

These are examples of output from the **show interfaces status** command for a specific interface when private VLANs are configured. Port 22 is configured as a private-VLAN host port. It is associated with primary VLAN 20 and secondary VLAN 25.

```
Switch# show interfaces fastethernet0/22 status
Port      Name          Status      Vlan      Duplex  Speed  Type
Fa0/22    Fa0/22         connected   20,25     a-full  a-100  10/100BaseTX
```

In this example, port 20 is configured as a private-VLAN promiscuous port. The display shows only the primary VLAN 20.

```
Switch# show interfaces fastethernet0/20 status
Port      Name          Status      Vlan      Duplex  Speed  Type
Fa0/20    Fa0/20         connected   20        a-full  a-100  10/100BaseTX
```

This is an example of output from the **show interfaces status err-disabled** command. It displays the status of interfaces in the error-disabled state.

```
Switch# show interfaces status err-disabled
Port      Name          Status      Reason
Gi0/2     Gi0/2         err-disabled dtp-flap
```

This is an example of output from the **show interfaces switchport** command for a port. [Table 2-24](#) describes the fields in the display.

**Note**

Private VLAN trunks are not supported in this release, so those fields are not applicable.

```
Switch# show interfaces gigabitethernet0/1 switchport
Name: Gi0/1
Switchport: Enabled
Administrative Mode: dynamic auto
Operational Mode: static access
Administrative Trunking Encapsulation: negotiate
Operational Trunking Encapsulation: native
Negotiation of Trunking: On
Access Mode VLAN: 1 (default)
Trunking Native Mode VLAN: 1 (default)
Voice VLAN: none
Administrative private-vlan host-association:10 (VLAN0010) 502 (VLAN0502)
Administrative private-vlan mapping: none
Administrative private-vlan trunk native VLAN: none
Administrative private-vlan trunk encapsulation: dot1q
Administrative private-vlan trunk normal VLANs: none
Administrative private-vlan trunk private VLANs: none
Operational private-vlan: none
Trunking VLANs Enabled: ALL
Pruning VLANs Enabled: 2-1001
Capture Mode Disabled
Capture VLANs Allowed: ALL

Protected: false
Unknown unicast blocked: disabled
Unknown multicast blocked: disabled

Voice VLAN: none (Inactive)
Appliance trust: none
```

Table 2-24 *show interfaces switchport* Field Descriptions

Field	Description
Name	Displays the port name.
Switchport	Displays the administrative and operational status of the port. In this display, the port is in switchport mode.
Administrative Mode Operational Mode	Displays the administrative and operational modes.
Administrative Trunking Encapsulation Operational Trunking Encapsulation Negotiation of Trunking	Displays the administrative and operational encapsulation method and whether trunking negotiation is enabled.
Access Mode VLAN	Displays the VLAN ID to which the port is configured.
Trunking Native Mode VLAN Trunking VLANs Enabled Trunking VLANs Active	Lists the VLAN ID of the trunk that is in native mode. Lists the allowed VLANs on the trunk. Lists the active VLANs on the trunk.

Table 2-24 *show interfaces switchport Field Descriptions (continued)*

Field	Description
Pruning VLANs Enabled	Lists the VLANs that are pruning-eligible.
Protected	Displays whether or not protected port is enabled (True) or disabled (False) on the interface.
Unknown unicast blocked Unknown multicast blocked	Displays whether or not unknown multicast and unknown unicast traffic is blocked on the interface.
Voice VLAN	Displays the VLAN ID on which voice VLAN is enabled.
Administrative private-vlan host-association	Displays the administrative VLAN association for private-VLAN host ports.
Administrative private-vlan mapping	Displays the administrative VLAN mapping for private-VLAN promiscuous ports.
Operational private-vlan	Displays the operational private-VLAN status.
Appliance trust	Displays the class of service (CoS) setting of the data packets of the IP phone.

This is an example of output from the **show interfaces switchport** command for a port configured as a private VLAN promiscuous port. The primary VLAN 20 is mapped to secondary VLANs 25, 30 and 35:

```
Switch# show interface gigabitethernet0/2 switchport
Name: Gi0/2
Switchport: Enabled
Administrative Mode: private-vlan promiscuous
Operational Mode: private-vlan promiscuous
Administrative Trunking Encapsulation: negotiate
Operational Trunking Encapsulation: native
Negotiation of Trunking: Off
Access Mode VLAN: 1 (default)
Trunking Native Mode VLAN: 1 (default)
Administrative Native VLAN tagging: enabled
Voice VLAN: none
Administrative private-vlan host-association: none
Administrative private-vlan mapping: 20 (VLAN0020) 25 (VLAN0025) 30 (VLAN0030) 35
(VLAN0035)
Administrative private-vlan trunk native VLAN: none
Administrative private-vlan trunk Native VLAN tagging: enabled
Administrative private-vlan trunk encapsulation: dot1q
Administrative private-vlan trunk normal VLANs: none
Administrative private-vlan trunk private VLANs: none
Operational private-vlan:
20 (VLAN0020) 25 (VLAN0025)
30 (VLAN0030)
35 (VLAN0035)
```

<output truncated>

This is an example of output from the **show interfaces switchport backup** command:

```
Switch# show interfaces switchport backup
Switch Backup Interface Pairs:
  Active Interface   Backup Interface   State
-----
  Fa0/1             Fa0/2             Active Up/Backup Standby
  Fa0/3             Fa0/5             Active Down/Backup Up
  Po1               Po2               Active Standby/Backup Up
```

This is an example of output from the **show interfaces interface-id pruning** command:

```
Switch# show interfaces gigabitethernet0/2 pruning
Port      Vlans pruned for lack of request by neighbor
```

This is an example of output from the **show interfaces interface-id trunk** command. It displays trunking information for the port.

```
Switch# show interfaces gigabitethernet0/1 trunk
Port      Mode      Encapsulation  Status      Native vlan
Gi0/1     auto      negotiate      trunking    1

Port      Vlans allowed on trunk
Gi0/1     1-4094

Port      Vlans allowed and active in management domain
Gi0/1     1-4

Port      Vlans in spanning tree forwarding state and not pruned
Gi0/1     1-4
```

This is an example of output from the **show interfaces interface-id transceiver properties** command:

```
Switch# show interfaces gigabitethernet0/1 transceiver properties
Name : Gi0/1
Administrative Speed: auto
Operational Speed: auto
Administrative Duplex: auto
Administrative Power Inline: enable
Operational Duplex: auto
Administrative Auto-MDIX: off
Operational Auto-MDIX: off
```


This is an example of output from the **show interfaces *interface-id* transceiver detail** command:

```
Switch# show interfaces gigabitethernet0/3 transceiver detail
ITU Channel not available (Wavelength not available),
Transceiver is externally calibrated.
mA:milliamperes, dBm:decibels (milliwatts), N/A:not applicable.
++:high alarm, +:high warning, -:low warning, -- :low alarm.
A2D readouts (if they differ), are reported in parentheses.
The threshold values are uncalibrated.
```

Port	Temperature (Celsius)	High Alarm Threshold (Celsius)	High Warn Threshold (Celsius)	Low Warn Threshold (Celsius)	Low Alarm Threshold (Celsius)
Gi0/3	41.5	110.0	103.0	-8.0	-12.0

Port	Voltage (Volts)	High Alarm Threshold (Volts)	High Warn Threshold (Volts)	Low Warn Threshold (Volts)	Low Alarm Threshold (Volts)
Gi0/3	3.20	4.00	3.70	3.00	2.95

Port	Current (milliamperes)	High Alarm Threshold (mA)	High Warn Threshold (mA)	Low Warn Threshold (mA)	Low Alarm Threshold (mA)
Gi0/3	31.0	84.0	70.0	4.0	2.0

Port	Optical Transmit Power (dBm)	High Alarm Threshold (dBm)	High Warn Threshold (dBm)	Low Warn Threshold (dBm)	Low Alarm Threshold (dBm)
Gi0/3	-0.0 (-0.0)	-0.0	-0.0	-0.0	-0.0

Port	Optical Receive Power (dBm)	High Alarm Threshold (dBm)	High Warn Threshold (dBm)	Low Warn Threshold (dBm)	Low Alarm Threshold (dBm)
Gi0/3	N/A (-0.0) --	-0.0	-0.0	-0.0	-0.0

Related Commands

Command	Description
switchport access	Configures a port as a static-access or a dynamic-access port.
switchport block	Blocks unknown unicast or multicast traffic on an interface.
switchport backup interface	Configures Flex Links, a pair of Layer 2 interfaces that provide mutual backup.
switchport mode	Configures the VLAN membership mode of a port.
switchport mode private-vlan	Configures a port as a private-VLAN host or a promiscuous port.
switchport private-vlan	Defines private-VLAN association for a host port or private-VLAN mapping for a promiscuous port.
switchport protected	Isolates unicast, multicast, and broadcast traffic at Layer 2 from other protected ports on the same switch.
switchport trunk pruning	Configures the VLAN pruning-eligible list for ports in trunking mode.

show interfaces counters

Use the **show interfaces counters** privileged EXEC command to display various counters for the switch or for a specific interface.

```
show interfaces [interface-id | vlan vlan-id] counters [errors | etherchannel | protocol status |
trunk] [ | {begin | exclude | include} expression]
```

Syntax Description

<i>interface-id</i>	(Optional) ID of the physical interface, including type, module, and port number.
errors	(Optional) Display error counters.
etherchannel	(Optional) Display EtherChannel counters, including octets, broadcast packets, multicast packets, and unicast packets received and sent.
protocol status	(Optional) Display status of protocols enabled on interfaces.
trunk	(Optional) Display trunk counters.
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.



Note

Though visible in the command-line help string, the **vlan** *vlan-id* keyword is not supported.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	The etherchannel and protocol status keywords were added. The broadcast , multicast , and unicast keywords were removed.

Usage Guidelines

If you do not enter any keywords, all counters for all interfaces are included.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples

This is an example of partial output from the **show interfaces counters** command. It displays all counters for the switch.

```
Switch# show interfaces counters
Port          InOctets    InUcastPkts  InMcastPkts  InBcastPkts
Gi0/1         0           0            0            0
Gi0/2         0           0            0            0
```

<output truncated>

This is an example of partial output from the **show interfaces counters protocol status** command for all interfaces.

```
Switch# show interfaces counters protocol status
Protocols allocated:
Vlan1: Other, IP
Vlan20: Other, IP, ARP
Vlan30: Other, IP, ARP
Vlan40: Other, IP, ARP
Vlan50: Other, IP, ARP
Vlan60: Other, IP, ARP
Vlan70: Other, IP, ARP
Vlan80: Other, IP, ARP
Vlan90: Other, IP, ARP
Vlan900: Other, IP, ARP
Vlan3000: Other, IP
Vlan3500: Other, IP
FastEthernet0/1: Other, IP, ARP, CDP
FastEthernet0/2: Other, IP
FastEthernet0/3: Other, IP
FastEthernet0/4: Other, IP
FastEthernet0/5: Other, IP
FastEthernet0/6: Other, IP
FastEthernet0/7: Other, IP
FastEthernet0/8: Other, IP
FastEthernet0/9: Other, IP
FastEthernet0/10: Other, IP, CDP
```

<output truncated>

This is an example of output from the **show interfaces counters trunk** command. It displays trunk counters for all interfaces.

```
Switch# show interfaces counters trunk
Port          TrunkFramesTx  TrunkFramesRx  WrongEncap
Gi0/1         0              0              0
Gi0/2         0              0              0
Gi0/3         80678         4155           0
Gi0/4         82320         126            0
Gi0/5         0              0              0
```

<output truncated>

Related Commands

Command	Description
show interfaces	Displays additional interface characteristics.

show inventory

Use the **show inventory** user EXEC command to display product identification (PID) information for the hardware.

```
show inventory [entity-name | raw] [ | {begin | exclude | include} expression]
```

Syntax Description

<i>entity-name</i>	(Optional) Display the specified entity. For example, enter the interface (such as gigabitethernet0/1) into which a small form-factor pluggable (SFP) module is installed.
raw	(Optional) Display every entity in the device.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.2(25)SEC	This command was introduced.

Usage Guidelines

The command is case sensitive. With no arguments, the **show inventory** command produces a compact dump of all identifiable entities that have a product identifier. The compact dump displays the entity location (slot identity), entity description, and the unique device identifier (UDI) (PID, VID, and SN) of that entity.



Note

If there is no PID, no output appears when you enter the **show inventory** command.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples

This is example output from the **show inventory** command:

```
Switch> show inventory
NAME: "1", DESCR: "WS-C3560G-48PS"
PID: WS-C3560G-48PS-S , VID: 01 , SN: FOC0916U0BT
```

show ip arp inspection

Use the **show ip arp inspection** privileged EXEC command to display the configuration and the operating state of dynamic Address Resolution Protocol (ARP) inspection or the status of this feature for all VLANs or for the specified interface or VLAN.

```
show ip arp inspection [interfaces [interface-id] | log | statistics [vlan vlan-range] | vlan
vlan-range] [ | {begin | exclude | include} expression]
```

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description		
interfaces [<i>interface-id</i>]	(Optional) Display the trust state and the rate limit of ARP packets for the specified interface or all interfaces. Valid interfaces include physical ports and port channels.	
log	(Optional) Display the configuration and contents of the dynamic ARP inspection log buffer.	
statistics [vlan <i>vlan-range</i>]	(Optional) Display statistics for forwarded, dropped, MAC validation failure, IP validation failure, access control list (ACL) permitted and denied, and DHCP permitted and denied packets for the specified VLAN. If no VLANs are specified or if a range is specified, display information only for VLANs with dynamic ARP inspection enabled (active).	You can specify a single VLAN identified by VLAN ID number, a range of VLANs separated by a hyphen, or a series of VLANs separated by a comma. The range is 1 to 4094.
vlan <i>vlan-range</i>	(Optional) Display the configuration and the operating state of dynamic ARP inspection for the specified VLAN. If no VLANs are specified or if a range is specified, display information only for VLANs with dynamic ARP inspection enabled (active).	You can specify a single VLAN identified by VLAN ID number, a range of VLANs separated by a hyphen, or a series of VLANs separated by a comma. The range is 1 to 4094.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .	
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .	
 include	(Optional) Display includes lines that match the specified <i>expression</i> .	
<i>expression</i>	Expression in the output to use as a reference point.	

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines

Expressions are case sensitive. For example, if you enter `| exclude output`, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples

This is an example of output from the `show ip arp inspection interfaces` command:

```
Switch# show ip arp inspection interfaces
Interface      Trust State    Rate (pps)    Burst Interval
-----
Gi0/1          Untrusted      15            1
Gi0/2          Untrusted      15            1
Gi0/3          Untrusted      15            1
```

This is an example of output from the `show ip arp inspection interfaces interface-id` command:

```
Switch# show ip arp inspection interfaces gigabitethernet0/1
Interface      Trust State    Rate (pps)    Burst Interval
-----
Gi0/1          Untrusted      15            1
```

This is an example of output from the `show ip arp inspection log` command. It shows the contents of the log buffer before the buffers are cleared:

```
Switch# show ip arp inspection log
Total Log Buffer Size : 32
Syslog rate : 10 entries per 300 seconds.

Interface  Vlan  Sender MAC      Sender IP      Num Pkts  Reason      Time
-----
Gi0/1     5     0003.0000.d673  192.2.10.4    5         DHCP Deny   19:39:01 UTC
Mon Mar 1 1993
Gi0/1     5     0001.0000.d774  128.1.9.25    6         DHCP Deny   19:39:02 UTC
Mon Mar 1 1993
Gi0/1     5     0001.c940.1111  10.10.10.1    7         DHCP Deny   19:39:03 UTC
Mon Mar 1 1993
Gi0/1     5     0001.c940.1112  10.10.10.2    8         DHCP Deny   19:39:04 UTC
Mon Mar 1 1993
Gi0/1     5     0001.c940.1114  173.1.1.1     10        DHCP Deny   19:39:06 UTC
Mon Mar 1 1993
Gi0/1     5     0001.c940.1115  173.1.1.2     11        DHCP Deny   19:39:07 UTC
Mon Mar 1 1993
Gi0/1     5     0001.c940.1116  173.1.1.3     12        DHCP Deny   19:39:08 UTC
Mon Mar 1 1993
```

If the log buffer overflows, it means that a log event does not fit into the log buffer, and the display for the `show ip arp inspection log` privileged EXEC command is affected. A -- in the display appears in place of all data except the packet count and the time. No other statistics are provided for the entry. If you see this entry in the display, increase the number of entries in the log buffer, or increase the logging rate in the `ip arp inspection log-buffer` global configuration command.

This is an example of output from the `show ip arp inspection statistics` command. It shows the statistics for packets that have been processed by dynamic ARP inspection for all active VLANs.

```
Switch# show ip arp inspection statistics
Vlan          Forwarded      Dropped      DHCP Drops      ACL Drops
-----
5             3              4618         4605            4
2000         0              0            0               0
```

show ip arp inspection

```

Vlan    DHCP Permits    ACL Permits    Source MAC Failures
----    -
      5              0              12              0
2000    0                0                0                0

```

```

Vlan    Dest MAC Failures    IP Validation Failures
----    -
      5                  0                  9
2000    0                    0                    0

```

For the **show ip arp inspection statistics** command, the switch increments the number of forwarded packets for each ARP request and response packet on a trusted dynamic ARP inspection port. The switch increments the number of ACL or DHCP permitted packets for each packet that is denied by source MAC, destination MAC, or IP validation checks, and the switch increments the appropriate failure count.

This is an example of output from the **show ip arp inspection statistics vlan 5** command. It shows statistics for packets that have been processed by dynamic ARP for VLAN 5.

```

Switch# show ip arp inspection statistics vlan 5
Vlan    Forwarded    Dropped    DHCP Drops    ACL Drops
----    -
      5              3          4618         4605         4

Vlan    DHCP Permits    ACL Permits    Source MAC Failures
----    -
      5              0              12              0

Vlan    Dest MAC Failures    IP Validation Failures    Invalid Protocol Data
----    -
      5                  0                  9                  3

```

This is an example of output from the **show ip arp inspection vlan 5** command. It shows the configuration and the operating state of dynamic ARP inspection for VLAN 5.

```

Switch# show ip arp inspection vlan 5
Source Mac Validation      :Enabled
Destination Mac Validation :Enabled
IP Address Validation      :Enabled

Vlan    Configuration    Operation    ACL Match    Static ACL
----    -
      5      Enabled        Active      second      No

Vlan    ACL Logging    DHCP Logging
----    -
      5      Acl-Match     All

```

Related Commands

Command	Description
arp access-list	Defines an ARP ACL.
clear ip arp inspection log	Clears the dynamic ARP inspection log buffer.
clear ip arp inspection statistics	Clears the dynamic ARP inspection statistics.
ip arp inspection log-buffer	Configures the dynamic ARP inspection logging buffer.
ip arp inspection vlan logging	Controls the type of packets that are logged per VLAN.
show arp access-list	Displays detailed information about ARP access lists.

show ip dhcp snooping

Use the **show ip dhcp snooping** user EXEC command to display the DHCP snooping configuration.

```
show ip dhcp snooping [ | {begin | exclude | include} expression]
```

Syntax Description		
begin	(Optional)	Display begins with the line that matches the <i>expression</i> .
exclude	(Optional)	Display excludes lines that match the <i>expression</i> .
include	(Optional)	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show ip dhcp snooping** command:

```
Switch> show ip dhcp snooping
Switch DHCP snooping is enabled
DHCP snooping is configured on following VLANs:
40-42
Insertion of option 82 is enabled
Option 82 on untrusted port is allowed
Verification of hwaddr field is enabled
Interface                Trusted      Rate limit (pps)
-----                -
GigabitEthernet0/1       yes         unlimited
GigabitEthernet0/2       yes         unlimited
```

Related Commands	Command	Description
	show ip dhcp snooping binding	Displays the DHCP snooping binding information.

show ip dhcp snooping binding

Use the **show ip dhcp snooping binding** user EXEC command to display the DHCP snooping binding database and configuration information for all interfaces on a switch.

```
show ip dhcp snooping binding [ip-address] [mac-address] [interface interface-id] [vlan vlan-id]
[ | {begin | exclude | include} expression]
```

Syntax Description		
<i>ip-address</i>	(Optional) Specify the binding entry IP address.	
<i>mac-address</i>	(Optional) Specify the binding entry MAC address.	
interface <i>interface-id</i>	(Optional) Specify the binding input interface.	
vlan <i>vlan-id</i>	(Optional) Specify the binding entry VLAN.	
 begin	Display begins with the line that matches the <i>expression</i> .	
 exclude	Display excludes lines that match the <i>expression</i> .	
 include	Display includes lines that match the specified <i>expression</i> .	
<i>expression</i>	Expression in the output to use as a reference point.	

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
	12.2(20)SE	The dynamic and static keywords were removed.

Usage Guidelines The **show ip dhcp snooping binding** command output shows only the dynamically configured bindings. Use the **show ip source binding** privileged EXEC command to display the dynamically and statically configured bindings in the DHCP snooping binding database.

If DHCP snooping is enabled and an interface changes to the down state, the switch does not delete the statically configured bindings.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This example shows how to display the DHCP snooping binding entries for a switch:

```
Switch> show ip dhcp snooping binding
MacAddress          IpAddress          Lease(sec)  Type           VLAN  Interface
-----
01:02:03:04:05:06  10.1.2.150         9837        dhcp-snooping  20    GigabitEthernet0/1
00:D0:B7:1B:35:DE  10.1.2.151         237         dhcp-snooping  20    GigabitEthernet0/2
Total number of bindings: 2
```

This example shows how to display the DHCP snooping binding entries for a specific IP address:

```
Switch> show ip dhcp snooping binding 10.1.2.150
-----
MacAddress      IPAddress      Lease(sec)    Type           VLAN    Interface
-----
01:02:03:04:05:06  10.1.2.150    9810          dhcp-snooping  20      GigabitEthernet0/1
Total number of bindings: 1
```

This example shows how to display the DHCP snooping binding entries for a specific MAC address:

```
Switch> show ip dhcp snooping binding 0102.0304.0506
-----
MacAddress      IPAddress      Lease(sec)    Type           VLAN    Interface
-----
01:02:03:04:05:06  10.1.2.150    9788          dhcp-snooping  20      GigabitEthernet0/2
Total number of bindings: 1
```

This example shows how to display the DHCP snooping binding entries on a port:

```
Switch> show ip dhcp snooping binding interface gigabitethernet0/2
-----
MacAddress      IPAddress      Lease(sec)    Type           VLAN    Interface
-----
00:30:94:C2:EF:35  10.1.2.151    290           dhcp-snooping  20      GigabitEthernet0/2
Total number of bindings: 1
```

This example shows how to display the DHCP snooping binding entries on VLAN 20:

```
Switch> show ip dhcp snooping binding vlan 20
-----
MacAddress      IPAddress      Lease(sec)    Type           VLAN    Interface
-----
01:02:03:04:05:06  10.1.2.150    9747          dhcp-snooping  20      GigabitEthernet0/1
00:00:00:00:00:02  10.1.2.151    65            dhcp-snooping  20      GigabitEthernet0/2
Total number of bindings: 2
```

Table 2-25 describes the fields in the `show ip dhcp snooping binding` command output:

Table 2-25 *show ip dhcp snooping binding Command Output*

Field	Description
MacAddress	Client hardware MAC address
IpAddress	Client IP address assigned from the DHCP server
Lease(sec)	Remaining lease time for the IP address
Type	Binding type
VLAN	VLAN number of the client interface
Interface	Interface that connects to the DHCP client host
Total number of bindings	Total number of bindings configured on the switch Note The command output might not show the total number of bindings. For example, if 200 bindings are configured on the switch and you stop the display before all the bindings appear, the total number does not change.

Related Commands

Command	Description
ip dhcp snooping binding	Configures the DHCP snooping binding database
show ip dhcp snooping	Displays the DHCP snooping configuration.

show ip dhcp snooping database

Use the **show ip dhcp snooping database** user EXEC command to display the status of the DHCP snooping binding database agent.

```
show ip dhcp snooping database [detail] [ | {begin | exclude | include} expression]
```

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description

detail	(Optional) Display detailed status and statistics information.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Examples

This is an example of output from the **show ip dhcp snooping database** command:

```
Switch> show ip dhcp snooping database
Agent URL :
Write delay Timer : 300 seconds
Abort Timer : 300 seconds

Agent Running : No
Delay Timer Expiry : Not Running
Abort Timer Expiry : Not Running

Last Succeeded Time : None
Last Failed Time : None
Last Failed Reason : No failure recorded.

Total Attempts      :          0   Startup Failures :          0
Successful Transfers :          0   Failed Transfers :          0
Successful Reads    :          0   Failed Reads     :          0
Successful Writes   :          0   Failed Writes    :          0
Media Failures      :          0
```

This is an example of output from the **show ip dhcp snooping database detail** command:

```
Switch# show ip dhcp snooping database detail
Agent URL : tftp://10.1.1.1/directory/file
Write delay Timer : 300 seconds
Abort Timer : 300 seconds

Agent Running : No
Delay Timer Expiry : 7 (00:00:07)
Abort Timer Expiry : Not Running

Last Succeeded Time : None
Last Failed Time : 17:14:25 UTC Sat Jul 7 2001
Last Failed Reason : Unable to access URL.

Total Attempts      :      21   Startup Failures :      0
Successful Transfers :      0   Failed Transfers :     21
Successful Reads    :      0   Failed Reads     :      0
Successful Writes   :      0   Failed Writes    :     21
Media Failures      :      0

First successful access: Read

Last ignored bindings counters :
Binding Collisions   :      0   Expired leases    :      0
Invalid interfaces   :      0   Unsupported vlans :      0
Parse failures       :      0

Last Ignored Time : None

Total ignored bindings counters:
Binding Collisions   :      0   Expired leases    :      0
Invalid interfaces   :      0   Unsupported vlans :      0
Parse failures       :      0
```

Related Commands

Command	Description
ip dhcp snooping	Enables DHCP snooping on a VLAN.
ip dhcp snooping database	Configures the DHCP snooping binding database agent or the binding file.
show ip dhcp snooping	Displays DHCP snooping information.

show ip igmp profile

Use the **show ip igmp profile** privileged EXEC command to display all configured Internet Group Management Protocol (IGMP) profiles or a specified IGMP profile.

```
show ip igmp profile [profile number] [ | { begin | exclude | include } expression ]
```

Syntax Description

<i>profile number</i>	(Optional) The IGMP profile number to be displayed. The range is 1 to 4294967295. If no profile number is entered, all IGMP profiles are displayed.
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Examples

These are examples of output from the **show ip igmp profile** privileged EXEC command, with and without specifying a profile number. If no profile number is entered, the display includes all profiles configured on the switch.

```
Switch# show ip igmp profile 40
IGMP Profile 40
  permit
  range 233.1.1.1 233.255.255.255
```

```
Switch# show ip igmp profile
IGMP Profile 3
  range 230.9.9.0 230.9.9.0
IGMP Profile 4
  permit
  range 229.9.9.0 229.255.255.255
```

Related Commands

Command	Description
ip igmp profile	Configures the specified IGMP profile number.

show ip igmp snooping

Use the **show ip igmp snooping** user EXEC command to display the Internet Group Management Protocol (IGMP) snooping configuration of the switch or the VLAN.

```
show ip igmp snooping [groups | mrouter | querier] [vlan vlan-id] [ | {begin | exclude | include}
expression]
```

Syntax Description		
groups	(Optional)	See the show ip igmp snooping groups command.
mrouter	(Optional)	See the show ip igmp snooping mrouter command.
querier	(Optional)	See the show ip igmp snooping querier command.
vlan <i>vlan-id</i>	(Optional)	Specify a VLAN; the range is 1 to 1001 and 1006 to 4094 (available only in privileged EXEC mode).
 begin	(Optional)	Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional)	Display excludes lines that match the <i>expression</i> .
 include	(Optional)	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
	12.2(20)SE	The groups keyword was added. The show ip igmp snooping groups command replaced the show ip igmp snooping multicast command.

Usage Guidelines Use this command to display snooping configuration for the switch or for a specific VLAN. VLAN IDs 1002 to 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in IGMP snooping.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show ip igmp snooping vlan 1** command. It shows snooping characteristics for a specific VLAN.

```
Switch# show ip igmp snooping vlan 1
Global IGMP Snooping configuration:
-----
IGMP snooping           :Enabled
IGMPv3 snooping (minimal) :Enabled
Report suppression      :Enabled
TCN solicit query       :Disabled
TCN flood query count    :2
Last member query interval : 100
```

```
Vlan 1:
-----
IGMP snooping           :Enabled
Immediate leave         :Disabled
Multicast router learning mode :pim-dvmrp
Source only learning age timer :10
CGMP interoperability mode :IGMP_ONLY
Last member query interval : 100
```

This is an example of output from the **show ip igmp snooping** command. It displays snooping characteristics for all VLANs on the switch.

```
Switch> show ip igmp snooping
Global IGMP Snooping configuration:
-----
IGMP snooping           : Enabled
IGMPv3 snooping (minimal) : Enabled
Report suppression      : Enabled
TCN solicit query       : Disabled
TCN flood query count    : 2
Last member query interval : 100
```

```
Vlan 1:
-----
IGMP snooping           :Enabled
Immediate leave         :Disabled
Multicast router learning mode :pim-dvmrp
Source only learning age timer :10
CGMP interoperability mode :IGMP_ONLY
Last member query interval : 100
```

```
Vlan 2:
-----
IGMP snooping           :Enabled
Immediate leave         :Disabled
Multicast router learning mode :pim-dvmrp
Source only learning age timer :10
CGMP interoperability mode :IGMP_ONLY
Last member query interval : 333
```

<output truncated>

Related Commands	Command	Description
	ip igmp snooping	Enables IGMP snooping on the switch or on a VLAN.
	ip igmp snooping last-member-query-interval	Enables the IGMP snooping configurable-leave timer.
	ip igmp snooping querier	Enables the IGMP querier function in Layer 2 networks.
	ip igmp snooping report-suppression	Enables IGMP report suppression.
	ip igmp snooping tcn	Configures the IGMP topology change notification behavior.
	ip igmp snooping tcn flood	Specifies multicast flooding as the IGMP spanning-tree topology change notification behavior.
	ip igmp snooping vlan immediate-leave	Enables IGMP snooping immediate-leave processing on a VLAN.
	ip igmp snooping vlan mrouter	Adds a multicast router port or configures the multicast learning method.
	ip igmp snooping vlan static	Statically adds a Layer 2 port as a member of a multicast group.
	show ip igmp snooping groups	Displays the IGMP snooping multicast table for the switch.
	show ip igmp snooping mrouter	Displays IGMP snooping multicast router ports for the switch or for the specified multicast VLAN.
	show ip igmp snooping querier	Displays the configuration and operation information for the IGMP querier configured on a switch.

show ip igmp snooping groups

Use the **show ip igmp snooping groups** privileged EXEC command to display the Internet Group Management Protocol (IGMP) snooping multicast table for the switch or the multicast information. Use with the **vlan** keyword to display the multicast table for a specified multicast VLAN or specific multicast information.

```
show ip igmp snooping groups [count | dynamic [count] | user [count]] [ | {begin | exclude | include} expression]
```

```
show ip igmp snooping groups vlan vlan-id [ip_address | count | dynamic [count] | user [count]] [ | {begin | exclude | include} expression]
```

Syntax Description	
count	(Optional) Display the total number of entries for the specified command options instead of the actual entries.
dynamic	(Optional) Display entries learned by IGMP snooping.
user	(Optional) Display only the user-configured multicast entries.
<i>ip_address</i>	(Optional) Display characteristics of the multicast group with the specified group IP address.
vlan <i>vlan-id</i>	(Optional) Specify a VLAN; the range is 1 to 1001 and 1006 to 4094.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(20)SE	This command was introduced. It replaced the show ip igmp snooping multicast command.

Usage Guidelines

Use this command to display multicast information or the multicast table.

VLAN IDs 1002 to 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in IGMP snooping.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show ip igmp snooping groups** command without any keywords. It displays the multicast table for the switch.

```
Switch# show ip igmp snooping groups
Vlan      Group          Type      Version  Port List
-----
104       224.1.4.2      igmp     v2       Gi0/1, Gi0/2
104       224.1.4.3      igmp     v2       Gi0/1, Gi0/2
```

This is an example of output from the **show ip igmp snooping groups count** command. It displays the total number of multicast groups on the switch.

```
Switch# show ip igmp snooping groups count
Total number of multicast groups: 2
```

This is an example of output from the **show ip igmp snooping groups dynamic** command. It shows only the entries learned by IGMP snooping.

```
Switch# show ip igmp snooping groups vlan 1 dynamic
Vlan      Group          Type      Version  Port List
-----
104       224.1.4.2      igmp     v2       Gi0/1, Fa0/15
104       224.1.4.3      igmp     v2       Gi0/1, Fa0/15
```

This is an example of output from the **show ip igmp snooping groups vlan *vlan-id ip-address*** command. It shows the entries for the group with the specified IP address.

```
Switch# show ip igmp snooping groups vlan 104 224.1.4.2
Vlan      Group          Type      Version  Port List
-----
104       224.1.4.2      igmp     v2       Gi0/1, Fa0/15
```

Related Commands

Command	Description
ip igmp snooping	Enables IGMP snooping on the switch or on a VLAN.
ip igmp snooping vlan mrouter	Configures a multicast router port.
ip igmp snooping vlan static	Statically adds a Layer 2 port as a member of a multicast group.
show ip igmp snooping	Displays the IGMP snooping configuration of the switch or the VLAN.
show ip igmp snooping mrouter	Displays IGMP snooping multicast router ports for the switch or for the specified multicast VLAN.

show ip igmp snooping mrouter

Use the **show ip igmp snooping mrouter** privileged EXEC command to display the Internet Group Management Protocol (IGMP) snooping dynamically learned and manually configured multicast router ports for the switch or for the specified multicast VLAN.

```
show ip igmp snooping mrouter [vlan vlan-id] [ | { begin | exclude | include } expression]
```

Syntax Description		
vlan <i>vlan-id</i>	(Optional) Specify a VLAN; the range is 1 to 1001 and 1006 to 4094.	
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .	
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .	
 include	(Optional) Display includes lines that match the specified <i>expression</i> .	
<i>expression</i>	Expression in the output to use as a reference point.	

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines

Use this command to display multicast router ports on the switch or for a specific VLAN. VLAN IDs 1002 to 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in IGMP snooping.

When multicast VLAN registration (MVR) is enabled, the **show ip igmp snooping mrouter** command displays MVR multicast router information and IGMP snooping information.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show ip igmp snooping mrouter** command. It shows how to display multicast router ports on the switch.

```
Switch# show ip igmp snooping mrouter
Vlan      ports
----      -
 1       Gi0/1 (dynamic)
```

Related Commands

Command	Description
ip igmp snooping	Enables IGMP snooping on the switch or on a VLAN.
ip igmp snooping vlan mrouter	Adds a multicast router port.
ip igmp snooping vlan static	Statically adds a Layer 2 port as a member of a multicast group.
show ip igmp snooping	Displays the IGMP snooping configuration of the switch or the VLAN
show ip igmp snooping groups	Displays IGMP snooping multicast information for the switch or for the specified parameter.

show ip igmp snooping querier

Use the **show ip igmp snooping querier detail** user EXEC command to display the configuration and operation information for the IGMP querier configured on a switch.

```
show ip igmp snooping querier [detail | vlan vlan-id [detail]] [ | {begin | exclude | include}
expression]
```

Syntax Description		
detail	Optional)	Display detailed IGMP querier information.
vlan <i>vlan-id</i> [detail]	Optional)	Display IGMP querier information for the specified VLAN. The range is 1 to 1001 and 1006 to 4094. Use the detail keyword to display detailed information.
 begin	(Optional)	Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional)	Display excludes lines that match the <i>expression</i> .
 include	(Optional)	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.2(25)SEA	This command was introduced.

Usage Guidelines Use the **show ip igmp snooping querier** command to display the IGMP version and the IP address of a detected device, also called a *querier*, that sends IGMP query messages. A subnet can have multiple multicast routers but has only one IGMP querier. In a subnet running IGMPv2, one of the multicast routers is elected as the querier. The querier can be a Layer 3 switch.

The **show ip igmp snooping querier** command output also shows the VLAN and the interface on which the querier was detected. If the querier is the switch, the output shows the *Port* field as *Router*. If the querier is a router, the output shows the port number on which the querier is learned in the *Port* field.

The **show ip igmp snooping querier detail** user EXEC command is similar to the **show ip igmp snooping querier** command. However, the **show ip igmp snooping querier** command displays only the device IP address most recently detected by the switch querier.

The **show ip igmp snooping querier detail** command displays the device IP address most recently detected by the switch querier and this additional information:

- The elected IGMP querier in the VLAN
- The configuration and operational information pertaining to the switch querier (if any) that is configured in the VLAN

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show ip igmp snooping querier** command:

```
Switch> show ip igmp snooping querier
Vlan      IP Address      IGMP Version      Port
-----
1         172.20.50.11   v3                 Gi0/1
2         172.20.40.20   v2                 Router
```

This is an example of output from the **show ip igmp snooping querier detail** command:

```
Switch> show ip igmp snooping querier detail

Vlan      IP Address      IGMP Version      Port
-----
1         1.1.1.1         v2                 Fa0/1

Global IGMP switch querier status
-----
admin state           : Enabled
admin version         : 2
source IP address     : 0.0.0.0
query-interval (sec)  : 60
max-response-time (sec) : 10
querier-timeout (sec) : 120
tcn query count       : 2
tcn query interval (sec) : 10

Vlan 1:  IGMP switch querier status
-----
elected querier is 1.1.1.1      on port Fa0/1
-----
admin state           : Enabled
admin version         : 2
source IP address     : 10.1.1.65
query-interval (sec)  : 60
max-response-time (sec) : 10
querier-timeout (sec) : 120
tcn query count       : 2
tcn query interval (sec) : 10
operational state     : Non-Querier
operational version   : 2
tcn query pending count : 0
```

Related Commands

Command	Description
ip igmp snooping	Enables IGMP snooping on the switch or on a VLAN.
ip igmp snooping querier	Enables the IGMP querier function in Layer 2 networks.
show ip igmp snooping	Displays IGMP snooping multicast router ports for the switch or for the specified multicast VLAN.

show ip source binding

Use the **show ip source binding** user EXEC command to display the IP source bindings on the switch.

```
show ip source binding [ip-address] [mac-address] [dhcp-snooping | static] [interface
interface-id] [vlan vlan-id] [ | { begin | exclude | include } expression]
```

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description

<i>ip-address</i>	(Optional) Display IP source bindings for a specific IP address.
<i>mac-address</i>	(Optional) Display IP source bindings for a specific MAC address.
dhcp-snooping	(Optional) Display IP source bindings that were learned by DHCP snooping.
static	(Optional) Display static IP source bindings.
interface <i>interface-id</i>	(Optional) Display IP source bindings on a specific interface.
vlan <i>vlan-id</i>	(Optional) Display IP source bindings on a specific VLAN.
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

The **show ip source binding** command output shows the dynamically and statically configured bindings in the DHCP snooping binding database. Use the **show ip dhcp snooping binding** privileged EXEC command to display only the dynamically configured bindings.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show ip source binding** command:

```
Switch> show ip source binding
MacAddress          IpAddress          Lease(sec)  Type           VLAN  Interface
-----
00:00:00:0A:00:0B  11.0.0.1           infinite    static         10    GigabitEthernet0/1
00:00:00:0A:00:0A  11.0.0.2           10000      dhcp-snooping  10    GigabitEthernet0/1
```


Related Commands	Command	Description
	ip dhcp snooping binding	Configures the DHCP snooping binding database.
	ip source binding	Configures static IP source bindings on the switch.

show ip verify source

Use the **show ip verify source** user EXEC command to display the IP source guard configuration on the switch or on a specific interface.

```
show ip verify source [interface interface-id] [ | { begin | exclude | include } expression]
```

Syntax Description	
interface <i>interface-id</i>	(Optional) Display IP source guard configuration on a specific interface.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show ip verify source** command:

```
Switch> show ip verify source
Interface  Filter-type  Filter-mode  IP-address      Mac-address      Vlan
-----  -
gi0/1     ip           active       10.0.0.1        -----         10
gi0/1     ip           active       deny-all       -----         11-20
gi0/2     ip           inactive-trust-port
gi0/3     ip           inactive-no-snooping-vlan
gi0/4     ip-mac      active       10.0.0.2        aaaa.bbbb.cccc  10
gi0/4     ip-mac      active       11.0.0.1        aaaa.bbbb.cccd  11
gi0/4     ip-mac      active       deny-all       deny-all        12-20
gi0/5     ip-mac      active       10.0.0.3        permit-all      10
gi0/5     ip-mac      active       deny-all       permit-all      11-20
```

In the previous example, this is the IP source guard configuration:

- On the Gigabit Ethernet 0/1 interface, DHCP snooping is enabled on VLANs 10 to 20. For VLAN 10, IP source guard with IP address filtering is configured on the interface, and a binding exists on the interface. For VLANs 11 to 20, the second entry shows that a default port is applied on the interface for the VLANs on which IP source guard is not configured.
- The Gigabit Ethernet 0/2 interface is configured as trusted for DHCP snooping.
- On the Gigabit Ethernet 0/3 interface, DHCP snooping is not enabled on the VLANs to which the interface belongs.

- On the Gigabit Ethernet 0/4 interface, IP source guard with source IP and MAC address filtering is enabled, and static IP source bindings are configured on VLANs 10 and 11. For VLANs 12 to 20, the default port ACL is applied on the interface for the VLANs on which IP source guard is not configured.
- On the Gigabit Ethernet 0/5 interface, IP source guard with source IP and MAC address filtering is enabled and configured with a static IP binding, but port security is disabled. The switch cannot filter source MAC addresses.

This is an example of output on an interface on which IP source guard is disabled:

```
Switch> show ip verify source gigabitethernet0/6
IP source guard is not configured on the interface gi0/6.
```

Related Commands

Command	Description
ip verify source	Enables IP source guard on an interface.

show ipc

Use the **show ipc** user EXEC command to display Interprocess Communications Protocol (IPC) configuration, status, and statistics.

```
show ipc { mcast { appclass | groups | status } | nodes | ports [open] | queue | rpc | session { all | rx | tx } [verbose] | status [cumulative] | zones } [ | { begin | exclude | include } expression]
```

Syntax Description

mcast { appclass groups status }	Display the IPC multicast routing information. The keywords have these meanings: <ul style="list-style-type: none"> • appclass—Display the IPC multicast application classes. • groups—Display the IPC multicast groups. • status—Display the IPC multicast routing status.
nodes	Display participating nodes.
ports [open]	Display local IPC ports. The keyword has this meaning: <ul style="list-style-type: none"> • open—(Optional) Display only the open ports.
queue	Display the contents of the IPC transmission queue.
rpc	Display the IPC remote-procedure statistics.
session { all rx tx }	Display the IPC session statistics (available only in privileged EXEC mode). The keywords have these meanings: <ul style="list-style-type: none"> • all—Display all the session statistics. • rx—Display the sessions statistics for traffic that the switch receives • tx—Display the sessions statistics for traffic that the switch forwards.
verbose	(Optional) Display detailed statistics (available only in privileged EXEC mode).
status [cumulative]	Display the status of the local IPC server. The keyword has this meaning: <ul style="list-style-type: none"> • cumulative—(Optional) Display the status of the local IPC server since the switch was started or restarted.
zones	Display the participating IPC zones. The switch supports a single IPC zone.
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	The mcast , rpc , and session keywords were added.

Usage Guidelines

Expressions are case sensitive. For example, if you enter `| exclude output`, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This example shows how to display the IPC routing status:

```
Switch> show ipc mcast status
                    IPC Mcast Status
                    Tx           Rx
Total Frames                0           0
Total control Frames        0           0
Total Frames dropped        0           0
Total control Frames dropped 0           0
Total Reliable messages     0           0
Total Reliable messages acknowledged 0           0
Total Out of Band Messages 0           0
Total Out of Band messages acknowledged 0           0
Total No Mcast groups      0           0
Total Retries                0 Total Timeouts                0
Total OOB Retries            0 Total OOB Timeouts            0
Total flushes                0 Total No ports                0
```

This example shows how to display the participating nodes:

```
Switch> show ipc nodes
There is 1 node in this IPC realm.
  ID   Type   Name           Last Sent  Last Heard
  10000 Local   IPC Master     0         0
```

This example shows how to display the local IPC ports:

```
Switch> show ipc ports
There are 8 ports defined.
Port ID      Type      Name                                     (current/peak/total)
There are 8 ports defined.
  10000.1    unicast   IPC Master:Zone
  10000.2    unicast   IPC Master:Echo
  10000.3    unicast   IPC Master:Control
  10000.4    unicast   IPC Master:Init
  10000.5    unicast   FIB Master:DFS.process_level.msgs
  10000.6    unicast   FIB Master:DFS.interrupt.msgs
  10000.7    unicast   MDFS RP:Statistics
    port_index = 0 seat_id = 0x10000 last sent = 0 last heard = 0
0/2/159
  10000.8    unicast   Slot 1 :MDFS.control.RIL
    port_index = 0 seat_id = 0x10000 last sent = 0 last heard = 0
0/0/0
RPC packets:current/peak/total
                                           0/1/4
```

This example shows how to display the contents of the IPC retransmission queue:

```
Switch> show ipc queue
There are 0 IPC messages waiting for acknowledgement in the transmit queue.
There are 0 IPC messages waiting for a response.
There are 0 IPC messages waiting for additional fragments.
There are 0 IPC messages currently on the IPC inboundQ.
Messages currently in use                :          3
Message cache size                       :         1000
Maximum message cache usage              :         1000

0 times message cache crossed            5000 [max]

Emergency messages currently in use      :          0

There are 2 messages currently reserved for reply msg.

Inbound message queue depth 0
Zone inbound message queue depth 0
```

This example shows how to display all the IPC session statistics:

```
Switch# show ipc session all
Tx Sessions:
Port ID      Type      Name
10000.7      Unicast   MDFS RP:Statistics
  port_index = 0  type = Unreliable  last sent = 0  last heard = 0
  Msgs requested = 180  Msgs returned = 180

10000.8      Unicast   Slot 1 :MDFS.control.RIL
  port_index = 0  type = Reliable    last sent = 0  last heard = 0
  Msgs requested = 0   Msgs returned = 0

Rx Sessions:
Port ID      Type      Name
10000.7      Unicast   MDFS RP:Statistics
  port_index = 0  seat_id = 0x10000  last sent = 0  last heard = 0
  No of msgs requested = 180  Msgs returned = 180

10000.8      Unicast   Slot 1 :MDFS.control.RIL
  port_index = 0  seat_id = 0x10000  last sent = 0  last heard = 0
  No of msgs requested = 0    Msgs returned = 0
```

This example shows how to display the status of the local IPC server:

```
Switch> show ipc status cumulative
          IPC System Status

Time last IPC stat cleared :never

This processor is the IPC master server.
Do not drop output of IPC frames for test purposes.

1000 IPC Message Headers Cached.

                                     Rx Side   Tx Side
Total Frames                          12916     608
    0                                0
Total from Local Ports                  13080     574
Total Protocol Control Frames           116       17
Total Frames Dropped                     0         0

                          Service Usage

Total via Unreliable Connection-Less Service      12783     171
Total via Unreliable Sequenced Connection-Less Svc    0         0
Total via Reliable Connection-Oriented Service       17     116
<output truncated>
```

Related Commands

Command	Description
clear ipc	Clears the IPC multicast routing statistics.

show ipv6 access-list

Use the **show ipv6 access-list** user EXEC command to display the contents of all current IPv6 access lists.

```
show ipv6 access-list [access-list-name]
```



Note

This command is available only if the switch is running the advanced IP services image and you have configured a dual IPv4 and IPv6 Switch Database Management (SDM) template on the switch.

Syntax Description

access-list-name (Optional) Name of access list.

Command Modes

User EXEC

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

The **show ipv6 access-list** command provides output similar to the **show ip access-list** command, except that it is IPv6-specific.

To configure the dual IPv4 and IPv6 template, enter the **sdm prefer dual-ipv4-and-ipv6 { default | vlan }** global configuration command and reload the switch.

Examples

The following output from the **show ipv6 access-list** command shows IPv6 access lists named inbound and outbound:

```
Router# show ipv6 access-list
IPv6 access list inbound
  permit tcp any any eq bgp (8 matches) sequence 10
  permit tcp any any eq telnet (15 matches) sequence 20
  permit udp any any sequence 30
```

[Table 2-26](#) describes the significant fields shown in the display.

Table 2-26 *show ipv6 access-list* Field Descriptions

Field	Description
IPv6 access list inbound	Name of the IPv6 access list, for example, inbound.
permit	Permits any packet that matches the specified protocol type.
tcp	Transmission Control Protocol. The higher-level (Layer 4) protocol type that the packet must match.
any	Equal to ::/0.

Table 2-26 show ipv6 access-list Field Descriptions (continued)

Field	Description
eq	An equal operand that compares the source or destination ports of TCP or UDP packets.
bgp (matches)	Border Gateway Protocol. The protocol type that the packet is equal to and the number of matches.
sequence 10	Sequence in which an incoming packet is compared to lines in an access list. Access list lines are ordered from first priority (lowest number, for example, 10) to last priority (highest number, for example, 80).

Related Commands

Command	Description
clear ipv6 access-list	Resets the IPv6 access list match counters.
ipv6 access-list	Defines an IPv6 access list and puts the switch into IPv6 access-list configuration mode.
sdm prefer	Configures an SDM template to optimize system resources based on how the switch is being used.

show ipv6 mld snooping

Use the **show ipv6 mld snooping** user EXEC command to display IP version 6 (IPv6) Multicast Listener Discovery (MLD) snooping configuration of the switch or the VLAN.

```
show ipv6 mld snooping [vlan vlan-id] [ | { begin | exclude | include } expression ]
```



Note

This command is available only if the switch is running the advanced IP services image and you have configured a dual IPv4 and IPv6 Switch Database Management (SDM) template on the switch.

Syntax Description

vlan <i>vlan-id</i>	(Optional) Specify a VLAN; the range is 1 to 1001 and 1006 to 4094.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

Use this command to display MLD snooping configuration for the switch or for a specific VLAN.

VLAN numbers 1002 through 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in MLD snooping.

To configure the dual IPv4 and IPv6 template, enter the **sdm prefer dual-ipv4-and-ipv6 { default | vlan }** global configuration command and reload the switch.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show ipv6 mld snooping vlan** command. It shows snooping characteristics for a specific VLAN.

```
Switch> show ipv6 mld snooping vlan 100
Global MLD Snooping configuration:
```

```
-----
MLD snooping                : Enabled
MLDv2 snooping (minimal)    : Enabled
Listener message suppression : Enabled
TCN solicit query           : Disabled
TCN flood query count        : 2
Robustness variable          : 3
Last listener query count    : 2
Last listener query interval : 1000
```

```

Vlan 100:
-----
MLD snooping                : Disabled
MLDv1 immediate leave       : Disabled
Explicit host tracking       : Enabled
Multicast router learning mode : pim-dvmrp
Robustness variable         : 3
Last listener query count    : 2
Last listener query interval : 1000

```

This is an example of output from the **show ipv6 mld snooping** command. It displays snooping characteristics for all VLANs on the switch.

```

Switch> show ipv6 mld snooping
Global MLD Snooping configuration:
-----
MLD snooping                : Enabled
MLDv2 snooping (minimal)    : Enabled
Listener message suppression : Enabled
TCN solicit query          : Disabled
TCN flood query count       : 2
Robustness variable         : 3
Last listener query count    : 2
Last listener query interval : 1000

```

```

Vlan 1:
-----
MLD snooping                : Disabled
MLDv1 immediate leave       : Disabled
Explicit host tracking       : Enabled
Multicast router learning mode : pim-dvmrp
Robustness variable         : 1
Last listener query count    : 2
Last listener query interval : 1000

```

<output truncated>

```

Vlan 951:
-----
MLD snooping                : Disabled
MLDv1 immediate leave       : Disabled
Explicit host tracking       : Enabled
Multicast router learning mode : pim-dvmrp
Robustness variable         : 3
Last listener query count    : 2
Last listener query interval : 1000

```

Related Commands

Command	Description
ipv6 mld snooping	Enables and configures MLD snooping on the switch or on a VLAN.
sdm prefer	Configures an SDM template to optimize system resources based on how the switch is being used.

show ipv6 mld snooping address

Use the **show ipv6 mld snooping address** user EXEC command to display all or specified IP version 6 (IPv6) multicast address information maintained by Multicast Listener Discovery (MLD) snooping.

```
show ipv6 mld snooping address [[vlan vlan-id] [ipv6 address]] [vlan vlan-id] [count | dynamic
| user] [ | {begin | exclude | include} expression]
```



Note

This command is available only if the switch is running the advanced IP services image and you have configured a dual IPv4 and IPv6 Switch Database Management (SDM) template on the switch.

Syntax Description

vlan <i>vlan-id</i>	(Optional) Specify a VLAN about which to show MLD snooping multicast address information. The VLAN ID range is 1 to 1001 and 1006 to 4094.
<i>ipv6-multicast-address</i>	(Optional) Display information about the specified IPv6 multicast address. This keyword is only available when a VLAN ID is entered.
count	(Optional) Display the number of multicast groups on the switch or in the specified VLAN.
dynamic	(Optional) Display MLD snooping learned group information.
user	(Optional) Display MLD snooping user-configured group information.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

Use this command to display IPv6 multicast address information.

You can enter an IPv6 multicast address only after you enter a VLAN ID.

VLAN numbers 1002 through 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in MLD snooping.

Use the **dynamic** keyword to display information only about groups that are learned. Use the **user** keyword to display information only about groups that have been configured.

To configure the dual IPv4 and IPv6 template, enter the **sdm prefer dual-ipv4-and-ipv6 {default | vlan}** global configuration command and reload the switch.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show snooping address user** EXEC command:

```
Switch> show ipv6 mld snooping address
Vlan Group   Type Version Port List
-----
2    FF12::3 user           Fa0/2, Gi0/2, Gi0/1,Gi0/3
```

This is an example of output from the **show snooping address count** user EXEC command:

```
Switch> show ipv6 mld snooping address count
Total number of multicast groups: 2
```

This is an example of output from the **show snooping address user user** EXEC command:

```
Switch> show ipv6 mld snooping address user
Vlan Group   Type Version Port List
-----
2    FF12::3 user   v2    Fa0/2, Gi0/2, Gi0/1,Gi0/3
```

Related Commands

Command	Description
ipv6 mld snooping vlan	Configures IPv6 MLD snooping on a VLAN.
sdm prefer	Configures an SDM template to optimize system resources based on how the switch is being used.

show ipv6 mld snooping mrouter

Use the **show ipv6 mld snooping mrouter** user EXEC command to display dynamically learned and manually configured IP version 6 (IPv6) Multicast Listener Discovery (MLD) router ports for the switch or a VLAN.

```
show ipv6 mld snooping mrouter [vlan vlan-id] [ | {begin | exclude | include} expression]
```



Note

This command is available only if the switch is running the advanced IP services image and you have configured a dual IPv4 and IPv6 Switch Database Management (SDM) template on the switch.

Syntax Description

vlan <i>vlan-id</i>	(Optional) Specify a VLAN; the range is 1 to 1001 and 1006 to 4094.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

Use this command to display MLD snooping router ports for the switch or for a specific VLAN.

VLAN numbers 1002 through 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in MLD snooping.

To configure the dual IPv4 and IPv6 template, enter the **sdm prefer dual-ipv4-and-ipv6 { default | vlan }** global configuration command and reload the switch.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show ipv6 mld snooping mrouter** command. It displays snooping characteristics for all VLANs on the switch that are participating in MLD snooping.

```
Switch> show ipv6 mld snooping mrouter
Vlan      ports
-----  -
    2      Gi0/11 (dynamic)
    72      Gi0/11 (dynamic)
   200      Gi0/11 (dynamic)
```

This is an example of output from the **show ipv6 mld snooping mrouter vlan** command. It shows multicast router ports for a specific VLAN.

```
Switch> show ipv6 mld snooping mrouter vlan 100
Vlan      ports
----      -
  2       Gi0/11 (dynamic)
```

Related Commands	Command	Description
	ipv6 mld snooping	Enables and configures MLD snooping on the switch or on a VLAN.
	ipv6 mld snooping vlan mrouter interface <i>interface-id</i> static <i>ipv6-multicast-address</i> interface <i>interface-id</i>	Configures multicast router ports for a VLAN.
	sdm prefer	Configures an SDM template to optimize system resources based on how the switch is being used.

show ipv6 mld snooping querier

Use the **show ipv6 mld snooping querier** user EXEC command to display IP version 6 (IPv6) Multicast Listener Discovery (MLD) snooping querier-related information most recently received by the switch or the VLAN.

```
show ipv6 mld snooping querier [vlan vlan-id] [detail] [ | {begin | exclude | include} expression]
```



Note

This command is available only if the switch is running the advanced IP services image and you have configured a dual IPv4 and IPv6 Switch Database Management (SDM) template on the switch.

Syntax Description

vlan <i>vlan-id</i>	(Optional) Specify a VLAN; the range is 1 to 1001 and 1006 to 4094.
detail	(Optional) Display MLD snooping detailed querier information for the switch or for the VLAN.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.2(25)SED	This command was introduced.

Usage Guidelines

Use the **show ipv6 mld snooping querier** command to display the MLD version and IPv6 address of a detected device that sends MLD query messages, which is also called a *querier*. A subnet can have multiple multicast routers but has only one MLD querier. The querier can be a Layer 3 switch.

The **show ipv6 mld snooping querier** command output also shows the VLAN and interface on which the querier was detected. If the querier is the switch, the output shows the *Port* field as *Router*. If the querier is a router, the output shows the port number on which the querier is learned in the *Port* field.

The output of the **show ipv6 mld snoop querier vlan** command displays the information received in response to a query message from an external or internal querier. It does not display user-configured VLAN values, such as the snooping robustness variable on the particular VLAN. This querier information is used only on the MASQ message that is sent by the switch. It does not override the user-configured robustness variable that is used for aging out a member that does not respond to query messages.

VLAN numbers 1002 through 1005 are reserved for Token Ring and FDDI VLANs and cannot be used in MLD snooping.

To configure the dual IPv4 and IPv6 template, enter the **sdm prefer dual-ipv4-and-ipv6 {default | vlan}** global configuration command and reload the switch.

Expressions are case sensitive. For example, if you enter **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show ipv6 mld snooping querier** command:

```
Switch> show ipv6 mld snooping querier
Vlan      IP Address          MLD Version Port
-----
2         FE80::201:C9FF:FE40:6000 v1          Gi0/1
```

This is an example of output from the **show ipv6 mld snooping querier detail** command:

```
Switch> show ipv6 mld snooping querier detail
Vlan      IP Address          MLD Version Port
-----
2         FE80::201:C9FF:FE40:6000 v1          Gi0/1
```

This is an example of output from the **show ipv6 mld snooping querier vlan** command:

```
Switch> show ipv6 mld snooping querier vlan 2
IP address : FE80::201:C9FF:FE40:6000
MLD version : v1
Port : Gi0/1
Max response time : 1000s
```

Related Commands²

Command	Description
ipv6 mld snooping	Enables and configures IPv6 MLD snooping on the switch or on a VLAN.
ipv6 mld snooping last-listener-query-count	Configures the maximum number of queries that the switch sends before aging out an MLD client.
ipv6 mld snooping last-listener-query-interval	Configures the maximum response time after sending out a query that the switch waits before deleting a port from the multicast group.
ipv6 mld snooping robustness-variable	Configures the maximum number of queries that the switch sends before aging out a multicast address when there is no response.
sdm prefer	Configures an SDM template to optimize system resources based on how the switch is being used.

show l2protocol-tunnel

Use the **show l2protocol-tunnel** user EXEC command to display information about Layer 2 protocol tunnel ports. Displays information for interfaces with protocol tunneling enabled.

```
show l2protocol-tunnel [interface interface-id] [summary] [ | {begin | exclude | include}
expression]
```

Syntax Description	
interface <i>interface-id</i>	(Optional) Specify the interface for which protocol tunneling information appears. Valid interfaces are physical ports and port channels; the port channel range is 1 to 48.
summary	(Optional) Display only Layer 2 protocol summary information.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.2(25)SE	This command was introduced.

Usage Guidelines After enabling Layer 2 protocol tunneling on an access or IEEE 802.1Q tunnel port by using the **l2protocol-tunnel** interface configuration command, you can configure some or all of these parameters:

- Protocol type to be tunneled
- Shutdown threshold
- Drop threshold

If you enter the **show l2protocol-tunnel [interface *interface-id*]** command, only information about the active ports on which all the parameters are configured appears.

If you enter the **show l2protocol-tunnel summary** command, only information about the active ports on which some or all of the parameters are configured appears.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show l2protocol-tunnel** command:

```
Switch> show l2protocol-tunnel
COS for Encapsulated Packets: 5
Drop Threshold for Encapsulated Packets: 0
```

Port	Protocol	Shutdown Threshold	Drop Threshold	Encapsulation Counter	Decapsulation Counter	Drop Counter
Fa0/3	---	----	----	----	----	----
	pagp	----	----	0	242500	
	lacp	----	----	24268	242640	
	udld	----	----	0	897960	
Fa0/4	---	----	----	----	----	----
	pagp	1000	----	24249	242700	
	lacp	----	----	24256	242660	
	udld	----	----	0	897960	
Gi0/1	cdp	----	----	134482	1344820	
	---	----	----	----	----	----
	pagp	1000	----	0	242500	
	lacp	500	----	0	485320	
Gi0/2	udld	300	----	44899	448980	
	cdp	----	----	134482	1344820	
	---	----	----	----	----	----
	pagp	----	1000	0	242700	
	lacp	----	----	0	485220	
	udld	300	----	44899	448980	

This is an example of output from the **show l2protocol-tunnel summary** command:

```
Switch> show l2protocol-tunnel summary
COS for Encapsulated Packets: 5
Drop Threshold for Encapsulated Packets: 0
```

Port	Protocol	Shutdown Threshold (cdp/stp/vtp) (pagp/lacp/udld)	Drop Threshold (cdp/stp/vtp) (pagp/lacp/udld)	Status
Fa0/2	pagp lacp udld	----/----/----	----/----/----	up
Fa0/3	pagp lacp udld	1000/----/----	----/----/----	up
Fa0/4	pagp lacp udld	1000/ 500/----	----/----/----	up
Fa0/5	cdp stp vtp	----/----/----	----/----/----	down
Gi0/1	pagp	----/----/----	1000/----/----	down
Gi0/2	pagp	----/----/----	1000/----/----	down

show l2protocol-tunnel**Related Commands**

Command	Description
clear l2protocol-tunnel counters	Clears counters for protocol tunneling ports.
l2protocol-tunnel	Enables Layer 2 protocol tunneling for CDP, STP, or VTP packets on an interface.
l2protocol-tunnel cos	Configures a class of service (CoS) value for tunneled Layer 2 protocol packets.

show lacp

Use the **show lacp** user EXEC command to display Link Aggregation Control Protocol (LACP) channel-group information.

```
show lacp [channel-group-number] { counters | internal | neighbor | sys-id } [ | { begin | exclude | include } expression]
```

Syntax Description

<i>channel-group-number</i>	(Optional) Number of the channel group. The range is 1 to 48.
counters	Display traffic information.
internal	Display internal information.
neighbor	Display neighbor information.
sys-id	Display the system identifier that is being used by LACP. The system identifier is made up of the LACP system priority and the switch MAC address.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	The <i>channel-group-number</i> range was changed from 1 to 12 to 1 to 48.

Usage Guidelines

You can enter any **show lacp** command to display the active channel-group information. To display specific channel information, enter the **show lacp** command with a channel-group number.

If you do not specify a channel group, information for all channel groups appears.

You can enter the *channel-group-number* option to specify a channel group for all keywords except **sys-id**.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show lacp counters** user EXEC command. [Table 2-27](#) describes the fields in the display.

```
Switch> show lacp counters
          LACPDU          Marker      Marker Response      LACPDU
Port      Sent   Recv    Sent   Recv    Sent   Recv    Pkts Err
-----
Channel group:1
Gi0/1      19    10      0      0       0      0       0
Gi0/2      14     6       0      0       0      0       0
```

Table 2-27 *show lacp counters Field Descriptions*

Field	Description
LACPDUs Sent and Recv	The number of LACP packets sent and received by a port.
Marker Sent and Recv	The number of LACP marker packets sent and received by a port.
Marker Response Sent and Recv	The number of LACP marker response packets sent and received by a port.
LACPDUs Pkts and Err	The number of unknown and illegal packets received by LACP for a port.

This is an example of output from the **show lacp internal** command:

```
Switch> show lacp 1 internal
Flags: S - Device is requesting Slow LACPDUs
       F - Device is requesting Fast LACPDUs
       A - Device is in Active mode           P - Device is in Passive mode

Channel group 1

Port      Flags  State  LACP port  Admin  Oper  Port  Port
          State Priority Key       Key    Key   Number State
Gi0/1     SA     bndl   32768      0x3    0x3   0x4   0x3D
Gi0/2     SA     bndl   32768      0x3    0x3   0x5   0x3D
```

Table 2-28 describes the fields in the display:

Table 2-28 *show lacp internal Field Descriptions*

Field	Description
State	<p>State of the specific port. These are the allowed values:</p> <ul style="list-style-type: none"> • ——Port is in an unknown state. • bn dl—Port is attached to an aggregator and bundled with other ports. • susp—Port is in a suspended state; it is not attached to any aggregator. • hot-sby—Port is in a hot-standby state. • indiv—Port is incapable of bundling with any other port. • indep—Port is in an independent state (not bundled but able to switch data traffic. In this case, LACP is not running on the partner port). • down—Port is down.
LACP Port Priority	Port priority setting. LACP uses the port priority to put ports s in standby mode when there is a hardware limitation that prevents all compatible ports from aggregating.
Admin Key	Administrative key assigned to this port. LACP automatically generates an administrative key value as a hexadecimal number. The administrative key defines the ability of a port to aggregate with other ports. A port's ability to aggregate with other ports is determined by the port physical characteristics (for example, data rate and duplex capability) and configuration restrictions that you establish.
Oper Key	Runtime operational key that is being used by this port. LACP automatically generates this value as a hexadecimal number.
Port Number	Port number.
Port State	<p>State variables for the port, encoded as individual bits within a single octet with these meanings:</p> <ul style="list-style-type: none"> • bit0: LACP_Activity • bit1: LACP_Timeout • bit2: Aggregation • bit3: Synchronization • bit4: Collecting • bit5: Distributing • bit6: Defaulted • bit7: Expired <p>Note In the list above, bit7 is the MSB and bit0 is the LSB.</p>

This is an example of output from the **show lacp neighbor** command:

```
Switch> show lacp neighbor
Flags: S - Device is sending Slow LACPDUs F - Device is sending Fast LACPDUs
      A - Device is in Active mode       P - Device is in Passive mode
```

Channel group 3 neighbors

Partner's information:

Port	Partner System ID	Partner Port Number	Age	Partner Flags
Gi0/1	32768,0007.eb49.5e80	0xC	19s	SP
	LACP Partner Port Priority	Partner Oper Key	Partner Port State	
	32768	0x3	0x3C	

Partner's information:

Port	Partner System ID	Partner Port Number	Age	Partner Flags
Gi0/2	32768,0007.eb49.5e80	0xD	15s	SP
	LACP Partner Port Priority	Partner Oper Key	Partner Port State	
	32768	0x3	0x3C	

This is an example of output from the **show lacp sys-id** command:

```
Switch> show lacp sys-id
32765,0002.4b29.3a00
```

The system identification is made up of the system priority and the system MAC address. The first two bytes are the system priority, and the last six bytes are the globally administered individual MAC address associated to the system.

Related Commands

Command	Description
clear lacp	Clears the LACP channel-group information.
lacp port-priority	Configures the LACP port priority.
lacp system-priority	Configures the LACP system priority.

show mac access-group

Use the **show mac access-group** user EXEC command to display the MAC access control lists (ACLs) configured for an interface or a switch.

```
show mac access-group [interface interface-id] [ | { begin | exclude | include } expression]
```

Syntax Description	
interface <i>interface-id</i>	(Optional) Display the MAC ACLs configured on a specific interface. Valid interfaces are physical ports and port channels; the port-channel range is 1 to 48 (available only in privileged EXEC mode).
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show mac-access group** user EXEC command. In this display, port 2 has the MAC access list *macl_e1* applied; no MAC ACLs are applied to other interfaces.

```
Switch> show mac access-group
Interface GigabitEthernet0/1:
  Inbound access-list is not set
Interface GigabitEthernet0/2:
  Inbound access-list is macl_e1
Interface GigabitEthernet0/3:
  Inbound access-list is not set
Interface GigabitEthernet0/4:
  Inbound access-list is not set
```

<output truncated>

This is an example of output from the **show mac access-group interface gigabitethernet0/1** command:

```
Switch# show mac access-group interface gigabitethernet0/1
Interface GigabitEthernet0/1:
  Inbound access-list is macl_e1
```

■ show mac access-group

Related Commands

Command	Description
mac access-group	Applies a MAC access group to an interface.

show mac address-table

Use the **show mac address-table** user EXEC command to display a specific MAC address table static and dynamic entry or the MAC address table static and dynamic entries on a specific interface or VLAN.

```
show mac address-table [ | {begin | exclude | include} expression]
```

Syntax Description		
begin	(Optional)	Display begins with the line that matches the <i>expression</i> .
exclude	(Optional)	Display excludes lines that match the <i>expression</i> .
include	(Optional)	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show mac address-table** command:

```
Switch> show mac address-table
      Mac Address Table
-----
Vlan    Mac Address      Type    Ports
----    -
All     0000.0000.0001   STATIC  CPU
All     0000.0000.0002   STATIC  CPU
All     0000.0000.0003   STATIC  CPU
All     0000.0000.0009   STATIC  CPU
All     0000.0000.0012   STATIC  CPU
All     0180.c200.000b   STATIC  CPU
All     0180.c200.000c   STATIC  CPU
All     0180.c200.000d   STATIC  CPU
All     0180.c200.000e   STATIC  CPU
All     0180.c200.000f   STATIC  CPU
All     0180.c200.0010   STATIC  CPU
1       0030.9441.6327   DYNAMIC Gi0/4
Total Mac Addresses for this criterion: 12
```

Related Commands	Command	Description
	clear mac address-table dynamic	Deletes from the MAC address table a specific dynamic address, all dynamic addresses on a particular interface, or all dynamic addresses on a particular VLAN.
	show mac address-table aging-time	Displays the aging time in all VLANs or the specified VLAN.
	show mac address-table count	Displays the number of addresses present in all VLANs or the specified VLAN.
	show mac address-table dynamic	Displays dynamic MAC address table entries only.
	show mac address-table interface	Displays the MAC address table information for the specified interface.
	show mac address-table notification	Displays the MAC address notification settings for all interfaces or the specified interface.
	show mac address-table static	Displays static MAC address table entries only.
	show mac address-table vlan	Displays the MAC address table information for the specified VLAN.

show mac address-table address

Use the **show mac address-table address** user EXEC command to display MAC address table information for the specified MAC address.

```
show mac address-table address mac-address [interface interface-id] [vlan vlan-id] [ | { begin | exclude | include } expression]
```

Syntax Description		
<i>mac-address</i>		Specify the 48-bit MAC address; the valid format is H.H.H.
interface <i>interface-id</i>		(Optional) Display information for a specific interface. Valid interfaces include physical ports and port channels.
vlan <i>vlan-id</i>		(Optional) Display entries for the specific VLAN only. The range is 1 to 4094.
begin		(Optional) Display begins with the line that matches the <i>expression</i> .
exclude		(Optional) Display excludes lines that match the <i>expression</i> .
include		(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show mac address-table address** command:

```
Switch# show mac address-table address 0002.4b28.c482
      Mac Address Table
-----
Vlan    Mac Address      Type    Ports
----    -
All     0002.4b28.c482  STATIC CPU
Total Mac Addresses for this criterion: 1
```

Related Commands	Command	Description
	show mac address-table aging-time	Displays the aging time in all VLANs or the specified VLAN.
	show mac address-table count	Displays the number of addresses present in all VLANs or the specified VLAN.
	show mac address-table dynamic	Displays dynamic MAC address table entries only.
	show mac address-table interface	Displays the MAC address table information for the specified interface.
	show mac address-table notification	Displays the MAC address notification settings for all interfaces or the specified interface.
	show mac address-table static	Displays static MAC address table entries only.
	show mac address-table vlan	Displays the MAC address table information for the specified VLAN.

show mac address-table aging-time

Use the **show mac address-table aging-time** user EXEC command to display the aging time of a specific address table instance, all address table instances on a specified VLAN or, if a specific VLAN is not specified, on all VLANs.

```
show mac address-table aging-time [vlan vlan-id] [ | {begin | exclude | include} expression]
```

Syntax Description		
vlan <i>vlan-id</i>	(Optional) Display aging time information for a specific VLAN. The range is 1 to 4094.	
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .	
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .	
 include	(Optional) Display includes lines that match the specified <i>expression</i> .	
<i>expression</i>	Expression in the output to use as a reference point.	

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines If no VLAN number is specified, the aging time for all VLANs appears. Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show mac address-table aging-time** command:

```
Switch> show mac address-table aging-time
Vlan    Aging Time
----    -
1       300
```

This is an example of output from the **show mac address-table aging-time vlan 10** command:

```
Switch> show mac address-table aging-time vlan 10
Vlan    Aging Time
----    -
10      300
```

Related Commands	Command	Description
	mac address-table aging-time	Sets the length of time that a dynamic entry remains in the MAC address table after the entry is used or updated.
	show mac address-table address	Displays MAC address table information for the specified MAC address.
	show mac address-table count	Displays the number of addresses present in all VLANs or the specified VLAN.
	show mac address-table dynamic	Displays dynamic MAC address table entries only.
	show mac address-table interface	Displays the MAC address table information for the specified interface.
	show mac address-table notification	Displays the MAC address notification settings for all interfaces or the specified interface.
	show mac address-table static	Displays static MAC address table entries only.
	show mac address-table vlan	Displays the MAC address table information for the specified VLAN.

show mac address-table count

Use the **show mac address-table count** user EXEC command to display the number of addresses present in all VLANs or the specified VLAN.

```
show mac address-table count [vlan vlan-id] [ | {begin | exclude | include} expression]
```

Syntax Description	vlan <i>vlan-id</i>	(Optional) Display the number of addresses for a specific VLAN. The range is 1 to 4094.
	begin	(Optional) Display begins with the line that matches the <i>expression</i> .
	exclude	(Optional) Display excludes lines that match the <i>expression</i> .
	include	(Optional) Display includes lines that match the specified <i>expression</i> .
	<i>expression</i>	Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines If no VLAN number is specified, the address count for all VLANs appears. Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show mac address-table count** command:

```
Switch# show mac address-table count
Mac Entries for Vlan : 1
-----
Dynamic Address Count : 2
Static Address Count : 0
Total Mac Addresses : 2
```

Related Commands	Command	Description
	show mac address-table address	Displays MAC address table information for the specified MAC address.
	show mac address-table aging-time	Displays the aging time in all VLANs or the specified VLAN.
	show mac address-table dynamic	Displays dynamic MAC address table entries only.
	show mac address-table interface	Displays the MAC address table information for the specified interface.
	show mac address-table notification	Displays the MAC address notification settings for all interfaces or the specified interface.
	show mac address-table static	Displays static MAC address table entries only.
	show mac address-table vlan	Displays the MAC address table information for the specified VLAN.

show mac address-table dynamic

Use the **show mac address-table dynamic** user EXEC command to display only dynamic MAC address table entries.

```
show mac address-table dynamic [address mac-address] [interface interface-id] [vlan vlan-id]
[ | {begin | exclude | include} expression]
```

Syntax Description	
address <i>mac-address</i>	(Optional) Specify a 48-bit MAC address; the valid format is H.H.H (available in privileged EXEC mode only).
interface <i>interface-id</i>	(Optional) Specify an interface to match; valid <i>interfaces</i> include physical ports and port channels.
vlan <i>vlan-id</i>	(Optional) Display entries for a specific VLAN; the range is 1 to 4094.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes	
User EXEC	

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show mac address-table dynamic** command:

```
Switch> show mac address-table dynamic
      Mac Address Table
-----
Vlan    Mac Address      Type    Ports
----    -
1       0030.b635.7862   DYNAMIC Gi0/2
1       00b0.6496.2741   DYNAMIC Gi0/2
Total Mac Addresses for this criterion: 2
```

Related Commands	Command	Description
	clear mac address-table dynamic	Deletes from the MAC address table a specific dynamic address, all dynamic addresses on a particular interface, or all dynamic addresses on a particular VLAN.
	show mac address-table address	Displays MAC address table information for the specified MAC address.
	show mac address-table aging-time	Displays the aging time in all VLANs or the specified VLAN.
	show mac address-table count	Displays the number of addresses present in all VLANs or the specified VLAN.
	show mac address-table interface	Displays the MAC address table information for the specified interface.
	show mac address-table static	Displays static MAC address table entries only.
	show mac address-table vlan	Displays the MAC address table information for the specified VLAN.

show mac address-table interface

Use the **show mac address-table interface** user command to display the MAC address table information for the specified interface in the specified VLAN.

```
show mac address-table interface interface-id [vlan vlan-id] [| begin | exclude | include ]
expression]
```

Syntax Description		
<i>interface-id</i>		Specify an interface type; valid interfaces include physical ports and port channels.
vlan <i>vlan-id</i>		(Optional) Display entries for a specific VLAN; the range is 1 to 4094.
 begin		(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude		(Optional) Display excludes lines that match the <i>expression</i> .
 include		(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show mac address-table interface** command:

```
Switch> show mac address-table interface gigabitethernet0/2
      Mac Address Table
-----
Vlan    Mac Address      Type    Ports
----    -
1       0030.b635.7862   DYNAMIC Gi0/2
1       00b0.6496.2741   DYNAMIC Gi0/2
Total Mac Addresses for this criterion: 2
```

Related Commands	Command	Description
	show mac address-table address	Displays MAC address table information for the specified MAC address.
	show mac address-table aging-time	Displays the aging time in all VLANs or the specified VLAN.
	show mac address-table count	Displays the number of addresses present in all VLANs or the specified VLAN.
	show mac address-table dynamic	Displays dynamic MAC address table entries only.
	show mac address-table notification	Displays the MAC address notification settings for all interfaces or the specified interface.
	show mac address-table static	Displays static MAC address table entries only.
	show mac address-table vlan	Displays the MAC address table information for the specified VLAN.

show mac address-table move update

Use the **show mac address-table move update** user EXEC command to display the MAC address-table move update information on the switch.

```
show mac address-table move update [ | {begin | exclude | include} expression]
```

Syntax Description		
begin	(Optional)	Display begins with the line that matches the expression.
exclude	(Optional)	Display excludes lines that match the expression.
include	(Optional)	Display includes lines that match the specified expression.
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.2(25)SED	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain output do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show mac address-table move update** command:

```
Switch> show mac address-table move update
Switch-ID : 010b.4630.1780
Dst mac-address : 0180.c200.0010
Vlans/Macs supported : 1023/8320
Default/Current settings: Rcv Off/On, Xmt Off/On
Max packets per min : Rcv 40, Xmt 60
Rcv packet count : 10
Rcv conforming packet count : 5
Rcv invalid packet count : 0
Rcv packet count this min : 0
Rcv threshold exceed count : 0
Rcv last sequence# this min : 0
Rcv last interface : Po2
Rcv last src-mac-address : 0003.fd6a.8701
Rcv last switch-ID : 0303.fd63.7600
Xmt packet count : 0
Xmt packet count this min : 0
Xmt threshold exceed count : 0
Xmt pak buf unavail cnt : 0
Xmt last interface : None
switch#
```

show mac address-table move update

Related Commands	Command	Description
	clear mac address-table move update	Clears the MAC address-table move update counters.
	mac address-table move update {receive transmit}	Configures MAC address-table move update on the switch.

show mac address-table notification

Use the **show mac address-table notification** user EXEC command to display the MAC address notification settings for all interfaces or the specified interface.

```
show mac address-table notification [interface [interface-id]] [ | {begin | exclude | include}
expression]
```

Syntax Description		
interface	(Optional) Display information for all interfaces. Valid interfaces include physical ports and port channels.	
<i>interface-id</i>	(Optional) Display information for the specified interface. Valid interfaces include physical ports and port channels.	
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .	
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .	
 include	(Optional) Display includes lines that match the specified <i>expression</i> .	
<i>expression</i>	Expression in the output to use as a reference point.	

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Use the **show mac address-table notification** command without any keywords to display whether the feature is enabled or disabled, the MAC notification interval, the maximum number of entries allowed in the history table, and the history table contents.

Use the **interface** keyword to display the flags for all interfaces. If the *interface-id* is included, only the flags for that interface appear.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show mac address-table notification** command:

```
Switch> show mac address-table notification
MAC Notification Feature is Enabled on the switch
Interval between Notification Traps : 60 secs
Number of MAC Addresses Added : 4
Number of MAC Addresses Removed : 4
Number of Notifications sent to NMS : 3
Maximum Number of entries configured in History Table : 100
Current History Table Length : 3
MAC Notification Traps are Enabled
History Table contents
-----
History Index 0, Entry Timestamp 1032254, Despatch Timestamp 1032254
MAC Changed Message :
Operation: Added   Vlan: 2       MAC Addr: 0000.0000.0001 Module: 0   Port: 1

History Index 1, Entry Timestamp 1038254, Despatch Timestamp 1038254
MAC Changed Message :
Operation: Added   Vlan: 2       MAC Addr: 0000.0000.0000 Module: 0   Port: 1
Operation: Added   Vlan: 2       MAC Addr: 0000.0000.0002 Module: 0   Port: 1
Operation: Added   Vlan: 2       MAC Addr: 0000.0000.0003 Module: 0   Port: 1

History Index 2, Entry Timestamp 1074254, Despatch Timestamp 1074254
MAC Changed Message :
Operation: Deleted Vlan: 2       MAC Addr: 0000.0000.0000 Module: 0   Port: 1
Operation: Deleted Vlan: 2       MAC Addr: 0000.0000.0001 Module: 0   Port: 1
Operation: Deleted Vlan: 2       MAC Addr: 0000.0000.0002 Module: 0   Port: 1
Operation: Deleted Vlan: 2       MAC Addr: 0000.0000.0003 Module: 0   Port: 1
```

Related Commands

Command	Description
clear mac address-table notification	Clears the MAC address notification global counters.
show mac address-table address	Displays MAC address table information for the specified MAC address.
show mac address-table aging-time	Displays the aging time in all VLANs or the specified VLAN.
show mac address-table count	Displays the number of addresses present in all VLANs or the specified VLAN.
show mac address-table dynamic	Displays dynamic MAC address table entries only.
show mac address-table interface	Displays the MAC address table information for the specified interface.
show mac address-table static	Displays static MAC address table entries only.
show mac address-table vlan	Displays the MAC address table information for the specified VLAN.

show mac address-table static

Use the **show mac address-table static** user EXEC command to display only static MAC address table entries.

```
show mac address-table static [address mac-address] [interface interface-id] [vlan vlan-id]
[ | {begin | exclude | include} expression]
```

Syntax Description	
address <i>mac-address</i>	(Optional) Specify a 48-bit MAC address; the valid format is H.H.H (available in privileged EXEC mode only).
interface <i>interface-id</i>	(Optional) Specify an interface to match; valid <i>interfaces</i> include physical ports and port channels.
vlan <i>vlan-id</i>	(Optional) Display addresses for a specific VLAN. The range is 1 to 4094.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show mac address-table static** command:

```
Switch> show mac address-table static

          Mac Address Table
-----
Vlan    Mac Address      Type    Ports
----    -
All     0100.0ccc.cccc  STATIC  CPU
All     0180.c200.0000  STATIC  CPU
All     0100.0ccc.cccd  STATIC  CPU
All     0180.c200.0001  STATIC  CPU
All     0180.c200.0004  STATIC  CPU
All     0180.c200.0005  STATIC  CPU
4       0001.0002.0004  STATIC  Drop
6       0001.0002.0007  STATIC  Drop
Total Mac Addresses for this criterion: 8
```

Related Commands

Command	Description
mac address-table static	Adds static addresses to the MAC address table.
mac address-table static drop	Enables unicast MAC address filtering and configures the switch to drop traffic with a specific source or destination MAC address.
show mac address-table address	Displays MAC address table information for the specified MAC address.
show mac address-table aging-time	Displays the aging time in all VLANs or the specified VLAN.
show mac address-table count	Displays the number of addresses present in all VLANs or the specified VLAN.
show mac address-table dynamic	Displays dynamic MAC address table entries only.
show mac address-table interface	Displays the MAC address table information for the specified interface.
show mac address-table notification	Displays the MAC address notification settings for all interfaces or the specified interface.
show mac address-table vlan	Displays the MAC address table information for the specified VLAN.

show mac address-table vlan

Use the **show mac address-table vlan** user EXEC command to display the MAC address table information for the specified VLAN.

```
show mac address-table vlan vlan-id [ | {begin | exclude | include} expression ]
```

Syntax Description	
<i>vlan-id</i>	(Optional) Display addresses for a specific VLAN. The range is 1 to 4094.
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show mac address-table vlan 1** command:

```
Switch> show mac address-table vlan 1
      Mac Address Table
-----
Vlan    Mac Address      Type    Ports
----    -
1       0100.0ccc.cccc  STATIC CPU
1       0180.c200.0000  STATIC CPU
1       0100.0ccc.cccd  STATIC CPU
1       0180.c200.0001  STATIC CPU
1       0180.c200.0002  STATIC CPU
1       0180.c200.0003  STATIC CPU
1       0180.c200.0005  STATIC CPU
1       0180.c200.0006  STATIC CPU
1       0180.c200.0007  STATIC CPU
Total Mac Addresses for this criterion: 9
```

Related Commands	Command	Description
	show mac address-table address	Displays MAC address table information for the specified MAC address.
	show mac address-table aging-time	Displays the aging time in all VLANs or the specified VLAN.
	show mac address-table count	Displays the number of addresses present in all VLANs or the specified VLAN.
	show mac address-table dynamic	Displays dynamic MAC address table entries only.
	show mac address-table interface	Displays the MAC address table information for the specified interface.
	show mac address-table notification	Displays the MAC address notification settings for all interfaces or the specified interface.
	show mac address-table static	Displays static MAC address table entries only.

show mls qos

Use the **show mls qos** user EXEC command to display global quality of service (QoS) configuration information.

```
show mls qos [ | {begin | exclude | include} expression]
```

Syntax Description		
begin	(Optional)	Display begins with the line that matches the <i>expression</i> .
exclude	(Optional)	Display excludes lines that match the <i>expression</i> .
include	(Optional)	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes	
User EXEC	

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	
Expressions are case sensitive. For example, if you enter exclude output , the lines that contain <i>output</i> do not appear, but the lines that contain <i>Output</i> appear.	

Examples	
This is an example of output from the show mls qos command when QoS is enabled and Differentiated Services Code Point (DSCP) transparency is disabled:	

```
Switch> show mls qos
QoS is enabled
QoS ip packet dscp rewrite is disabled
```

This is an example of output from the **show mls qos** command when QoS is enabled and DSCP transparency is enabled:

```
Switch> show mls qos
QoS is enabled
QoS ip packet dscp rewrite is enabled
```

Related Commands	Command	Description
	mls qos	Enables QoS for the entire switch.

show mls qos aggregate-policer

Use the **show mls qos aggregate-policer** user EXEC command to display the quality of service (QoS) aggregate policer configuration. A policer defines a maximum permissible rate of transmission, a maximum burst size for transmissions, and an action to take if either maximum is exceeded.

```
show mls qos aggregate-policer [aggregate-policer-name] [ | { begin | exclude | include }
expression ]
```

Syntax Description	<i>aggregate-policer-name</i>	(Optional) Display the policer configuration for the specified name.
	begin	(Optional) Display begins with the line that matches the <i>expression</i> .
	exclude	(Optional) Display excludes lines that match the <i>expression</i> .
	include	(Optional) Display includes lines that match the specified <i>expression</i> .
	<i>expression</i>	Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show mls qos aggregate-policer** command:

```
Switch> show mls qos aggregate-policer policer1
aggregate-policer policer1 1000000 2000000 exceed-action drop
Not used by any policy map
```

Related Commands	Command	Description
	mls qos aggregate-policer	Defines policer parameters that can be shared by multiple classes within a policy map.

show mls qos input-queue

Use the **show mls qos input-queue** user EXEC command to display quality of service (QoS) settings for the ingress queues.

```
show mls qos input-queue [ | {begin | exclude | include} expression]
```

Syntax Description		
begin	(Optional)	Display begins with the line that matches the <i>expression</i> .
exclude	(Optional)	Display excludes lines that match the <i>expression</i> .
include	(Optional)	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes	
User EXEC	

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	
Expressions are case sensitive. For example, if you enter exclude output , the lines that contain <i>output</i> do not appear, but the lines that contain <i>Output</i> appear.	

Examples	
This is an example of output from the show mls qos input-queue command:	

```
Switch> show mls qos input-queue
Queue      :      1      2
-----
buffers    :      90     10
bandwidth  :       4      4
priority   :       0     10
threshold1 :     100    100
threshold2 :     100    100
```

Related Commands

Command	Description
mls qos srr-queue input bandwidth	Assigns shaped round robin (SRR) weights to an ingress queue.
mls qos srr-queue input buffers	Allocates the buffers between the ingress queues.
mls qos srr-queue input cos-map	Maps assigned class of service (CoS) values to an ingress queue and assigns CoS values to a queue and to a threshold ID.
mls qos srr-queue input dscp-map	Maps assigned Differentiated Services Code Point (DSCP) values to an ingress queue and assigns DSCP values to a queue and to a threshold ID.
mls qos srr-queue input priority-queue	Configures the ingress priority queue and guarantees bandwidth.
mls qos srr-queue input threshold	Assigns weighted tail-drop (WTD) threshold percentages to an ingress queue.

show mls qos interface

Use the **show mls qos interface** user EXEC command to display quality of service (QoS) information at the port level.

```
show mls qos interface [interface-id] [buffers | queueing | statistics]
[ | {begin | exclude | include} expression]
```

Syntax Description

<i>interface-id</i>	(Optional) Display QoS information for the specified port. Valid interfaces include physical ports.
buffers	(Optional) Display the buffer allocation among the queues.
queueing	(Optional) Display the queueing strategy (shared or shaped) and the weights corresponding to the queues.
statistics	(Optional) Display statistics for sent and received Differentiated Services Code Points (DSCPs) and class of service (CoS) values, the number of packets enqueued or dropped per egress queue, and the number of in-profile and out-of-profile packets for each policer.
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.



Note

Though visible in the command-line help string, the **policers** keyword is not supported.

Command Modes

User EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show mls qos interface *interface-id*** command when VLAN-based QoS is enabled:

```
Switch> show mls qos interface gigabitethernet0/1
GigabitEthernet0/1
trust state:not trusted
trust mode:not trusted
trust enabled flag:ena
COS override:dis
default COS:0
DSCP Mutation Map:Default DSCP Mutation Map
Trust device:none
qos mode:vlan-based
```

This is an example of output from the **show mls qos interface *interface-id*** command when VLAN-based QoS is disabled:

```
Switch> show mls qos interface gigabitethernet0/2
GigabitEthernet0/2
trust state:not trusted
trust mode:not trusted
trust enabled flag:ena
COS override:dis
default COS:0
DSCP Mutation Map:Default DSCP Mutation Map
Trust device:none
qos mode:port-based
```

This is an example of output from the **show mls qos interface *interface-id* buffers** command:

```
Switch> show mls qos interface gigabitethernet0/2 buffers
GigabitEthernet0/2
The port is mapped to qset : 1
The allocations between the queues are : 25 25 25 25
```

This is an example of output from the **show mls qos interface *interface-id* queueing** command. The egress expedite queue overrides the configured shaped round robin (SRR) weights.

```
Switch> show mls qos interface gigabitethernet0/2 queueing
GigabitEthernet0/2
Egress Priority Queue :enabled
Shaped queue weights (absolute) : 25 0 0 0
Shared queue weights : 25 25 25 25
The port bandwidth is limited to: 100%
The port is mapped to qset : 1
```

This is an example of output from the **show mls qos interface *interface-id* statistics** command. [Table 2-29](#) describes the fields in this display.

```
Switch> show mls qos interface gigabitethernet0/2 statistics
GigabitEthernet0/2
```

```

dscp: incoming
-----
 0 - 4 :      4213      0      0      0      0
 5 - 9 :         0      0      0      0      0
10 - 14 :        0      0      0      0      0
15 - 19 :        0      0      0      0      0
20 - 24 :        0      0      0      0      0
25 - 29 :        0      0      0      0      0
30 - 34 :        0      0      0      0      0
35 - 39 :        0      0      0      0      0
40 - 44 :        0      0      0      0      0
45 - 49 :        0      0      0      6      0
50 - 54 :        0      0      0      0      0
55 - 59 :        0      0      0      0      0
60 - 64 :        0      0      0      0      0

dscp: outgoing
-----
 0 - 4 :    363949      0      0      0      0
 5 - 9 :         0      0      0      0      0
10 - 14 :        0      0      0      0      0
15 - 19 :        0      0      0      0      0
20 - 24 :        0      0      0      0      0
25 - 29 :        0      0      0      0      0
30 - 34 :        0      0      0      0      0
35 - 39 :        0      0      0      0      0
40 - 44 :        0      0      0      0      0
45 - 49 :        0      0      0      0      0
50 - 54 :        0      0      0      0      0
55 - 59 :        0      0      0      0      0
60 - 64 :        0      0      0      0      0

cos: incoming
-----
 0 - 4 :    132067      0      0      0      0
 5 - 9 :         0      0      0      0      0

cos: outgoing
-----
 0 - 4 :    739155      0      0      0      0
 5 - 9 :         90      0      0      0      0

Policer: Inprofile:      0 OutofProfile:      0
```

Table 2-29 show mls qos interface statistics Field Descriptions

Field		Description
DSCP	incoming	Number of packets received for each DSCP value.
	outgoing	Number of packets sent for each DSCP value.
CoS	incoming	Number of packets received for each CoS value.
	outgoing	Number of packets sent for each CoS value.
Policer	Inprofile	Number of in profile packets for each policer.
	Outofprofile	Number of out-of-profile packets for each policer.

Related Commands	Command	Description
	mls qos queue-set output buffers	Allocates buffers to a queue-set.
	mls qos queue-set output threshold	Configures the weighted tail-drop (WTD) thresholds, guarantees the availability of buffers, and configures the maximum memory allocation to a queue-set.
	mls qos srr-queue input bandwidth	Assigns SRR weights to an ingress queue.
	mls qos srr-queue input buffers	Allocates the buffers between the ingress queues.
	mls qos srr-queue input cos-map	Maps CoS values to an ingress queue or maps CoS values to a queue and to a threshold ID.
	mls qos srr-queue input dscp-map	Maps DSCP values to an ingress queue or maps DSCP values to a queue and to a threshold ID.
	mls qos srr-queue input priority-queue	Configures the ingress priority queue and guarantees bandwidth.
	mls qos srr-queue input threshold	Assigns WTD threshold percentages to an ingress queue.
	mls qos srr-queue output cos-map	Maps CoS values to an egress queue or maps CoS values to a queue and to a threshold ID.
	mls qos srr-queue output dscp-map	Maps DSCP values to an egress queue or maps DSCP values to a queue and to a threshold ID.
	policy-map	Creates or modifies a policy map.
	priority-queue	Enables the egress expedite queue on a port.
	queue-set	Maps a port to a queue-set.
	srr-queue bandwidth limit	Limits the maximum output on a port.
	srr-queue bandwidth shape	Assigns the shaped weights and enables bandwidth shaping on the four egress queues mapped to a port.
	srr-queue bandwidth share	Assigns the shared weights and enables bandwidth sharing on the four egress queues mapped to a port.

show mls qos maps

Use the **show mls qos maps** user EXEC command to display quality of service (QoS) mapping information. During classification, QoS uses the mapping tables to represent the priority of the traffic and to derive a corresponding class of service (CoS) or Differentiated Services Code Point (DSCP) value from the received CoS, DSCP, or IP precedence value.

```
show mls qos maps [cos-dscp | cos-input-q | cos-output-q | dscp-cos | dscp-input-q |
dscp-mutation dscp-mutation-name | dscp-output-q | ip-prec-dscp | policed-dscp] [ | {begin
| exclude | include} expression]
```

Syntax Description		
cos-dscp	(Optional)	Display class of service (CoS)-to-DSCP map.
cos-input-q	(Optional)	Display the CoS input queue threshold map.
cos-output-q	(Optional)	Display the CoS output queue threshold map.
dscp-cos	(Optional)	Display DSCP-to-CoS map.
dscp-input-q	(Optional)	Display the DSCP input queue threshold map.
dscp-mutation <i>dscp-mutation-name</i>	(Optional)	Display the specified DSCP-to-DSCP-mutation map.
dscp-output-q	(Optional)	Display the DSCP output queue threshold map.
ip-prec-dscp	(Optional)	Display the IP-precedence-to-DSCP map.
policed-dscp	(Optional)	Display the policed-DSCP map.
 begin	(Optional)	Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional)	Display excludes lines that match the <i>expression</i> .
 include	(Optional)	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

The policed-DSCP, DSCP-to-CoS, and the DSCP-to-DSCP-mutation maps appear as a matrix. The d1 column specifies the most-significant digit in the DSCP. The d2 row specifies the least-significant digit in the DSCP. The intersection of the d1 and d2 values provides the policed-DSCP, the CoS, or the mutated-DSCP value. For example, in the DSCP-to-CoS map, a DSCP value of 43 corresponds to a CoS value of 5.

The DSCP input queue threshold and the DSCP output queue threshold maps appear as a matrix. The d1 column specifies the most-significant digit of the DSCP number. The d2 row specifies the least-significant digit in the DSCP number. The intersection of the d1 and the d2 values provides the queue ID and threshold ID. For example, in the DSCP input queue threshold map, a DSCP value of 43 corresponds to queue 2 and threshold 1 (02-01).

The CoS input queue threshold and the CoS output queue threshold maps show the CoS value in the top row and the corresponding queue ID and threshold ID in the second row. For example, in the CoS input queue threshold map, a CoS value of 5 corresponds to queue 2 and threshold 1 (2-1).

Examples

This is an example of output from the **show mls qos maps** command:

```
Switch> show mls qos maps
Policed-dscp map:
  d1 : d2 0  1  2  3  4  5  6  7  8  9
-----
  0 :   00 01 02 03 04 05 06 07 08 09
  1 :   10 11 12 13 14 15 16 17 18 19
  2 :   20 21 22 23 24 25 26 27 28 29
  3 :   30 31 32 33 34 35 36 37 38 39
  4 :   40 41 42 43 44 45 46 47 48 49
  5 :   50 51 52 53 54 55 56 57 58 59
  6 :   60 61 62 63

Dscp-cos map:
  d1 : d2 0  1  2  3  4  5  6  7  8  9
-----
  0 :   00 00 00 00 00 00 00 00 01 01
  1 :   01 01 01 01 01 01 02 02 02 02
  2 :   02 02 02 02 03 03 03 03 03 03
  3 :   03 03 04 04 04 04 04 04 04 04
  4 :   05 05 05 05 05 05 05 05 06 06
  5 :   06 06 06 06 06 06 07 07 07 07
  6 :   07 07 07 07

Cos-dscp map:
  cos:  0  1  2  3  4  5  6  7
-----
  dscp:  0  8 16 24 32 40 48 56

IpPrecedence-dscp map:
  ipprec:  0  1  2  3  4  5  6  7
-----
  dscp:  0  8 16 24 32 40 48 56

Dscp-outputq-threshold map:
  d1 :d2  0  1  2  3  4  5  6  7  8  9
-----
  0 :   02-01 02-01 02-01 02-01 02-01 02-01 02-01 02-01 02-01 02-01 02-01
  1 :   02-01 02-01 02-01 02-01 02-01 02-01 02-01 03-01 03-01 03-01 03-01
  2 :   03-01 03-01 03-01 03-01 03-01 03-01 03-01 03-01 03-01 03-01 03-01
  3 :   03-01 03-01 04-01 04-01 04-01 04-01 04-01 04-01 04-01 04-01 04-01
  4 :   01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01 04-01 04-01
  5 :   04-01 04-01 04-01 04-01 04-01 04-01 04-01 04-01 04-01 04-01 04-01
  6 :   04-01 04-01 04-01 04-01
```



```

Dscp-inputq-threshold map:
d1 :d2  0    1    2    3    4    5    6    7    8    9
-----
0 :    01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01
1 :    01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01
2 :    01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01
3 :    01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01
4 :    02-01 02-01 02-01 02-01 02-01 02-01 02-01 02-01 02-01 01-01
5 :    01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01 01-01
6 :    01-01 01-01 01-01 01-01

Cos-outputq-threshold map:
      cos:  0    1    2    3    4    5    6    7
-----
queue-threshold: 2-1 2-1 3-1 3-1 4-1 1-1 4-1 4-1

Cos-inputq-threshold map:
      cos:  0    1    2    3    4    5    6    7
-----
queue-threshold: 1-1 1-1 1-1 1-1 1-1 2-1 1-1 1-1

Dscp-dscp mutation map:
Default DSCP Mutation Map:
d1 : d2  0    1    2    3    4    5    6    7    8    9
-----
0 :    00 01 02 03 04 05 06 07 08 09
1 :    10 11 12 13 14 15 16 17 18 19
2 :    20 21 22 23 24 25 26 27 28 29
3 :    30 31 32 33 34 35 36 37 38 39
4 :    40 41 42 43 44 45 46 47 48 49
5 :    50 51 52 53 54 55 56 57 58 59
6 :    60 61 62 63

```

Related Commands

Command	Description
mls qos map	Defines the CoS-to-DSCP map, DSCP-to-CoS map, DSCP-to-DSCP-mutation map, IP-precedence-to-DSCP map, and the policed-DSCP map.
mls qos srr-queue input cos-map	Maps CoS values to an ingress queue or maps CoS values to a queue and to a threshold ID.
mls qos srr-queue input dscp-map	Maps DSCP values to an ingress queue or maps DSCP values to a queue and to a threshold ID.
mls qos srr-queue output cos-map	Maps CoS values to an egress queue or maps CoS values to a queue and to a threshold ID.
mls qos srr-queue output dscp-map	Maps DSCP values to an egress queue or maps DSCP values to a queue and to a threshold ID.

show mls qos queue-set

Use the **show mls qos queue-set** user EXEC command to display quality of service (QoS) settings for the egress queues.

```
show mls qos queue-set [qset-id] [ | {begin | exclude | include} expression]
```

Syntax Description		
<i>qset-id</i>	(Optional) ID of the queue-set. Each port belongs to a queue-set, which defines all the characteristics of the four egress queues per port. The range is 1 to 2.	
begin	(Optional) Display begins with the line that matches the <i>expression</i> .	
exclude	(Optional) Display excludes lines that match the <i>expression</i> .	
include	(Optional) Display includes lines that match the specified <i>expression</i> .	
<i>expression</i>	Expression in the output to use as a reference point.	

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.nway

Examples This is an example of output from the **show mls qos queue-set** command:

```
Switch> show mls qos queue-set
Queueset: 1
Queue   :      1      2      3      4
-----
buffers  :      25     25     25     25
threshold1:    100    200    100    100
threshold2:    100    200    100    100
reserved  :      50     50     50     50
maximum  :     400    400    400    400
Queueset: 2
Queue   :      1      2      3      4
-----
buffers  :      25     25     25     25
threshold1:    100    200    100    100
threshold2:    100    200    100    100
reserved  :      50     50     50     50
maximum  :     400    400    400    400
```

Related Commands

Command	Description
mls qos queue-set output buffers	Allocates buffers to the queue-set.
mls qos queue-set output threshold	Configures the weighted tail-drop (WTD) thresholds, guarantees the availability of buffers, and configures the maximum memory allocation of the queue-set.

show mls qos vlan

Use the **show mls qos vlan** user EXEC command to display the policy maps attached to a switch virtual interface (SVI).

```
show mls qos vlan vlan-id [ | {begin | exclude | include} expression]
```

Syntax Description		
<i>vlan-id</i>		Specify the VLAN ID of the SVI to display the policy maps. The range is 1 to 4094.
begin		(Optional) Display begins with the line that matches the <i>expression</i> .
exclude		(Optional) Display excludes lines that match the <i>expression</i> .
include		(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes	
	User EXEC

Command History	Release	Modification
	12.2(25)SE	This command was introduced.

Usage Guidelines

The output from the **show mls qos vlan** command is meaningful only when VLAN-based quality of service (QoS) is enabled and when hierarchical policy maps are configured.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show mls qos vlan** command:

```
Switch> show mls qos vlan 10
Vlan10
Attached policy-map for Ingress:pm-test-pm-2
```

Related Commands	Command	Description
	policy-map	Creates or modifies a policy map that can be attached to multiple ports and enters policy-map configuration mode.

show monitor

Use the **show monitor** user EXEC command to display information about all Switched Port Analyzer (SPAN) and Remote SPAN (RSPAN) sessions on the switch. Use the command with keywords to show a specific session, all sessions, all local sessions, or all remote sessions.

```
show monitor [session {session_number | all | local | range list | remote} [detail]] [ | {begin |
exclude | include} expression]
```

Syntax Description	
session	(Optional) Display information about specified SPAN sessions.
session_number	Specify the number of the SPAN or RSPAN session. The range is 1 to 66.
all	Display all SPAN sessions.
local	Display only local SPAN sessions.
range list	Display a range of SPAN sessions, where <i>list</i> is the range of valid sessions, either a single session or a range of sessions described by two numbers, the lower one first, separated by a hyphen. Do not enter any spaces between comma-separated parameters or in hyphen-specified ranges. Note This keyword is available only in privileged EXEC mode.
remote	Display only remote SPAN sessions.
detail	(Optional) Display detailed information about the specified sessions.
 begin	Display begins with the line that matches the <i>expression</i> .
 exclude	Display excludes lines that match the <i>expression</i> .
 include	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

The output is the same for the **show monitor** command and the **show monitor session all** command.

Examples

This is an example of output for the **show monitor** user EXEC command:

```
Switch# show monitor
Session 1
-----
Type : Local Session
Source Ports :
RX Only : Fa0/1
Both : Fa0/2-3,Fa0/5-6
Destination Ports : Fa0/20
Encapsulation : Replicate
Ingress : Disabled
```

```
Session 2
-----
Type : Remote Source Session
Source VLANs :
TX Only : 10
Both : 1-9
Dest RSPAN VLAN : 105
```

This is an example of output for the **show monitor** user EXEC command for local SPAN source session 1:

```
Switch# show monitor session 1
Session 1
-----
Type : Local Session
Source Ports :
RX Only : Fa0/1
Both : Fa0/2-3,Fa0/5-6
Destination Ports : Fa0/20
Encapsulation : Replicate
Ingress : Disabled
```

This is an example of output for the **show monitor session all** user EXEC command when ingress traffic forwarding is enabled:

```
Switch# show monitor session all
Session 1
-----
Type : Local Session
Source Ports :
Both : Fa0/2
Destination Ports : Fa0/3
Encapsulation : Native
Ingress : Enabled, default VLAN = 5
Ingress encaps : DOT1Q

Session 2
-----
Type : Local Session
Source Ports :
Both : Fa0/8
Destination Ports : Fa0/12
Encapsulation : Replicate
Ingress : Enabled, default VLAN = 4
Ingress encaps : Untagged
```

Related Commands

Command	Description
monitor session	Starts or modifies a SPAN or RSPAN session.

show mvr

Use the **show mvr** privileged EXEC command without keywords to display the current Multicast VLAN Registration (MVR) global parameter values, including whether or not MVR is enabled, the MVR multicast VLAN, the maximum query response time, the number of multicast groups, and the MVR mode (dynamic or compatible).

```
show mvr [ | {begin | exclude | include} expression]
```

Syntax Description	
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show mvr** command:

```
Switch# show mvr
MVR Running: TRUE
MVR multicast VLAN: 1
MVR Max Multicast Groups: 256
MVR Current multicast groups: 0
MVR Global query response time: 5 (tenths of sec)
MVR Mode: compatible
```

In the preceding display, the maximum number of multicast groups is fixed at 256. The MVR mode is either compatible (for interoperability with Catalyst 2900 XL and Catalyst 3500 XL switches) or dynamic (where operation is consistent with IGMP snooping operation and dynamic MVR membership on source ports is supported).

Related Commands	Command	Description
	mvr (global configuration)	Enables and configures multicast VLAN registration on the switch.
	mvr (interface configuration)	Configures MVR ports.
	show mvr interface	Displays the configured MVR interfaces, status of the specified interface, or all multicast groups to which the interface belongs when the interface and members keywords are appended to the command.
	show mvr members	Displays all ports that are members of an MVR multicast group or, if there are no members, means the group is inactive.

show mvr interface

Use the **show mvr interface** privileged EXEC command without keywords to display the Multicast VLAN Registration (MVR) receiver and source ports. Use the command with keywords to display MVR parameters for a specific receiver port.

```
show mvr interface [interface-id [members [vlan vlan-id]]] [ | {begin | exclude | include}
                    expression]
```

Syntax Description

<i>interface-id</i>	(Optional) Display MVR type, status, and Immediate Leave setting for the interface. Valid interfaces include physical ports (including type, module, and port number).
members	(Optional) Display all MVR groups to which the specified interface belongs.
vlan <i>vlan-id</i>	(Optional) Display all MVR group members on this VLAN. The range is 1 to 4094.
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

If the entered port identification is a non-MVR port or a source port, the command returns an error message. For receiver ports, it displays the port type, per port status, and Immediate-Leave setting.

If you enter the **members** keyword, all MVR group members on the interface appear. If you enter a VLAN ID, all MVR group members in the VLAN appear.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show mvr interface** command:

```
Switch# show mvr interface
Port      Type      Status      Immediate Leave
----      -
Gi0/1     SOURCE    ACTIVE/UP   DISABLED
Gi0/2     RECEIVER  ACTIVE/DOWN DISABLED
```

In the preceding display, Status is defined as follows:

- Active means the port is part of a VLAN.
- Up/Down means that the port is forwarding/nonforwarding.
- Inactive means that the port is not yet part of any VLAN.

This is an example of output from the **show mvr interface** command for a specified port:

```
Switch# show mvr interface gigabitethernet0/2
Type: RECEIVER Status: ACTIVE Immediate Leave: DISABLED
```

This is an example of output from the **show mvr interface interface-id members** command:

```
Switch# show mvr interface gigabitethernet0/2 members
239.255.0.0      DYNAMIC ACTIVE
239.255.0.1      DYNAMIC ACTIVE
239.255.0.2      DYNAMIC ACTIVE
239.255.0.3      DYNAMIC ACTIVE
239.255.0.4      DYNAMIC ACTIVE
239.255.0.5      DYNAMIC ACTIVE
239.255.0.6      DYNAMIC ACTIVE
239.255.0.7      DYNAMIC ACTIVE
239.255.0.8      DYNAMIC ACTIVE
239.255.0.9      DYNAMIC ACTIVE
```

Related Commands	Command	Description
	mvr (global configuration)	Enables and configures multicast VLAN registration on the switch.
	mvr (interface configuration)	Configures MVR ports.
	show mvr	Displays the global MVR configuration on the switch.
	show mvr members	Displays all receiver ports that are members of an MVR multicast group.

show mvr members

Use the **show mvr members** privileged EXEC command to display all receiver and source ports that are currently members of an IP multicast group.

```
show mvr members [ip-address] [ | {begin | exclude | include} expression]
```

Syntax Description		
	<i>ip-address</i>	(Optional) The IP multicast address. If the address is entered, all receiver and source ports that are members of the multicast group appear. If no address is entered, all members of all Multicast VLAN Registration (MVR) groups are listed. If a group has no members, the group is listed as Inactive.
	 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
	 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
	 include	(Optional) Display includes lines that match the specified <i>expression</i> .
	<i>expression</i>	Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **show mvr members** command applies to receiver and source ports. For MVR-compatible mode, all source ports are members of all multicast groups.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show mvr members** command:

```
Switch# show mvr members
MVR Group IP      Status      Members
-----
239.255.0.1      ACTIVE      Gi0/1(d), Gi0/5(s)
239.255.0.2      INACTIVE      None
239.255.0.3      INACTIVE      None
239.255.0.4      INACTIVE      None
239.255.0.5      INACTIVE      None
239.255.0.6      INACTIVE      None
239.255.0.7      INACTIVE      None
239.255.0.8      INACTIVE      None
239.255.0.9      INACTIVE      None
239.255.0.10     INACTIVE      None

<output truncated>
```

This is an example of output from the **show mvr members** *ip-address* command. It displays the members of the IP multicast group with that address:

```
Switch# show mvr members 239.255.0.2
239.255.003.--22      ACTIVE      Gi0/1 (d), Gi0/2 (d), Gi0/3 (d),
                               Gi0/4 (d), Gi0/5 (s)
```

Related Commands	Command	Description
	mvr (global configuration)	Enables and configures multicast VLAN registration on the switch.
	mvr (interface configuration)	Configures MVR ports.
	show mvr	Displays the global MVR configuration on the switch.
	show mvr interface	Displays the configured MVR interfaces, status of the specified interface, or all multicast groups to which the interface belongs when the members keyword is appended to the command.

show pagp

Use the **show pagp** user EXEC command to display Port Aggregation Protocol (PAgP) channel-group information.

```
show pagp [channel-group-number] { counters | internal | neighbor } [ | { begin | exclude | include } expression]]
```

Syntax Description

<i>channel-group-number</i>	(Optional) Number of the channel group. The range is 1 to 48.
counters	Display traffic information.
internal	Display internal information.
neighbor	Display neighbor information.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	The <i>channel-group-number</i> range was changed from 1 to 12 to 1 to 48.

Usage Guidelines

You can enter any **show pagp** command to display the active channel-group information. To display the nonactive information, enter the **show pagp** command with a channel-group number.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* are appear.

Examples

This is an example of output from the **show pagp 1 counters** command:

```
Switch> show pagp 1 counters
          Information          Flush
Port      Sent   Recv     Sent   Recv
-----
Channel group: 1
  Gi0/1    45    42        0     0
  Gi0/2    45    41        0     0
```

This is an example of output from the **show pagp 1 internal** command:

```
Switch> show pagp 1 internal
Flags: S - Device is sending Slow hello. C - Device is in Consistent state.
      A - Device is in Auto mode.
Timers: H - Hello timer is running.      Q - Quit timer is running.
      S - Switching timer is running.    I - Interface timer is running.
```

Channel group 1

Port	Flags	State	Timers	Hello Interval	Partner Count	PAGP Priority	Learning Method	Group Ifindex
Gi0/1	SC	U6/S7	H	30s	1	128	Any	16
Gi0/2	SC	U6/S7	H	30s	1	128	Any	16

This is an example of output from the **show pagp 1 neighbor** command:

```
Switch> show pagp 1 neighbor
Flags: S - Device is sending Slow hello. C - Device is in Consistent state.
      A - Device is in Auto mode.      P - Device learns on physical port.
```

Channel group 1 neighbors

Port	Partner Name	Partner Device ID	Partner Port	Age	Flags	Partner Group Cap.
Gi0/1	switch-p2	0002.4b29.4600	Gi0/1	9s	SC	10001
Gi0/2	switch-p2	0002.4b29.4600	Gi0/2	24s	SC	10001

Related Commands

Command	Description
clear pagp	Clears PAgP channel-group information.

show parser macro

Use the **show parser macro** user EXEC command to display the parameters for all configured macros or for one macro on the switch.

```
show parser macro [{brief | description [interface interface-id] | name macro-name}] [| {begin
| exclude | include} expression]
```

Syntax	Description
brief	(Optional) Display the name of each macro.
description [<i>interface interface-id</i>]	(Optional) Display all macro descriptions or the description of a specific interface.
name <i>macro-name</i>	(Optional) Display information about a single macro identified by the macro name.
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	The command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is a partial output example from the **show parser macro** command. The output for the Cisco-default macros varies depending on the switch platform and the software image running on the switch:

```
Switch# show parser macro
Total number of macros = 6
-----
Macro name : cisco-global
Macro type : default global
# Enable dynamic port error recovery for link state
# failures
errdisable recovery cause link-flap
errdisable recovery interval 60

<output truncated>
```



```
-----  
Macro name : cisco-desktop  
Macro type : default interface  
# macro keywords $AVID  
# Basic interface - Enable data VLAN only  
# Recommended value for access vlan (AVID) should not be 1  
switchport access vlan $AVID  
switchport mode access  
  
<output truncated>
```

```
-----  
Macro name : cisco-phone  
Macro type : default interface  
# Cisco IP phone + desktop template  
# macro keywords $AVID $VVID  
# VoIP enabled interface - Enable data VLAN  
# and voice VLAN (VVID)  
# Recommended value for access vlan (AVID) should not be 1  
switchport access vlan $AVID  
switchport mode access  
  
<output truncated>
```

```
-----  
Macro name : cisco-switch  
Macro type : default interface  
# macro keywords $NVID  
# Access Uplink to Distribution  
# Do not apply to EtherChannel/Port Group  
# Define unique Native VLAN on trunk ports  
# Recommended value for native vlan (NVID) should not be 1  
switchport trunk native vlan $NVID  
  
<output truncated>
```

```
-----  
Macro name : cisco-router  
Macro type : default interface  
# macro keywords $NVID  
# Access Uplink to Distribution  
# Define unique Native VLAN on trunk ports  
# Recommended value for native vlan (NVID) should not be 1  
switchport trunk native vlan $NVID  
  
<output truncated>
```

```
-----  
Macro name : snmp  
Macro type : customizable  
  
#enable port security, linkup, and linkdown traps  
snmp-server enable traps port-security  
snmp-server enable traps linkup  
snmp-server enable traps linkdown  
#set snmp-server host  
snmp-server host ADDRESS  
#set SNMP trap notifications precedence  
snmp-server ip precedence VALUE  
  
-----
```

This is an example of output from the **show parser macro name** command:

```
Switch# show parser macro name standard-switch10
Macro name : standard-switch10
Macro type : customizable
macro description standard-switch10
# Trust QoS settings on VOIP packets
auto qos voip trust
# Allow port channels to be automatically formed
channel-protocol pagp
```

This is an example of output from the **show parser macro brief** command:

```
Switch# show parser macro brief
default global : cisco-global
default interface: cisco-desktop
default interface: cisco-phone
default interface: cisco-switch
default interface: cisco-router
customizable : snmp
```

This is an example of output from the **show parser macro description** command:

```
Switch# show parser macro description
Global Macro(s): cisco-global
Interface Macro Description(s)
-----
Gi0/1 standard-switch10
Gi0/2 this is test macro
-----
```

This is an example of output from the **show parser macro description interface** command:

```
Switch# show parser macro description interface gigabitethernet0/2
Interface Macro Description
-----
Gi0/2 this is test macro
-----
```

Related Commands

Command	Description
macro apply	Applies a macro on an interface or applies and traces a macro on an interface.
macro description	Adds a description about the macros that are applied to an interface.
macro global	Applies a macro on a switch or applies and traces a macro on a switch.
macro global description	Adds a description about the macros that are applied to the switch.
macro name	Creates a macro.
show running-config	Displays the current operating configuration, including defined macros. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

show policy-map

Use the **show policy-map** user EXEC command to display quality of service (QoS) policy maps, which define classification criteria for incoming traffic. Policy maps can include policers that specify the bandwidth limitations and the action to take if the limits are exceeded.

```
show policy-map [policy-map-name [class class-map-name]] [ | {begin | exclude | include}
expression]
```

Syntax Description		
<i>policy-map-name</i>	(Optional)	Display the specified policy-map name.
class <i>class-map-name</i>	(Optional)	Display QoS policy actions for a individual class.
 begin	(Optional)	Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional)	Display excludes lines that match the <i>expression</i> .
 include	(Optional)	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.



Note

Though visible in the command-line help string, the **control-plane** and **interface** keywords are not supported, and the statistics shown in the display should be ignored.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show policy-map** command:

```
Switch> show policy-map
Policy Map videowizard_policy2
  class videowizard_10-10-10-10
    set dscp 34
    police 100000000 2000000 exceed-action drop

Policy Map mypolicy
  class dscp5
    set dscp 6
```

show policy-map**Related Commands**

Command	Description
policy-map	Creates or modifies a policy map that can be attached to multiple ports to specify a service policy.

show port-security

Use the **show port-security** privileged EXEC command to display port-security settings for an interface or for the switch.

```
show port-security [interface interface-id] [address | vlan] [ | {begin | exclude | include}
expression]
```

Syntax Description	
interface <i>interface-id</i>	(Optional) Display port security settings for the specified interface. Valid interfaces include physical ports (including type, module, and port number).
address	(Optional) Display all secure MAC addresses on all ports or a specified port.
vlan	(Optional) Display port security settings for all VLANs on the specified interface. This keyword is visible only on interfaces that have the switchport mode set to trunk .
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines If you enter the command without keywords, the output includes the administrative and operational status of all secure ports on the switch.

If you enter an *interface-id*, the command displays port security settings for the interface.

If you enter the **address** keyword, the command displays the secure MAC addresses for all interfaces and the aging information for each secure address.

If you enter an *interface-id* and the **address** keyword, the command displays all the MAC addresses for the interface with aging information for each secure address. You can also use this command to display all the MAC addresses for an interface even if you have not enabled port security on it.

If you enter the **vlan** keyword, the command displays the configured maximum and the current number of secure MAC addresses for all VLANs on the interface. This option is visible only on interfaces that have the switchport mode set to **trunk**.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of the output from the **show port-security** command:

```
Switch# show port-security
Secure Port      MaxSecureAddr  CurrentAddr  SecurityViolation  Security Action
              (Count)          (Count)      (Count)
-----
      Gi0/1          1              0              0              Shutdown
-----
Total Addresses in System (excluding one mac per port)      : 1
Max Addresses limit in System (excluding one mac per port) : 6272
```

This is an example of output from the **show port-security interface interface-id** command:

```
Switch# show port-security interface gigabitethernet0/1
Port Security : Enabled
Port status : SecureUp
Violation mode : Shutdown
Maximum MAC Addresses : 1
Total MAC Addresses : 0
Configured MAC Addresses : 0
Aging time : 0 mins
Aging type : Absolute
SecureStatic address aging : Disabled
Security Violation count : 0
```

This is an example of output from the **show port-security address** command:

```
Switch# show port-security address
Secure Mac Address Table
-----
Vlan    Mac Address      Type                Ports    Remaining Age
-----
      1    0006.0700.0800  SecureConfigured   Gi0/2    1
-----
Total Addresses in System (excluding one mac per port)      : 1
Max Addresses limit in System (excluding one mac per port) : 6272
```

This is an example of output from the **show port-security interface gigabitethernet0/2 address** command:

```
Switch# show port-security interface gigabitethernet0/2 address
Secure Mac Address Table
-----
Vlan    Mac Address      Type                Ports    Remaining Age
-----
      1    0006.0700.0800  SecureConfigured   Gi0/2    1
-----
Total Addresses: 1
```

This is an example of output from the **show port-security interface interface-id vlan** command:

```
Switch# show port-security interface gigabitethernet0/2 vlan
Default maximum: not set, using 5120
VLAN Maximum Current
   5 default      1
  10 default      54
  11 default     101
  12 default     101
  13 default     201
  14 default     501
```

Related Commands	Command	Description
	clear port-security	Deletes from the MAC address table a specific type of secure address or all the secure addresses on the switch or an interface.
	switchport port-security	Enables port security on a port, restricts the use of the port to a user-defined group of stations, and configures secure MAC addresses.

show power inline

Use the **show power inline** user EXEC command to display the Power over Ethernet (PoE) status for the specified PoE port or for all PoE ports.

```
show power inline [interface-id | consumption default] [ | {begin | exclude | include} expression]
```

Syntax Description

<i>interface-id</i>	(Optional) Display PoE-related power management information for the specified interface.
consumption default	(Optional) Display the power allocated to devices connected to PoE ports.
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SEC	The consumption default keywords were added.

Usage Guidelines

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain output do not appear, but the lines that contain Output appear.

Examples

This is an example of output from the **show power inline** command. In the display, port 2 is configured as static; power has been pre-allocated to this port, but no powered device is connected. Port 6 is a static port in the power-deny state because its maximum wattage is configured for 10 W. The connected powered device has a reported class maximum wattage for a Class 0 or Class 3 device.

```
Switch> show power inline
Available:370.0(w)  Used:80.6(w)  Remaining:289.4(w)

Interface Admin  Oper      Power   Device          Class Max
          (Watts)
-----
Fa0/1     auto    on        6.3     IP Phone 7910   n/a  15.4
Fa0/2     static off      15.4    n/a
Fa0/3     auto    on        6.3     IP Phone 7910   n/a  15.4
Fa0/4     auto    on        6.3     IP Phone 7960    2   15.4
Fa0/5     static on       15.4    IP Phone 7960    2   15.4
Fa0/6     static power-deny 10.0    n/a          n/a  10.0
Fa0/7     auto    on        6.3     IP Phone 7910   n/a  15.4
<output truncated>
```

This is an example of output from the **show power inline** command on a port:

```
Switch> show power inline fastethernet0/1
```



```

Interface Admin Oper      Power  Device          Class Max
          (Watts)
-----
Fa0/1     auto   on        6.3    IP Phone 7910   n/a   15.4

```

This is an example of output from the **show power inline consumption default** command on all PoE switch ports:

```

Switch> show power inline consumption default
Default PD consumption : 15400 mW

```

Table 2-30 *show power inline interface Field Descriptions*

Field	Description
Admin	Administration mode: auto, off, static
Oper	Operating mode: <ul style="list-style-type: none"> on—the powered device is detected, and power is applied. off—no PoE is applied. faulty—device detection or a powered device is in a faulty state. power-deny—a powered device is detected, but no PoE is available, or the maximum wattage exceeds the detected powered-device maximum.
Power	The supplied PoE in watts
Device	The device type detected: n/a, unknown, Cisco powered-device, IEEE powered-device, <name from CDP>
Class	The IEEE classification: n/a, Class <0–4>
Available	The total amount of PoE in the system
Used	The amount of PoE allocated to ports
Remaining	The amount of PoE not allocated to ports in the system. (Available – Used = Remaining)

Related Commands

Command	Description
logging event power-inline-status	Enables the logging of PoE events.
power inline	Configures the power management mode for the specified PoE port or for all PoE ports.
show controllers power inline	Displays the values in the registers of the specified PoE controller.

show sdm prefer

Use the **show sdm prefer** privileged EXEC command to display information about the Switch Database Management (SDM) templates that can be used to maximize used for allocating system resources for a particular feature, or use the command without a keyword to display the template in use.

```
show sdm prefer [access | default | dual-ipv4-and-ipv6 {default | vlan} |routing | vlan][ | {begin
| exclude | include} expression]
```

Syntax Description	
access	(Optional) Display the template that maximizes system resources for ACLs.
default	(Optional) Display the template that balances system resources among features.
dual-ipv4-and-ipv6 {default vlan}	(Optional) Display the templates that support both IPv4 and IPv6. <ul style="list-style-type: none"> default—Display the default dual template configuration. vlan—Display the VLAN dual template configuration. <p>Note Though visible on all switches, this option is supported only when the switch is running the advanced IP services image.</p>
routing	(Optional) Display the template that maximizes system resources for routing.
vlan	(Optional) Display the template that maximizes system resources for Layer 2 VLANs.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
	12.2(25)SE	The dual-ipv4-and-ipv6 {default vlan} keywords were added.
	12.2(25)SED	The access keyword was added.

Usage Guidelines

When you change the SDM template by using the **sdm prefer** global configuration command, you must reload the switch for the configuration to take effect. If you enter the **show sdm prefer** command before you enter the **reload** privileged EXEC command, the **show sdm prefer** command shows the template currently in use and the template that will become active after a reload.

The numbers displayed for each template represent an approximate maximum number for each feature resource. The actual number might vary, depending on the actual number of other features configured.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show sdm prefer** command:

```
Switch# show sdm prefer
"default" template:
The selected template optimizes the resources in
the switch to support this level of features for
8 routed interfaces and 1024 VLANs.

number of unicast mac addresses:          12K
number of igmp groups + multicast routes: 1K
number of unicast routes:                 0
number of qos aces:                       512
number of security aces:                  1K

Switch# show sdm prefer
The current template is "desktop default" template.
The selected template optimizes the resources in
the switch to support this level of features for
8 routed interfaces and 1024 VLANs.

number of unicast mac addresses:          6K
number of igmp groups + multicast routes: 1K
number of unicast routes:                 8K
  number of directly connected hosts:     6K
  number of indirect routes:              2K
number of policy based routing aces:      0
number of qos aces:                       512
number of security aces:                  1K
```

This is an example of output from the **show sdm prefer routing** command entered on a switch:

```
Switch# show sdm prefer routing
"desktop routing" template:
The selected template optimizes the resources in
the switch to support this level of features for
8 routed interfaces and 1024 VLANs.

number of unicast mac addresses:          3K
number of igmp groups + multicast routes: 1K
number of unicast routes:                 11K
  number of directly connected hosts:     3K
  number of indirect routes:              8K
number of policy based routing aces:      512
number of qos aces:                       512
number of security aces:                  1K
```

This is an example of output from the **show sdm prefer dual-ipv4-and-ipv6 default** command entered on a switch:

```
Switch# show sdm prefer dual-ipv4-and-ipv6 default
"desktop IPv4 and IPv6 default" template:
The selected template optimizes the resources in
the switch to support this level of features for
8 routed interfaces and 1024 VLANs.

number of unicast mac addresses:          2K
number of IPv4 IGMP groups + multicast routes: 1K
number of IPv4 unicast routes:           3K
  number of directly-connected IPv4 hosts: 2K
  number of indirect IPv4 routes:         1K
number of IPv6 multicast groups:          1K
number of directly-connected IPv6 addresses: 2K
number of indirect IPv6 unicast routes:   1K
number of IPv4 policy based routing aces: 0
number of IPv4/MAC qos aces:              512
number of IPv4/MAC security aces:         1K
number of IPv6 policy based routing aces: 0
number of IPv6 qos aces:                  510
number of IPv6 security aces:             510
```

This is an example of output from the **show sdm prefer** command when you have configured a new template but have not reloaded the switch:

```
Switch# show sdm prefer
The current template is "desktop routing" template.
The selected template optimizes the resources in
the switch to support this level of features for
8 routed interfaces and 1024 VLANs.

number of unicast mac addresses:          3K
number of igmp groups + multicast routes: 1K
number of unicast routes:                 11K
  number of directly connected hosts:     3K
  number of indirect routes:              8K
number of qos aces:                       512
number of security aces:                  1K

On next reload, template will be "desktop vlan" template.
```

Related Commands	Command	Description
	sdm prefer	Sets the SDM template to maximize resources for routing or VLANs or to the default template, or to select a dual IPv4 and IPv6 template.

show setup express

Use the **show setup express** privileged EXEC command to display if Express Setup mode is active on the switch.

```
show setup express [ | {begin | exclude | include} expression]
```

Syntax Description	
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Defaults No default is defined.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Examples This is an example of output from the **show setup express** command:

```
Switch# show setup express
express setup mode is active
```

Related Commands	Command	Description
	setup express	Enables Express Setup mode.

show spanning-tree

Use the **show spanning-tree** user EXEC command to display spanning-tree state information.

```
show spanning-tree [bridge-group | active [detail] | backbonefast | blockedports | bridge | detail
[active] | inconsistentports | interface interface-id | mst | pathcost method | root | summary
[totals] | uplinkfast | vlan vlan-id] [ | {begin | exclude | include} expression]
```

```
show spanning-tree bridge-group [active [detail] | blockedports | bridge | detail [active] |
inconsistentports | interface interface-id | root | summary] [ | {begin | exclude | include}
expression]
```

```
show spanning-tree vlan vlan-id [active [detail] | blockedports | bridge | detail [active] |
inconsistentports | interface interface-id | root | summary] [ | {begin | exclude | include}
expression]
```

```
show spanning-tree {vlan vlan-id | bridge-group} bridge [address | detail | forward-time |
hello-time | id | max-age | priority [system-id] | protocol] [ | {begin | exclude | include}
expression]
```

```
show spanning-tree {vlan vlan-id | bridge-group} root [address | cost | detail | forward-time |
hello-time | id | max-age | port | priority [system-id] [ | {begin | exclude | include}
expression]
```

```
show spanning-tree interface interface-id [active [detail] | cost | detail [active] | inconsistency |
portfast | priority | rootcost | state] [ | {begin | exclude | include} expression]
```

```
show spanning-tree mst [configuration [digest]] | [instance-id [detail | interface interface-id
[detail]] [ | {begin | exclude | include} expression]
```

Syntax Description

<i>bridge-group</i>	(Optional) Specify the bridge group number. The range is 1 to 255.
active [detail]	(Optional) Display spanning-tree information only on active interfaces (available only in privileged EXEC mode).
backbonefast	(Optional) Display spanning-tree BackboneFast status.
blockedports	(Optional) Display blocked port information (available only in privileged EXEC mode).
bridge [address detail forward-time hello-time id max-age priority [system-id] protocol]	(Optional) Display status and configuration of this switch (optional keywords available only in privileged EXEC mode).
detail [active]	(Optional) Display a detailed summary of interface information (active keyword available only in privileged EXEC mode).
inconsistentports	(Optional) Display inconsistent port information (available only in privileged EXEC mode).
interface <i>interface-id</i> [active [detail] cost detail [active] inconsistency portfast priority rootcost state]	(Optional) Display spanning-tree information for the specified interface (all options except portfast and state available only in privileged EXEC mode). Enter each interface separated by a space. Ranges are not supported. Valid interfaces include physical ports, VLANs, and port channels. The VLAN range is 1 to 4094. The port-channel range is 1 to 48.

mst [configuration [digest]] [<i>instance-id</i> [detail interface <i>interface-id</i> [detail]]]	<p>(Optional) Display the multiple spanning-tree (MST) region configuration and status (available only in privileged EXEC mode).</p> <p>The keywords have these meanings:</p> <ul style="list-style-type: none"> • digest—(Optional) Display the MD5 digest included in the current MST configuration identifier (MSTCI). Two separate digests, one for standard and one for prestandard switches, appear (available only in privileged EXEC mode). <p>The terminology was updated for the implementation of the IEEE standard, and the <i>txholdcount</i> field was added.</p> <p>The new master role appears for boundary ports.</p> <p>The word <i>pre-standard</i> or <i>Pre-STD</i> appears when an IEEE standard bridge sends prestandard BPDUs on a port.</p> <p>The word <i>pre-standard (config)</i> or <i>Pre-STD-Cf</i> appears when a port has been configured to transmit prestandard BPDUs and no prestandard BPDU has been received on that port.</p> <p>The word <i>pre-standard (rcvd)</i> or <i>Pre-STD-Rx</i> appears when a prestandard BPDU has been received on a port that has not been configured to transmit prestandard BPDUs.</p> <p>A <i>dispute</i> flag appears when a designated port receives inferior designated information until the port returns to the forwarding state or ceases to be designated.</p> <ul style="list-style-type: none"> • <i>instance-id</i>—You can specify a single instance ID, a range of IDs separated by a hyphen, or a series of IDs separated by a comma. The range is 1 to 4094. The display shows the number of currently configured instances. • interface <i>interface-id</i>—(Optional) Valid interfaces include physical ports, VLANs, and port channels. The VLAN range is 1 to 4094. The port-channel range is 1 to 48. • detail—(Optional) Display detailed information for the instance or interface.
pathcost method	(Optional) Display the default path cost method (available only in privileged EXEC mode).
root [address cost detail forward-time hello-time id max-age port priority [system-id]]	(Optional) Display root switch status and configuration (all keywords available only in privileged EXEC mode).
summary [totals]	(Optional) Display a summary of port states or the total lines of the spanning-tree state section. The words <i>IEEE Standard</i> identify the MST version running on a switch.
uplinkfast	(Optional) Display spanning-tree UplinkFast status.
vlan <i>vlan-id</i> [active [detail] backbonefast blockedports bridge [address detail forward-time hello-time id max-age priority [system-id] protocol]	(Optional) Display spanning-tree information for the specified VLAN (some keywords available only in privileged EXEC mode). You can specify a single VLAN identified by VLAN ID number, a range of VLANs separated by a hyphen, or a series of VLANs separated by a comma. The range is 1 to 4094.

 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.2(25)SEC	The digest keyword was added, and new digest and transmit hold count fields appear.
	12.1(19)EA1	This command was introduced.

Usage Guidelines If the *vlan-id* variable is omitted, the command applies to the spanning-tree instance for all VLANs. Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show spanning-tree active** command:

```
Switch# show spanning-tree active
VLAN0001
  Spanning tree enabled protocol ieee
  Root ID    Priority    32768
             Address     0001.42e2.cdd0
             Cost        3038
             Port        24 (GigabitEthernet0/1)
             Hello Time  2 sec  Max Age 20 sec  Forward Delay 15 sec

  Bridge ID  Priority    49153 (priority 49152 sys-id-ext 1)
             Address     0003.fd63.9580
             Hello Time  2 sec  Max Age 20 sec  Forward Delay 15 sec
             Aging Time  300
  Uplinkfast enabled

Interface      Role Sts Cost      Prio.Nbr Type
-----
Gi0/1         Root FWD 3019     128.24  P2p
<output truncated>
```

This is an example of output from the **show spanning-tree detail** command:

```
Switch# show spanning-tree detail
VLAN0001 is executing the ieee compatible Spanning Tree protocol
  Bridge Identifier has priority 49152, sysid 1, address 0003.fd63.9580
  Configured hello time 2, max age 20, forward delay 15
  Current root has priority 32768, address 0001.42e2.cdd0
  Root port is 24 (GigabitEthernet0/1), cost of root path is 3038
  Topology change flag not set, detected flag not set
  Number of topology changes 0 last change occurred 1d16h ago
  Times: hold 1, topology change 35, notification 2
         hello 2, max age 20, forward delay 15
  Timers: hello 0, topology change 0, notification 0, aging 300
  Uplinkfast enabled

Port 1 (GigabitEthernet0/1) of VLAN0001 is forwarding
  Port path cost 3019, Port priority 128, Port Identifier 128.24.
  Designated root has priority 32768, address 0001.42e2.cdd0
  Designated bridge has priority 32768, address 00d0.bbf5.c680
  Designated port id is 128.25, designated path cost 19
  Timers: message age 2, forward delay 0, hold 0
  Number of transitions to forwarding state: 1
  Link type is point-to-point by default
  BPDU: sent 0, received 72364
<output truncated>
```

This is an example of output from the **show spanning-tree interface interface-id** command:

```
Switch# show spanning-tree interface gigabitethernet0/1
Vlan          Role Sts Cost      Prio.Nbr Type
-----
VLAN0001      Root FWD 3019      128.24  P2p

Switch# show spanning-tree summary
Switch is in pvst mode
Root bridge for: none
EtherChannel misconfiguration guard is enabled
Extended system ID is enabled
Portfast is disabled by default
PortFast BPDU Guard is disabled by default
Portfast BPDU Filter is disabled by default
Loopguard is disabled by default
UplinkFast is enabled
BackboneFast is enabled
Pathcost method used is short

Name          Blocking Listening Learning Forwarding STP Active
-----
VLAN0001      1          0          0          11         12
VLAN0002      3          0          0          1          4
VLAN0004      3          0          0          1          4
VLAN0006      3          0          0          1          4
VLAN0031      3          0          0          1          4
VLAN0032      3          0          0          1          4
<output truncated>
-----
37 vlans      109        0          0          47         156
Station update rate set to 150 packets/sec.

UplinkFast statistics
-----
Number of transitions via uplinkFast (all VLANs) : 0
Number of proxy multicast addresses transmitted (all VLANs) : 0
```

```

BackboneFast statistics
-----
Number of transition via backboneFast (all VLANs)      : 0
Number of inferior BPDUs received (all VLANs)         : 0
Number of RLQ request PDUs received (all VLANs)       : 0
Number of RLQ response PDUs received (all VLANs)      : 0
Number of RLQ request PDUs sent (all VLANs)           : 0
Number of RLQ response PDUs sent (all VLANs)          : 0

```

This is an example of output from the **show spanning-tree mst configuration** command:

```

Switch# show spanning-tree mst configuration
Name      [region1]
Revision  1
Instance  Vlans Mapped
-----
0         1-9,21-4094
1         10-20
-----

```

This is an example of output from the **show spanning-tree mst interface interface-id** command:

```

Switch# show spanning-tree mst interface gigabitethernet0/1
GigabitEthernet0/1 of MST00 is root forwarding
Edge port: no          (default)      port guard : none      (default)
Link type: point-to-point (auto)      bpdu filter: disable   (default)
Boundary : boundary   (STP)          bpdu guard : disable   (default)
Bpdus sent 5, received 74

Instance role state cost      prio vlans mapped
0        root FWD  200000  128  1,12,14-4094

```

This is an example of output from the **show spanning-tree mst 0** command:

```

Switch# show spanning-tree mst 0
##### MST00          vlans mapped: 1-9,21-4094
Bridge      address 0002.4b29.7a00 priority 32768 (32768 sysid 0)
Root       address 0001.4297.e000 priority 32768 (32768 sysid 0)
           port    Gi0/1          path cost 200038
IST master *this switch
Operational hello time 2, forward delay 15, max age 20, max hops 20
Configured  hello time 2, forward delay 15, max age 20, max hops 20

Interface          role state cost      prio type
-----
GigabitEthernet0/1  root FWD  200000  128  P2P bound(STP)
GigabitEthernet0/2  desg FWD  200000  128  P2P bound(STP)
Port-channell      desg FWD  200000  128  P2P bound(STP)

```

Related Commands

Command	Description
clear spanning-tree counters	Clears the spanning-tree counters.
clear spanning-tree detected-protocols	Restarts the protocol migration process.
spanning-tree backbonefast	Enables the BackboneFast feature.
spanning-tree bpduser	Prevents an interface from sending or receiving bridge protocol data units (BPDUs).
spanning-tree bpduguard	Puts an interface in the error-disabled state when it receives a BPDU.
spanning-tree cost	Sets the path cost for spanning-tree calculations.
spanning-tree extend system-id	Enables the extended system ID feature.
spanning-tree guard	Enables the root guard or the loop guard feature for all the VLANs associated with the selected interface.
spanning-tree link-type	Overrides the default link-type setting for rapid spanning-tree transitions to the forwarding state.
spanning-tree loopguard default	Prevents alternate or root ports from becoming the designated port because of a failure that leads to a unidirectional link.
spanning-tree mst configuration	Enters multiple spanning-tree (MST) configuration mode through which the MST region configuration occurs.
spanning-tree mst cost	Sets the path cost for MST calculations.
spanning-tree mst forward-time	Sets the forward-delay time for all MST instances.
spanning-tree mst hello-time	Sets the interval between hello BPDUs sent by root switch configuration messages.
spanning-tree mst max-age	Sets the interval between messages that the spanning tree receives from the root switch.
spanning-tree mst max-hops	Sets the number of hops in an MST region before the BPDU is discarded and the information held for an interface is aged.
spanning-tree mst port-priority	Configures an interface priority.
spanning-tree mst priority	Configures the switch priority for the specified spanning-tree instance.
spanning-tree mst root	Configures the MST root switch priority and timers based on the network diameter.
spanning-tree port-priority	Configures an interface priority.
spanning-tree portfast (global configuration)	Globally enables the BPDU filtering or the BPDU guard feature on Port Fast-enabled interfaces or enables the Port Fast feature on all nontrunking interfaces.
spanning-tree portfast (interface configuration)	Enables the Port Fast feature on an interface and all its associated VLANs.
spanning-tree uplinkfast	Accelerates the choice of a new root port when a link or switch fails or when the spanning tree reconfigures itself.
spanning-tree vlan	Configures spanning tree on a per-VLAN basis.

show storm-control

Use the **show storm-control** user EXEC command to display broadcast, multicast, or unicast storm control settings on the switch or on the specified interface or to display storm-control history.

```
show storm-control [interface-id] [broadcast | multicast | unicast] [ | {begin | exclude | include}
expression]
```

Syntax Description		
<i>interface-id</i>	(Optional)	Interface ID for the physical port (including type, module, and port number).
broadcast	(Optional)	Display broadcast storm threshold setting.
multicast	(Optional)	Display multicast storm threshold setting.
unicast	(Optional)	Display unicast storm threshold setting.
begin	(Optional)	Display begins with the line that matches the <i>expression</i> .
exclude	(Optional)	Display excludes lines that match the <i>expression</i> .
include	(Optional)	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines

When you enter an *interface-id*, the storm control thresholds appear for the specified interface.

If you do not enter an *interface-id*, settings appear for one traffic type for all ports on the switch.

If you do not enter a traffic type, settings appear for broadcast storm control.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of a partial output from the **show storm-control** command when no keywords are entered. Because no traffic-type keyword was entered, the broadcast storm control settings appear.

```
Switch> show storm-control
Interface  Filter State  Upper      Lower      Current
-----  -
Gi0/1     Forwarding    20 pps     10 pps     5 pps
Gi0/2     Forwarding    50.00%     40.00%     0.00%
<output truncated>
```

This is an example of output from the **show storm-control** command for a specified interface. Because no traffic-type keyword was entered, the broadcast storm control settings appear.

```
Switch> show storm-control gigabitethernet 0/1
Interface  Filter State  Upper      Lower      Current
-----
Gi0/1     Forwarding    20 pps    10 pps    5 pps
```

Table 2-31 describes the fields in the **show storm-control** display.

Table 2-31 show storm-control Field Descriptions

Field	Description
Interface	Displays the ID of the interface.
Filter State	Displays the status of the filter: <ul style="list-style-type: none"> Blocking—Storm control is enabled, and a storm has occurred. Forwarding—Storm control is enabled, and no storms have occurred. Inactive—Storm control is disabled.
Upper	Displays the rising suppression level as a percentage of total available bandwidth in packets per second or in bits per second.
Lower	Displays the falling suppression level as a percentage of total available bandwidth in packets per second or in bits per second.
Current	Displays the bandwidth usage of broadcast traffic or the specified traffic type (broadcast, multicast, or unicast) as a percentage of total available bandwidth. This field is only valid when storm control is enabled.

Related Commands

Command	Description
storm-control	Sets the broadcast, multicast, or unicast storm control levels for the switch.

show system mtu

Use the **show system mtu** privileged EXEC command to display the global maximum transmission unit (MTU) or maximum packet size set for the switch.

```
show system mtu [ | {begin | exclude | include} expression]
```

Syntax Description		
begin	(Optional)	Display begins with the line that matches the <i>expression</i> .
exclude	(Optional)	Display excludes lines that match the <i>expression</i> .
include	(Optional)	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines

If you have used the **system mtu** or **system mtu jumbo** global configuration command to change the MTU setting, the new setting does not take effect until you reset the switch.

The system MTU refers to ports operating at 10/100 Mbps; the system jumbo MTU refers to Gigabit ports; the system routing MTU refers to routed ports.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show system mtu** command:

```
Switch# show system mtu
System MTU size is 1500 bytes
System Jumbo MTU size is 1550 bytes
Routing MTU size is 1500 bytes.
```

Related Commands	Command	Description
	system mtu	Sets the MTU size for the Fast Ethernet, Gigabit Ethernet, or routed ports.

show udld

Use the **show udld** user EXEC command to display UniDirectional Link Detection (UDLD) administrative and operational status for all ports or the specified port.

```
show udld [interface-id] [| {begin | exclude | include} expression]
```

Syntax Description

<i>interface-id</i>	(Optional) ID of the interface and port number. Valid interfaces include physical ports and VLANs. The VLAN range is 1 to 4094.
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

If you do not enter an *interface-id*, administrative and operational UDLD status for all interfaces appear. Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show udld interface-id** command. For this display, UDLD is enabled on both ends of the link, and UDLD detects that the link is bidirectional. [Table 2-32](#) describes the fields in this display.

```
Switch> show udld gigabitethernet0/1
Interface gi0/1
---
Port enable administrative configuration setting: Follows device default
Port enable operational state: Enabled
Current bidirectional state: Bidirectional
Current operational state: Advertisement - Single Neighbor detected
Message interval: 60
Time out interval: 5
  Entry 1
    Expiration time: 146
    Device ID: 1
    Current neighbor state: Bidirectional
    Device name: Switch-A
    Port ID: Gi0/1
    Neighbor echo 1 device: Switch-B
    Neighbor echo 1 port: Gi0/2
    Message interval: 5
    CDP Device name: Switch-A
```


Table 2-32 *show uddld Field Descriptions*

Field	Description
Interface	The interface on the local device configured for UDLD.
Port enable administrative configuration setting	How UDLD is configured on the port. If UDLD is enabled or disabled, the port enable configuration setting is the same as the operational enable state. Otherwise, the enable operational setting depends on the global enable setting.
Port enable operational state	Operational state that shows whether UDLD is actually running on this port.
Current bidirectional state	The bidirectional state of the link. An unknown state appears if the link is down or if it is connected to an UDLD-incapable device. A bidirectional state appears if the link is a normal two-way connection to a UDLD-capable device. All other values mean miswiring.
Current operational state	The current phase of the UDLD state machine. For a normal bidirectional link, the state machine is most often in the Advertisement phase.
Message interval	How often advertisement messages are sent from the local device. Measured in seconds.
Time out interval	The time period, in seconds, that UDLD waits for echoes from a neighbor device during the detection window.
Entry 1	Information from the first cache entry, which contains a copy of echo information received from the neighbor.
Expiration time	The amount of time in seconds remaining before this cache entry is aged out.
Device ID	The neighbor device identification.
Current neighbor state	The neighbor's current state. If both the local and neighbor devices are running UDLD normally, the neighbor state and local state should be bidirectional. If the link is down or the neighbor is not UDLD-capable, no cache entries appear.
Device name	The device name or the system serial number of the neighbor. The system serial number appears if the device name is not set or is set to the default (Switch).
Port ID	The neighbor port ID enabled for UDLD.
Neighbor echo 1 device	The device name of the neighbors' neighbor from which the echo originated.
Neighbor echo 1 port	The port number ID of the neighbor from which the echo originated.
Message interval	The rate, in seconds, at which the neighbor is sending advertisement messages.
CDP device name	The CDP device name or the system serial number. The system serial number appears if the device name is not set or is set to the default (Switch).

Related Commands	Command	Description
	uddl	Enables aggressive or normal mode in UDLD or sets the configurable message timer time.
	uddl port	Enables UDLD on an individual interface or prevents a fiber-optic interface from being enabled by the uddl global configuration command.
	uddl reset	Resets all interfaces shutdown by UDLD and permits traffic to begin passing through them again.

show version

Use the **show version** user EXEC command to display version information for the hardware and firmware.

```
show version [ | {begin | exclude | include} expression]
```

Syntax Description		
begin	(Optional)	Display begins with the line that matches the <i>expression</i> .
exclude	(Optional)	Display excludes lines that match the <i>expression</i> .
include	(Optional)	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show version** command:



Note

Though visible in the **show version** output, the *configuration register* information is not supported on the switch.

```
Switch> show version
Cisco Internetwork Operating System Software
IOS (tm) C3560 Software (C3560-IPSERVICES-M), Version 12.2(25)SEB, RELEASE SOFTWARE (fc1)
Copyright (c) 1986-2005 by cisco Systems, Inc.
Compiled Tues 15-Feb-05 21:54 by yenanh
Image text-base: 0x00003000, data-base: 0x009197B8

ROM: Bootstrap program is C3560 boot loader
BOOTLDR: C3560 Boot Loader (C3560-HBOOT-M), Version 12.1 [rneal-vegas-0806 101]

tree uptime is 1 minute
System returned to ROM by power-on
System image file is "flash:c3560-i5-mz"
```

cisco WS-C3560-24PS (PowerPC405) processor (revision 01) with 118776K/12288K bytes of memory.

Processor board ID CSJ0737U00J

Last reset from power-on

Bridging software.

1 Virtual Ethernet/IEEE 802.3 interface(s)

24 FastEthernet/IEEE 802.3 interface(s)

2 Gigabit Ethernet/IEEE 802.3 interface(s)

The password-recovery mechanism is enabled.

512K bytes of flash-simulated non-volatile configuration memory.

Base ethernet MAC Address : 00:0B:46:30:6B:80

Motherboard assembly number : 73-9299-01

Power supply part number : 341-0029-02

Motherboard serial number : CSJ0736990B

Power supply serial number : LIT0717000Y

Model revision number : 01

Motherboard revision number : 03

Model number : WS-C3560-24PS-S

System serial number : CSJ0737U00J

Top Assembly Part Number : 800-24791-01

Top Assembly Revision Number : 02

Switch	Ports	Model	SW Version	SW Image
-----	-----	-----	-----	-----
* 1	26	WS-C3560-24PS	12.2(25)SEB	C3560-IPSERVICES-M

Configuration register is 0xF

show vlan

Use the **show vlan** user EXEC command to display the parameters for all configured VLANs or one VLAN (if the VLAN ID or name is specified) on the switch.

```
show vlan [brief | dot1q tag native | id vlan-id | internal usage | mtu | name vlan-name |
private-vlan [type] | remote-span | summary] [ | {begin | exclude | include} expression]
```

Syntax	Description
brief	(Optional) Display one line for each VLAN with the VLAN name, status, and its ports.
dot1q tag native	(Optional) Display the IEEE 802.1Q native VLAN tagging status.
id <i>vlan-id</i>	(Optional) Display information about a single VLAN identified by VLAN ID number. For <i>vlan-id</i> , the range is 1 to 4094.
internal usage	(Optional) Display a list of VLANs being used internally by the switch. These VLANs are always from the extended range (VLAN IDs 1006 to 4094), and you cannot create VLANs with these IDs by using the vlan global configuration command until you remove them from internal use.
mtu	(Optional) Display a list of VLANs and the minimum and maximum transmission unit (MTU) sizes configured on ports in the VLAN.
name <i>vlan-name</i>	(Optional) Display information about a single VLAN identified by VLAN name. The VLAN name is an ASCII string from 1 to 32 characters.
private-vlan	(Optional) Display information about configured private VLANs, including primary and secondary VLAN IDs, type (community, isolated, or primary) and ports belonging to the private VLAN. This keyword is only supported if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).
type	(Optional) Display only private VLAN ID and type.
remote-span	(Optional) Display information about Remote SPAN (RSPAN) VLANs.
summary	(Optional) Display VLAN summary information.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.



Note

Though visible in the command-line help string, the **ifindex** keyword is not supported.

Command Modes

User EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(20)SE	The mtu and private-vlan keywords were added.
12.2(25)SE	The dot1q tag native keywords were added.

Usage Guidelines

In the **show vlan mtu** command output, the MTU_Mismatch column shows whether all the ports in the VLAN have the same MTU. When *yes* appears in this column, it means that the VLAN has ports with different MTUs, and packets that are switched from a port with a larger MTU to a port with a smaller MTU might be dropped. If the VLAN does not have an SVI, the hyphen (-) symbol appears in the SVI_MTU column. If the MTU-Mismatch column displays *yes*, the names of the port with the MinMTU and the port with the MaxMTU appear.

If you try to associate a private VLAN secondary VLAN with a primary VLAN before you define the secondary VLAN, the secondary VLAN is not included in the **show vlan private-vlan** command output.

In the **show vlan private-vlan type** command output, a type displayed as *normal* means a VLAN that has a private VLAN association but is not part of the private VLAN. For example, if you define and associate two VLANs as primary and secondary VLANs and then delete the secondary VLAN configuration without removing the association from the primary VLAN, the VLAN that was the secondary VLAN is shown as *normal* in the display. In the **show vlan private-vlan** output, the primary and secondary VLAN pair is shown as *non-operational*.

Expressions are case sensitive. For example, if you enter **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show vlan** command. [Table 2-33](#) describes the fields in the display.

```
Switch> show vlan
VLAN Name                Status    Ports
-----
1    default                active    Fa0/1, Fa0/2, Fa0/3
                                           Fa0/4, Fa0/5, Fa0/6
                                           Fa0/7, Fa0/8, Fa0/9
                                           Fa0/10, Fa0/11, Fa0/12
                                           Fa0/13, Fa0/14, Fa0/15
                                           Fa0/16, Fa0/17, Fa0/18
                                           Fa0/19, Fa0/20, Fa0/21
                                           Fa0/24, Gi0/1, Gi0/2

<output truncated>

2    VLAN0002              active
3    VLAN0003              active

<output truncated>

1000 VLAN1000           active
1002 fddi-default         active
1003 token-ring-default  active
1004 fddinet-default    active
1005 trnet-default      active

VLAN Type  SAID      MTU   Parent  RingNo BridgeNo Stp   BrdgMode Trans1 Trans2
-----
1    enet   100001   1500  -      -      -    -    -      1002  1003
2    enet   100002   1500  -      -      -    -    -      0     0
3    enet   100003   1500  -      -      -    -    -      0     0
```

```

<output truncated>

1005 trnet 101005      1500 - - -      ibm -      0      0

Remote SPAN VLANs
-----

Primary Secondary Type          Ports
-----

Primary Secondary Type Ports
-----
20      25      isolated Fa0/13, Fa0/20, Fa0/22, Gi0/1,
20      30      community Fa0/13, Fa0/20, Fa10/21, Gi0/1
20      35      community Fa0/13, Fa0/20, Fa0/23, Fa0/33, Gi0/1

<output truncated>

```

Table 2-33 *show vlan Command Output Fields*

Field	Description
VLAN	VLAN number.
Name	Name, if configured, of the VLAN.
Status	Status of the VLAN (active or suspend).
Ports	Ports that belong to the VLAN.
Type	Media type of the VLAN.
SAID	Security association ID value for the VLAN.
MTU	Maximum transmission unit size for the VLAN.
Parent	Parent VLAN, if one exists.
RingNo	Ring number for the VLAN, if applicable.
BrdgNo	Bridge number for the VLAN, if applicable.
Stp	Spanning Tree Protocol type used on the VLAN.
BrdgMode	Bridging mode for this VLAN—possible values are source-route bridging (SRB) and source-route transparent (SRT); the default is SRB.
Trans1	Translation bridge 1.
Trans2	Translation bridge 2.
Remote SPAN VLANs	Identifies any RSPAN VLANs that have been configured.
Primary/Secondary/ Type/Ports	Includes any private VLANs that have been configured, including the primary VLAN ID, the secondary VLAN ID, the type of secondary VLAN (community or isolated), and the ports that belong to it.

This is an example of output from the **show vlan dot1q tag native** command:

```

Switch> show vlan dot1q tag native
dot1q native vlan tagging is disabled

```

This is an example of output from the **show vlan private-vlan** command:

```
Switch> show vlan private-vlan
Primary Secondary Type          Ports
-----
10      501      isolated   Gi0/3
10      502      community  Fa0/11
10      503      non-operational3  -
20      25      isolated   Fa0/13, Fa0/20, Fa0/22, Gi0/1
20      30      community  Fa0/13, Fa0/20, Fa0/21, Gi0/1,
20      35      community  Fa0/13, Fa0/20, Fa0/23, Fa0/33. Gi0/1
20      55      non-operational
2000    2500    isolated   Fa0/5, Fa0/10, Fa0/15
```

This is an example of output from the **show vlan private-vlan type** command:

```
Switch> show vlan private-vlan type
Vlan Type
-----
10      primary
501     isolated
502     community
503     normal
```

This is an example of output from the **show vlan summary** command:

```
Switch> show vlan summary
Number of existing VLANs      : 45
Number of existing VTP VLANs  : 45
Number of existing extended VLANs : 0
```

This is an example of output from the **show vlan id** command.

```
Switch# show vlan id 2
VLAN Name                Status    Ports
-----
2      VLAN0200                active    Fa0/7, Fa0/8

VLAN Type  SAID      MTU    Parent RingNo BridgeNo  Stp  BrdgMode Trans1 Trans2
-----
2      enet    100002   1500   -      -      -      -      -      0      0

Remote SPAN VLAN
-----
Disabled
```

This is an example of output from the **show vlan internal usage** command. It shows that VLANs 1025 and 1026 are being used as internal VLANs for Fast Ethernet routed ports 23 and 24 on stack member 1. If you want to use one of these VLAN IDs, you must first shut down the routed port, which releases the internal VLAN, and then create the extended-range VLAN. When you start up the routed port, another internal VLAN number is assigned to it.

```
Switch> show vlan internal usage
VLAN Usage
-----
1025 FastEthernet0/23
1026 FastEthernet0/24
```


Related Commands	Command	Description
	private-vlan	Configures a VLAN as a community, isolated, or primary VLAN or associates a primary VLAN with secondary VLANs.
	switchport mode	Configures the VLAN membership mode of a port.
	vlan (global configuration)	Enables VLAN configuration mode where you can configure VLANs 1 to 4094.
	vlan (VLAN configuration)	Configures VLAN characteristics in the VLAN database. Only available for normal-range VLANs (VLAN IDs 1 to 1005). Do not enter leading zeros.

show vlan access-map

Use the **show vlan access-map** privileged EXEC command to display information about a particular VLAN access map or for all VLAN access maps.

```
show vlan access-map [mapname] [ | { begin | exclude | include } expression ]
```

Syntax Description		
<i>mapname</i>	(Optional) Name of a specific VLAN access map.	
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .	
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .	
 include	(Optional) Display includes lines that match the specified <i>expression</i> .	
<i>expression</i>	Expression in the output to use as a reference point.	

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show vlan access-map** command:

```
Switch# show vlan access-map
Vlan access-map "SecWiz" 10
  Match clauses:
    ip address: SecWiz_Fa10_3_in_ip

  Action:
    forward
```

Related Commands	Command	Description
	show vlan filter	Displays information about all VLAN filters or about a particular VLAN or VLAN access map.
	vlan access-map	Creates a VLAN map entry for VLAN packet filtering.
	vlan filter	Applies a VLAN map to one or more VLANs.

show vlan filter

Use the **show vlan filter** privileged EXEC command to display information about all VLAN filters or about a particular VLAN or VLAN access map.

```
show vlan filter [access-map name | vlan vlan-id] [ | {begin | exclude | include} expression]
```

Syntax Description		
access-map <i>name</i>	(Optional)	Display filtering information for the specified VLAN access map.
vlan <i>vlan-id</i>	(Optional)	Display filtering information for the specified VLAN. The range is 1 to 4094.
 begin	(Optional)	Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional)	Display excludes lines that match the <i>expression</i> .
 include	(Optional)	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show vlan filter** command:

```
Switch# show vlan filter
VLAN Map map_1 is filtering VLANs:
 20-22
```

Related Commands	Command	Description
	show vlan access-map	Displays information about a particular VLAN access map or for all VLAN access maps.
	vlan access-map	Creates a VLAN map entry for VLAN packet filtering.
	vlan filter	Applies a VLAN map to one or more VLANs.

show vmps

Use the **show vmps** user EXEC command without keywords to display the VLAN Query Protocol (VQP) version, reconfirmation interval, retry count, VLAN Membership Policy Server (VMPS) IP addresses, and the current and primary servers, or use the **statistics** keyword to display client-side statistics.

```
show vmps [statistics] [ | {begin | exclude | include} expression]
```

Syntax Description	statistics	(Optional) Display VQP client-side statistics and counters.
	begin	(Optional) Display begins with the line that matches the <i>expression</i> .
	exclude	(Optional) Display excludes lines that match the <i>expression</i> .
	include	(Optional) Display includes lines that match the specified <i>expression</i> .
	<i>expression</i>	Expression in the output to use as a reference point.

Command Modes User EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples This is an example of output from the **show vmps** command:

```
Switch> show vmps
VQP Client Status:
-----
VMPS VQP Version: 1
Reconfirm Interval: 60 min
Server Retry Count: 3
VMPS domain server:

Reconfirmation status
-----
VMPS Action:          other
```

This is an example of output from the **show vmmps statistics** command. [Table 2-34](#) describes each field in the display.

```
Switch> show vmmps statistics
VMPS Client Statistics
-----
VQP Queries:                0
VQP Responses:              0
VMPS Changes:                0
VQP Shutdowns:              0
VQP Denied:                  0
VQP Wrong Domain:           0
VQP Wrong Version:          0
VQP Insufficient Resource:  0
```

Table 2-34 *show vmmps statistics* Field Descriptions

Field	Description
VQP Queries	Number of queries sent by the client to the VMPS.
VQP Responses	Number of responses sent to the client from the VMPS.
VMPS Changes	Number of times that the VMPS changed from one server to another.
VQP Shutdowns	Number of times the VMPS sent a response to shut down the port. The client disables the port and removes all dynamic addresses on this port from the address table. You must administratively re-enable the port to restore connectivity.
VQP Denied	Number of times the VMPS denied the client request for security reasons. When the VMPS response denies an address, no frame is forwarded to or from the workstation with that address (broadcast or multicast frames are delivered to the workstation if the port has been assigned to a VLAN). The client keeps the denied address in the address table as a blocked address to prevent more queries from being sent to the VMPS for each new packet received from this workstation. The client ages the address if no new packets are received from this workstation on this port within the aging time period.
VQP Wrong Domain	Number of times the management domain in the request does not match the one for the VMPS. Any previous VLAN assignments of the port are not changed. This response means that the server and the client have not been configured with the same VTP management domain.
VQP Wrong Version	Number of times the version field in the query packet contains a value that is higher than the version supported by the VMPS. The VLAN assignment of the port is not changed. The switches send only VMPS Version 1 requests.
VQP Insufficient Resource	Number of times the VMPS is unable to answer the request because of a resource availability problem. If the retry limit has not yet been reached, the client repeats the request with the same server or with the next alternate server, depending on whether the per-server retry count has been reached.

Related Commands	Command	Description
	clear vmps statistics	Clears the statistics maintained by the VQP client.
	vmps reconfirm (privileged EXEC)	Sends VQP queries to reconfirm all dynamic VLAN assignments with the VMPS.
	vmps retry	Configures the per-server retry count for the VQP client.
	vmps server	Configures the primary VMPS and up to three secondary servers.

show vtp

Use the **show vtp** user EXEC command to display general information about the VLAN Trunking Protocol (VTP) management domain, status, and counters.

```
show vtp {counters | password | status} [ | {begin | exclude | include} expression]
```

Syntax Description

counters	Display the VTP statistics for the switch.
password	Display the configured VTP password.
status	Display general information about the VTP management domain status.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

User EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples

This is an example of output from the **show vtp counters** command. [Table 2-35](#) describes each field in the display.

```
Switch> show vtp counters

VTP statistics:
Summary advertisements received      : 0
Subset advertisements received      : 0
Request advertisements received     : 0
Summary advertisements transmitted  : 0
Subset advertisements transmitted   : 0
Request advertisements transmitted  : 0
Number of config revision errors    : 0
Number of config digest errors      : 0
Number of V1 summary errors         : 0
```

VTP pruning statistics:

Trunk	Join Transmitted	Join Received	Summary advts received from non-pruning-capable device
-----	-----	-----	-----
Fa0/47	0	0	0
Fa0/48	0	0	0
Gi0/1	0	0	0
Gi0/2	0	0	0

Table 2-35 *show vtp counters Field Descriptions*

Field	Description
Summary advertisements received	Number of summary advertisements received by this switch on its trunk ports. Summary advertisements contain the management domain name, the configuration revision number, the update timestamp and identity, the authentication checksum, and the number of subset advertisements to follow.
Subset advertisements received	Number of subset advertisements received by this switch on its trunk ports. Subset advertisements contain all the information for one or more VLANs.
Request advertisements received	Number of advertisement requests received by this switch on its trunk ports. Advertisement requests normally request information on all VLANs. They can also request information on a subset of VLANs.
Summary advertisements transmitted	Number of summary advertisements sent by this switch on its trunk ports. Summary advertisements contain the management domain name, the configuration revision number, the update timestamp and identity, the authentication checksum, and the number of subset advertisements to follow.
Subset advertisements transmitted	Number of subset advertisements sent by this switch on its trunk ports. Subset advertisements contain all the information for one or more VLANs.
Request advertisements transmitted	Number of advertisement requests sent by this switch on its trunk ports. Advertisement requests normally request information on all VLANs. They can also request information on a subset of VLANs.
Number of configuration revision errors	<p>Number of revision errors.</p> <p>Whenever you define a new VLAN, delete an existing one, suspend or resume an existing VLAN, or modify the parameters on an existing VLAN, the configuration revision number of the switch increments.</p> <p>Revision errors increment whenever the switch receives an advertisement whose revision number matches the revision number of the switch, but the MD5 digest values do not match. This error means that the VTP password in the two switches is different or that the switches have different configurations.</p> <p>These errors means that the switch is filtering incoming advertisements, which causes the VTP database to become unsynchronized across the network.</p>

Table 2-35 *show vtp counters Field Descriptions (continued)*

Field	Description
Number of configuration digest errors	<p>Number of MD5 digest errors.</p> <p>Digest errors increment whenever the MD5 digest in the summary packet and the MD5 digest of the received advertisement calculated by the switch do not match. This error usually means that the VTP password in the two switches is different. To solve this problem, make sure the VTP password on all switches is the same.</p> <p>These errors mean that the switch is filtering incoming advertisements, which causes the VTP database to become unsynchronized across the network.</p>
Number of V1 summary errors	<p>Number of Version 1 errors.</p> <p>Version 1 summary errors increment whenever a switch in VTP V2 mode receives a VTP Version 1 frame. These errors mean that at least one neighboring switch is either running VTP Version 1 or VTP Version 2 with V2-mode disabled. To solve this problem, change the configuration of the switches in VTP V2-mode to disabled.</p>
Join Transmitted	Number of VTP pruning messages sent on the trunk.
Join Received	Number of VTP pruning messages received on the trunk.
Summary Advts Received from non-pruning-capable device	Number of VTP summary messages received on the trunk from devices that do not support pruning.

This is an example of output from the **show vtp status** command. [Table 2-36](#) describes each field in the display.

```
Switch> show vtp status
VTP Version                : 2
Configuration Revision     : 0
Maximum VLANs supported locally : 1005
Number of existing VLANs   : 45
VTP Operating Mode         : Transparent
VTP Domain Name            : shared_testbed1
VTP Pruning Mode           : Disabled
VTP V2 Mode                : Disabled
VTP Traps Generation       : Enabled
MD5 digest                 : 0x3A 0x29 0x86 0x39 0xB4 0x5D 0x58 0xD7
```

Table 2-36 *show vtp status Field Descriptions*

Field	Description
VTP Version	Displays the VTP version operating on the switch. By default, the switch implements Version 1 but can be set to Version 2.
Configuration Revision	Current configuration revision number on this switch.
Maximum VLANs Supported Locally	Maximum number of VLANs supported locally.
Number of Existing VLANs	Number of existing VLANs.
VTP Operating Mode	<p>Displays the VTP operating mode, which can be server, client, or transparent.</p> <p>Server: a switch in VTP server mode is enabled for VTP and sends advertisements. You can configure VLANs on it. The switch guarantees that it can recover all the VLAN information in the current VTP database from NVRAM after reboot. By default, every switch is a VTP server.</p> <p>Note The switch automatically changes from VTP server mode to VTP client mode if it detects a failure while writing the configuration to NVRAM and cannot return to server mode until the NVRAM is functioning.</p> <p>Client: a switch in VTP client mode is enabled for VTP, can send advertisements, but does not have enough nonvolatile storage to store VLAN configurations. You cannot configure VLANs on it. When a VTP client starts up, it does not send VTP advertisements until it receives advertisements to initialize its VLAN database.</p> <p>Transparent: a switch in VTP transparent mode is disabled for VTP, does not send or learn from advertisements sent by other devices, and cannot affect VLAN configurations on other devices in the network. The switch receives VTP advertisements and forwards them on all trunk ports except the one on which the advertisement was received.</p>
VTP Domain Name	Name that identifies the administrative domain for the switch.
VTP Pruning Mode	Displays whether pruning is enabled or disabled. Enabling pruning on a VTP server enables pruning for the entire management domain. Pruning restricts flooded traffic to those trunk links that the traffic must use to access the appropriate network devices.
VTP V2 Mode	Displays if VTP Version 2 mode is enabled. All VTP Version 2 switches operate in Version 1 mode by default. Each VTP switch automatically detects the capabilities of all the other VTP devices. A network of VTP devices should be configured to Version 2 only if all VTP switches in the network can operate in Version 2 mode.
VTP Traps Generation	Displays whether VTP traps are sent to a network management station.
MD5 Digest	A 16-byte checksum of the VTP configuration.
Configuration Last Modified	Displays the date and time of the last configuration modification. Displays the IP address of the switch that caused the configuration change to the database.

Related Commands	Command	Description
	clear vtp counters	Clears the VTP and pruning counters.
	vtp (global configuration)	Configures the VTP filename, interface name, domain name, and mode.
	vtp (VLAN configuration)	Configures the VTP domain name, password, pruning, and mode.

■ show vtp

shutdown

Use the **shutdown** interface configuration command to disable an interface. Use the **no** form of this command to restart a disabled interface.

shutdown

no shutdown

Syntax Description This command has no arguments or keywords.

Defaults The port is enabled (not shut down).

Command Modes Interface configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **shutdown** command causes a port to stop forwarding. You can enable the port with the **no shutdown** command.

The **no shutdown** command has no effect if the port is a static-access port assigned to a VLAN that has been deleted, suspended, or shut down. The port must first be a member of an active VLAN before it can be re-enabled.

The **shutdown** command disables all functions on the specified interface.

This command also marks the interface as unavailable. To see if an interface is disabled, use the **show interfaces** privileged EXEC command. An interface that has been shut down is shown as administratively down in the display.

Examples These examples show how to disable and re-enable a port:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# shutdown
```

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# no shutdown
```

You can verify your settings by entering the **show interfaces** privileged EXEC command.

Related Commands	Command	Description
	show interfaces	Displays the statistical information specific to all interfaces or to a specific interface.

shutdown vlan

Use the **shutdown vlan** global configuration command to shut down (suspend) local traffic on the specified VLAN. Use the **no** form of this command to restart local traffic on the VLAN.

shutdown vlan *vlan-id*

no shutdown vlan *vlan-id*

Syntax Description	<i>vlan-id</i>	ID of the VLAN to be locally shut down. The range is 2 to 1001. VLANs defined as default VLANs under the VLAN Trunking Protocol (VTP), as well as extended-range VLANs (greater than 1005) cannot be shut down. The default VLANs are 1 and 1002 to 1005.						
Defaults	No default is defined.							
Command Modes	Global configuration							
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>12.1(19)EA1</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	12.1(19)EA1	This command was introduced.			
Release	Modification							
12.1(19)EA1	This command was introduced.							
Usage Guidelines	The shutdown vlan command does not change the VLAN information in the VTP database. The command shuts down local traffic, but the switch still advertises VTP information.							
Examples	<p>This example shows how to shut down traffic on VLAN 2:</p> <pre>Switch(config)# shutdown vlan 2</pre> <p>You can verify your setting by entering the show vlan privileged EXEC command.</p>							
Related Commands	<table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>shutdown (config-vlan mode)</td> <td>Shuts down local traffic on the VLAN when in config-VLAN mode (accessed by the vlan <i>vlan-id</i> global configuration command).</td> </tr> <tr> <td>vlan database</td> <td>Enters VLAN configuration mode.</td> </tr> </tbody> </table>	Command	Description	shutdown (config-vlan mode)	Shuts down local traffic on the VLAN when in config-VLAN mode (accessed by the vlan <i>vlan-id</i> global configuration command).	vlan database	Enters VLAN configuration mode.	
Command	Description							
shutdown (config-vlan mode)	Shuts down local traffic on the VLAN when in config-VLAN mode (accessed by the vlan <i>vlan-id</i> global configuration command).							
vlan database	Enters VLAN configuration mode.							

snmp-server enable traps

Use the **snmp-server enable traps** global configuration command to enable the switch to send Simple Network Management Protocol (SNMP) notifications for various traps or inform requests to the network management system (NMS). Use the **no** form of this command to return to the default setting.

```
snmp-server enable traps [bgp | bridge [newroot] [topologychange] | cluster | config |
copy-config | entity | envmon [fan | shutdown | status | supply | temperature] | flash | hsrp
| ipmulticast | mac-notification | msdp | ospf [cisco-specific | errors | isa | rate-limit |
retransmit | state-change] | pim [invalid-pim-message | neighbor-change |
rp-mapping-change] | port-security [trap-rate value] | rtr | snmp [authentication | coldstart
| linkdown | linkup | warmstart] | storm-control trap-rate value | stpx [inconsistency
[root-inconsistency] [loop-inconsistency] | syslog | tty | vlan-membership | vlancreate |
vlandelete | vtp]
```

```
no snmp-server enable traps [bgp | bridge [newroot] [topologychange] | cluster | config |
copy-config | entity | envmon [fan | shutdown | status | supply | temperature] | flash | hsrp
| ipmulticast | mac-notification | msdp | ospf [cisco-specific | errors | isa | rate-limit |
retransmit | state-change] | pim [invalid-pim-message | neighbor-change |
rp-mapping-change] | port-security [trap-rate] | rtr | snmp [authentication | coldstart |
linkdown | linkup | warmstart] | storm-control trap-rate | stpx [inconsistency
[root-inconsistency] [loop-inconsistency] | syslog | tty | vlan-membership | vlancreate |
vlandelete | vtp]
```

Syntax Description

bgp	(Optional) Enable Border Gateway Protocol (BGP) state-change traps. Note This keyword is available only when the IP services image is installed on the switch.
bridge [newroot] [topologychange]	(Optional) Generate STP bridge MIB traps. The keywords have these meanings: <ul style="list-style-type: none"> newroot—(Optional) Enable SNMP STP Bridge MIB new root traps. topologychange—(Optional) Enable SNMP STP Bridge MIB topology change traps.
cluster	(Optional) Enable cluster traps.
config	(Optional) Enable SNMP configuration traps.
copy-config	(Optional) Enable SNMP copy-configuration traps.
entity	(Optional) Enable SNMP entity traps.
envmon [fan shutdown status supply temperature]	Optional) Enable SNMP environmental traps. The keywords have these meanings: <ul style="list-style-type: none"> fan—(Optional) Enable fan traps. shutdown—(Optional) Enable environmental monitor shutdown traps. status—(Optional) Enable SNMP environmental status-change traps. supply—(Optional) Enable environmental monitor power-supply traps. temperature—(Optional) Enable environmental monitor temperature traps.
flash	(Optional) Enable SNMP FLASH notifications.

hsrp	(Optional) Enable Hot Standby Router Protocol (HSRP) traps.
ipmulticast	(Optional) Enable IP multicast routing traps.
mac-notification	(Optional) Enable MAC address notification traps.
msdp	(Optional) Enable Multicast Source Discovery Protocol (MSDP) traps.
ospf [cisco-specific errors lsa rate-limit retransmit state-change]	(Optional) Enable Open Shortest Path First (OSPF) traps. The keywords have these meanings: <ul style="list-style-type: none"> • cisco-specific—(Optional) Enable Cisco-specific traps. • errors—(Optional) Enable error traps. • lsa—(Optional) Enable link-state advertisement (LSA) traps. • rate-limit—(Optional) Enable rate-limit traps. • retransmit—(Optional) Enable packet-retransmit traps. • state-change—(Optional) Enable state-change traps.
pim [invalid-pim-message neighbor-change rp-mapping-change]	(Optional) Enable Protocol-Independent Multicast (PIM) traps. The keywords have these meanings: <ul style="list-style-type: none"> • invalid-pim-message—(Optional) Enable invalid PIM message traps. • neighbor-change—(Optional) Enable PIM neighbor-change traps. • rp-mapping-change—(Optional) Enable rendezvous point (RP)-mapping change traps.
port-security [trap-rate <i>value</i>]	(Optional) Enable port security traps. Use the trap-rate keyword to set the maximum number of port-security traps sent per second. The range is from 0 to 1000; the default is 0 (no limit imposed; a trap is sent at every occurrence).
rtr	(Optional) Enable SNMP Response Time Reporter traps.
snmp [authentication coldstart linkdown linkup warmstart]	(Optional) Enable SNMP traps. The keywords have these meanings: <ul style="list-style-type: none"> • authentication—(Optional) Enable authentication trap. • coldstart—(Optional) Enable cold start trap. • linkdown—(Optional) Enable linkdown trap. • linkup—(Optional) Enable linkup trap. • warmstart—(Optional) Enable warmstart trap.
storm-control trap-rate <i>value</i>	(Optional) Enable storm-control traps. Use the trap-rate keyword to set the maximum number of storm-control traps sent per second. The range is 0 to 1000; the default is 0 (no limit is imposed; a trap is sent at every occurrence).
stp	(Optional) Enable SNMP STPX MIB traps. The keywords have these meanings: <ul style="list-style-type: none"> • inconsistency—(Optional) Enable SNMP STPX MIB Inconsistency Update traps. • root-inconsistency—(Optional) Enable SNMP STPX MIB Root Inconsistency Update traps. • loop-inconsistency—(Optional) Enable SNMP STPX MIB Loop Inconsistency Update traps.
syslog	(Optional) Enable SNMP syslog traps.
tty	(Optional) Send TCP connection traps. This is enabled by default.

vlan-membership	(Optional) Enable SNMP VLAN membership traps.
vlancreate	(Optional) Enable SNMP VLAN-created traps.
vlandelete	(Optional) Enable SNMP VLAN-deleted traps.
vtp	(Optional) Enable VLAN Trunking Protocol (VTP) traps.

**Note**

Though visible in the command-line help strings, the **cpu [threshold]**, **fru-ctrl**, **insertion**, and **removal** keywords are not supported. The **snmp-server enable informs** global configuration command is not supported. To enable the sending of SNMP inform notifications, use the **snmp-server enable traps** global configuration command combined with the **snmp-server host *host-addr* informs** global configuration command.

Defaults

The sending of SNMP traps is disabled.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(20)SE	The ipmulticast , msdp , ospf [cisco-specific errors lsa rate-limit retransmit state-change] , pim [invalid-pim-message neighbor-change rp-mapping-change] , and tty keywords were added.
12.2(25)SE	The storm-control trap-rate <i>value</i> keywords were added.

Usage Guidelines

Specify the host (NMS) that receives the traps by using the **snmp-server host** global configuration command. If no trap types are specified, all trap types are sent.

When supported, use the **snmp-server enable traps** command to enable sending of traps or informs.

**Note**

Informs are not supported in SNMPv1.

To enable more than one type of trap, you must enter a separate **snmp-server enable traps** command for each trap type.

Examples

This example shows how to send VTP traps to the NMS:

```
Switch(config)# snmp-server enable traps vtp
```

You can verify your setting by entering the **show vtp status** or the **show running-config** privileged EXEC command.

Related Commands	Command	Description
	show running-config	Displays the running configuration on the switch. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .
	snmp-server host	Specifies the host that receives SNMP traps.

snmp-server host

Use the **snmp-server host** global configuration command to specify the recipient (host) of a Simple Network Management Protocol (SNMP) notification operation. Use the **no** form of this command to remove the specified host.

```
snmp-server host host-addr [informs | traps] [version {1 | 2c | 3 {auth | noauth | priv}}] [vrf
vrf-instance] {community-string [notification-type]}
```

```
no snmp-server host host-addr [informs | traps] [version {1 | 2c | 3 {auth | noauth | priv}}] [vrf
vrf-instance] community-string
```

Syntax Description

<i>host-addr</i>	Name or Internet address of the host (the targeted recipient).
udp-port <i>port</i>	(Optional) Configure the User Datagram Protocol (UDP) port number of the host to receive the traps. The range is 0 to 65535.
informs traps	(Optional) Send SNMP traps or informs to this host.
version 1 2c 3	(Optional) Version of the SNMP used to send the traps. These keywords are supported: 1 —SNMPv1. This option is not available with informs. 2c —SNMPv2C. 3 —SNMPv3. These optional keywords can follow the Version 3 keyword: <ul style="list-style-type: none"> auth (Optional). Enables Message Digest 5 (MD5) and Secure Hash Algorithm (SHA) packet authentication. noauth (Default). The noAuthNoPriv security level. This is the default if the [auth noauth priv] keyword choice is not specified. priv (Optional). Enables Data Encryption Standard (DES) packet encryption (also called <i>privacy</i>). <p>Note The priv keyword is available only when the cryptographic (encrypted) software image is installed.</p>
vrf <i>vrf-instance</i>	(Optional) Virtual private network (VPN) routing instance and name for this host.

<i>community-string</i>	Password-like community string sent with the notification operation. Though you can set this string by using the snmp-server host command, we recommend that you define this string by using the snmp-server community global configuration command before using the snmp-server host command.
<i>notification-type</i>	<p>(Optional) Type of notification to be sent to the host. If no type is specified, all notifications are sent. The notification type can be one or more of the these keywords:</p> <ul style="list-style-type: none"> • bgp—Send Border Gateway Protocol (BGP) state change traps. This keyword is available only when the IP services image is installed switch. • bridge—Send SNMP Spanning Tree Protocol (STP) bridge MIB traps. • cluster—Send cluster member status traps. • config—Send SNMP configuration traps. • copy-config—Send SNMP copy configuration traps. • entity— Send SNMP entity traps. • envmon—Send environmental monitor traps. • flash—Send SNMP FLASH notifications. • hsrp—Send SNMP Hot Standby Router Protocol (HSRP) traps. • ipmulticast—Send SNMP IP multicast routing traps. • mac-notification—Send SNMP MAC notification traps. • msdp—Send SNMP Multicast Source Discovery Protocol (MSDP) traps. • ospf—Send Open Shortest Path First (OSPF) traps. • pim—Send SNMP Protocol-Independent Multicast (PIM) traps. • port-security—Send SNMP port-security traps. • rtr—Send SNMP Response Time Reporter traps. • snmp—Send SNMP-type traps. • storm-control—Send SNMP storm-control traps. • stp—Send SNMP STP extended MIB traps. • syslog—Send SNMP syslog traps. • tty—Send TCP connection traps. • udp-port <i>port</i>—Configure the User Datagram Protocol (UDP) port number of the host to receive the traps. The range is from 0 to 65535. • vlan-membership— Send SNMP VLAN membership traps. • vlancreate—Send SNMP VLAN-created traps. • vlandelete—Send SNMP VLAN-deleted traps. • vtp—Send SNMP VLAN Trunking Protocol (VTP) traps.

**Note**

Though visible in the command-line help strings, the **cpu** and **fru-ctrl** keywords are not supported.

Defaults

This command is disabled by default. No notifications are sent.

If you enter this command with no keywords, the default is to send all trap types to the host. No informs are sent to this host.

If no **version** keyword is present, the default is Version 1.

If Version 3 is selected and no authentication keyword is entered, the default is the **noauth** (noAuthNoPriv) security level.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(20)SE	The ipmulticast , msdp , ospf , and pim keywords were added. The command syntax was changed.
12.2(25)SE	The storm-control and vrf vrf-instance keywords were added.

Usage Guidelines

SNMP notifications can be sent as traps or inform requests. Traps are unreliable because the receiver does not send acknowledgments when it receives traps. The sender cannot determine if the traps were received. However, an SNMP entity that receives an inform request acknowledges the message with an SNMP response PDU. If the sender never receives the response, the inform request can be sent again. Thus, informs are more likely to reach their intended destinations.

However, informs consume more resources in the agent and in the network. Unlike a trap, which is discarded as soon as it is sent, an inform request must be held in memory until a response is received or the request times out. Traps are also sent only once, but an inform might be retried several times. The retries increase traffic and contribute to a higher overhead on the network.

If you do not enter an **snmp-server host** command, no notifications are sent. To configure the switch to send SNMP notifications, you must enter at least one **snmp-server host** command. If you enter the command with no keywords, all trap types are enabled for the host. To enable multiple hosts, you must enter a separate **snmp-server host** command for each host. You can specify multiple notification types in the command for each host.

If a local user is not associated with a remote host, the switch does not send informs for the **auth** (authNoPriv) and the **priv** (authPriv) authentication levels.

When multiple **snmp-server host** commands are given for the same host and kind of notification (trap or inform), each succeeding command overwrites the previous command. Only the last **snmp-server host** command is in effect. For example, if you enter an **snmp-server host inform** command for a host and then enter another **snmp-server host inform** command for the same host, the second command replaces the first.

The **snmp-server host** command is used with the **snmp-server enable traps** global configuration command. Use the **snmp-server enable traps** command to specify which SNMP notifications are sent globally. For a host to receive most notifications, at least one **snmp-server enable traps** command and the **snmp-server host** command for that host must be enabled. Some notification types cannot be controlled with the **snmp-server enable traps** command. For example, some notification types are always enabled. Other notification types are enabled by a different command.

The **no snmp-server host** command with no keywords disables traps, but not informs, to the host. To disable informs, use the **no snmp-server host informs** command.

Examples

This example shows how to configure a unique SNMP community string named *comaccess* for traps and prevent SNMP polling access with this string through access-list 10:

```
Switch(config)# snmp-server community comaccess ro 10
Switch(config)# snmp-server host 172.20.2.160 comaccess
Switch(config)# access-list 10 deny any
```

This example shows how to send the SNMP traps to the host specified by the name *myhost.cisco.com*. The community string is defined as *comaccess*:

```
Switch(config)# snmp-server enable traps
Switch(config)# snmp-server host myhost.cisco.com comaccess snmp
```

This example shows how to enable the switch to send all traps to the host *myhost.cisco.com* by using the community string *public*:

```
Switch(config)# snmp-server enable traps
Switch(config)# snmp-server host myhost.cisco.com public
```

You can verify your settings by entering the **show running-config** privileged EXEC command.

Related Commands

Command	Description
show running-config	Displays the running configuration on the switch. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .
snmp-server enable traps	Enables SNMP notification for various trap types or inform requests.

snmp trap mac-notification

Use the **snmp trap mac-notification** interface configuration command to enable the Simple Network Management Protocol (SNMP) MAC address notification trap on a specific Layer 2 interface. Use the **no** form of this command to return to the default setting.

snmp trap mac-notification {added | removed}

no snmp trap mac-notification {added | removed}

Syntax Description

added	Enable the MAC notification trap whenever a MAC address is added on this interface.
removed	Enable the MAC notification trap whenever a MAC address is removed from this interface.

Defaults

By default, the traps for both address addition and address removal are disabled.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Even though you enable the notification trap for a specific interface by using the **snmp trap mac-notification** command, the trap is generated only when you enable the **snmp-server enable traps mac-notification** and the **mac address-table notification** global configuration commands.

Examples

This example shows how to enable the MAC notification trap when a MAC address is added to a port:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# snmp trap mac-notification added
```

You can verify your settings by entering the **show mac address-table notification interface** privileged EXEC command.

Related Commands	Command	Description
	clear mac address-table notification	Clears the MAC address notification global counters.
	mac address-table notification	Enables the MAC address notification feature.
	show mac address-table notification	Displays the MAC address notification settings for all interfaces or on the specified interface when the interface keyword is appended.
	snmp-server enable traps	Sends the SNMP MAC notification traps when the mac-notification keyword is appended.

spanning-tree backbonefast

Use the **spanning-tree backbonefast** global configuration command to enable the BackboneFast feature. Use the **no** form of the command to return to the default setting.

spanning-tree backbonefast

no spanning-tree backbonefast

Syntax Description This command has no arguments or keywords.

Defaults BackboneFast is disabled.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You can configure the BackboneFast feature for rapid PVST+ or for multiple spanning-tree (MST) mode, but the feature remains disabled (inactive) until you change the spanning-tree mode to PVST+.

BackboneFast starts when a root port or blocked port on a switch receives inferior BPDUs from its designated switch. An inferior BPDU identifies a switch that declares itself as both the root bridge and the designated switch. When a switch receives an inferior BPDU, it means that a link to which the switch is not directly connected (an *indirect* link) has failed (that is, the designated switch has lost its connection to the root switch. If there are alternate paths to the root switch, BackboneFast causes the maximum aging time on the interfaces on which it received the inferior BPDU to expire and allows a blocked port to move immediately to the listening state. BackboneFast then transitions the interface to the forwarding state. For more information, see the software configuration guide for this release.

Enable BackboneFast on all supported switches to allow the detection of indirect link failures and to start the spanning-tree reconfiguration sooner.

Examples This example shows how to enable BackboneFast on the switch:

```
Switch(config)# spanning-tree backbonefast
```

You can verify your setting by entering the **show spanning-tree summary** privileged EXEC command.

Related Commands	Command	Description
	show spanning-tree summary	Displays a summary of the spanning-tree interface states.

spanning-tree bpdudfilter

Use the **spanning-tree bpdudfilter** interface configuration command to prevent an interface from sending or receiving bridge protocol data units (BPDUs). Use the **no** form of this command to return to the default setting.

spanning-tree bpdudfilter { disable | enable }

no spanning-tree bpdudfilter

Syntax Description	disable	Disable BPDU filtering on the specified interface.
	enable	Enable BPDU filtering on the specified interface.

Defaults BPDU filtering is disabled.

Command Modes Interface configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You can enable the BPDU filtering feature when the switch is operating in the per-VLAN spanning-tree plus (PVST+), rapid-PVST+, or the multiple spanning-tree (MST) mode.



Caution

Enabling BPDU filtering on an interface is the same as disabling spanning tree on it and can result in spanning-tree loops.

You can globally enable BPDU filtering on all Port Fast-enabled interfaces by using the **spanning-tree portfast bpdudfilter default** global configuration command.

You can use the **spanning-tree bpdudfilter** interface configuration command to override the setting of the **spanning-tree portfast bpdudfilter default** global configuration command.

Examples This example shows how to enable the BPDU filtering feature on a port:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# spanning-tree bpdudfilter enable
```

You can verify your setting by entering the **show running-config** privileged EXEC command.

Related Commands	Command	Description
	show running-config	Displays the current operating configuration. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .
	spanning-tree portfast (global configuration)	Globally enables the BPDU filtering or the BPDU guard feature on Port Fast-enabled interface or enables the Port Fast feature on all nontrunking interfaces.
	spanning-tree portfast (interface configuration)	Enables the Port Fast feature on an interface and all its associated VLANs.

spanning-tree bpduguard

Use the **spanning-tree bpduguard** interface configuration command to put an interface in the error-disabled state when it receives a bridge protocol data unit (BPDU). Use the **no** form of this command to return to the default setting.

spanning-tree bpduguard { disable | enable }

no spanning-tree bpduguard

Syntax Description	disable	Disable BPDU guard on the specified interface.
	enable	Enable BPDU guard on the specified interface.

Defaults BPDU guard is disabled.

Command Modes Interface configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines

The BPDU guard feature provides a secure response to invalid configurations because you must manually put the interface back in service. Use the BPDU guard feature in a service-provider network to prevent an interface from being included in the spanning-tree topology.

You can enable the BPDU guard feature when the switch is operating in the per-VLAN spanning-tree plus (PVST+), rapid-PVST+, or the multiple spanning-tree (MST) mode.

You can globally enable BPDU guard on all Port Fast-enabled interfaces by using the **spanning-tree portfast bpduguard default** global configuration command.

You can use the **spanning-tree bpduguard** interface configuration command to override the setting of the **spanning-tree portfast bpduguard default** global configuration command.

Examples This example shows how to enable the BPDU guard feature on a port:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# spanning-tree bpduguard enable
```

You can verify your setting by entering the **show running-config** privileged EXEC command.

Related Commands	Command	Description
	show running-config	Displays the current operating configuration. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .
	spanning-tree portfast (global configuration)	Globally enables the BPDU filtering or the BPDU guard feature on Port Fast-enabled interfaces or enables the Port Fast feature on all nontrunking interfaces.
	spanning-tree portfast (interface configuration)	Enables the Port Fast feature on an interface and all its associated VLANs.

spanning-tree cost

Use the **spanning-tree cost** interface configuration command to set the path cost for spanning-tree calculations. If a loop occurs, spanning tree considers the path cost when selecting an interface to place in the forwarding state. Use the **no** form of this command to return to the default setting.

```
spanning-tree [vlan vlan-id] cost cost
```

```
no spanning-tree [vlan vlan-id] cost
```

Syntax Description

vlan <i>vlan-id</i>	(Optional) VLAN range associated with a spanning-tree instance. You can specify a single VLAN identified by VLAN ID number, a range of VLANs separated by a hyphen, or a series of VLANs separated by a comma. The range is 1 to 4094.
<i>cost</i>	Path cost. The range is 1 to 200000000, with higher values meaning higher costs.

Defaults

The default path cost is computed from the interface bandwidth setting. These are the IEEE default path cost values:

- 1000 Mbps—4
- 100 Mbps—19
- 10 Mbps—100

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

When you configure the cost, higher values represent higher costs.

If you configure an interface with both the **spanning-tree vlan *vlan-id* cost *cost*** command and the **spanning-tree cost *cost*** command, the **spanning-tree vlan *vlan-id* cost *cost*** command takes effect.

Examples

This example shows how to set the path cost to 250 on a port:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# spanning-tree cost 250
```

This example shows how to set a path cost to 300 for VLANs 10, 12 to 15, and 20:

```
Switch(config-if)# spanning-tree vlan 10,12-15,20 cost 300
```

You can verify your settings by entering the **show spanning-tree interface *interface-id*** privileged EXEC command.

Related Commands	Command	Description
	show spanning-tree interface <i>interface-id</i>	Displays spanning-tree information for the specified interface.
	spanning-tree port-priority	Configures an interface priority.
	spanning-tree vlan priority	Sets the switch priority for the specified spanning-tree instance.

spanning-tree etherchannel guard misconfig

Use the **spanning-tree etherchannel guard misconfig** global configuration command to display an error message when the switch detects an EtherChannel misconfiguration. Use the **no** form of this command to disable the feature.

spanning-tree etherchannel guard misconfig

no spanning-tree etherchannel guard misconfig

Syntax Description This command has no arguments or keywords.

Defaults EtherChannel guard is enabled on the switch.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines When the switch detects an EtherChannel misconfiguration, this error message appears:

```
PM-4-ERR_DISABLE: Channel-misconfig error detected on [chars], putting [chars] in
err-disable state.
```

To show switch ports that are in the misconfigured EtherChannel, use the **show interfaces status err-disabled** privileged EXEC command. To verify the EtherChannel configuration on a remote device, use the **show etherchannel summary** privileged EXEC command on the remote device.

When a port is in the error-disabled state because of an EtherChannel misconfiguration, you can bring it out of this state by entering the **errdisable recovery cause channel-misconfig** global configuration command, or you can manually re-enable it by entering the **shutdown** and **no shut down** interface configuration commands.

Examples This example shows how to enable the EtherChannel guard misconfiguration feature:

```
Switch(config)# spanning-tree etherchannel guard misconfig
```

You can verify your settings by entering the **show spanning-tree summary** privileged EXEC command.

Related Commands	Command	Description
	errdisable recovery cause channel-misconfig	Enables the timer to recover from the EtherChannel misconfiguration error-disabled state.
	show etherchannel summary	Displays EtherChannel information for a channel as a one-line summary per channel-group.
	show interfaces status err-disabled	Displays the interfaces in the error-disabled state.

spanning-tree extend system-id

Use the **spanning-tree extend system-id** global configuration command to enable the extended system ID feature.

spanning-tree extend system-id



Note

Though visible in the command-line help strings, the **no** version of this command is not supported. You cannot disable the extended system ID feature.

Syntax Description

This command has no arguments or keywords.

Defaults

The extended system ID is enabled.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The switch supports the IEEE 802.1t spanning-tree extensions. Some of the bits previously used for the switch priority are now used for the extended system ID (VLAN identifier for the per-VLAN spanning-tree plus [PVST+] and rapid PVST+ or as an instance identifier for the multiple spanning tree [MST]).

The spanning tree uses the extended system ID, the switch priority, and the allocated spanning-tree MAC address to make the bridge ID unique for each VLAN or multiple spanning-tree instance.

Support for the extended system ID affects how you manually configure the root switch, the secondary root switch, and the switch priority of a VLAN. For more information, see the “[spanning-tree mst root](#)” and the “[spanning-tree vlan](#)” sections.

If your network consists of switches that do not support the extended system ID and switches that do support it, it is unlikely that the switch with the extended system ID support will become the root switch. The extended system ID increases the switch priority value every time the VLAN number is greater than the priority of the connected switches.

Related Commands

Command	Description
<code>show spanning-tree summary</code>	Displays a summary of spanning-tree interface states.
<code>spanning-tree mst root</code>	Configures the MST root switch priority and timers based on the network diameter.
<code>spanning-tree vlan priority</code>	Sets the switch priority for the specified spanning-tree instance.

spanning-tree guard

Use the **spanning-tree guard** interface configuration command to enable root guard or loop guard on all the VLANs associated with the selected interface. Root guard restricts which interface is allowed to be the spanning-tree root port or the path-to-the root for the switch. Loop guard prevents alternate or root ports from becoming designated ports when a failure creates a unidirectional link. Use the **no** form of this command to return to the default setting.

spanning-tree guard {loop | none | root}

no spanning-tree guard

Syntax Description

loop	Enable loop guard.
none	Disable root guard or loop guard.
root	Enable root guard.

Defaults

Root guard is disabled.

Loop guard is configured according to the **spanning-tree loopguard default** global configuration command (globally disabled).

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You can enable root guard or loop guard when the switch is operating in the per-VLAN spanning-tree plus (PVST+), rapid-PVST+, or the multiple spanning-tree (MST) mode.

When root guard is enabled, if spanning-tree calculations cause an interface to be selected as the root port, the interface transitions to the root-inconsistent (blocked) state to prevent the customer's switch from becoming the root switch or being in the path to the root. The root port provides the best path from the switch to the root switch.

When the **no spanning-tree guard** or the **no spanning-tree guard none** command is entered, root guard is disabled for all VLANs on the selected interface. If this interface is in the root-inconsistent (blocked) state, it automatically transitions to the listening state.

Do not enable root guard on interfaces that will be used by the UplinkFast feature. With UplinkFast, the backup interfaces (in the blocked state) replace the root port in the case of a failure. However, if root guard is also enabled, all the backup interfaces used by the UplinkFast feature are placed in the root-inconsistent state (blocked) and prevented from reaching the forwarding state. The UplinkFast feature is not available when the switch is operating in the rapid-PVST+ or MST mode.

Loop guard is most effective when it is configured on the entire switched network. When the switch is operating in PVST+ or rapid-PVST+ mode, loop guard prevents alternate and root ports from becoming designated ports, and spanning tree does not send bridge protocol data units (BPDUs) on root or alternate ports. When the switch is operating in MST mode, BPDUs are not sent on nonboundary interfaces if the interface is blocked by loop guard in all MST instances. On a boundary interface, loop guard blocks the interface in all MST instances.

To disable root guard or loop guard, use the **spanning-tree guard none** interface configuration command. You cannot enable both root guard and loop guard at the same time.

You can override the setting of the **spanning-tree loopguard default** global configuration command by using the **spanning-tree guard loop** interface configuration command.

Examples

This example shows how to enable root guard on all the VLANs associated with the specified port:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# spanning-tree guard root
```

This example shows how to enable loop guard on all the VLANs associated with the specified port:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# spanning-tree guard loop
```

You can verify your settings by entering the **show running-config** privileged EXEC command.

Related Commands

Command	Description
show running-config	Displays the current operating configuration. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .
spanning-tree cost	Sets the path cost for spanning-tree calculations.
spanning-tree loopguard default	Prevents alternate or root ports from becoming designated ports because of a failure that leads to a unidirectional link.
spanning-tree mst cost	Configures the path cost for MST calculations.
spanning-tree mst port-priority	Configures an interface priority.
spanning-tree mst root	Configures the MST root switch priority and timers based on the network diameter.
spanning-tree port-priority	Configures an interface priority.
spanning-tree vlan priority	Sets the switch priority for the specified spanning-tree instance.

spanning-tree link-type

Use the **spanning-tree link-type** interface configuration command to override the default link-type setting, which is determined by the duplex mode of the interface, and to enable rapid spanning-tree transitions to the forwarding state. Use the **no** form of this command to return to the default setting.

spanning-tree link-type { point-to-point | shared }

no spanning-tree link-type

Syntax Description

point-to-point	Specify that the link type of an interface is point-to-point.
shared	Specify that the link type of an interface is shared.

Defaults

The switch derives the link type of an interface from the duplex mode. A full-duplex interface is considered a point-to-point link, and a half-duplex interface is considered a shared link.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You can override the default setting of the link type by using the **spanning-tree link-type** command. For example, a half-duplex link can be physically connected point-to-point to a single interface on a remote switch running the Multiple Spanning Tree Protocol (MSTP) or the rapid per-VLAN spanning-tree plus (rapid-PVST+) protocol and be enabled for rapid transitions.

Examples

This example shows how to specify the link type as shared (regardless of the duplex setting) and to prevent rapid transitions to the forwarding state:

```
Switch(config-if)# spanning-tree link-type shared
```

You can verify your setting by entering the **show spanning-tree mst interface *interface-id*** or the **show spanning-tree interface *interface-id*** privileged EXEC command.

Related Commands	Command	Description
	clear spanning-tree detected-protocols	Restarts the protocol migration process (force the renegotiation with neighboring switches) on all interfaces or on the specified interface.
	show spanning-tree interface <i>interface-id</i>	Displays spanning-tree state information for the specified interface.
	show spanning-tree mst interface <i>interface-id</i>	Displays MST information for the specified interface.

spanning-tree loopguard default

Use the **spanning-tree loopguard default** global configuration command to prevent alternate or root ports from becoming designated ports because of a failure that leads to a unidirectional link. Use the **no** form of this command to return to the default setting.

spanning-tree loopguard default

no spanning-tree loopguard default

Syntax Description This command has no arguments or keywords.

Defaults Loop guard is disabled.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You can enable the loop guard feature when the switch is operating in the per-VLAN spanning-tree plus (PVST+), rapid-PVST+, or the multiple spanning-tree (MST) mode.

Loop guard is most effective when it is configured on the entire switched network. When the switch is operating in PVST+ or rapid-PVST+ mode, loop guard prevents alternate and root ports from becoming designated ports, and spanning tree does not send bridge protocol data units (BPDUs) on root or alternate ports. When the switch is operating in MST mode, BPDUs are not sent on nonboundary interfaces if the interface is blocked by loop guard in all MST instances. On a boundary interface, loop guard blocks the interface in all MST instances.

Loop guard operates only on interfaces that the spanning tree identifies as point-to-point.

You can override the setting of the **spanning-tree loopguard default** global configuration command by using the **spanning-tree guard loop** interface configuration command.

Examples This example shows how to globally enable loop guard:

```
Switch(config)# spanning-tree loopguard default
```

You can verify your settings by entering the **show running-config** privileged EXEC command.

Related Commands	Command	Description
	show running-config	Displays the current operating configuration. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .
	spanning-tree guard loop	Enables the loop guard feature on all the VLANs associated with the specified interface.

spanning-tree mode

Use the **spanning-tree mode** global configuration command to enable per-VLAN spanning-tree plus (PVST+), rapid PVST+, or multiple spanning tree (MST) on your switch. Use the **no** form of this command to return to the default setting.

spanning-tree mode {mst | pvst | rapid-pvst}

no spanning-tree mode

Syntax Description	Command	Description
	mst	Enable MST and Rapid Spanning Tree Protocol (RSTP) (based on IEEE 802.1s and IEEE 802.1w).
	pvst	Enable PVST+ (based on IEEE 802.1D).
	rapid-pvst	Enable rapid PVST+ (based on IEEE 802.1w).

Defaults The default mode is PVST+.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The switch supports PVST+, rapid PVST+, and MSTP, but only one version can be active at any time: All VLANs run PVST+, all VLANs run rapid PVST+, or all VLANs run MSTP.

When you enable the MST mode, RSTP is automatically enabled.



Caution

Changing spanning-tree modes can disrupt traffic because all spanning-tree instances are stopped for the previous mode and restarted in the new mode.

Examples This example shows to enable MST and RSTP on the switch:

```
Switch(config)# spanning-tree mode mst
```

This example shows to enable rapid PVST+ on the switch:

```
Switch(config)# spanning-tree mode rapid-pvst
```

You can verify your setting by entering the **show running-config** privileged EXEC command.

Related Commands	Command	Description
	show running-config	Displays the current operating configuration. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

spanning-tree mst configuration

Use the **spanning-tree mst configuration** global configuration command to enter multiple spanning-tree (MST) configuration mode through which you configure the MST region. Use the **no** form of this command to return to the default settings.

spanning-tree mst configuration

no spanning-tree mst configuration

Syntax Description This command has no arguments or keywords.

Defaults The default mapping is that all VLANs are mapped to the common and internal spanning-tree (CIST) instance (instance 0).

The default name is an empty string.

The revision number is 0.

Command Modes Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SEC	The <i>instance-id range</i> changed to 1 to 4094.

Usage Guidelines

The **spanning-tree mst configuration** command enables the MST configuration mode. These configuration commands are available:

- **abort**: exits the MST region configuration mode without applying configuration changes.
- **exit**: exits the MST region configuration mode and applies all configuration changes.
- **instance** *instance-id* **vlan** *vlan-range*: maps VLANs to an MST instance. The range for the *instance-id* is 1 to 4094. The range for *vlan-range* is 1 to 4094. You can specify a single VLAN identified by VLAN ID number, a range of VLANs separated by a hyphen, or a series of VLANs separated by a comma.
- **name** *name*: sets the configuration name. The *name* string has a maximum length of 32 characters and is case sensitive.
- **no**: negates the **instance**, **name**, and **revision** commands or sets them to their defaults.
- **private-vlan**: Though visible in the command-line help strings, this command is not supported.
- **revision** *version*: sets the configuration revision number. The range is 0 to 65535.
- **show** [**current** | **pending**]: displays the current or pending MST region configuration.

In MST mode, the switch supports up to 65 MST instances. The number of VLANs that can be mapped to a particular MST instance is unlimited.

When you map VLANs to an MST instance, the mapping is incremental, and VLANs specified in the command are added to or removed from the VLANs that were previously mapped. To specify a range, use a hyphen; for example, **instance 1 vlan 1-63** maps VLANs 1 to 63 to MST instance 1. To specify a series, use a comma; for example, **instance 1 vlan 10, 20, 30** maps VLANs 10, 20, and 30 to MST instance 1.

All VLANs that are not explicitly mapped to an MST instance are mapped to the common and internal spanning tree (CIST) instance (instance 0) and cannot be unmapped from the CIST by using the **no** form of the command.

For two or more switches to be in the same MST region, they must have the same VLAN mapping, the same configuration revision number, and the same name.

Examples

This example shows how to enter MST configuration mode, map VLANs 10 to 20 to MST instance 1, name the region *region1*, set the configuration revision to 1, display the pending configuration, apply the changes, and return to global configuration mode:

```
Switch# spanning-tree mst configuration
Switch(config-mst)# instance 1 vlan 10-20
Switch(config-mst)# name region1
Switch(config-mst)# revision 1
Switch(config-mst)# show pending
Pending MST configuration
Name      [region1]
Revision  1
Instance  Vlans Mapped
-----  -
0         1-9,21-4094
1         10-20
-----

Switch(config-mst)# exit
Switch(config)#
```

This example shows how to add VLANs 1 to 100 to the ones already mapped (if any) to instance 2, to move VLANs 40 to 60 that were previously mapped to instance 2 to the CIST instance, to add VLAN 10 to instance 10, and to remove all the VLANs mapped to instance 2 and map them to the CIST instance:

```
Switch(config-mst)# instance 2 vlan 1-100
Switch(config-mst)# no instance 2 vlan 40-60
Switch(config-mst)# instance 10 vlan 10
Switch(config-mst)# no instance 2
```

You can verify your settings by entering the **show pending** MST configuration command.

Related Commands

Command	Description
show spanning-tree mst configuration	Displays the MST region configuration.

spanning-tree mst cost

Use the **spanning-tree mst cost** interface configuration command to set the path cost for multiple spanning-tree (MST) calculations. If a loop occurs, spanning tree considers the path cost when selecting an interface to put in the forwarding state. Use the **no** form of this command to return to the default setting.

spanning-tree mst *instance-id* **cost** *cost*

no spanning-tree mst *instance-id* **cost**

Syntax Description	<i>instance-id</i>	Range of spanning-tree instances. You can specify a single instance, a range of instances separated by a hyphen, or a series of instances separated by a comma. The range is 0 to 4094.
	<i>cost</i>	Path cost is 1 to 200000000, with higher values meaning higher costs.

Defaults The default path cost is computed from the interface bandwidth setting. These are the IEEE default path cost values:

- 1000 Mbps—20000
- 100 Mbps—200000
- 10 Mbps—2000000

Command Modes Interface configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
	12.2(25)SEC	The <i>instance-id</i> range changed to 1 to 4094.

Usage Guidelines When you configure the cost, higher values represent higher costs.

Examples This example shows how to set a path cost of 250 on a port associated with instances 2 and 4:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# spanning-tree mst 2,4 cost 250
```

You can verify your settings by entering the **show spanning-tree mst interface** *interface-id* privileged EXEC command.

Related Commands	Command	Description
	show spanning-tree mst interface <i>interface-id</i>	Displays MST information for the specified interface.
	spanning-tree mst port-priority	Configures an interface priority.
	spanning-tree mst priority	Configures the switch priority for the specified spanning-tree instance.

spanning-tree mst forward-time

Use the **spanning-tree mst forward-time** global configuration command to set the forward-delay time for all multiple spanning-tree (MST) instances. The forwarding time specifies how long each of the listening and learning states last before the interface begins forwarding. Use the **no** form of this command to return to the default setting.

spanning-tree mst forward-time *seconds*

no spanning-tree mst forward-time

Syntax Description	<i>seconds</i>	Length of the listening and learning states. The range is 4 to 30 seconds.
---------------------------	----------------	--

Defaults	The default is 15 seconds.
-----------------	----------------------------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	Changing the spanning-tree mst forward-time command affects all spanning-tree instances.
-------------------------	---

Examples	This example shows how to set the spanning-tree forwarding time to 18 seconds for all MST instances: Switch(config)# spanning-tree mst forward-time 18
-----------------	--

You can verify your setting by entering the **show spanning-tree mst** privileged EXEC command.

Related Commands	Command	Description
	show spanning-tree mst	Displays MST information.
	spanning-tree mst hello-time	Sets the interval between hello bridge protocol data units (BPDUs) sent by root switch configuration messages.
	spanning-tree mst max-age	Sets the interval between messages that the spanning tree receives from the root switch.
	spanning-tree mst max-hops	Sets the number of hops in a region before the BPDU is discarded.

spanning-tree mst hello-time

Use the **spanning-tree mst hello-time** global configuration command to set the interval between hello bridge protocol data units (BPDUs) sent by root switch configuration messages. Use the **no** form of this command to return to the default setting.

spanning-tree mst hello-time *seconds*

no spanning-tree mst hello-time

Syntax Description	<i>seconds</i>	Interval between hello BPDUs sent by root switch configuration messages. The range is 1 to 10 seconds.
---------------------------	----------------	--

Defaults	The default is 2 seconds.
-----------------	---------------------------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	<p>After you set the spanning-tree mst max-age <i>seconds</i> global configuration command, if a switch does not receive BPDUs from the root switch within the specified interval, the switch recomputes the spanning-tree topology. The max-age setting must be greater than the hello-time setting.</p> <p>Changing the spanning-tree mst hello-time command affects all spanning-tree instances.</p>
-------------------------	---

Examples	<p>This example shows how to set the spanning-tree hello time to 3 seconds for all multiple spanning-tree (MST) instances:</p>
-----------------	--

```
Switch(config)# spanning-tree mst hello-time 3
```

You can verify your setting by entering the **show spanning-tree mst** privileged EXEC command.

Related Commands	Command	Description
	show spanning-tree mst	Displays MST information.
	spanning-tree mst forward-time	Sets the forward-delay time for all MST instances.
	spanning-tree mst max-age	Sets the interval between messages that the spanning tree receives from the root switch.
	spanning-tree mst max-hops	Sets the number of hops in a region before the BPDU is discarded.

spanning-tree mst max-age

Use the **spanning-tree mst max-age** global configuration command to set the interval between messages that the spanning tree receives from the root switch. If a switch does not receive a bridge protocol data unit (BPDU) message from the root switch within this interval, it recomputes the spanning-tree topology. Use the **no** form of this command to return to the default setting.

spanning-tree mst max-age *seconds*

no spanning-tree mst max-age

Syntax Description	<i>seconds</i> Interval between messages the spanning tree receives from the root switch. The range is 6 to 40 seconds.										
Defaults	The default is 20 seconds.										
Command Modes	Global configuration										
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>12.1(19)EA1</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	12.1(19)EA1	This command was introduced.						
Release	Modification										
12.1(19)EA1	This command was introduced.										
Usage Guidelines	<p>After you set the spanning-tree mst max-age <i>seconds</i> global configuration command, if a switch does not receive BPDUs from the root switch within the specified interval, the switch recomputes the spanning-tree topology. The max-age setting must be greater than the hello-time setting.</p> <p>Changing the spanning-tree mst max-age command affects all spanning-tree instances.</p>										
Examples	<p>This example shows how to set the spanning-tree max-age to 30 seconds for all multiple spanning-tree (MST) instances:</p> <pre>Switch(config)# spanning-tree mst max-age 30</pre> <p>You can verify your setting by entering the show spanning-tree mst privileged EXEC command.</p>										
Related Commands	<table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>show spanning-tree mst</td> <td>Displays MST information.</td> </tr> <tr> <td>spanning-tree mst forward-time</td> <td>Sets the forward-delay time for all MST instances.</td> </tr> <tr> <td>spanning-tree mst hello-time</td> <td>Sets the interval between hello BPDUs sent by root switch configuration messages.</td> </tr> <tr> <td>spanning-tree mst max-hops</td> <td>Sets the number of hops in a region before the BPDU is discarded.</td> </tr> </tbody> </table>	Command	Description	show spanning-tree mst	Displays MST information.	spanning-tree mst forward-time	Sets the forward-delay time for all MST instances.	spanning-tree mst hello-time	Sets the interval between hello BPDUs sent by root switch configuration messages.	spanning-tree mst max-hops	Sets the number of hops in a region before the BPDU is discarded.
Command	Description										
show spanning-tree mst	Displays MST information.										
spanning-tree mst forward-time	Sets the forward-delay time for all MST instances.										
spanning-tree mst hello-time	Sets the interval between hello BPDUs sent by root switch configuration messages.										
spanning-tree mst max-hops	Sets the number of hops in a region before the BPDU is discarded.										

spanning-tree mst max-hops

Use the **spanning-tree mst max-hops** global configuration command to set the number of hops in a region before the bridge protocol data unit (BPDU) is discarded and the information held for an interface is aged. Use the **no** form of this command to return to the default setting.

spanning-tree mst max-hops *hop-count*

no spanning-tree mst max-hops

Syntax Description	<i>hop-count</i> Number of hops in a region before the BPDU is discarded. The range is 1 to 255 hops.
---------------------------	---

Defaults	The default is 20 hops.
-----------------	-------------------------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
12.2(25)SEC	The <i>hop-count</i> range changed to 1 to 255.	

Usage Guidelines	The root switch of the instance always sends a BPDU (or M-record) with a cost of 0 and the hop count set to the maximum value. When a switch receives this BPDU, it decrements the received remaining hop count by one and propagates the decremented count as the remaining hop count in the generated M-records. A switch discards the BPDU and ages the information held for the interface when the count reaches 0.
-------------------------	---

Changing the **spanning-tree mst max-hops** command affects all spanning-tree instances.

Examples	This example shows how to set the spanning-tree max-hops to 10 for all multiple spanning-tree (MST) instances:
-----------------	--

```
Switch(config)# spanning-tree mst max-hops 10
```

You can verify your setting by entering the **show spanning-tree mst** privileged EXEC command.

Related Commands	Command	Description
	show spanning-tree mst	Displays MST information.
	spanning-tree mst forward-time	Sets the forward-delay time for all MST instances.
	spanning-tree mst hello-time	Sets the interval between hello BPDUs sent by root switch configuration messages.
	spanning-tree mst max-age	Sets the interval between messages that the spanning tree receives from the root switch.

spanning-tree mst port-priority

Use the **spanning-tree mst port-priority** interface configuration command to configure an interface priority. If a loop occurs, the Multiple Spanning Tree Protocol (MSTP) can find the interface to put in the forwarding state. Use the **no** form of this command to return to the default setting.

spanning-tree mst *instance-id* **port-priority** *priority*

no spanning-tree mst *instance-id* **port-priority**

Syntax Description

<i>instance-id</i>	Range of spanning-tree instances. You can specify a single instance, a range of instances separated by a hyphen, or a series of instances separated by a comma. The range is 0 to 4094.
<i>priority</i>	The range is 0 to 240 in increments of 16. Valid priority values are 0, 16, 32, 48, 64, 80, 96, 112, 128, 144, 160, 176, 192, 208, 224, and 240. All other values are rejected. The lower the number, the higher the priority.

Defaults

The default is 128.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SEC	The <i>instance-id</i> range changed to 1 to 4094.

Usage Guidelines

You can assign higher priority values (lower numerical values) to interfaces that you want selected first and lower priority values (higher numerical values) that you want selected last. If all interfaces have the same priority value, the multiple spanning tree (MST) puts the interface with the lowest interface number in the forwarding state and blocks other interfaces.

Examples

This example shows how to increase the likelihood that the interface associated with spanning-tree instances 20 and 22 is placed into the forwarding state if a loop occurs:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# spanning-tree mst 20,22 port-priority 0
```

You can verify your settings by entering the **show spanning-tree mst interface *interface-id*** privileged EXEC command.

Related Commands

Command	Description
show spanning-tree mst interface <i>interface-id</i>	Displays MST information for the specified interface.
spanning-tree mst cost	Sets the path cost for MST calculations.
spanning-tree mst priority	Sets the switch priority for the specified spanning-tree instance.

spanning-tree mst pre-standard

Use the **spanning-tree mst pre-standard** interface configuration command to configure a port to send only prestandard bridge protocol data units (BPDUs).

spanning-tree mst pre-standard

no spanning-tree mst pre-standard

Syntax Description This command has no arguments or keywords.

Command Default The default state is automatic detection of prestandard neighbors.

Command Modes Interface configuration

Command History	Release	Modification
	12.2(25)SEC	This command was introduced.

Usage Guidelines The port can accept both prestandard and standard BPDUs. If the neighbor types are mismatched, only the common and internal spanning tree (CIST) runs on this interface.



Note

If a switch port is connected to a switch running prestandard Cisco IOS software, you *must* use the **spanning-tree mst pre-standard** interface configuration command on the port. If you do not configure the port to send only prestandard BPDUs, the Multiple STP (MSTP) performance might diminish.

When the port is configured to automatically detect prestandard neighbors, the *prestandard* flag always appears in the **show spanning-tree mst** commands.

Examples This example shows how to configure a port to send only prestandard BPDUs:

```
Switch(config-if)# spanning-tree mst pre-standard
```

You can verify your settings by entering the **show spanning-tree mst** privileged EXEC command.

Related Commands	Command	Description
	show spanning-tree mst <i>instance-id</i>	Displays multiple spanning-tree (MST) information, including the <i>prestandard</i> flag, for the specified interface.

spanning-tree mst priority

Use the **spanning-tree mst priority** global configuration command to set the switch priority for the specified spanning-tree instance. Use the **no** form of this command to return to the default setting.

spanning-tree mst *instance-id* **priority** *priority*

no spanning-tree mst *instance-id* **priority**

Syntax Description	<i>instance-id</i>	Range of spanning-tree instances. You can specify a single instance, a range of instances separated by a hyphen, or a series of instances separated by a comma. The range is 0 to 4094.
	priority	Set the switch priority for the specified spanning-tree instance. This setting affects the likelihood that the switch is selected as the root switch. A lower value increases the probability that the switch is selected as the root switch. The range is 0 to 61440 in increments of 4096. Valid priority values are 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, and 61440. All other values are rejected.

Defaults The default is 32768.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
12.2(25)SEC	The <i>instance-id</i> range changed to 1 to 4094.	

Examples This example shows how to set the spanning-tree priority to 8192 for multiple spanning-tree instances (MST) 20 to 21:

```
Switch(config)# spanning-tree mst 20-21 priority 8192
```

You can verify your settings by entering the **show spanning-tree mst** *instance-id* privileged EXEC command.

Related Commands	Command	Description
		show spanning-tree mst <i>instance-id</i>
	spanning-tree mst cost	Sets the path cost for MST calculations.
	spanning-tree mst port-priority	Configures an interface priority.

spanning-tree mst root

Use the **spanning-tree mst root** global configuration command to configure the multiple spanning-tree (MST) root switch priority and timers based on the network diameter. Use the **no** form of this command to return to the default settings.

```
spanning-tree mst instance-id root {primary | secondary} [diameter net-diameter
[hello-time seconds]]
```

```
no spanning-tree mst instance-id root
```

Syntax Description

<i>instance-id</i>	Range of spanning-tree instances. You can specify a single instance, a range of instances separated by a hyphen, or a series of instances separated by a comma. The range is 0 to 4094.
root primary	Force this switch to be the root switch.
root secondary	Set this switch to be the root switch should the primary root switch fail.
diameter <i>net-diameter</i>	(Optional) Set the maximum number of switches between any two end stations. The range is 2 to 7. This keyword is available only for MST instance 0.
hello-time <i>seconds</i>	(Optional) Set the interval between hello bridge protocol data units (BPDUs) sent by the root switch configuration messages. The range is 1 to 10 seconds. This keyword is available only for MST instance 0.

Defaults

The primary root switch priority is 24576.
 The secondary root switch priority is 28672.
 The hello time is 2 seconds.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SEC	The <i>instance-id</i> range changed to 1 to 4094.

Usage Guidelines

Use the **spanning-tree mst *instance-id* root** command only on backbone switches.

When you enter the **spanning-tree mst *instance-id* root** command, the software tries to set a high enough priority to make this switch the root of the spanning-tree instance. Because of the extended system ID support, the switch sets the switch priority for the instance to 24576 if this value will cause this switch to become the root for the specified instance. If any root switch for the specified instance has a switch priority lower than 24576, the switch sets its own priority to 4096 less than the lowest switch priority. (4096 is the value of the least-significant bit of a 4-bit switch priority value.)

When you enter the **spanning-tree mst *instance-id* root secondary** command, because of support for the extended system ID, the software changes the switch priority from the default value (32768) to 28672. If the root switch fails, this switch becomes the next root switch (if the other switches in the network use the default switch priority of 32768 and are therefore unlikely to become the root switch).

Examples

This example shows how to configure the switch as the root switch for instance 10 with a network diameter of 4:

```
Switch(config)# spanning-tree mst 10 root primary diameter 4
```

This example shows how to configure the switch as the secondary root switch for instance 10 with a network diameter of 4:

```
Switch(config)# spanning-tree mst 10 root secondary diameter 4
```

You can verify your settings by entering the **show spanning-tree mst *instance-id*** privileged EXEC command.

Related Commands

Command	Description
show spanning-tree mst <i>instance-id</i>	Displays MST information for the specified instance.
spanning-tree mst forward-time	Sets the forward-delay time for all MST instances.
spanning-tree mst hello-time	Sets the interval between hello BPDUs sent by root switch configuration messages.
spanning-tree mst max-age	Sets the interval between messages that the spanning tree receives from the root switch.
spanning-tree mst max-hops	Sets the number of hops in a region before the BPDU is discarded.

spanning-tree port-priority

Use the **spanning-tree port-priority** interface configuration command to configure an interface priority. If a loop occurs, spanning tree can find the interface to put in the forwarding state. Use the **no** form of this command to return to the default setting.

spanning-tree [**vlan** *vlan-id*] **port-priority** *priority*

no spanning-tree [**vlan** *vlan-id*] **port-priority**

Syntax Description

vlan <i>vlan-id</i>	(Optional) VLAN range associated with a spanning-tree instance. You can specify a single VLAN identified by VLAN ID number, a range of VLANs separated by a hyphen, or a series of VLANs separated by a comma. The range is 1 to 4094.
<i>priority</i>	Number from 0 to 240, in increments of 16. Valid values are 0, 16, 32, 48, 64, 80, 96, 112, 128, 144, 160, 176, 192, 208, 224, and 240. All other values are rejected. The lower the number, the higher the priority.

Defaults

The default is 128.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

If the variable *vlan-id* is omitted, the command applies to the spanning-tree instance associated with VLAN 1.

You can set the priority on a VLAN that has no interfaces assigned to it. The setting takes effect when you assign the interface to the VLAN.

If you configure an interface with both the **spanning-tree vlan** *vlan-id* **port-priority** *priority* command and the **spanning-tree port-priority** *priority* command, the **spanning-tree vlan** *vlan-id* **port-priority** *priority* command takes effect.

Examples

This example shows how to increase the likelihood that a port will be put in the forwarding state if a loop occurs:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# spanning-tree vlan 20 port-priority 0
```

This example shows how to set the port-priority value on VLANs 20 to 25:

```
Switch(config-if)# spanning-tree vlan 20-25 port-priority 0
```

You can verify your settings by entering the **show spanning-tree interface *interface-id*** privileged EXEC command.

Related Commands

Command	Description
show spanning-tree interface <i>interface-id</i>	Displays spanning-tree information for the specified interface.
spanning-tree cost	Sets the path cost for spanning-tree calculations.
spanning-tree vlan <i>priority</i>	Sets the switch priority for the specified spanning-tree instance.

spanning-tree portfast (global configuration)

Use the **spanning-tree portfast** global configuration command to globally enable bridge protocol data unit (BPDU) filtering on Port Fast-enabled interfaces, the BPDU guard feature on Port Fast-enabled interfaces, or the Port Fast feature on all nontrunking interfaces. The BPDU filtering feature prevents the switch interface from sending or receiving BPDUs. The BPDU guard feature puts Port Fast-enabled interfaces that receive BPDUs in an error-disabled state. Use the **no** form of this command to return to the default settings.

spanning-tree portfast { bpdupfilter default | bpduguard default | default }

no spanning-tree portfast { bpdupfilter default | bpduguard default | default }

Syntax Description		
bpdupfilter default	Globally enable BPDU filtering on Port Fast-enabled interfaces and prevent the switch interface connected to end stations from sending or receiving BPDUs.	
bpduguard default	Globally enable the BPDU guard feature on Port Fast-enabled interfaces and place the interfaces that receive BPDUs in an error-disabled state.	
default	Globally enable the Port Fast feature on all nontrunking interfaces. When the Port Fast feature is enabled, the interface changes directly from a blocking state to a forwarding state without making the intermediate spanning-tree state changes.	

Defaults

The BPDU filtering, the BPDU guard, and the Port Fast features are disabled on all interfaces unless they are individually configured.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You can enable these features when the switch is operating in the per-VLAN spanning-tree plus (PVST+) rapid-PVST+, or the multiple spanning-tree (MST) mode.

Use the **spanning-tree portfast bpdupfilter default** global configuration command to globally enable BPDU filtering on interfaces that are Port Fast-enabled (the interfaces are in a Port Fast-operational state). The interfaces still send a few BPDUs at link-up before the switch begins to filter outbound BPDUs. You should globally enable BPDU filtering on a switch so that hosts connected to switch interfaces do not receive BPDUs. If a BPDU is received on a Port Fast-enabled interface, the interface loses its Port Fast-operational status and BPDU filtering is disabled.

You can override the **spanning-tree portfast bpdupfilter default** global configuration command by using the **spanning-tree bdpfilter** interface configuration command.

**Caution**

Enabling BPDU filtering on an interface is the same as disabling spanning tree on it and can result in spanning-tree loops.

Use the **spanning-tree portfast bpduguard default** global configuration command to globally enable BPDU guard on interfaces that are in a Port Fast-operational state. In a valid configuration, Port Fast-enabled interfaces do not receive BPDUs. Receiving a BPDU on a Port Fast-enabled interface signals an invalid configuration, such as the connection of an unauthorized device, and the BPDU guard feature puts the interface in the error-disabled state. The BPDU guard feature provides a secure response to invalid configurations because you must manually put the interface back in service. Use the BPDU guard feature in a service-provider network to prevent an access port from participating in the spanning tree.

You can override the **spanning-tree portfast bpduguard default** global configuration command by using the **spanning-tree bpduguard** interface configuration command.

Use the **spanning-tree portfast default** global configuration command to globally enable the Port Fast feature on all nontrunking interfaces. Configure Port Fast only on interfaces that connect to end stations; otherwise, an accidental topology loop could cause a data packet loop and disrupt switch and network operation. A Port Fast-enabled interface moves directly to the spanning-tree forwarding state when linkup occurs without waiting for the standard forward-delay time.

You can override the **spanning-tree portfast default** global configuration command by using the **spanning-tree portfast** interface configuration command. You can use the **no spanning-tree portfast default** global configuration command to disable Port Fast on all interfaces unless they are individually configured with the **spanning-tree portfast** interface configuration command.

Examples

This example shows how to globally enable the BPDU filtering feature:

```
Switch(config)# spanning-tree portfast bpdudfilter default
```

This example shows how to globally enable the BPDU guard feature:

```
Switch(config)# spanning-tree portfast bpduguard default
```

This example shows how to globally enable the Port Fast feature on all nontrunking interfaces:

```
Switch(config)# spanning-tree portfast default
```

You can verify your settings by entering the **show running-config** privileged EXEC command.

Related Commands

Command	Description
show running-config	Displays the current operating configuration. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .
spanning-tree bpdudfilter	Prevents an interface from sending or receiving BPDUs.
spanning-tree bpduguard	Puts an interface in the error-disabled state when it receives a BPDU.
spanning-tree portfast (interface configuration)	Enables the Port Fast feature on an interface in all its associated VLANs.

spanning-tree portfast (interface configuration)

Use the **spanning-tree portfast** interface configuration command to enable the Port Fast feature on an interface in all its associated VLANs. When the Port Fast feature is enabled, the interface changes directly from a blocking state to a forwarding state without making the intermediate spanning-tree state changes. Use the **no** form of this command to return to the default setting.

spanning-tree portfast [**disable** | **trunk**]

no spanning-tree portfast

Syntax Description	disable	(Optional) Disable the Port Fast feature on the specified interface.
	trunk	(Optional) Enable the Port Fast feature on a trunking interface.

Defaults The Port Fast feature is disabled on all interfaces; however, it is automatically enabled on dynamic-access ports.

Command Modes Interface configuration

Command History	Release	Modification
		12.1(19)EA1

Usage Guidelines Use this feature only on interfaces that connect to end stations; otherwise, an accidental topology loop could cause a data packet loop and disrupt switch and network operation.

To enable Port Fast on trunk ports, you must use the **spanning-tree portfast trunk** interface configuration command. The **spanning-tree portfast** command is not supported on trunk ports.

You can enable this feature when the switch is operating in the per-VLAN spanning-tree plus (PVST+), rapid-PVST+, or the multiple spanning-tree (MST) mode.

This feature affects all VLANs on the interface.

An interface with the Port Fast feature enabled is moved directly to the spanning-tree forwarding state without the standard forward-time delay.

You can use the **spanning-tree portfast default** global configuration command to globally enable the Port Fast feature on all nontrunking interfaces. However, the **spanning-tree portfast** interface configuration command can override the global setting.

If you configure the **spanning-tree portfast default** global configuration command, you can disable Port Fast on an interface that is not a trunk interface by using the **spanning-tree portfast disable** interface configuration command.

Examples

This example shows how to enable the Port Fast feature on a port:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# spanning-tree portfast
```

You can verify your settings by entering the **show running-config** privileged EXEC command.

Related Commands

Command	Description
show running-config	Displays the current operating configuration. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .
spanning-tree bpdufilter	Prevents an interface from sending or receiving bridge protocol data units (BPDUs).
spanning-tree bpduguard	Puts an interface in the error-disabled state when it receives a BPDU.
spanning-tree portfast (global configuration)	Globally enables the BPDU filtering or the BPDU guard feature on Port Fast-enabled interfaces or enables the Port Fast feature on all nontrunking interfaces.

spanning-tree transmit hold-count

Use the **spanning-tree transmit hold-count** global configuration command to configure the number of bridge protocol data units (BPDUs) sent every second. Use the **no** form of this command to return to the default setting.

spanning-tree transmit hold-count [*value*]

no spanning-tree transmit hold-count [*value*]

Syntax Description

value (Optional) Number of BPDUs sent every second. The range is 1 to 20.

Defaults

The default is 6.

Command Modes

Global configuration

Command History

Release	Modification
12.2(25)SEC	This command was introduced.

Usage Guidelines

Increasing the transmit hold-count value can have a significant impact on CPU utilization when the switch is in rapid-per-VLAN spanning-tree plus (rapid-PVST+) mode. Decreasing this value might slow down convergence. We recommend using the default setting.

Examples

This example shows how to set the transmit hold count to 8:

```
Switch(config)# spanning-tree transmit hold-count 8
```

You can verify your setting by entering the **show spanning-tree mst** privileged EXEC command.

Related Commands

Command	Description
show spanning-tree mst	Displays the multiple spanning-tree (MST) region configuration and status, including the transmit hold count.

spanning-tree uplinkfast

Use the **spanning-tree uplinkfast** global configuration command to accelerate the choice of a new root port when a link or switch fails or when the spanning tree reconfigures itself. Use the **no** form of this command to return to the default setting.

spanning-tree uplinkfast [**max-update-rate** *pkts-per-second*]

no spanning-tree uplinkfast [**max-update-rate**]

Syntax Description	max-update-rate <i>pkts-per-second</i> (Optional) The number of packets per second at which update packets are sent. The range is 0 to 32000.				
Defaults	UplinkFast is disabled. The update rate is 150 packets per second.				
Command Modes	Global configuration				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>12.1(19)EA1</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	12.1(19)EA1	This command was introduced.
Release	Modification				
12.1(19)EA1	This command was introduced.				
Usage Guidelines	<p>Use this command only on access switches.</p> <p>You can configure the UplinkFast feature for rapid PVST+ or for multiple spanning-tree (MST) mode, but the feature remains disabled (inactive) until you change the spanning-tree mode to PVST+.</p> <p>When you enable UplinkFast, it is enabled for the entire switch and cannot be enabled for individual VLANs.</p> <p>When UplinkFast is enabled, the switch priority of all VLANs is set to 49152. If you change the path cost to a value less than 3000 and you enable UplinkFast or UplinkFast is already enabled, the path cost of all interfaces and VLAN trunks is increased by 3000 (if you change the path cost to 3000 or above, the path cost is not altered). The changes to the switch priority and the path cost reduces the chance that a switch will become the root switch.</p> <p>When UplinkFast is disabled, the switch priorities of all VLANs and path costs of all interfaces are set to default values if you did not modify them from their defaults.</p> <p>When spanning tree detects that the root port has failed, UplinkFast immediately changes to an alternate root port, changing the new root port directly to forwarding state. During this time, a topology change notification is sent.</p>				

Do not enable the root guard on interfaces that will be used by the UplinkFast feature. With UplinkFast, the backup interfaces (in the blocked state) replace the root port in the case of a failure. However, if root guard is also enabled, all the backup interfaces used by the UplinkFast feature are placed in the root-inconsistent state (blocked) and prevented from reaching the forwarding state.

If you set the max-update-rate to 0, station-learning frames are not generated, so the spanning-tree topology converges more slowly after a loss of connectivity.

Examples

This example shows how to enable UplinkFast:

```
Switch(config)# spanning-tree uplinkfast
```

You can verify your setting by entering the **show spanning-tree summary** privileged EXEC command.

Related Commands

Command	Description
show spanning-tree summary	Displays a summary of the spanning-tree interface states.
spanning-tree vlan root primary	Forces this switch to be the root switch.

spanning-tree vlan

Use the **spanning-tree vlan** global configuration command to configure spanning tree on a per-VLAN basis. Use the **no** form of this command to return to the default setting.

```
spanning-tree vlan vlan-id [forward-time seconds | hello-time seconds | max-age seconds |
priority priority | root {primary | secondary} [diameter net-diameter
[hello-time seconds]]]
```

```
no spanning-tree vlan vlan-id [forward-time | hello-time | max-age | priority | root]
```

Syntax Description	
<i>vlan-id</i>	VLAN range associated with a spanning-tree instance. You can specify a single VLAN identified by VLAN ID number, a range of VLANs separated by a hyphen, or a series of VLANs separated by a comma. The range is 1 to 4094.
forward-time <i>seconds</i>	(Optional) Set the forward-delay time for the specified spanning-tree instance. The forwarding time specifies how long each of the listening and learning states last before the interface begins forwarding. The range is 4 to 30 seconds.
hello-time <i>seconds</i>	(Optional) Set the interval between hello bridge protocol data units (BPDUs) sent by the root switch configuration messages. The range is 1 to 10 seconds.
max-age <i>seconds</i>	(Optional) Set the interval between messages the spanning tree receives from the root switch. If a switch does not receive a BPDU message from the root switch within this interval, it recomputes the spanning-tree topology. The range is 6 to 40 seconds.
priority <i>priority</i>	(Optional) Set the switch priority for the specified spanning-tree instance. This setting affects the likelihood that this switch is selected as the root switch. A lower value increases the probability that the switch is selected as the root switch. The range is 0 to 61440 in increments of 4096. Valid priority values are 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, and 61440. All other values are rejected.
root primary	(Optional) Force this switch to be the root switch.
root secondary	(Optional) Set this switch to be the root switch should the primary root switch fail.
diameter <i>net-diameter</i>	(Optional) Set the maximum number of switches between any two end stations. The range is 2 to 7.

Defaults

Spanning tree is enabled on all VLANs.

The forward-delay time is 15 seconds.

The hello time is 2 seconds.

The max-age is 20 seconds.

The primary root switch priority is 24576.

The secondary root switch priority is 28672.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines Disabling the STP causes the VLAN to stop participating in the spanning-tree topology. Interfaces that are administratively down remain down. Received BPDUs are forwarded like other multicast frames. The VLAN does not detect and prevent loops when STP is disabled.

You can disable the STP on a VLAN that is not currently active and verify the change by using the **show running-config** or the **show spanning-tree vlan *vlan-id*** privileged EXEC command. The setting takes effect when the VLAN is activated.

When disabling or re-enabling the STP, you can specify a range of VLANs that you want to disable or enable.

When a VLAN is disabled and then enabled, all assigned VLANs continue to be its members. However, all spanning-tree bridge parameters are returned to their previous settings (the last setting before the VLAN was disabled).

You can enable spanning-tree options on a VLAN that has no interfaces assigned to it. The setting takes effect when you assign interfaces to it.

When setting the **max-age *seconds***, if a switch does not receive BPDUs from the root switch within the specified interval, it recomputes the spanning-tree topology. The **max-age** setting must be greater than the **hello-time** setting.

The **spanning-tree vlan *vlan-id* root** command should be used only on backbone switches.

When you enter the **spanning-tree vlan *vlan-id* root** command, the software checks the switch priority of the current root switch for each VLAN. Because of the extended system ID support, the switch sets the switch priority for the specified VLAN to 24576 if this value will cause this switch to become the root for the specified VLAN. If any root switch for the specified VLAN has a switch priority lower than 24576, the switch sets its own priority for the specified VLAN to 4096 less than the lowest switch priority. (4096 is the value of the least-significant bit of a 4-bit switch priority value.)

When you enter the **spanning-tree vlan *vlan-id* root secondary** command, because of support for the extended system ID, the software changes the switch priority from the default value (32768) to 28672. If the root switch should fail, this switch becomes the next root switch (if the other switches in the network use the default switch priority of 32768, and therefore, are unlikely to become the root switch).

Examples This example shows how to disable the STP on VLAN 5:

```
Switch(config)# no spanning-tree vlan 5
```

You can verify your setting by entering the **show spanning-tree** privileged EXEC command. In this instance, VLAN 5 does not appear in the list.

This example shows how to set the spanning-tree forwarding time to 18 seconds for VLANs 20 and 25:

```
Switch(config)# spanning-tree vlan 20,25 forward-time 18
```

This example shows how to set the spanning-tree hello-delay time to 3 seconds for VLANs 20 to 24:

```
Switch(config)# spanning-tree vlan 20-24 hello-time 3
```

This example shows how to set spanning-tree max-age to 30 seconds for VLAN 20:

```
Switch(config)# spanning-tree vlan 20 max-age 30
```

This example shows how to reset the **max-age** parameter to the default value for spanning-tree instance 100 and 105 to 108:

```
Switch(config)# no spanning-tree vlan 100, 105-108 max-age
```

This example shows how to set the spanning-tree priority to 8192 for VLAN 20:

```
Switch(config)# spanning-tree vlan 20 priority 8192
```

This example shows how to configure the switch as the root switch for VLAN 10 with a network diameter of 4:

```
Switch(config)# spanning-tree vlan 10 root primary diameter 4
```

This example shows how to configure the switch as the secondary root switch for VLAN 10 with a network diameter of 4:

```
Switch(config)# spanning-tree vlan 10 root secondary diameter 4
```

You can verify your settings by entering the **show spanning-tree vlan *vlan-id*** privileged EXEC command.

Related Commands

Command	Description
show spanning-tree vlan	Displays spanning-tree information.
spanning-tree cost	Sets the path cost for spanning-tree calculations.
spanning-tree guard	Enables the root guard or the loop guard feature for all the VLANs associated with the selected interface.
spanning-tree port-priority	Sets an interface priority.
spanning-tree portfast (global configuration)	Globally enables the BPDU filtering or the BPDU guard feature on Port Fast-enabled interfaces or enables the Port Fast feature on all nontrunking interfaces.
spanning-tree portfast (interface configuration)	Enables the Port Fast feature on an interface in all its associated VLANs.
spanning-tree uplinkfast	Enables the UplinkFast feature, which accelerates the choice of a new root port.

speed

Use the **speed** interface configuration command to specify the speed of a 10/100 Mbps or 10/100/1000 Mbps port. Use the **no** or **default** form of this command to return the port to its default value.

```
speed {10 | 100 | 1000 | auto [10 | 100 | 1000] | nonegotiate }
```

```
no speed
```

Syntax Description

10	Port runs at 10 Mbps.
100	Port runs at 100 Mbps.
1000	Port runs at 1000 Mbps. This option is valid and visible only on 10/100/1000 Mbps-ports.
auto	Port automatically detects the speed it should run at based on the port at the other end of the link. If you use the 10 , 100 , or 1000 keywords with the auto keyword, the port only autonegotiates at the specified speeds.
nonegotiate	Autonegotiation is disabled, and the port runs at 1000 Mbps. (

Defaults

The default is **auto**.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(20)SE1	Support for the 10 , 100 , and 1000 keywords with the auto keyword was added.

Usage Guidelines

Except for the 1000BASE-T SFP modules, if an SFP module port is connected to a device that does not support autonegotiation, you can configure the speed to not negotiate (**nonegotiate**).

If the speed is set to **auto**, the switch negotiates with the device at the other end of the link for the speed setting and then forces the speed setting to the negotiated value. The duplex setting remains as configured on each end of the link, which could result in a duplex setting mismatch.

If both ends of the line support autonegotiation, we highly recommend the default autonegotiation settings. If one interface supports autonegotiation and the other end does not, do use the **auto** setting on the supported side, but set the duplex and speed on the other side.



Caution

Changing the interface speed and duplex mode configuration might shut down and re-enable the interface during the reconfiguration.

For guidelines on setting the switch speed and duplex parameters, see the “Configuring Interface Characteristics” chapter in the software configuration guide for this release.

Examples

This example shows how to set speed on a port to 100 Mbps:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# speed 100
```

This example shows how to set a port to autonegotiate at only 10 Mbps:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# speed auto 10
```

This example shows how to set a port to autonegotiate at only 10 or 100 Mbps:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# speed auto 10 100
```

You can verify your settings by entering the **show interfaces** privileged EXEC command.

Related Commands

Command	Description
duplex	Specifies the duplex mode of operation.
show interfaces	Displays the statistical information specific to all interfaces or to a specific interface.

srr-queue bandwidth limit

Use the **srr-queue bandwidth limit** interface configuration command to limit the maximum output on a port. Use the **no** form of this command to return to the default setting.

srr-queue bandwidth limit *weight1*

no srr-queue bandwidth limit

Syntax Description

weight1 Percentage of the port speed to which the port should be limited. The range is 10 to 90.

Defaults

The port is not rate limited and is set to 100 percent.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

If you configure this command to 80 percent, the port is idle 20 percent of the time. The line rate drops to 80 percent of the connected speed. These values are not exact because the hardware adjusts the line rate in increments of six.



Note

The egress queue default settings are suitable for most situations. You should change them only when you have a thorough understanding of the egress queues and if these settings do not meet your quality of service (QoS) solution.

Examples

This example shows how to limit a port to 800 Mbps:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# srr-queue bandwidth limit 80
```

You can verify your settings by entering the **show mls qos interface** *[interface-id]* **queueing** privileged EXEC command.

Related Commands

Command	Description
mls qos queue-set output buffers	Allocates buffers to the queue-set.
mls qos srr-queue output cos-map	Maps class of service (CoS) values to egress queue or maps CoS values to a queue and to a threshold ID.
mls qos srr-queue output dscp-map	Maps Differentiated Services Code Point (DSCP) values to an egress queue or maps DSCP values to a queue and to a threshold ID.
mls qos queue-set output threshold	Configures the weighted tail-drop (WTD) thresholds, guarantees the availability of buffers, and configures the maximum memory allocation for the queue-set.
queue-set	Maps a port to a queue-set.
show mls qos interface queueing	Displays QoS information.
srr-queue bandwidth shape	Assigns the shaped weights and enables bandwidth shaping on the four egress queues mapped to a port.
srr-queue bandwidth share	Assigns the shared weights and enables bandwidth sharing on the four egress queues mapped to a port.

srr-queue bandwidth shape

Use the **srr-queue bandwidth shape** interface configuration command to assign the shaped weights and to enable bandwidth shaping on the four egress queues mapped to a port. Use the **no** form of this command to return to the default setting.

```
srr-queue bandwidth shape weight1 weight2 weight3 weight4
```

```
no srr-queue bandwidth shape
```

Syntax Description

<i>weight1 weight2 weight3 weight4</i>	Specify the weights to specify the percentage of the port that is shaped. The inverse ratio ($1/weight$) specifies the shaping bandwidth for this queue. Separate each value with a space. The range is 0 to 65535.
--	---

Defaults

Weight1 is set to 25. Weight2, weight3, and weight4 are set to 0, and these queues are in shared mode.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

In shaped mode, the queues are guaranteed a percentage of the bandwidth, and they are rate-limited to that amount. Shaped traffic does not use more than the allocated bandwidth even if the link is idle. Use shaping to smooth bursty traffic or to provide a smoother output over time.

The shaped mode overrides the shared mode.

If you configure a shaped queue weight to 0 by using the **srr-queue bandwidth shape** interface configuration command, this queue participates in shared mode. The weight specified with the **srr-queue bandwidth shape** command is ignored, and the weights specified with the **srr-queue bandwidth share** interface configuration command for a queue come into effect.

When configuring queues for the same port for both shaping and sharing, make sure that you configure the lowest numbered queue for shaping.



Note

The egress queue default settings are suitable for most situations. You should change them only when you have a thorough understanding of the egress queues and if these settings do not meet your QoS solution.

Examples

This example shows how to configure the queues for the same port for both shaping and sharing. Because the weight ratios for queues 2, 3, and 4 are set to 0, these queues operate in shared mode. The bandwidth weight for queue 1 is 1/8, which is 12.5 percent. Queue 1 is guaranteed this bandwidth and limited to it; it does not extend its slot to the other queues even if the other queues have no traffic and are idle. Queues 2, 3, and 4 are in shared mode, and the setting for queue 1 is ignored. The bandwidth ratio allocated for the queues in shared mode is $4/(4+4+4)$, which is 33 percent:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# srr-queue bandwidth shape 8 0 0 0
Switch(config-if)# srr-queue bandwidth share 4 4 4 4
```

You can verify your settings by entering the **show mls qos interface** [*interface-id*] **queueing** privileged EXEC command.

Related Commands

Command	Description
mls qos queue-set output buffers	Allocates buffers to a queue-set.
mls qos srr-queue output cos-map	Maps class of service (CoS) values to an egress queue or maps CoS values to a queue and to a threshold ID.
mls qos srr-queue output dscp-map	Maps Differentiated Services Code Point (DSCP) values to an egress queue or maps DSCP values to a queue and to a threshold ID.
mls qos queue-set output threshold	Configures the weighted tail-drop (WTD) thresholds, guarantees the availability of buffers, and configures the maximum memory allocation to a queue-set.
priority-queue	Enables the egress expedite queue on a port.
queue-set	Maps a port to a queue-set.
show mls qos interface queueing	Displays quality of service (QoS) information.
srr-queue bandwidth share	Assigns the shared weights and enables bandwidth sharing on the four egress queues mapped to a port.

srr-queue bandwidth share

Use the **srr-queue bandwidth share** interface configuration command switch to assign the shared weights and to enable bandwidth sharing on the four egress queues mapped to a port. The ratio of the weights is the ratio of frequency in which the shaped round robin (SRR) scheduler dequeues packets from each queue. Use the **no** form of this command to return to the default setting.

```
srr-queue bandwidth share weight1 weight2 weight3 weight4
```

```
no srr-queue bandwidth share
```

Syntax Description

weight1 weight2 weight3 weight4 The ratios of *weight1*, *weight2*, *weight3*, and *weight4* specify the ratio of the frequency in which the SRR scheduler dequeues packets. Separate each value with a space. The range is 1 to 255.

Defaults

Weight1, weight2, weight3, and weight4 are 25 (1/4 of the bandwidth is allocated to each queue).

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The absolute value of each weight is meaningless, and only the ratio of parameters is used.

In shared mode, the queues share the bandwidth among them according to the configured weights. The bandwidth is guaranteed at this level but not limited to it. For example, if a queue empties and does not require a share of the link, the remaining queues can expand into the unused bandwidth and share it among themselves.

If you configure a shaped queue weight to 0 by using the **srr-queue bandwidth shape** interface configuration command, this queue participates in SRR shared mode. The weight specified with the **srr-queue bandwidth shape** command is ignored, and the weights specified with the **srr-queue bandwidth share** interface configuration command for a queue take effect.

When configuring queues for the same port for both shaping and sharing, make sure that you configure the lowest numbered queue for shaping.



Note

The egress queue default settings are suitable for most situations. You should change them only when you have a thorough understanding of the egress queues and if these settings do not meet your QoS solution.

Examples

This example shows how to configure the weight ratio of the SRR scheduler running on an egress port. Four queues are used. The bandwidth ratio allocated for each queue in shared mode is $1/(1+2+3+4)$, $2/(1+2+3+4)$, $3/(1+2+3+4)$, and $4/(1+2+3+4)$, which is 10 percent, 20 percent, 30 percent, and 40 percent for queues 1, 2, 3, and 4. This means that queue 4 has four times the bandwidth of queue 1, twice the bandwidth of queue 2, and one-and-a-third times the bandwidth of queue 3.

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# srr-queue bandwidth share 1 2 3 4
```

You can verify your settings by entering the **show mls qos interface** [*interface-id*] **queueing** privileged EXEC command.

Related Commands

Command	Description
mls qos queue-set output buffers	Allocates buffers to a queue-set.
mls qos srr-queue output cos-map	Maps class of service (CoS) values to an egress queue or maps CoS values to a queue and to a threshold ID.
mls qos srr-queue output dscp-map	Maps Differentiated Services Code Point (DSCP) values to an egress queue or maps DSCP values to a queue and to a threshold ID.
mls qos queue-set output threshold	Configures the weighted tail-drop (WTD) thresholds, guarantees the availability of buffers, and configures the maximum memory allocation to a queue-set.
priority-queue	Enables the egress expedite queue on a port.
queue-set	Maps a port to a queue-set.
show mls qos interface queueing	Displays quality of service (QoS) information.
srr-queue bandwidth shape	Assigns the shaped weights and enables bandwidth shaping on the four egress queues mapped to a port.

storm-control

Use the **storm-control** interface configuration command to enable broadcast, multicast, or unicast storm control and to set threshold levels on an interface. Use the **no** form of this command to return to the default setting.

```
storm-control {{ broadcast | multicast | unicast } level { level [level-low] | bps bps [bps-low] | pps
pps [pps-low] }} | { action { shutdown | trap } }
```

```
no storm-control {{ broadcast | multicast | unicast } level } | { action { shutdown | trap } }
```

Syntax Description

broadcast	Enable broadcast storm control on the interface.
multicast	Enable multicast storm control on the interface.
unicast	Enable unicast storm control on the interface.
level <i>level</i> [<i>level-low</i>]	Specify the rising and falling suppression levels as a percentage of total bandwidth of the port. <ul style="list-style-type: none"> <i>level</i>—Rising suppression level, up to two decimal places. The range is 0.00 to 100.00. Block the flooding of storm packets when the value specified for <i>level</i> is reached. <i>level-low</i>—(Optional) Falling suppression level, up to two decimal places. The range is 0.00 to 100.00. This value must be less than or equal to the rising suppression value. If you do not configure a falling suppression level, it is set to the rising suppression level.
level bps <i>bps</i> [<i>bps-low</i>]	Specify the rising and falling suppression levels as a rate in bits per second at which traffic is received on the port. <ul style="list-style-type: none"> <i>bps</i>—Rising suppression level, up to 1 decimal place. The range is 0.0 to 10000000000.0. Block the flooding of storm packets when the value specified for <i>bps</i> is reached. <i>bps-low</i>—(Optional) Falling suppression level, up to 1 decimal place. The range is 0.0 to 10000000000.0. This value must be equal to or less than the rising suppression value. <p>You can use metric suffixes such as k, m, and g for large number thresholds.</p>

level pps pps [pps-low]	Specify the rising and falling suppression levels as a rate in packets per second at which traffic is received on the port. <ul style="list-style-type: none"> • <i>pps</i>—Rising suppression level, up to 1 decimal place. The range is 0.0 to 10000000000.0. Block the flooding of storm packets when the value specified for <i>pps</i> is reached. • <i>pps-low</i>—(Optional) Falling suppression level, up to 1 decimal place. The range is 0.0 to 10000000000.0. This value must be equal to or less than the rising suppression value. <p>You can use metric suffixes such as k, m, and g for large number thresholds.</p>
action { shutdown trap }	Action taken when a storm occurs on a port. The default action is to filter traffic and to not send an Simple Network Management Protocol (SNMP) trap. <p>The keywords have these meanings:</p> <ul style="list-style-type: none"> • shutdown—Disables the port during a storm. • trap—Sends an SNMP trap when a storm occurs.

Defaults

Broadcast, multicast, and unicast storm control are disabled.

The default action is to filter traffic and to not send an SNMP trap.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	The level level [.level] options were replaced with the level {level [level-low] pps pps [pps-low] bps bps [bps-low]} action {shutdown trap} options.

Usage Guidelines

Storm control is supported only on physical interfaces. It is not supported on EtherChannel port channels, even though it is available in the command-line interface (CLI).

The storm-control suppression level can be entered as a percentage of total bandwidth of the port, as a rate in packets per second at which traffic is received, or as a rate in bits per second at which traffic is received.

When specified as a percentage of total bandwidth, a suppression value of 100 percent means that no limit is placed on the specified traffic type. A value of **level 0 0** means that all broadcast, multicast, or unicast traffic on that port is blocked. Storm control is enabled only when the rising suppression level is less than 100 percent. If no other storm-control configuration is specified, the default action is to filter the traffic causing the storm and to send no SNMP traps.

**Note**

When the storm control threshold for multicast traffic is reached, all multicast traffic except control traffic, such as bridge protocol data unit (BDPU) and Cisco Discovery Protocol (CDP) frames, are blocked. However, the switch does not differentiate between routing updates, such as Open Shortest Path First (OSPF) and regular multicast data traffic, so both types of traffic are blocked.

The **trap** and **shutdown** options are independent of each other.

If you configure the action to be taken as shutdown (the port is error-disabled during a storm) when a packet storm is detected, you must use the **no shutdown** interface configuration command to bring the interface out of this state. If you do not specify the **shutdown** action, specify the action as **trap** (the switch generates a trap when a storm is detected).

When a storm occurs and the action is to filter traffic, if the falling suppression level is not specified, the switch blocks all traffic until the traffic rate drops below the rising suppression level. If the falling suppression level is specified, the switch blocks traffic until the traffic rate drops below this level.

When a broadcast storm occurs and the action is to filter traffic, the switch blocks only broadcast traffic.

For more information, see the software configuration guide for this release.

Examples

This example shows how to enable broadcast storm control with a 75.5-percent rising suppression level:

```
Switch(config-if)# storm-control broadcast level 75.5
```

This example shows how to enable unicast storm control on a port with a 87-percent rising suppression level and a 65-percent falling suppression level:

```
Switch(config-if)# storm-control unicast level 87 65
```

This example shows how to enable multicast storm control on a port with a 2000-packets-per-second rising suppression level and a 1000-packets-per-second falling suppression level:

```
Switch(config-if)# storm-control multicast level pps 2k 1k
```

This example shows how to enable the **shutdown** action on a port:

```
Switch(config-if)# storm-control action shutdown
```

You can verify your settings by entering the **show storm-control** privileged EXEC command.

Related Commands

Command	Description
show storm-control	Displays broadcast, multicast, or unicast storm control settings on all interfaces or on a specified interface.

switchport

Use the **switchport** interface configuration command with no keywords to put an interface that is in Layer 3 mode into Layer 2 mode for Layer 2 configuration. Use the **no** form of this command to put an interface in Layer 3 mode.

switchport

no switchport

Use the **no switchport** command (without parameters) to set the interface to the routed-interface status and to erase all Layer 2 configurations. You must use this command before assigning an IP address to a routed port.

Syntax Description

This command has no arguments or keywords.

Defaults

By default, all interfaces are in Layer 2 mode.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(20)SE	Previous configuration information on an interface is removed when the interface changes between Layer 2 mode and Layer 3 mode or between Layer 3 mode and Layer 2 mode.

Usage Guidelines

Entering the **no switchport** command shuts the port down and then re-enables it, which might generate messages on the device to which the port is connected.

In Release 12.2(20)SE and later, when you put an interface that is in Layer 2 mode into Layer 3 mode (or the reverse), the previous configuration information related to the affected interface might be lost, and the interface is returned to its default configuration.



Note

If an interface is configured as a Layer 3 interface, you must first enter this **switchport** command with no keywords to configure the interface as a Layer 2 port. Then you can enter additional switchport commands with keywords, as shown on the pages that follow.

Examples

This example shows how to cause an interface to cease operating as a Layer 2 port and become a Cisco-routed port:

```
Switch(config-if)# no switchport
```

This example shows how to cause the port interface to cease operating as a Cisco-routed port and convert to a Layer 2 switched interface:

```
Switch(config-if)# switchport
```

**Note**

The **switchport** command without keywords is not used on platforms that do not support Cisco-routed ports. All physical ports on such platforms are assumed to be Layer 2-switched interfaces.

You can verify the switchport status of an interface by entering the **show running-config** privileged EXEC command.

Related Commands

Command	Description
show interfaces switchport	Displays the administrative and operational status of a switching (nonrouting) port, including port blocking and port protection settings.
show running-config	Displays the current operating configuration. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .

switchport access

Use the **switchport access** interface configuration command to configure a port as a static-access or dynamic-access port. If the switchport mode is set to **access**, the port operates as a member of the specified VLAN. If set to **dynamic**, the port starts discovery of VLAN assignment based on the incoming packets it receives. Use the **no** form of this command to reset the access mode to the default VLAN for the switch.

```
switchport access vlan {vlan-id | dynamic}
```

```
no switchport access vlan
```

Syntax Description

vlan <i>vlan-id</i>	Configure the interface as a static access port with the VLAN ID of the access mode VLAN; the range is 1 to 4094.
vlan dynamic	Specify that the access mode VLAN is dependent on the VLAN Membership Policy Server (VMPS) protocol. The port is assigned to a VLAN based on the source MAC address of a host (or hosts) connected to the port. The switch sends every new MAC address received to the VMPS server to get the VLAN name to which the dynamic-access port should be assigned. If the port already has a VLAN assigned and the source has already been approved by the VMPS, the switch forwards the packet to the VLAN.

Defaults

The default access VLAN and trunk interface native VLAN is a default VLAN corresponding to the platform or interface hardware.

A dynamic-access port is initially a member of no VLAN and receives its assignment based on the packet it receives.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **no switchport access** command resets the access mode VLAN to the appropriate default VLAN for the device.

The port must be in access mode before the **switchport access vlan** command can take effect.

An access port can be assigned to only one VLAN.

The VMPS server (such as a Catalyst 6000 series switch) must be configured before a port is configured as dynamic.

These restrictions apply to dynamic-access ports:

- The software implements the VLAN Query Protocol (VQP) client, which can query a VMPS such as a Catalyst 6000 series switch. The Catalyst 3560 switches are not VMPS servers. The VMPS server must be configured before a port is configured as dynamic.
- Use dynamic-access ports only to connect end stations. Connecting them to switches or routers (that use bridging protocols) can cause a loss of connectivity.
- Configure the network so that STP does not put the dynamic-access port into an STP blocking state. The Port Fast feature is automatically enabled on dynamic-access ports.
- Dynamic-access ports can only be in one VLAN and do not use VLAN tagging.
- Dynamic-access ports cannot be configured as
 - Members of an EtherChannel port group (dynamic-access ports cannot be grouped with any other port, including other dynamic ports).
 - Source or destination ports in a static address entry.
 - Monitor ports.

Examples

This example shows how to change a switched port interface that is operating in access mode to operate in VLAN 2 instead of the default VLAN:

```
Switch(config-if)# switchport access vlan 2
```

You can verify your setting by entering the **show interfaces *interface-id* switchport** privileged EXEC command and examining information in the Administrative Mode and Operational Mode rows.

Related Commands

Command	Description
show interfaces switchport	Displays the administrative and operational status of a switching (nonrouting) port, including port blocking and port protection settings.
switchport mode	Configures the VLAN membership mode of a port.

switchport backup interface

Use the **switchport backup interface** interface configuration command on a Layer 2 interface to configure Flex Links, a pair of interfaces that provide backup to each other. Use the **no** form of this command to remove the Flex Links configuration.

switchport backup interface {*interface-id*}

no switchport backup

Syntax Description

<i>interface-id</i>	Specify the Layer 2 interface to act as a backup link to the interface being configured. The interface can be a physical interface or port channel. The port-channel range is 1 to 48.
---------------------	--



Note

Though visible in the command-line help, VLAN interfaces are not supported.

Defaults

The default is to have no Flex Links defined.

Command Modes

Interface configuration

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

With Flex Links configured, one link acts as the primary interface and forwards traffic, while the other interface is in standby mode, ready to begin forwarding traffic if the primary link shuts down. The interface being configured is referred to as the active link; the specified interface is identified as the backup link. The feature provides an alternative to the Spanning Tree Protocol (STP), allowing users to turn off STP and still retain basic link redundancy.

- This command is available only for Layer 2 interfaces.
- You can configure only one Flex Link backup link for any active link, and it must be a different interface from the active interface.
- An interface can belong to only one Flex Link pair. An interface can be a backup link for only one active link. An active link cannot belong to another Flex Link pair.
- A backup link does not have to be the same type (Fast Ethernet or Gigabit Ethernet, for instance) as the active link. However, you should configure both Flex Links with similar characteristics so that there are no loops or changes in behavior if the standby link takes over traffic forwarding.

- Neither of the links can be a port that belongs to an EtherChannel. However, you can configure two port channels (EtherChannel logical interfaces) as Flex Links, and you can configure a port channel and a physical interface as Flex Links, with either the port channel or the physical interface as the primary link.
- If STP is configured on the switch, Flex Links do not participate in STP in all valid VLANs. If STP is not running, be sure that there are no loops in the configured topology.

Examples

This example shows how to configure two interfaces as Flex Links:

```
Switch# configure terminal
Switch(conf)# interface fastethernet0/1
Switch(conf-if)# switchport backup interface fastethernet0/2
Switch(conf-if)# end
```

You can verify your setting by entering the **show interfaces switchport backup** privileged EXEC command.

Related Commands

Command	Description
show interfaces [<i>interface-id</i>] switchport backup	Displays the configured Flex Links and their status on the switch or for the specified interface.

switchport block

Use the **switchport block** interface configuration command to prevent unknown multicast or unicast packets from being forwarded. Use the **no** form of this command to allow forwarding unknown multicast or unicast packets.

switchport block { multicast | unicast }

no switchport block { multicast | unicast }

Syntax Description

multicast	Specify that unknown multicast traffic should be blocked.
unicast	Specify that unknown unicast traffic should be blocked.

Defaults

Unknown multicast and unicast traffic is not blocked.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

By default, all traffic with unknown MAC addresses is sent to all ports. You can block unknown multicast or unicast traffic on protected or nonprotected ports. If unknown multicast or unicast traffic is not blocked on a protected port, there could be security issues.

Blocking unknown multicast or unicast traffic is not automatically enabled on protected ports; you must explicitly configure it.

For more information about blocking packets, see the software configuration guide for this release.

Examples

This example shows how to block unknown multicast traffic on an interface:

```
Switch(config-if)# switchport block multicast
```

You can verify your setting by entering the **show interfaces interface-id switchport** privileged EXEC command.

Related Commands

Command	Description
show interfaces switchport	Displays the administrative and operational status of a switching (nonrouting) port, including port blocking and port protection settings.

switchport host

Use the **switchport host** interface configuration command to optimize a Layer 2 port for a host connection. The **no** form of this command has no effect on the system.

switchport host

Syntax Description

This command has no arguments or keywords.

Defaults

The default is for the port to not be optimized for a host connection.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

To optimize the port for a host connection, the **switchport host** command sets switch port mode to access, enables spanning tree Port Fast, and disables channel grouping. Only an end station can accept this configuration.

Because spanning tree Port Fast is enabled, you should enter the **switchport host** command only on ports that are connected to a single host. Connecting other switches, hubs, concentrators, or bridges to a fast-start port can cause temporary spanning-tree loops.

Enable the **switchport host** command to decrease the time that it takes to start up packet forwarding.

Examples

This example shows how to optimize the port configuration for a host connection:

```
Switch(config-if)# switchport host
switchport mode will be set to access
spanning-tree portfast will be enabled
channel group will be disabled
Switch(config-if)#
```

You can verify your setting by entering the **show interfaces interface-id switchport** privileged EXEC command.

Related Commands

Command	Description
show interfaces switchport	Displays the administrative and operational status of a switching (nonrouting) port, including switchport mode.

switchport mode

Use the **switchport mode** interface configuration command to configure the VLAN membership mode of a port. Use the **no** form of this command to reset the mode to the appropriate default for the device.

```
switchport mode { access | dot1q-tunnel | dynamic { auto | desirable } | private-vlan | trunk }
```

```
no switchport mode { access | dot1q-tunnel | dynamic | trunk }
```

Syntax Description

access	Set the port to access mode (either static-access or dynamic-access depending on the setting of the switchport access vlan interface configuration command). The port is set to access unconditionally and operates as a nontrunking, single VLAN interface that sends and receives nonencapsulated (non-tagged) frames. An access port can be assigned to only one VLAN.
dot1q-tunnel	Set the port as an IEEE 802.1Q tunnel port.
dynamic auto	Set the interface trunking mode dynamic parameter to auto to specify that the interface convert the link to a trunk link. This is the default switchport mode.
dynamic desirable	Set the interface trunking mode dynamic parameter to desirable to specify that the interface actively attempt to convert the link to a trunk link.
private-vlan	See the switchport mode private-vlan command.
trunk	Set the port to trunk unconditionally. The port is a trunking VLAN Layer 2 interface. The port sends and receives encapsulated (tagged) frames that identify the VLAN of origination. A trunk is a point-to-point link between two switches or between a switch and a router.

Defaults

The default mode is **dynamic auto**.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(20)SE	The private-vlan keyword was added.
12.2(25)SE	The dot1q-tunnel keyword was added.

Usage Guidelines

A configuration that uses the **access**, **dot1q-tunnel**, or **trunk** keywords takes effect only when you configure the port in the appropriate mode by using the **switchport mode** command. The static-access and trunk configuration are saved, but only one configuration is active at a time.

When you enter **access** mode, the interface changes to permanent nontrunking mode and negotiates to convert the link into a nontrunk link even if the neighboring interface does not agree to the change.

When you enter **trunk** mode, the interface changes to permanent trunking mode and negotiates to convert the link into a trunk link even if the interface connecting to it does not agree to the change.

When you enter **dynamic auto** mode, the interface converts the link to a trunk link if the neighboring interface is set to **trunk** or **desirable** mode.

When you enter **dynamic desirable** mode, the interface becomes a trunk interface if the neighboring interface is set to **trunk**, **desirable**, or **auto** mode.

To autonegotiate trunking, the interfaces must be in the same VLAN Trunking Protocol (VTP) domain. Trunk negotiation is managed by the Dynamic Trunking Protocol (DTP), which is a point-to-point protocol. However, some internetworking devices might forward DTP frames improperly, which could cause misconfigurations. To avoid this, you should configure interfaces connected to devices that do not support DTP to not forward DTP frames, which turns off DTP.

- If you do not intend to trunk across those links, use the **switchport mode access** interface configuration command to disable trunking.
- To enable trunking to a device that does not support DTP, use the **switchport mode trunk** and **switchport nonegotiate** interface configuration commands to cause the interface to become a trunk but to not generate DTP frames.

When you enter **dot1q-tunnel**, the port is set unconditionally as an IEEE 802.1Q tunnel port.

Access ports, trunk ports, and tunnel ports are mutually exclusive.

Any IEEE 802.1Q encapsulated IP packets received on a tunnel port can be filtered by MAC access control lists (ACLs), but not by IP ACLs. This is because the switch does not recognize the protocol inside the IEEE 802.1Q header. This restriction applies to router ACLs, port ACLs, and VLAN maps.

Configuring a port as an IEEE 802.1Q tunnel port has these limitations:

- IP routing and fallback bridging are not supported on tunnel ports.
- Tunnel ports do not support IP ACLs.
- If an IP ACL is applied to a trunk port in a VLAN that includes tunnel ports, or if a VLAN map is applied to a VLAN that includes tunnel ports, packets received from the tunnel port are treated as non-IP packets and are filtered with MAC access lists.
- Layer 3 quality of service (QoS) ACLs and other QoS features related to Layer 3 information are not supported on tunnel ports.

For more information about configuring IEEE 802.1Q tunnel ports, see the software configuration guide for this release.

The IEEE 802.1x feature interacts with switchport modes in these ways:

- If you try to enable IEEE 802.1x on a trunk port, an error message appears, and IEEE 802.1x is not enabled. If you try to change the mode of an IEEE 802.1x-enabled port to trunk, the port mode is not changed.
- If you try to enable IEEE 802.1x on a port set to **dynamic auto** or **dynamic desirable**, an error message appears, and IEEE 802.1x is not enabled. If you try to change the mode of an IEEE 802.1x-enabled port to **dynamic auto** or **dynamic desirable**, the port mode is not changed.
- If you try to enable IEEE 802.1x on a dynamic-access (VLAN Query Protocol [VQP]) port, an error message appears, and IEEE 802.1x is not enabled. If you try to change an IEEE 802.1x-enabled port to dynamic VLAN assignment, an error message appears, and the VLAN configuration is not changed.

Examples

This example shows how to configure a port for access mode:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# switchport mode access
```

This example shows how set the port to dynamic desirable mode:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# switchport mode dynamic desirable
```

This example shows how to configure a port for trunk mode:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# switchport mode trunk
```

This example shows how to configure a port as an IEEE 802.1Q tunnel port:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# switchport mode dot1q-tunnel
```

You can verify your settings by entering the **show interfaces interface-id switchport** privileged EXEC command and examining information in the Administrative Mode and Operational Mode rows.

Related Commands

Command	Description
show interfaces switchport	Displays the administrative and operational status of a switching (nonrouting) port, including port blocking and port protection settings.
switchport access	Configures a port as a static-access or dynamic-access port.
switchport trunk	Configures the trunk characteristics when an interface is in trunking mode.

switchport mode private-vlan

Use the **switchport mode private-vlan** interface configuration command to configure a port as a promiscuous or host private VLAN port. Use the **no** form of this command to reset the mode to the appropriate default for the device.

```
switchport mode private-vlan {host | promiscuous}
```

```
no switchport mode private-vlan
```

Syntax Description

host	Configure the interface as a private-VLAN host port. Host ports belong to private-VLAN secondary VLANs and are either community ports or isolated ports, depending on the VLAN that they belong to.
promiscuous	Configure the interface as a private-VLAN promiscuous port. Promiscuous ports are members of private-VLAN primary VLANs.

Defaults

The default private-VLAN mode is neither host nor promiscuous.
The default switchport mode is **dynamic auto**.

Command Modes

Interface configuration

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

A private-VLAN host or promiscuous port cannot be a Switched Port Analyzer (SPAN) destination port. If you configure a SPAN destination port as a private-VLAN host or promiscuous port, the port becomes inactive.

Do not configure private VLAN on ports with these other features:

- Dynamic-access port VLAN membership
- Dynamic Trunking Protocol (DTP)
- Port Aggregation Protocol (PAgP)
- Link Aggregation Control Protocol (LACP)
- Multicast VLAN Registration (MVR)
- Voice VLAN

A private-VLAN port cannot be a SPAN destination port.

While a port is part of the private-VLAN configuration, any EtherChannel configuration for it is inactive.

A private-VLAN port cannot be a secure port and should not be configured as a protected port.

For more information about private-VLAN interaction with other features, see the software configuration guide for this release.

We strongly recommend that you enable spanning tree Port Fast and bridge-protocol-data-unit (BPDU) guard on isolated and community host ports to prevent STP loops due to misconfigurations and to speed up STP convergence.

If you configure a port as a private-VLAN host port and you do not configure a valid private-VLAN association by using the **switchport private-vlan host-association** interface configuration command, the interface becomes inactive.

If you configure a port as a private-VLAN promiscuous port and you do not configure a valid private VLAN mapping by using the **switchport private-vlan mapping** interface configuration command, the interface becomes inactive.

Examples

This example shows how to configure an interface as a private-VLAN host port and associate it to primary VLAN 20. The interface is a member of secondary isolated VLAN 501 and primary VLAN 20.



Note

When you configure a port as a private VLAN host port, you should also enable BPDU guard and Port Fast by using the **spanning-tree portfast bpduguard default** global configuration command and the **spanning-tree portfast** interface configuration command.

```
Switch# configure terminal
Switch(config)# interface fastethernet 0/1
Switch(config-if)# switchport mode private-vlan host
Switch(config-if)# switchport private-vlan host-association 20 501
Switch(config-if)# end
```

This example shows how to configure an interface as a private VLAN promiscuous port and map it to a private VLAN. The interface is a member of primary VLAN 20 and secondary VLANs 501 to 503 are mapped to it.

```
Switch# configure terminal
Switch(config)# interface fastethernet 0/2
Switch(config-if)# switchport mode private-vlan promiscuous
Switch(config-if)# switchport private-vlan mapping 20 501-503
Switch(config-if)# end
```

You can verify private VLAN switchport mode by using the **show interfaces interface-id switchport** privileged EXEC command.

Related Commands

Command	Description
private-vlan	Configures a VLAN as a community, isolated, or primary VLAN or associates a primary VLAN with secondary VLANs.
show interfaces switchport	Displays the administrative and operational status of a switching (nonrouting) port, including private VLAN configuration.
switchport private-vlan	Configures private VLAN associations and mappings between primary and secondary VLANs on an interface.

switchport nonegotiate

Use the **switchport nonegotiate** interface configuration command to specify that Dynamic Trunking Protocol (DTP) negotiation packets are not sent on the Layer 2 interface. The switch does not engage in DTP negotiation on this interface. Use the **no** form of this command to return to the default setting.

switchport nonegotiate

no switchport nonegotiate

Syntax Description

This command has no arguments or keywords.

Defaults

The default is to use DTP negotiation to learn the trunking status.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **no** form of the **switchport nonegotiate** command removes **nonegotiate** status.

This command is valid only when the interface switchport mode is access or trunk (configured by using the **switchport mode access** or the **switchport mode trunk** interface configuration command). This command returns an error if you attempt to execute it in **dynamic (auto or desirable)** mode.

Internetworking devices that do not support DTP might forward DTP frames improperly and cause misconfigurations. To avoid this, you should turn off DTP by using the **switchport no negotiate** command to configure the interfaces connected to devices that do not support DTP to not forward DTP frames.

When you enter the **switchport nonegotiate** command, DTP negotiation packets are not sent on the interface. The device does or does not trunk according to the **mode** parameter: **access** or **trunk**.

- If you do not intend to trunk across those links, use the **switchport mode access** interface configuration command to disable trunking.
- To enable trunking on a device that does not support DTP, use the **switchport mode trunk** and **switchport nonegotiate** interface configuration commands to cause the interface to become a trunk but to not generate DTP frames.

Examples

This example shows how to cause a port to refrain from negotiating trunking mode and to act as a trunk or access port (depending on the mode set):

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# switchport nonegotiate
```

You can verify your setting by entering the **show interfaces *interface-id* switchport** privileged EXEC command.

Related Commands

Command	Description
show interfaces switchport	Displays the administrative and operational status of a switching (nonrouting) port, including port blocking and port protection settings.
switchport mode	Configures the VLAN membership mode of a port.

switchport port-security

Use the **switchport port-security** interface configuration command without keywords to enable port security on the interface. Use the keywords to configure secure MAC addresses, sticky MAC address learning, a maximum number of secure MAC addresses, or the violation mode. Use the **no** form of this command to disable port security or to set the parameters to their default states.

```
switchport port-security [mac-address mac-address [vlan {vlan-id | {access | voice}}]] |
  mac-address sticky [mac-address | vlan {vlan-id | {access | voice}}]] [maximum value [vlan
  {vlan-list | {access | voice}}]]
```

```
no switchport port-security [mac-address mac-address [vlan {vlan-id | {access | voice}}]] |
  mac-address sticky [mac-address | vlan {vlan-id | {access | voice}}]] [maximum value [vlan
  {vlan-list | {access | voice}}]]
```

```
switchport port-security [aging] [violation {protect | restrict | shutdown}]
```

```
no switchport port-security [aging] [violation {protect | restrict | shutdown}]
```

Syntax Description

aging	(Optional) See the switchport port-security aging command.
mac-address mac-address	(Optional) Specify a secure MAC address for the interface by entering a 48-bit MAC address. You can add additional secure MAC addresses up to the maximum value configured.
vlan vlan-id	(Optional) On a trunk port only, specify the VLAN ID and the MAC address. If no VLAN ID is specified, the native VLAN is used.
vlan access	(Optional) On an access port only, specify the VLAN as an access VLAN.
vlan voice	(Optional) On an access port only, specify the VLAN as a voice VLAN. Note The voice keyword is available only if voice VLAN is configured on a port and if that port is not the access VLAN.
mac-address sticky [mac-address]	(Optional) Enable the interface for <i>sticky learning</i> by entering only the mac-address sticky keywords. When sticky learning is enabled, the interface adds all secure MAC addresses that are dynamically learned to the running configuration and converts these addresses to sticky secure MAC addresses. (Optional) Enter a <i>mac-address</i> to specify a sticky secure MAC address.
maximum value	(Optional) Set the maximum number of secure MAC addresses for the interface. The maximum number of secure MAC addresses that you can configure on a switch is set by the maximum number of available MAC addresses allowed in the system. This number is determined by the active Switch Database Management (SDM) template. See the sdm prefer command. This number represents the total of available MAC addresses, including those used for other Layer 2 functions and any other secure MAC addresses configured on interfaces. The default setting is 1.

vlan [<i>vlan-list</i>]	<p>(Optional) For trunk ports, you can set the maximum number of secure MAC addresses on a VLAN. If the vlan keyword is not entered, the default value is used.</p> <ul style="list-style-type: none"> • vlan—set a per-VLAN maximum value. • vlan <i>vlan-list</i>—set a per-VLAN maximum value on a range of VLANs separated by a hyphen or a series of VLANs separated by commas. For nonspecified VLANs, the per-VLAN maximum value is used.
violation	(Optional) Set the security violation mode or the action to be taken if port security is violated. The default is shutdown .
protect	<p>Set the security violation protect mode. In this mode, when the number of port secure MAC addresses reaches the maximum limit allowed on the port, packets with unknown source addresses are dropped until you remove a sufficient number of secure MAC addresses to drop below the maximum value or increase the number of maximum allowable addresses. You are not notified that a security violation has occurred.</p> <p>Note We do not recommend configuring the protect mode on a trunk port. The protect mode disables learning when any VLAN reaches its maximum limit, even if the port has not reached its maximum limit.</p>
restrict	Set the security violation restrict mode. In this mode, when the number of secure MAC addresses reaches the limit allowed on the port, packets with unknown source addresses are dropped until you remove a sufficient number of secure MAC addresses or increase the number of maximum allowable addresses. An SNMP trap is sent, a syslog message is logged, and the violation counter increments.
shutdown	Set the security violation shutdown mode. In this mode, the interface is error-disabled when a violation occurs and the port LED turns off. An SNMP trap is sent, a syslog message is logged, and the violation counter increments. When a secure port is in the error-disabled state, you can bring it out of this state by entering the errdisable recovery cause psecure-violation global configuration command, or you can manually re-enable it by entering the shutdown and no shut down interface configuration commands.

Defaults

The default is to disable port security.

When port security is enabled and no keywords are entered, the default maximum number of secure MAC addresses is 1.

The default violation mode is **shutdown**.

Sticky learning is disabled.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SEB	The access and voice keywords were added.

Usage Guidelines

A secure port has the following limitations:

- A secure port can be an access port or a trunk port; it cannot be a dynamic access port.
- A secure port cannot be a routed port.
- A secure port cannot be a protected port.
- A secure port cannot be a destination port for Switched Port Analyzer (SPAN).
- A secure port cannot be a private-VLAN port.
- A secure port cannot belong to a Fast EtherChannel or Gigabit EtherChannel port group.
- You cannot configure static secure or sticky secure MAC addresses in the voice VLAN.
- When you enable port security on an interface that is also configured with a voice VLAN, you must set the maximum allowed secure addresses on the port to two plus the maximum number of secure addresses allowed on the access VLAN. When the port is connected to a Cisco IP Phone, the Cisco IP Phone requires up to two MAC addresses. The Cisco IP Phone address is learned on the voice VLAN and might also be learned on the access VLAN. Connecting a PC to the Cisco IP Phone requires additional MAC addresses.
- Voice VLAN is supported only on access ports and not on trunk ports.
- When you enter a maximum secure address value for an interface, if the new value is greater than the previous value, the new value overrides the previously configured value. If the new value is less than the previous value and the number of configured secure addresses on the interface exceeds the new value, the command is rejected.
- The switch does not support port security aging of sticky secure MAC addresses.

A security violation occurs when the maximum number of secure MAC addresses are in the address table and a station whose MAC address is not in the address table attempts to access the interface or when a station whose MAC address is configured as a secure MAC address on another secure port attempts to access the interface.

If you enable port security on a voice VLAN port and if there is a PC connected to the IP phone, you should set the maximum allowed secure addresses on the port to more than 1.

When a secure port is in the error-disabled state, you can bring it out of this state by entering the **errdisable recovery cause psecure-violation** global configuration command, or you can manually re-enable it by entering the **shutdown** and **no shut down** interface configuration commands.

Setting a maximum number of addresses to one and configuring the MAC address of an attached device ensures that the device has the full bandwidth of the port.

When you enter a maximum secure address value for an interface, this occurs:

- If the new value is greater than the previous value, the new value overrides the previously configured value.
- If the new value is less than the previous value and the number of configured secure addresses on the interface exceeds the new value, the command is rejected.

Sticky secure MAC addresses have these characteristics:

- When you enable sticky learning on an interface by using the **switchport port-security mac-address sticky** interface configuration command, the interface converts all the dynamic secure MAC addresses, including those that were dynamically learned before sticky learning was enabled, to sticky secure MAC addresses and adds all sticky secure MAC addresses to the running configuration.
- If you disable sticky learning by using the **no switchport port-security mac-address sticky** interface configuration command or the running configuration is removed, the sticky secure MAC addresses remain part of the running configuration but are removed from the address table. The addresses that were removed can be dynamically reconfigured and added to the address table as dynamic addresses.
- When you configure sticky secure MAC addresses by using the **switchport port-security mac-address sticky mac-address** interface configuration command, these addresses are added to the address table and the running configuration. If port security is disabled, the sticky secure MAC addresses remain in the running configuration.
- If you save the sticky secure MAC addresses in the configuration file, when the switch restarts or the interface shuts down, the interface does not need to relearn these addresses. If you do not save the sticky secure addresses, they are lost. If sticky learning is disabled, the sticky secure MAC addresses are converted to dynamic secure addresses and are removed from the running configuration.
- If you disable sticky learning and enter the **switchport port-security mac-address sticky mac-address** interface configuration command, an error message appears, and the sticky secure MAC address is not added to the running configuration.

Examples

This example shows how to enable port security on a port and to set the maximum number of secure addresses to 5. The violation mode is the default, and no secure MAC addresses are configured.

```
Switch(config)# interface gigabitethernet 0/2
Switch(config-if)# switchport mode access
Switch(config-if)# switchport port-security
Switch(config-if)# switchport port-security maximum 5
```

This example shows how to configure a secure MAC address and a VLAN ID on a port:

```
Switch(config)# interface gigabitethernet 0/2
Switch(config-if)# switchport mode trunk
Switch(config-if)# switchport port-security
Switch(config-if)# switchport port-security mac-address 1000.2000.3000 vlan 3
```

This example shows how to enable sticky learning and to enter two sticky secure MAC addresses on a port:

```
Switch(config)# interface gigabitethernet 0/2
Switch(config-if)# switchport port-security mac-address sticky
Switch(config-if)# switchport port-security mac-address sticky 0000.0000.4141
Switch(config-if)# switchport port-security mac-address sticky 0000.0000.000f
```

You can verify your settings by using the **show port-security** privileged EXEC command.

Related Commands	Command	Description
	clear port-security	Deletes from the MAC address table a specific type of secure address or all the secure addresses on the switch or an interface.
	show port-security address	Displays all the secure addresses configured on the switch.
	show port-security interface <i>interface-id</i>	Displays port security configuration for the switch or for the specified interface.

switchport port-security aging

Use the **switchport port-security aging** interface configuration command to set the aging time and type for secure address entries or to change the aging behavior for secure addresses on a particular port. Use the **no** form of this command to disable port security aging or to set the parameters to their default states.

```
switchport port-security aging {static | time time | type {absolute | inactivity}}
```

```
no switchport port-security aging {static | time | type}
```

Syntax Description

static	Enable aging for statically configured secure addresses on this port.
time <i>time</i>	Specify the aging time for this port. The range is 0 to 1440 minutes. If the time is 0, aging is disabled for this port.
type	Set the aging type.
absolute	Set absolute aging type. All the secure addresses on this port age out exactly after the time (minutes) specified and are removed from the secure address list.
inactivity	Set the inactivity aging type. The secure addresses on this port age out only if there is no data traffic from the secure source address for the specified time period.

Defaults

The port security aging feature is disabled. The default time is 0 minutes.

The default aging type is absolute.

The default static aging behavior is disabled.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

To enable secure address aging for a particular port, set the aging time to a value other than 0 for that port.

To allow limited time access to particular secure addresses, set the aging type as **absolute**. When the aging time lapses, the secure addresses are deleted.

To allow continuous access to a limited number of secure addresses, set the aging type as **inactivity**. This removes the secure address when it become inactive, and other addresses can become secure.

To allow unlimited access to a secure address, configure it as a secure address, and disable aging for the statically configured secure address by using the **no switchport port-security aging static** interface configuration command.

Examples

This example sets the aging time as 2 hours for absolute aging for all the secure addresses on the port:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# switchport port-security aging time 120
```

This example sets the aging time as 2 minutes for inactivity aging type with aging enabled for configured secure addresses on the port:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# switchport port-security aging time 2
Switch(config-if)# switchport port-security aging type inactivity
Switch(config-if)# switchport port-security aging static
```

This example shows how to disable aging for configured secure addresses:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# no switchport port-security aging static
```

Related Commands

Command	Description
show port-security	Displays the port security settings defined for the port.
switchport port-security	Enables port security on a port, restricts the use of the port to a user-defined group of stations, and configures secure MAC addresses.

switchport priority extend

Use the **switchport priority extend** interface configuration command to set a port priority for the incoming untagged frames or the priority of frames received by the IP phone connected to the specified port. Use the **no** form of this command to return to the default setting.

```
switchport priority extend { cos value | trust }
```

```
no switchport priority extend
```

Syntax Description	cos <i>value</i>	trust
	Set the IP phone port to override the IEEE 802.1p priority received from the PC or the attached device with the specified class of service (CoS) value. The range is 0 to 7. Seven is the highest priority. The default is 0.	Set the IP phone port to trust the IEEE 802.1p priority received from the PC or the attached device.

Defaults The default port priority is set to a CoS value of 0 for untagged frames received on the port.

Command Modes Interface configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines When voice VLAN is enabled, you can configure the switch to send the Cisco Discovery Protocol (CDP) packets to instruct the IP phone how to send data packets from the device attached to the access port on the Cisco IP Phone. You must enable CDP on the switch port connected to the Cisco IP Phone to send the configuration to the Cisco IP Phone. (CDP is enabled by default globally and on all switch interfaces.)

You should configure voice VLAN on switch access ports. You can configure a voice VLAN only on Layer 2 ports.

Before you enable voice VLAN, we recommend that you enable quality of service (QoS) on the switch by entering the **mls qos** global configuration command and configure the port trust state to trust by entering the **mls qos trust cos** interface configuration command.

Examples This example shows how to configure the IP phone connected to the specified port to trust the received IEEE 802.1p priority:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# switchport priority extend trust
```

You can verify your settings by entering the **show interfaces interface-id switchport** privileged EXEC command.

Related Commands	Command	Description
	show interfaces	Displays the administrative and operational status of a switching (nonrouting) port.
	switchport voice vlan	Configures the voice VLAN on the port.

switchport private-vlan

Use the **switchport private-vlan** interface configuration command to define a private-VLAN association for an isolated or community port or a mapping for a promiscuous port. Use the **no** form of this command to remove the private-VLAN association or mapping from the port.

```
switchport private-vlan { association { host primary-vlan-id secondary-vlan-id | mapping
primary-vlan-id { add | remove } secondary-vlan-list } | host-association primary-vlan-id
secondary-vlan-id | mapping primary-vlan-id { add | remove } secondary-vlan-list }
```

```
no switchport private-vlan { association { host | mapping } | host-association | mapping }
```

This command is available only if the switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description

association	Define a private-VLAN association for a port.
host	Define a private-VLAN association for a community or isolated host port.
<i>primary-vlan-id</i>	The VLAN ID of the private-VLAN primary VLAN. The range is from 2 to 1001 and 1006 to 4094.
<i>secondary-vlan-id</i>	The VLAN ID of the private-VLAN secondary (isolated or community) VLAN. The range is from 2 to 1001 and 1006 to 4094.
mapping	Define private-VLAN mapping for a promiscuous port.
add	Associate secondary VLANs to the primary VLAN.
remove	Clear the association between secondary VLANs and the primary VLAN.
<i>secondary-vlan-list</i>	One or more secondary (isolated or community) VLANs to be mapped to the primary VLAN.
host-association	Define a private-VLAN association for a community or isolated host port.

Defaults

The default is to have no private-VLAN association or mapping configured.

Command Modes

Interface configuration

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

Private-VLAN association or mapping has no effect on the port unless the port has been configured as a private-VLAN host or promiscuous port by using the **switchport mode private-vlan {host | promiscuous}** interface configuration command.

If the port is in private-VLAN host or promiscuous mode but the VLANs do not exist, the command is allowed, but the port is made inactive.

The *secondary_vlan_list* parameter cannot contain spaces. It can contain multiple comma-separated items. Each item can be a single private-VLAN ID or a hyphenated range of private-VLAN IDs. The list can contain one isolated VLAN and multiple community VLANs.

You can map a promiscuous port to only one primary VLAN. If you enter the **switchport private-vlan mapping** command on a promiscuous port that is already mapped to a primary and secondary VLAN, the primary VLAN mapping is overwritten.

You can add or remove secondary VLANs from promiscuous port private-VLAN mappings by using the **add** and **remove** keywords.

Entering the **switchport private-vlan association host** command has the same effect as entering the **switchport private-vlan host-association** interface configuration command.

Entering the **switchport private-vlan association mapping** command has the same effect as entering the **switchport private-vlan mapping** interface configuration command.

Examples

This example shows how to configure an interface as a private VLAN host port and associate it with primary VLAN 20 and secondary VLAN 501:

```
Switch# configure terminal
Switch(config)# interface fastethernet 0/1
Switch(config-if)# switchport mode private-vlan host
Switch(config-if)# switchport private-vlan host-association 20 501
Switch(config-if)# end
```

This example shows how to configure an interface as a private-VLAN promiscuous port and map it to a primary VLAN and secondary VLANs:

```
Switch# configure terminal
Switch(config)# interface fastethernet 0/2
Switch(config-if)# switchport mode private-vlan promiscuous
Switch(config-if)# switchport private-vlan mapping 20 501-502
Switch(config-if)# end
```

You can verify private-VLAN mapping by using the **show interfaces private-vlan mapping** privileged EXEC command. You can verify private VLANs and interfaces configured on the switch by using the **show vlan private-vlan** privileged EXEC command.

Related Commands

Command	Description
show interfaces private-vlan mapping	Displays private VLAN mapping information for VLAN SVIs.
show vlan private-vlan	Displays all private VLAN relationships or types configured on the switch.

switchport protected

Use the **switchport protected** interface configuration command to isolate unicast, multicast, and broadcast traffic at Layer 2 from other protected ports on the same switch. Use the **no** form of this command to disable protection on the port.

switchport protected

no switchport protected

Syntax Description This command has no arguments or keywords.

Defaults No protected port is defined. All ports are nonprotected.

Command Modes Interface configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The switchport protection feature is local to the switch; communication between protected ports on the same switch is possible only through a Layer 3 device. To prevent communication between protected ports on different switches, you must configure the protected ports for unique VLANs on each switch and configure a trunk link between the switches. A protected port is different from a secure port.

A protected port does not forward any traffic (unicast, multicast, or broadcast) to any other port that is also a protected port. Data traffic cannot be forwarded between protected ports at Layer 2; only control traffic, such as PIM packets, is forwarded because these packets are processed by the CPU and forwarded in software. All data traffic passing between protected ports must be forwarded through a Layer 3 device.

Port monitoring does not work if both the monitor and monitored ports are protected ports.

Examples This example shows how to enable a protected port on an interface:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# switchport protected
```

You can verify your settings by entering the **show interfaces interface-id switchport** privileged EXEC command.

Related Commands	Command	Description
	show interfaces switchport	Displays the administrative and operational status of a switching (nonrouting) port, including port blocking and port protection settings.
	switchport block	Prevents unknown multicast or unicast traffic on the interface.

switchport trunk

Use the **switchport trunk** interface configuration command to set the trunk characteristics when the interface is in trunking mode. Use the **no** form of this command to reset a trunking characteristic to the default.

```
switchport trunk { allowed vlan vlan-list | encapsulation { dot1q | isl | negotiate } | native vlan
vlan-id | pruning vlan vlan-list }
```

```
no switchport trunk { allowed vlan | encapsulation | native vlan | { pruning vlan }
```

Syntax Description

allowed vlan <i>vlan-list</i>	Set the list of allowed VLANs that can receive and send traffic on this interface in tagged format when in trunking mode. See the following <i>vlan-list</i> format. The none keyword is not valid. The default is all .
encapsulation dot1q	Set the encapsulation format on the trunk port to IEEE 802.1Q. With this format, the switch supports simultaneous tagged and untagged traffic on a port.
encapsulation isl	Set the encapsulation format on the trunk port to Inter-Switch Link (ISL). The switch encapsulates all received and sent packets with an ISL header and filters native frames received from an ISL trunk port.
encapsulation negotiate	Specify that if Dynamic Inter-Switch Link (DISL) and Dynamic Trunking Protocol (DTP) negotiation do not resolve the encapsulation format, ISL is the selected format.
native vlan <i>vlan-id</i>	Set the native VLAN for sending and receiving untagged traffic when the interface is in IEEE 802.1Q trunking mode. The range is 1 to 4094.
pruning vlan <i>vlan-list</i>	Set the list of VLANs that are eligible for VTP pruning when in trunking mode. The all keyword is not valid.

The *vlan-list* format is **all** | **none** | [**add** | **remove** | **except**] *vlan-atom* [,*vlan-atom*...] where:

- **all** specifies all VLANs from 1 to 4094. This keyword is not allowed on commands that do not permit all VLANs in the list to be set at the same time.
- **none** means an empty list. This keyword is not allowed on commands that require certain VLANs to be set or at least one VLAN to be set.
- **add** adds the defined list of VLANs to those currently set instead of replacing the list. Valid IDs are from 1 to 1005; extended-range VLANs (VLAN IDs greater than 1005) are valid in some cases.



Note You can add extended-range VLANs to the allowed VLAN list, but not to the pruning-eligible VLAN list.

Separate nonconsecutive VLAN IDs with a comma; use a hyphen to designate a range of IDs.

- **remove** removes the defined list of VLANs from those currently set instead of replacing the list. Valid IDs are from 1 to 1005; extended-range VLAN IDs are valid in some cases.



Note You can remove extended-range VLANs from the allowed VLAN list, but you cannot remove them from the pruning-eligible list.

Separate nonconsecutive VLAN IDs with a comma; use a hyphen to designate a range of IDs.

- **except** lists the VLANs that should be calculated by inverting the defined list of VLANs. (VLANs are added except the ones specified.) Valid IDs are from 1 to 1005. Separate nonconsecutive VLAN IDs with a comma; use a hyphen to designate a range of IDs.
- *vlan-atom* is either a single VLAN number from 1 to 4094 or a continuous range of VLANs described by two VLAN numbers, the lesser one first, separated by a hyphen.

Defaults

The default encapsulation is negotiate.

VLAN 1 is the default native VLAN ID on the port.

The default for all VLAN lists is to include all VLANs.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Encapsulation:

- The **switchport trunk encapsulation** command is supported only for platforms and interface hardware that can support both ISL and IEEE 802.1Q formats.
- You cannot configure one end of the trunk as an IEEE 802.1Q trunk and the other end as an ISL or nontrunk port. However, you can configure one port as an ISL trunk and a different port on the same switch as an IEEE 802.1Q trunk.
- If you enter the **negotiate** keywords and DTP negotiation does not resolve the encapsulation format, ISL is the selected format. The **no** form of the command resets the trunk encapsulation format to the default.
- The **no** form of the **encapsulation** command resets the encapsulation format to the default.

Native VLANs:

- All untagged traffic received on an IEEE 802.1Q trunk port is forwarded with the native VLAN configured for the port.
- If a packet has a VLAN ID that is the same as the sending-port native VLAN ID, the packet is sent without a tag; otherwise, the switch sends the packet with a tag.
- The **no** form of the **native vlan** command resets the native mode VLAN to the appropriate default VLAN for the device.

Allowed VLAN:

- To reduce the risk of spanning-tree loops or storms, you can disable VLAN 1 on any individual VLAN trunk port by removing VLAN 1 from the allowed list. When you remove VLAN 1 from a trunk port, the interface continues to send and receive management traffic, for example, Cisco Discovery Protocol (CDP), Port Aggregation Protocol (PAgP), Link Aggregation Control Protocol (LACP), Dynamic Trunking Protocol (DTP), and VLAN Trunking Protocol (VTP) in VLAN 1.
- The **no** form of the **allowed vlan** command resets the list to the default list, which allows all VLANs.

Trunk pruning:

- The pruning-eligible list applies only to trunk ports.
- Each trunk port has its own eligibility list.
- If you do not want a VLAN to be pruned, remove it from the pruning-eligible list. VLANs that are pruning-ineligible receive flooded traffic.
- VLAN 1, VLANs 1002 to 1005, and extended-range VLANs (VLANs 1006 to 4094) cannot be pruned.

Examples

This example shows how to cause a port configured as a switched interface to encapsulate in IEEE 802.1Q trunking format regardless of its default trunking format in trunking mode:

```
Switch(config)# interface gigabitethernet1/0/2
Switch(config-if)# switchport trunk encapsulation dot1q
```

This example shows how to configure VLAN 3 as the default for the port to send all untagged traffic:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# switchport trunk native vlan 3
```

This example shows how to add VLANs 1, 2, 5, and 6 to the allowed list:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# switchport trunk allowed vlan add 1,2,5,6
```

This example shows how to remove VLANs 3 and 10 to 15 from the pruning-eligible list:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# switchport trunk pruning vlan remove 3,10-15
```

You can verify your settings by entering the **show interfaces *interface-id* switchport** privileged EXEC command.

Related Commands

Command	Description
show interfaces switchport	Displays the administrative and operational status of a switching (nonrouting) port, including port blocking and port protection settings.
switchport mode	Configures the VLAN membership mode of a port.

switchport voice vlan

Use the **switchport voice vlan** interface configuration command to configure voice VLAN on the port. Use the **no** form of this command to return to the default setting.

```
switchport voice vlan {vlan-id | dot1p | none | untagged}
```

```
no switchport voice vlan
```

Syntax Description	
<i>vlan-id</i>	Specify the VLAN to be used for voice traffic. The range is 1 to 4094. By default, the IP phone forwards the voice traffic with an IEEE 802.1Q priority of 5.
dot1p	Configure the telephone to use IEEE 802.1p priority tagging and uses VLAN 0 (the native VLAN). By default, the Cisco IP phone forwards the voice traffic with an IEEE 802.1p priority of 5.
none	Do not instruct the IP telephone about the voice VLAN. The telephone uses the configuration from the telephone key pad.
untagged	Configure the telephone to send untagged voice traffic. This is the default for the telephone.

Defaults

The switch default is not to automatically configure the telephone (**none**).

The telephone default is not to tag frames.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You should configure voice VLAN on Layer 2 access ports.

You must enable Cisco Discovery Protocol (CDP) on the switchport connected to the Cisco IP phone for the switch to send configuration information to the phone. CDP is enabled by default globally and on the interface.

Before you enable voice VLAN, we recommend you enable quality of service (QoS) on the switch by entering the **mls qos** global configuration command and configure the port trust state to trust by entering the **mls qos trust cos** interface configuration command.

When you enter a VLAN ID, the IP phone forwards voice traffic in IEEE 802.1Q frames, tagged with the specified VLAN ID. The switch puts IEEE 802.1Q voice traffic in the voice VLAN.

When you select **dot1p**, **none**, or **untagged**, the switch puts the indicated voice traffic in the access VLAN.

In all configurations, the voice traffic carries a Layer 2 IP precedence value. The default is 5 for voice traffic.

When you enable port security on an interface that is also configured with a voice VLAN, you must set the maximum allowed secure addresses on the port to at least two. When the port is connected to a Cisco IP phone, the IP phone requires two MAC addresses: one for the access VLAN and the other for the voice VLAN. Connecting a PC to the IP phone requires additional MAC addresses.

If any type of port security is enabled on the access VLAN, dynamic port security is automatically enabled on the voice VLAN.

You cannot configure static secure MAC addresses in the voice VLAN.

A voice-VLAN port cannot be a private-VLAN port.

The Port Fast feature is automatically enabled when voice VLAN is configured. When you disable voice VLAN, the Port Fast feature is not automatically disabled.

Examples

This example shows how to configure VLAN 2 as the voice VLAN for the port:

```
Switch(config)# interface gigabitethernet0/2
Switch(config-if)# switchport voice vlan 2
```

You can verify your settings by entering the **show interfaces *interface-id* switchport** privileged EXEC command.

Related Commands

Command	Description
show interfaces <i>interface-id</i> switchport	Displays the administrative and operational status of a switching (nonrouting) port.
switchport priority extend	Decides how the device connected to the specified port handles priority traffic received on its incoming port.

system env temperature threshold yellow

Use the **system env temperature threshold yellow** global configuration command to configure the difference between the yellow and red temperature thresholds which determines the value of yellow threshold. Use the no form of this command to return to the default value.

system env temperature threshold yellow *value*

no system env temperature threshold yellow *value*

Syntax Description

value Specify the difference between the yellow and red threshold values (in Celsius). The range is 10 to 25. The default value is 10.

Defaults

These are the default values:

Table 2-37 Default Values for the Temperature Thresholds

Switch	Difference between Yellow and Red	Red ¹
Catalyst 3560G-48TS	10°C	66°C
Catalyst 3560G-48PS	10°C	68°C
Catalyst 3560G-24TS	10°C	65°C
Catalyst 3560G-24PS	10°C	61°C

1. You cannot configure the red temperature threshold.

Command Modes

Global configuration

Command History

Release	Modification
12.2(25)SE	This command was introduced.

Usage Guidelines

Though visible on all switches, this command is only valid on these switches:

- Catalyst 3560G-48TS
- Catalyst 3560G-48PS
- Catalyst 3560G-24TS
- Catalyst 3560G-24PS

You cannot configure the green and red thresholds but can configure the yellow threshold. Use the **system env temperature threshold yellow** *value* global configuration command to specify the difference between the yellow and red thresholds and to configure the yellow threshold. For example, if the red threshold is 66 degrees C and you want to configure the yellow threshold as 51 degrees C, set the difference between the thresholds as 15 by using the **system env temperature threshold yellow 15** command.

**Note**

The internal temperature sensor in the switch measures the internal system temperature and might vary ± 5 degrees C.

Examples

This example sets 15 as the difference between the yellow and red thresholds:

```
Switch(config)# system env temperature threshold yellow 15
Switch(config)#
```

Related Commands

Command	Description
show env temperature status	Displays the temperature status and threshold levels.

system mtu

Use the **system mtu** global configuration command to set the maximum packet size or maximum transmission unit (MTU) size for Gigabit Ethernet ports, for routed ports, or for Fast Ethernet (10/100) ports. Use the **no** form of this command to restore the global MTU value to its default value.

```
system mtu {bytes | jumbo bytes | routing bytes}
```

```
no system mtu
```

Syntax Description

<i>bytes</i>	Set the system MTU for ports that are set to 10 or 100 Mbps. The range is 1500 to 1998 bytes. This is the maximum MTU received at 10/100-Mbps Ethernet switch ports.
jumbo <i>bytes</i>	Set the system jumbo MTU for Gigabit Ethernet ports operating at 1000 Mbps or greater. The range is 1500 to 9000 bytes. This is the maximum MTU received at the physical port for Gigabit Ethernet ports.
routing <i>bytes</i>	Set the maximum MTU for routed packets. You can also set the maximum MTU to be advertised by the routing protocols that support the configured MTU size. The range is 1500 bytes to the system MTU value. The system routing MTU is the maximum MTU for routed packets and is also the maximum MTU that the switch advertises in routing updates for protocols such as OSPF.

Defaults

The default MTU size for all ports is 1500 bytes. However, if you configure a different value for the system MTU, that configured value becomes the default MTU size for routed ports when it is applied following a switch reset.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SEC	The <i>bytes</i> range is now 1500 to 1998.
12.2(25)SED	The routing <i>bytes</i> keywords were added.

Usage Guidelines

When you use this command to change the system MTU or jumbo MTU size, you must reset the switch before the new configuration takes effect. The **system mtu routing** command does not require a switch reset to take effect.

Gigabit Ethernet ports operating at 1000 Mbps are not affected by the **system mtu** command, and 10/100-Mbps ports are not affected by the **system mtu jumbo** command.

You can use the **system mtu routing** command to configure the MTU size on routed ports.

**Note**

You cannot configure a routing MTU size that exceeds the system MTU size. If you change the system MTU size to a value smaller than the currently configured routing MTU size, the configuration change is accepted, but not applied until the next switch reset. When the configuration change takes effect, the routing MTU size defaults to the new system MTU size.

If you enter a value that is outside the range for the specific type of switch, the value is not accepted.

**Note**

The switch does not support setting the MTU on a per-interface basis.

The size of frames that can be received by the switch CPU is limited to 1998 bytes, regardless of the value entered with the **system mtu** command. Although forwarded or routed frames are usually not received by the CPU, some packets (for example, control traffic, SNMP, Telnet, and routing protocols) are sent to the CPU.

Because the switch does not fragment packets, it drops:

- switched packets larger than the packet size supported on the *egress* interface
- routed packets larger than the routing MTU value

For example, if the **system mtu** value is 1998 bytes and the **system mtu jumbo** value is 5000 bytes, packets up to 5000 bytes can be received on interfaces operating at 1000 Mbps. However, although a packet larger than 1998 bytes can be received on an interface operating at 1000 Mbps, if its destination interface is operating at 10 or 100 Mbps, the packet is dropped.

Examples

This example shows how to set the maximum jumbo packet size for Gigabit Ethernet ports operating at 1000 Mbps or greater to 1800 bytes:

```
Switch(config)# system mtu jumbo 1800
Switch(config)# exit
Switch# reload
```

You can verify your setting by entering the **show system mtu** privileged EXEC command.

Related Commands

Command	Description
show system mtu	Displays the packet size set for Fast Ethernet, Gigabit Ethernet, and routed ports.

test cable-diagnostics tdr

Use the **test cable-diagnostics tdr** privileged EXEC command to run the Time Domain Reflector (TDR) feature on an interface.

test cable-diagnostics tdr interface *interface-id*

Syntax Description	<i>interface-id</i>	Specify the interface on which to run TDR.
---------------------------	---------------------	--

Defaults	There is no default.
-----------------	----------------------

Command Modes	Privileged EXEC
----------------------	-----------------

Command History	Release	Modification
	12.2(25)SE	This command was introduced.

Usage Guidelines TDR is supported only on 10/100/1000 copper Ethernet ports. It is not supported on 10/100 ports or on SFP module ports. For more information about TDR, see the software configuration guide for this release.

After you run TDR by using the **test cable-diagnostics tdr interface** *interface-id* command, use the **show cable-diagnostics tdr interface** *interface-id* privileged EXEC command to display the results.

Examples This example shows how to run TDR on an interface:

```
Switch# test cable-diagnostics tdr interface gigabitethernet0/2
TDR test started on interface Gi0/2
A TDR test can take a few seconds to run on an interface
Use 'show cable-diagnostics tdr' to read the TDR results.
```

If you enter the **test cable-diagnostics tdr interface** *interface-id* command on an interface that has a link status of up and a speed of 10 or 100 Mbps, these messages appear:

```
Switch# test cable-diagnostics tdr interface gigabitethernet0/3
TDR test on Gi0/9 will affect link state and traffic
TDR test started on interface Gi0/3
A TDR test can take a few seconds to run on an interface
Use 'show cable-diagnostics tdr' to read the TDR results.
```

Related Commands	Command	Description
	show cable-diagnostics tdr	Displays the TDR results.

tracert mac

Use the **tracert mac** privileged EXEC command to display the Layer 2 path taken by the packets from the specified source MAC address to the specified destination MAC address.

```
tracert mac [interface interface-id] {source-mac-address} [interface interface-id]
  {destination-mac-address} [vlan vlan-id] [detail]
```

Syntax Description	
interface <i>interface-id</i>	(Optional) Specify an interface on the source or destination switch.
source-mac-address	Specify the MAC address of the source switch in hexadecimal format.
<i>destination-mac-address</i>	Specify the MAC address of the destination switch in hexadecimal format.
vlan <i>vlan-id</i>	(Optional) Specify the VLAN on which to trace the Layer 2 path that the packets take from the source switch to the destination switch. Valid VLAN IDs are 1 to 4094.
detail	(Optional) Specify that detailed information appears.

Defaults There is no default.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines

For Layer 2 tracert to function properly, Cisco Discovery Protocol (CDP) must be enabled on all the switches in the network. Do not disable CDP.

When the switch detects a device in the Layer 2 path that does not support Layer 2 tracert, the switch continues to send Layer 2 trace queries and lets them time out.

The maximum number of hops identified in the path is ten.

Layer 2 tracert supports only unicast traffic. If you specify a multicast source or destination MAC address, the physical path is not identified, and an error message appears.

The **tracert mac** command output shows the Layer 2 path when the specified source and destination addresses belong to the same VLAN. If you specify source and destination addresses that belong to different VLANs, the Layer 2 path is not identified, and an error message appears.

If the source or destination MAC address belongs to multiple VLANs, you must specify the VLAN to which both the source and destination MAC addresses belong. If the VLAN is not specified, the path is not identified, and an error message appears.

The Layer 2 traceroute feature is not supported when multiple devices are attached to one port through hubs (for example, multiple CDP neighbors are detected on a port). When more than one CDP neighbor is detected on a port, the Layer 2 path is not identified, and an error message appears.

This feature is not supported in Token Ring VLANs.

Examples

This example shows how to display the Layer 2 path by specifying the source and destination MAC addresses:

```
Switch# traceroute mac 0000.0201.0601 0000.0201.0201
Source 0000.0201.0601 found on con6 [WS-C3560-12T] (2.2.6.6)
con6 (2.2.6.6) :Gi0/1 => Gi0/3
con5          (2.2.5.5       ) :   Gi0/3 => Gi0/1
con1          (2.2.1.1       ) :   Gi0/1 => Gi0/2
con2          (2.2.2.2       ) :   Gi0/2 => Gi0/1
Destination 0000.0201.0201 found on con2 [WS-C3550-24] (2.2.2.2)
Layer 2 trace completed
```

This example shows how to display the Layer 2 path by using the **detail** keyword:

```
Switch# traceroute mac 0000.0201.0601 0000.0201.0201 detail
Source 0000.0201.0601 found on con6 [WS-C3560-12T] (2.2.6.6)
con6 / WS-C3560-12T / 2.2.6.6 :
      Gi0/2 [auto, auto] => Gi0/3 [auto, auto]
con5 / WS-C2950G-24-EI / 2.2.5.5 :
      Fa0/3 [auto, auto] => Gi0/1 [auto, auto]
con1 / WS-C3550-12G / 2.2.1.1 :
      Gi0/1 [auto, auto] => Gi0/2 [auto, auto]
con2 / WS-C3550-24 / 2.2.2.2 :
      Gi0/2 [auto, auto] => Fa0/1 [auto, auto]
Destination 0000.0201.0201 found on con2 [WS-C3550-24] (2.2.2.2)
Layer 2 trace completed.
```

This example shows how to display the Layer 2 path by specifying the interfaces on the source and destination switches:

```
Switch# traceroute mac interface fastethernet0/1 0000.0201.0601 interface fastethernet0/3 0000.0201.0201
Source 0000.0201.0601 found on con6 [WS-C3560-12T] (2.2.6.6)
con6 (2.2.6.6) :Gi0/1 => Gi0/3
con5          (2.2.5.5       ) :   Gi0/3 => Gi0/1
con1          (2.2.1.1       ) :   Gi0/1 => Gi0/2
con2          (2.2.2.2       ) :   Gi0/2 => Gi0/1
Destination 0000.0201.0201 found on con2 [WS-C3550-24] (2.2.2.2)
Layer 2 trace completed
```

This example shows the Layer 2 path when the switch is not connected to the source switch:

```
Switch# traceroute mac 0000.0201.0501 0000.0201.0201 detail
Source not directly connected, tracing source ....
Source 0000.0201.0501 found on con5 [WS-C3560-12T] (2.2.5.5)
con5 / WS-C3560-12T / 2.2.5.5 :
      Gi0/1 [auto, auto] => Gi0/3 [auto, auto]
con1 / WS-C3550-12G / 2.2.1.1 :
      Gi0/1 [auto, auto] => Gi0/2 [auto, auto]
con2 / WS-C3550-24 / 2.2.2.2 :
      Gi0/2 [auto, auto] => Fa0/1 [auto, auto]
Destination 0000.0201.0201 found on con2 [WS-C3550-24] (2.2.2.2)
Layer 2 trace completed.
```

This example shows the Layer 2 path when the switch cannot find the destination port for the source MAC address:

```
Switch# tracert mac 0000.0011.1111 0000.0201.0201
Error:Source Mac address not found.
Layer2 trace aborted.
```

This example shows the Layer 2 path when the source and destination devices are in different VLANs:

```
Switch# tracert mac 0000.0201.0601 0000.0301.0201
Error:Source and destination macs are on different vlans.
Layer2 trace aborted.
```

This example shows the Layer 2 path when the destination MAC address is a multicast address:

```
Switch# tracert mac 0000.0201.0601 0100.0201.0201
Invalid destination mac address
```

This example shows the Layer 2 path when source and destination switches belong to multiple VLANs:

```
Switch# tracert mac 0000.0201.0601 0000.0201.0201
Error:Mac found on multiple vlans.
Layer2 trace aborted.
```

Related Commands

Command	Description
tracert mac ip	Displays the Layer 2 path taken by the packets from the specified source IP address or hostname to the specified destination IP address or hostname.

traceroute mac ip

Use the **traceroute mac ip** privileged EXEC command to display the Layer 2 path taken by the packets from the specified source IP address or hostname to the specified destination IP address or hostname.

```
traceroute mac ip {source-ip-address | source-hostname} {destination-ip-address | destination-hostname} [detail]
```

Syntax Description		
<i>source-ip-address</i>		Specify the IP address of the source switch as a 32-bit quantity in dotted-decimal format.
<i>destination-ip-address</i>		Specify the IP address of the destination switch as a 32-bit quantity in dotted-decimal format.
<i>source-hostname</i>		Specify the IP hostname of the source switch.
<i>destination-hostname</i>		Specify the IP hostname of the destination switch.
detail		(Optional) Specify that detailed information appears.

Defaults There is no default.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines For Layer 2 traceroute to function properly, Cisco Discovery Protocol (CDP) must be enabled on all the switches in the network. Do not disable CDP.

When the switch detects a device in the Layer 2 path that does not support Layer 2 traceroute, the switch continues to send Layer 2 trace queries and lets them time out.

The maximum number of hops identified in the path is ten.

The **traceroute mac ip** command output shows the Layer 2 path when the specified source and destination IP addresses are in the same subnet. When you specify the IP addresses, the switch uses Address Resolution Protocol (ARP) to associate the IP addresses with the corresponding MAC addresses and the VLAN IDs.

- If an ARP entry exists for the specified IP address, the switch uses the associated MAC address and identifies the physical path.
- If an ARP entry does not exist, the switch sends an ARP query and tries to resolve the IP address. The IP addresses must be in the same subnet. If the IP address is not resolved, the path is not identified, and an error message appears.

The Layer 2 traceroute feature is not supported when multiple devices are attached to one port through hubs (for example, multiple CDP neighbors are detected on a port). When more than one CDP neighbor is detected on a port, the Layer 2 path is not identified, and an error message appears.

This feature is not supported in Token Ring VLANs.

Examples

This example shows how to display the Layer 2 path by specifying the source and destination IP addresses and by using the **detail** keyword:

```
Switch# tracert mac ip 2.2.66.66 2.2.22.22 detail
Translating IP to mac .....
2.2.66.66 => 0000.0201.0601
2.2.22.22 => 0000.0201.0201

Source 0000.0201.0601 found on con6[WS-C2950G-24-EI] (2.2.6.6)
con6 / WS-C3560-12T / 2.2.6.6 :
    Gi0/1 [auto, auto] => Gi0/3 [auto, auto]
con5 / WS-C2950G-24-EI / 2.2.5.5 :
    Fa0/3 [auto, auto] => Gi0/1 [auto, auto]
con1 / WS-C3550-12G / 2.2.1.1 :
    Gi0/1 [auto, auto] => Gi0/2 [auto, auto]
con2 / WS-C3550-24 / 2.2.2.2 :
    Gi0/2 [auto, auto] => Fa0/1 [auto, auto]
Destination 0000.0201.0201 found on con2[WS-C3550-24] (2.2.2.2)
Layer 2 trace completed.
```

This example shows how to display the Layer 2 path by specifying the source and destination hostnames:

```
Switch# tracert mac ip con6 con2
Translating IP to mac .....
2.2.66.66 => 0000.0201.0601
2.2.22.22 => 0000.0201.0201

Source 0000.0201.0601 found on con6
con6 (2.2.6.6) :Gi0/1 => Gi0/3
con5           (2.2.5.5       ) :   Gi0/3 => Gi0/1
con1           (2.2.1.1       ) :   Gi0/1 => Gi0/2
con2           (2.2.2.2       ) :   Gi0/2 => Fa0/1
Destination 0000.0201.0201 found on con2
Layer 2 trace completed
```

This example shows the Layer 2 path when ARP cannot associate the source IP address with the corresponding MAC address:

```
Switch# tracert mac ip 2.2.66.66 2.2.77.77
Arp failed for destination 2.2.77.77.
Layer2 trace aborted.
```

Related Commands

Command	Description
tracert mac	Displays the Layer 2 path taken by the packets from the specified source MAC address to the specified destination MAC address.

trust

Use the **trust** policy-map class configuration command to define a trust state for traffic classified through the **class** policy-map configuration or the **class-map** global configuration command. Use the **no** form of this command to return to the default setting.

trust [**cos** | **dscp** | **ip-precedence**]

no trust [**cos** | **dscp** | **ip-precedence**]

Syntax Description

cos	(Optional) Classify an ingress packet by using the packet class of service (CoS) value. For an untagged packet, the port default CoS value is used.
dscp	(Optional) Classify an ingress packet by using the packet Differentiated Services Code Point (DSCP) values (most significant 6 bits of 8-bit service-type field). For a non-IP packet, the packet CoS value is used if the packet is tagged. If the packet is untagged, the default port CoS value is used to map CoS to DSCP.
ip-precedence	(Optional) Classify an ingress packet by using the packet IP-precedence value (most significant 3 bits of 8-bit service-type field). For a non-IP packet, the packet CoS value is used if the packet is tagged. If the packet is untagged, the port default CoS value is used to map CoS to DSCP.

Defaults

The action is not trusted. If no keyword is specified when the command is entered, the default is **dscp**.

Command Modes

Policy-map class configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Use this command to distinguish the quality of service (QoS) trust behavior for certain traffic from other traffic. For example, incoming traffic with certain DSCP values can be trusted. You can configure a class map to match and trust the DSCP values in the incoming traffic.

Trust values set with this command supersede trust values set with the **mls qos trust** interface configuration command.

The **trust** command is mutually exclusive with **set** policy-map class configuration command within the same policy map.

If you specify **trust cos**, QoS uses the received or default port CoS value and the CoS-to-DSCP map to generate a DSCP value for the packet.

If you specify **trust dscp**, QoS uses the DSCP value from the ingress packet. For non-IP packets that are tagged, QoS uses the received CoS value; for non-IP packets that are untagged, QoS uses the default port CoS value. In either case, the DSCP value for the packet is derived from the CoS-to-DSCP map.

If you specify **trust ip-precedence**, QoS uses the IP precedence value from the ingress packet and the IP-precedence-to-DSCP map. For non-IP packets that are tagged, QoS uses the received CoS value; for non-IP packets that are untagged, QoS uses the default port CoS value. In either case, the DSCP for the packet is derived from the CoS-to-DSCP map.

To return to policy-map configuration mode, use the **exit** command. To return to privileged EXEC mode, use the **end** command.

Examples

This example shows how to define a port trust state to trust incoming DSCP values for traffic classified with *class1*:

```
Switch(config)# policy-map policy1
Switch(config-pmap)# class class1
Switch(config-pmap-c)# trust dscp
Switch(config-pmap-c)# police 1000000 20000 exceed-action policed-dscp-transmit
Switch(config-pmap-c)# exit
```

You can verify your settings by entering the **show policy-map** privileged EXEC command.

Related Commands

Command	Description
class	Defines a traffic classification match criteria (through the police , set , and trust policy-map class configuration commands) for the specified class-map name.
police	Defines a policer for classified traffic.
policy-map	Creates or modifies a policy map that can be attached to multiple ports to specify a service policy.
set	Classifies IP traffic by setting a DSCP or IP-precedence value in the packet.
show policy-map	Displays QoS policy maps.

udld

Use the **udld** global configuration command to enable aggressive or normal mode in the UniDirectional Link Detection (UDLD) and to set the configurable message timer time. Use the **no** form of the command to disable aggressive or normal mode UDLD on all fiber-optic ports.

```
udld { aggressive | enable | message time message-timer-interval }
```

```
no udld { aggressive | enable | message }
```

Syntax Description

aggressive	Enable UDLD in aggressive mode on all fiber-optic interfaces.
enable	Enable UDLD in normal mode on all fiber-optic interfaces.
message time <i>message-timer-interval</i>	Configure the period of time between UDLD probe messages on ports that are in the advertisement phase and are determined to be bidirectional. The range is 1 to 90 seconds.

Defaults

UDLD is disabled on all interfaces.
The message timer is set at 60 seconds.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SEC	The range for the <i>message-timer-interval</i> was changed from 7 to 90 seconds to 1 to 90 seconds.

Usage Guidelines

UDLD supports two modes of operation: normal (the default) and aggressive. In normal mode, UDLD detects unidirectional links due to misconnected interfaces on fiber-optic connections. In aggressive mode, UDLD also detects unidirectional links due to one-way traffic on fiber-optic and twisted-pair links and due to misconnected interfaces on fiber-optic links. For information about normal and aggressive modes, see the “Understanding UDLD” section in the software configuration guide for this release.

If you change the message time between probe packets, you are making a trade-off between the detection speed and the CPU load. By decreasing the time, you can make the detection-response faster but increase the load on the CPU.

This command affects fiber-optic interfaces only. Use the **udld** interface configuration command to enable UDLD on other interface types.

You can use these commands to reset an interface shut down by UDLD:

- The **udld reset** privileged EXEC command to reset all interfaces shut down by UDLD
- The **shutdown** and **no shutdown** interface configuration commands
- The **no udld enable** global configuration command followed by the **udld {aggressive | enable}** global configuration command to re-enable UDLD globally

- The **no udld port** interface configuration command followed by the **udld port** or **udld port aggressive** interface configuration command to re-enable UDLD on the specified interface
- The **errdisable recovery cause udld** and **errdisable recovery interval *interval*** global configuration commands to automatically recover from the UDLD error-disabled state

Examples

This example shows how to enable UDLD on all fiber-optic interfaces:

```
Switch(config)# udld enable
```

You can verify your setting by entering the **show udld** privileged EXEC **command**.

Related Commands

Command	Description
show udld	Displays UDLD administrative and operational status for all ports or the specified port.
udld port	Enables UDLD on an individual interface or prevents a fiber-optic interface from being enabled by the udld global configuration command.
udld reset	Resets all interfaces shut down by UDLD and permits traffic to again pass through.

udld port

Use the **udld port** interface configuration command to enable the UniDirectional Link Detection (UDLD) on an individual interface or prevent a fiber-optic interface from being enabled by the **udld** global configuration command. Use the **no** form of this command to return to the **udld** global configuration command setting or to disable UDLD if entered for a nonfiber-optic port.

udld port [**aggressive**]

no udld port [**aggressive**]

Syntax Description

aggressive	Enable UDLD in aggressive mode on the specified interface.
-------------------	--

Defaults

On fiber-optic interfaces, UDLD is not enabled, not in aggressive mode, and not disabled. For this reason, fiber-optic interfaces enable UDLD according to the state of the **udld enable** or **udld aggressive** global configuration command.

On nonfiber-optic interfaces, UDLD is disabled.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(20)SE	The disable keyword was removed.

Usage Guidelines

A UDLD-capable port cannot detect a unidirectional link if it is connected to a UDLD-incapable port of another switch.

UDLD supports two modes of operation: normal (the default) and aggressive. In normal mode, UDLD detects unidirectional links due to misconnected interfaces on fiber-optic connections. In aggressive mode, UDLD also detects unidirectional links due to one-way traffic on fiber-optic and twisted-pair links and due to misconnected interfaces on fiber-optic links. For information about normal and aggressive modes, see the “Configuring UDLD” chapter in the software configuration guide for this release.

To enable UDLD in normal mode, use the **udld port** interface configuration command. To enable UDLD in aggressive mode, use the **udld port aggressive** interface configuration command.

Use the **no udld port** command on fiber-optic ports to return control of UDLD to the **udld enable** global configuration command or to disable UDLD on nonfiber-optic ports.

Use the **udld port aggressive** command on fiber-optic ports to override the setting of the **udld enable** or **udld aggressive** global configuration command. Use the **no** form on fiber-optic ports to remove this setting and to return control of UDLD enabling to the **udld** global configuration command or to disable UDLD on nonfiber-optic ports.

You can use these commands to reset an interface shut down by UDLD:

- The **udld reset** privileged EXEC command to reset all interfaces shut down by UDLD
- The **shutdown** and **no shutdown** interface configuration commands
- The **no udld enable** global configuration command followed by the **udld {aggressive | enable}** global configuration command to re-enable UDLD globally
- The **no udld port** interface configuration command followed by the **udld port** or **udld port aggressive** interface configuration command to re-enable UDLD on the specified interface
- The **errdisable recovery cause udld** and **errdisable recovery interval interval** global configuration commands to automatically recover from the UDLD error-disabled state

Examples

This example shows how to enable UDLD on a port:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# udld port
```

This example shows how to disable UDLD on a fiber-optic interface despite the setting of the **udld** global configuration command:

```
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# no udld port
```

You can verify your settings by entering the **show running-config** or the **show udld interface** privileged EXEC command.

Related Commands

Command	Description
show running-config	Displays the running configuration on the switch. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .
show udld	Displays UDLD administrative and operational status for all ports or the specified port.
udld	Enables aggressive or normal mode in UDLD or sets the configurable message timer time.
udld reset	Resets all interfaces shut down by UDLD and permits traffic to again pass through.

udld reset

Use the **udld reset** privileged EXEC command to reset all interfaces disabled by the UniDirectional Link Detection (UDLD) and permit traffic to begin passing through them again (though other features, such as spanning tree, Port Aggregation Protocol (PAgP), and Dynamic Trunking Protocol (DTP) still have their normal effects, if enabled).

udld reset

Syntax Description

This command has no arguments or keywords.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

If the interface configuration is still enabled for UDLD, these ports begin to run UDLD again and are disabled for the same reason if the problem has not been corrected.

Examples

This example shows how to reset all interfaces disabled by UDLD:

```
Switch# udld reset
1 ports shutdown by UDLD were reset.
```

You can verify your setting by entering the **show udld** privileged EXEC command.

Related Commands

Command	Description
show running-config	Displays the running configuration on the switch. For syntax information, select Cisco IOS Configuration Fundamentals Command Reference, Release 12.2 > File Management Commands > Configuration File Management Commands .
show udld	Displays UDLD administrative and operational status for all ports or the specified port.
udld	Enables aggressive or normal mode in UDLD or sets the configurable message timer time.
udld port	Enables UDLD on an individual interface or prevents a fiber-optic interface from being enabled by the udld global configuration command.

vlan (global configuration)

Use the **vlan** global configuration command to add a VLAN and to enter the config-vlan mode. Use the **no** form of this command to delete the VLAN. Configuration information for normal-range VLANs (VLAN IDs 1 to 1005) is always saved in the VLAN database. When VLAN Trunking Protocol (VTP) mode is transparent, you can create extended-range VLANs (VLAN IDs greater than 1005), and the VTP mode, domain name, and the VLAN configuration are saved in the switch running configuration file. You can save configurations in the switch startup configuration file by entering the **copy running-config startup-config** privileged EXEC command.

vlan *vlan-id*

no vlan *vlan-id*

Syntax Description	<i>vlan-id</i>	ID of the VLAN to be added and configured. For <i>vlan-id</i> , the range is 1 to 4094. You can enter a single VLAN ID, a series of VLAN IDs separated by commas, or a range of VLAN IDs separated by hyphens.
---------------------------	----------------	--

Defaults	This command has no default settings.
-----------------	---------------------------------------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines

You must use the **vlan** *vlan-id* global configuration command to add extended-range VLANs (VLAN IDs 1006 to 4094). Before configuring VLANs in the extended range, you must use the **vtp transparent** global configuration or VLAN configuration command to put the switch in VTP transparent mode. Extended-range VLANs are not learned by VTP and are not added to the VLAN database, but when VTP mode is transparent, VTP mode and domain name and all VLAN configurations are saved in the running configuration, and you can save them in the switch startup configuration file.

When you save the VLAN and VTP configurations in the startup configuration file and reboot the switch, the configuration is selected in these ways:

- If both the VLAN database and the configuration file show the VTP mode as transparent and the VTP domain names match, the VLAN database is ignored. The VTP and VLAN configurations in the startup configuration file are used. The VLAN database revision number remains unchanged in the VLAN database.
- If the VTP mode is server, or if the startup VTP mode or domain names do not match the VLAN database, the VTP mode and the VLAN configuration for the first 1005 VLANs use the VLAN database information.

If you try to create an extended-range VLAN when the switch is not in VTP transparent mode, the VLAN is rejected, and you receive an error message.

If you enter an invalid VLAN ID, you receive an error message and do not enter config-vlan mode.

Entering the **vlan** command with a VLAN ID enables config-vlan mode. When you enter the VLAN ID of an existing VLAN, you do not create a new VLAN, but you can modify VLAN parameters for that VLAN. The specified VLANs are added or modified when you exit the config-vlan mode. Only the **shutdown** command (for VLANs 1 to 1005) takes effect immediately.

These configuration commands are available in config-vlan mode. The **no** form of each command returns the characteristic to its default state.

**Note**

Although all commands are visible, the only VLAN configuration commands that are supported on extended-range VLANs are **mtu** *mtu-size*, **private-vlan**, and **remote-span**. For extended-range VLANs, all other characteristics must remain at the default state.

- **are** *are-number*: defines the maximum number of all-routes explorer (ARE) hops for this VLAN. This keyword applies only to TrCRF VLANs. The range is 0 to 13. The default is 7. If no value is entered, 0 is assumed to be the maximum.
- **backupcrf**: specifies the backup CRF mode. This keyword applies only to TrCRF VLANs.
 - **enable** backup CRF mode for this VLAN.
 - **disable** backup CRF mode for this VLAN (the default).
- **bridge** {*bridge-number* | **type**}: specifies the logical distributed source-routing bridge, the bridge that interconnects all logical rings having this VLAN as a parent VLAN in FDDI-NET, Token Ring-NET, and TrBRF VLANs. The range is 0 to 15. The default bridge number is 0 (no source-routing bridge) for FDDI-NET, TrBRF, and Token Ring-NET VLANs. The **type** keyword applies only to TrCRF VLANs and is one of these:
 - **srb** (source-route bridging)
 - **srt** (source-route transparent) bridging VLAN
- **exit**: applies changes, increments the VLAN database revision number (VLANs 1 to 1005 only), and exits config-vlan mode.
- **media**: defines the VLAN media type. See [Table 2-38](#) for valid commands and syntax for different media types.

**Note**

The switch supports only Ethernet ports. You configure only FDDI and Token Ring media-specific characteristics for VLAN Trunking Protocol (VTP) global advertisements to other switches. These VLANs are locally suspended.

- **ethernet** is Ethernet media type (the default).
- **fddi** is FDDI media type.
- **fd-net** is FDDI network entity title (NET) media type.
- **tokenring** is Token Ring media type if the VTP v2 mode is disabled, or TrCRF if the VTP Version 2 (v) mode is enabled.
- **tr-net** is Token Ring network entity title (NET) media type if the VTP v2 mode is disabled or TrBRF media type if the VTP v2 mode is enabled.
- **mtu** *mtu-size*: specifies the maximum transmission unit (MTU) (packet size in bytes). The range is 1500 to 18190. The default is 1500 bytes.

- **name** *vlan-name*: names the VLAN with an ASCII string from 1 to 32 characters that must be unique within the administrative domain. The default is *VLANxxxx* where *xxxx* represents four numeric digits (including leading zeros) equal to the VLAN ID number.
- **no**: negates a command or returns it to the default setting.
- **parent** *parent-vlan-id*: specifies the parent VLAN of an existing FDDI, Token Ring, or TrCRF VLAN. This parameter identifies the TrBRF to which a TrCRF belongs and is required when defining a TrCRF. The range is 0 to 1005. The default parent VLAN ID is 0 (no parent VLAN) for FDDI and Token Ring VLANs. For both Token Ring and TrCRF VLANs, the parent VLAN ID must already exist in the database and be associated with a Token Ring-NET or TrBRF VLAN.
- **private-vlan**: configure the VLAN as a private VLAN community, isolated, or primary VLAN or configure the association between private-VLAN primary and secondary VLANs. For more information, see the **private-vlan** command.
- **remote-span**: configure the VLAN as a Remote SPAN (RSPAN) VLAN. When the RSPAN feature is added to an existing VLAN, the VLAN is first deleted and is then recreated with the RSPAN feature. Any access ports are deactivated until the RSPAN feature is removed. If VTP is enabled, the new RSPAN VLAN is propagated by VTP for VLAN-IDs that are lower than 1024. Learning is disabled on the VLAN. See the **remote-span** command for more information.
- **ring** *ring-number*: defines the logical ring for an FDDI, Token Ring, or TrCRF VLAN. The range is 1 to 4095. The default for Token Ring VLANs is 0. For FDDI VLANs, there is no default.
- **said** *said-value*: specifies the security association identifier (SAID) as documented in IEEE 802.10. The range is 1 to 4294967294, and the number must be unique within the administrative domain. The default value is 100000 plus the VLAN ID number.
- **shutdown**: shuts down VLAN switching on the VLAN. This command takes effect immediately. Other commands take effect when you exit `config-vlan` mode.
- **state**: specifies the VLAN state:
 - **active** means the VLAN is operational (the default).
 - **suspend** means the VLAN is suspended. Suspended VLANs do not pass packets.
- **ste** *ste-number*: defines the maximum number of spanning-tree explorer (STE) hops. This keyword applies only to TrCRF VLANs. The range is 0 to 13. The default is 7.
- **stp type**: defines the spanning-tree type for FDDI-NET, Token Ring-NET, or TrBRF VLANs. For FDDI-NET VLANs, the default STP type is **ieee**. For Token Ring-NET VLANs, the default STP type is **ibm**. For FDDI and Token Ring VLANs, the default is no type specified.
 - **ieee** for IEEE Ethernet STP running source-route transparent (SRT) bridging.
 - **ibm** for IBM STP running source-route bridging (SRB).
 - **auto** for STP running a combination of source-route transparent bridging (IEEE) and source-route bridging (IBM).
- **tb-vlan1** *tb-vlan1-id* and **tb-vlan2** *tb-vlan2-id*: specifies the first and second VLAN to which this VLAN is translationally bridged. Translational VLANs translate FDDI or Token Ring to Ethernet, for example. The range is 0 to 1005. If no value is specified, 0 (no transitional bridging) is assumed.

Table 2-38 Valid Commands and Syntax for Different Media Types

Media Type	Valid Syntax
Ethernet	name <i>vlan-name</i> , media ethernet , state {suspend active}, said <i>said-value</i> , mtu <i>mtu-size</i> , remote-span , tb-vlan1 <i>tb-vlan1-id</i> , tb-vlan2 <i>tb-vlan2-id</i>
FDDI	name <i>vlan-name</i> , media fddi , state {suspend active}, said <i>said-value</i> , mtu <i>mtu-size</i> , ring <i>ring-number</i> , parent <i>parent-vlan-id</i> , tb-vlan1 <i>tb-vlan1-id</i> , tb-vlan2 <i>tb-vlan2-id</i>
FDDI-NET	name <i>vlan-name</i> , media fd-net , state {suspend active}, said <i>said-value</i> , mtu <i>mtu-size</i> , bridge <i>bridge-number</i> , stp type {ieee ibm auto}, tb-vlan1 <i>tb-vlan1-id</i> , tb-vlan2 <i>tb-vlan2-id</i> If VTP v2 mode is disabled, do not set the stp type to auto .
Token Ring	VTP v1 mode is enabled. name <i>vlan-name</i> , media tokenring , state {suspend active}, said <i>said-value</i> , mtu <i>mtu-size</i> , ring <i>ring-number</i> , parent <i>parent-vlan-id</i> , tb-vlan1 <i>tb-vlan1-id</i> , tb-vlan2 <i>tb-vlan2-id</i>
Token Ring concentrator relay function (TrCRF)	VTP v2 mode is enabled. name <i>vlan-name</i> , media tokenring , state {suspend active}, said <i>said-value</i> , mtu <i>mtu-size</i> , ring <i>ring-number</i> , parent <i>parent-vlan-id</i> , bridge type {srb srt}, are <i>are-number</i> , ste <i>ste-number</i> , backupcrf {enable disable}, tb-vlan1 <i>tb-vlan1-id</i> , tb-vlan2 <i>tb-vlan2-id</i>
Token Ring-NET	VTP v1 mode is enabled. name <i>vlan-name</i> , media tr-net , state {suspend active}, said <i>said-value</i> , mtu <i>mtu-size</i> , bridge <i>bridge-number</i> , stp type {ieee ibm}, tb-vlan1 <i>tb-vlan1-id</i> , tb-vlan2 <i>tb-vlan2-id</i>
Token Ring bridge relay function (TrBRF)	VTP v2 mode is enabled. name <i>vlan-name</i> , media tr-net , state {suspend active}, said <i>said-value</i> , mtu <i>mtu-size</i> , bridge <i>bridge-number</i> , stp type {ieee ibm auto}, tb-vlan1 <i>tb-vlan1-id</i> , tb-vlan2 <i>tb-vlan2-id</i>

Table 2-39 describes the rules for configuring VLANs.

Table 2-39 VLAN Configuration Rules

Configuration	Rule
VTP v2 mode is enabled, and you are configuring a TrCRF VLAN media type.	Specify a parent VLAN ID of a TrBRF that already exists in the database. Specify a ring number. Do not leave this field blank. Specify unique ring numbers when TrCRF VLANs have the same parent VLAN ID. Only one backup concentrator relay function (CRF) can be enabled.
VTP v2 mode is enabled, and you are configuring VLANs other than TrCRF media type.	Do not specify a backup CRF.

Table 2-39 VLAN Configuration Rules (continued)

Configuration	Rule
VTP v2 mode is enabled, and you are configuring a TrBRF VLAN media type.	Specify a bridge number. Do not leave this field blank.
VTP v1 mode is enabled.	No VLAN can have an STP type set to auto. This rule applies to Ethernet, FDDI, FDDI-NET, Token Ring, and Token Ring-NET VLANs.
Add a VLAN that requires translational bridging (values are not set to zero).	The translational bridging VLAN IDs that are used must already exist in the database. The translational bridging VLAN IDs that a configuration points to must also contain a pointer to the original VLAN in one of the translational bridging parameters (for example, Ethernet points to FDDI, and FDDI points to Ethernet). The translational bridging VLAN IDs that a configuration points to must be different media types than the original VLAN (for example, Ethernet can point to Token Ring). If both translational bridging VLAN IDs are configured, these VLANs must be different media types (for example, Ethernet can point to FDDI and Token Ring).

Examples

This example shows how to add an Ethernet VLAN with default media characteristics. The default includes a *vlan-name* of *VLANxxx*, where *xxxx* represents four numeric digits (including leading zeros) equal to the VLAN ID number. The default **media** option is **ethernet**; the **state** option is **active**. The default *said-value* variable is 100000 plus the VLAN ID; the *mtu-size* variable is 1500; the **stp-type** option is **ieee**. When you enter the **exit** config-vlan configuration command, the VLAN is added if it did not already exist; otherwise, this command does nothing.

This example shows how to create a new VLAN with all default characteristics and enter config-vlan mode:

```
Switch(config)# vlan 200
Switch(config-vlan)# exit
Switch(config)#
```

This example shows how to create a new extended-range VLAN with all the default characteristics, to enter config-vlan mode, and to save the new VLAN in the switch startup configuration file:

```
Switch(config)# vtp mode transparent
Switch(config)# vlan 2000
Switch(config-vlan)# end
Switch# copy running-config startup config
```

You can verify your setting by entering the **show vlan** privileged EXEC command.

Related Commands	Command	Description
	show vlan	Displays the parameters for all configured VLANs or one VLAN (if the VLAN ID or name is specified) in the administrative domain.
	vlan (VLAN configuration)	Configures normal-range VLANs in the VLAN database.

vlan (VLAN configuration)

Use the **vlan** VLAN configuration command to configure VLAN characteristics for a normal-range VLAN (VLAN IDs 1 to 1005) in the VLAN database. You access VLAN configuration mode by entering the **vlan database** privileged EXEC command. Use the **no** form of this command without additional parameters to delete a VLAN. Use the **no** form with parameters to change its configured characteristics.

```
vlan vlan-id [are are-number] [backupcrf {enable | disable}] [bridge bridge-number |
type {srb | srt}] [media {ethernet | fddi | fdi-net | tokenring | tr-net}] [mtu mtu-size]
[name vlan-name] [parent parent-vlan-id] [ring ring-number] [said said-value]
[state {suspend | active}] [ste ste-number] [stp type {ieee | ibm | auto}]
[tb-vlan1 tb-vlan1-id] [tb-vlan2 tb-vlan2-id]
```

```
no vlan vlan-id [are are-number] [backupcrf {enable | disable}] [bridge bridge-number |
type {srb | srt}] [media {ethernet | fddi | fdi-net | tokenring | tr-net}] [mtu mtu-size]
[name vlan-name] [parent parent-vlan-id] [ring ring-number] [said said-value]
[state {suspend | active}] [ste ste-number] [stp type {ieee | ibm | auto}]
[tb-vlan1 tb-vlan1-id] [tb-vlan2 tb-vlan2-id]
```

Extended-range VLANs (with VLAN IDs from 1006 to 4094) cannot be added or modified by using these commands. To add extended-range VLANs, use the **vlan (global configuration)** command to enter config-vlan mode.



Note

The switch supports only Ethernet ports. You configure only FDDI and Token Ring media-specific characteristics for VLAN Trunking Protocol (VTP) global advertisements to other switches. These VLANs are locally suspended.

Syntax Description

<i>vlan-id</i>	ID of the configured VLAN. The range is 1 to 1005 and must be unique within the administrative domain. Do not enter leading zeros.
are <i>are-number</i>	(Optional) Specify the maximum number of all-routes explorer (ARE) hops for this VLAN. This keyword applies only to TrCRF VLANs. The range is 0 to 13. If no value is entered, 0 is assumed to be the maximum.
backupcrf { enable disable }	(Optional) Specify the backup CRF mode. This keyword applies only to TrCRF VLANs. <ul style="list-style-type: none"> enable backup CRF mode for this VLAN. disable backup CRF mode for this VLAN.
bridge <i>bridge-number</i> type { srb srt }	(Optional) Specify the logical distributed source-routing bridge, the bridge that interconnects all logical rings having this VLAN as a parent VLAN in FDDI-NET, Token Ring-NET, and TrBRF VLANs. The range is 0 to 15. The type keyword applies only to TrCRF VLANs and is one of these: <ul style="list-style-type: none"> srb (source-route bridging) srt (source-route transparent) bridging VLAN

media { ethernet fddi fd-net tokenring tr-net }	(Optional) Specify the VLAN media type. Table 2-40 lists the valid syntax for each media type. <ul style="list-style-type: none"> • ethernet is Ethernet media type (the default). • fddi is FDDI media type. • fd-net is FDDI network entity title (NET) media type. • tokenring is Token Ring media type if the VTP v2 mode is disabled, or TrCRF if the VTP v2 mode is enabled. • tr-net is Token Ring network entity title (NET) media type if the VTP v2 mode is disabled or TrBRF media type if the VTP v2 mode is enabled.
mtu <i>mtu-size</i>	(Optional) Specify the maximum transmission unit (MTU) (packet size in bytes). The range is 1500 to 18190.
name <i>vlan-name</i>	(Optional) Specify the VLAN name, an ASCII string from 1 to 32 characters that must be unique within the administrative domain.
parent <i>parent-vlan-id</i>	(Optional) Specify the parent VLAN of an existing FDDI, Token Ring, or TrCRF VLAN. This parameter identifies the TrBRF to which a TrCRF belongs and is required when defining a TrCRF. The range is 0 to 1005.
ring <i>ring-number</i>	(Optional) Specify the logical ring for an FDDI, Token Ring, or TrCRF VLAN. The range is 1 to 4095.
said <i>said-value</i>	(Optional) Enter the security association identifier (SAID) as documented in IEEE 802.10. The range is 1 to 4294967294, and the number must be unique within the administrative domain.
state { suspend active }	(Optional) Specify the VLAN state: <ul style="list-style-type: none"> • If active, the VLAN is operational. • If suspend, the VLAN is suspended. Suspended VLANs do not pass packets.
ste <i>ste-number</i>	(Optional) Specify the maximum number of spanning-tree explorer (STE) hops. This keyword applies only to TrCRF VLANs. The range is 0 to 13.
stp type { ieee ibm auto }	(Optional) Specify the spanning-tree type for FDDI-NET, Token Ring-NET, or TrBRF VLAN. <ul style="list-style-type: none"> • ieee for IEEE Ethernet STP running source-route transparent (SRT) bridging. • ibm for IBM STP running source-route bridging (SRB). • auto for STP running a combination of source-route transparent bridging (IEEE) and source-route bridging (IBM).
tb-vlan1 <i>tb-vlan1-id</i> and tb-vlan2 <i>tb-vlan2-id</i>	(Optional) Specify the first and second VLAN to which this VLAN is translationally bridged. Translational VLANs translate FDDI or Token Ring to Ethernet, for example. The range is 0 to 1005. Zero is assumed if no value is specified.

Table 2-40 shows the valid syntax options for different media types.

Table 2-40 Valid Syntax for Different Media Types

Media Type	Valid Syntax
Ethernet	vlan <i>vlan-id</i> [name <i>vlan-name</i>] media ethernet [state { suspend active }] [said <i>said-value</i>] [mtu <i>mtu-size</i>] [tb-vlan1 <i>tb-vlan1-id</i>] [tb-vlan2 <i>tb-vlan2-id</i>]
FDDI	vlan <i>vlan-id</i> [name <i>vlan-name</i>] media fddi [state { suspend active }] [said <i>said-value</i>] [mtu <i>mtu-size</i>] [ring <i>ring-number</i>] [parent <i>parent-vlan-id</i>] [tb-vlan1 <i>tb-vlan1-id</i>] [tb-vlan2 <i>tb-vlan2-id</i>]
FDDI-NET	vlan <i>vlan-id</i> [name <i>vlan-name</i>] media fd-net [state { suspend active }] [said <i>said-value</i>] [mtu <i>mtu-size</i>] [bridge <i>bridge-number</i>] [stp type { ieee ibm auto }] [tb-vlan1 <i>tb-vlan1-id</i>] [tb-vlan2 <i>tb-vlan2-id</i>] If VTP v2 mode is disabled, do not set the stp type to auto .
Token Ring	VTP v1 mode is enabled. vlan <i>vlan-id</i> [name <i>vlan-name</i>] media tokenring [state { suspend active }] [said <i>said-value</i>] [mtu <i>mtu-size</i>] [ring <i>ring-number</i>] [parent <i>parent-vlan-id</i>] [tb-vlan1 <i>tb-vlan1-id</i>] [tb-vlan2 <i>tb-vlan2-id</i>]
Token Ring concentrator relay function (TrCRF)	VTP v2 mode is enabled. vlan <i>vlan-id</i> [name <i>vlan-name</i>] media tokenring [state { suspend active }] [said <i>said-value</i>] [mtu <i>mtu-size</i>] [ring <i>ring-number</i>] [parent <i>parent-vlan-id</i>] [bridge type { srb srt }] [are <i>are-number</i>] [ste <i>ste-number</i>] [backupperf { enable disable }] [tb-vlan1 <i>tb-vlan1-id</i>] [tb-vlan2 <i>tb-vlan2-id</i>]
Token Ring-NET	VTP v1 mode is enabled. vlan <i>vlan-id</i> [name <i>vlan-name</i>] media tr-net [state { suspend active }] [said <i>said-value</i>] [mtu <i>mtu-size</i>] [bridge <i>bridge-number</i>] [stp type { ieee ibm }] [tb-vlan1 <i>tb-vlan1-id</i>] [tb-vlan2 <i>tb-vlan2-id</i>]
Token Ring bridge relay function (TrBRF)	VTP v2 mode is enabled. vlan <i>vlan-id</i> [name <i>vlan-name</i>] media tr-net [state { suspend active }] [said <i>said-value</i>] [mtu <i>mtu-size</i>] [bridge <i>bridge-number</i>] [stp type { ieee ibm auto }] [tb-vlan1 <i>tb-vlan1-id</i>] [tb-vlan2 <i>tb-vlan2-id</i>]

Table 2-41 describes the rules for configuring VLANs.

Table 2-41 VLAN Configuration Rules

Configuration	Rule
VTP v2 mode is enabled, and you are configuring a TrCRF VLAN media type.	Specify a parent VLAN ID of a TrBRF that already exists in the database. Specify a ring number. Do not leave this field blank. Specify unique ring numbers when TrCRF VLANs have the same parent VLAN ID. Only one backup concentrator relay function (CRF) can be enabled.
VTP v2 mode is enabled, and you are configuring VLANs other than TrCRF media type.	Do not specify a backup CRF.

Table 2-41 VLAN Configuration Rules (continued)

Configuration	Rule
VTP v2 mode is enabled, and you are configuring a TrBRF VLAN media type.	Specify a bridge number. Do not leave this field blank.
VTP v1 mode is enabled.	No VLAN can have an STP type set to auto. This rule applies to Ethernet, FDDI, FDDI-NET, Token Ring, and Token Ring-NET VLANs.
Add a VLAN that requires translational bridging (values are not set to zero).	The translational bridging VLAN IDs that are used must already exist in the database. The translational bridging VLAN IDs that a configuration points to must also contain a pointer to the original VLAN in one of the translational bridging parameters (for example, Ethernet points to FDDI, and FDDI points to Ethernet). The translational bridging VLAN IDs that a configuration points to must be different media types than the original VLAN (for example, Ethernet can point to Token Ring). If both translational bridging VLAN IDs are configured, these VLANs must be different media types (for example, Ethernet can point to FDDI and Token Ring).

Defaults

The ARE value is 7.

Backup CRF is disabled.

The bridge number is 0 (no source-routing bridge) for FDDI-NET, TrBRF, and Token Ring-NET VLANs.

The **media** type is **ethernet**.

The default *mtu size* is 1500 bytes.

The *vlan-name* variable is *VLANxxxx*, where *xxxx* represents four numeric digits (including leading zeros) equal to the VLAN ID number.

The parent VLAN ID is 0 (no parent VLAN) for FDDI and Token Ring VLANs. For TrCRF VLANs, you must specify a parent VLAN ID. For both Token Ring and TrCRF VLANs, the parent VLAN ID must already exist in the database and be associated with a Token Ring-NET or TrBRF VLAN.

The *ring number* for Token Ring VLANs is 0. For FDDI VLANs, there is no default.

The *said value* is 100000 plus the VLAN ID.

The state is **active**.

The STE value is 7.

The STP type is **ieee** for FDDI-NET and **ibm** for Token Ring-NET VLANs. For FDDI and Token Ring VLANs, the default is no type specified.

The *tb-vlan1-id* and *tb-vlan2-id* variables are zero (no translational bridging).

Command Modes

VLAN configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You can only use this command mode for configuring normal-range VLANs, that is, VLAN IDs 1 to 1005.

**Note**

To configure extended-range VLANs (VLAN IDs 1006 to 4094), use the **vlan** global configuration command.

VLAN configuration is always saved in the VLAN database. If VTP mode is transparent, it is also saved in the switch running configuration file, along with the VTP mode and domain name. You can then save it in the switch startup configuration file by using the **copy running-config startup-config** privileged EXEC command.

When you save VLAN and VTP configuration in the startup configuration file and reboot the switch, the configuration is selected in these ways:

- If both the VLAN database and the configuration file show the VTP mode as transparent and the VTP domain names match, the VLAN database is ignored. The VTP and VLAN configurations in the startup configuration file are used. The VLAN database revision number remains unchanged in the VLAN database.
- If the VTP mode is server, or if the startup VTP mode or domain names do not match the VLAN database, the VTP mode and the VLAN configuration for the first 1005 VLANs use VLAN database information.

The following are the results of using the **no vlan** commands:

- When the **no vlan *vlan-id*** form is used, the VLAN is deleted. Deleting VLANs automatically resets to zero any other parent VLANs and translational bridging parameters that see the deleted VLAN.
- When the **no vlan *vlan-id* bridge** form is used, the VLAN source-routing bridge number returns to the default (0). The **vlan *vlan-id* bridge** command is used only for FDDI-NET and Token Ring-NET VLANs and is ignored in other VLAN types.
- When the **no vlan *vlan-id* media** form is used, the media type returns to the default (**ethernet**). Changing the VLAN media type (including the **no** form) resets the VLAN MTU to the default MTU for the type (unless the **mtu** keyword is also present in the command). It also resets the VLAN parent and translational bridging VLAN to the default (unless the **parent**, **tb-vlan1**, or **tb-vlan2** are also present in the command).
- When the **no vlan *vlan-id* mtu** form is used, the VLAN MTU returns to the default for the applicable VLAN media type. You can also modify the MTU by using the **media** keyword.
- When the **no vlan *vlan-id* name *vlan-name*** form is used, the VLAN name returns to the default name (**VLANxxxx**, where *xxxx* represent four numeric digits [including leading zeros] equal to the VLAN ID number).
- When the **no vlan *vlan-id* parent** form is used, the parent VLAN returns to the default (0). The parent VLAN resets to the default if the parent VLAN is deleted or if the **media** keyword changes the VLAN type or the VLAN type of the parent VLAN.
- When the **no vlan *vlan-id* ring** form is used, the VLAN logical ring number returns to the default (0).
- When the **no vlan *vlan-id* said** form is used, the VLAN SAID returns to the default (100,000 plus the VLAN ID).

- When the **no vlan *vlan-id* state** form is used, the VLAN state returns to the default (**active**).
- When the **no vlan *vlan-id* stp type** form is used, the VLAN spanning-tree type returns to the default (**ieee**).
- When the **no vlan *vlan-id* tb-vlan1** or **no-id *tb-vlan2*** form is used, the VLAN translational bridge VLAN (or VLANs, if applicable) returns to the default (0). Translational bridge VLANs must be a different VLAN type than the affected VLAN, and if two are specified, the two must be different VLAN types from each other. A translational bridge VLAN resets to the default if the translational bridge VLAN is deleted, if the **media** keyword changes the VLAN type, or if the **media** keyword changes the VLAN type of the corresponding translation bridge VLAN.

Examples

This example shows how to add an Ethernet VLAN with default media characteristics. The default includes a *vlan-name* of *VLANxxx*, where *xxx* represents four numeric digits (including leading zeros) equal to the VLAN ID number. The default **media** option is **ethernet**; the **state** option is **active**. The default *said-value* variable is 100000 plus the VLAN ID; the *mtu-size* variable is 1500; the **stp-type** option is **ieee**. When you enter the **exit** or **apply** vlan configuration command, the VLAN is added if it did not already exist; otherwise, this command does nothing.

```
Switch(vlan)# vlan 2
VLAN 2 added:
  Name: VLAN0002
Switch(vlan)# exit
APPLY completed.
Exiting....
```

This example shows how to modify an existing VLAN by changing its name and MTU size:

```
Switch(vlan)# no vlan name engineering mtu 1200
```

You can verify your settings by entering the **show vlan** privileged EXEC command.

Related Commands

Command	Description
show vlan	Displays the parameters for all configured VLANs or one VLAN (if the VLAN ID or name is specified) in the administrative domain.
vlan (global configuration)	Enters config-vlan mode for configuring normal-range and extended-range VLANs.

vlan access-map

Use the **vlan access-map** global configuration command to create or modify a VLAN map entry for VLAN packet filtering. This entry changes the mode to the VLAN access-map configuration. Use the **no** form of this command to delete a VLAN map entry. Use the **vlan filter** interface configuration command to apply a VLAN map to one or more VLANs.

vlan access-map *name* [*number*]

no vlan access-map *name* [*number*]

Syntax Description	
<i>name</i>	Name of the VLAN map.
<i>number</i>	(Optional) The sequence number of the map entry that you want to create or modify (0 to 65535). If you are creating a VLAN map and the sequence number is not specified, it is automatically assigned in increments of 10, starting from 10. This number is the sequence to insert to, or delete from, a VLAN access-map entry.

Defaults There are no VLAN map entries and no VLAN maps applied to a VLAN.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines In global configuration mode, use this command to create or modify a VLAN map. This entry changes the mode to VLAN access-map configuration, where you can use the **match** access-map configuration command to specify the access lists for IP or non-IP traffic to match and use the **action** command to set whether a match causes the packet to be forwarded or dropped.

In VLAN access-map configuration mode, these commands are available:

- **action**: sets the action to be taken (forward or drop).
- **default**: sets a command to its defaults
- **exit**: exits from VLAN access-map configuration mode
- **match**: sets the values to match (IP address or MAC address).
- **no**: negates a command or set its defaults

When you do not specify an entry number (sequence number), it is added to the end of the map.

There can be only one VLAN map per VLAN and it is applied as packets are received by a VLAN.

You can use the **no vlan access-map** *name* [*number*] command with a sequence number to delete a single entry.

In global configuration mode, use the **vlan filter** interface configuration command to apply the map to one or more VLANs.

For more information about VLAN map entries, see the software configuration guide for this release.

Examples

This example shows how to create a VLAN map named *vac1* and apply matching conditions and actions to it. If no other entries already exist in the map, this will be entry 10.

```
Switch(config)# vlan access-map vac1
Switch(config-access-map)# match ip address acl1
Switch(config-access-map)# action forward
```

This example shows how to delete VLAN map *vac1*:

```
Switch(config)# no vlan access-map vac1
```

Related Commands

Command	Description
action	Sets the action for the VLAN access map entry.
match (access-map configuration)	Sets the VLAN map to match packets against one or more access lists.
show vlan access-map	Displays information about a particular VLAN access map or all VLAN access maps.
vlan filter	Applies the VLAN access map to one or more VLANs.

vlan database

Use the **vlan database** privileged EXEC command to enter VLAN configuration mode. From this mode, you can add, delete, and modify VLAN configurations for normal-range VLANs and globally propagate these changes by using the VLAN Trunking Protocol (VTP). Configuration information is saved in the VLAN database.

vlan database



Note

VLAN configuration mode is only valid for VLAN IDs 1 to 1005.

Syntax Description

This command has no arguments or keywords.

Defaults

No default is defined.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You can use the VLAN database configuration commands to configure VLANs 1 to 1005. To configure extended-range VLANs (VLAN IDs 1006 to 4094), use the **vlan (global configuration)** command to enter config-vlan mode. You can also configure VLAN IDs 1 to 1005 by using the **vlan** global configuration command.

To return to the privileged EXEC mode from the VLAN configuration mode, enter the **exit** command.



Note

This command mode is different from other modes because it is session-oriented. When you add, delete, or modify VLAN parameters, the changes are not applied until you exit the session by entering the **apply** or **exit** command. When the changes are applied, the VTP configuration version is incremented. You can also *not* apply the changes to the VTP database by entering **abort**.

When you are in VLAN configuration mode, you can access the VLAN database and make changes by using these commands:

- **vlan**: accesses subcommands to add, delete, or modify values associated with a single VLAN. For more information, see the **vlan (VLAN configuration)** command.
- **vtp**: accesses subcommands to perform VTP administrative functions. For more information, see the **vtp (VLAN configuration)** command.

When you have modified VLAN or VTP parameters, you can use these editing buffer manipulation commands:

- **abort**: exits the mode without applying the changes. The VLAN configuration that was running before you entered VLAN configuration mode continues to be used.
- **apply**: applies current changes to the VLAN database, increments the database configuration revision number, propagates it throughout the administrative domain, and remains in VLAN configuration mode.



Note You cannot use this command when the switch is in VTP client mode.

- **exit**: applies all configuration changes to the VLAN database, increments the database configuration number, propagates it throughout the administrative domain, and returns to privileged EXEC mode.
- **no**: negates a command or set its defaults; valid values are **vlan** and **vtp**.
- **reset**: abandons proposed changes to the VLAN database, resets the proposed database to the implemented VLAN database on the switch, and remains in VLAN configuration mode.
- **show**: displays VLAN database information.
- **show changes** [*vlan-id*]: displays the differences between the VLAN database on the switch and the proposed VLAN database for all normal-range VLAN IDs (1 to 1005) or the specified VLAN ID (1 to 1005).
- **show current** [*vlan-id*]: displays the VLAN database on the switch or on a selected VLAN (1 to 1005).
- **show proposed** [*vlan-id*]: displays the proposed VLAN database or a selected VLAN (1 to 1005) from the proposed database. The proposed VLAN database is not the running configuration until you use the **exit** or **apply** VLAN configuration command.

You can verify that VLAN database changes have been made or aborted by using the **show vlan** privileged EXEC command. This output is different from the **show** VLAN database configuration command output.

Examples

This example shows how to enter the VLAN configuration mode from the privileged EXEC mode and to display VLAN database information:

```
Switch# vlan database
Switch(vlan)# show
VLAN ISL Id: 1
  Name: default
  Media Type: Ethernet
VLAN 802.10 Id: 100001
  State: Operational
  MTU: 1500
  Translational Bridged VLAN: 1002
  Translational Bridged VLAN: 1003

VLAN ISL Id: 2
  Name: VLAN0002
  Media Type: Ethernet
VLAN 802.10 Id: 100002
  State: Operational
  MTU: 1500
```

```
VLAN ISL Id: 1002
  Name: fddi-default
  Media Type: FDDI
  VLAN 802.10 Id: 101002
  State: Operational
  MTU: 1500
  Bridge Type: SRB
  Ring Number: 0
  Translational Bridged VLAN: 1
  Translational Bridged VLAN: 1003
```

<output truncated>

This is an example of output from the **show changes** command:

```
Switch(vlan)# show changes
```

```
DELETED:
  VLAN ISL Id: 4
  Name: VLAN0004
  Media Type: Ethernet
  VLAN 802.10 Id: 100004
  State: Operational
  MTU: 1500
```

```
MODIFIED:
  VLAN ISL Id: 7
  Current State: Operational
  Modified State: Suspended
```

This example shows how to display the differences between VLAN 7 in the current database and the proposed database.

```
Switch(vlan)# show changes 7
```

```
MODIFIED:
  VLAN ISL Id: 7
  Current State: Operational
  Modified State: Suspended
```

This is an example of output from the **show current 20** command. It displays only VLAN 20 of the current database.

```
Switch(vlan)# show current 20
VLAN ISL Id: 20
  Name: VLAN0020
  Media Type: Ethernet
  VLAN 802.10 Id: 100020
  State: Operational
  MTU: 1500
```

Related Commands

Command	Description
show vlan	Displays the parameters for all configured VLANs in the administrative domain.
shutdown vlan	Shuts down (suspends) local traffic on the specified VLAN.
vlan (global configuration)	Enters config-vlan mode for configuring normal-range and extended-range VLANs.

vlan dot1q tag native

Use the **vlan dot1q tag native** global configuration command to enable tagging of native VLAN frames on all IEEE 802.1Q trunk ports. Use the **no** form of this command to return to the default setting.

vlan dot1q tag native

no vlan dot1q tag native

Syntax Description This command has no arguments or keywords.

Defaults The IEEE 802.1Q native VLAN tagging is disabled.

Command Modes Global configuration

Command History	Release	Modification
	12.2(25)EA1	This command was introduced.

Usage Guidelines When enabled, native VLAN packets going out all IEEE 802.1Q trunk ports are tagged. When disabled, native VLAN packets going out all IEEE 802.1Q trunk ports are not tagged.

You can use this command with the IEEE 802.1Q tunneling feature. This feature operates on an edge switch of a service-provider network and expands VLAN space by using a VLAN-in-VLAN hierarchy and tagging the tagged packets. You must use IEEE 802.1Q trunk ports for sending packets to the service-provider network. However, packets going through the core of the service-provider network might also be carried on IEEE 802.1Q trunks. If the native VLANs of an IEEE 802.1Q trunks match the native VLAN of a tunneling port on the same switch, traffic on the native VLAN is not tagged on the sending trunk port. This command ensures that native VLAN packets on all IEEE 802.1Q trunk ports are tagged.

For more information about IEEE 802.1Q tunneling, see the software configuration guide for this release.

Examples This example shows how to enable IEEE 802.1Q tagging on native VLAN frames:

```
Switch# configure terminal
Switch (config)# vlan dot1q tag native
Switch (config)# end
```

You can verify your settings by entering the **show vlan dot1q tag native** privileged EXEC command.

■ vlan dot1q tag native

Related Commands

Command	Description
show vlan dot1q tag native	Displays IEEE 802.1Q native VLAN tagging status.

vlan filter

Use the **vlan filter** global configuration command to apply a VLAN map to one or more VLANs. Use the **no** form of this command to remove the map.

```
vlan filter mapname vlan-list {list | all}
```

```
no vlan filter mapname vlan-list {list | all}
```

Syntax Description

<i>mapname</i>	Name of the VLAN map entry.
<i>list</i>	The list of one or more VLANs in the form tt, uu-vv, xx, yy-zz, where spaces around commas and dashes are optional. The range is 1 to 4094.
all	Remove the filter from all VLANs.

Defaults

There are no VLAN filters.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

To avoid accidentally dropping too many packets and disabling connectivity in the middle of the configuration process, we recommend that you completely define the VLAN access map before applying it to a VLAN.

For more information about VLAN map entries, see the software configuration guide for this release.

Examples

This example applies VLAN map entry *map1* to VLANs 20 and 30:

```
Switch(config)# vlan filter map1 vlan-list 20, 30
```

This example shows how to delete VLAN map entry *map1* from VLAN 20:

```
Switch(config)# no vlan filter map1 vlan-list 20
```

You can verify your settings by entering the **show vlan filter** privileged EXEC command.

Related Commands	Command	Description
	show vlan access-map	Displays information about a particular VLAN access map or all VLAN access maps.
	show vlan filter	Displays information about all VLAN filters or about a particular VLAN or VLAN access map.
	vlan access-map	Creates a VLAN map entry for VLAN packet filtering.

vmps reconfirm (privileged EXEC)

Use the **vmps reconfirm** privileged EXEC command to immediately send VLAN Query Protocol (VQP) queries to reconfirm all dynamic VLAN assignments with the VLAN Membership Policy Server (VMPS).

vmps reconfirm

Syntax Description This command has no arguments or keywords.

Defaults No default is defined.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Examples This example shows how to immediately send VQP queries to the VMPS:

```
Switch# vmps reconfirm
```

You can verify your setting by entering the **show vmps** privileged EXEC command and examining the VMPS Action row of the Reconfirmation Status section. The **show vmps** command shows the result of the last time the assignments were reconfirmed either because the reconfirmation timer expired or because the **vmps reconfirm** command was entered.

Related Commands	Command	Description
	show vmps	Displays VQP and VMPS information.
	vmps reconfirm (global configuration)	Changes the reconfirmation interval for the VQP client.

vmps reconfirm (global configuration)

Use the **vmps reconfirm** global configuration command to change the reconfirmation interval for the VLAN Query Protocol (VQP) client. Use the **no** form of this command to return to the default setting.

vmps reconfirm *interval*

no vmps reconfirm

Syntax Description	<i>interval</i>	Reconfirmation interval for VQP client queries to the VLAN Membership Policy Server (VMPS) to reconfirm dynamic VLAN assignments. The range is 1 to 120 minutes.
---------------------------	-----------------	--

Defaults The default reconfirmation interval is 60 minutes.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Examples This example shows how to set the VQP client to reconfirm dynamic VLAN entries every 20 minutes:

```
Switch(config)# vmps reconfirm 20
```

You can verify your setting by entering the **show vmps** privileged EXEC command and examining information in the Reconfirm Interval row.

Related Commands	Command	Description
	show vmps	Displays VQP and VMPS information.
	vmps reconfirm (privileged EXEC)	Sends VQP queries to reconfirm all dynamic VLAN assignments with the VMPS.

vmps retry

Use the **vmps retry** global configuration command to configure the per-server retry count for the VLAN Query Protocol (VQP) client. Use the **no** form of this command to return to the default setting.

vmps retry *count*

no vmps retry

Syntax Description	<i>count</i>	Number of attempts to contact the VLAN Membership Policy Server (VMPS) by the client before querying the next server in the list. The range is 1 to 10.
---------------------------	--------------	---

Defaults	The default retry count is 3.
-----------------	-------------------------------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Examples This example shows how to set the retry count to 7:

```
Switch(config)# vmps retry 7
```

You can verify your setting by entering the **show vmps** privileged EXEC command and examining information in the Server Retry Count row.

Related Commands	Command	Description
	show vmps	Displays VQP and VMPS information.

vmps server

Use the **vmps server** global configuration command to configure the primary VLAN Membership Policy Server (VMPS) and up to three secondary servers. Use the **no** form of this command to remove a VMPS server.

vmps server *ipaddress* [**primary**]

no vmps server [*ipaddress*]

Syntax Description	
<i>ipaddress</i>	IP address or hostname of the primary or secondary VMPS servers. If you specify a hostname, the Domain Name System (DNS) server must be configured.
primary	(Optional) Decides whether primary or secondary VMPS servers are being configured.

Defaults No primary or secondary VMPS servers are defined.

Command Modes Global configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines

The first server entered is automatically selected as the primary server whether or not **primary** is entered. The first server address can be overridden by using **primary** in a subsequent command.

If a member switch in a cluster configuration does not have an IP address, the cluster does not use the VMPS server configured for that member switch. Instead, the cluster uses the VMPS server on the command switch, and the command switch proxies the VMPS requests. The VMPS server treats the cluster as a single switch and uses the IP address of the command switch to respond to requests.

When using the **no** form without specifying the *ipaddress*, all configured servers are deleted. If you delete all servers when dynamic-access ports are present, the switch cannot forward packets from new sources on these ports because it cannot query the VMPS.

Examples This example shows how to configure the server with IP address 191.10.49.20 as the primary VMPS server. The servers with IP addresses 191.10.49.21 and 191.10.49.22 are configured as secondary servers:

```
Switch(config)# vmps server 191.10.49.20 primary
Switch(config)# vmps server 191.10.49.21
Switch(config)# vmps server 191.10.49.22
```

This example shows how to delete the server with IP address 191.10.49.21:

```
Switch(config)# no vmips server 191.10.49.21
```

You can verify your setting by entering the **show vmips** privileged EXEC command and examining information in the VMPS Domain Server row.

Related Commands

Command	Description
show vmips	Displays VQP and VMPS information.

vtp (global configuration)

Use the **vtp** global configuration command to set or modify the VLAN Trunking Protocol (VTP) configuration characteristics. Use the **no** form of this command to remove the settings or to return to the default settings.

vtp { **domain** *domain-name* | **file** *filename* | **interface** *name* [**only**] | **mode** { **client** | **server** | **transparent** } | **password** *password* | **pruning** | **version** *number* }

no vtp { **file** | **interface** | **mode** | **password** | **pruning** | **version** }

Syntax Description	
domain <i>domain-name</i>	Specify the VTP domain name, an ASCII string from 1 to 32 characters that identifies the VTP administrative domain for the switch. The domain name is case sensitive.
file <i>filename</i>	Specify the Cisco IOS file system file where the VTP VLAN configuration is stored.
interface <i>name</i>	Specify the name of the interface providing the VTP ID updated for this device.
only	(Optional) Use only the IP address of this interface as the VTP IP updater.
mode	Specify the VTP device mode as client, server, or transparent.
client	Place the switch in VTP client mode. A switch in VTP client mode is enabled for VTP, and can send advertisements, but does not have enough nonvolatile storage to store VLAN configurations. You cannot configure VLANs on the switch. When a VTP client starts up, it does not send VTP advertisements until it receives advertisements to initialize its VLAN database.
server	Place the switch in VTP server mode. A switch in VTP server mode is enabled for VTP and sends advertisements. You can configure VLANs on the switch. The switch can recover all the VLAN information in the current VTP database from nonvolatile storage after reboot.
transparent	Place the switch in VTP transparent mode. A switch in VTP transparent mode is disabled for VTP, does not send advertisements or learn from advertisements sent by other devices, and cannot affect VLAN configurations on other devices in the network. The switch receives VTP advertisements and forwards them on all trunk ports except the one on which the advertisement was received. When VTP mode is transparent, the mode and domain name are saved in the switch running configuration file, and you can save them in the switch startup configuration file by entering the copy running-config startup config privileged EXEC command.
password <i>password</i>	Set the administrative domain password for the generation of the 16-byte secret value used in MD5 digest calculation to be sent in VTP advertisements and to validate received VTP advertisements. The password can be an ASCII string from 1 to 32 characters. The password is case sensitive.
pruning	Enable VTP pruning on the switch.
version <i>number</i>	Set VTP version to Version 1 or Version 2.

Defaults

The default filename is *flash:vlan.dat*.

The default mode is server mode.

No domain name or password is defined.

No password is configured.

Pruning is disabled.

The default version is Version 1.

Command Modes

Global configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

When you save VTP mode, domain name, and VLAN configurations in the switch startup configuration file and reboot the switch, the VTP and VLAN configurations are selected by these conditions:

- If both the VLAN database and the configuration file show the VTP mode as transparent and the VTP domain names match, the VLAN database is ignored. The VTP and VLAN configurations in the startup configuration file are used. The VLAN database revision number remains unchanged in the VLAN database.
- If the startup VTP mode is server mode, or the startup VTP mode or domain names do not match the VLAN database, VTP mode and VLAN configuration for the first 1005 VLANs are selected by VLAN database information, and VLANs greater than 1005 are configured from the switch configuration file.

The **vtp file filename** cannot be used to load a new database; it renames only the file in which the existing database is stored.

Follow these guidelines when configuring a VTP domain name:

- The switch is in the no-management-domain state until you configure a domain name. While in the no-management-domain state, the switch does not send any VTP advertisements even if changes occur to the local VLAN configuration. The switch leaves the no-management-domain state after it receives the first VTP summary packet on any port that is trunking or after you configure a domain name by using the **vtp domain** command. If the switch receives its domain from a summary packet, it resets its configuration revision number to 0. After the switch leaves the no-management-domain state, it can no be configured to re-enter it until you clear the NVRAM and reload the software.
- Domain names are case-sensitive.
- After you configure a domain name, it cannot be removed. You can only reassign it to a different domain.

Follow these guidelines when setting VTP mode:

- The **no vtp mode** command returns the switch to VTP server mode.
- The **vtp mode server** command is the same as **no vtp mode** except that it does not return an error if the switch is not in client or transparent mode.
- If the receiving switch is in client mode, the client switch changes its configuration to duplicate the configuration of the server. If you have switches in client mode, be sure to make all VTP or VLAN configuration changes on a switch in server mode. If the receiving switch is in server mode or transparent mode, the switch configuration is not changed.
- Switches in transparent mode do not participate in VTP. If you make VTP or VLAN configuration changes on a switch in transparent mode, the changes are not propagated to other switches in the network.
- If you change the VTP or VLAN configuration on a switch that is in server mode, that change is propagated to all the switches in the same VTP domain.
- The **vtp mode transparent** command disables VTP from the domain but does not remove the domain from the switch.
- The VTP mode must be transparent for you to add extended-range VLANs or for VTP and VLAN information to be saved in the running configuration file.
- If extended-range VLANs are configured on the switch and you attempt to set the VTP mode to server or client, you receive an error message, and the configuration is not allowed.
- VTP can be set to either server or client mode only when dynamic VLAN creation is disabled.

Follow these guidelines when setting a VTP password:

- Passwords are case sensitive. Passwords should match on all switches in the same domain.
- When you use the **no vtp password** form of the command, the switch returns to the no-password state.

Follow these guidelines when setting VTP pruning:

- VTP pruning removes information about each pruning-eligible VLAN from VTP updates if there are no stations belonging to that VLAN.
- If you enable pruning on the VTP server, it is enabled for the entire management domain for VLAN IDs 1 to 1005.
- Only VLANs in the pruning-eligible list can be pruned.
- Pruning is supported with VTP Version 1 and Version 2.

Follow these guidelines when setting the VTP version:

- Toggling the Version 2 (v2) mode state modifies parameters of certain default VLANs.
- Each VTP switch automatically detects the capabilities of all the other VTP devices. To use Version 2, all VTP switches in the network must support Version 2; otherwise, you must configure them to operate in VTP Version 1 mode.
- If all switches in a domain are VTP Version 2-capable, you need only to configure Version 2 on one switch; the version number is then propagated to the other Version-2 capable switches in the VTP domain.
- If you are using VTP in a Token Ring environment, VTP Version 2 must be enabled.

- If you are configuring a Token Ring bridge relay function (TrBRF) or Token Ring concentrator relay function (TrCRF) VLAN media type, you must use Version 2.
- If you are configuring a Token Ring or Token Ring-NET VLAN media type, you must use Version 1.

You cannot save password, pruning, and version configurations in the switch configuration file.

Examples

This example shows how to rename the filename for VTP configuration storage to *vtpfilename*:

```
Switch(config)# vtp file vtpfilename
```

This example shows how to clear the device storage filename:

```
Switch(config)# no vtp file vtpconfig
Clearing device storage filename.
```

This example shows how to specify the name of the interface providing the VTP updater ID for this device:

```
Switch(config)# vtp interface gigabitethernet
```

This example shows how to set the administrative domain for the switch:

```
Switch(config)# vtp domain OurDomainName
```

This example shows how to place the switch in VTP transparent mode:

```
Switch(config)# vtp mode transparent
```

This example shows how to configure the VTP domain password:

```
Switch(config)# vtp password ThisIsOurDomain'sPassword
```

This example shows how to enable pruning in the VLAN database:

```
Switch(config)# vtp pruning
Pruning switched ON
```

This example shows how to enable Version 2 mode in the VLAN database:

```
Switch(config)# vtp version 2
```

You can verify your settings by entering the **show vtp status** privileged EXEC command.

Related Commands

Command	Description
show vtp status	Displays the VTP statistics for the switch and general information about the VTP management domain status.
vtp (VLAN configuration)	Configures VTP domain-name, password, pruning, version, and mode.

vtp (VLAN configuration)

Use the **vtp** VLAN configuration command to configure VLAN Trunking Protocol (VTP) characteristics. You access VLAN configuration mode by entering the **vlan database** privileged EXEC command. Use the **no** form of this command to return to the default settings, disable the characteristic, or remove the password.

```
vtp {domain domain-name | password password | pruning | v2-mode | {server | client | transparent}}
```

```
no vtp {client | password | pruning | transparent | v2-mode}
```

Syntax Description	
domain <i>domain-name</i>	Set the VTP domain name by entering an ASCII string from 1 to 32 characters that identifies the VTP administrative domain for the switch. The domain name is case sensitive.
password <i>password</i>	Set the administrative domain password for the generation of the 16-byte secret value used in MD5 digest calculation to be sent in VTP advertisements and to validate received VTP advertisements. The password can be an ASCII string from 1 to 32 characters. The password is case sensitive.
pruning	Enable pruning in the VTP administrative domain. VTP pruning causes information about each pruning-eligible VLAN to be removed from VTP updates if there are no stations belonging to that VLAN.
v2-mode	Enable VLAN Trunking Protocol (VTP) Version 2 in the administrative domains.
client	Place the switch in VTP client mode. A switch in VTP client mode is enabled for VTP, can send advertisements, but does not have enough nonvolatile storage to store VLAN configurations. You cannot configure VLANs on it. When a VTP client starts up, it does not send VTP advertisements until it receives advertisements to initialize its VLAN database.
server	Place the switch in VTP server mode. A switch in VTP server mode is enabled for VTP and sends advertisements. You can configure VLANs on it. The switch can recover all the VLAN information in the current VTP database from nonvolatile storage after reboot.
transparent	Place the switch in VTP transparent mode. A switch in VTP transparent mode is disabled for VTP, does not send advertisements or learn from advertisements sent by other devices, and cannot affect VLAN configurations on other devices in the network. The switch receives VTP advertisements and forwards them on all trunk ports except the one on which the advertisement was received.

Defaults

The default mode is server mode.

No domain name is defined.

No password is configured.

Pruning is disabled.

VTP Version 2 (v2 mode) is disabled.

Command Modes VLAN configuration

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines If the VTP mode is transparent, the mode and domain name are saved in the switch running configuration file, and you can save the configuration in the switch startup configuration file by using the **copy running-config startup-config** privileged EXEC command.

Follow these guidelines when setting the VTP mode:

- The **no vtp client** and **no vtp transparent** forms of the command return the switch to VTP server mode.
- The **vtp server** command is the same as **no vtp client** or **no vtp transparent** except that it does not return an error if the switch is not in client or transparent mode.
- If the receiving switch is in client mode, the client switch changes its configuration to duplicate the configuration of the server. If you have switches in client mode, make sure to make all VTP or VLAN configuration changes on a switch in server mode. If the receiving switch is in server mode or transparent mode, the switch configuration is not changed.
- Switches in transparent mode do not participate in VTP. If you make VTP or VLAN configuration changes on a switch in transparent mode, the changes are not propagated to other switches in the network.
- If you make a change to the VTP or VLAN configuration on a switch in server mode, that change is propagated to all the switches in the same VTP domain.
- The **vtp transparent** command disables VTP from the domain but does not remove the domain from the switch.
- The VTP mode must be transparent for you to add extended-range VLANs or for the VTP and the VLAN configurations to be saved in the running configuration file.
- If extended-range VLANs are configured on the switch and you attempt to set the VTP mode to server or client, you receive an error message and the configuration is not allowed.
- VTP can be set to either server or client mode only when dynamic VLAN creation is disabled.



Note VTP configuration in VLAN configuration mode is saved in the VLAN database when applied.

Follow these guidelines when configuring a VTP domain name:

- The switch is in the no-management-domain state until you configure a domain name. While in the no-management-domain state, the switch does not send any VTP advertisements even if changes occur to the local VLAN configuration. The switch leaves the no-management-domain state after receiving the first VTP summary packet on any port that is currently trunking or after configuring a domain name with the **vtp domain** command. If the switch receives its domain from a summary packet, it resets its configuration revision number to zero. After the switch leaves the no-management-domain state, it can never be configured to reenter it until you clear the NVRAM and reload the software.
- Domain names are case sensitive.
- After you configure a domain name, it cannot be removed. You can reassign it only to a different domain.

Follow these guidelines when configuring a VTP password:

- Passwords are case sensitive. Passwords should match on all switches in the same domain.
- When the **no vtp password** form of the command is used, the switch returns to the no-password state.

Follow these guidelines when enabling VTP pruning:

- If you enable pruning on the VTP server, it is enabled for the entire management domain.
- Only VLANs included in the pruning-eligible list can be pruned.
- Pruning is supported with VTP Version 1 and Version 2.

Follow these guidelines when enabling VTP Version 2 (v2-mode):

- Toggling the version (v2-mode) state modifies certain parameters of certain default VLANs.
- Each VTP switch automatically detects the capabilities of all the other VTP devices. To use VTP Version 2, all VTP switches in the network must support Version 2; otherwise, you must configure them to operate in VTP Version 1 (**no vtp v2-mode**).
- If all switches in a domain are VTP Version 2-capable, you need only to enable VTP Version 2 on one switch; the version number is then propagated to the other Version-2 capable switches in the VTP domain.
- If you are using VTP in a Token Ring environment or configuring a Token Ring bridge relay function (TrBRF) or Token Ring concentrator relay function (TrCRF) VLAN media type, VTP Version 2 (**v2-mode**) must be enabled.
- If you are configuring a Token Ring or Token Ring-NET VLAN media type, you must use VTP Version 1.

Examples

This example shows how to place the switch in VTP transparent mode:

```
Switch(vlan)# vtp transparent
Setting device to VTP TRANSPARENT mode.
```

This example shows how to set the administrative domain for the switch:

```
Switch(vlan)# vtp domain OurDomainName
Changing VTP domain name from cisco to OurDomainName
```

This example shows how to configure the VTP domain password:

```
Switch(vlan)# vtp password private
Setting device VLAN database password to private.
```

This example shows how to enable pruning in the proposed new VLAN database:

```
Switch(vlan)# vtp pruning
Pruning switched ON
```

This example shows how to enable v2 mode in the proposed new VLAN database:

```
Switch(vlan)# vtp v2-mode
V2 mode enabled.
```

You can verify your settings by entering the **show vtp status** privileged EXEC command.

Related Commands

Command	Description
show vtp status	Displays the VTP statistics for the switch and general information about the VTP management domain status.
switchport trunk pruning	Configures the VLAN pruning-eligible list for ports in trunking mode.
vtp (global configuration)	Configures the VTP filename, interface, domain name, and mode.



Catalyst 3560 Switch Boot Loader Commands

This appendix describes the boot loader commands on the Catalyst 3560 switch.

During normal boot loader operation, you are not presented with the boot loader command-line prompt. You gain access to the boot loader command line if the switch is set to manually boot, if an error occurs during power-on self test (POST) DRAM testing, or if an error occurs while loading the operating system (a corrupted Cisco IOS image). You can also access the boot loader if you have lost or forgotten the switch password.



Note

The default switch configuration allows an end user with physical access to the switch to recover from a lost password by interrupting the boot process while the switch is powering up and then entering a new password. The password recovery disable feature allows the system administrator to protect access to the switch password by disabling part of this functionality and allowing the user to interrupt the boot process only by agreeing to set the system back to the default configuration. With password recovery disabled, the user can still interrupt the boot process and change the password, but the configuration file (config.text) and the VLAN database file (vlan.dat) are deleted. For more information, see the software configuration guide for this release.

You can access the boot loader through a switch console connection at 9600 bps. Unplug the switch power cord, and press the switch **Mode** button while reconnecting the power cord. You can release the **Mode** button a second or two after the LED above port 1X goes off. You should then see the boot loader *Switch:* prompt. The boot loader performs low-level CPU initialization, performs POST, and loads a default operating system image into memory.

boot

Use the **boot** boot loader command to load and boot an executable image and to enter the command-line interface.

```
boot [-post | -n | -p | flag] filesystem:/file-url ...
```

Syntax Description

-post	(Optional) Run the loaded image with an extended or comprehensive power-on self-test (POST). Using this keyword causes POST to take longer to complete.
-n	(Optional) Pause for the Cisco IOS debugger immediately after launching.
-p	(Optional) Pause for the JTAG debugger right after loading the image.
<i>filesystem:</i>	Alias for a flash file system. Use flash: for the system board flash device.
<i>/file-url</i>	(Optional) Path (directory) and name of a bootable image. Separate image names with a semicolon.

Defaults

The switch attempts to automatically boot the system by using information in the BOOT environment variable. If this variable is not set, the switch attempts to load and execute the first executable image it can by performing a recursive, depth-first search throughout the flash file system. In a depth-first search of a directory, each encountered subdirectory is completely searched before continuing the search in the original directory.

Command Modes

Boot loader

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

When you enter the **boot** command without any arguments, the switch attempts to automatically boot the system by using the information in the BOOT environment variable, if any. If you supply an image name for the *file-url* variable, the **boot** command attempts to boot the specified image.

When you set boot loader **boot** command options, they are executed immediately and apply only to the current boot loader session. These settings are not saved for the next boot operation.

Filenames and directory names are case sensitive.

Examples

This example shows how to boot the switch using the *new-image.bin* image:

```
switch: boot flash:/new-images/new-image.bin
```

After entering this command, you are prompted to start the setup program.

Related Commands	Command	Description
	set	Sets the BOOT environment variable to boot a specific image when the BOOT keyword is appended to the command.

cat

Use the **cat** boot loader command to display the contents of one or more files.

```
cat filesystem:/file-url ...
```

Syntax Description	<i>filesystem:</i>	Alias for a flash file system. Use flash: for the system board flash device.
	<i>/file-url</i>	Path (directory) and name of the files to display. Separate each filename with a space.

Command Modes	Boot loader
----------------------	-------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	Filenames and directory names are case sensitive.
	If you specify a list of files, the contents of each file appears sequentially.

Examples	This example shows how to display the contents of two files:
-----------------	--

```
switch: cat flash:/new-images/info flash:env_vars
version_suffix: ipservices-122-25.SEB
version_directory: c3560-ipservices-mz.122-25.SEB
image_name: c3560-ipservices-mz.122-25.SEB.bin
ios_image_file_size: 6395392
total_image_file_size: 8059904
image_feature: IP|LAYER_3|PLUS|MIN_DRAM_MEG=128
image_family: C3560
info_end:
BAUD=57600
MANUAL_BOOT=no
```

Related Commands	Command	Description
	more	Displays the contents of one or more files.
	type	Displays the contents of one or more files.

copy

Use the **copy** boot loader command to copy a file from a source to a destination.

```
copy [-b block-size] filesystem:/source-file-url filesystem:/destination-file-url
```

Syntax Description		
-b <i>block-size</i>	(Optional)	This option is used only for internal development and testing.
<i>filesystem:</i>	Alias for a flash file system. Use flash: for the system board flash device.	
<i>/source-file-url</i>	Path (directory) and filename (source) to be copied.	
<i>/destination-file-url</i>	Path (directory) and filename of the destination.	

Defaults The default block size is 4 KB.

Command Modes Boot loader

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines

Filenames and directory names are case sensitive.

Directory names are limited to 45 characters between the slashes (/); the name cannot contain control characters, spaces, deletes, slashes, quotes, semicolons, or colons.

Filenames are limited to 45 characters; the name cannot contain control characters, spaces, deletes, slashes, quotes, semicolons, or colons.

If you are copying a file to a new directory, the directory must already exist.

Examples

This example show how to copy a file at the root:

```
switch: copy flash:test1.text flash:test4.text
.
```

File "flash:test1.text" successfully copied to "flash:test4.text"

You can verify that the file was copied by entering the **dir filesystem:** boot loader command.

Related Commands	Command	Description
	delete	Deletes one or more files from the specified file system.

delete

Use the **delete** boot loader command to delete one or more files from the specified file system.

```
delete filesystem:/file-url ...
```

Syntax Description	<i>filesystem:</i>	Alias for a flash file system. Use flash: for the system board flash device.
	<i>/file-url</i>	Path (directory) and filename to delete. Separate each filename with a space.

Command Modes	Boot loader
----------------------	-------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	<p>Filenames and directory names are case sensitive.</p> <p>The switch prompts you for confirmation before deleting each file.</p>
-------------------------	--

Examples	<p>This example shows how to delete two files:</p> <pre>switch: delete flash:test2.text flash:test5.text Are you sure you want to delete "flash:test2.text" (y/n)?y File "flash:test2.text" deleted Are you sure you want to delete "flash:test5.text" (y/n)?y File "flash:test2.text" deleted</pre>
-----------------	---

You can verify that the files were deleted by entering the **dir flash:** boot loader command.

Related Commands	Command	Description
	copy	Copies a file from a source to a destination.

dir

Use the **dir** boot loader command to display a list of files and directories on the specified file system.

```
dir filesystem:/file-url ...
```

Syntax Description	filesystem:	Alias for a flash file system. Use flash: for the system board flash device.
	/file-url	(Optional) Path (directory) and directory name whose contents you want to display. Separate each directory name with a space.

Command Modes	Boot loader
---------------	-------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	Directory names are case sensitive.
------------------	-------------------------------------

Examples This example shows how to display the files in flash memory:

```
switch: dir flash:
Directory of flash:/

   3  -rwx      1839  Mar 01 2002 00:48:15  config.text
  11  -rwx      1140  Mar 01 2002 04:18:48  vlan.dat
  21  -rwx         26  Mar 01 2002 00:01:39  env_vars
   9  drwx       768  Mar 01 2002 23:11:42  html
  16  -rwx      1037  Mar 01 2002 00:01:11  config.text
  14  -rwx      1099  Mar 01 2002 01:14:05  homepage.htm
  22  -rwx         96  Mar 01 2002 00:01:39  system_env_vars
  17  drwx       192   Mar 06 2002 23:22:03  c3560-ipservices-mz.122-25.SEB

15998976 bytes total (6397440 bytes free)
```

Table A-1 describes the fields in the display.

Table A-1 dir Field Descriptions

Field	Description
2	Index number of the file.
-rwx	File permission, which can be any or all of the following: <ul style="list-style-type: none"> d—directory r—readable w—writable x—executable

Table A-1 *dir* Field Descriptions (continued)

Field	Description
1644045	Size of the file.
<date>	Last modification date.
env_vars	Filename.

Related Commands

Command	Description
mkdir	Creates one or more directories.
rmdir	Removes one or more directories.

flash_init

Use the **flash_init** boot loader command to initialize the flash file system.

flash_init

Syntax Description This command has no arguments or keywords.

Defaults The flash file system is automatically initialized during normal system operation.

Command Modes Boot loader

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines During the normal boot process, the flash file system is automatically initialized.

Use this command to manually initialize the flash file system. For example, you use this command during the recovery procedure for a lost or forgotten password.

format

Use the **format** boot loader command to format the specified file system and destroy all data in that file system.

format *filesystem:*

Syntax Description

filesystem: Alias for a flash file system. Use **flash:** for the system board flash device.

Command Modes

Boot loader

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines



Caution

Use this command with care; it destroys all data on the file system and renders your system unusable.

fsock

Use the **fsock** boot loader command to check the file system for consistency.

fsock [-test | -f] *filesystem:*

Syntax Description		
-test	(Optional) Initialize the file system code and perform extra POST on flash memory. An extensive, nondestructive memory test is performed on every byte that makes up the file system.	
-f	(Optional) Initialize the file system code and perform a fast file consistency check. Cyclic redundancy checks (CRCs) in the flashfs sectors are not checked.	
<i>filesystem:</i>	Alias for a flash file system. Use flash: for the system board flash device.	

Defaults No file system check is performed.

Command Modes Boot loader

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines To stop an in-progress file system consistency check, disconnect the switch power and then reconnect the power.

Examples This example shows how to perform an extensive file system check on flash memory:

```
switch: fsock -test flash:
```

help

Use the **help** boot loader command to display the available commands.

help

Syntax Description This command has no arguments or keywords.

Command Modes Boot loader

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You can also use the question mark (?) to display a list of available boot loader commands.

load_helper

Use the **load_helper** boot loader command to load and initialize one or more helper images, which extend or patch the functionality of the boot loader.

load_helper *filesystem:lfile-url ...*

Syntax Description	<i>filesystem:</i>	Alias for a flash file system. Use flash: for the system board flash device.
	<i>lfile-url</i>	Path (directory) and a list of loadable helper files to dynamically load during loader initialization. Separate each image name with a semicolon.

Defaults No helper files are loaded.

Command Modes Boot loader

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **load_helper** command searches for loadable files only if the HELPER environment variable is set. Filenames and directory names are case sensitive.

memory

Use the **memory** boot loader command to display memory heap utilization information.

memory

Syntax Description This command has no arguments or keywords.

Command Modes Boot loader

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Examples This example shows how to display memory heap utilization information:

```
switch: memory
Text: 0x00700000 - 0x0071cf24 (0x0001cf24 bytes)
Rotext: 0x00000000 - 0x00000000 (0x00000000 bytes)
Data: 0x0071cf24 - 0x00723a0c (0x00006ae8 bytes)
Bss: 0x0072529c - 0x00746f94 (0x00021cf8 bytes)
Heap: 0x00756f98 - 0x00800000 (0x000a9068 bytes)
```

Bottom heap utilization is 22 percent.

Top heap utilization is 0 percent.

Total heap utilization is 22 percent.

Total bytes: 0xa9068 (692328)

Bytes used: 0x26888 (157832)

Bytes available: 0x827e0 (534496)

Alternate heap utilization is 0 percent.

Total alternate heap bytes: 0x6fd000 (7327744)

Alternate heap bytes used: 0x0 (0)

Alternate heap bytes available: 0x6fd000 (7327744)

[Table A-2](#) describes the fields in the display.

Table A-2 *memory Field Descriptions*

Field	Description
Text	Beginning and ending address of the text storage area.
Rotext	Beginning and ending address of the read-only text storage area. This part of the data segment is grouped with the Text entry.
Data	Beginning and ending address of the data segment storage area.
Bss	Beginning and ending address of the block started by symbol (Bss) storage area. It is initialized to zero.
Heap	Beginning and ending address of the area in memory that memory is dynamically allocated to and freed from.

mkdir

Use the **mkdir** boot loader command to create one or more new directories on the specified file system.

mkdir *filesystem:/directory-url ...*

Syntax Description	<i>filesystem:</i>	Alias for a flash file system. Use flash: for the system board flash device.
	<i>/directory-url</i>	Name of the directories to create. Separate each directory name with a space.

Command Modes	Boot loader
----------------------	-------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	Directory names are case sensitive.
	Directory names are limited to 45 characters between the slashes (/); the name cannot contain control characters, spaces, deletes, slashes, quotes, semicolons, or colons.

Examples This example shows how to make a directory called Saved_Configs:

```
switch: mkdir flash:Saved_Configs
Directory "flash:Saved_Configs" created
```

This example shows how to make two directories:

```
switch: mkdir flash:Saved_Configs1 flash:Test
Directory "flash:Saved_Configs1" created
Directory "flash:Test" created
```

You can verify that the directory was created by entering the **dir** *filesystem:* boot loader command.

Related Commands	Command	Description
	dir	Displays a list of files and directories on the specified file system.
	rmdir	Removes one or more directories from the specified file system.

more

Use the **more** boot loader command to display the contents of one or more files.

```
more filesystem:/file-url ...
```

Syntax Description	filesystem:	Alias for a flash file system. Use flash: for the system board flash device.
	/file-url	Path (directory) and name of the files to display. Separate each filename with a space.

Command Modes	Boot loader
---------------	-------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	<p>Filenames and directory names are case sensitive.</p> <p>If you specify a list of files, the contents of each file appears sequentially.</p>
------------------	---

Examples	<p>This example shows how to display the contents of two files:</p>
----------	---

```
switch: more flash:/new-images/info flash:env_vars
version_suffix: ipservices-122-25.SEB
version_directory: c3560-ipservices-mx.122-25.SEB
image_name: c3560-ipservices-mx.122-25.SEB.bin
ios_image_file_size: 6395392
total_image_file_size: 8059904
image_feature: IP|LAYER_3|PLUS|MIN_DRAM_MEG=128
image_family: C3560
info_end:
BAUD=57600
MANUAL_BOOT=no
```

Related Commands	Command	Description
	cat	Displays the contents of one or more files.
	type	Displays the contents of one or more files.

rename

Use the **rename** boot loader command to rename a file.

```
rename filesystem:/source-file-url filesystem:/destination-file-url
```

Syntax Description	
<i>filesystem:</i>	Alias for a flash file system. Use flash: for the system board flash device.
<i>/source-file-url</i>	Original path (directory) and filename.
<i>/destination-file-url</i>	New path (directory) and filename.

Command Modes	
	Boot loader

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	
	<p>Filenames and directory names are case sensitive.</p> <p>Directory names are limited to 45 characters between the slashes (/); the name cannot contain control characters, spaces, deletes, slashes, quotes, semicolons, or colons.</p> <p>Filenames are limited to 45 characters; the name cannot contain control characters, spaces, deletes, slashes, quotes, semicolons, or colons.</p>

Examples This example shows a file named *config.text* being renamed to *config1.text*:

```
switch: rename flash:config.text flash:config1.text
```

You can verify that the file was renamed by entering the **dir filesystem:** boot loader command.

Related Commands	Command	Description
	copy	Copies a file from a source to a destination.

reset

Use the **reset** boot loader command to perform a hard reset on the system. A hard reset is similar to power-cycling the switch, clearing the processor, registers, and memory.

reset

Syntax Description This command has no arguments or keywords.

Command Modes Boot loader

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Examples This example shows how to reset the system:

```
switch: reset
Are you sure you want to reset the system (y/n)?y
System resetting...
```

Related Commands	Command	Description
	boot	Loads and boots an executable image and enters the command-line interface.

rmdir

Use the **rmdir** boot loader command to remove one or more empty directories from the specified file system.

rmdir *filesystem:/directory-url ...*

Syntax Description	<i>filesystem:</i>	Alias for a flash file system. Use flash: for the system board flash device.
	<i>/directory-url</i>	Path (directory) and name of the empty directories to remove. Separate each directory name with a space.

Command Modes	Boot loader
----------------------	-------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	<p>Directory names are case sensitive and limited to 45 characters between the slashes (/); the name cannot contain control characters, spaces, deletes, slashes, quotes, semicolons, or colons.</p> <p>Before removing a directory, you must first delete all the files in the directory.</p> <p>The switch prompts you for confirmation before deleting each directory.</p>
-------------------------	---

Examples	<p>This example shows how to remove a directory:</p> <pre>switch: rmdir flash:Test</pre> <p>You can verify that the directory was deleted by entering the dir <i>filesystem:</i> boot loader command.</p>
-----------------	---

Related Commands	Command	Description
	dir	Displays a list of files and directories on the specified file system.
	mkdir	Creates one or more new directories on the specified file system.

set

Use the **set** boot loader command to set or display environment variables, which can be used to control the boot loader or any other software running on the switch.

set *variable value*

Syntax Description

<i>variable value</i>	<p>Use one of these keywords for <i>variable</i> and <i>value</i>:</p> <p>MANUAL_BOOT—Decides whether the switch automatically or manually boots. Valid values are 1, yes, 0, and no. If it is set to no or 0, the boot loader attempts to automatically boot the system. If it is set to anything else, you must manually boot the switch from the boot loader mode.</p> <p>BOOT <i>filesystem:file-url</i>—A semicolon-separated list of executable files to try to load and execute when automatically booting.</p> <p>If the BOOT environment variable is not set, the system attempts to load and execute the first executable image it can find by using a recursive, depth-first search through the flash: file system. If the BOOT variable is set but the specified images cannot be loaded, the system attempts to boot the first bootable file that it can find in the flash file system.</p> <p>ENABLE_BREAK—Decides whether the automatic boot process can be interrupted by using the Break key on the console.</p> <p>Valid values are 1, yes, on, 0, no, and off. If it is set to 1, yes, or on, you can interrupt the automatic boot process by pressing the Break key on the console after the flash file system has initialized.</p> <p>HELPER <i>filesystem:file-url</i>—A semicolon-separated list of loadable files to dynamically load during the boot loader initialization. Helper files extend or patch the functionality of the boot loader.</p> <p>PS1 <i>prompt</i>—A string that is used as the command-line prompt in boot loader mode.</p> <p>CONFIG_FILE flash:<i>file-url</i>—The filename that Cisco IOS uses to read and write a nonvolatile copy of the system configuration.</p> <p>BAUD <i>rate</i>—The rate in bits per second (bps) used for the console. The Cisco IOS software inherits the baud rate setting from the boot loader and continues to use this value unless the configuration file specifies another setting. The range is from 0 to 4294967295 bps. Valid values are 50, 75, 110, 150, 300, 600, 1200, 1800, 2000, 2400, 3600, 4800, 7200, 9600, 14400, 19200, 28800, 38400, 56000, 57600, 115200, and 128000.</p> <p>The most commonly used values are 300, 1200, 2400, 9600, 19200, 57600, and 115200.</p> <hr/> <p>BOOHLPR <i>filesystem:file-url</i>—The name of the Cisco IOS helper image that is first loaded into memory so that it can then load a second Cisco IOS image into memory and launch it. This variable is used only for internal development and testing.</p> <p>HELPER_CONFIG_FILE <i>filesystem:file-url</i>—The name of the configuration file to be used by the Cisco IOS helper image. If this is not set, the file specified by the CONFIG_FILE environment variable is used by all versions of Cisco IOS that are loaded, including the helper image. This variable is used only for internal development and testing.</p>
-----------------------	--

Defaults

The environment variables have these default values:

MANUAL_BOOT: No (0)

BOOT: Null string

ENABLE_BREAK: No (Off or 0) (the automatic boot process cannot be interrupted by pressing the Break key on the console).

HELPER: No default value (helper files are not automatically loaded).

PS1: switch:

CONFIG_FILE: config.text

BAUD: 9600 bps

BOOHLPR: No default value (no helper images are specified).

HELPER_CONFIG_FILE: No default value (no helper configuration file is specified).

SWITCH_NUMBER: 1

SWITCH_PRIORITY: 1

**Note**

Environment variables that have values are stored in the flash file system in various files. The format of these files is that each line contains an environment variable name and an equal sign followed by the value of the variable. A variable has no value if it is not listed in this file; it has a value if it is listed in the file even if the value is a null string. A variable that is set to a null string (for example, “”) is a variable with a value. Many environment variables are predefined and have default values.

Command Modes

Boot loader

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

Environment variables are case sensitive and must be entered as documented.

Environment variables that have values are stored in flash memory outside of the flash file system.

Under normal circumstances, it is not necessary to alter the setting of the environment variables.

The MANUAL_BOOT environment variable can also be set by using the **boot manual** global configuration command.

The BOOT environment variable can also be set by using the **boot system filesystem:/file-url** global configuration command.

The ENABLE_BREAK environment variable can also be set by using the **boot enable-break** global configuration command.

The HELPER environment variable can also be set by using the **boot helper filesystem:/file-url** global configuration command.

The CONFIG_FILE environment variable can also be set by using the **boot config-file flash:/file-url** global configuration command.

The BOOHLPR environment variable can also be set by using the **boot boothlpr** *filesystem:/file-url* global configuration command.

The HELPER_CONFIG_FILE environment variable can also be set by using the **boot helper-config-file** *filesystem:/file-url* global configuration command.

The HELPER_CONFIG_FILE environment variable can also be set by using the **boot helper-config-file** *filesystem:/file-url* global configuration command.

The boot loader prompt string (PS1) can be up to 120 printable characters except the equal sign (=).

Examples

This example shows how to change the boot loader prompt:

```
switch: set PS1 loader:
loader:
```

You can verify your setting by using the **set** boot loader command.

Related Commands

Command	Description
unset	Resets one or more environment variables to its previous setting.

type

Use the **type** boot loader command to display the contents of one or more files.

type *filesystem:**lfile-url* ...

Syntax Description	<i>filesystem:</i>	Alias for a flash file system. Use flash: for the system board flash device.
	<i>lfile-url</i>	Path (directory) and name of the files to display. Separate each filename with a space.

Command Modes	Boot loader
---------------	-------------

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines	<p>Filenames and directory names are case sensitive.</p> <p>If you specify a list of files, the contents of each file appears sequentially.</p>
------------------	---

Examples	This example shows how to display the contents of two files:
----------	--

```
switch: type flash:/new-images/info flash:env_vars
version_suffix: ipservices-122-25.SEB
version_directory: c3560-ipservices-mx.122-25.SEB
image_name: c3560-ipservices-mx.122-25.SEB.bin
ios_image_file_size: 6395392
total_image_file_size: 8059904
image_feature: IP|LAYER_3|PLUS|MIN_DRAM_MEG=128
image_family: C3560
info_end:
BAUD=57600
MANUAL_BOOT=no
```

Related Commands	Command	Description
	cat	Displays the contents of one or more files.
	more	Displays the contents of one or more files.

unset

Use the **unset** boot loader command to reset one or more environment variables.

unset *variable* ...

Syntax Description	<p><i>variable</i></p> <p>Use one of these keywords for <i>variable</i>:</p> <p>MANUAL_BOOT—Decides whether the switch automatically or manually boots.</p> <p>BOOT—Resets the list of executable files to try to load and execute when automatically booting. If the BOOT environment variable is not set, the system attempts to load and execute the first executable image it can find by using a recursive, depth-first search through the flash file system. If the BOOT variable is set but the specified images cannot be loaded, the system attempts to boot the first bootable file that it can find in the flash file system.</p> <p>ENABLE_BREAK—Decides whether the automatic boot process can be interrupted by using the Break key on the console after the flash file system has been initialized.</p> <p>HELPER—A semicolon-separated list of loadable files to dynamically load during the boot loader initialization. Helper files extend or patch the functionality of the boot loader.</p> <p>PS1—A string that is used as the command-line prompt in boot loader mode.</p> <p>CONFIG_FILE—Resets the filename that Cisco IOS uses to read and write a nonvolatile copy of the system configuration.</p> <p>BAUD—Resets the rate in bits per second (bps) used for the console. The Cisco IOS software inherits the baud rate setting from the boot loader and continues to use this value unless the configuration file specifies another setting.</p> <p>BOOHLPR—Resets the name of the Cisco IOS helper image that is first loaded into memory so that it can then load a second Cisco IOS image into memory and launch it. This variable is used only for internal development and testing.</p> <p>HELPER_CONFIG_FILE—Resets the name of the configuration file to be used by the Cisco IOS helper image. If this is not set, the file specified by the CONFIG_FILE environment variable is used by all versions of Cisco IOS that are loaded, including the helper image. This variable is used only for internal development and testing.</p>				
Command Modes	Boot loader				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>12.1(19)EA1</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	12.1(19)EA1	This command was introduced.
Release	Modification				
12.1(19)EA1	This command was introduced.				

Usage Guidelines

Under normal circumstances, it is not necessary to alter the setting of the environment variables.

The MANUAL_BOOT environment variable can also be reset by using the **no boot manual** global configuration command.

The BOOT environment variable can also be reset by using the **no boot system** global configuration command.

The ENABLE_BREAK environment variable can also be reset by using the **no boot enable-break** global configuration command.

The HELPER environment variable can also be reset by using the **no boot helper** global configuration command.

The CONFIG_FILE environment variable can also be reset by using the **no boot config-file** global configuration command.

The BOOHLPR environment variable can also be reset by using the **no boot boothlpr** global configuration command.

The HELPER_CONFIG_FILE environment variable can also be reset by using the **no boot helper-config-file** global configuration command.

Examples

This example shows how to reset the prompt string to its previous setting:

```
switch: unset PS1
switch:
```

Related Commands

Command	Description
set	Sets or displays environment variables.

version

Use the **version** boot loader command to display the boot loader version.

version

Syntax Description This command has no arguments or keywords.

Command Modes Boot loader

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Examples This example shows how to display the boot loader version:

```
switch: version
C3560 Boot Loader (C3560-HBOOT-M) Version 12.1(19)EA1

Compiled Wed 12-Nov-03 14:58 by devgoyal

switch:
```




Catalyst 3560 Switch Debug Commands

This appendix describes the **debug** privileged EXEC commands that have been created or changed for use with the Catalyst 3560 switch. These commands are helpful in diagnosing and resolving internetworking problems and should be enabled only under the guidance of Cisco technical support staff.



Caution

Because debugging output is assigned high priority in the CPU process, it can render the system unusable. For this reason, use the **debug** commands only to troubleshoot specific problems or during troubleshooting sessions with Cisco technical support staff. It is best to use the **debug** commands during periods of lower network traffic and fewer users. Debugging during these periods decreases the likelihood that increased **debug** command processing overhead will affect system use.

debug auto qos

Use the **debug auto qos** privileged EXEC command to enable debugging of the automatic quality of service (auto-QoS) feature. Use the **no** form of this command to disable debugging.

debug auto qos

no debug auto qos

Syntax Description This command has no keywords or arguments.

Defaults Auto-QoS debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
	12.2(18)SE	The debug auto qos command replaced the debug autoqos command.

Usage Guidelines To display the QoS configuration that is automatically generated when auto-QoS is enabled, enable debugging *before* you enable auto-QoS. You enable debugging by entering the **debug auto qos** privileged EXEC command.

The **undebug auto qos** command is the same as the **no debug auto qos** command.

Examples This example shows how to display the QoS configuration that is automatically generated when auto-QoS is enabled:

```
Switch# debug auto qos
AutoQoS debugging is on
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# interface gigabitethernet0/1
Switch(config-if)# auto qos voip cisco-phone

21:29:41: mls qos map cos-dscp 0 8 16 26 32 46 48 56
21:29:41: mls qos
21:29:42: no mls qos srr-queue input cos-map
21:29:42: no mls qos srr-queue output cos-map
21:29:42: mls qos srr-queue input cos-map queue 1 threshold 3 0
21:29:42: mls qos srr-queue input cos-map queue 1 threshold 2 1
21:29:42: mls qos srr-queue input cos-map queue 2 threshold 1 2
21:29:42: mls qos srr-queue input cos-map queue 2 threshold 2 4 6 7
21:29:43: mls qos srr-queue input cos-map queue 2 threshold 3 3 5
21:29:43: mls qos srr-queue output cos-map queue 1 threshold 3 5
21:29:43: mls qos srr-queue output cos-map queue 2 threshold 3 3 6 7
21:29:44: mls qos srr-queue output cos-map queue 3 threshold 3 2 4
```

```

21:29:44: mls qos srr-queue output cos-map queue 4 threshold 2 1
21:29:44: mls qos srr-queue output cos-map queue 4 threshold 3 0
21:29:44: no mls qos srr-queue input dscp-map
21:29:44: no mls qos srr-queue output dscp-map
21:29:44: mls qos srr-queue input dscp-map queue 1 threshold 2 9 10 11 12 13 14 15
21:29:45: mls qos srr-queue input dscp-map queue 1 threshold 3 0 1 2 3 4 5 6 7
21:29:45: mls qos srr-queue input dscp-map queue 1 threshold 3 32
21:29:45: mls qos srr-queue input dscp-map queue 2 threshold 1 16 17 18 19 20 21 22 23
21:29:45: mls qos srr-queue input dscp-map queue 2 threshold 2 33 34 35 36 37 38 39 48
21:29:46: mls qos srr-queue input dscp-map queue 2 threshold 2 49 50 51 52 53 54 55 56
21:29:46: mls qos srr-queue input dscp-map queue 2 threshold 2 57 58 59 60 61 62 63
21:29:46: mls qos srr-queue input dscp-map queue 2 threshold 3 24 25 26 27 28 29 30 31
21:29:47: mls qos srr-queue input dscp-map queue 2 threshold 3 40 41 42 43 44 45 46 47
21:29:47: mls qos srr-queue output dscp-map queue 1 threshold 3 40 41 42 43 44 45 46 47
21:29:47: mls qos srr-queue output dscp-map queue 2 threshold 3 24 25 26 27 28 29 30 31
21:29:47: mls qos srr-queue output dscp-map queue 2 threshold 3 48 49 50 51 52 53 54 55
21:29:48: mls qos srr-queue output dscp-map queue 2 threshold 3 56 57 58 59 60 61 62 63
21:29:48: mls qos srr-queue output dscp-map queue 3 threshold 3 16 17 18 19 20 21 22 23
21:29:48: mls qos srr-queue output dscp-map queue 3 threshold 3 32 33 34 35 36 37 38 39
21:29:49: mls qos srr-queue output dscp-map queue 4 threshold 1 8
21:29:49: mls qos srr-queue output dscp-map queue 4 threshold 2 9 10 11 12 13 14 15
21:29:49: mls qos srr-queue output dscp-map queue 4 threshold 3 0 1 2 3 4 5 6 7
21:29:49: no mls qos srr-queue input priority-queue 1
21:29:49: no mls qos srr-queue input priority-queue 2
21:29:50: mls qos srr-queue input bandwidth 90 10
21:29:50: no mls qos srr-queue input buffers
21:29:50: mls qos queue-set output 1 buffers 10 10 26 54
21:29:50: interface GigabitEthernet0/1
21:29:50: mls qos trust device cisco-phone
21:29:50: mls qos trust cos
21:29:50: no queue-set 1
21:29:50: srr-queue bandwidth shape 10 0 0 0
21:29:50: srr-queue bandwidth share 10 10 60 20

```

Related Commands

Command	Description
auto qos voip	Configures auto-QoS for voice over IP (VoIP) within a QoS domain.
show auto qos	Displays the initial configuration that is generated by the automatic auto-QoS feature
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management.

debug backup

Use the **debug backup** privileged EXEC command to enable debugging of the Flex Links backup interface. Use the **no** form of this command to disable debugging.

```
debug backup {all | errors | events}
```

```
no debug backup {all | errors | events}
```

Syntax Description		
	all	Display all backup interface debug messages.
	errors	Display backup interface error or exception debug messages.
	events	Display backup interface event debug messages.

Command Default Backup interface debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines The **undebug backup** command is the same as the **no debug backup** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug cluster

Use the **debug cluster** privileged EXEC command to enable debugging of cluster-specific events. Use the **no** form of this command to disable debugging.

```
debug cluster { discovery | events | extended | hsrp | http | ip [packet] | members | nat | neighbors
| platform | snmp | vqpxy }
```

```
no debug cluster { discovery | events | extended | hsrp | http | ip [packet] | members | nat |
neighbors | platform | snmp | vqpxy }
```

Syntax Description

discovery	Display cluster discovery debug messages.
events	Display cluster event debug messages.
extended	Display extended discovery debug messages.
hsrp	Display the Hot Standby Router Protocol (HSRP) debug messages.
http	Display Hypertext Transfer Protocol (HTTP) debug messages.
ip [packet]	Display IP or transport packet debug messages.
members	Display cluster member debug messages.
nat	Display Network Address Translation (NAT) debug messages.
neighbors	Display cluster neighbor debug messages.
platform	Display platform-specific cluster debug messages.
snmp	Display Simple Network Management Protocol (SNMP) debug messages.
vqpxy	Display VLAN Query Protocol (VQP) proxy debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

This command is available only on the cluster command switch.

The **undebug cluster** command is the same as the **no debug cluster** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .
show cluster	Displays the cluster status and a summary of the cluster to which the switch belongs.
show cluster candidates	Displays a list of candidate switches when entered on the command switch.
show cluster members	Displays information about cluster members when executed on the command switch.

debug dot1x

Use the **debug dot1x** privileged EXEC command to enable debugging of the 802.1x feature. Use the **no** form of this command to disable debugging.

```
debug dot1x {all | errors | events | packets | registry | state-machine}
```

```
no debug dot1x {all | errors | events | packets | registry | state-machine}
```

Syntax Description

all	Display all 802.1x debug messages.
errors	Display 802.1x error debug messages.
events	Display 802.1x event debug messages.
packets	Display 802.1x packet debug messages.
registry	Display 802.1x registry invocation debug messages.
state-machine	Display state-machine related-events debug messages.



Note

Though visible in the command-line help strings, the **redundancy** keyword is not supported.

Command Default

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebug dot1x** command is the same as the **no debug dot1x** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, see the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .
show dot1x	Displays 802.1x statistics, administrative status, and operational status for the switch or for the specified port.

debug dtp

Use the **debug dtp** privileged EXEC command to enable debugging of the Dynamic Trunking Protocol (DTP) activity. Use the **no** form of this command to disable debugging.

```
debug dtp {aggregation | all | decision | events | oserrs | packets | queue | states | timers}
```

```
no debug dtp {aggregation | all | decision | events | oserrs | packets | queue | states | timers}
```

Syntax Description

aggregation	Display DTP user-message aggregation debug messages.
all	Display all DTP debug messages.
decision	Display the DTP decision-table debug messages.
events	Display the DTP event debug messages.
oserrs	Display DTP operating system-related error debug messages.
packets	Display DTP packet-processing debug messages.
queue	Display DTP packet-queueing debug messages.
states	Display DTP state-transition debug messages.
timers	Display DTP timer-event debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebug dtp** command is the same as the **no debug dtp** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .
show dtp	Displays DTP information for the switch or for a specified interface.

debug etherchannel

Use the **debug etherchannel** privileged EXEC command to enable debugging of the EtherChannel/PAGP shim. This shim is the software module that is the interface between the Port Aggregation Protocol (PAgP) software module and the port manager software module. Use the **no** form of this command to disable debugging.

debug etherchannel [**all** | **detail** | **error** | **event** | **idb**]

no debug etherchannel [**all** | **detail** | **error** | **event** | **idb**]

Syntax Description

all	(Optional) Display all EtherChannel debug messages.
detail	(Optional) Display detailed EtherChannel debug messages.
error	(Optional) Display EtherChannel error debug messages.
event	(Optional) Debug major EtherChannel event messages.
idb	(Optional) Display PAgP interface descriptor block debug messages.



Note

Though visible in the command-line help strings, the **linecard** keyword is not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

If you do not specify a keyword, all debug messages appear.

The **undebug etherchannel** command is the same as the **no debug etherchannel** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management.
	show etherchannel	Displays EtherChannel information for the channel.

debug ilpower

Use the **debug ilpower** privileged EXEC command to enable debugging of the power controller and Power over Ethernet (PoE) system. Use the **no** form of this command to disable debugging.

```
debug ilpower { cdp | controller | event | ha | port | powerman | registries }
```

```
no debug ilpower { cdp | controller | event | ha | port | powerman | registries }
```

Syntax Description

cdp	Display PoE Cisco Discovery Protocol (CDP) debug messages.
controller	Display PoE controller debug messages.
event	Display PoE event debug messages.
ha	Display PoE high-availability messages.
port	Display PoE port manager debug messages.
powerman	Display PoE power management debug messages.
registries	Display PoE registries debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SE	The cdp , ha , and powerman keywords were added.

Usage Guidelines

This command is supported only on PoE-capable switches.

When you enable debugging, it is enabled only on the switch.

Related Commands

Command	Description
show controllers power inline	Displays the values in the registers of the specified PoE controller.
show power inline	Displays the power status for the specified PoE port or for all PoE ports.

debug ip dhcp snooping

Use the **debug ip dhcp snooping** privileged EXEC command to enable debugging of DHCP snooping. Use the **no** form of this command to disable debugging.

debug ip dhcp snooping {*mac-address* | **agent** | **event** | **packet**}

no debug ip dhcp snooping {*mac-address* | **agent** | **event** | **packet**}

This command is available only if your switch is running the IP services image, formerly known as the enhanced multilayer image (EMI).

Syntax Description

<i>mac-address</i>	Display debug messages for a DHCP packet with the specified MAC address.
agent	Display debug messages for DHCP snooping agents.
event	Display debug messages for DHCP snooping events.
packet	Display debug messages for DHCP snooping.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(20)SE	This command was introduced.

Usage Guidelines

The **undebg ip dhcp snooping** command is the same as the **no debug ip dhcp snooping** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug ip verify source packet

Use the **debug ip verify source packet** privileged EXEC command to enable debugging of IP source guard. Use the **no** form of this command to disable debugging.

debug ip verify source packet

no debug ip verify source packet

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines The **undebug ip verify source packet** command is the same as the **no debug ip verify source packet** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug interface

Use the **debug interface** privileged EXEC command to enable debugging of interface-related activities. Use the **no** form of this command to disable debugging.

```
debug interface { interface-id | null interface-number | port-channel port-channel-number |
  vlan vlan-id }
```

```
no debug interface { interface-id | null interface-number | port-channel port-channel-number |
  vlan vlan-id }
```

Syntax Description		
<i>interface-id</i>	Display debug messages for the specified physical port, identified by type switch number/module number/ port, for example gigabitethernet 0/2 .	
null <i>interface-number</i>	Display debug messages for null interfaces. The <i>interface-number</i> is always 0 .	
port-channel <i>port-channel-number</i>	Display debug messages for the specified EtherChannel port-channel interface. The <i>port-channel-number</i> range is 1 to 48.	
vlan <i>vlan-id</i>	Display debug messages for the specified VLAN. The <i>vlan-id</i> range is 1 to 4094.	

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines If you do not specify a keyword, all debug messages appear. The **undebg interface** command is the same as the **no debug interface** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .
show etherchannel	Displays EtherChannel information for the channel.

debug ip igmp filter

Use the **debug ip igmp filter** privileged EXEC command to enable debugging of Internet Group Management Protocol (IGMP) filter events. Use the **no** form of this command to disable debugging.

debug ip igmp filter

no debug ip igmp filter

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebg ip igmp filter** command is the same as the **no debug ip igmp filter** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug ip igmp max-groups

Use the **debug ip igmp max-groups** privileged EXEC command to enable debugging of Internet Group Management Protocol (IGMP) maximum groups events. Use the **no** form of this command to disable debugging.

debug ip igmp max-groups

no debug ip igmp max-groups

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebg ip igmp max-groups** command is the same as the **no debug ip igmp max-groups** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug ip igmp snooping

Use the **debug igmp snooping** privileged EXEC command to enable debugging of Internet Group Management Protocol (IGMP) snooping activity. Use the **no** form of this command to disable debugging.

debug ip igmp snooping [**group** | **management** | **querier** | **router** | **timer**]

no debug ip igmp snooping [**group** | **management** | **querier** | **router** | **timer**]

Syntax Description

group	(Optional) Display IGMP snooping group activity debug messages.
management	(Optional) Display IGMP snooping management activity debug messages.
querier	(Optional) Display IGMP snooping querier debug messages.
router	(Optional) Display IGMP snooping router activity debug messages.
timer	(Optional) Display IGMP snooping timer event debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.
12.2(25)SEA	The querier keyword was added.

Usage Guidelines

The **undebug ip igmp snooping** command is the same as the **no debug ip igmp snooping** command.

Related Commands

Command	Description
debug platform ip igmp snooping	Displays information about platform-dependent IGMP snooping activity.
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug lacp

Use the **debug lacp** privileged EXEC command to enable debugging of Link Aggregation Control Protocol (LACP) activity. Use the **no** form of this command to disable debugging.

debug lacp [**all** | **event** | **fsm** | **misc** | **packet**]

no debug lacp [**all** | **event** | **fsm** | **misc** | **packet**]

Syntax Description		
	all	(Optional) Display all LACP debug messages.
	event	(Optional) Display LACP event debug messages.
	fsm	(Optional) Display LACP finite state-machine debug messages.
	misc	(Optional) Display miscellaneous LACP debug messages.
	packet	(Optional) Display LACP packet debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug lacp** command is the same as the **no debug lacp** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .
	show lacp	Displays LACP channel-group information.

debug mac-notification

Use the **debug mac-notification** privileged EXEC command to enable debugging of MAC notification events. Use the **no** form of this command to disable debugging.

debug mac-notification

no debug mac-notification

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug mac-notification** command is the same as the **no debug mac-notification** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .
	show mac address-table notification	Displays the MAC address notification information for all interfaces or the specified interface.

debug matm

Use the **debug matm** privileged EXEC command to enable debugging of platform-independent MAC address management. Use the **no** form of this command to disable debugging.

debug matm

no debug matm

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug matm** command is the same as the **no debug matm** command.

Command	Description
debug platform matm	Displays information about platform-dependent MAC address management.
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug matm move update

Use the **debug matm move update** privileged EXEC command to enable debugging of MAC address-table move update message processing.

debug matm move update

no debug matm move update

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(25)SED	This command was introduced.

Usage Guidelines **undebug matm move update** command is the same as the **no debug matm move update** command.

Related Commands	Command	Description
	mac address-table move update {receive transmit}	Configures MAC address-table move update feature on the switch.
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .
	show mac address-table move update	Displays the MAC address-table move update information on the switch.

debug monitor

Use the **debug monitor** privileged EXEC command to enable debugging of the Switched Port Analyzer (SPAN) feature. Use the **no** form of this command to disable debugging.

debug monitor { **all** | **errors** | **idb-update** | **info** | **list** | **notifications** | **platform** | **requests** | **snmp** }

no debug monitor { **all** | **errors** | **idb-update** | **info** | **list** | **notifications** | **platform** | **requests** | **snmp** }

Syntax Description

all	Display all SPAN debug messages.
errors	Display detailed SPAN error debug messages.
idb-update	Display SPAN interface description block (IDB) update-trace debug messages.
info	Display SPAN informational-tracing debug messages.
list	Display SPAN port and VLAN-list tracing debug messages.
notifications	Display SPAN notification debug messages.
platform	Display SPAN platform-tracing debug messages.
requests	Display SPAN request debug messages.
snmp	Display SPAN and Simple Network Management Protocol (SNMP) tracing debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebug monitor** command is the same as the **no debug monitor** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management.
	show monitor	Displays information about all SPAN and remote SPAN (RSPAN) sessions on the switch.

debug mvrdbg

Use the **debug mvrdbg** privileged EXEC command to enable debugging of Multicast VLAN Registration (MVR). Use the **no** form of this command to disable debugging.

```
debug mvrdbg {all | events | igmpsn | management | ports}
```

```
no debug mvrdbg {all | events | igmpsn | management | ports}
```

Syntax Description

all	Display all MVR activity debug messages.
events	Display MVR event-handling debug messages.
igmpsn	Display MVR Internet Group Management Protocol (IGMP) snooping-activity debug messages.
management	Display MVR management-activity debug messages.
ports	Display MVR port debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebug mvrdbg** command is the same as the **no debug mvrdbg** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .
show mvr	Displays the current MVR configuration.

debug nvram

Use the **debug nvram** privileged EXEC command to enable debugging of NVRAM activity. Use the **no** form of this command to disable debugging.

debug nvram

no debug nvram

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug nvram** command is the same as the **no debug nvram** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug pagp

Use the **debug pagp** privileged EXEC command to enable debugging of Port Aggregation Protocol (PAgP) activity. Use the **no** form of this command to disable debugging.

debug pagp [**all** | **event** | **fsm** | **misc** | **packet**]

no debug pagp [**all** | **event** | **fsm** | **misc** | **packet**]

Syntax Description		
all	(Optional)	Display all PAgP debug messages.
event	(Optional)	Display PAgP event debug messages.
fsm	(Optional)	Display PAgP finite state-machine debug messages.
misc	(Optional)	Display miscellaneous PAgP debug messages.
packet	(Optional)	Display PAgP packet debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug pagp** command is the same as the **no debug pagp** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .
	show pagp	Displays PAgP channel-group information.

debug platform acl

Use the **debug platform acl** privileged EXEC command to enable debugging of the access control list (ACL) manager. Use the **no** form of this command to disable debugging.

```
debug platform acl { all | exit | label | main | racl | vacl | vmap | warn }
```

```
no debug platform acl { all | exit | label | main | racl | vacl | vmap | warn }
```

Syntax Description

all	Display all ACL manager debug messages.
exit	Display ACL exit-related debug messages.
label	Display ACL label-related debug messages.
main	Display the main or important ACL debug messages.
racl	Display router ACL related debug messages.
vacl	Display VLAN ACL-related debug messages.
vmap	Display ACL VLAN-map-related debug messages.
warn	Display ACL warning-related debug messages.



Note

Though visible in the command-line help strings, the **stack** keyword is not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebug platform acl** command is the same as the **no debug platform acl** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform backup interface

Use the **debug platform backup interface** privileged EXEC command to enable debugging of the Flex Links platform backup interface. Use the **no** form of this command to disable debugging.

debug platform backup interface

no debug platform backup interface

Syntax Description This command has no arguments or keywords.

Command Default Platform backup interface debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines The **undebg platform backup interface** command is the same as the **no platform debug backup interface** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform cpu-queues

Use the **debug platform cpu-queues** privileged EXEC command to enable debugging of platform central processing unit (CPU) receive queues. Use the **no** form of this command to disable debugging.

```
debug platform cpu-queues { broadcast-q | cbt-to-spt-q | cpuhub-q | host-q | icmp-q |
  igmp-snooping-q | layer2-protocol-q | logging-q | remote-console-q | routing-protocol-q |
  rpffail-q | software-fwd-q | stp-q }
```

```
no debug platform cpu-queues { broadcast-q | cbt-to-spt-q | cpuhub-q | host-q | icmp-q |
  igmp-snooping-q | layer2-protocol-q | logging-q | remote-console-q | routing-protocol-q |
  rpffail-q | software-fwd-q | stp-q }
```

Syntax Description		
broadcast-q	Display debug messages about packets received by the broadcast queue.	
cbt-to-spt-q	Display debug messages about packets received by the core-based tree to shortest-path tree (cbt-to-spt) queue.	
cpuhub-q	Display debug messages about packets received by the CPU heartbeat queue.	
host-q	Display debug messages about packets received by the host queue.	
icmp-q	Display debug messages about packets received by the Internet Control Message Protocol (ICMP) queue.	
igmp-snooping-q	Display debug messages about packets received by the Internet Group Management Protocol (IGMP)-snooping queue.	
layer2-protocol-q	Display debug messages about packets received by the Layer 2 protocol queue.	
logging-q	Display debug messages about packets received by the logging queue.	
remote-console-q	Display debug messages about packets received by the remote console queue.	
routing-protocol-q	Display debug messages about packets received by the routing protocol queue.	
rpffail-q	Display debug messages about packets received by the reverse path forwarding (RFP) failure queue.	
software-fwd-q	Debug packets received by the software forwarding queue.	
stp-q	Debug packets received by the Spanning Tree Protocol (STP) queue.	

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebg platform cpu-queues** command is the same as the **no debug platform cpu-queues** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management.

debug platform device-manager

Use the **debug platform device-manager** privileged EXEC command to enable debugging of the platform-dependent device manager. Use the **no** form of this command to disable debugging.

```
debug platform device-manager {all | device-info | poll | port-download | trace}
```

```
no debug platform device-manager {all | device-info | poll | port-download | trace}
```

Syntax Description

all	Display all platform device manager debug messages.
device-info	Display platform device manager device structure debug messages.
poll	Display platform device manager 1-second poll debug messages.
port-download	Display platform device manager remote procedure call (RPC) usage debug messages.
trace	Trace platform device manager function entry and exit debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebg platform device-manager** command is the same as the **no debug platform device-manager** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform dot1x

Use the **debug platform dot1x** privileged EXEC command to enable debugging of 802.1x events. Use the **no** form of this command to disable debugging.

```
debug platform dot1x {initialization | interface-configuration | rpc}
```

```
no debug platform dot1x {initialization | interface-configuration | rpc}
```

Syntax Description		
	initialization	Display 802.1x initialization sequence debug messages.
	interface-configuration	Display 802.1x interface configuration-related debug messages.
	rpc	Display 802.1x remote procedure call (RPC) request debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug platform dot1x** command is the same as the **no debug platform dot1x** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform etherchannel

Use the **debug platform etherchannel** privileged EXEC command to enable debugging of platform-dependent EtherChannel events. Use the **no** form of this command to disable debugging.

```
debug platform etherchannel {init | link-up | rpc | warnings}
```

```
no debug platform etherchannel {init | link-up | rpc | warnings}
```

Syntax Description

init	Display EtherChannel module initialization debug messages.
link-up	Display EtherChannel link-up and link-down related debug messages.
rpc	Display EtherChannel remote procedure call (RPC) debug messages.
warnings	Display EtherChannel warning debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebg platform etherchannel** command is the same as the **no debug platform etherchannel** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform fallback-bridging

Use the **debug platform fallback-bridging** privileged EXEC command to enable debugging of the platform-dependent fallback bridging manager. Use the **no** form of this command to disable debugging.

```
debug platform fallback-bridging [error | retry | rpc {events | messages}]
```

```
no debug platform fallback-bridging [error | retry | rpc {events | messages}]
```

Syntax Description

error	(Optional) Display fallback bridging manager error condition messages.
retry	(Optional) Display fallback bridging manager retry messages.
rpc {events messages}	(Optional) Display fallback bridging debugging information. The keywords have these meanings: <ul style="list-style-type: none"> events—Display remote procedure call (RPC) events. messages—Display RPC messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

If you do not specify a keyword, all fallback bridging manager debug messages appear.

The **undebg platform fallback-bridging** command is the same as the **no debug platform fallback-bridging** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform forw-tcam

Use the **debug platform forw-tcam** privileged EXEC command to enable debugging of the forwarding ternary content addressable memory (TCAM) manager. Use the **no** form of this command to disable debugging.

debug platform forw-tcam [**adjustment** | **allocate** | **audit** | **error** | **move** | **read** | **write**]

no debug platform forw-tcam [**adjustment** | **allocate** | **audit** | **error** | **move** | **read** | **write**]

Syntax Description

adjustment	(Optional) Display TCAM manager adjustment debug messages.
allocate	(Optional) Display TCAM manager allocation debug messages.
audit	(Optional) Display TCAM manager audit messages.
error	(Optional) Display TCAM manager error messages.
move	(Optional) Display TCAM manager move messages.
read	(Optional) Display TCAM manager read messages.
write	(Optional) Display TCAM manager write messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

If you do not specify a keyword, all forwarding TCAM manager debug messages appear.

The **undebg platform forw-tcam** command is the same as the **no debug platform forw-tcam** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform frontend-controller

Use the **debug platform frontend-controller** privileged EXEC command to enable debugging of front-end controller activity. Use the **no** form of this command to disable debugging.

```
debug platform frontend-controller {all | image | led | manager | poe | register | thermal}
```

```
no debug platform frontend-controller {all | image | led | manager | poe | register | thermal}
```

Syntax Description

all	Display all the debug messages for front-end controller.
image	Display Image Manager debug messages.
led	Display LED debug messages.
manager	Display front-end-controller manager debug messages.
poe	Display Power over Ethernet (PoE) debug messages.
register	Display Register Access debug messages.
thermal	Display thermal debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(20)SE3	This command was introduced.

Usage Guidelines

This command is only supported on Catalyst 3560G-48TS, 3560G-48PS, 3560G-24TS, and 3560G-24PS switches.

The **undebug platform frontend-controller** command is the same as the **no debug platform frontend-controller** command.

Related Commands	Command	Description
	show platform frontend-controller	Displays counter and status information for the front-end controller manager and subordinate applications, and displays the hardware and software information for the front-end controller.
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management.

debug platform ip arp inspection

Use the **debug platform ip arp inspection** privileged EXEC command to debug dynamic Address Resolution Protocol (ARP) inspection events. Use the **no** form of this command to disable debugging.

```
debug platform ip arp inspection {all | error | event | packet | rpc}
```

```
no debug platform ip arp inspection {all | error | event | packet | rpc}
```

Syntax Description	all	Display all dynamic ARP inspection debug messages.
	error	Display dynamic ARP inspection error debug messages.
	event	Display dynamic ARP inspection event debug messages.
	packet	Display dynamic ARP inspection packet-related debug messages.
	rpc	Display dynamic ARP inspection remote procedure call (RPC) request debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines The **undebug platform ip arp inspection** command is the same as the **no debug platform ip arp inspection** command.

Related Commands	Command	Description
	show inventory	Displays the dynamic ARP inspection configuration and operating state.
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform ip dhcp

Use the **debug platform ip dhcp** privileged EXEC command to debug DHCP events. Use the **no** form of this command to disable debugging.

```
debug platform ip dhcp [all | error | event | packet | rpc]
```

```
no debug platform ip dhcp [all | error | event | packet | rpc]
```

Syntax Description	
all	(Optional) Display all DHCP debug messages.
error	(Optional) Display DHCP error debug messages.
event	(Optional) Display DHCP event debug messages.
packet	(Optional) Display DHCP packet-related debug messages.
rpc	(Optional) Display DHCP remote procedure call (RPC) request debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug platform ip dhcp** command is the same as the **no debug platform ip dhcp** command.

Related Commands	Command	Description
	show ip dhcp snooping	Displays the DHCP snooping configuration.
	show ip dhcp snooping binding	Displays the DHCP snooping binding information.
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform ip igmp snooping

Use the **debug platform ip igmp snooping** privileged EXEC command to enable debugging of platform-dependent Internet Group Management Protocol (IGMP) snooping. Use the **no** form of this command to disable debugging.

```
debug platform ip igmp snooping {all | di | error | event | group | mgmt | pak | retry | rpc | warn}
```

```
debug platform ip igmp snooping pak {ip-address | error | ipopt | leave | query | report | rx | svi | tx}
```

```
debug platform ip igmp snooping rpc [cfg | l3mm | misc | vlan]
```

```
no debug platform ip igmp snooping {all | di | error | event | group | mgmt | pak | retry | rpc | warn}
```

Syntax Description		
all		Display all IGMP snooping debug messages.
di		Display IGMP snooping destination index (di) coordination remote procedure call (RPC) debug messages.
error		Display IGMP snooping error messages.
event		Display IGMP snooping event debug messages.
group		Display IGMP snooping group debug messages.
mgmt		Display IGMP snooping management debug messages.
pak { <i>ip-address</i> error ipopt leave query report rx svi tx }		Display IGMP snooping packet event debug messages. The keywords have these meanings: <ul style="list-style-type: none"> • <i>ip-address</i>—IP address of the IGMP group. • error—Display IGMP snooping packet error debug messages. • ipopt—Display IGMP snooping IP bridging options debug messages. • leave—Display IGMP snooping leave debug messages. • query—Display IGMP snooping query debug messages. • report—Display IGMP snooping report debug messages. • rx—Display IGMP snooping received packet debug messages. • svi—Display IGMP snooping switched virtual interface (SVI) packet debug messages. • tx—Display IGMP snooping sent packet debug messages.
retry		Display IGMP snooping retry debug messages.

rpc [cfg l3mm misc vlan]	<p>Display IGMP snooping remote procedure call (RPC) event debug messages. The keywords have these meanings:</p> <ul style="list-style-type: none"> • cfg—(Optional) Display IGMP snooping RPC debug messages. • l3mm—(Optional) IGMP snooping Layer 3 multicast router group RPC debug messages. • misc—(Optional) IGMP snooping miscellaneous RPC debug messages. • vlan—(Optional) IGMP snooping VLAN assert RPC debug messages.
warn	Display IGMP snooping warning messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebg platform ip igmp snooping** command is the same as the **no debug platform ip igmp snooping** command.

Related Commands

Command	Description
debug ip igmp snooping	Displays information about platform-independent IGMP snooping activity.
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform ip multicast

Use the **debug platform ip multicast** privileged EXEC command to enable debugging of IP multicast routing. Use the **no** form of this command to disable debugging.

```
debug platform ip multicast {all | mdb | mdfs-rp-retry | midb | mroute-rp | resources | retry |
rpf-throttle | snoop-events | software-forward | swidb-events | vlan-locks}
```

```
no debug platform ip multicast {all | mdb | mdfs-rp-retry | midb | mroute-rp | resources | retry |
rpf-throttle | snoop-events | software-forward | swidb-events | vlan-locks}
```

Syntax Description	all	Display all platform IP-multicast event debug messages.
		Note Using this command can degrade the performance of the switch.
	mdb	Display IP-multicast debug messages for multicast distributed fast switching (MDFS) multicast descriptor block (mdb) events.
	mdfs-rp-retry	Display IP-multicast MDFS rendezvous point (RP) retry event debug messages.
	midb	Display IP-multicast MDFS multicast interface descriptor block (MIDB) debug messages.
	mroute-rp	Display IP-multicast RP event debug messages.
	resources	Display IP-multicast hardware resource debug messages.
	retry	Display IP-multicast retry processing event debug messages.
	rpf-throttle	Display IP-multicast reverse path forwarding (RPF) throttle event debug messages.
	snoop-events	Display IP-multicast IGMP snooping event debug messages.
	software-forward	Display IP-multicast software forwarding event debug messages.
	swidb-events	Display IP-multicast MDFS software interface descriptor block (swidb) or global event debug messages.
	vlan-locks	Display IP-multicast VLAN lock and unlock event debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug platform ip multicast** command is the same as the **no debug platform ip multicast** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management.

debug platform ip unicast

Use the **debug platform ip unicast** privileged EXEC command to enable debugging of platform-dependent IP unicast routing. Use the **no** form of this command to disable debugging.

```
debug platform ip unicast {adjacency | all | arp | dhcp | errors | events | interface | mpath |
registries | retry | route | rpc | standby | statistics}
```

```
no debug platform ip unicast {adjacency | all | arp | dhcp | errors | events | interface | mpath |
registries | retry | route | rpc | standby | statistics}
```

Syntax Description

adjacency	Display IP unicast routing adjacency programming event debug messages.
all	Display all platform IP unicast routing debug messages. Note Using this command can degrade the performance of the switch.
arp	Display IP unicast routing Address Resolution Protocol (ARP) and ARP throttling debug messages.
dhcp	Display IP unicast routing DHCP dynamic address-related event debug messages.
errors	Display all IP unicast routing error debug messages, including resource allocation failures.
events	Display all IP unicast routing event debug messages, including registry and miscellaneous events.
interface	Display IP unicast routing interface event debug messages.
mpath	Display IP unicast routing multi-path adjacency programming event debug messages (present when performing equal or unequal cost routing).
registries	Display IP unicast routing forwarding information database (FIB), adjacency add, update, and delete registry event debug messages.
retry	Display IP unicast routing reprogram FIBs with ternary content addressable memory (TCAM) allocation failure debug messages.
route	Display IP unicast routing FIB TCAM programming event debug messages.
rpc	Display IP unicast routing Layer 3 unicast remote procedure call (RPC) interaction debug messages.
standby	Display IP unicast routing standby event debug messages, helpful in troubleshooting Hot Standby Routing Protocol (HSRP) issues.
statistics	Display IP unicast routing statistics gathering-related event debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebug platform ip unicast** command is the same as the **no debug platform ip unicast** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform led

Use the **debug platform led** privileged EXEC command to enable debugging of light-emitting diode (LED) actions. Use the **no** form of this command to disable debugging.

```
debug platform led {generic | signal}
```

```
no debug platform led {generic | signal}
```

Syntax Description	generic	Display LED generic action debug messages.
	signal	Display LED signal bit map debug messages.
Defaults	Debugging is disabled.	
Command Modes	Privileged EXEC	
Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
Usage Guidelines	The undebug platform led command is the same as the no debug platform led command.	
Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform matm

Use the **debug platform matm** privileged EXEC command to enable debugging of platform-dependent MAC address management. Use the **no** form of this command to disable debugging.

```
debug platform matm {aging | all | ec-aging | errors | learning | rpc | secure-address | warnings}
```

```
no debug platform matm {aging | all | ec-aging | errors | learning | rpc | secure-address | warnings}
```

Syntax Description

aging	Display MAC address aging debug messages.
all	Display all platform MAC address management event debug messages.
ec-aging	Display EtherChannel address aging-related debug messages.
errors	Display MAC address management error messages.
learning	Display MAC address management address-learning debug messages.
rpc	Display MAC address management remote procedure call (RPC) related debug messages.
secure-address	Display MAC address management secure address learning debug messages.
warning	Display MAC address management warning messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebug platform matm** command is the same as the **no debug platform matm** command.

Related Commands

Command	Description
debug matm	Displays information about platform-independent MAC address management.
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform messaging application

Use the **debug platform messaging application** privileged EXEC command to enable debugging of application messaging activity. Use the **no** form of this command to disable debugging.

```
debug platform messaging application {all | badpak | cleanup | events | memerr | messages |
usererr }
```

```
no debug platform messaging application {all | badpak | cleanup | events | memerr | messages
| usererr }
```

Syntax Description

all	Display all application-messaging debug messages.
badpak	Display bad-packet debug messages.
cleanup	Display clean-up debug messages.
events	Display event debug messages.
memerr	Display memory-error debug messages.
messages	Display application-messaging debug messages.
usererr	Display user-error debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebg platform messaging application** command is the same as the **no debug platform messaging application** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, see the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform phy

Use the **debug platform phy** privileged EXEC command to enable debugging of PHY driver information. Use the **no** form of this command to disable debugging.

```
debug platform phy { automdix | cablediag | dual-purpose | flcd { configure | ipc | iter | trace } |
  flowcontrol | forced | init-seq | link-status | read | sfp | show-controller | speed | write |
  xenpak }
```

```
no debug platform phy { automdix | cablediag | dual-purpose | flcd { configure | ipc | iter | trace } |
  flowcontrol | forced | init-seq | link-status | read | sfp | show-controller | speed | write |
  xenpak }
```

Syntax Description	
automdix	Display PHY automatic medium-dependent interface crossover (auto-MDIX) debug messages.
cablediag	Display PHY cable-diagnostic debug messages.
dual-purpose	Display PHY dual-purpose event debug messages.
flcd { configure ipc iter trace }	Display PHY FLCD debug messages. The keywords have these meanings: <ul style="list-style-type: none"> • configure—Display PHY configure debug messages. • ipc—Display Interprocess Communication Protocol (IPC) debug messages. • iter—Display iter debug messages. • trace—Display trace debug messages.
flowcontrol	Display PHY flowcontrol debug messages.
forced	Display PHY forced-mode debug messages.
init-seq	Display PHY initialization-sequence debug messages.
link-status	Display PHY link-status debug messages.
read	Display PHY-read debug messages.
sfp	Display PHY small form-factor pluggable (SFP) modules debug messages.
show-controller	Display PHY show-controller debug messages.
speed	Display PHY speed-change debug messages.
write	Display PHY-write debug messages.
xenpak	Display PHY XENPAK debug messages

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebg platform phy** command is the same as the **no debug platform phy** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, see the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform pm

Use the **debug platform pm** privileged EXEC command to enable debugging of the platform-dependent port manager software module. Use the **no** form of this command to disable debugging.

```
debug platform pm {all | counters | errdisable | etherchnl | exceptions | hpm-events | idb-events
| if-numbers | ios-events | link-status | platform | pm-events | pm-span | pm-vectors [detail]
| rpc [general | oper-info | state | vectors | vp-events] | soutput-vectors | sync | vlans }
```

```
no debug platform pm {all | counters | errdisable | etherchnl | exceptions | hpm-events |
idb-events | if-numbers | ios-events | link-status | platform | pm-events | pm-span |
pm-vectors [detail] | rpc [general | oper-info | state | vectors | vp-events] | soutput-vectors |
sync | vlans }
```

Syntax Description

all	Display all port-manager debug messages.
counters	Display counters for remote procedure call (RPC) debug messages.
errdisable	Display error-disabled related-events debug messages.
etherchnl	Display EtherChannel related-events debug messages.
exceptions	Display system exception debug messages.
hpm-events	Display platform port-manager event debug messages.
idb-events	Display interface descriptor block (IDB) related-events debug messages.
if-numbers	Display interface-number translation-event debug messages.
ios-events	Display Cisco IOS event debug messages.
link-status	Display interface link-detection event debug messages.
platform	Display port-manager function-event debug messages.
pm-events	Display port manager event debug messages.
pm-span	Display port manager Switched Port Analyzer (SPAN) event debug messages.
pm-vectors [detail]	Display port-manager vector-related-event debug messages. The keyword has this meaning: <ul style="list-style-type: none"> detail—Display vector-function details.
rpc [general oper-info state vectors vp-events]	Display RPC related-event debug messages. The keywords have these meanings: <ul style="list-style-type: none"> general—(Optional) Display RPC general events. oper-info—(Optional) Display operational- and informational-related RPC messages. state—(Optional) Display administrative- and operational-related RPC messages. vectors—(Optional) Display vector-related RPC messages. vp-events—(Optional) Display virtual ports related-events RP messages.
soutput-vectors	Display IDB output vector event debug messages.
sync	Display operational synchronization and VLAN line-state event debug messages.
vlans	Display VLAN creation and deletion event debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebg platform pm** command is the same as the **no debug platform pm** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, see the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform port-asic

Use the **debug platform port-asic** privileged EXEC command to enable debugging of the port application-specific integrated circuit (ASIC) driver. Use the **no** form of this command to disable debugging.

```
debug platform port-asic {interrupt | periodic | read | write}
```

```
no debug platform port-asic {interrupt | periodic | read | write}
```

Syntax Description

interrupt	Display port-ASIC interrupt-related function debug messages.
periodic	Display port-ASIC periodic-function-call debug messages.
read	Display port-ASIC read debug messages.
write	Display port-ASIC write debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebug platform port-asic** command is the same as the **no debug platform port-asic** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, see the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform port-security

Use the **debug platform port-security** privileged EXEC command to enable debugging of platform-dependent port-security information. Use the **no** form of this command to disable debugging.

```
debug platform port-security {add | aging | all | delete | errors | rpc | warnings}
```

```
no debug platform port-security {add | aging | all | delete | errors | rpc | warnings}
```

Syntax Description

add	Display secure address addition debug messages.
aging	Display secure address aging debug messages.
all	Display all port-security debug messages.
delete	Display secure address deletion debug messages.
errors	Display port-security error debug messages.
rpc	Display remote procedure call (RPC) debug messages.
warnings	Display warning debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebug platform port-security** command is the same as the **no debug platform port-security** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, see the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform qos-acl-tcam

Use the **debug platform qos-acl-tcam** privileged EXEC command to enable debugging of the quality of service (QoS) and access control list (ACL) ternary content addressable memory (TCAM) manager software. Use the **no** form of this command to disable debugging.

```
debug platform qos-acl-tcam {all | ctcam | errors | labels | mask | rpc | tcam}
```

```
no debug platform qos-acl-tcam {all | ctcam | errors | labels | mask | rpc | tcam}
```

Syntax Description

all	Display all QoS and ACL TCAM (QATM) manager debug messages.
ctcam	Display Cisco TCAM (CTCAM) related-events debug messages.
errors	Display QATM error-related-events debug messages.
labels	Display QATM label-related-events debug messages.
mask	Display QATM mask-related-events debug messages.
rpc	Display QATM remote procedure call (RPC) related-events debug messages.
tcam	Display QATM TCAM-related events debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebug platform qos-acl-tcam** command is the same as the **no debug platform qos-acl-tcam** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, see the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform remote-commands

Use the **debug platform remote-commands** privileged EXEC command to enable debugging of remote commands. Use the **no** form of this command to disable debugging.

debug platform remote-commands

no debug platform remote-commands

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebg platform remote-commands** command is the same as the **no debug platform remote-commands** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, see the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform resource-manager

Use the **debug platform resource-manager** privileged EXEC command to enable debugging of the resource manager software. Use the **no** form of this command to disable debugging.

```
debug platform resource-manager {all | dm | erd | errors | madmed | sd | stats | vld}
```

```
no debug platform resource-manager {all | dm | erd | errors | madmed | sd | stats | vld}
```

Syntax Description

all	Display all resource manager debug messages.
dm	Display destination-map debug messages.
erd	Display equal-cost-route descriptor-table debug messages.
errors	Display error debug messages.
madmed	Display the MAC address descriptor table and multi-expansion descriptor table debug messages.
sd	Display the station descriptor table debug messages.
stats	Display statistics debug messages.
vld	Display the VLAN-list descriptor debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebg platform resource-manager** command is the same as the **no debug platform resource-manager** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, see the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform snmp

Use the **debug platform snmp** privileged EXEC command to enable debugging of the platform-dependent Simple Network Management Protocol (SNMP) software. Use the **no** form of this command to disable debugging.

debug platform snmp

no debug platform snmp

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebg platform snmp** command is the same as the **no debug platform snmp** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, see the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform span

Use the **debug platform span** privileged EXEC command to enable debugging of the platform-dependent Switched Port Analyzer (SPAN) software. Use the **no** form of this command to disable debugging.

debug platform span

no debug platform span

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebg platform span** command is the same as the **no debug platform span** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, see the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform supervisor-asic

Use the **debug platform supervisor-asic** privileged EXEC command to enable debugging of the supervisor application-specific integrated circuit (ASIC). Use the **no** form of this command to disable debugging.

```
debug platform supervisor-asic {all | errors | receive | send}
```

```
no debug platform supervisor-asic {all | errors | receive | send}
```

Syntax Description

all	Display all supervisor-ASIC event debug messages.
errors	Display the supervisor-ASIC error debug messages.
receive	Display the supervisor-ASIC receive debug messages.
send	Display the supervisor-ASIC send debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebg platform supervisor-asic** command is the same as the **no debug platform supervisor-asic** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, see the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform sw-bridge

Use the **debug platform sw-bridge** privileged EXEC command to enable debugging of the software bridging function. Use the **no** form of this command to disable debugging.

```
debug platform sw-bridge {broadcast | control | multicast | packet | unicast}
```

```
no debug platform sw-bridge {broadcast | control | multicast | packet | unicast}
```

Syntax Description		
	broadcast	Display broadcast-data debug messages.
	control	Display protocol-packet debug messages.
	multicast	Display multicast-data debug messages.
	packet	Display sent and received data debug messages.
	unicast	Display unicast-data debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug platform sw-bridge** command is the same as the **no debug platform sw-bridge** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, see the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform tcam

Use the **debug platform tcam** privileged EXEC command to enable debugging of ternary content addressable memory (TCAM) access and lookups. Use the **no** form of this command to disable debugging.

```
debug platform tcam {log | read | search | write}
```

```
debug platform tcam log l2 {acl {input | output} | local | qos}
```

```
debug platform tcam log l3 {acl {input | output} | ipv6 {acl {input | output} | local | qos |  
secondary} | local | qos | secondary}
```

```
debug platform tcam read {reg | ssram | tcam}
```

```
debug platform tcam search
```

```
debug platform tcam write {forw-ram | reg | tcam}
```

```
no debug platform tcam {log | read | search | write}
```

```
no debug platform tcam log l2 {acl {input | output} | local | qos}
```

```
no debug platform tcam log l3 {acl {input | output} | ipv6 {acl {input | output} | local | qos |  
secondary} | local | qos | secondary}
```

```
no debug platform tcam read {reg | ssram | tcam}
```

```
no debug platform tcam search
```

```
no debug platform tcam write {forw-ram | reg | tcam}
```

Syntax Description	<p>log l2 { acl { input output } local qos }</p> <p>Display Layer 2 field-based CAM look-up type debug messages. The keywords have these meanings:</p> <ul style="list-style-type: none"> • acl { input output }—Display input or output ACL look-up debug messages. • local—Display local forwarding look-up debug messages. • qos—Display classification and quality of service (QoS) look-up debug messages. 				
	<p>l3 { acl { input output } ipv6 { acl { input output } local qos secondary } local qos secondary }</p> <p>Display Layer 3 field-based CAM look-up type debug messages. The keywords have these meanings:</p> <ul style="list-style-type: none"> • acl { input output }—Display input or output ACL look-up debug messages. • ipv6 { acl { input output } local qos secondary }—Display IPv6-based look-up debug messages. Options include displaying input or output ACL look-up, local forwarding look-up, classification and QoS look-up, or secondary forwarding look-up debug messages. • local—Display local forwarding look-up debug messages. • qos—Display classification and quality of service (QoS) look-up debug messages. • secondary—Display secondary forwarding look-up debug messages. 				
	<p>read { reg ssram tcam }</p> <p>Display TCAM-read debug messages. The keywords have these meanings:</p> <ul style="list-style-type: none"> • reg—Display TCAM-register read debug messages. • ssram—Display synchronous static RAM (SSRAM)-read debug messages. • tcam—Display TCAM-read debug messages. 				
	<p>search</p> <p>Display supervisor-initiated TCAM-search results debug messages.</p>				
	<p>write { forw-ram reg tcam }</p> <p>Display TCAM-write debug messages. The keywords have these meanings:</p> <p>forw-ram—Display forwarding-RAM write debug messages.</p> <p>reg—Display TCAM-register write debug messages.</p> <p>tcam—Display TCAM-write debug messages.</p>				
Defaults	Debugging is disabled.				
Command Modes	Privileged EXEC				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>12.1(19)EA1</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	12.1(19)EA1	This command was introduced.
Release	Modification				
12.1(19)EA1	This command was introduced.				

Usage Guidelines

The **undebug platform tcam** command is the same as the **no debug platform tcam** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, see the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform udd

Use the **debug platform udd** privileged EXEC command to enable debugging of the platform-dependent UniDirectional Link Detection (UDLD) software. Use the **no** form of this command to disable debugging.

```
debug platform udd [all | error | rpc {events | messages}]
```

```
no debug platform udd [all | error | rpc {events | messages}]
```

Syntax Description

all	(Optional) Display all UDLD debug messages.
error	(Optional) Display error condition debug messages.
rpc {events messages}	(Optional) Display UDLD remote procedure call (RPC) debug messages. The keywords have these meanings: <ul style="list-style-type: none"> events—Display UDLD RPC events. messages—Display UDLD RPC messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebug platform udd** command is the same as the **no debug platform udd** command.

Related Commands

Command	Description
show debugging	Displays information about the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug platform vlan

Use the **debug platform vlan** privileged EXEC command to enable debugging of the VLAN manager software. Use the **no** form of this command to disable debugging.

```
debug platform vlan { errors | mvid | rpc }
```

```
no debug platform vlan { errors | mvid | rpc }
```

Syntax Description

errors	Display VLAN error debug messages.
mvid	Display mapped VLAN ID allocations and free debug messages.
rpc	Display remote procedure call (RPC) debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebug platform vlan** command is the same as the **no debug platform vlan** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, see the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug pm

Use the **debug pm** privileged EXEC command to enable debugging of port manager (PM) activity. The port manager is a state machine that controls all the logical and physical interfaces. All features, such as VLANs, UniDirectional Link Detection (UDLD), and so forth, work with the port manager to provide switch functions. Use the **no** form of this command to disable debugging.

```
debug pm {all | assert | card | etherchnl | hatable | messages | port | redundancy | registry | sm
          | span | split | vlan | vp}
```

```
no debug pm {all | assert | card | etherchnl | hatable | messages | port | redundancy | registry |
            sm | span | split | vlan | vp}
```

Syntax Description

all	Display all PM debug messages.
assert	Display assert debug messages.
card	Display line-card related-events debug messages.
etherchnl	Display EtherChannel related-events debug messages.
hatable	Display Host Access Table events debug messages.
messages	Display PM debug messages.
port	Display port related-events debug messages.
redundancy	Display redundancy debug messages.
registry	Display PM registry invocation debug messages.
sm	Display state-machine related-events debug messages.
span	Display spanning-tree related-events debug messages.
split	Display split-processor debug messages.
vlan	Display VLAN related-events debug messages.
vp	Display virtual port related-events debug messages.



Note

Though visible in the command-line help strings, the **scp** and **pvlan** keywords are not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebg pm** command is the same as the **no debug pm** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug port-security

Use the **debug port-security** privileged EXEC command to enable debugging of the allocation and states of the port security subsystem. Use the **no** form of this command to disable debugging.

debug port-security

no debug port-security

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug port-security** command is the same as the **no debug port-security** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .
	show port-security	Displays port-security settings for an interface or for the switch.

debug qos-manager

Use the **debug qos-manager** privileged EXEC command to enable debugging of the quality of service (QoS) manager software. Use the **no** form of this command to disable debugging.

```
debug qos-manager {all | event | verbose}
```

```
no debug qos-manager {all | event | verbose}
```

Syntax Description

all	Display all QoS-manager debug messages.
event	Display QoS-manager related-event debug messages.
verbose	Display QoS-manager detailed debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebug qos-manager** command is the same as the **no debug qos-manager** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, see the Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .

debug spanning-tree

Use the **debug spanning-tree** privileged EXEC command to enable debugging of spanning-tree activities. Use the **no** form of this command to disable debugging.

```
debug spanning-tree {all | backbonefast | bpdu | bpdu-opt | config | etherchannel | events |
exceptions | general | mstp | pvst+ | root | snmp | switch | synchronization | uplinkfast}
```

```
no debug spanning-tree {all | backbonefast | bpdu | bpdu-opt | config | etherchannel | events |
exceptions | general | mstp | pvst+ | root | snmp | switch | synchronization | uplinkfast}
```

Syntax Description

all	Display all spanning-tree debug messages.
backbonefast	Display BackboneFast-event debug messages.
bpdu	Display spanning-tree bridge protocol data unit (BPDU) debug messages.
bpdu-opt	Display optimized BPDU handling debug messages.
config	Display spanning-tree configuration change debug messages.
etherchannel	Display EtherChannel-support debug messages.
events	Display spanning-tree topology event debug messages.
exceptions	Display spanning-tree exception debug messages.
general	Display general spanning-tree activity debug messages.
mstp	Debug Multiple Spanning Tree Protocol events.
pvst+	Display per-VLAN spanning-tree plus (PVST+) event debug messages.
root	Display spanning-tree root-event debug messages.
snmp	Display spanning-tree Simple Network Management Protocol (SNMP) handling debug messages.
synchronization	Display the spanning-tree synchronization event debug messages.
switch	Display switch shim command debug messages. This shim is the software module that is the interface between the generic Spanning Tree Protocol (STP) code and the platform-specific code of various switch platforms.
uplinkfast	Display UplinkFast-event debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebug spanning-tree** command is the same as the **no debug spanning-tree** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management.
	show spanning-tree	Displays spanning-tree state information.

debug spanning-tree backbonefast

Use the **debug spanning-tree backbonefast** privileged EXEC command to enable debugging of spanning-tree BackboneFast events. Use the **no** form of this command to disable debugging.

debug spanning-tree backbonefast [**detail** | **exceptions**]

no debug spanning-tree backbonefast [**detail** | **exceptions**]

Syntax Description	detail	(Optional) Display detailed BackboneFast debug messages.
	exceptions	(Optional) Display spanning-tree BackboneFast-exception debug messages.
Defaults	Debugging is disabled.	
Command Modes	Privileged EXEC	
Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
Usage Guidelines	The undebg spanning-tree backbonefast command is the same as the no debug spanning-tree backbonefast command.	
Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .
	show spanning-tree	Displays spanning-tree state information.

debug spanning-tree bpdu

Use the **debug spanning-tree bpdu** privileged EXEC command to enable debugging of sent and received spanning-tree bridge protocol data units (BPDUs). Use the **no** form of this command to disable debugging.

debug spanning-tree bpdu [receive | transmit]

no debug spanning-tree bpdu [receive | transmit]

Syntax Description

receive	(Optional) Display the nonoptimized path for received BPDU debug messages.
transmit	(Optional) Display the nonoptimized path for sent BPDU debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebg spanning-tree bpdu** command is the same as the **no debug spanning-tree bpdu** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .
show spanning-tree	Displays spanning-tree state information.

debug spanning-tree bpdu-opt

Use the **debug spanning-tree bpdu-opt** privileged EXEC command to enable debugging of optimized spanning-tree bridge protocol data units (BPDUs) handling. Use the **no** form of this command to disable debugging.

debug spanning-tree bpdu-opt [**detail** | **packet**]

no debug spanning-tree bpdu-opt [**detail** | **packet**]

Syntax Description	detail	(Optional) Display detailed optimized BPDU-handling debug messages.
	packet	(Optional) Display packet-level optimized BPDU-handling debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug spanning-tree bpdu-opt** command is the same as the **no debug spanning-tree bpdu-opt** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .
	show spanning-tree	Displays spanning-tree state information.

debug spanning-tree mstp

Use the **debug spanning-tree mstp** privileged EXEC command to enable debugging of the Multiple Spanning Tree Protocol (MSTP) software. Use the **no** form of this command to disable debugging.

```
debug spanning-tree mstp { all | boundary | bpdu-rx | bpdu-tx | errors | flush | init | migration |
  pm | proposals | region | roles | sanity_check | sync | tc | timers }
```

```
no debug spanning-tree mstp { all | boundary | bpdu-rx | bpdu-tx | errors | flush | init | migration
  | pm | proposals | region | roles | sanity_check | sync | tc | timers }
```

Syntax Description

all	Enable all the debugging messages.
boundary	Debug flag changes at these boundaries: <ul style="list-style-type: none"> An multiple spanning-tree (MST) region and a single spanning-tree region running Rapid Spanning Tree Protocol (RSTP) An MST region and a single spanning-tree region running 802.1D An MST region and another MST region with a different configuration
bpdu-rx	Debug the received MST bridge protocol data units (BPDUs).
bpdu-tx	Debug the sent MST BPDUs.
errors	Debug MSTP errors.
flush	Debug the port flushing mechanism.
init	Debug the initialization of the MSTP data structures.
migration	Debug the protocol migration state machine.
pm	Debug MSTP port manager events.
proposals	Debug handshake messages between the designated switch and the root switch.
region	Debug the region synchronization between the switch processor (SP) and the route processor (RP).
roles	Debug MSTP roles.
sanity_check	Debug the received BPDU sanity check messages.
sync	Debug the port synchronization events.
tc	Debug topology change notification events.
timers	Debug the MSTP timers for start, stop, and expire events.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebug spanning-tree mstp** command is the same as the **no debug spanning-tree mstp** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .
show spanning-tree	Displays spanning-tree state information.

debug spanning-tree switch

Use the **debug spanning-tree switch** privileged EXEC command to enable debugging of the software interface between the Spanning Tree Protocol (STP) software module and the port manager software module. Use the **no** form of this command to disable debugging.

```
debug spanning-tree switch {all | errors | flush | general | helper | pm | rx {decode | errors |
interrupt | process} | state | tx [decode] | uplinkfast }
```

```
no debug spanning-tree switch {all | errors | flush | general | helper | pm | rx {decode | errors |
interrupt | process} | state | tx [decode] | uplinkfast }
```

Syntax Description

all	Display all spanning-tree switch debug messages.
errors	Display debug messages for the interface between the spanning-tree software module and the port manager software module.
flush	Display debug messages for the shim flush operation.
general	Display general event debug messages.
helper	Display spanning-tree helper-task debug messages. Helper tasks handle bulk spanning-tree updates.
pm	Display port-manager event debug messages.
rx	Display received bridge protocol data unit (BPDU) handling debug messages. The keywords have these meanings: <ul style="list-style-type: none"> decode—Display decoded received packets. errors—Display receive error debug messages. interrupt—Display interrupt service request (ISR) debug messages. process—Display process receive BPDU debug messages.
state	Display spanning-tree port state change debug messages;
tx [decode]	Display sent BPDU handling debug messages. The keyword has this meaning: <ul style="list-style-type: none"> decode—(Optional) Display decoded sent packets.
uplinkfast	Display uplinkfast packet transmission debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

The **undebug spanning-tree switch** command is the same as the **no debug spanning-tree switch** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management.
show spanning-tree	Displays spanning-tree state information.

debug spanning-tree uplinkfast

Use the **debug spanning-tree uplinkfast** privileged EXEC command to enable debugging of spanning-tree UplinkFast events. Use the **no** form of this command to disable debugging.

debug spanning-tree uplinkfast [exceptions]

no debug spanning-tree uplinkfast [exceptions]

Syntax Description	exceptions (Optional) Display spanning-tree UplinkFast-exception debug messages.						
Defaults	Debugging is disabled.						
Command Modes	Privileged EXEC						
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>12.1(19)EA1</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	12.1(19)EA1	This command was introduced.		
Release	Modification						
12.1(19)EA1	This command was introduced.						
Usage Guidelines	The undebug spanning-tree uplinkfast command is the same as the no debug spanning-tree uplinkfast command.						
Related Commands	<table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>show debugging</td> <td>Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management.</td> </tr> <tr> <td>show spanning-tree</td> <td>Displays spanning-tree state information.</td> </tr> </tbody> </table>	Command	Description	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .	show spanning-tree	Displays spanning-tree state information.
Command	Description						
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .						
show spanning-tree	Displays spanning-tree state information.						

debug sw-vlan

Use the **debug sw-vlan** privileged EXEC command to enable debugging of VLAN manager activities. Use the **no** form of this command to disable debugging.

```
debug sw-vlan {badpmcookies | cfg-vlan {bootup | cli} | events | ifs | management | mapping |
notification | packets | redundancy | registries | vtp}
```

```
no debug sw-vlan {badpmcookies | cfg-vlan {bootup | cli} | events | ifs | management | mapping
| notification | packets | redundancy | registries | vtp}
```

Syntax Description		
badpmcookies	Display debug messages for VLAN manager incidents of bad port manager cookies.	
cfg-vlan {bootup cli}	Display config-vlan debug messages. The keywords have these meanings: <ul style="list-style-type: none"> bootup—Display messages when the switch is booting up. cli—Display messages when the command-line interface (CLI) is in config-vlan mode. 	
events	Display debug messages for VLAN manager events.	
ifs	See the debug sw-vlan ifs command.	
management	Display debug messages for VLAN manager management of internal VLANs.	
mapping	Display debug messages for VLAN mapping.	
notification	See the debug sw-vlan notification command.	
packets	Display debug messages for packet handling and encapsulation processes.	
redundancy	Display debug messages for VTP VLAN redundancy.	
registries	Display debug messages for VLAN manager registries.	
vtp	See the debug sw-vlan vtp command.	

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug sw-vlan** command is the same as the **no debug sw-vlan** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management.
	show vlan	Displays the parameters for all configured VLANs or one VLAN (if the VLAN name or ID is specified) in the administrative domain.
	show vtp	Displays general information about VTP management domain, status, and counters.

debug sw-vlan ifs

Use the **debug sw-vlan ifs** privileged EXEC command to enable debugging of the VLAN manager IOS file system (IFS) error tests. Use the **no** form of this command to disable debugging.

```
debug sw-vlan ifs {open {read | write} | read {1 | 2 | 3 | 4} | write}
```

```
no debug sw-vlan ifs {open {read | write} | read {1 | 2 | 3 | 4} | write}
```

Syntax Description	
open {read write}	Display VLAN manager IFS file-open operation debug messages. The keywords have these meanings: <ul style="list-style-type: none"> read—Display VLAN manager IFS file-read operation debug messages. write—Display VLAN manager IFS file-write operation debug messages.
read {1 2 3 4}	Display file-read operation debug messages for the specified error test (1, 2, 3, or 4).
write	Display file-write operation debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug sw-vlan ifs** command is the same as the **no debug sw-vlan ifs** command.

When selecting the file read operation, Operation **1** reads the file header, which contains the header verification word and the file version number. Operation **2** reads the main body of the file, which contains most of the domain and VLAN information. Operation **3** reads type length version (TLV) descriptor structures. Operation **4** reads TLV data.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management.
	show vlan	Displays the parameters for all configured VLANs or one VLAN (if the VLAN name or ID is specified) in the administrative domain.

debug sw-vlan notification

Use the **debug sw-vlan notification** privileged EXEC command to enable debugging of the activation and deactivation of Inter-Link Switch (ISL) VLAN IDs. Use the **no** form of this command to disable debugging.

```
debug sw-vlan notification { accfwdchange | allowedvlanfgchange | fwdchange | linkchange |
modechange | pruningcfgchange | statechange }
```

```
no debug sw-vlan notification { accfwdchange | allowedvlanfgchange | fwdchange |
linkchange | modechange | pruningcfgchange | statechange }
```

Syntax Description		
accfwdchange	Display debug messages for VLAN manager notification of aggregated access interface spanning-tree forward changes.	
allowedvlanfgchange	Display debug messages for VLAN manager notification of changes to the allowed VLAN configuration.	
fwdchange	Display debug messages for VLAN manager notification of spanning-tree forwarding changes.	
linkchange	Display debug messages for VLAN manager notification of interface link-state changes.	
modechange	Display debug messages for VLAN manager notification of interface mode changes.	
pruningcfgchange	Display debug messages for VLAN manager notification of changes to the pruning configuration.	
statechange	Display debug messages for VLAN manager notification of interface state changes.	

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug sw-vlan notification** command is the same as the **no debug sw-vlan notification** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .
show vlan	Displays the parameters for all configured VLANs or one VLAN (if the VLAN name or ID is specified) in the administrative domain.

debug sw-vlan vtp

Use the **debug sw-vlan vtp** privileged EXEC command to enable debugging of the VLAN Trunking Protocol (VTP) code. Use the **no** form of this command to disable debugging.

```
debug sw-vlan vtp { events | packets | pruning [packets | xmit] | redundancy | xmit }
```

```
no debug sw-vlan vtp { events | packets | pruning | redundancy | xmit }
```

Syntax Description		
events		Display debug messages for general-purpose logic flow and detailed VTP messages generated by the VTP_LOG_RUNTIME macro in the VTP code.
packets		Display debug messages for the contents of all incoming VTP packets that have been passed into the VTP code from the IOS VTP platform-dependent layer, except for pruning packets.
pruning [packets xmit]		Display debug messages generated by the pruning segment of the VTP code. The keywords have these meanings: <ul style="list-style-type: none"> packets—(Optional) Display debug messages for the contents of all incoming VTP pruning packets that have been passed into the VTP code from the IOS VTP platform-dependent layer. xmit—(Optional) Display debug messages for the contents of all outgoing VTP packets that the VTP code requests the IOS VTP platform-dependent layer to send.
redundancy		Display debug messages for VTP redundancy.
xmit		Display debug messages for the contents of all outgoing VTP packets that the VTP code requests the IOS VTP platform-dependent layer to send, except for pruning packets.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug sw-vlan vtp** command is the same as the **no debug sw-vlan vtp** command.

If no further parameters are entered after the **pruning keyword**, VTP pruning debugging messages appear. They are generated by the VTP_PRUNING_LOG_NOTICE, VTP_PRUNING_LOG_INFO, VTP_PRUNING_LOG_DEBUG, VTP_PRUNING_LOG_ALERT, and VTP_PRUNING_LOG_WARNING macros in the VTP pruning code.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management.
	show vtp	Displays general information about VTP management domain, status, and counters.

debug uddl

Use the **debug uddl** privileged EXEC command to enable debugging of the UniDirectional Link Detection (UDLD) feature. Use the **no** form of this command to disable UDLD debugging.

```
debug uddl { events | packets | registries }
```

```
no debug uddl { events | packets | registries }
```

Syntax Description	events	Display debug messages for UDLD process events as they occur.
	packets	Display debug messages for the UDLD process as it receives packets from the packet queue and tries to send them at the request of the UDLD protocol code.
	registries	Display debug messages for the UDLD process as it processes registry calls from the UDLD process-dependent module and other feature modules.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug uddl** command is the same as the **no debug uddl** command.

For **debug uddl events**, these debugging messages appear:

- General UDLD program logic flow
- State machine state changes
- Program actions for the set and clear ErrDisable state
- Neighbor cache additions and deletions
- Processing of configuration commands
- Processing of link-up and link-down indications

For **debug uddl packets**, these debugging messages appear:

- General packet processing program flow on receipt of an incoming packet
- Indications of the contents of the various pieces of packets received (such as type length versions [TLVs]) as they are examined by the packet reception code
- Packet transmission attempts and the outcome

For **debug uddl registries**, these categories of debugging messages appear:

- Sub-block creation
- Fiber-port status changes

- State change indications from the port manager software
- MAC address registry calls

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .
	show uddl	Displays UDLD administrative and operational status for all ports or the specified port.

debug vqpc

Use the **debug vqpc** privileged EXEC command to enable debugging of the VLAN Query Protocol (VQP) client. Use the **no** form of this command to disable debugging.

debug vqpc [**all** | **cli** | **events** | **learn** | **packet**]

no debug vqpc [**all** | **cli** | **events** | **learn** | **packet**]

Syntax Description	all	(Optional) Display all VQP client debug messages.
	cli	(Optional) Display the VQP client command-line interface (CLI) debug messages.
	events	(Optional) Display VQP client event debug messages.
	learn	(Optional) Display VQP client address learning debug messages.
	packet	(Optional) Display VQP client packet information debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines The **undebug vqpc** command is the same as the **no debug vqpc** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled. For syntax information, select Cisco IOS Release 12.2 Configuration Guides and Command References > Cisco IOS Configuration Fundamentals Configuration Guide, Release 12.2 > System Management > Troubleshooting and Fault Management .



Catalyst 3560 Switch Show Platform Commands

This appendix describes the **show platform** privileged EXEC commands that have been created or changed for use with the Catalyst 3560 switch. These commands display information helpful in diagnosing and resolving internetworking problems and should be used only under the guidance of Cisco technical support staff.

show platform acl

Use the **show platform acl** privileged EXEC command to display platform-dependent access control list (ACL) manager information.

```
show platform acl {interface interface-id | label label-number [detail] | statistics asic-number |
usage asic-number [summary] | vlan vlan-id} [ | {begin | exclude | include} expression]
```

Syntax Description	
interface <i>interface-id</i>	Display per-interface ACL manager information for the specified interface. The interface can be a physical interface or a VLAN.
label <i>label-number</i> [detail]	Display per-label ACL manager information. The <i>label-number</i> range is 0 to 255. The keyword has this meaning: <ul style="list-style-type: none"> detail—(Optional) Display detailed ACL manager label information.
statistics <i>asic-number</i>	Display per-ASIC ACL manager information. The <i>asic-number</i> is the port ASIC number, either 0 or 1.
usage <i>asic-number</i> [summary]	Display per-ASIC ACL usage information. The keyword has this meaning: <ul style="list-style-type: none"> summary—(Optional) Display usage information in a brief format.
vlan <i>vlan-id</i>	Display per-VLAN ACL manager information. The <i>vlan-id</i> range is from 1 to 4094.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform backup interface

Use the **show platform backup interface** privileged EXEC command to display platform-dependent backup information used in a Flex Links configuration.

```
show platform backup interface [interface-id | dummyQ] [| {begin | exclude | include}
expression]
```

Syntax Description		
<i>interface-id</i>	(Optional)	Display backup information for all interfaces or the specified interface. The interface can be a physical interface or a port channel.
dummyQ	(Optional)	Display dummy queue information.
 begin	(Optional)	Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional)	Display excludes lines that match the <i>expression</i> .
 include	(Optional)	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(20)SE	This command was introduced.

Usage Guidelines You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform configuration

Use the **show platform configuration** privileged EXEC command to display platform-dependent configuration-manager related information.

```
show platform configuration {config-output | default | running | startup} [ | {begin | exclude | include} expression]
```

Syntax Description		
config-output		Display the output of the last auto-configuration application.
default		Display whether or not the system is running the default configuration.
running		Display a snapshot of the backed-up running configuration on the local switch.
startup		Display a snapshot of the backed-up startup configuration on the local switch.
 begin	(Optional)	Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional)	Display excludes lines that match the <i>expression</i> .
 include	(Optional)	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform etherchannel

Use the **show platform etherchannel** privileged EXEC command to display platform-dependent EtherChannel information.

```
show platform etherchannel {flags | time-stamps} [ | {begin | exclude | include} expression]
```

Syntax Description

flags	Display EtherChannel port flags.
time-stamps	Display EtherChannel time stamps.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform forward

Use the **show platform forward** privileged EXEC command for an interface to specify how the hardware would forward a frame that matches the specified parameters.

```
show platform forward interface-id [vlan vlan-id] src-mac dst-mac [l3protocol-id] [ipv6 | sap | snap] [cos cos] [ip src-ip dst-ip [frag field] [dscp dscp] [l4protocol-id | icmp icmp-type icmp-code | igmp igmp-version igmp-type | sctp src-port dst-port | tcp src-port dst-port flags | udp src-port dst-port]} [ | {begin | exclude | include} expression]
```

Syntax	Description
<i>interface-id</i>	The input physical interface, the port on which the packet comes in to the switch (including type and port number).
vlan <i>vlan-id</i>	(Optional) Input VLAN ID. The range is 1 to 4094. If not specified, and the input interface is not a routed port, the default is 1.
<i>src-mac</i>	48-bit source MAC address.
<i>dst-mac</i>	48-bit destination MAC address.
<i>l3protocol-id</i>	(Optional) The Layer 3 protocol used in the packet. The number is a value 0 to 65535.
ipv6	(Optional) IPv6 frame. This keyword is available only if the switch is running the advanced IP services image.
sap	(Optional) Service access point (SAP) encapsulation type.
snap	(Optional) Subnetwork Access Protocol (SNAP) encapsulation type.
cos <i>cos</i>	(Optional) Class of service (CoS) value of the frame. The range is 0 to 7.
ip <i>src-ip</i> <i>dst-ip</i>	(Optional, but required for IP packets) Source and destination IP addresses in dotted decimal notation.
frag <i>field</i>	(Optional) The IP fragment field for a fragmented IP packet. The range is 0 to 65535.
dscp <i>dscp</i>	(Optional) Differentiated Services Code Point (DSCP) field in the IP header. The range is 0 to 63.
<i>l4protocol-id</i>	The numeric value of the Layer 4 protocol field in the IP header. The range is 0 to 255. For example, 47 is generic routing encapsulation (GRE), and 89 is Open Shortest Path First (OSPF). If the protocol is TCP, User Datagram Protocol (UDP), Internet Control Message Protocol (ICMP), or Internet Group Management Protocol (IGMP), you should use the appropriate keyword instead of a numeric value.
icmp <i>icmp-type</i> <i>icmp-code</i>	ICMP parameters. The <i>icmp-type</i> and <i>icmp-code</i> ranges are 0 to 255.
igmp <i>igmp-version</i> <i>igmp-type</i>	IGMP parameters. The <i>igmp-version</i> range is 1 to 15; the <i>igmp-type</i> range is 0 to 15.
sctp <i>src-port</i> <i>dst-port</i>	Stream Control Transmission Protocol (SCTP) parameters. The ranges for the SCTP source and destination ports are 0 to 65535.
tcp <i>src-port</i> <i>dst-port</i> <i>flags</i>	TCP parameters: TCP source port, destination port, and the numeric value of the TCP flags byte in the header. The <i>src-port</i> and <i>dst-port</i> ranges are 0 to 65535. The flag range is 0 to 1024.
udp <i>src-port</i> <i>dst-port</i>	UDP parameters. The <i>src-port</i> and <i>dst-port</i> ranges are 0 to 65535.
begin	(Optional) Display begins with the line that matches the <i>expression</i> .

 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.
	12.2(25)SEB	The ipv6 keyword was added.

Usage Guidelines You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

Examples For examples of the **show platform forward** command output displays and what they mean, see the “Troubleshooting” chapter of the software configuration guide for this release.

show platform frontend-controller

Use the **show platform frontend-controller** privileged EXEC command to display counter and status information for the front-end controller manager and subordinate applications and to display the hardware and software information for the front-end controller.

```
show platform frontend-controller {buffer | generic | manager number | subordinate number |
version number} [ | {begin | exclude | include} expression]
```

This command is supported only on Catalyst 3560G-48TS, 3560G-48PS, 3560G-24TS, and 3560G-24PS switches.

Syntax Description

buffer	Display the last 1024 bytes sent from the manager to the subordinate and the reverse.
generic	Display the generic counters that do not specifically apply to the manager or subordinate.
manager <i>number</i>	Display the counters for the manager and the subordinate specified by <i>number</i> . See the “Usage Guidelines” section for the <i>number</i> range.
subordinate <i>number</i>	Display the subordinate status and the counters for the subordinate specified by <i>number</i> . See the “Usage Guidelines” section for the <i>number</i> range.
version <i>number</i>	Display the hardware and software version information for the subordinate status specified by <i>number</i> . See the “Usage Guidelines” section for the <i>number</i> range.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(20)SE3	This command was introduced.

Usage Guidelines

On the Catalyst 3560G-48TS and 3560G-48PS switches, the subordinate number range is 0 to 2.

On the Catalyst 3560G-24TS and 3560G-24PS switches, the subordinate number range is 0 to 1.

You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform ip igmp snooping

Use the **show platform ip igmp snooping** privileged EXEC command to display platform-dependent Internet Group Management Protocol (IGMP) snooping information.

```
show platform ip igmp snooping {all | control [di] | counters | flood [vlan vlan-id] | group
  ip-address | hardware | retry [count | local [count] | remote [count]]} [ | {begin | exclude |
  include} expression]
```

Syntax Description		
all		Display all IGMP snooping platform IP multicast information.
control [di]		Display IGMP snooping control entries. The keyword has this meaning: <ul style="list-style-type: none"> di—(Optional) Display IGMP snooping control destination index entries.
counters		Display IGMP snooping counters.
flood [vlan <i>vlan-id</i>]		Display IGMP snooping flood information. The keyword has this meaning: <ul style="list-style-type: none"> vlan <i>vlan-id</i>—(Optional) Display flood information for the specified VLAN. The range is 1 to 4094.
group <i>ip-address</i>		Display the IGMP snooping multicast group information, where <i>ip-address</i> is the IP address of the group.
hardware		Display IGMP snooping information loaded into hardware.
retry [count local [count] remote [count]]		Display IGMP snooping retry information. The keywords have these meanings: <ul style="list-style-type: none"> count—(Optional) Display only the retry count. local—(Optional) Display local retry entries.
remote [count]		Display remote entries. The keyword has this meaning: <ul style="list-style-type: none"> count—(Optional) Display only the remote count.
 begin		(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude		(Optional) Display excludes lines that match the <i>expression</i> .
 include		(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines

You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform ip multicast

Use the **show platform ip multicast** privileged EXEC command to display platform-dependent IP multicast tables and other information.

```
show platform ip multicast {acl-full-info| counters | groups | hardware [detail] | interfaces |
locks | mdfs-routes | mroute-retry | retry | trace} [ | {begin | exclude | include} expression]
```

Syntax	Description
acl-full-info	Display IP multicast routing access-control list (ACL) information, in particular the number of outgoing VLANs for which router ACLs at the output cannot be applied in hardware.
counters	Display IP multicast counters and statistics.
groups	Display IP multicast routes per group.
hardware [detail]	Display IP multicast routes loaded into hardware. The keyword has this meaning: <ul style="list-style-type: none"> detail—(Optional) Display port members in destination index and route index.
interfaces	Display IP multicast interfaces.
locks	Display IP multicast destination-index locks.
mdfs-routes	Display multicast distributed fast switching (MDFS) IP multicast routes.
mroute-retry	Display the IP multicast route retry queue.
retry	Display the IP multicast routes in the retry queue.
trace	Display the IP multicast trace buffer.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform ip unicast

Use the **show platform ip unicast** privileged EXEC command to display platform-dependent IP unicast routing information.

```
show platform ip unicast { adjacency | cef-idb | counts | dhcp | failed { adjacency | arp [A.B.C.D]
| route } | loadbalance | mpaths | proxy | route | standby | statistics | table | trace } [ | { begin
| exclude | include } expression]
```

Syntax Description

adjacency	Display the platform adjacency database.
cef-idb	Display platform information corresponding to Cisco Express Forwarding (CEF) interface descriptor block.
counts	Display the current counts for the Layer 3 unicast databases.
dhcp	Display the DHCP system dynamic addresses.
failed { adjacency arp [A.B.C.D] route }	Display the hardware resource failures. The keywords have these meanings: <ul style="list-style-type: none"> • adjacency—Display the adjacency entries that failed to be programmed in hardware. • arp—Display the Address Resolution Protocol (ARP) deletions because of failure and because of retries. • A.B.C.D—(Optional) Prefix of the ARP entries to display. • route—Display the route entries that failed to be programmed in hardware.
loadbalance	Display the platform loadbalance database.
mpaths	Display the Layer 3 unicast routing multipath adjacency database.
proxy	Display the platform proxy ARP database.
route	Display the platform route database.
standby	Display the platform standby information.
statistics	Display the Layer 3 unicast routing accumulated statistics.
table	Display the platform IP version 4 (IPv4) information.
trace	Display the platform event trace logs.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter `! exclude output`, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform ip unicast vrf compaction

Use the **show platform ip unicast vrf compaction** privileged EXEC command to display the compaction request queues and compaction status.

```
show platform ip unicast vrf compaction [ | {begin | exclude | include} expression]
```

Syntax Description

begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(25)SEC	This command was introduced.

Usage Guidelines

You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

show platform ip unicast vrf tcam-label

Use the **show platform ip unicast vrf tcam-label** privileged EXEC command to display PBR and VRF-Lite labels and the number of labels in use by PBR.

```
show platform ip unicast vrf tcam-label [ | {begin | exclude | include} expression]
```

Syntax Description

 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(25)SEC	This command was introduced.

Usage Guidelines

You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

show platform ipv6 unicast

Use the **show platform ipv6 unicast** privileged EXEC command to display platform-dependent IPv6 unicast routing information. This command is available only if the switch is running the advanced IP services image.

```
show platform ipv6 unicast {adjacency [ipv6-prefix] | backwalk {adjacency | loadbalance} |
compress ipv6-prefix/prefix length | interface | loadbalance | mpath | retry {adjacency |
route} | route [ipv6-prefix/prefix length | tcam] [detail] | statistics | table [detail] | trace}
[| {begin | exclude | include} expression]
```

Syntax	Description
adjacency	Display IPv6 adjacency information for the switch or for the specified IPv6 network.
<i>ipv6-prefix</i>	(Optional) The IPv6 network to be displayed. This argument must be in the form documented in RFC 2373 where the address is specified in hexadecimal using 16-bit values between colons.
backwalk {adjacency loadbalance}	Display IPv6 backwalk information. <ul style="list-style-type: none"> adjacency—Display adjacency backwalk information. loadbalance—Display backwalk load balance information.
compress <i>ipv6-prefix/prefix length</i>	Display IPv6 prefix compression information. <ul style="list-style-type: none"> <i>ipv6-prefix</i>—The IPv6 network. <i>/prefix length</i>—The length of the IPv6 network prefix. A decimal value from 0 to 128 that shows how many of the high-order contiguous bits of the address comprise the prefix (the network portion of the address). A slash mark must precede the decimal value.
interface	Display IPv6 interface information.
loadbalance	Display IPv6 loadbalance information
mpath	Display IPv6 multipath information
retry {adjacency route}	Display IPv6 retry information. <ul style="list-style-type: none"> adjacency—Display IPv6 adjacency retry information. route—Display IPv6 route retry information.
route	Display IPv6 route information.
tcam	(Optional) Display the IPv6 TCAM route table information.
detail	(Optional) Display detailed IPv6 route information.
statistics	Display IPv6 accumulated statistics.
table	Display IPv6 unicast table information.
trace	Display IPv6 unicast traces.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(25)SEA	This command was introduced.

Usage Guidelines You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter `! exclude output`, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform layer4op

Use the **show platform layer4op** privileged EXEC command to display platform-dependent Layer 4 operator information.

```
show platform layer4op {acl | pacl [port-asic] | qos [port-asic]} {and-or | map | or-and | vcu} [
| {begin | exclude | include} expression]
```

Syntax Description		
acl		Display access control list (ACL) Layer 4 operators information.
pacl [<i>port-asic</i>]		Display port ACL Layer 4 operators information. The keyword has this meaning: <ul style="list-style-type: none"> <i>port-asic</i>—(Optional) Port ASIC number.
qos [<i>port-asic</i>]		Display quality of service (QoS) Layer 4 operators information. The keyword has this meaning: <ul style="list-style-type: none"> <i>port-asic</i>—(Optional) QoS port ASIC number.
and-or		Display AND-OR registers information.
map		Display select map information.
or-and		Display OR-AND registers information.
vcu		Display value compare unit (VCU) register information.
 begin		(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude		(Optional) Display excludes lines that match the <i>expression</i> .
 include		(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform mac-address-table

Use the **show platform mac-address-table** privileged EXEC command to display platform-dependent MAC address table information.

```
show platform mac-address-table [aging-array | hash-table | mac-address mac-address] [vlan
vlan-id] [ | {begin | exclude | include} expression]
```

Syntax Description		
aging-array	(Optional) Display the MAC address table aging array.	
hash-table	(Optional) Display the MAC address table hash table.	
mac-address <i>mac-address</i>	(Optional) Display the MAC address table MAC address information, where <i>mac-address</i> is the 48-bit hardware address.	
vlan <i>vlan-id</i>	(Optional) Display information for the specified VLAN. The range is 1 to 4094.	
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .	
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .	
 include	(Optional) Display includes lines that match the specified <i>expression</i> .	
<i>expression</i>	Expression in the output to use as a reference point.	

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform messaging

Use the **show platform messaging** privileged EXEC command to display platform-dependent application and performance message information.

```
show platform messaging {application [incoming | outgoing | summary] | hipperf
                        [class-number]} [| {begin | exclude | include} expression]
```

Syntax Description

application [incoming outgoing summary]	Display application message information. The keywords have these meanings: <ul style="list-style-type: none"> incoming—(Optional) Display only information about incoming application messaging requests. outgoing—(Optional) Display only information about incoming application messaging requests. summary—(Optional) Display summary information about all application messaging requests.
hipperf [class-number]	Display outgoing high-performance message information. Specify the <i>class-number</i> option to display information about high-performance messages for this class number. The range is 0 to 36.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform monitor

Use the **show platform monitor** privileged EXEC command to display platform-dependent Switched Port Analyzer (SPAN) information.

```
show platform monitor [session session-number] [ | {begin | exclude | include} expression]
```

Syntax Description

session	(Optional) Display SPAN information for the specified SPAN session. The range is 1 to 66.
<i>session-number</i>	
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform mvr table

Use the **show platform mvr table** privileged EXEC command to display the platform-dependent Multicast VLAN Registration (MVR) multi-expansion descriptor (MED) group mapping table.

```
show platform mvr table [ | {begin | exclude | include} expression]
```

Syntax Description

begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .
include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You should use this command only when you are working directly with a technical support representative while troubleshooting a problem. Do not use this command unless a technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform pm

Use the **show platform pm** privileged EXEC command to display platform-dependent port-manager information.

```
show platform pm { counters | group-masks | idbs { active-idbs | deleted-idbs } | if-numbers |
link-status | platform-block | port-info interface-id | vlan { info | line-state }
[ | { begin | exclude | include } expression ]
```

Syntax Description	
counters	Display module counters information.
group-masks	Display EtherChannel group masks information.
idbs { active-idbs deleted-idbs }	Display interface data block (IDB) information. The keywords have these meanings: <ul style="list-style-type: none"> active-idbs—Display active IDB information. deleted-idbs—Display deleted and leaked IDB information.
if-numbers	Display interface numbers information.
link-status	Display local port link status information.
platform-block	Display platform port block information.
port-info <i>interface-id</i>	Display port administrative and operation fields for the specified interface.
vlan { info line-state }	Display platform VLAN information. The keywords have these meanings: <ul style="list-style-type: none"> info—Display information for active VLANs. line-state—Display line-state information.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You should use this command only when you are working directly with your technical support representative while troubleshooting a problem. Do not use this command unless your technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform port-asic

Use the **show platform port-asic** privileged EXEC command to display platform-dependent port ASIC register information.

```
show platform port-asic {cpu-queue-map-table [asic number | port number [asic number]] |
  dest-map index number |
  etherchannel-info [asic number | port number [asic number]] |
  exception [asic number | port number [asic number]] |
  global-status [asic number | port number [asic number]] |
  learning [asic number | port number [asic number]] |
  mac-info [asic number | port number [asic number]] |
  mvid [asic number] |
  packet-info-ram [asic number | index number [asic number]] |
  port-info [asic number | port number [asic number]] |
  prog-parser [asic number | port number [asic number]] |
  receive {buffer-queue | port-fifo | supervisor-sram} [asic number | port number [asic
  number]] |
  span [vlan-id [asic number] | [asic number]
  stats {drop | enqueue | miscellaneous | supervisor} [asic number | port number [asic
  number]] |
  transmit {port-fifo | queue | supervisor-sram} [asic number | port number [asic number]]
  vct [asic number | port number [asic number]]
  version}
  [ | {begin | exclude | include} expression]
```

Syntax Description		
cpu-queue-map-table [asic number port number [asic number]]	Display the CPU queue-map table entries. The keywords have these meanings:	<ul style="list-style-type: none"> • asic number—(Optional) Display information for the specified ASIC. The range is 0 to 1. • port number—(Optional) Display information for the specified port and ASIC number. The range is 0 to 27.
dest-map index number	Display destination-map information for the specified index. The range is 0 to 65535.	
etherchannel-info [asic number port number [asic number]]	Display the contents of the EtherChannel information register. The keywords have these meanings:	<ul style="list-style-type: none"> • asic number—(Optional) Display information for the specified ASIC. The range is 0 to 1. • port number—(Optional) Display information for the specified port and ASIC number. The range is 0 to 27, where 0 is the supervisor and 1 to 25 are the ports.

exception [<i>asic number</i> port number [<i>asic number</i>]]	<p>Display the exception-index register information. The keywords have these meanings:</p> <ul style="list-style-type: none"> • asic number—(Optional) Display information for the specified ASIC. The range is 0 to 1. • port number—(Optional) Display information for the specified port and ASIC number. The range is 0 to 27, where 0 is the supervisor and 1 to 25 are the ports.
global-status [<i>asic number</i> port number [<i>asic number</i>]]	<p>Display global and interrupt status. The keywords have these meanings:</p> <ul style="list-style-type: none"> • asic number—(Optional) Display information for the specified ASIC. The range is 0 to 1. • port number—(Optional) Display information for the specified port and ASIC number. The range is 0 to 27, where 0 is the supervisor and 1 to 25 are the ports.
learning [<i>asic number</i> port number [<i>asic number</i>]]	<p>Display entries in the learning cache. The keywords have these meanings:</p> <ul style="list-style-type: none"> • asic number—(Optional) Display information for the specified ASIC. The range is 0 to 1. • port number—(Optional) Display information for the specified port and ASIC number. The range is 0 to 27, where 0 is the supervisor and 1 to 25 are the ports.
mac-info [<i>asic number</i> port number [<i>asic number</i>]]	<p>Display the contents of the MAC information register. The keywords have these meanings:</p> <ul style="list-style-type: none"> • asic number—(Optional) Display information for the specified ASIC. The range is 0 to 1. • port number—(Optional) Display information for the specified port and ASIC number. The range is 0 to 27, where 0 is the supervisor and 1 to 25 are the ports.
mvid [<i>asic number</i>]	<p>Display the mapped VLAN ID table. The keyword has this meaning:</p> <ul style="list-style-type: none"> • asic number—(Optional) Display information for the specified ASIC. The range is 0 to 1.
packet-info-ram [<i>asic number</i> index number [<i>asic number</i>]]	<p>Display the packet information RAM. The keywords have these meanings:</p> <ul style="list-style-type: none"> • asic number—(Optional) Display information for the specified ASIC. The range is 0 to 1. • index number—(Optional) Display information for the specified packet RAM index number and ASIC number. The range is 0 to 63.

port-info [<i>asic number</i> port number [<i>asic number</i>]]	<p>Display port information register values. The keywords have these meanings:</p> <ul style="list-style-type: none"> • asic number—(Optional) Display information for the specified ASIC. The range is 0 to 1. • port number—(Optional) Display information for the specified port and ASIC number. The range is 0 to 27, where 0 is the supervisor and 1 to 25 are the ports.
prog-parser [<i>asic number</i> port number [<i>asic number</i>]]	<p>Display the programmable parser tables. The keywords have these meanings:</p> <ul style="list-style-type: none"> • asic number—(Optional) Display information for the specified ASIC. The range is 0 to 1. • port number—(Optional) Display information for the specified port and ASIC number. The range is 0 to 27, where 0 is the supervisor and 1 to 25 are the ports.
receive { buffer-queue port-fifo supervisor-sram } [<i>asic number</i> port number [<i>asic number</i>]]	<p>Display receive information. The keywords have these meanings:</p> <ul style="list-style-type: none"> • buffer-queue—Display the buffer queue information. • port-fifo—Display the port-FIFO information. • supervisor-sram—Display the supervisor static RAM (SRAM) information. • asic number—(Optional) Display information for the specified ASIC. The range is 0 to 1. • port number—(Optional) Display information for the specified port and ASIC number. The range is 0 to 27, where 0 is the supervisor and 1 to 25 are the ports.
span [<i>vlan-id</i> asic number]	<p>Display the Switched Port Analyzer (SPAN)-related information. The keywords have these meanings:</p> <ul style="list-style-type: none"> • <i>vlan-id</i>—(Optional) Display information for the specified VLAN. The range is 0 to 1023. • asic number—(Optional) Display information for the specified ASIC. The range is 0 to 1.
stats { drop enqueue miscellaneous supervisor } [<i>asic number</i> port number [<i>asic number</i>]]	<p>Display raw statistics for the port ASIC. The keywords have these meanings:</p> <ul style="list-style-type: none"> • drop—Display drop statistics. • enqueue—Display enqueue statistics. • miscellaneous—Display miscellaneous statistics. • supervisor—Display supervisor statistics. • asic number—(Optional) Display information for the specified ASIC. The range is 0 to 1. • port number—(Optional) Display information for the specified port and ASIC number. The range is 0 to 27, where 0 is the supervisor and 1 to 25 are the ports.

transmit { port-fifo queue supervisor-sram } [asic number port number [asic number]]	<p>Display transmit information. The keywords have these meanings:</p> <ul style="list-style-type: none"> • port-fifo—Display the contents of the port-FIFO information register. • queue—Display the contents of the queue information register. • supervisor-sram—Display supervisor SRAM information. • asic number—(Optional) Display information for the specified ASIC. The range is 0 to 1. • port number—(Optional) Display information for the specified port and ASIC number. The range is 0 to 27, where 0 is the supervisor and 1 to 25 are the ports.
vct [asic number port number [asic number]]	<p>Display the VLAN compression table entries for the specified ASIC or for the specified port and ASIC. The keywords have these meanings:</p> <ul style="list-style-type: none"> • asic number—(Optional) Display information for the specified ASIC. The range is 0 to 1. • port number—(Optional) Display information for the specified port and ASIC number. The range is 0 to 27, where 0 is the supervisor and 1 to 25 are the ports.
version	Display version and device type information for port ASICs.
 begin	(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude	(Optional) Display excludes lines that match the <i>expression</i> .
 include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines

You should use this command only when you are working directly with your technical support representative while troubleshooting a problem. Do not use this command unless your technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform port-security

Use the **show platform port-security** privileged EXEC command to display platform-dependent port-security information.

```
show platform port-security [ | {begin | exclude | include} expression]
```

Syntax Description		
begin	(Optional)	Display begins with the line that matches the <i>expression</i> .
exclude	(Optional)	Display excludes lines that match the <i>expression</i> .
include	(Optional)	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes	
	Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You should use this command only when you are working directly with your technical support representative while troubleshooting a problem. Do not use this command unless your technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform qos

Use the **show platform qos** privileged EXEC command to display platform-dependent quality of service (QoS) information.

```
show platform qos {label asic number | policer {parameters asic number |
port alloc number asic number}} [ | {begin | exclude | include} expression]
```

Syntax Description		
label asic number		Display QoS label maps for the specified ASIC. (Optional) For asic number , the range is 0 to 1.
policer {parameters asic number port alloc number asic number}		Display policer information. The keywords have these meanings: <ul style="list-style-type: none"> parameters asic number—Display parameter information for the specified ASIC. The range is 0 to 1. port alloc number asic number—Display port allocation information for the specified port and ASIC. The port allocation range is 0 to 25. The ASIC range is 0 to 1.
 begin		(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude		(Optional) Display excludes lines that match the <i>expression</i> .
 include		(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You should use this command only when you are working directly with your technical support representative while troubleshooting a problem. Do not use this command unless your technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform resource-manager

Use the **show platform resource-manager** privileged EXEC command to display platform-dependent resource-manager information.

```
show platform resource-manager { dm [index number] | erd [index number] |
  mad [index number] | med [index number] | mod | msm { hash-table [vlan vlan-id] |
  mac-address mac-address [vlan vlan-id]} | sd [index number] |
  vld [index number]} [ | {begin | exclude | include} expression]
```

Syntax Description	
dm [index number]	Display the destination map. The keyword has this meaning: <ul style="list-style-type: none"> index number—(Optional) Display the specified index. The range is 0 to 65535.
erd [index number]	Display the equal-cost-route descriptor table for the specified index. The keyword has this meaning: <ul style="list-style-type: none"> index number—(Optional) Display the specified index. The range is 0 to 65535.
mad [index number]	Display the MAC-address descriptor table for the specified index. The keyword has this meaning: <ul style="list-style-type: none"> index number—(Optional) Display the specified index. The range is 0 to 65535.
med [index number]	Display the multi-expansion descriptor table for the specified index. The keyword has this meaning: <ul style="list-style-type: none"> index number—(Optional) Display the specified index. The range is 0 to 65535.
mod	Display the resource-manager module information.
msm { hash-table [vlan vlan-id] mac-address mac-address [vlan vlan-id]}	Display the MAC-address descriptor table and the station descriptor table information. The keywords have these meanings: <ul style="list-style-type: none"> hash-table [vlan vlan-id]—Display the hash table for all VLANs or the specified VLAN. The range is 1 to 4094. mac-address mac-address [vlan vlan-id]—Display the MAC-address descriptor table for the specified MAC address represented by the 48-bit hardware address for all VLANs or the specified VLAN. The range is 1 to 4094.
sd [index number]	Display the station descriptor table for the specified index. The keyword has this meaning: <ul style="list-style-type: none"> index number—(Optional) Display the specified index. The range is 0 to 65535.
vld [index number]	Display the VLAN-list descriptor table for the specified index. The keyword has this meaning: <ul style="list-style-type: none"> index number—(Optional) Display the specified index. The range is 0 to 65535.
begin	(Optional) Display begins with the line that matches the <i>expression</i> .
exclude	(Optional) Display excludes lines that match the <i>expression</i> .

show platform resource-manager

l include	(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>	Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You should use this command only when you are working directly with your technical support representative while troubleshooting a problem. Do not use this command unless your technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter **l exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform snmp counters

Use the **show platform snmp counters** privileged EXEC command to display platform-dependent Simple Network Management Protocol (SNMP) counter information.

```
show platform snmp counters [ | {begin | exclude | include} expression]
```

Syntax Description		
begin	(Optional)	Display begins with the line that matches the <i>expression</i> .
exclude	(Optional)	Display excludes lines that match the <i>expression</i> .
include	(Optional)	Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes	
	Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You should use this command only when you are working directly with your technical support representative while troubleshooting a problem. Do not use this command unless your technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform spanning-tree

Use the **show platform spanning-tree** privileged EXEC command to display platform-dependent spanning-tree information.

```
show platform spanning-tree synchronization [detail | vlan vlan-id] [ | {begin | exclude | include} expression]
```

Syntax Description	Configuration	Description
synchronization		Display spanning-tree state synchronization information. The keywords have these meanings:
[detail vlan <i>vlan-id</i>]		<ul style="list-style-type: none"> detail—(Optional) Display detailed spanning-tree information. vlan <i>vlan-id</i>—(Optional) Display VLAN switch spanning-tree information for the specified VLAN. The range is 1 to 4094.
begin		(Optional) Display begins with the line that matches the <i>expression</i> .
exclude		(Optional) Display excludes lines that match the <i>expression</i> .
include		(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You should use this command only when you are working directly with your technical support representative while troubleshooting a problem. Do not use this command unless your technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform stp-instance

Use the **show platform stp-instance** privileged EXEC command to display platform-dependent spanning-tree instance information.

```
show platform stp-instance vlan-id [ | {begin | exclude | include} expression]
```

Syntax Description	<i>vlan-id</i>	Display spanning-tree instance information for the specified VLAN. The range is 1 to 4094.
	begin	(Optional) Display begins with the line that matches the <i>expression</i> .
	exclude	(Optional) Display excludes lines that match the <i>expression</i> .
	include	(Optional) Display includes lines that match the specified <i>expression</i> .
	<i>expression</i>	Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You should use this command only when you are working directly with your technical support representative while troubleshooting a problem. Do not use this command unless your technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter | **exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform tcam

Use the **show platform tcam** privileged EXEC command to display platform-dependent ternary content addressable memory (TCAM) driver information.

```
show platform tcam {handle number | log-results | table {acl | all | equal-cost-route | ipv6 {acl | qos | secondary} | local | mac-address | multicast-expansion | qos | secondary | station | vlan-list} | usage} [asic number [detail [invalid]] | [index number [detail [invalid]] | invalid | num number [detail [invalid]] | invalid] | [invalid] | [num number [detail [invalid]] | invalid]] [ | {begin | exclude | include} expression]
```

```
show platform tcam table acl [asic number [detail [invalid]] | [index number [detail [invalid]] | invalid | num number [detail [invalid]] | invalid] | [invalid] | [num number [detail [invalid]] | invalid]] [ | {begin | exclude | include} expression]
```

```
show platform tcam table all [asic number [detail [invalid]] | [index number [detail [invalid]] | invalid | num number [detail [invalid]] | invalid] | [invalid] | [num number [detail [invalid]] | invalid]] [ | {begin | exclude | include} expression]
```

```
show platform tcam table equal-cost-route [asic number [detail [invalid]] | [index number [detail [invalid]] | invalid | num number [detail [invalid]] | invalid] | [invalid] | [num number [detail [invalid]] | invalid]] [ | {begin | exclude | include} expression]
```

```
show platform tcam table ipv6 {acl | qos | secondary} [asic number [detail [invalid]] | [index number [detail [invalid]] | invalid | num number [detail [invalid]] | invalid] | [invalid] | [num number [detail [invalid]] | invalid]] [ | {begin | exclude | include} expression]
```

```
show platform tcam table local [asic number [detail [invalid]] | [index number [detail [invalid]] | invalid | num number [detail [invalid]] | invalid] | [invalid] | [num number [detail [invalid]] | invalid]] [ | {begin | exclude | include} expression]
```

```
show platform tcam table mac-address [asic number [detail [invalid]] | [index number [detail [invalid]] | invalid | num number [detail [invalid]] | invalid] | [invalid] | [num number [detail [invalid]] | invalid]] [ | {begin | exclude | include} expression]
```

```
show platform tcam table multicast-expansion [asic number [detail [invalid]] | [index number [detail [invalid]] | invalid | num number [detail [invalid]] | invalid] | [invalid] | [num number [detail [invalid]] | invalid]] [ | {begin | exclude | include} expression]
```

```
show platform tcam table qos [asic number [detail [invalid]] | [index number [detail [invalid]] | invalid | num number [detail [invalid]] | invalid] | [invalid] | [num number [detail [invalid]] | invalid]] [ | {begin | exclude | include} expression]
```

```
show platform tcam table secondary [asic number [detail [invalid]] | [index number [detail [invalid]] | invalid | num number [detail [invalid]] | invalid] | [invalid] | [num number [detail [invalid]] | invalid]] [ | {begin | exclude | include} expression]
```

```
show platform tcam table station [asic number [detail [invalid]] | [index number [detail [invalid]] | invalid | num number [detail [invalid]] | invalid] | [invalid] | [num number [detail [invalid]] | invalid]] [ | {begin | exclude | include} expression]
```

```
show platform tcam table vlan-list [ [asic number [detail [invalid]] | [index number [detail [invalid]] | invalid | num number [detail [invalid]] | invalid] | [invalid] | [num number [detail [invalid]] | invalid]] [ | {begin | exclude | include} expression]
```

Syntax Description	handle <i>number</i>	Display the TCAM handle. The range is 0 to 4294967295.
	log-results	Display the TCAM log results.
	table { acl all equal-cost-route ipv6 { acl qos secondary } local mac-address multicast-expansion qos secondary station vlan-list }	Display lookup and forwarding table information. The keywords have these meanings: <ul style="list-style-type: none"> • acl—Display the access-control list (ACL) table. • all—Display all the TCAM tables. • equal-cost-route—Display the equal-cost-route table. • ipv6—Display IPv6 information. <ul style="list-style-type: none"> – acl—Display the IPv6 ACL-table information. – qos—Display the IPv6 QoS-table information. – secondary—Display the IPv6 secondary-table information. • local—Display the local table. • mac-address—Display the MAC-address table. • multicast-expansion—Display the IPv6 multicast-expansion table. • qos—Display the QoS table. • secondary—Display the secondary table. • station—Display the station table. • vlan-list—Display the VLAN list table.
	usage	Display the CAM and forwarding table usage.
	[[asic <i>number</i> [detail [invalid]]] [index <i>number</i> [detail [invalid]]] invalid num <i>number</i> [detail [invalid]] [invalid]] [invalid]] [invalid]] [num <i>number</i> [detail [invalid]]] [invalid]]	Display information. The keywords have these meanings: <ul style="list-style-type: none"> • asic <i>number</i>—Display information for the specified ASIC device ID. The range is 0 to 15. • detail [invalid]—(Optional) Display valid or invalid details. • index <i>number</i>—(Optional) Display information for the specified TCAM table index. The range is 0 to 32768. • num <i>number</i>—(Optional) Display information for the specified TCAM table number. The range is 0 to 32768.
	begin	(Optional) Display begins with the line that matches the <i>expression</i> .
	exclude	(Optional) Display excludes lines that match the <i>expression</i> .
	include	(Optional) Display includes lines that match the specified <i>expression</i> .
	<i>expression</i>	Expression in the output to use as a reference point.

**Note**

Though visible in the command-line help strings, the **usage** keyword is not supported.

Command Modes

Privileged EXEC

show platform tcam**Command History**

Release	Modification
12.1(19)EA1	This command was introduced.

Usage Guidelines

You should use this command only when you are working directly with your technical support representative while troubleshooting a problem. Do not use this command unless your technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

show platform vlan

Use the **show platform vlan** privileged EXEC command to display platform-dependent VLAN information.

```
show platform vlan { misc | mvid | prune | refcount | rpc { receive | transmit } } [ | { begin | exclude | include } expression]
```

Syntax Description		
misc		Display miscellaneous VLAN module information.
mvid		Display the mapped VLAN ID (MVID) allocation information.
prune		Display the platform-maintained pruning database.
refcount		Display the VLAN lock module-wise reference counts.
rpc { receive transmit }		Display remote procedure call (RPC) messages. The keywords have these meanings: <ul style="list-style-type: none"> receive—Display received information. transmit—Display sent information.
 begin		(Optional) Display begins with the line that matches the <i>expression</i> .
 exclude		(Optional) Display excludes lines that match the <i>expression</i> .
 include		(Optional) Display includes lines that match the specified <i>expression</i> .
<i>expression</i>		Expression in the output to use as a reference point.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced.

Usage Guidelines You should use this command only when you are working directly with your technical support representative while troubleshooting a problem. Do not use this command unless your technical support representative asks you to do so.

Expressions are case sensitive. For example, if you enter **| exclude output**, the lines that contain *output* do not appear, but the lines that contain *Output* appear.

■ show platform vlan



A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
AAA methods [2-3](#)
abort command [2-683](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-122](#)
 MAC, displaying [2-457](#)
access list, IPv6 [2-180](#)
access map configuration mode [2-232](#)
access mode [2-626](#)
access ports [2-626](#)
ACEs [2-79](#), [2-300](#)
ACLs
 deny [2-77](#)
 displaying [2-345](#)
 for non-IP protocols [2-212](#)
 IP [2-122](#)
 matching [2-232](#)
 on Layer 2 interfaces [2-122](#)
 permit [2-298](#)
action command [2-5](#)
address aliasing [2-281](#)
aggregate-port learner [2-286](#)
allowed VLANs [2-646](#)
apply command [2-683](#)
archive download-sw command [2-7](#)
archive tar command [2-10](#)

archive upload-sw command [2-13](#)
arp access-list command [2-15](#)
audience [xix](#)
authentication failed VLAN
 See dot1x auth-fail vlan
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port [2-99](#)
autonegotiation of duplex mode [2-107](#)
auto qos voip command [2-17](#)

B

BackboneFast, for STP [2-561](#)
backup interfaces
 configuring [2-622](#)
 displaying [2-401](#)
boot (boot loader) command [A-2](#)
boot bootlpr command [2-22](#)
boot config-file command [2-23](#)
boot enable-break command [2-24](#)
boot helper command [2-25](#)
boot helper-config file command [2-26](#)
booting
 Cisco IOS image [2-29](#)
 displaying environment variables [2-354](#)
 interrupting [2-24](#)
 manually [2-27](#)

boot loader

- accessing [A-1](#)

booting

- Cisco IOS image [A-2](#)

- helper image [2-25](#)

directories

- creating [A-15](#)

- displaying a list of [A-7](#)

- removing [A-19](#)

displaying

- available commands [A-12](#)

- memory heap utilization [A-14](#)

- version [A-26](#)

environment variables

- described [A-20](#)

- displaying settings [A-20](#)

- location of [A-21](#)

- setting [A-20](#)

- unsetting [A-24](#)

files

- copying [A-5](#)

- deleting [A-6](#)

- displaying a list of [A-7](#)

- displaying the contents of [A-4, A-16, A-23](#)

- renaming [A-17](#)

file system

- formatting [A-10](#)

- initializing flash [A-9](#)

- running a consistency check [A-11](#)

loading helper images [A-13](#)prompt [A-1](#)resetting the system [A-18](#)boot manual command [2-27](#)boot private-config-file command [2-28](#)boot system command [2-29](#)BPDU filtering, for spanning tree [2-562, 2-597](#)BPDU guard, for spanning tree [2-564, 2-597](#)broadcast storm control [2-615](#)**C**

candidate switches

- See clusters

cat (boot loader) command [A-4](#)caution, description **xx**CDP, enabling protocol tunneling for [2-199](#)channel-group command [2-30](#)channel-protocol command [2-33](#)

Cisco Network Assistant

- See Network Assistant **xx**

Cisco SoftPhone

- auto-QoS configuration [2-17](#)

- trusting packets sent from [2-272](#)

class command [2-34](#)class-map command [2-36](#)

class maps

- creating [2-36](#)

- defining the match criteria [2-234](#)

- displaying [2-359](#)

class of service

- See CoS

clear ip arp inspection log command [2-38](#)clear ip arp inspection statistics command [2-39](#)clear ipc command [2-41](#)clear ip dhcp snooping database command [2-40](#)clear l2protocol-tunnel counters command [2-42](#)clear lacp command [2-43](#)clear mac address-table command [2-44, 2-46](#)clear pagp command [2-47](#)clear port-security command [2-48](#)clear spanning-tree counters command [2-50](#)clear spanning-tree detected-protocols command [2-51](#)clear vmps statistics command [2-52](#)clear vtp counters command [2-53](#)cluster commander-address command [2-54](#)cluster discovery hop-count command [2-56](#)cluster enable command [2-57](#)cluster holdtime command [2-59](#)

- cluster member command [2-60](#)
- cluster outside-interface command [2-62](#)
- cluster requirements [xxi](#)
- cluster run command [2-63](#)
- clusters
 - adding candidates [2-60](#)
 - binding to HSRP group [2-64](#)
 - building manually [2-60](#)
 - communicating with
 - devices outside the cluster [2-62](#)
 - members by using Telnet [2-323](#)
 - debug messages, display [B-5](#)
 - displaying
 - candidate switches [2-362](#)
 - debug messages [B-5](#)
 - member switches [2-364](#)
 - status [2-360](#)
 - hop-count limit for extended discovery [2-56](#)
 - HSRP standby groups [2-64](#)
 - redundancy [2-64](#)
 - SNMP trap [2-551](#)
- cluster standby-group command [2-64](#)
- cluster timer command [2-66](#)
- command modes defined [1-1](#)
- commands changed in Cisco IOS Release 12.2(20)SE [1-6](#)
- command switch
 - See clusters
- configuration, initial
 - See getting started guide and hardware installation guide
- configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-23, 2-28](#)
- configuring multiple interfaces [2-118](#)
- config-vlan mode
 - commands [2-669](#)
 - description [1-4](#)
 - entering [2-668](#)
 - summary [1-2](#)

- conventions
 - command [xx](#)
 - for examples [xx](#)
 - publication [xx](#)
 - text [xx](#)
- copy (boot loader) command [A-5](#)
- CoS
 - assigning default value to incoming packets [2-242](#)
 - assigning to Layer 2 protocol packets [2-202](#)
 - overriding the incoming value [2-242](#)
- CoS-to-DSCP map [2-246](#)
- CPU ASIC statistics, displaying [2-366](#)
- crashinfo files [2-113](#)

D

- debug auto qos command [B-2](#)
- debug backup command [B-4](#)
- debug cluster command [B-5](#)
- debug dot1x command [B-7](#)
- debug dtp command [B-9](#)
- debug etherchannel command [B-10](#)
- debug ilpower command [B-12](#)
- debug interface command [B-15](#)
- debug ip dhcp snooping command [B-13](#)
- debug ip igmp filter command [B-17](#)
- debug ip igmp max-groups command [B-18](#)
- debug ip igmp snooping command [B-19](#)
- debug ip verify source packet command [B-14](#)
- debug lacp command [B-20](#)
- debug mac-notification command [B-21](#)
- debug matm command [B-22](#)
- debug matm move update command [B-23](#)
- debug monitor command [B-24](#)
- debug mvrdbg command [B-26](#)
- debug nvram command [B-27](#)
- debug pagp command [B-28](#)
- debug platform acl command [B-29](#)
- debug platform backup interface command [B-30](#)

- debug platform configuration command [B-38](#)
- debug platform cpu-queues command [B-31](#)
- debug platform device-manager command [B-33](#)
- debug platform dot1x command [B-34](#)
- debug platform etherchannel command [B-35](#)
- debug platform fallback-bridging command [B-36](#)
- debug platform forw-tcam command [B-37](#)
- debug platform ip arp inspection command [B-40](#)
- debug platform ip dhcp command [B-41](#)
- debug platform ip igmp snooping command [B-42](#)
- debug platform ip multicast command [B-44](#)
- debug platform ip unicast command [B-46](#)
- debug platform led command [B-48](#)
- debug platform matm command [B-49](#)
- debug platform messaging application command [B-51](#)
- debug platform phy command [B-52](#)
- debug platform pm command [B-54](#)
- debug platform port-asic command [B-56](#)
- debug platform port-security command [B-57](#)
- debug platform qos-acl-tcam command [B-58](#)
- debug platform remote-commands command [B-59](#)
- debug platform resource-manager command [B-60](#)
- debug platform snmp command [B-61](#)
- debug platform span command [B-62](#)
- debug platform supervisor-asic command [B-63](#)
- debug platform sw-bridge command [B-64](#)
- debug platform tcam command [B-65](#)
- debug platform udld command [B-68](#)
- debug platform vlan command [B-69](#)
- debug pm command [B-70](#)
- debug port-security command [B-72](#)
- debug qos-manager command [B-73](#)
- debug spanning-tree backbonefast command [B-76](#)
- debug spanning-tree bpdu command [B-77](#)
- debug spanning-tree bpdu-opt command [B-78](#)
- debug spanning-tree command [B-74](#)
- debug spanning-tree mstp command [B-79](#)
- debug spanning-tree switch command [B-81](#)
- debug spanning-tree uplinkfast command [B-83](#)
- debug sw-vlan command [B-84](#)
- debug sw-vlan ifs command [B-86](#)
- debug sw-vlan notification command [B-88](#)
- debug sw-vlan vtp command [B-90](#)
- debug udld command [B-92](#)
- debug vqpc command [B-94](#)
- define interface-range command [2-67](#)
- delete (boot loader) command [A-6](#)
- delete command [2-69](#)
- deny (ARP access-list configuration) command [2-70](#)
- deny (IPv6) command [2-72](#)
- deny command [2-77](#)
- detect mechanism, causes [2-108](#)
- device manager requirements [xx](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-147](#)
 - enabling
 - on a VLAN [2-153](#)
 - option 82 [2-145, 2-147](#)
 - trust on an interface [2-151](#)
 - error recovery timer [2-110](#)
 - rate limiting [2-149](#)
- DHCP snooping binding database
 - binding file, configuring [2-143](#)
 - bindings
 - adding [2-141](#)
 - deleting [2-141](#)
 - displaying [2-418](#)
 - clearing database agent statistics [2-40](#)
 - database agent, configuring [2-143](#)
 - displaying
 - binding entries [2-418](#)
 - database agent status [2-420](#)
 - renewing [2-327](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-69](#)
- documentation, related [xx](#)
- document conventions [xx](#)
- domain name, VTP [2-694, 2-698](#)

- dot1x auth-fail max-attempts [2-82](#)
 - dot1x auth-fail vlan [2-84](#)
 - dot1x command [2-80](#)
 - dot1x control-direction command [2-86](#)
 - dot1x critical command [2-88](#)
 - dot1x default command [2-90](#)
 - dot1x guest-vlan command [2-91](#)
 - dot1x host-mode command [2-93](#)
 - dot1x initialize command [2-95](#)
 - dot1x max-req command [2-96, 2-97](#)
 - dot1x multiple-hosts command [2-98](#)
 - dot1x port-control command [2-99](#)
 - dot1x re-authenticate command [2-101](#)
 - dot1x re-authentication command [2-102](#)
 - dot1x reauthentication command [2-103](#)
 - dot1x timeout command [2-104](#)
 - dropping packets, with ACL matches [2-5](#)
 - drop threshold, Layer 2 protocol tunneling [2-199](#)
 - DSCP-to-CoS map [2-246](#)
 - DSCP-to-DSCP-mutation map [2-246](#)
 - DTP [2-627](#)
 - DTP flap
 - error detection for [2-108](#)
 - error recovery timer [2-110](#)
 - DTP negotiation [2-631](#)
 - dual IPv4 and IPv6 templates [2-292](#)
 - duplex command [2-106](#)
 - dynamic-access ports
 - configuring [2-620](#)
 - restrictions [2-621](#)
 - dynamic ARP inspection
 - ARP ACLs
 - apply to a VLAN [2-127](#)
 - define [2-15](#)
 - deny packets [2-70](#)
 - display [2-349](#)
 - permit packets [2-290](#)
 - dynamic ARP inspection (continued)
 - clear
 - log buffer [2-38](#)
 - statistics [2-39](#)
 - display
 - ARP ACLs [2-349](#)
 - configuration and operating state [2-414](#)
 - log buffer [2-414](#)
 - statistics [2-414](#)
 - trust state and rate limit [2-414](#)
 - enable per VLAN [2-137](#)
 - error detection for [2-108](#)
 - error recovery timer [2-110](#)
 - log buffer
 - clear [2-38](#)
 - configure [2-131](#)
 - display [2-414](#)
 - rate-limit incoming ARP packets [2-129](#)
 - statistics
 - clear [2-39](#)
 - display [2-414](#)
 - trusted interface state [2-133](#)
 - type of packet logged [2-138](#)
 - validation checks [2-135](#)
 - dynamic auto VLAN membership mode [2-626](#)
 - dynamic desirable VLAN membership mode [2-626](#)
 - Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
 - Dynamic Trunking Protocol
 - See DTP
-
- ## E
- EAP-request/identity frame
 - maximum number to send [2-97](#)
 - response time before retransmitting [2-104](#)
 - encapsulation methods [2-646](#)
 - environment variables, displaying [2-354](#)
 - errdisable detect cause command [2-108](#)

errdisable recovery command [2-110](#)

error conditions, displaying [2-392](#)

error disable detection [2-108](#)

error-disabled interfaces, displaying [2-401](#)

EtherChannel

- assigning Ethernet interface to channel group [2-30](#)
- creating port-channel logical interface [2-116](#)
- debug EtherChannel/PAGP, display [B-10](#)
- debug platform-specific events, display [B-35](#)
- displaying [2-396](#)
- enabling Layer 2 protocol tunneling for
 - LACP [2-200](#)
 - PAGP [2-200](#)
 - UDLD [2-200](#)
- interface information, displaying [2-401](#)
- LACP
 - clearing channel-group information [2-43](#)
 - debug messages, display [B-20](#)
 - displaying [2-453](#)
 - modes [2-30](#)
 - port priority for hot-standby ports [2-203](#)
 - restricting a protocol [2-33](#)
 - system priority [2-205](#)
- load-distribution methods [2-308](#)
- PAGP
 - aggregate-port learner [2-286](#)
 - clearing channel-group information [2-47](#)
 - debug messages, display [B-28](#)
 - displaying [2-502](#)
 - error detection for [2-108](#)
 - error recovery timer [2-110](#)
 - learn method [2-286](#)
 - modes [2-30](#)
 - physical-port learner [2-286](#)
 - priority of interface for transmitted traffic [2-288](#)

Ethernet controller, internal register display [2-368](#)

Ethernet statistics, collecting [2-329](#)

examples, conventions for [xx](#)

exception crashinfo command [2-113](#)

exit command [2-683](#)

extended discovery of candidate switches [2-56](#)

extended-range VLANs

- and allowed VLAN list [2-646](#)
- and pruning-eligible list [2-646](#)
- configuring [2-668](#)

extended system ID for STP [2-570](#)

F

fan information, displaying [2-388](#)

file name, VTP [2-694](#)

files, deleting [2-69](#)

flash_init (boot loader) command [A-9](#)

Flex Links

- configuring [2-622](#)
- displaying [2-401](#)

flowcontrol command [2-114](#)

format (boot loader) command [A-10](#)

forwarding packets, with ACL matches [2-5](#)

forwarding results, display [C-6](#)

frame forwarding information, displaying [C-6](#)

front-end controller

- counter and status information [C-8](#)

fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-3](#)

H

hardware ACL statistics [2-345](#)

help (boot loader) command [A-12](#)

hierarchical policy maps [2-306](#)

hop-count limit for clusters [2-56](#)

host connection, port configuration [2-625](#)

host ports, private VLANs [2-629](#)

Hot Standby Router Protocol

See HSRP

HSRP

binding HSRP group to cluster [2-64](#)

standby group [2-64](#)

IEEE 802.1Q trunk ports and native VLANs [2-685](#)

IEEE 802.1Q tunnel ports

configuring [2-626](#)

displaying [2-381](#)

limitations [2-627](#)

IEEE 802.1x

and switchport modes [2-627](#)

violation error recovery [2-110](#)

See also port-based authentication

IEEE 802.1X Port Based Authentication

enabling guest VLAN supplicant [2-83](#)

IGMP filters

applying [2-154](#)

debug messages, display [B-17](#)

IGMP groups, setting maximum [2-155](#)IGMP maximum groups, debugging [B-18](#)

IGMP profiles

creating [2-157](#)

displaying [2-422](#)

IGMP snooping

adding ports as a static member of a group [2-173](#)

displaying [2-423, 2-428, 2-430](#)

enabling [2-159](#)

enabling the configurable-leave timer [2-161](#)

enabling the Immediate-Leave feature [2-170](#)

flooding query count [2-167](#)

interface topology change notification behavior [2-169](#)

multicast table [1-6, 2-426](#)

querier [2-163](#)

query solicitation [2-167](#)

IGMP snooping (continued)

report suppression [2-165](#)

switch topology change notification behavior [2-167](#)

images

See software images

Immediate-Leave feature, MVR [2-283](#)

Immediate-Leave processing

IPv6 [2-195](#)

immediate-leave processing [2-170](#)

initial configuration

See getting started guide and hardware installation guide

interface configuration mode [1-2, 1-4](#)interface port-channel command [2-116](#)interface range command [2-118](#)interface-range macros [2-67](#)

interfaces

assigning Ethernet interface to channel group [2-30](#)

configuring [2-106](#)

configuring multiple [2-118](#)

creating port-channel logical [2-116](#)

debug messages, display [B-15](#)

disabling [2-549](#)

displaying the MAC address table [2-469](#)

restarting [2-549](#)

interface speed, configuring [2-607](#)interface vlan command [2-120](#)internal registers, displaying [2-368, 2-377](#)

Internet Group Management Protocol

See IGMP

invalid GBIC

error detection for [2-108](#)

error recovery timer [2-110](#)

ip access-group command [2-122](#)ip address command [2-125](#)IP addresses, setting [2-125](#)IP address matching [2-232](#)ip arp inspection filter vlan command [2-127](#)ip arp inspection limit command [2-129](#)ip arp inspection log-buffer command [2-131](#)

ip arp inspection trust command [2-133](#)
 ip arp inspection validate command [2-135](#)
 ip arp inspection vlan command [2-137](#)
 ip arp inspection vlan logging command [2-138](#)
 IP DHCP snooping
 See DHCP snooping
 ip dhcp snooping binding command [2-141](#)
 ip dhcp snooping command [2-140](#)
 ip dhcp snooping database command [2-143](#)
 ip dhcp snooping information option allow-untrusted
 command [2-147](#)
 ip dhcp snooping information option command [2-145](#)
 ip dhcp snooping limit rate command [2-149](#)
 ip dhcp snooping trust command [2-151](#)
 ip dhcp snooping verify command [2-152](#)
 ip dhcp snooping vlan command [2-153](#)
 ip igmp filter command [2-154](#)
 ip igmp max-groups command [2-155](#)
 ip igmp profile command [2-157](#)
 ip igmp snooping command [2-159](#)
 ip igmp snooping last-member-query-interval
 command [2-161](#)
 ip igmp snooping querier command [2-163](#)
 ip igmp snooping report-suppression command [2-165](#)
 ip igmp snooping tcn command [2-167](#)
 ip igmp snooping tcn flood command [2-169](#)
 ip igmp snooping vlan immediate-leave command [2-170](#)
 ip igmp snooping vlan mrouter command [2-171](#)
 ip igmp snooping vlan static command [2-173](#)
 IP multicast addresses [2-280](#)
 IP phones
 auto-QoS configuration [2-17](#)
 trusting packets sent from [2-272](#)
 IP-precedence-to-DSCP map [2-246](#)
 ip source binding command [2-175](#)

IP source guard
 disabling [2-179](#)
 displaying
 binding entries [2-432](#)
 configuration [2-434](#)
 dynamic binding entries only [2-418](#)
 enabling [2-179](#)
 static IP source bindings [2-175](#)
 ip ssh command [2-177](#)
 IPv6 access list
 deny conditions [2-72](#)
 ipv6 access-list command [2-180](#)
 ipv6 mld snooping command [2-183](#)
 ipv6 mld snooping last-listener-query count
 command [2-185](#)
 ipv6 mld snooping last-listener-query-interval
 command [2-187](#)
 ipv6 mld snooping listener-message-suppression
 command [2-189](#)
 ipv6 mld snooping robustness-variable command [2-191](#)
 ipv6 mld snooping tcn command [2-193](#)
 ipv6 mld snooping vlan command [2-195](#)
 IPv6 SDM template [2-330](#)
 ipv6 traffic-filter command [2-197](#)
 ip verify source command [2-179](#)

J

jumbo frames
 See MTU

L

l2protocol-tunnel command [2-199](#)
 l2protocol-tunnel cos command [2-202](#)
 LACP
 See EtherChannel
 lacp port-priority command [2-203](#)
 lacp system-priority command [2-205](#)

Layer 2 mode, enabling [2-618](#)
 Layer 2 protocol ports, displaying [2-450](#)
 Layer 2 protocol-tunnel
 error detection for [2-108](#)
 error recovery timer [2-110](#)
 Layer 2 protocol tunnel counters [2-42](#)
 Layer 2 protocol tunneling error recovery [2-200](#)
 Layer 2 traceroute
 IP addresses [2-659](#)
 MAC addresses [2-656](#)
 Layer 3 mode, enabling [2-618](#)
 line configuration mode [1-2, 1-5](#)
 Link Aggregation Control Protocol
 See EtherChannel
 link flap
 error detection for [2-108](#)
 error recovery timer [2-110](#)
 load_helper (boot loader) command [A-13](#)
 load-distribution methods for EtherChannel [2-308](#)
 logging event power-inline-status command [2-207](#)
 logging file command [2-208](#)
 logical interface [2-116](#)
 loopback error
 detection for [2-108](#)
 recovery timer [2-110](#)
 loop guard, for spanning tree [2-572, 2-576](#)

M

mac access-group command [2-210](#)
 MAC access-groups, displaying [2-457](#)
 MAC access list configuration mode [2-212](#)
 mac access-list extended command [2-212](#)
 MAC access lists [2-77](#)
 MAC addresses
 displaying
 aging time [2-463](#)
 all [2-461](#)
 dynamic [2-467](#)
 MAC address-table move updates [2-471](#)
 notification settings [2-473](#)
 number of addresses in a VLAN [2-465](#)
 per interface [2-469](#)
 per VLAN [2-477](#)
 static [2-475](#)
 static and dynamic entries [2-459](#)
 dynamic
 aging time [2-214](#)
 deleting [2-44](#)
 displaying [2-467](#)
 enabling MAC address notification [2-217](#)
 enabling MAC address-table move update [2-215](#)
 matching [2-232](#)
 static
 adding and removing [2-219](#)
 displaying [2-475](#)
 dropping on an interface [2-220](#)
 tables [2-461](#)
 MAC address notification, debugging [B-21](#)
 mac address-table aging-time [2-210, 2-232](#)
 mac address-table aging-time command [2-214](#)
 mac address-table move update command [2-215](#)
 mac address-table notification command [2-217](#)
 mac address-table static command [2-219](#)
 mac address-table static drop command [2-220](#)
 macro apply command [2-222](#)
 macro description command [2-225](#)
 macro global command [2-226](#)
 macro global description command [2-229](#)
 macro name command [2-230](#)

- macros
 - adding a description [2-225](#)
 - adding a global description [2-229](#)
 - applying [2-226](#)
 - creating [2-230](#)
 - displaying [2-504](#)
 - interface range [2-67, 2-118](#)
 - specifying parameter values [2-226](#)
 - tracing [2-226](#)
- manual
 - audience [xix](#)
 - purpose of [xix](#)
- maps
 - QoS
 - defining [2-246](#)
 - displaying [2-487](#)
 - VLAN
 - creating [2-680](#)
 - defining [2-232](#)
 - displaying [2-539](#)
- match (access-map configuration) command [2-232](#)
- match (class-map configuration) command [2-234](#)
- maximum transmission unit
 - See MTU
- mdix auto command [2-236](#)
- MDL snooping
 - displaying [2-444](#)
- member switches
 - See clusters
- memory (boot loader) command [A-14](#)
- mkdir (boot loader) command [A-15](#)
- MLD snooping
 - configuring [2-189, 2-191](#)
 - configuring queries [2-185, 2-187](#)
 - configuring topology change notification [2-193](#)
 - displaying [2-442, 2-446, 2-448](#)
 - enabling [2-183](#)
- MLD snooping on a VLAN
 - enabling [2-195](#)
- mls qos aggregate-policer command [2-240](#)
- mls qos command [2-238](#)
- mls qos cos command [2-242](#)
- mls qos dscp-mutation command [2-244](#)
- mls qos map command [2-246](#)
- mls qos queue-set output buffers command [2-250](#)
- mls qos queue-set output threshold command [2-252](#)
- mls qos rewrite ip dscp command [2-254](#)
- mls qos srr-queue input bandwidth command [2-256](#)
- mls qos srr-queue input buffers command [2-258](#)
- mls qos srr-queue input cos-map command [2-260](#)
- mls qos srr-queue input dscp-map command [2-262](#)
- mls qos srr-queue input priority-queue command [2-264](#)
- mls qos srr-queue input threshold command [2-266](#)
- mls qos srr-queue output cos-map command [2-268](#)
- mls qos srr-queue output dscp-map command [2-270](#)
- mls qos trust command [2-272](#)
- mls qos vlan-based command [2-274](#)
- mode, MVR [2-280](#)
- Mode button, and password recovery [2-333](#)
- modes, commands [1-1](#)
- monitor session command [2-275](#)
- more (boot loader) command [A-16](#)
- MSTP
 - displaying [2-520, 2-521](#)
 - interoperability [2-51](#)
 - link type [2-574](#)
 - MST region
 - aborting changes [2-580](#)
 - applying changes [2-580](#)
 - configuration name [2-580](#)
 - configuration revision number [2-580](#)
 - current or pending display [2-580](#)
 - displaying [2-520, 2-521](#)
 - MST configuration mode [2-580](#)
 - VLANs-to-instance mapping [2-580](#)
 - path cost [2-582](#)
 - protocol mode [2-578](#)
 - restart protocol migration process [2-51](#)

MST (continued)P

root port

- loop guard [2-572](#)
- preventing from becoming designated [2-572](#)
- restricting which can be root [2-572](#)
- root guard [2-572](#)

root switch

- affects of extended system ID [2-570](#)
- hello-time [2-585, 2-593](#)
- interval between BPDU messages [2-586](#)
- interval between hello BPDU messages [2-585, 2-593](#)
- max-age [2-586](#)
- maximum hop count before discarding BPDU [2-587](#)
- port priority for selection of [2-589](#)
- primary or secondary [2-593](#)
- switch priority [2-592](#)

state changes

- blocking to forwarding state [2-599](#)
- enabling BPDU filtering [2-562, 2-597](#)
- enabling BPDU guard [2-564, 2-597](#)
- enabling Port Fast [2-597, 2-599](#)
- forward-delay time [2-584](#)
- length of listening and learning states [2-584](#)
- rapid transition to forwarding [2-574](#)
- shutting down Port Fast-enabled ports [2-597](#)

state information display [2-519](#)

MTU

- configuring size [2-653](#)
- displaying global setting [2-528](#)

Multicast Listener Discovery

See MLD

multicast group address, MVR [2-283](#)

multicast groups, MVR [2-281](#)

Multicast Listener Discovery

See MLD

multicast router learning method [2-171](#)

multicast router ports

IPv6 [2-195](#)

multicast router ports, configuring [2-171](#)

multicast storm control [2-615](#)

multicast VLAN, MVR [2-280](#)

multicast VLAN registration

See MVR

multiple hosts on authorized port [2-93](#)

Multiple Spanning Tree Protocol

See MSTP

MVR

and address aliasing [2-281](#)

configuring [2-280](#)

configuring interfaces [2-283](#)

debug messages, display [B-26](#)

displaying [2-496](#)

displaying interface information [2-498](#)

members, displaying [2-500](#)

mvr (global configuration) command [2-280](#)

mvr (interface configuration) command [2-283](#)

mvr vlan group command [2-284](#)

N

native VLANs [2-646](#)

native VLAN tagging [2-685](#)

Network Assistant requirements [xx](#)

nonegotiate

DTP messaging [2-631](#)

nonegotiate, speed [2-607](#)

non-IP protocols

denying [2-77](#)

forwarding [2-298](#)

non-IP traffic access lists [2-212](#)

non-IP traffic forwarding

denying [2-77](#)

permitting [2-298](#)

normal-range VLANs [2-668, 2-674](#)

note, description [xx](#)

no vlan command [2-668, 2-678](#)

P

PAGP

See EtherChannel

pagp learn-method command [2-286](#)

pagp port-priority command [2-288](#)

password, VTP [2-694, 2-698](#)

password-recovery mechanism, enabling and disabling [2-333](#)

permit (ARP access-list configuration) command [2-290](#)

permit (IPv6) command [2-292](#)

permit (MAC access-list configuration) command [2-298](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-286](#)

PID, displaying [2-413](#)

PIM-DVMRP, as multicast router learning method [2-171](#)

PoE

configuring the power budget [2-313](#)

configuring the power management mode [2-310](#)

displaying controller register values [2-375](#)

displaying power management information [2-512](#)

logging of status [2-207](#)

police aggregate command [2-303](#)

police command [2-301](#)

policed-DSCP map [2-246](#)

policy-map command [2-305](#)

policy maps

applying to an interface [2-335, 2-340](#)

creating [2-305](#)

displaying [2-507](#)

hierarchical [2-306](#)

policers

displaying [2-480](#)

for a single class [2-301](#)

for multiple classes [2-240, 2-303](#)

policed-DSCP map [2-246](#)

policy maps (continued)

traffic classification

defining the class [2-34](#)

defining trust states [2-661](#)

setting DSCP or IP precedence values [2-338](#)

Port Aggregation Protocol

See EtherChannel

port-based authentication

AAA method list [2-3](#)

debug messages, display [B-7](#)

enabling IEEE 802.1x

globally [2-80](#)

per interface [2-99](#)

guest VLAN [2-91](#)

host modes [2-93](#)

IEEE 802.1x AAA accounting methods [2-1](#)

initialize an interface [2-95](#)

manual control of authorization state [2-99](#)

multiple hosts on authorized port [2-93](#)

periodic re-authentication

enabling [2-103](#)

time between attempts [2-104](#)

quiet period between failed authentication exchanges [2-104](#)

re-authenticating IEEE 802.1x-enabled ports [2-101](#)

resetting configurable IEEE 802.1x parameters [2-90](#)

switch-to-authentication server retransmission time [2-104](#)

switch-to-client frame-retransmission number [2-96 to 2-97](#)

switch-to-client retransmission time [2-104](#)

port-channel load-balance command [2-308](#)

Port Fast, for spanning tree [2-599](#)

port ranges, defining [2-67](#)

ports, debugging [B-70](#)

ports, protected [2-644](#)

port security

- aging [2-638](#)
- debug messages, display [B-72](#)
- enabling [2-633](#)
- violation error recovery [2-110](#)

port trust states for QoS [2-272](#)

port types, MVR [2-283](#)

power information, displaying [2-388](#)

power inline command [2-310](#)

power inline consumption command [2-313](#)

Power over Ethernet

- See PoE

priority-queue command [2-315](#)

private-vlan command [2-317](#)

private-vlan mapping command [2-320](#)

private VLANs

- association [2-642](#)
- configuring [2-317](#)
- configuring ports [2-629](#)
- displaying [2-534](#)
- host ports [2-629](#)
- mapping
 - configuring [2-642](#)
 - displaying [2-401](#)
- promiscuous ports [2-629](#)

privileged EXEC mode [1-2, 1-3](#)

product identification information, displaying [2-413](#)

promiscuous ports, private VLANs [2-629](#)

protected ports, displaying [2-407](#)

pruning

- VLANs [2-646](#)
- VTP
 - displaying interface information [2-401](#)
 - enabling [2-694, 2-698](#)

pruning-eligible VLAN list [2-648](#)

PVST+

- See STP

Q

QoS

auto-QoS

- configuring [2-17](#)
- debug messages, display [1-6, B-2](#)
- displaying [2-350](#)

class maps

- creating [2-36](#)
- defining the match criteria [2-234](#)
- displaying [2-359](#)

defining the CoS value for an incoming packet [2-242](#)

displaying configuration information [2-350, 2-479](#)

DSCP transparency [2-254](#)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [2-244](#)
- defining DSCP-to-DSCP-mutation map [2-246](#)

egress queues

- allocating buffers [2-250](#)
- defining the CoS output queue threshold map [2-268](#)
- defining the DSCP output queue threshold map [2-270](#)
- displaying buffer allocations [2-483](#)
- displaying CoS output queue threshold map [2-487](#)
- displaying DSCP output queue threshold map [2-487](#)
- displaying queueing strategy [2-483](#)
- displaying queue-set settings [2-490](#)
- enabling bandwidth shaping and scheduling [2-611](#)
- enabling bandwidth sharing and scheduling [2-613](#)
- limiting the maximum output on a port [2-609](#)
- mapping a port to a queue-set [2-322](#)
- mapping CoS values to a queue and threshold [2-268](#)
- mapping DSCP values to a queue and threshold [2-270](#)
- setting maximum and reserved memory allocations [2-252](#)
- setting WTD thresholds [2-252](#)

enabling [2-238](#)

QoS (continued)

ingress queues

- allocating buffers [2-258](#)
- assigning SRR scheduling weights [2-256](#)
- defining the CoS input queue threshold map [2-260](#)
- defining the DSCP input queue threshold map [2-262](#)
- displaying buffer allocations [2-483](#)
- displaying CoS input queue threshold map [2-487](#)
- displaying DSCP input queue threshold map [2-487](#)
- displaying queueing strategy [2-483](#)
- displaying settings for [2-481](#)
- enabling the priority queue [2-264](#)
- mapping CoS values to a queue and threshold [2-260](#)
- mapping DSCP values to a queue and threshold [2-262](#)
- setting WTD thresholds [2-266](#)

maps

- defining [2-246](#), [2-260](#), [2-262](#), [2-268](#), [2-270](#)
- displaying [2-487](#)

policy maps

- applying an aggregate policer [2-303](#)
- applying to an interface [2-335](#), [2-340](#)
- creating [2-305](#)
- defining policers [2-240](#), [2-301](#)
- displaying policers [2-480](#)
- displaying policy maps [2-507](#)
- hierarchical [2-306](#)
- policed-DSCP map [2-246](#)
- setting DSCP or IP precedence values [2-338](#)
- traffic classifications [2-34](#)
- trust states [2-661](#)

port trust states [2-272](#)queues, enabling the expedite [2-315](#)

statistics

- in-profile and out-of-profile packets [2-483](#)
- packets enqueued or dropped [2-483](#)
- sent and received CoS values [2-483](#)
- sent and received DSCP values [2-483](#)

trusted boundary for IP phones [2-272](#)VLAN-based [2-274](#)

quality of service

See QoS

querytime, MVR [2-280](#)queue-set command [2-322](#)

R

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

rcommand command [2-323](#)re-authenticating IEEE 802.1x-enabled ports [2-101](#)

re-authentication

periodic [2-103](#)time between attempts [2-104](#)receiver ports, MVR [2-283](#)receiving flow-control packets [2-114](#)

recovery mechanism

causes [2-110](#)display [2-356](#), [2-390](#), [2-394](#)timer interval [2-111](#)redundancy for cluster switches [2-64](#)remote-span command [2-325](#)

Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command [A-17](#)renew ip dhcp snooping database command [2-327](#)

requirements

cluster [xxi](#)device manager [xx](#)Network Assistant [xx](#)reset (boot loader) command [A-18](#)reset command [2-683](#)resource templates, displaying [2-514](#)

restricted VLAN

See dot1x auth-fail vlan

rmdir (boot loader) command [A-19](#)rmon collection stats command [2-329](#)

root guard, for spanning tree [2-572](#)

routed ports

IP addresses on [2-126](#)

number supported [2-126](#)

RSPAN

configuring [2-275](#)

displaying [2-493](#)

filter RSPAN traffic [2-275](#)

remote-span command [2-325](#)

sessions

add interfaces to [2-275](#)

displaying [2-493](#)

start new [2-275](#)

S

sdm prefer command [2-330](#)

SDM templates

allowed resources [2-331](#)

displaying [2-514](#)

dual IPv4 and IPv6 [2-330](#)

secure ports, limitations [2-635](#)

sending flow-control packets [2-114](#)

service password-recovery command [2-333](#)

service-policy command [2-335](#)

set (boot loader) command [A-20](#)

set command [2-338](#)

setup command [2-340](#)

setup express command [2-343](#)

show access-lists command [2-345](#)

show archive status command [2-348](#)

show arp access-list command [2-349](#)

show auto qos command [2-350](#)

show boot command [2-354](#)

show cable-diagnostics tdr command [2-356](#)

show changes command [2-683](#)

show class-map command [2-359](#)

show cluster candidates command [2-362](#)

show cluster command [2-360](#)

show cluster members command [2-364](#)

show controllers cpu-interface command [2-366](#)

show controllers ethernet-controller command [2-368](#)

show controllers power inline command [2-375](#)

show controllers tcam command [2-377](#)

show controller utilization command [2-379](#)

show current command [2-683](#)

show dot1q-tunnel command [2-381](#)

show dot1x command [2-382](#)

show dtp [2-386](#)

show env command [2-388](#)

show errdisable detect command [2-390](#)

show errdisable flap-values command [2-392](#)

show errdisable recovery command [2-394](#)

show etherchannel command [2-396](#)

show flowcontrol command [2-399](#)

show interfaces command [2-401](#)

show interfaces counters command [2-411](#)

show inventory command [2-413](#)

show ip arp inspection command [2-414](#)

show ipc command [2-436](#)

show ip dhcp snooping binding command [2-418](#)

show ip dhcp snooping command [2-417](#)

show ip dhcp snooping database command [2-420](#)

show ip igmp profile command [2-422](#)

show ip igmp snooping address command [2-444](#)

show ip igmp snooping command [2-423, 2-442](#)

show ip igmp snooping groups command [2-426](#)

show ip igmp snooping mrouter command [2-428, 2-446](#)

show ip igmp snooping querier command [2-430, 2-448](#)

show ip source binding command [2-432](#)

show ipv6 access-list command [2-440](#)

show ip verify source command [2-434](#)

show l2protocol-tunnel command [2-450](#)

show lacp command [2-453](#)

show mac access-group command [2-457](#)

show mac address-table address command [2-461](#)

show mac address-table aging time command [2-463](#)

show mac address-table command [2-459](#)

- show mac address-table count command [2-465](#)
- show mac address-table dynamic command [2-467](#)
- show mac address-table interface command [2-469](#)
- show mac address-table move update command [2-471](#)
- show mac address-table notification command [2-46, 2-473, B-23](#)
- show mac address-table static command [2-475](#)
- show mac address-table vlan command [2-477](#)
- show mls qos aggregate-policer command [2-480](#)
- show mls qos command [2-479](#)
- show mls qos input-queue command [2-481](#)
- show mls qos interface command [2-483](#)
- show mls qos maps command [2-487](#)
- show mls qos queue-set command [2-490](#)
- show mls qos vlan command [2-492](#)
- show monitor command [2-493](#)
- show mvr command [2-496](#)
- show mvr interface command [2-498](#)
- show mvr members command [2-500](#)
- show pagp command [2-502](#)
- show parser macro command [2-504](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform etherchannel command [C-5](#)
- show platform forward command [C-6](#)
- show platform frontend-controller command [C-8](#)
- show platform igmp snooping command [C-9](#)
- show platform ip multicast command [C-11](#)
- show platform ip unicast command [C-12](#)
- show platform ipv6 unicast command [C-16](#)
- show platform layer4op command [C-18](#)
- show platform mac-address-table command [C-19](#)
- show platform messaging command [C-20](#)
- show platform monitor command [C-21](#)
- show platform mvr table command [C-22](#)
- show platform pm command [C-23](#)
- show platform port-asic command [C-24](#)
- show platform port-security command [C-29](#)
- show platform qos command [C-30](#)
- show platform resource-manager command [C-31](#)
- show platform snmp counters command [C-33](#)
- show platform spanning-tree command [C-34](#)
- show platform stp-instance command [C-35](#)
- show platform team command [C-36](#)
- show platform vlan command [C-39](#)
- show policy-map command [2-507](#)
- show port security command [2-509](#)
- show power inline command [2-512](#)
- show proposed command [2-683](#)
- show sdm prefer command [2-514](#)
- show setup express command [2-518](#)
- show spanning-tree command [2-519](#)
- show storm-control command [2-526](#)
- show system mtu command [2-528](#)
- show trust command [2-661](#)
- show uddl command [2-529](#)
- show version command [2-532](#)
- show vlan access-map command [2-539](#)
- show vlan command [2-534](#)
- show vlan command, fields [2-536](#)
- show vlan filter command [2-540](#)
- show vmps command [2-541](#)
- show vtp command [2-544](#)
- shutdown command [2-549](#)
- shutdown threshold, Layer 2 protocol tunneling [2-199](#)
- shutdown vlan command [2-550](#)
- Smartports macros
 - See macros
 - SNMP host, specifying [2-555](#)
 - SNMP informs, enabling the sending of [2-551](#)
 - snmp-server enable traps command [2-551](#)
 - snmp-server host command [2-555](#)
 - snmp trap mac-notification command [2-559](#)
 - SNMP traps
 - enabling MAC address notification trap [2-559](#)
 - enabling the MAC address notification feature [2-217](#)
 - enabling the sending of [2-551](#)

SoftPhone

See Cisco SoftPhone

software images

- deleting [2-69](#)
- downloading [2-7](#)
- upgrading [2-7](#)
- uploading [2-13](#)

software version, displaying [2-532](#)

source ports, MVR [2-283](#)

SPAN

- configuring [2-275](#)
- debug messages, display [B-24](#)
- displaying [2-493](#)
- filter SPAN traffic [2-275](#)
- sessions
 - add interfaces to [2-275](#)
 - displaying [2-493](#)
 - start new [2-275](#)

spanning [2-601](#)

- spanning-tree backbonefast command [2-561](#)
- spanning-tree bpdudfilter command [2-562](#)
- spanning-tree bpduguard command [2-564](#)
- spanning-tree cost command [2-566](#)
- spanning-tree etherchannel command [2-568](#)
- spanning-tree extend system-id command [2-570](#)
- spanning-tree guard command [2-572](#)
- spanning-tree link-type command [2-574](#)
- spanning-tree loopguard default command [2-576](#)
- spanning-tree mode command [2-578](#)
- spanning-tree mst configuration command [2-580](#)
- spanning-tree mst cost command [2-582](#)
- spanning-tree mst forward-time command [2-584](#)
- spanning-tree mst hello-time command [2-585](#)
- spanning-tree mst max-age command [2-586](#)
- spanning-tree mst max-hops command [2-587](#)
- spanning-tree mst port-priority command [2-589](#)
- spanning-tree mst pre-standard command [2-591](#)
- spanning-tree mst priority command [2-592](#)
- spanning-tree mst root command [2-593](#)

spanning-tree portfast (global configuration)
command [2-597](#)

spanning-tree portfast (interface configuration)
command [2-599](#)

spanning-tree port-priority command [2-595](#)

Spanning Tree Protocol

See STP

spanning-tree transmit hold-count command [2-601](#)

spanning-tree uplinkfast command [2-602](#)

spanning-tree vlan command [2-604](#)

speed command [2-607](#)

srr-queue bandwidth limit command [2-609](#)

srr-queue bandwidth shape command [2-611](#)

srr-queue bandwidth share command [2-613](#)

SSH, configuring version [2-177](#)

static-access ports, configuring [2-620](#)

statistics, Ethernet group [2-329](#)

sticky learning, enabling [2-633](#)

storm-control command [2-615](#)

STP

BackboneFast [2-561](#)

counters, clearing [2-50](#)

debug messages, display

BackboneFast events [B-76](#)

MSTP [B-79](#)

optimized BPDUs handling [B-78](#)

spanning-tree activity [B-74](#)

switch shim [B-81](#)

transmitted and received BPDUs [B-77](#)

UplinkFast [B-83](#)

detection of indirect link failures [2-561](#)

enabling protocol tunneling for [2-199](#)

EtherChannel misconfiguration [2-568](#)

extended system ID [2-570](#)

path cost [2-566](#)

protocol modes [2-578](#)

STP (continued)

- root port
 - accelerating choice of new [2-602](#)
 - loop guard [2-572](#)
 - preventing from becoming designated [2-572](#)
 - restricting which can be root [2-572](#)
 - root guard [2-572](#)
 - UplinkFast [2-602](#)
- root switch
 - affects of extended system ID [2-570, 2-605](#)
 - hello-time [2-604](#)
 - interval between BPDU messages [2-604](#)
 - interval between hello BPDU messages [2-604](#)
 - max-age [2-604](#)
 - port priority for selection of [2-595](#)
 - primary or secondary [2-604](#)
 - switch priority [2-604](#)
- state changes
 - blocking to forwarding state [2-599](#)
 - enabling BPDU filtering [2-562, 2-597](#)
 - enabling BPDU guard [2-564, 2-597](#)
 - enabling Port Fast [2-597, 2-599](#)
 - enabling timer to recover from error state [2-110](#)
 - forward-delay time [2-604](#)
 - length of listening and learning states [2-604](#)
 - shutting down Port Fast-enabled ports [2-597](#)
- state information display [2-519](#)
- VLAN options [2-592, 2-604](#)
- SVIs, creating [2-120](#)
- Switched Port Analyzer
 - See SPAN
- switching characteristics
 - modifying [2-618](#)
 - returning to interfaces [2-618](#)
- switchport access command [2-620](#)
- switchport backup interface command [2-622](#)
- switchport block command [2-624](#)
- switchport command [2-618](#)
- switchport host command [2-625](#)

- switchport mode command [2-626](#)
- switchport mode private-vlan command [2-629](#)
- switchport nonegotiate command [2-631](#)
- switchport port-security aging command [2-638](#)
- switchport port-security command [2-633](#)
- switchport priority extend command [2-640](#)
- switchport private-vlan command [2-642](#)
- switchport protected command [2-644](#)
- switchports, displaying [2-401](#)
- switchport trunk command [2-646](#)
- switchport voice vlan command [2-649](#)
- system env temperature threshold yellow command [2-651](#)
- system message logging [2-207](#)
- system message logging, save message to flash [2-208](#)
- system mtu command [2-653](#)
- system resource templates [2-330](#)

T

- tar files, creating, listing, and extracting [2-10](#)
- TDR, running [2-655](#)
- Telnet, using to communicate to cluster switches [2-323](#)
- temperature information, displaying [2-388](#)
- templates, system resources [2-330](#)
- test cable-diagnostics tdr command [2-655](#)
- traceroute mac command [2-656](#)
- traceroute mac ip command [2-659](#)
- trunking, VLAN mode [2-626](#)
- trunk mode [2-626](#)
- trunk ports [2-626](#)
- trunks, to non-DTP device [2-627](#)
- trusted boundary for QoS [2-272](#)
- trusted port states for QoS [2-272](#)
- tunnel ports, Layer 2 protocol, displaying [2-450](#)
- type (boot loader) command [A-23](#)

U

UDLD

- aggressive mode [2-663, 2-665](#)
- debug messages, display [B-92](#)
- enable globally [2-663](#)
- enable per interface [2-665](#)
- error recovery timer [2-110](#)
- message timer [2-663](#)
- normal mode [2-663, 2-665](#)
- reset a shutdown interface [2-667](#)
- status [2-529](#)
- uddl command [2-663](#)
- uddl port command [2-665](#)
- uddl reset command [2-667](#)
- unicast storm control [2-615](#)
- UniDirectional Link Detection
 - See UDLD
- unknown multicast traffic, preventing [2-624](#)
- unknown unicast traffic, preventing [2-624](#)
- unset (boot loader) command [A-24](#)
- upgrading
 - software images [2-7](#)
 - monitoring status of [2-348](#)
- upgrading information
 - See release notes
- UplinkFast, for STP [2-602](#)
- user EXEC mode [1-2, 1-3](#)

V

- version (boot loader) command [A-26](#)

VLAN

- enabling guest VLAN supplicant [2-83](#)
- vlan (global configuration) command [2-668](#)
- vlan (VLAN configuration) command [2-674](#)
- vlan access-map command [2-680](#)
- VLAN access map configuration mode [2-680](#)

VLAN access maps

- actions [2-5](#)
- displaying [2-539](#)
- VLAN-based QoS [2-274](#)
- VLAN configuration
 - rules [2-671, 2-676](#)
 - saving [2-668, 2-678](#)
- VLAN configuration mode
 - commands
 - VLAN [2-674](#)
 - VTP [2-698](#)
 - description [1-5](#)
 - entering [2-682](#)
 - summary [1-2](#)
- vlan database command [2-682](#)
- vlan dot1q tag native command [2-685](#)
- vlan filter command [2-687](#)
- VLAN filters, displaying [2-540](#)
- VLAN ID range [2-668, 2-674](#)
- VLAN maps
 - applying [2-687](#)
 - creating [2-680](#)
 - defining [2-232](#)
 - displaying [2-539](#)
- VLAN Query Protocol
 - See VQP
- VLANs
 - adding [2-668](#)
 - configuring [2-668, 2-674](#)
 - debug messages, display
 - ISL [B-88](#)
 - VLAN IOS file system error tests [B-86](#)
 - VLAN manager activity [B-84](#)
 - VTP [B-90](#)
 - displaying configurations [2-534](#)
 - extended-range [2-668](#)
 - MAC addresses
 - displaying [2-477](#)
 - number of [2-465](#)

VLANs (continued)

- media types [2-671, 2-676](#)
- normal-range [2-668, 2-674](#)
- private [2-629](#)
 - configuring [2-317](#)
 - displaying [2-534](#)
- See also private VLANs
- restarting [2-550](#)
- saving the configuration [2-668](#)
- shutting down [2-550](#)
- SNMP traps for VTP [2-553, 2-556](#)
- suspending [2-550](#)
- variables [2-674](#)

VLAN Trunking Protocol

See VTP

VMPS

- configuring servers [2-692](#)
- displaying [2-541](#)
- error recovery timer [2-111](#)
- reconfirming dynamic VLAN assignments [2-689](#)
- vmmps reconfirm (global configuration) command [2-690](#)
- vmmps reconfirm (privileged EXEC) command [2-689](#)
- vmmps retry command [2-691](#)
- vmmps server command [2-692](#)

voice VLAN

- configuring [2-649](#)
- setting port priority [2-640](#)

VQP

- and dynamic-access ports [2-621](#)
- clearing client statistics [2-52](#)
- displaying information [2-541](#)
- per-server retry count [2-691](#)
- reconfirmation interval [2-690](#)
- reconfirming dynamic VLAN assignments [2-689](#)

VTP

- changing characteristics [2-694](#)
- clearing pruning counters [2-53](#)
- configuring
 - domain name [2-694, 2-698](#)
 - file name [2-694](#)
 - mode [2-694, 2-698](#)
 - password [2-694, 2-698](#)
- counters display fields [2-545](#)
- displaying information [2-544](#)
- enabling
 - pruning [2-694, 2-698](#)
 - tunneling for [2-199](#)
 - Version 2 [2-694, 2-698](#)
- mode [2-694, 2-698](#)
- pruning [2-694, 2-698](#)
- saving the configuration [2-668, 2-678](#)
- statistics [2-544](#)
- status [2-544](#)
- status display fields [2-547](#)
- vtp (global configuration) command [2-694](#)
- vtp (VLAN configuration) command [2-698](#)