



Symbols

4-6

Numerics

1 4-13

100BaseT 1-3

10BaseT 1-3

10BaseT port 1-7

3DES 1-5

56/64-kbps WAN interface card LEDs 4-6

802.1D Spanning Tree 1-4

A

AC power

specifications A-3

AC power factor correction 1-5, 1-10

adapter pinouts, terminal

RJ-45-to-DB-25 B-6

RJ-45-to-DB-9 B-6

airflow, Catalyst 4224 switch 1-10

Asynchronous/Synchronous WAN Interface
Card LED 4-11

attach bracket to eight-port FXS module 4-18

audience xi

autoboot, configuring for C-3

autonegotiation 1-3

B

blank faceplates, important functions 3-12

boot command C-5

Break key, entering ROM Monitor mode C-2

C

cable connectors

RJ-21 Category 5 4-17

cable guide installation

Catalyst 4224 switch 3-11

cables

serial adapter 4-9, 4-11

serial transition 4-9, 4-11

cabling

10/100 ports B-4

pinouts B-4

calling party control (CPC) 4-14

Card 4-8, 4-15, 4-22

Catalyst 1-6

- Catalyst 4224
 - repacking [D-1](#)
 - slot description [1-7](#)
- CDP [1-4](#)
- CGMP [1-4](#)
- chassis
 - Catalyst 4224 [A-2](#)
- checklist, site planning [2-3](#)
- Cisco Discovery Protocol
 - See CDP
- Cisco Group Management Protocol
 - See CGMP
- CLI [1-4](#)
- command-line interface
 - See CLI
- commands
 - boot [C-5](#)
 - configuration register [C-15](#)
 - context [C-8](#)
 - cookie [C-10](#)
 - debugging [C-8](#)
 - dir device [C-6](#)
 - frame [C-9](#)
 - fxs_high_density [C-12](#)
 - meminfo [C-6](#)
 - priv [C-7](#)
 - reset [C-7](#)
 - ROM Monitor [C-4](#)
 - ROM monitor diagnostics [C-1](#)
 - stack [C-8](#)
 - sysret [C-10](#)
 - version [C-7](#)
- common problems and solutions [5-2](#)
- common switch problems [5-1](#)
- components
 - switch [1-5](#)
- configuration register
 - changing settings [C-15](#)
- configuration register command [C-14](#)
- Configuring for autoboot [C-3](#)
- confreg command
 - commands
 - confreg [C-14](#)
- connecting
 - eight-port FXS voice interface card [4-16](#)
 - one- and two-port serial card [4-11](#)
 - one-port 56/64-kbps DSU/CSU cards [4-5](#)
 - one-port multiflex trunk interface card [4-25](#)
 - one-port T1/FT1 DSU/CSU cards [4-7](#)
 - two-port asynchronous/synchronous serial card [4-9](#)
 - two-port FXO interface card [4-20](#)
 - two-port FXS voice interface card [4-14](#)
 - two-port ISDN BRI cards [4-23](#)
 - two-port T1/E1 multiflex trunk interface card [4-27](#)
- connecting power to the switch [3-10](#)
- connectivity problems, solving [5-1](#)
- console connector pinouts [B-1](#)

console port

adapter pinouts

RJ-45-to-DB-25 terminal [B-6](#)RJ-45-to-DB-9 terminal [B-6](#)cable [B-5](#)connecting to [B-5 to B-6](#)

console serial port

connecting [3-10](#)description [1-6](#)context command [C-8](#)conventions used [xii](#)cookie command [C-10](#)

crossover cable

connectivity problems [5-3](#)pinout [B-4](#)

D

d [4-26](#)

DC-input power supplies

connecting system ground [3-9](#)debugging commands [C-8](#)dimensions, chassis [A-2](#)dimensions of the Catalyst 4224 [A-3](#)dir device command [C-6](#)DMS-100 and 5ESS switches [4-21](#)

document

conventions [xii](#)organization [xi](#)

documentation

related [xvi](#)

drop-and-insert

function for VWIC/VICs [1-7](#)interface cards [1-21](#)DSU/CSU, integrated in VWICs [1-19](#)DSU/CSU, integrated in WICs [1-13](#)

E

E1 multiflex trunk interface card [1-19, 1-20](#)echo cancellation (EC) [1-8](#)Eight [1-17](#)

eight-port FXS TM analog interface card

description [1-17](#)

eight-port FXS voice interface card

connecting [4-16](#)

eight-port RJ21 FXS module connector

pinouts [B-3](#)eight-port RJ21 FXS module link LED [4-20](#)

encryption

3DES [1-5](#)IKE SA [1-5](#)Environmental Monitoring Feature [1-11](#)equipment types to connect the A/S card [4-9](#)

Ethernet

speeds

100BaseT [1-3](#)Ethernet interfaces [1-3](#)

Ethernet management port

connecting [3-10](#)

Ethernet speeds

10BaseT [1-3](#)

excessive frame check sequence (FCS)

connectivity problem [5-2](#)

F

fan assembly [1-9](#)

fractional T1/E1 networks, and VWICs [1-19](#)

frame command [C-9](#)

frequency, specifications

Catalyst 4224 [A-2](#)

front panel LEDs [1-8](#)

FXO voice interface card LED [4-22](#)

fxs_high_density_cookie command [C-12](#)

FXS voice interface card LED [4-16](#)

G

grounding [3-9](#)

guidelines, rack-mounting the switch [3-3](#)

H

HDA status LED [1-9](#)

heat dissipation

determining [2-3](#)

specifications [2-2](#)

IEEE 802.1D Spanning Tree [1-4](#)

IKE SA [1-5](#)

inline power

details [1-12](#)

troubleshooting [5-4](#)

installing the switch [3-2](#)

checking accessory kit contents [3-2](#)

connecting a terminal to the console and
Ethernet management ports [3-10](#)

connecting a terminal to the console serial
and Ethernet management ports [3-10](#)

Installing voice and WAN interface cards [4-2](#)

Interface [4-17](#)

IOS CLI, upgrading the ROM Monitor
from [C-18](#)

ISDN BRI voice interface card LEDs [4-24](#)

L

LEDs

description (table) [1-8](#)

front panel [1-8](#)

power supply [3-10](#)

two-port T1/E1 multiflex trunk interface
card [4-28](#)

M

MAC addresses [1-3](#)

management

- port pinouts [B-2](#)

- ports [1-6](#)

- software [1-4](#)

MDIX connectors

- See media-dependent interface crossed-over connectors

Media Access Control addresses

- See MAC addresses

- media-dependent interface crossed-over connectors [3-10](#)

- meminfo command [C-6](#)

- microprocessor [A-2](#)

modem

- asynchronous [4-9, 4-12](#)

- synchronous [4-9, 4-12](#)

modules

- heat dissipation [2-3](#)

- power requirements [2-3](#)

N

- nserting [4-4](#)

O

- One [1-13](#)

one- and two-port serial card

- connecting [4-11](#)

- description [1-15](#)

- one-port 56/64-kbps DSU/CSU Card
 - description [1-13](#)

- one-port 56/64-kbps DSU/CSU card
 - connecting [4-5](#)

one-port multiflex trunk interface card

- connecting [4-25](#)

- description [1-19](#)

- LEDs [4-27](#)

one-port T1/FT1 DSU/CSU

- connecting [4-7](#)

- operating altitude [A-3](#)

- operating humidity [A-3](#)

- operating temperature [A-3](#)

P

- performance problems, solving [5-1](#)

- Pinout convention for the Telco RJ-21 [4-20](#)

pinouts

- adapters [B-5 to B-7](#)

- cable, straight-through and crossover [B-4](#)

- console connector [B-1](#)

- console port [B-5 to B-7](#)

- eight-port RJ21 FXS module connector [B-3](#)

- management port [B-2](#)

- RJ-45-to-DB-25 terminal adapter [B-7](#)

- RJ-45-to-DB-9 PC adapter [B-6](#)

- RJ-45-to-DB-9 terminal adapter [B-6](#)

- rollover cable [B-5 to B-7](#)

- ports
 - 10BaseT [1-7](#)
 - console serial [1-6](#)
 - management [1-6](#)
 - POST fails or system overheating
 - connectivity problem [5-3](#)
 - power
 - consumption [A-3](#)
 - specifications [A-3](#)
 - power, site
 - determining power requirements [2-3](#)
 - heat dissipation [2-3](#)
 - power requirements [2-2](#)
 - power supplies
 - description [1-10](#)
 - supported [1-5](#)
 - priv command [C-7](#)
 - problems and solutions, common [5-2](#)
 - procedures
 - connecting system ground [3-9](#)
 - connecting to the console serial port [3-10](#)
 - connecting to the Ethernet management port [3-10](#)
 - rack-mounting [3-2](#)
 - protocols
 - 802.1D Spanning Tree [1-4](#)
 - CDP [1-4](#)
 - CGMP [1-4](#)
 - SNMP [1-4](#)
 - TFTP [1-4](#)
 - VTP (Virtual Terminal Protocol) [1-4](#)
 - PS and RPS LEDs [1-9](#)
-
- ## R
- rack-mounting [3-2](#)
 - rack-mount kit
 - checklist [3-3](#)
 - guidelines [3-3](#)
 - recovering boot and system images [C-16](#)
 - Redundant Power System 300 [1-10](#)
 - related documentation [xvi](#)
 - Remote Monitoring
 - See RMON
 - removing the switch from the rack [3-7](#)
 - repacking the Catalyst 4224 [D-1](#)
 - requirements, power supply [A-3](#)
 - reset command [C-7](#)
 - Ring on Seize (ROS) [4-14](#)
 - RJ-21, pinout convention [4-20](#)
 - RJ21 connector specifications [4-16](#)
 - RJ-45 802.3-compliant port [1-7](#)
 - RMON [1-4](#)
 - rollover cable [B-5, B-6](#)
 - ROMMON, upgrading the ROM Monitor
 - from [C-18](#)
 - ROM Monitor
 - commands [C-4](#)
 - syntax conventions [C-4](#)
 - ROM monitor

diagnostics [C-8](#)
 mode, entering [C-1](#)

S

serial WAN interface card LED [4-13](#)
 setting jumpers
 on two-port FXO card [4-20](#)
 on two-port FXS card [4-14](#)
 show system command to display the power supply [3-10](#)
 Simple Network Management Protocol
 See SNMP
 site planning
 checklist [2-3](#)
 heat dissipation [2-2](#)
 site requirements [2-2](#)
 slots on the Catalyst 4224 switch
 description [1-7](#)
 Smart Serial
 connectors, serial cards [1-15](#)
 ports for the A/S card [4-9](#)
 SNMP [1-4](#)
 software management [1-4](#)
 specifications for the Catalyst 4224 [A-3](#)
 stack command [C-8](#)
 storage humidity [A-3](#)
 straight-through cable pinouts [B-4](#)
 switch
 Catalyst 4224 switch, repacking [D-1](#)

 components [1-5](#)
 connecting power [3-10](#)
 features [1-1](#)
 verifying installation [3-11](#)
 switch installation, verifying [3-11](#)
 syntax conventions, ROM Monitor [C-4](#)
 sysret command [C-10](#)
 system ground, connecting [3-9](#)
 system ground the switch, required tools [3-8](#)

T

T1/FT1 WAN interface card LEDs [4-8](#)
 T1 multiflex trunk interface card [1-19](#), [1-20](#)
 terminals
 connecting to the console serial port [3-10](#)
 connecting to the Ethernet management port [3-10](#)
 time-division multiplexing (TDM) ports [1-19](#)
 tools required to install cards [4-1](#)
 tools required to system ground the switch [3-8](#)
 troubleshooting [5-1 to 5-4](#)
 Two [4-24](#)
 two-port asynchronous/synchronous serial card
 connecting [4-9](#)
 description [1-14](#)
 two-port FXO analog interface card
 description [1-18](#)
 two-port FXO card
 setting jumpers [4-20](#)

two-port FXO interface card

connecting [4-20](#)

two-port FXS analog interface card

description [1-17](#)

two-port FXS card

setting jumpers [4-14](#)

two-port FXS voice interface card

connecting [4-14](#)

two-port ISDN BRI/ST card

description [1-18](#)

two-port ISDN BRI cards

connecting [4-23](#)

two-port multiflex trunk interface cards

description [1-20](#)

two-port T1/E1 multiflex trunk interface card

connecting [4-27](#)

LEDs [4-28](#)

U

Upgrading the ROM Monitor

from IOS CLI [C-18](#)

from ROMMON [C-18](#)

V

version command [C-7](#)

VIC [1-17, 1-18, 1-19](#)

VIC-2FXO-EU [4-16](#)

virtual LANs

See VLANs

Virtual Terminal Protocol

See VTP (Virtual Terminal Protocol)

VLANs [1-3](#)

VLAN Trunk Protocol

See VTP (VLAN Trunk Protocol)

voice and WAN interface cards (VWICs) [1-19](#)

voice and WAN interface cards, installing [4-2](#)

VTP (Virtual Terminal Protocol) [1-4](#)

VTP (VLAN Trunk Protocol) [1-3](#)

VWIC [1-20, 1-21, 1-22](#)

VWICs (voice and WAN interface cards) [1-19](#)

W

WAN interface cards (WICs) [1-12](#)

warnings convention [xiv](#)

weight

chassis [A-2](#)

weight of the Catalyst 4224 [A-3](#)

WIC [1-13, 1-14, 1-15, 1-16](#)