



About This Online Reference

This section describes who should read the *Enterprise MIB User Quick Reference*, how it is organized, and its document conventions. It also describes Management Information Base (MIB) objects, explains how MIB objects are used, and provides instructions on how to access Cisco public MIBs.

Cisco documentation and additional literature are available in a CD-ROM package, which ships with your product. The Documentation CD-ROM, a member of the Cisco Connection Family, is updated monthly. Therefore, it might be more up to date than printed documentation. To order additional copies of the Documentation CD-ROM, contact your local sales representative or call customer service. The CD-ROM package is available as a single package or as an annual subscription. You can also access Cisco documentation on the World Wide Web at <http://www.cisco.com>, <http://www-china.cisco.com>, or <http://www-europe.cisco.com>.

If you are reading Cisco product documentation on the World Wide Web, you can submit comments electronically. Click **Feedback** in the toolbar, select **Documentation**, and click **Enter the feedback form**. After you complete the form, click **Submit** to send it to Cisco. We appreciate your comments.

Who Should Read This Online Reference

This reference is for users who configure the software and administer the network. To use this reference, you should be familiar with Cisco IOS software. For descriptions and examples of software configuration commands and the procedures for implementing them, refer to the *Software Configuration Guide* or the *Command Reference* for your switch.

How This Reference Is Organized

Information contained in this reference is organized as follows:

| Title | Description |
|-----------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| Introduction to Cisco MIBs | Explains MIBs and how they are used |
| Accessing Cisco MIB Files | Describes how to access, download, and copy MIB files |
| Catalyst 4000 Family MIB Objects | Describes the Catalyst 4000 family Workgroup MIB object identifiers |
| Catalyst 5000 Family MIB Objects | Describes the Catalyst 5000 family Workgroup MIB object identifiers |
| Catalyst 6000 Family MIB Objects | Describes the Catalyst 6000 family Workgroup MIB object identifiers |
| LightStream 1010 and Catalyst 8500 MIB Values | Describes the LightStream 1010 ATM Switch, Catalyst 8500 CSR, and Catalyst 8500 MSR Chassis MIB object identifiers |

Conventions

This reference uses the conventions described below:

Command descriptions use the following conventions:

| | |
|----------------------|---------------------------------------------------------------|
| boldface font | Commands and keywords are in boldface . |
| <i>italic font</i> | Arguments for which you supply values are in <i>italics</i> . |

Screen examples use the following conventions:

| | |
|-----------------------------|-----------------------------------------------------------------------------------------|
| <code>screen font</code> | Terminal sessions and information the system displays are in <code>screen font</code> . |
| boldface screen font | Information you must enter is in boldface screen font . |
| <i>italic screen font</i> | Arguments for which you supply values are in <i>italic screen font</i> . |
| [] | Default responses to system prompts are in square brackets. |
