

About This Manual

This section discusses the objectives, audience, organization, and conventions of the *Communication Server Addendum for AppleTalk Remote Access*.

Document Objectives

This manual provides the information necessary to configure your communication server to use AppleTalk Remote Access (ARA) to support remote Macintosh users. This manual, used in conjunction with the Release 9.21 *Communication Server Configuration Guide* and the *Communication Server Command Reference* publication, provides all of the information necessary to use and configure your communication server, including system, network, and interface configuration.

Audience

This publication addresses the system administrator who will configure and maintain a communication server configured as an ARA server, supporting remote Macintosh users running ARA software.

Document Organization

This publication has two chapters:

- Chapter 1, “Configuring an AppleTalk Remote Access Server,” which contains required and optional tasks for configuring your communication server to support remote Macintosh users running ARA software.
- Chapter 2, “AppleTalk Remote Access Commands,” which provides a description of each of the commands presented in Chapter 1, including complete syntax descriptions, default settings, and command usage guidelines.

Document Conventions

This manual uses the following conventions to convey instructions and information.

- *Ctrl* represents the key labeled *Control*.

For example, the key combination *Ctrl-D* means hold down the *Control* key while you press the *D* key.

- A string is defined as a nonquoted set of characters. For example, when setting up a community string for SNMP to “public,” do not use quotes around the string, or the string will include the quotation marks.

Command descriptions use these conventions:

- Examples that contain system prompts denote interactive sessions, indicating that the user enters commands at the prompt. The system prompt indicates the current command mode. For example, the prompt `router(config)#` indicates global configuration mode.
- Commands and keywords are in **boldface** font.
- Arguments for which you supply values are in *italic* font.
- Elements in square brackets ([]) are optional.
- Alternative but required keywords are grouped in braces ({ }) and separated by vertical bars (|).

Examples use these conventions:

- Terminal sessions and information the system displays are in *screen* font.
- Information you enter is in **boldface screen** font.
- Nonprinting characters, such as passwords, are in angle brackets (<>).
- Default responses to system prompts are in square brackets ([]).
- Exclamation points (!) at the beginning of a line indicate a comment line.

Note Means *reader take note*. Notes contain helpful suggestions or references to materials not contained in this manual.

Software changes from previous releases are noted in the release note accompanying this manual.