

## DTMF and MF Frequencies

Table A-1 shows the DTMF frequencies and hexadecimal values used for DTMF impulsing and outpulsing.



**Note**

Hexadecimal values used to represent DTMF digits in system DTMF digit commands and reports are contained in parentheses.

*Table A-1 DTMF Frequencies and Hexadecimal Values*

<b>Low Frequency</b>	<b>High Frequency</b>			
	<b>1209</b>	<b>1336</b>	<b>1477</b>	<b>1633</b>
697	1(1)	2(2)	3(3)	A(A)
770	4(4)	5(5)	6(6)	B(B)
852	7(7)	8(8)	9(9)	C(C)
941	S(E)	0(0)	#(F)	D(D)

Table A-2 shows the MF frequencies and hexadecimal values used for MF impulsing and outpulsing.



**Note**

Hexadecimal values used to represent MF digits in system MF digit commands and reports are contained in parentheses.

*Table A-2 MF Frequencies and Hexadecimal Values*

<b>Low Frequency</b>	<b>High Frequency</b>				
	<b>900</b>	<b>1100</b>	<b>1300</b>	<b>1500</b>	<b>1700</b>
700	1(1)	2(2)	4(4)	7(7)	ST3P(E)
900		3(3)	5(5)	8(8)	STP(C)
1100				6(6)	9(9)KP(0)
1300					0(A)ST2P(D)
1500					ST(B)

