

DTMF/MF Frequencies

Table A-1 shows the frequencies and hexadecimal values used for DTMF impulsing and outpulsing.



Note

Hexadecimal values used to represent the DTMF digits in system DTMF digit commands and reports are contained in the ().

Table A-1 DTMF Frequencies and Hexadecimal Values

Low Frequency	High Frequency			
	1209	1336	1477	1633
697	1(1)	2(2)	3(3)	A(A)
770	4(4)	5(5)	6(6)	B(B)
852	7(7)	8(8)	9(9)	C(C)
941	S(E)	0(0)	#(F)	D(D)

Table A-2 shows the frequencies and hexadecimal values used for MF impulsing and outpulsing.

Table A-2 MF Frequencies and Hexadecimal Values

Low Frequency	High Frequency				
	900	1100	1300	1500	1700
700	1(1)	2(2)	4(4)	7(7)	ST3P(E)
900	—	3(3)	5(5)	8(8)	STP(C)
1100	—	—	—	6(6)	9(9)KP(0)
1300	—	—	—	—	0(A)ST2P(D)
1500	—	—	—	—	ST(B)

