



Insert the module into a NM slot of your choice

See the *Cisco Network Modules Hardware Installation Guide*.

Open the router and insert the module into an AIM slot on the motherboard

Note: Do not insert the AIM in slot 0 of the Cisco 3745.

See the *Installing Advanced Integration Modules* guide or *Installing and Upgrading Internal Components* guide for your router.

Provision Cisco CallManager Express on the router that will interwork with Cisco Unity Express.

See the *Cisco CallManager Express System Administrator Guide* for the release being used.

Configure MWI on and off extensions in Cisco CallManager Express and add wildcard characters to the DNs to represent the length of a telephone extension number.

See the Prerequisites section of the *Cisco Unity Express CLI Administrator Guide for Cisco CallManager Express* for the software version being used.

Determine the pilot numbers for Cisco Unity Express voice mail, auto attendant, and greeting management system.

See the *Cisco CallManager Express System Administrator Guide* for the release being used.

Configure SIP dial peers on Cisco CallManager Express for the three pilot numbers.

Use the format described in the Prerequisites section of the *Cisco Unity Express CLI Administrator Guide for Cisco CallManager Express* for the software version being used.

