

Cisco WAN Switching SuperUser Command Reference

Release 9.2
November 2002

Corporate Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA

<http://www.cisco.com>

Tel: 408 526-4000
800 553-NETS (6387)

Fax: 408 526-4100

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The following information is for FCC compliance of Class A devices: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

The following information is for FCC compliance of Class B devices: The equipment described in this manual generates and may radiate radio-frequency energy. If it is not installed in accordance with Cisco's installation instructions, it may cause interference with radio and television reception. This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in part 15 of the FCC rules. These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

Modifying the equipment without Cisco's written authorization may result in the equipment no longer complying with FCC requirements for Class A or Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

You can determine whether your equipment is causing interference by turning it off. If the interference stops, it was probably caused by the Cisco equipment or one of its peripheral devices. If the equipment causes interference to radio or television reception, try to correct the interference by using one or more of the following measures:

- Turn the television or radio antenna until the interference stops.
- Move the equipment to one side or the other of the television or radio.
- Move the equipment farther away from the television or radio.
- Plug the equipment into an outlet that is on a different circuit from the television or radio. (That is, make certain the equipment and the television or radio are on circuits controlled by different circuit breakers or fuses.)

Modifications to this product not authorized by Cisco Systems, Inc. could void the FCC approval and negate your authority to operate the product.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Access Registrar, AccessPath, Any to Any, AtmDirector, CCDA, CCDE, CCDP, CCIE, CCNA, CCNP, CCSI, CD-PAC, the Cisco logo, Cisco Certified Internetwork Expert logo, *CiscoLink*, the Cisco Management Connection logo, the Cisco NetWorks logo, the Cisco Powered Network logo, Cisco Systems Capital, the Cisco Systems Capital logo, Cisco Systems Networking Academy, the Cisco Technologies logo, ConnectWay, ControlStream, Fast Step, FireRunner, GigaStack, IGX, JumpStart, Kernel Proxy, MGX, Natural Network Viewer, NetSonar, Network Registrar, *Packet*, PIX, Point and Click Internetworking, Policy Builder, Precept, RouteStream, Secure Script, ServiceWay, SlideCast, SMARTnet, StreamView, *The Cell*, TrafficDirector, TransPath, ViewRunner, VirtualStream, VisionWay, VlanDirector, Workgroup Director, and Workgroup Stack are trademarks; Changing the Way We Work, Live, Play, and Learn, Empowering the Internet Generation, The Internet Economy, and The New Internet Economy are service marks; and Assist, BPX, Catalyst, Cisco, Cisco IOS, the Cisco IOS logo, Cisco Systems, the Cisco Systems logo, the Cisco Systems Cisco Press logo, Enterprise/Solver, EtherChannel, EtherSwitch, FastHub, FastLink, FastPAD, FastSwitch, IOS, IP/TV, IPX, LightStream, LightSwitch, MICA, NetRanger, Registrar, StrataView Plus, Stratm, TeleRouter, and VCO are registered trademarks of Cisco Systems, Inc. in the U.S. and certain other countries. All other trademarks mentioned in this document are the property of their respective owners. (9905R)

Cisco WAN Switching SuperUser Command Reference
Copyright © 2002, Cisco Systems, Inc.
All rights reserved.

**Feedback on the
Cisco WAN
Switching SuperUser
Command Reference
78-6722-05 Rev. A0**

**Release 9.2
November, 2002**

Thank you for taking the time to fill out this response card. Your input is important to us and helps us to provide you with better documentation.

If you have comments about this document, please complete this self-addressed response card and mail it to us.

We also encourage you to make copies of this blank response card to complete and send to us whenever you have comments about this document. You can mail copies of this card to:

Cisco Systems, Inc.
Attn: Document
Resource Connection
170 West Tasman Drive
San Jose, CA 95134-9883

You can also send us your comments by e-mail to bug-doc@cisco.com, or fax your comments to us at (408) 527-8089.

You can also submit comments electronically on the World Wide Web. Click **Feedback** in the toolbar and select **Documentation**. After you complete the form, click **Submit** to send it to Cisco. We appreciate your comments.



Documentation Response Card

Feedback on the Cisco WAN Switching SuperUser Command Reference, Release 9.2, July 2002, Part Number 78-6722-05 Rev. A0

Please respond to the following statements by checking a number from 1 to 5:

- 5 Strongly agree
- 4 Somewhat agree
- 3 Neutral
- 2 Somewhat disagree
- 1 Strongly disagree

Overall, I am satisfied with this document.

Strongly agree 5 4 3 2 1 Strongly disagree

This document is accurate and free of errors.

Strongly agree 5 4 3 2 1 Strongly disagree

I can find the information I need in this document.

Strongly agree 5 4 3 2 1 Strongly disagree

This document is complete and offers enough relevant information for me to do my job.

Strongly agree 5 4 3 2 1 Strongly disagree

This document is written at the correct level of complexity for the subject matter.

Strongly agree 5 4 3 2 1 Strongly disagree

This document is useful to me in doing my job.

Strongly agree 5 4 3 2 1 Strongly disagree

Would you like us to contact you? Yes No

Additional Feedback

Mailing Information

Date _____

Company Name _____

Contact Name _____

Mailing Address _____

City _____ State/Province _____

Zip/Postal Code _____ Country _____

Phone () _____ Extension _____

 
Fax () _____ E-mail _____

BUSINESS REPLY MAIL


FIRST-CLASS MAIL PERMIT NO. 4631 SAN JOSE CA

POSTAGE WILL BE PAID BY ADDRESSEE

ATTN DOCUMENT RESOURCE CONNECTION
CISCO SYSTEMS INC
170 WEST TASMAN DRIVE
SAN JOSE CA 95134-9883



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

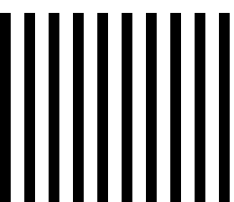

Objectives	xv
Audience	xv
WAN Switch Product Name Change	xvi
Organization	xvi
Conventions	xvi
Cisco Connection Online	xvii
SuperUser Commands	1-1
Introduction	1-1
General Information	1-1
Descriptions for Statistics CLI Commands	1-2
Statistics Command Descriptions	1-2
Functional Description of Channel Statistics	1-2
burnfwrev (Burn Firmware Image into Card(s))	1-6
clrcderr (Clear Detailed Card Errors)	1-8
clrcnf (Clear Configuration Memory)	1-10
clrfpevt (Clear FastPAD Event Reporting)	1-11
cnfabrparm (Configure Assigned Bit Rate Queue Parameters)	1-13
cnfbusbw (Configure UXM Card Bus Bandwidth)	1-15
cnfcdparm	1-17
Description of Summary and Interval Statistics	1-17
Multilevel Channel Statistics Support	1-18
UXM/BXM multilevel Channel Statistics Feature	1-19
Cisco WAN Manager	1-20
Channel Statistics Collection and Display	1-20
Memory Requirements	1-20
BPX Platform	1-20
IGX Platform	1-20
Multilevel Statistics Supported on UXM Card	1-26
Setting the Statistics Level on the UXM Card	1-26
Levels of Support on UXM Card for Various Statistics	1-27
Compatibility with 9.1 Classic Statistics	1-29
Descriptions for Statistics Fields on cnfcdparm Screen	1-34
cnfcdpparm (Configure CVM Card Parameters)	1-41
cnfcftst (Configure Communication Fail Test Pattern)	1-43
cnfchstats (Configure Channel Statistics Collection)	1-44
cnfchsts (Configure Channel Timestamp)	1-48
cnfclnparm (Configure Circuit Line Parameter)	1-50
cnfclnsigparm (Configure Circuit Line Signaling Parameters)	1-51
cnfcmparm (Configure Connection Management Parameters)	1-54

cnfdiagparm (Configure Diagnostic Test Parameters) 1-59
 cnfdlparm (Configure Download Parameters) 1-61
 cnfecparm (Configure Echo Canceller Parameters) 1-65
 cnffpcom (Configure FastPAD Communication Parameters) 1-67
 cnffpcon (Configure FastPAD Connection Parameters) 1-68
 cnffpddelay (Configure FastPAD Delay) 1-69
 cnffpdpvc (Configure FastPAD PVC) 1-70
 cnffpmap (Configure FastPAD Map Table) 1-71
 cnffpport (Configure FastPAD Port) 1-72
 cnffpsys (Configure FastPAD System Parameters) 1-73
 cnffstparm (Configure ForeSight Node Parameters) 1-74
 cnflan (Configure LAN) 1-76
 cnflnparm (Configure ATM Line Card Parameters) 1-78
 cnflnsigparm (Configure Line Signaling Parameters) 1-79
 cnflnstats (Configure Line Statistics Collection) 1-82
 cnfclnstats (Configure Circuit Line Statistics) 1-90
 cnfmxbutil (Configure Muxbus Utilization) 1-93
 cnfnodeparm (Configure Node Parameter) 1-95
 cnfnwip (Configure Network IP Address) 1-115
 cnfphyslnstats (Configure Physical Line Statistics) 1-117
 cnfportstats (Configure Port Statistics Collection) 1-123
 cnfrobparm (Configure Robust Alarms Parameters) 1-128
 cnfslotstats (Configure Slot Statistics Collection) 1-130
 cnftcpparm (Configure TCP Parameters) 1-132
 cnftermfunc (Configure Terminal Port Functions) 1-133
 cnftlparm (Configure Trunk-Based Loading Parameters) 1-136
 cnfttrafficgen 1-138
 Traffic Generation Test 1-138
 cnftrkparm (Configure Trunk Card Parameters) 1-141
 Configuring Virtual Trunks with cnftrkparm Command 1-141
 Configuring Trunk Queues Used by Real-Time VBR and Non-Real-Time VBR
 Connections 1-141
 Physical and Virtual Parameters You Can Configure Using cnftrkparm 1-152
 cnftrkstats (Configure Trunk Statistics Collection) 1-154
 cnfstparm (Configure Card Test Parameters) 1-161
 cnfuiparm (Configure User Interface Parameters) 1-164

cnfvumchparm (Configure Channel Parameters on a UVM)	1-166
cnfvchparm (Configure Voice Channel Parameter)	1-168
cpyfpmmap (Copy FastPAD Map Table)	1-171
dchst (Display Channel Status)	1-172
diagbus (Diagnose Failed Bus)	1-174
drtop (Display Route Op Table)	1-175
dspasich (Display ASI Channel Routing Entry)	1-176
dspbuses (Display Bus Status)	1-177
dspcardstats (Display BXM Card Statistics)	1-179
BXM Card Statistics Descriptions for dspcardstats Command	1-180
dspcderrs (Display Card Errors)	1-186
dspcftst (Display Communication Fail Test Pattern)	1-187
dspchan (Display Channel Configuration)	1-188
dspchstatcnf (Display Statistics Enabled for a Channel)	1-190
dspchstathist (Display Statistics History for a Channel)	1-191
dspchstats (Display All Enabled Statistics for a Channel)	1-193
Descriptions for Statistics Fields on dspchstats	1-195
dspclnstatcnf (Display Circuit Line Statistics Configuration)	1-200
dspclnstathist (Display Statistics History for a Circuit Line)	1-201
dspcnf (Display Configuration Save/Restore Status)	1-203
dspdnl (Display Download)	1-204
dspdutl (Display Data Channel Utilization)	1-206
dspcparm (Display Echo Canceller Parameters)	1-208
dspfpdsc (Display FastPAD Card Descriptor)	1-210
dspfwrev (Display Firmware Revision)	1-211
dsphitless (Display Statistical History of Hitless Rebuilds)	1-213
What Hitless Rebuild Feature Provides in Release 9.2	1-213
Purpose of Hitless Rebuild	1-213
Acronyms	1-214
Software Revisions and Interoperability	1-214
Description of how Hitless Rebuild Works	1-214
Safe Switchover	1-215
Action Taken if the Control Card Fails	1-215
Autobus Diagnostic Feature Disabled	1-217
How Memory is Managed during Hitless Rebuilds	1-217
Errors and Alarm Handling	1-218
Consistency Checking	1-218
Node Reliability and Maintainability	1-219
Hitless Rebuild Examples	1-219

Normal switchcc 1-219
 Abort -- Standby not Ready 1-220
 Commbus failure 1-220
 dsplnstatcnf (Display Statistics Enabled for a Line) 1-223
 dsplnstatthist (Display Statistics Data for a Line) 1-224
 dspphyslnstatcnf (Display Statistics Enabled for a Physical Line) 1-226
 dspphyslnstatthist (Display Statistics Data for a Physical Line) 1-228
 dspportstatcnf (Display Statistics Enabled for a FR Port) 1-230
 dspportstatthist (Display Statistics History for a FR Port) 1-231
 dsprevs (Display Revisions) 1-233
 dsprobst (Display Robust Statistics) 1-235
 dsprrst (Display Reroute Statistics) 1-236
 dspsig (Display Signaling) 1-238
 dspslot (Display Slot) 1-239
 dspslotstatcnf (Display Statistics Enabled for a BXM Card Slot) 1-241
 dspslotstatthist (Display Statistics History for a BXM Card) 1-242
 dspstatfiles (Display TFTP Statistics File Information) 1-243
 dspstatmem (Display Statistics Memory Use) 1-246
 dsptcparm (Display TCP Parameters) 1-247
 dsptrkcons (Display Trunk Connection Counts) 1-248
 dsptrkmcons (Display Trunk Connection Counts by Master Node) 1-249
 dsptrkstatcnf (Display Statistics Enabled for a Trunk) 1-250
 dsptrkstatthist (Display Statistics History for a Trunk) 1-252
 dsputl (Display Utilization) 1-254
 getfwrev (Get Firmware Revision) 1-256
 killuser (Log Out a User) 1-257
 loadcnf (Load Configuration) 1-258
 loadrev (Load Revision) 1-259
 prtderrs (Print Card Errors) 1-260
 rrtcon (Reroute Connection) 1-261
 rststats (Reset Statistics Collection Time) 1-262
 runcnf (Run Configuration) 1-263
 runrev (Run Revision) 1-264
 savecnf (Save Configuration) 1-265
 setfpevt (Set FastPAD Event Reporting) 1-267

tststats (Test Statistics)	1-269
tstbadubus	1-271
Function	1-271
Workaround	1-271
upggrp (Upgrade Groups)	1-274

- Figure 1-1** burnfwrev—Burn Firmware Revision into Card 1-7
- Figure 1-2** clrcderrs—Clear Card Errors (before confirmation) 1-8
- Figure 1-3** clrcderrs—Clear Card Errors (after confirmation) 1-9
- Figure 1-4** clrcnf—Clear Node Configuration 1-10
- Figure 1-5** clrfpevt—Clear FastPAD Event Reporting 1-12
- Figure 1-6** cnfbusbw (Configure UXM Card Bus Bandwidth) 1-16
- Figure 1-7** cnfcdpparm Parameters 1-41
- Figure 1-8** cnfcftst—Configure Communication Fail Test Pattern 1-43
- Figure 1-9** cnfchstats—Configure Channel Statistics 1-45
- Figure 1-10** cnfccln—Configure Circuit Line Alarm Integration Times 1-50
- Figure 1-11** cnfclnsigparm—Configure Circuit Line Signaling Parameters 1-52
- Figure 1-12** cnfcmparm Parameters 1-58
- Figure 1-13** cnfdiagparm—Configure Diagnostic Test Parameters 1-60
- Figure 1-14** cnfdlparm—Configure Download Parameters 1-64
- Figure 1-15** cnfecparm—Configure Echo Canceller Parameters 1-66
- Figure 1-16** cnffpcom—Configure FastPAD Communication Parameters 1-67
- Figure 1-17** cnffpcon—Configure FastPAD Connection Parameters 1-68
- Figure 1-18** cnffpddelay—Configure FastPAD Delay 1-69
- Figure 1-19** cnffpmap—Configure FastPAD Map Table 1-71
- Figure 1-20** cnffpport—Configure FastPAD Port Parameters 1-72
- Figure 1-21** cnffpsys—Configure System Parameters 1-73
- Figure 1-22** BPX System Response for cnffstparm 1-75
- Figure 1-23** cnflan—Configure LAN Parameters 1-77
- Figure 1-24** cnflnparm—Configure ATM Line Card Parameters 1-78
- Figure 1-25** cnflnsigparm—Configure Line Signaling Parameters 1-80
- Figure 1-26** cnflnstats—Configure Line Statistics 1-83
- Figure 1-27** cnflnstats for a UXM Port 1-84
- Figure 1-28** cnflnstats for an ASI-155 1-86
- Figure 1-29** cnfclnstats—Configure Circuit Line Statistics (T1 Line) 1-91
- Figure 1-30** cnfmxbutil—Configure Muxbus Utilization 1-94
- Figure 1-31** IGX cnfnodeparm Parameters 1-104
- Figure 1-32** cnfnwip—Configure Network IP Address 1-116
- Figure 1-33** cnfphyslnstats—Configure Physical Line Statistics (OC-3) 1-119
- Figure 1-34** cnfphyslnstats—Configure Physical Line Statistics (T3) 1-120

Figure 1-35	cnfphyslnstats—Configure Physical Line Statistics (E3)	1-120
Figure 1-36	cnfphyslnstats—Configure Physical Line Statistics (T1)	1-121
Figure 1-37	cnfphyslnstats—Configure Physical Line Statistics (E1)	1-122
Figure 1-38	cnfportstats—Configure Port Statistics for a Frame Relay Card	1-125
Figure 1-39	cnfportstats for a UXM Port	1-126
Figure 1-40	cnfportstats for an ASI-155	1-127
Figure 1-41	cnfrobparm—Configure Robust Alarm Parameters	1-129
Figure 1-42	cnfslotstats—Configure Slot Statistics Parameters	1-131
Figure 1-43	Configure TCP Parameters	1-132
Figure 1-44	cnftermfunc Screen on an IGX 8420 Switch	1-134
Figure 1-45	cnftlparm Parameters	1-137
Figure 1-46	cnftrkparm for an IGX Node	1-143
Figure 1-47	cnftrkparm for a BPX Trunk	1-144
Figure 1-48	cnftrkparm for a BXM OC-12 Trunk	1-145
Figure 1-49	cnftrkparm for a Virtual Trunk	1-148
Figure 1-50	cnftrkparm for a UXM OC-3 Trunk	1-149
Figure 1-51	cnftrkparm for a UXM T3 or E3 Trunk	1-150
Figure 1-52	cnftrkparm for a BXM Trunk	1-151
Figure 1-53	cnftrkstats—Configure T1 Trunk Statistics	1-155
Figure 1-54	cnftrkstats—Configure ATM Trunk Statistics (Screen 1)	1-156
Figure 1-55	cnftrkstats—Configure ATM Trunk Statistics (Screen 2)	1-156
Figure 1-56	cnftrkstats—Configure ATM Trunk Statistics (Screen 3)	1-157
Figure 1-57	cnftrkstats—Configure ATM Trunk Statistics (Screen 4)	1-157
Figure 1-58	cnftrkstats—Configure ATM Trunk Statistics (Screen 5)	1-158
Figure 1-59	cnftrkstats—Configure ATM Trunk Statistics (Screen 6)	1-158
Figure 1-60	cnftrkstats—Configure ATM Trunk Statistics (Screen 7)	1-159
Figure 1-61	cnftrkstats—Configure ATM Trunk Statistics (UXM OC-3/T3/E3/T1/E1)	1-160
Figure 1-62	cnftstparm—Parameters on a BPX Node	1-162
Figure 1-63	cnftstparm—Parameters on an IGX 8420 Node	1-163
Figure 1-64	cnfuiparm—Configure User Interface Parameters	1-165
Figure 1-65	cpyfpmmap—Configure FastPAD Map Table	1-171
Figure 1-66	dchst—Display Channel Status	1-173
Figure 1-67	drtop—Display Route Op Table	1-175
Figure 1-68	dspasich—Display ASI Channel Routing Entry	1-176

- Figure 1-69** dspsbuses on a BPX Switch 1-177
- Figure 1-70** dspsbuses on an IGX Switch 1-178
- Figure 1-71** dspcardstats—Display BXM Card Statistics 1-179
- Figure 1-72** dspcderrs—Display Card Errors 1-186
- Figure 1-73** dspcftst—Display Comm. Fail Test Pattern 1-187
- Figure 1-74** dspchan—Display Channel (CDP card) 1-189
- Figure 1-75** dspchstatcnf—Display Channel Statistics Enabled (FR channel) 1-190
- Figure 1-76** dspchstathist—Display Channel Statistics History 1-192
- Figure 1-77** dspchstats—Display Channel Statistics 1-194
- Figure 1-78** dspclnstatcnf—Display Circuit Line Statistics Enabled (T1 line) 1-200
- Figure 1-79** dspclnstathist—Display Circuit Line Statistics History 1-202
- Figure 1-80** dspcnf—Display Configuration Save/Restore Status 1-203
- Figure 1-81** dspdnld—Display Download 1-205
- Figure 1-82** dspdutil—Display Data Channel Utilization 1-207
- Figure 1-83** dspecparm—Display Echo Canceller Parameters 1-209
- Figure 1-84** dsppfdsc—Display FastPAD Card Descriptor 1-210
- Figure 1-85** dsppfwrev—Display Firmware Revision 1-212
- Figure 1-86** dsphitless—Display Statistical History of Hitless Rebuilds 1-222
- Figure 1-87** dsplnstatcnf—Display Statistics Enabled for a Line 1-223
- Figure 1-88** dsplnstathist—Display Statistics Data for a Line 1-225
- Figure 1-89** dspphyslnstatcnf—Display Statistics Enabled for a Line 1-227
- Figure 1-90** dspphyslnstathist—Display Statistics Data for a Line 1-229
- Figure 1-91** dsppportstatcnf—Display Port Statistics Enabled 1-230
- Figure 1-92** dsppportstathist—Display Port Statistics History 1-232
- Figure 1-93** dsprevs—Display Revisions 1-234
- Figure 1-94** dsprobst—Display Robust Statistics 1-235
- Figure 1-95** dsprrst—Display Reroute Statistics 1-237
- Figure 1-96** dspsig—Display Signaling 1-238
- Figure 1-97** dspslot—Display Slot Parameters 1-239
- Figure 1-98** Slot Statistics for a BXM 1-241
- Figure 1-99** dspstatmem—Display Statistics Memory Usage 1-246
- Figure 1-100** dsptcpparm—Display TCP Parameters 1-247
- Figure 1-101** dsprtkcons—Display Trunk Connection Counts 1-248
- Figure 1-102** dsprtkmcons—Display Trunk Connection Counts by Master Node 1-249

- Figure 1-103** dsprkstatcnf—Display T3 Trunk Statistics Enabled (Screen 1) 1-251
- Figure 1-104** dsprkstathist—Display Trunk Statistics History 1-253
- Figure 1-105** dsputl—Display Voice Channel Utilization 1-255
- Figure 1-106** killuser—Kill User 1-257
- Figure 1-107** rststats—Reset Statistics Collection Time 1-262
- Figure 1-108** setfpevt—Set FastPAD Event Reporting 1-268
- Figure 1-109** tststats—Display Test Statistics 1-270
- Figure 1-110** tstbadubus System Response 1-272
- Figure 1-111** tstbadubus—Test NTM Corruption Problem 1-273



About This Manual

This section discusses the objectives, audience, organization, and conventions of the *Cisco WAN Switching SuperUser Command Reference* publication.

Cisco documentation and additional literature are available in a CD-ROM package, which ships with your product. The Documentation CD-ROM, a member of the Cisco Connection Family, is updated monthly. Therefore, it might be more current than printed documentation. To order additional copies of the Documentation CD-ROM, contact your local sales representative or call customer service. The CD-ROM package is available as a single package or as an annual subscription. You can also access Cisco documentation on the World Wide Web at <http://www.cisco.com>, <http://www-china.cisco.com>, or <http://www-europe.cisco.com>.

If you are reading Cisco product documentation on the World Wide Web, you can submit comments electronically. Click **Feedback** in the toolbar, select **Documentation**, and click **Enter the feedback form**. After you complete the form, click **Submit** to send it to Cisco. We appreciate your comments.

Objectives

This publication gives instructions on how to use the command line interface to execute super user (privilege level 0) commands on the Cisco WAN switch nodes.

Audience

The super user commands apply to tasks that require deeper product knowledge and responsibility than the standard user commands. (For descriptions of the standard user commands, refer to the *Cisco WAN Switching Command Reference*.) The SuperUser commands, for example, let you

- Configure statistics gathering and alarm reporting
- Display more varied and extensive statistics
- Perform software and firmware upgrades
- Troubleshoot at a level that requires deeper product knowledge

WAN Switch Product Name Change

The Cisco WAN Switch products have new names. Any switch in the BPX switch family (Cisco BPX® 8620 broadband switch and Cisco BPX® 8650 broadband switch) is now called a Cisco BPX® 8600 series broadband switch. The BPX Service Node switch is now called the Cisco BPX® 8620 broadband switch. The BPX switch as a Tag switch controller is now called the Cisco BPX® 8650 broadband switch. The AXIS shelf is now called the Cisco MGX™ 8220 edge concentrator. Any switch in the IGX switch family (IGX 8, IGX 16 and IGX 32 wide-area switches) is now called the Cisco IGX™ 8400 series multiband switches. The IGX 8 switch is now called the Cisco IGX™ 8410 multiband switch. The IGX 16 switch is now called the Cisco IGX™ 8420 multiband switch, and the IGX 32 switch is now called the Cisco IGX™ 8430 multiband switch. Cisco StrataView Plus is now called Cisco WAN Manager.

Organization

The main body of this publication is as follows:

- Chapter 1, “SuperUser Commands”

Conventions

This publication uses the following conventions to convey instructions and information.

Command descriptions use these conventions:

- Commands and keywords are in **boldface**.
- Required command arguments are in angle brackets (< >).
- Optional command arguments are in square brackets ([]).
- Arguments for which you supply values are in *italics*.
- Optional arguments are grouped and separated by vertical bars (|).

Examples use these conventions:

- Terminal sessions and information the system displays are in `screen font`.
- Information you enter is in **boldface screen font**.
- Nonprinting characters, such as passwords, are in angle brackets (< >).
- Default responses to system prompts are in square brackets ([]).

Note Means *reader take note*. Notes contain helpful suggestions or references to materials not contained in this manual.



Caution Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Cisco Connection Online

Cisco Connection Online (CCO) is Cisco Systems' primary, real-time support channel. Maintenance customers and partners can self-register on CCO to obtain additional information and services.

Available 24 hours a day, 7 days a week, CCO provides a wealth of standard and value-added services to Cisco's customers and business partners. CCO services include product information, product documentation, software updates, release notes, technical tips, the Bug Navigator, configuration notes, brochures, descriptions of service offerings, and download access to public and authorized files.

CCO serves a wide variety of users through two interfaces that are updated and enhanced simultaneously: a character-based version and a multimedia version that resides on the World Wide Web (WWW). The character-based CCO supports Zmodem, Kermit, Xmodem, FTP, and Internet e-mail, and it is excellent for quick access to information over lower bandwidths. The WWW version of CCO provides richly formatted documents with photographs, figures, graphics, and video, as well as hyperlinks to related information.

You can access CCO in the following ways:

- WWW: <http://www.cisco.com>
- WWW: <http://www-europe.cisco.com>
- WWW: <http://www-china.cisco.com>
- Telnet: [cco.cisco.com](telnet://cco.cisco.com)
- Modem: From North America, 408 526-8070; from Europe, 33 1 64 46 40 82. Use the following terminal settings: VT100 emulation; databits: 8; parity: none; stop bits: 1; and connection rates up to 28.8 kbps.

For a copy of CCO's Frequently Asked Questions (FAQ), contact cco-help@cisco.com. For additional information, contact cco-team@cisco.com.

Note If you are a network administrator and need personal technical assistance with a Cisco product that is under warranty or covered by a maintenance contract, contact Cisco's Technical Assistance Center (TAC) at 800 553-2447, 408 526-7209, or tac@cisco.com. To obtain general information about Cisco Systems, Cisco products, or upgrades, contact 800 553-6387, 408 526-7208, or cs-rep@cisco.com.

SuperUser Commands

Introduction

This chapter contains detailed descriptions of the Cisco WAN switching software SuperUser commands for Release 9.2. The Cisco WAN switching software SuperUser command descriptions appear in alphabetical order. You need user privilege level 0 (zero) to use these commands.



Caution These commands are intended to be restricted to Cisco personnel and other qualified users, such as system administrators. Do not distribute this information to casual users because using some super user commands improperly could lead to system malfunction or complete failure.

Also note that once you log into a node as SuperUser (user privilege level 0), you will have access to all the SuperUser commands in this guide throughout the entire session until you log off that node.

General Information

Note To use the SuperUser commands (privilege level 0), you need a different login and password than when you use commands with privilege levels 1–6.

Because the privilege level for all super user commands is 0, the privilege level does not appear in the command definition.

Table 1-1 lists the Cisco WAN switch software level 0 (SuperUser) commands in alphabetical order. The table also lists the nodes on which each command is available and whether you can include the command in a job. To access these commands, type in **SuperUser** at the login prompt. Enter the super user password and the password prompt. To exit a command at any point, press the Delete key.

The screen examples in this chapter are based on a network containing an IGX or BPX or any combination of these nodes. For detailed descriptions of commands requiring a user-privilege level in the range 1–6, refer to the *Cisco WAN Switching Command Reference*.

Note Some SuperUser commands rarely are applicable, while misusing other SuperUser commands can cause serious problems in the network. For these commands, the descriptions contain an advisory for you to call the Cisco Technical Assistance Center (TAC) before you proceed. The number in the United States is 800 553-2447. For international access, use 1-408 526-4000.

Descriptions for Statistics CLI Commands

This section briefly describes the statistics CLI (command line interface) descriptions that are provided for various statistics commands (for example, **cnfchstats**, **cnflnstats**, **cnfportstats**, and so on.) Each statistics command displays various field names on the CLI. Note that the descriptions provided in the various statistics description tables may vary from the actual description of the field name as it appears on the switch software command line interface statistics screens.

Only BXM card statistics descriptions are provided; however, note that many of the UXM card statistics are similar or identical to those used for the BXM card. This means that in many cases, the description may also apply to the UXM card. Note also that the statistics descriptions provided in the various tables may not always map directly to the CLI field names, but in many cases, they provide a description of the statistic that is sent from the card firmware to the switch software CLI (through ComBus messages from the firmware to switch software).

Note The BXM ComBus interface is similar in many places to the ComBus interface for previously-released cards (ASI and BNI cards). Note that there are small differences in the ComBus definition for other cards. In some cases the object ID for the BXM card statistic differs from its ASI or BNI counterpart.

Statistics Command Descriptions

There are several tables provided, which contain ComBus messages, along with descriptions of how each message is used by the switch software. Note that in many cases, the ComBus message description provides a description of the statistics field name on the CLI screen display, on **dspchstats**, **dspchstathist**, and so on.

The tables have the following columns:

- **ID**—Indicates the object ID number.
- **Object Name**—Provides a description of the object.
- **Range/Values**—Indicates the legal values that the object can take.
- **Default**—Indicates the default value used by the firmware if this object is not sent. Special defaults: s
 - R—Indicates that there is no default and the object must be supplied each time.
 - RI—Indicates that the object is required only at initial setup time.
 - NA—Not Applicable; Indicates that the object is “get-only” so a default value does not apply in this case.
 - NC—No Change.
 - LR—Line Rate (E3, DS3, OC-3, OC-12).
- **Description**—Indicates the use of the object.

Functional Description of Channel Statistics

This operation provides a way for the software to collect channel statistics. The number of channels statistics that can be collected is limited and configurable by software. Note that all of these statistics are not available on the Monarch firmware at one time. For the statistics that are not configured, a value of zero will be returned during the “get” operation.

In the description column, the numbers in brackets indicate how many stats-per-connection need to be configured on the card for the specific statistic to be available over the ComBus interface. [ALL] indicates the statistic is available regardless of the number of configured stats-per-connection. If the number inside the []s is preceded by “A:”, that means that the statistic is available when primary statistics are requested for the connection. If the number inside the []s is preceded by “B:”, that means the statistic is available when secondary statistics are requested for the connection.

Table 1-1 List of SuperUser Commands

Command	Description	Job	IGX	BPX
burnfwrev	Burn Firmware Revision	Yes	X	X
clrcderrs	Clear Detailed Card Errors Log	Yes	X	X
clrcnf	Clear Configuration Memory	No	X	X
clrfpevt	Clear FastPAD Event Reporting	No	X	
cnfabrparm	Configure ABR Parameters	Yes	X	
cnfadcom	Configure Access Device Communications Parameters	Yes	X	
cnfbusbw	Configure UBU Bus Bandwidth Parameters	Yes	X	
cnfcdparm	Configure Card Parameters	No	X	X
cnfcdpparm	Configure CDP Card Parameters	No	X	X
cnfcftst	Configure Communications Fail Test Pattern	No	X	X
cnfchstats	Configure Channel Statistics Collection	Yes	X	X
cnfchts	Configure Channel Timestamp	Yes	X	X
cnfcmparm	Configure Connection Management Parameters	Yes	X	X
cnfdiagparm	Configure Diagnostic Test Parameters	No	X	X
cnfdlparm	Configure Download Parameters	No	X	X
cnfecparm	Configure Echo Cancellor Parameters	Yes	X	
cnffpcom	Configure FastPAD Communication Parameter	Yes	X	
cnffpcon	Configure FastPAD Connection Parameters	Yes	X	
cnffpdelay	Configure FastPAD Sc/Mc Parameters	No	X	
cnffpdpvc	Configure FastPAD bc/bc pvc Parameters	No	X	
cnffpmap	Configure FastPAD Map Table	Yes	X	
cnffpport	Configure FastPAD Port Parameters	No	X	
cnffpsys	Configure FastPAD System Parameters	No	X	
cnffstparm	Configure Frame Relay Optimized Bandwidth Management Node Parameters	No	X	X
cnflan	Configure LAN	No	X	X
cnflnparm	Configure ATM Line Parameters	No	X (UXM)	X
cnflnsigparm	Configure Line Signaling Parameters	No	X	
cnflnstats	Configure Line Statistics Collection	Yes	X	X
cnfmxbutil	Configure Muxbus Utilization	No	X	
cnfnodeparm	Configure Node Parameters	No	X	X
cnfnwip	Configure Network IP Address	No	X	X
cnfphyslnstats	Configure Physical Line Statistics Collection	Yes	X (UXM)	

Table 1-1 List of SuperUser Commands (Continued)

Command	Description	Job	IGX	BPX
cnfportstats	Configure FR Port Statistics Collection	Yes	X	
cnfrobparm	Configure Robust Alarms Parameters	No	X	X
cnfslotstats	Configure Slot Statistics Collection	Yes		X
cnftcpparm	Configure TCP Parameters	Yes	X	X
cnftermfunc	Configure Terminal Port Parameters	Yes	X	X
cnftlparm	Configure Trunk-based Loading Parameters	No	X	X
cnftrafficgen	Configure Traffic Generation Test Parameters	No	X	X
cnftrkparm	Configure Trunk Parameters	No	X	X
cnftrkstats	Configure Trunk Statistics Collection	Yes	X	X
cnfstparm	Configure Card Self Test Parameters	Yes	X	X
cnfuiparm	Configure User Interface Parameters	No	X	X
cnfuvchparm	Configure UVM Channel Parameters	No	X	
cnfvchparm	Configure Voice Channel Parameters	Yes	X	
cpyfpmap	Copy FastPAD Map Table	Yes	X	
dchst	Display CDP Channel Status	No	X	
diagbus	Diagnose Failed Bus	No	X	
drtop	Display Route Op Table	No	X	X
dspasich	Display ASI Channel Routing Entry	No		X
dspbuses	Display Bus Status	No	X	X
dspederrs	Display Card Errors	No	X	X
dspcftst	Display Communications Fail Test Pattern	No	X	X
dspchan	Display Channel Configuration	No	X	
dspchoid	Display UXM Connection Operation Routing	Yes	X (UXM)	
dspchstatcnf	Display Statistics Enabled for a Channel	No	X	
dspchstathist	Display Statistics Data for a Channel	No	X	
dspclnstatcnf	Display Statistics Enabled for a Circuit Line	No	X	
dspclnstathist	Display Statistics History for a Circuit Line	No	X	X
dspcnf	Display Config. Save/Restore Status	No	X	X
dspdnd	Display Download	No	X	X
dspdutl	Display Data Channel Utilization	No	X	
dspecparm	Display Echo Cancellor Parameters	No	X	
dspfpdsc	Display FastPAD Card Descriptor Parameters	No	X	
dspfwrev	Display Firmware Revision	No	X	X
dsplnstatcnf	Display Statistics Enabled for a Line	No	X	X
dsplnstathist	Display Statistics Data for a Line	No	X	X
dspphyslnstatcnf	Display Statistics Enabled for a Physical Line on a UXM	No	X	
dspphyslnstathist	Display Statistics History for a Physical Line on a UXM	No	X	
dspplnmcons	Display Packet Line Connection Counts by Master Node	No	X	

Table 1-1 List of SuperUser Commands (Continued)

Command	Description	Job	IGX	BPX
dspportstatcnf	Display Statistics Enabled for a FR Port	No	X	
dspportstathist	Display Statistics History for a FR Port	No	X	
dsprevs	Display Revisions	No	X	X
dsprobst	Display Robust Statistics	No	X	X
dsprrst	Display Reroute Statistics	No	X	X
dspsig	Display Signaling	No	X	
dspslot	Display Slot	No	X	X
dspslotstatcnf	Display Statistics Enabled for a Slot	No	X	X
dspslotstathist	Display Statistics History for a Slot	No	X	X
dspstatfiles	Display TFTP Statistics File Information	No	X	X
dspstatmem	Display Statistics Memory Use	No	X	X
dsptcparm	Display TCP Parameters	No	X	X
dsprkcons	Display Trunk Connection Counts	No	X	X
dsprkmcons	Display Trunk Connection Counts by Master Node	No	X	X
dsprkstatcnf	Display Statistics Enabled for a Trunk	No	X	X
dsprkstathist	Display Statistics History for a Trunk	No	X	X
dsputil	Display Voice Connection Utilization	No	X	
getfwrev	Get Firmware Revision	Yes	X	X
killuser	Kill User	No	X	X
loadcnf	Load Configuration	Yes	X	X
loadrev	Load Revision	No	X	X
prtcderrs	Print Card Errors	Yes	X	X
rrtcon	Reroute Connection	Yes	X	X
rststats	Reset Statistics Collection Time	Yes	X	X
runcnf	Run Configuration	No	X	X
runrev	Run Revision	No	X	X
savecnf	Save Configuration	Yes	X	
setfpevt	Set FastPAD Events	No	X	
tststats	Test Statistics	No	X	X
tstubus	Test UBU Allocation Spacing	Yes		
upggrp	Upgrade Groups	No	X	X

burnfwrev (Burn Firmware Image into Card(s))

The **burnfwrev** command burns a new firmware image into a specific card.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

dspfwrev, **getfwrev**

Syntax

burnfwrev <image name> <slot number>

- | | |
|---------------|--|
| <image name> | Specifies the name of the firmware image to burn. You should typically enter image names in all capital letters; also, image names are case-sensitive. |
| <slot number> | Specifies the shelf slot where the card to burn is located. Specifying slot 0 will burn all cards of the appropriate type at the local node. |

Function

This command is used to burn a firmware image into the memory of a specific card. Before you use **burnfwrev**, the firmware image must already reside in the controller card's memory. (Use **getfwrev** to load the image to the controller.)

A few seconds after you enter **burnfwrev**, the system displays a screen similar to that shown in Figure 1-1, then the Burn Address column starts to indicate the addresses that are being “burned.” When **burnfwrev** finishes, the status changes to “Complete.”

After all cards at a node have been updated with **burnfwrev**, enter the following to clear the firmware image from the controller card's buffer area:

```
getfwrev 0.0 node_name
```

Use the **dspfwrev** command to display the firmware image status on the controller card at any time after **burnfwrev** has finished.

At the super user level (0), you can use **burnfwrev** only to change the *revision level* of a card's firmware. If the firmware revision would result in a new *model number* for the card, only a user with a higher privilege level can burn the firmware image. In this case, you would have to call the TAC to execute the command.

Figure 1-1 burnfwrev—Burn Firmware Revision into Card

gamma TRM SuperUser Rev: 9.2 Aug. 17 1998 14:28 PDT

Firmware Size Status
F.D.A 256 K Burning into slot 19 (6 lives)

File	Address	Length	CRC	Burn Address
0	800000	10	E986E939	
1	800800	410	22996DDA	
2	801000	2D40	B212147F	
3	805E60	480	85CB29EA	
4	80A630	70	57A938AE	
5	80A6B0	20	4B9E8DDC	
6	810000	10000	338E45F6	
7	820000	4400	95990113	
8	835000	1810	875771B2	
9	8368A0	15D0	4C597B97	

This Command: burnfwrev

Continue?

clrcderrs (Clear Detailed Card Errors)

The **clrcderrs** command clears the history of card failures (errors) associated with the specified slot.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

dspcderrs, prtcderrs

Syntax

clrcderrs <slot number | *>

<slot number | *> Specifies the slot number to clear. A "*" can be entered to clear all cards.

Function

This command clears the history of card failures associated with the specified slot. When you enter this command system responds with Slot Number or *. After you enter the command, the system asks you to confirm that it is OK to clear this data.

For example, to clear the data from the FRM card in slot 3, enter the command illustrated in Figure 1-2. This screen also illustrates the card's stored data.

Figure 1-2 clrcderrs—Clear Card Errors (before confirmation)

```
pubsigx1      TN      SuperUser      IGX 32      9.2      Aug. 5 1998 18:48 GMT

FRM in Slot 3 : 172240 Rev ESJ      Failures Cleared: Date/Time Not Set
----- Records Cleared: Date/Time Not Set
Self Test      Threshold Counter: 0      Threshold Limit: 300
Total Pass: 495      Total Fail: 0      Total Abort: 2
First Pass: Date/Time Not Set      Last Pass: July 29 1998 19:36:48 GMT
First Fail:      Last Fail:

Background Test      Threshold Counter: 0      Threshold Limit: 300
Total Pass: 29849      Total Fail: 0      Total Abort: 0
First Pass: Date/Time Not Set      Last Pass: Aug. 5 1998 18:46:34 GMT
First Fail:      Last Fail:

Hardware Error      Total Events: 0      Threshold Counter: 0
First Event:      Last Event:

This Command: clrcderrs 3

OK to clear (y/n)?
```

After replying 'y' (yes) to the confirmation prompt, the screen appears as in Figure 1-3.

Figure 1-3 clrcderrs—Clear Card Errors (after confirmation)

```
pubsigx1      TN      SuperUser      IGX 32      9.2      Aug. 5 1998  18:55 GMT

FRM in Slot 3 : 172240 Rev ESJ      Failures Cleared: Date/Time Not Set
----- Records Cleared: Aug. 5 1998  18:55:02 GMT
Self Test      Threshold Counter: 0      Threshold Limit: 300
Total Pass: 0      Total Fail: 0      Total Abort: 0
First Pass:      Last Pass:
First Fail:      Last Fail:

Background Test      Threshold Counter: 0      Threshold Limit: 300
Total Pass: 0      Total Fail: 0      Total Abort: 0
First Pass:      Last Pass:
First Fail:      Last Fail:

Hardware Error      Total Events: 0      Threshold Counter: 0
First Event:      Last Event:

Last Command: clrcderrs 3

Next Command:
```

clrcnf (Clear Configuration Memory)

The **clrcnf** command clears the configuration memory at the current node and resets the node.

Attributes

Jobs: No Log: No Lock: Yes Node Type: IGX, BPX

Associated Commands

loadcnf, **runcnf**, **savecnf**

Syntax

clrcnf

Function

The **clrcnf** command erases most network configuration data. This configuration data includes connections, trunks, circuit lines, and so on, for the local node. You may need to use the **clrcnf** command when you upgrade the network with a new software release or when you move a node. A warning and a confirmation prompt appear before the command executes. Figure 1-4 illustrates a typical screen.

This command should be used only on a node that has not yet been placed in service or when the network configuration has been previously saved so it can be quickly reloaded. The configuration can be saved in one of several ways:

- On a Cisco WAN Manager terminal using the **savecnf** command. The node is then reloaded using the **loadcnf** command.
- On a standby controller card. Before entering the **clrcnf** command, remove the standby controller from its slot. The configuration data will be maintained in BRAM even though the power has been removed from the card.



Caution Use **clrcnf** with extreme caution. Typically, you should use **clrcnf** only if the Cisco TAC has instructed you to do so. This command can make the node unreachable to the network.

Figure 1-4 **clrcnf—Clear Node Configuration**

```
*** Warning: ***
This command clears the configuration memory and resets the Node.
```

```
This Command: clrcnf
```

```
Are you sure (y/n)?
```

clrfpevt (Clear FastPAD Event Reporting)

The **clrfpevt** command disables the reporting of FastPAD events.

Attributes

Jobs: No Log: Yes Lock: No Node Type: IGX

Associated Commands

setfpevt, **dsplog**

Syntax

```
clrfpevt <FastPAD name> | <slot.port>
```

Function

The reason for executing **clrfpevt** is to prevent the large number of logged events that accumulate when certain user-controlled disruptions occur. Without suspension of event-logging, the number of events caused by the disruption can cause the FastPAD to become unreachable. Remember to resume event logging by using the **setfpevt** command. Examples of these events are:

- FTM Y-cable switchover
- NPM/NPC switchover
- Adding a connection by using the **addfrcons** command
- Resetting the FastPAD (power cycling or by the **resetfp** command)

Example

```
clrfpevt 9.3
```

Description

The example command halts event logging for the FastPAD connected to port 9.3.

Note No screen appears when **clrfpevt** executes. The example shows the **dsplog** output after a sequence of **clrfpevt** then **setfpevt**. Earlier FastPAD events appear near the bottom of the screen.

Figure 1-5 clrfpevt—Clear FastPAD Event Reporting

```
sw152          TN      SuperUser      IGX 8420      9.2 Nov. 26 1998 15:14 GMT

Most recent log entries (most recent at top)
Class  Description                                     Date      Time
Info   FP fp93 event: 9.3.B grp:0-0 code:12         11/26/97 15:13:28
Info   FP fp93 event: 9.3.B grp:0-0 code:1           11/26/97 15:13:28
Info   User SuperUser logged in (Local)              11/26/97 14:28:40
Info   User SuperUser logged in (Local)              11/26/97 12:56:49
Info   Invalid Login Attempt via LAN Port (Local)     11/26/97 12:56:46
Info   User SuperUser logged in (Local)              11/26/97 11:31:51
Info   AD 9.2.3 dallas COM OK (Kickoff)              11/26/97 11:23:17
Info   AD 9.2.3 dallas Unreachable                   11/26/97 10:59:32
Info   AD 9.2.3 dallas COM OK (Kickoff)              11/26/97 10:56:54
Info   FP fp93 event: 9.3.B grp:0-0 code:12         11/25/97 18:16:45
Info   FP fp93 event: 9.3.B grp:0-0 code:1           11/25/97 18:16:45

Last Command: dsplog

Next Command:
```

cnfabrparm (Configure Assigned Bit Rate Queue Parameters)

The **cnfabrparm** command configures parameters for the ABR (Assigned Bit Rate) queue on all ports on the selected UXM.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX

Associated Commands

cnfportq, dspportq, cnfport, dspport

Syntax

cnfabrparm <slot> <CI_control> <ER_control>

- | | |
|--------------|--|
| <slot> | Specifies the slot number of the UXM. |
| <CI_control> | Enables or disables Egress/Ingress Congestion Information control. |
| <ER_control> | Enables or disables ABR RM cell Explicit Rate stamping. |

Function

The **cnfabrparm** command lets you toggle the Egress/Ingress Congestion Information control and/or the ABR RM cell Explicit Rate stamping parameters on and off. All ports on the UXM in the selected slot are dynamically reconfigured according to the new parameters.

Example

```
sw205          TN      SuperUser      IGX 8420      9.2      Jan. 27 1998 04:50 GMT
```

```
ABR Configuration for UXM in slot 5
```

```
CI Control      : N
```

```
Egress ER Stamping : N
```

```
This Command: cnfabrparm 5
```


cnfbusbw (Configure UXM Card Bus Bandwidth)

The **cnfbusbw** command configures the amount of bandwidth allocated on the bus for a UXM card.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX

Associated Commands

dspbusbw (a standard user command)

Syntax

cnfbusbw <slot>

<slot>	Specifies the slot number of the UXM.
<bw>	Specifies the amount of bandwidth to be allocated in UBUs (which the system converts to either FastPackets per second or cells per second. The maximum rate you can set is 288000 cells per second, which is 72 UBUs. Each UBU is the equivalent of 4000 cells per second.

Function

The **cnfbusbw** command lets you configure the amount of bandwidth allocated on the bus for the selected UXM. The default amount of bus bandwidth allocated depends on the connection type you are adding. 77 Mbps (1/2 OC-3 rate) of bus bandwidth is allocated to an OC-3 port card when the first line is upped. For the T3/E3 line, 44/34 Mbps (T3/E3 rate) is allocated as default bus bandwidth. For a T1/E1 line, the amount of bandwidth allocated will be enough for all T1/E1 lines supported on the card. After the default bus bandwidth is allocated, the system will not allocate any more bus bandwidth to the card when you activate more lines, so you must manually allocate the bus bandwidth to the card using the **cnfbusbw** command. Table 1-2 lists the **cnfbusbw** screen information. All ports on the UXM in the selected slot are dynamically reconfigured according to the new parameters.

Table 1-2 cnfbusbw—Screen Information

Display	Description
Minimum Required Bandwidth	Minimum bandwidth in FastPackets per second and cells per second required for all connections currently configured on this card. This is calculated by UXM firmware as connections are added.
Maximum Port Bandwidth	Total bandwidth of all active trunks/ports on this card in FastPackets per second, cells per second and UBUs.
Average Bandwidth and Peak Used Bandwidth	Statistics counters maintained by UXM firmware. These statistic counters display FastPackets per second, cells per second and UBUs. Use this information when calculating the amount of Bus Bandwidth to be allocated. These counters will be cleared when the UXM card is reset.

Table 1-2 cnfbusbw—Screen Information (Continued)

Display	Description
Last Updated time	Shows the time when the counters were last updated. This will be the current time if you answered yes to the <code>Get updated bandwidth info from card (Y/N)?</code> prompt or entered the command with the <code>u</code> parameter.
Allocated Bandwidth	The bandwidth allocated for this card using the <code>cnfbusbw</code> command. Allocated bandwidth is specified in UBU units and converted to either FastPackets per second or cells per second by the system.

Figure 1-6 cnfbusbw (Configure UXM Card Bus Bandwidth)

```

swl97          TN      SuperUser      IGX 8420      9.2 Apr. 7 1998 03:15 GMT

Bus Bandwidth Usage for UXM card in slot 5  Last Updated on 04/07/98 03:15:42

          FPkts/sec  Cells/sec  UBUs
Minimum Req'd Bandwidth:      0      100100    26
Average Used Bandwidth:       0           0        0
Peak Used Bandwidth:          0           0        0
Maximum Port Bandwidth:      -      288000    72

Allocated Bandwidth:
  (Cell Only):                 -      4000
  (Cell+Fpkt):                 2000    3000
  (Fpkts / 2 + Cells) <=      4000

Reserved Bandwidth:           -      4000    1

This Command: cnfbusbw 5

Allocated UBU count:

```

cnfcdparm

Use the **cnfcdparm** command to configure the channel statistic level on the BXM/UXM card. This command supports the multilevel channel statistics feature, which lets you configure and display additional levels of statistics on a BXM or UXM card.

Configuration of the channel statistic level is a slot-based parameter. For example, if slot 5 is configured to support level 3 channel statistics, all connections on the card in slot 5 will be set to level 3 statistics.

The multilevel Channel Statistics feature is supported on the BPX and IGX platforms, for BXM and UXM cards. (Refer to release notes for card firmware release requirements.) The Multilevel Channel Statistics feature requires switch software to collect, display and propagate to Cisco WAN Manager the various statistics types. The channel statistic types vary in number and type based upon the level of support provided by the BXM and UXM cards.

Apart from the **cnfcdparm** command which you use to configure the channel statistic level on the BXM/UXM cards, you configure and use the BXM/UXM channel statistics similarly as in previous releases. You use the following commands to configure BXM and UXM card statistics:

- Summary Statistics Commands: **dspchstats**, **clrchstats**
- Interval Statistics Commands: **dspchstathist**, **dspchstatcnf**, **cnfchanstats** (statistics information collected by these commands is sent to Cisco WAN Manager).
- Line and Trunk Management Commands: **upln**, **uptrk**

Description of Summary and Interval Statistics

Summary statistics are also referred to as real-time statistics or real-time measurements. These statistics show their values updating in real time, for example, the counter for the number of cells transmitted increment as you are watching. Commands you use to view real-time statistics are **dsprkstats**, **dspportstats**, and **dspchstats**.

Interval statistics is a general name for three specific statistic types: TFTP statistics, AUTO statistics, and USER statistics. They are also commonly referred to as detailed statistics or history statistics. Interval statistics show historical information, for example, the number of cells transmitted in the previous 30 minutes.

Commands you use to view the enabled interval statistics are: **dspchstatcnf**, **dsplnstatcnf**, **dspportstatcnf**, **dsprkstatcnf**, and **dspslotstatcnf**.

Commands you use to view a single enabled interval statistic in detail are: **dspchstathist**, **dsplnstathist**, **dspporstathist**, and **dsprkstathist**.

You can enable the TFTP statistics by using the debug command (**cnfstatparms** or from the Cisco WAN Manager Statistics Collection Manager (SCM). (Note that you need to have either Service or SuperUser level access to use debug commands.) When they are enabled, all objects that can support an enabled statistic will attempt to do so. For example, if enabling trunk statistic #5, all trunks that can support trunk statistic #5 will attempt to enable it. These statistics are generally used for billing, and monitoring the network's performance.

AUTO statistics, also referred to as IGX or BPX feature statistics, are used for the switches' statistical alarming feature. As their name implies, these statistics are automatically allocated when certain statistical entities are upped or added. Auto stat entries on the IGX are ADPCM, ADPNO, PCM, Transparent and Data connections, as well as trunks and lines. Auto statistic entities on the BPX are trunks, lines, and cards.

USER statistics are statistics enabled through the following commands: **cnfrkstats**, **cnflnstats**, **cnfportstats**, **cnfchstats** and **cnfslotstats**. When these statistics are enabled, they are enabled on a specified entity; for example, enabled trunk statistic #5 on trunk 4.2. User statistics are mainly used for debugging.

Multilevel Channel Statistics Support

Previous to Release 9.2, switch software only supported a subset of channel statistics available on the BXM or UXM cards, sometimes referred to as “level 1 statistics.” Because the BXM and UXM cards can potentially support a larger number of channel statistics, additional levels (levels 2 and 3) of statistics are now supported in Release 9.2. The number of statistics available are based upon the statistics level programmed on the BXM or UXM card.

Release 9.2 of switch software and Cisco WAN Manager support additional channel statistics on the BXM/UXM cards. These statistics are available as summary and interval statistics. (The “interval” commands **dspchstathist**, **dspchstatcnf**, and **cnfchanstats** commands are available through the switch software CLI. Additionally, statistics information collected by the interval commands is also sent to Cisco WAN Manager.) The set of Real Time Counters statistics supported are the same as previous to Release 9.2.

Table 1-3 lists the channel statistics available on the BXM and UXM cards. The four different levels supported are shown, along with the statistics field description as it appears on the related statistics screens (**dspchstats**, **cnfcdparm**, **clrchstats**, **dspchstathist**, **dspchstatcnf**, **cnfchanstats**). Refer to Table 1-6 for descriptions of the channel statistics listed in Table 1-3.

Table 1-3 Channel Statistics Available on BXM and UXM Cards

Level 0	Level 1	Level 2	Level 3
No Stats	Rx Cells from port	All level 1	All Level 2
	RX EOF's from port	TX EFCI 1 to Port	RX EFCI 1 from Port
	RX cells to NW	RX CLP0 to NW	RX EFCI 0 from Port
	Rx CPL1 from port	RX CLP1 to NW	TX EFCI 0 from NW
	RX cells Non-cmplt	TX EFCI 0 to Port	TX EFCI 1 from NW
	RX CLP0 Non-cmplt	RX EFCI 0 to NW	
	RX CLP1 Non-cmplt	RX EFCI 1 to NW	OAM from Port
	Ingress VC Q depth	TX EOFs to Port	RM Cells from Port
	TX cells from NW		RM From NW
	TX CLP1 to Port	RX EOF CNG DSC	OAM From NW
	TX Cells to Port		RM Cells to Port
	RX CLP0 Cng Dscd		Rx EFCI 0 Cng Dsc
	RX CLP1 Cng Dscd		Rx EFCI 1 Cng Dsc
	RX CLP0 from Port		Rx OAM Cng Dsc
	TX CLP0 Cells to Port		Rx RM Cng Dsc
	TX CLP0 from NW		Rx FRM to NW
	TX CLP1 from NW		Rx BRM/Fst to NW
	Ingress VSVD ACR		Tx EFCI 0 Cng Dsc
	Egress VSVD ACR		Tx EFCI 1 Cng Dsc

Table 1-3 Channel Statistics Available on BXM and UXM Cards (Continued)

Level 0	Level 1	Level 2	Level 3
	Egress VC Q Depth		Tx RM Cng Dsc
			Tx OAM Cng Dsc
	*TX CLP 0 Dscd		
	*TX CLP 1 Dscd		
	*TX CLP0+1 Dscd		
	*RX CLP0+1 from prt		
	*OAM State		
	* indicates summary stats only		

The BXM and UXM cards can be configured for multilevel channel statistics collection. You configure the channel statistic levels by using the **cnfcdparm** command. You can configure the channel statistics level only on a standby card. If you attempt to execute the **cnfcdparm** command on an active controller card, you will get a warning telling you that you cannot use the **cnfcdparm** on an active card.

The **cnfcdparm** command allows you to set the statistic level on a UXM or BXM card. However, **cnfcdparm** command will not allow you to change the statistics level if the card is active. The switch software detects the current channel statistics level available on the UXM or BXM card. Also, switch software performs the following card mismatch verification:

- When a card is inserted, if the channel statistic level decreases from the entry in the logical card database, the card will mismatch.
- When a card is inserted, if the channel statistic level increases from the entry in the Logical Card database, the card will not mismatch. The logical card database will NOT be updated with the increased channel statistic level value, and you will only have available the number of statistics described on the primary card.
- During the Y-cable mismatch verification, if the secondary card has a smaller channel statistic level, then the primary card (logical card) and the secondary card will mismatch.
- During the Y-cable mismatch verification, if the channel statistic level is larger on the secondary card, the card will not mismatch. The Y-cable will continue to operate based on the number of statistics available on the primary/logical card.

UXM/BXM multilevel Channel Statistics Feature

The multilevel Channel Statistics feature supports the following functions in card management, channel statistics, and Cisco WAN Manager:

Card Management

- Recognizing card support for new feature
- Support for reconfiguration of channel statistics levels
- Support for y-redundant configuration
- Mismatch checking
- Support for upgrade of new feature on current configurations

Channel Statistics

- Support for channel statistics on cards that do not support multilevel statistics
- Support for port channel statistics on cards that support multilevel statistics
- Support for trunk channel statistics on cards that support multilevel statistics

Cisco WAN Manager

- Cisco WAN Manager will be informed about changes in card's channel statistics level
- Cisco WAN Manager will be informed about enabled channel statistics on a statistics level basis
- Correct TFTP channel statistics are enabled after an upgrade to multilevel statistics

Cisco WAN Manager

Cisco WAN Manager supports the Multilevel Channel Statistics as provided by the BXM and UXM cards.

Channel Statistics Collection and Display

The Multilevel Channel statistics are similar to the statistics supported on the current BXM and UXM cards. These channel statistics are accumulated in a historical format using the same collection technique as the current channel statistics. You configure the interval statistics by using the **cnfchstats** command, and display them by using the **dspchstathist** command. In addition, you can get summary statistics by using the **dspchstats** command. You display the additional channel statistics screens by either pressing Return or “y” for yes, depending on whether you are on a BPX or IGX node.

The actual number of statistics available is based on the channel statistics level you configure by using the **cnfcdparm** command.

You use the following CLI commands to configure and display channel statistics:

- **cnfchstats**
- **dspchstatcnf**
- **dspchstathist**
- **dspchstats**

Memory Requirements

Additional memory is required to support channel summary statistics on the BPX and IGX platforms.

BPX Platform

132,000 bytes = (33 new stats) * (1000 summary stat entries) * (4 bytes per stat entry)

IGX Platform

112,000 bytes = (8 new stats) * (3500 summary stat entries) * (4 bytes per stat entry)

Table 1-4 list the current controller card memory configurable parameters, and Table 1-5 lists the BPX polling intervals and number of connections supported.

Table 1-4 Maximum Statistics Memory per Controller Card

Control Card	TFTP/User Memory
BCC 32	610K
BCC 64	12.7M
NPM 32	2.0M
NPM 64	12.7M

Table 1-5 BPX Polling Interval

Connections Supported	Polling Interval
1-3999 conns	5 minutes
4000-7999 conns	10 minutes
9001-12,000 conns	15 minutes

Table 1-6 lists the BXM/UXM channel statistics object name, levels and descriptions provided in Release 9.2.

Note In most cases, the statistic's object name is similar or identical to the statistic's field name as it appears at the CLI.

Table 1-6 BXM/UXM Channel Statistics Names, Levels, and Descriptions

Object ID	Object Name	Level	Range/Values	Description
05	Rx Cells From Port	1	0 - $2^{32}-1$	Number of cells received at the ingress of the connection. [A:ALL, B:ALL] (Note: This count is retrieved from the RCMP chip.)
06	Rx EOFs From Port	1	0 - $2^{32}-1$	Number of EOFs received at the ingress of the connection. [A:ALL, B:12, B:28]
07	Rx Cells to Backplane	1	0 - $2^{32}-1$	Number of cells rx'd at the ingress that were sent to the backplane. [A:ALL, B:ALL]
08	Rx CLP=1 Cells From Port	1	0 - $2^{32}-1$	Number of cells received at the port with CLP=1. [A:ALL, B:ALL] (Note: This count is retrieved from the RCMP chip.)
09-0B	RESERVED			
0C	Rx EFCI=1 Cells From Port	3	0 - $2^{32}-1$	Number of cells received at the port with EFCI=1. [A:28, B:28]
0D	RESERVED			

Table 1-6 BXM/UXM Channel Statistics Names, Levels, and Descriptions (Continued)

Object ID	Object Name	Level	Range/Values	Description
0E	Non-Compliant Cell Count (Total)	1	0 - 2 ³² -1	Number of cells received at the ingress of the connection that were non-compliant discarded. [A:ALL, B:ALL]. (Note: This is a 16-bit counter in the hardware—it can wrap in less than a second depending upon non-compliant rate.)
0F	Non-Compliant Cell Count (CLP 0 Only)	1	0 - 2 ³² -1	Number of CLP 0 cells received at the ingress of the connection that were non-compliant dropped. [A:ALL, B:ALL]. (Note: This is a 16-bit counter in the hardware—it can wrap in less than a second depending upon non-compliant rate.)
10	Non-Compliant Cell Count (CLP 1 Only)	1	0 - 2 ³² -1	Number of CLP 1 cells received at the ingress of the connection that were non-compliant dropped. [A:ALL, B:ALL]. (Note: This is a 16-bit counter in the hardware—it can wrap in less than a second depending upon non-compliant rate.)
11	Ingress VC Q Depth	1	0 - 2 ³² -1	Current Ingress VC Queue Depth. [A:ALL, B:ALL]
12-14	RESERVED			
15	Rx Rsrc Ovfl Discards	N.A.	0 - 2 ³² -1	Number of cells received at the port that were discarded due to Resource Overflow. [B:ALL]
16-1E	RESERVED			
1F	Tx Cells From Network	1	0 - 2 ³² -1	Number of cells received from the backplane. [A:ALL, B:ALL]
20	Tx CLP=1 To Port	1	0 - 2 ³² -1	Number of cells transmitted out the port with CLP=1. [A:ALL, B:12, B:28]
21	Tx EFCI=1 To Port	2	0 - 2 ³² -1	Number of cells transmitted out the port with EFCI=1. [A:12, A:28, B:12, B:28]
22	Tx Cells To Port	1	0 - 2 ³² -1	Number of cells transmitted out the port. [A:ALL, B:ALL]
23-26	RESERVED			
27	Loopback RTD Measurement	N.A.	0 - 2 ³² -1	The Loopback Round Trip Delay measurement in msec. (Still under investigation.) Used to initiate the measurement (Set). The Get is used to get the last measurement known; or zero if now known.
28	Local Ingress Rx State	1	0 : Okay 1 : FERF (aka RDI) 2 : AIS	The OAM connection state. [A:ALL, B:ALL]
29	Rx CLP=0 Congested Discards	1	0 - 2 ³² -1	Number of CLP=0 Cells received from the port and discarded due to congestion (after the policer). [A:ALL, B:None]
2A	Rx CLP=1 Congested Discards	1	0 - 2 ³² -1	Number of CLP=1 Cells received from the port and discarded due to congestion (after the policer). [A:ALL, B:None]

Table 1-6 BXM/UXM Channel Statistics Names, Levels, and Descriptions (Continued)

Object ID	Object Name	Level	Range/Values	Description
2B	Rx CLP=0 Cells From Port	1	0 - $2^{32}-1$	Number of CLP=0 Cells received from the port. [A:ALL, B:ALL] (NOTE: This stat is received from the RCMP.)
2C	Tx CLP=0 Cells To Port	1	0 - $2^{32}-1$	Number of CLP=0 Cells transmitted to the port. [A:ALL, B:12, B:28]
2D	Tx CLP=0 Cells From Backplane	1	0 - $2^{32}-1$	Number of CLP=0 Cells received from the backplane. [A:ALL, B:28]
2E	Rx CLP=0 Cells To Backplane	2	0 - $2^{32}-1$	Number of CLP=0 Cells sent to the backplane. [A:ALL, B:12, B:28]
2F	Tx CLP=1 Cells From Backplane	1	0 - $2^{32}-1$	Number of CLP=1 Cells received from the backplane. [A:ALL, B:28]
30	Rx CLP=1 Cells To Backplane	2	0 - $2^{32}-1$	Number of CLP=1 Cells sent to the backplane. [A:12, A:28, B:12, B:28]
31	Rx EFCI=0 Cells From Port	3	0 - $2^{32}-1$	Number of EFCI=0 Cells received from the port. [A:28, B:28]
32	Tx EFCI=0 Cells To Port	2	0 - $2^{32}-1$	Number of EFCI=0 Cells transmitted to the port. [A:12, A:28, B:12, B:28]
33	Tx EFCI=0 Cells From Backplane	3	0 - $2^{32}-1$	Number of EFCI=0 Cells received from the backplane. [A:28, B:28]
34	Rx EFCI=0 Cells To Backplane	2	0 - $2^{32}-1$	Number of EFCI=0 Cells sent to the backplane. [A:12, A:28, B:12, B:28]
35	Tx EFCI=1 Cells From Backplane	3	0 - $2^{32}-1$	Number of EFCI=1 Cells received from the backplane. [A:28, B:28]
36	Rx EFCI=1 Cells To Backplane	2	0 - $2^{32}-1$	Number of EFCI=1 Cells sent to the backplane. [A:12, A:28, B:12, B:28]
37	Tx EOFs to Port	2	0 - $2^{32}-1$	Number of cells with EOF sent to the port. [A:12, A:28, B:28]
38	Tx EOFs from Backplane	N.A.	0 - $2^{32}-1$	Number of EOFs received at the backplane. [B:12, B:28]
39	Rx EOFs to Backplane	N.A.	0 - $2^{32}-1$	Number of cells with EOF sent to the backplane. [B:28]
3A	Rx Segment OAM	3	0 - $2^{32}-1$	Number of Segment OAM cells received at the port. [A:28, B:28]
3B	Tx Segment OAM	3	0 - $2^{32}-1$	Number of Segment OAM cells received at the egress. [A:28, B:28]
3C	Rx End-to-End OAM	3	0 - $2^{32}-1$	Number of End-to-End OAM cells received at the port. [A:28, B:28]
3D	Tx End-to-End OAM	3	0 - $2^{32}-1$	Number of End-to-End OAM cells received at the egress. [A:28, B:28]
3E	Rx Forward RM Cells	3	0 - $2^{32}-1$	Number of Forward RM cells received at the port. [A:28, B:28]
3F	Tx Forward RM Cells	3	0 - $2^{32}-1$	Number of Forward RM cells received at the backplane. [A:28, B:28]
40	Rx Backward RM Cells	3	0 - $2^{32}-1$	Number of Backward RM cells received at the port. [A:28, B:28]

Table 1-6 BXM/UXM Channel Statistics Names, Levels, and Descriptions (Continued)

Object ID	Object Name	Level	Range/Values	Description
41	Tx Backward RM Cells	3	0 - 2 ³² -1	Number of Backward RM cells received at the backplane. [A:28, B:28]
42	Rx Optimized Bandwidth Management RM Cells	N.A.	0 - 2 ³² -1	Number of Optimized Bandwidth Management RM cells received at the port. [B:28]
43	Tx Optimized Bandwidth Management RM Cells	N.A.	0 - 2 ³² -1	Number of Optimized Bandwidth Management RM cells received at the backplane. [B:28]
44	Rx Undefined RM Cells	N.A.	0 - 2 ³² -1	Number of Undefined RM cells received at the port. [B:28]
45	Tx Undefined RM Cells	N.A.	0 - 2 ³² -1	Number of Undefined RM cells received at the backplane. [B:28]
46	Tx Rsrc Ovfl Discards	N.A.	0 - 2 ³² -1	Number of cells rx'd at the backplane that were discarded due to Resource Overflow. [B:ALL]
47	Rx VI Cell Discards	N.A.	0 - 2 ³² -1	Number of cells received at the port that were discarded because of a full Vi. [B:12, B:28]
48	Tx VI Cell Discards	N.A.	0 - 2 ³² -1	Number of cells rx'ed at the backplane discarded because of a full Vi. [B:12, B:28]
49	Rx QBIN Cell Discards	N.A.	0 - 2 ³² -1	Number of cells rx'd at the port discarded due to QBIN threshold violation. [B:12, B:28]
4A	Tx QBIN Cell Discards	N.A.	0 - 2 ³² -1	Number of cells rx'd at the backplane that were disc. due to QBIN thres. violations. [B:12, B:28]
4B	Rx VC Cell Discards	N.A.	0 - 2 ³² -1	Number of cells rx'd at the port that were disc. due to VC thres. violations. [B:12, B:28]
4C	Tx VC Cell Discards	N.A.	0 - 2 ³² -1	Number of cells rx'd at the backplane that were discarded due to VC threshold violations. [B:ALL]
4D	Rx Cell Filter Discards	N.A.	0 - 2 ³² -1	Number of cells received at the port that were discarded due to cell filter action. [B:12, B:28]
4E	Tx Cell Filter Discards	N.A.	0 - 2 ³² -1	Number of cells rx'd at the backplane that were discarded due to cell filter action. [B:12, B:28]
4F	Rx Illegal Event Cells	N.A.	0 - 2 ³² -1	Number of cells rx'd at the port that caused an reserved event in the hardware. [B:28]
50	Tx Illegal Event Cells	N.A.	0 - 2 ³² -1	Number of cells rx'd at the backplane that caused an reserved event in the H/W. [B:28]
51	Ingress VSVD ACR	1	0 - 2 ³² -1	Ingress VSVD allowed Cell Rate. [A:ALL, B:ALL]
52	Egress VSVD ACR	1	0 - 2 ³² -1	Egress VSVD allowed Cell Rate. [A:ALL, B:ALL]
53	Egress VC Q Depth	1	0 - 2 ³² -1	Current Egress VC Queue Depth. [A:ALL, B:ALL]
54	Bkwd SECB	N.A.	0 - 2 ³² -1	Backward reporting Performance Monitoring Severely Errored Cell Blocks. [A:ALL, B:ALL]

Table 1-6 BXM/UXM Channel Statistics Names, Levels, and Descriptions (Continued)

Object ID	Object Name	Level	Range/Values	Description
55	Bkwd Lost Cells	N.A.	0 - 2 ³² -1	Backward reporting Performance Monitoring Lost Cell Count. [A:ALL, B:ALL]
56	Bkwd Misinserted Cells	N.A.	0 - 2 ³² -1	Backward reporting Performance Monitoring Misinserted Cell Count. [A:ALL, B:ALL]
57	Bkwd BIPV	N.A.	0 - 2 ³² -1	Backward reporting Performance Monitoring Bipolar Violation Count. [A:ALL, B:ALL]
58	Fwd SECB	N.A.	0 - 2 ³² -1	Forward reporting Performance Monitoring Severely Errored Cell Blocks. [A:ALL, B:ALL]
59	Fwd Lost Cells	N.A.	0 - 2 ³² -1	Forward reporting Performance Monitoring Lost Cell Count. [A:ALL, B:ALL]
5A	Fwd Misinserted Cells	N.A.	0 - 2 ³² -1	Forward reporting Performance Monitoring Misinserted Cell Count. [A:ALL, B:ALL]
5B	Fwd BIPV	N.A.	0 - 2 ³² -1	Forward reporting Performance Monitoring Bipolar Violation Count. [A:ALL, B:ALL]
5C-5F	RESERVED			
60	SAR Good PDUs Rcv	?	0 - 2 ³² -1	Number of good PDUs received by the SAR. [A:ALL, B:ALL]
61	SAR Good PDUs Xmt	?	0 - 2 ³² -1	Number of good PDUs transmitted by the SAR. [A:ALL, B:ALL]
62	SAR Rcv PDUs Discarded	?	0 - 2 ³² -1	Number of PDUs discarded on the ingress by the SAR. [A:ALL, B:ALL]
63	SAR Xmt PDUs Discarded	?	0 - 2 ³² -1	Number of PDUs discarded on the egress by the SAR. [A:ALL, B:ALL]
64	SAR Invalid CRC PDUs Rcvd	?	0 - 2 ³² -1	Number of invalid CRC32 PDUs received by the SAR. [A:ALL, B:ALL]
65	SAR Invalid Length PDUs Rcvd	?	0 - 2 ³² -1	Number of invalid-length PDUs received by the SAR. [A:ALL, B:ALL]
66	SAR Short Length Failures	?	0 - 2 ³² -1	Number of short-length failures detected by the SAR. [A:ALL, B:ALL]
67	SAR Long Length Failures	?	0 - 2 ³² -1	Number of long-length failures detected by the SAR. [A:ALL, B:ALL]
	TX FRM to Port	2	0 - 2 ³² -1	
	TX BRM and Fst to Prt	2	0 - 2 ³² -1	
	RX EOF Congestion Discard	2	0 - 2 ³² -1	
	RX EFCI 0 Congestion Discard	3	0 - 2 ³² -1	
	RX EFCI 1 Congestion Discard	3	0 - 2 ³² -1	

Table 1-6 BXM/UXM Channel Statistics Names, Levels, and Descriptions (Continued)

Object ID	Object Name	Level	Range/Values	Description
	RX OAM Congestion Discard	3	0 - 2 ³² -1	
	RX RM Congestion Discard	3	0 - 2 ³² -1	
	RX FRM to Network	3	0 - 2 ³² -1	
	RX BRM and Fst to Network	3	0 - 2 ³² -1	
	TX EFCI 0 Congestion Discard	3	0 - 2 ³² -1	
	TX EFCI 1 Congestion Discard	3	0 - 2 ³² -1	
	TX RM Congestion Discard	3	0 - 2 ³² -1	
	TX OAM Congestion Discard	3	0 - 2 ³² -1	

Multilevel Statistics Supported on UXM Card

The initial release of the UXM firmware supported only four (4) QE per channel statistics. To support these new statistics, however, more QE memory, on a per channel basis, is required. As the statistics level is increased, the number of connections supported by the card may decrease.

Setting the Statistics Level on the UXM Card

Setting the statistics level can only be performed with the UXM in the standby state. See the switch software command **cnfcdparm** for details on how to set the statistics level on the card.

The UXM will retain the last setting and will reboot in that mode. That is, if the statistics were set to 2, the UXM, when reset (reinserted, and so on.), will boot with the statistics level set to 2. However, the lowest setting actually set on the card will be the maximum number of statistics with the maximum number of user connections. That is, the UXM can support 4 ingress and 4 egress QE statistics with 8,000 user connections. This would be the equivalent of the statistics level being set to 1. The cards will accept the full range of statistics levels (0-3). The UXMe (UXM Enhanced card) will support up to statistics level 2 with no reduction in the number of connections. Table 1-7 shows connection counts for the UXM cards when different statistics levels are configured on the card.

Table 1-7 Connection Counts for Various Statistics Levels on UXM

Statistics Level	UXM Conns	UXM FP Conns	UXMe Conns	UXMe FP Conns
0	8126	4000	8126	4000
1 (UXM default)	8126	4000	8126	4000
2 (UXMe default)	4031	4000	8126	4000
3	1983	1983	4031	4000

Levels of Support on UXM Card for Various Statistics

If statistics belonging to a statistics level higher than the level set on the card are requested, the user will receive an error message. The **bold** text refers to statistics collected from the QE. Statistics fall into four categories: User, Oam, Rm, and All. These categories can be further divided into types. User cells are one of four types: Eof0-EFCI0, Eof1-EFCI0, Eof0-EFCI1, and Eof1-EFCI1. OAM cells come in two types: SEg and E2e. RM cells fall into three types: FRm, BRm, and FsRm. CLP0 and CLP1 cells, when tracked, are only distinguished for User cells.

Table 1-8 shows the levels of statistics support that can be configured for the UXM card in Release 9.2.

Table 1-8 Levels of Support that can be Configured for Statistics on UXM Card

Ingress Statistics	Oid	Level	New	Definition
All Cells from port	0x05	All		
All CLP1 cells from port	0x08	All		
All non compliant cells	0x0E	All		
All CLP0 non compliant cells	0x0F	All		
All CLP1 non compliant cells	0x10	All		
VC queue depth	0x11	All		
All CLP0 cells from port	0x2B	All		
VSVD ACR	0x51	All		
EOF=1 from port	0x06	1->		All cells Eof= 1 that arrive at the QE from the port. This includes cells that are discarded due to overflow. Note: for Level 1 this does not include discards due to overflow.
All cells to NW	0x07	1->		Sum of CLP0 and CLP1 cells that arrive at the QE from the port.
CLP0 overflow discards	0x29	1->		All cells with CLP0 that are discarded at the QE due to overflow.
CLP1 overflow discards	0x2A	1->		All cells with CLP1 that are discarded at the QE due to overflow
CLP0 to NW	0x2E	2->	x	All cells with CLP0 which depart from the QE to the NW.
CLP1 to NW	0x30	2->	x	All cells with CLP1 which depart from the QE to the NW.

Table 1-8 Levels of Support that can be Configured for Statistics on UXM Card

Ingress Statistics	Oid	Level	New	Definition
EFCI=0 to NW	0x34	2->	x	All cells with EfcI=0 which depart from the QE to the NW.
EFCI=1 to NW	0x36	2->	x	All cells with EfcI=1 which depart from the QE to the NW.
EOF=1 overflow discards	0x0B	2->	x	All cells with Eof=1 which are discarded at the QE due to overflow.
EFCI=0 from port	0x31	3	x	All cells with EfcI=0 which arrive at the QE from the port. This includes cells which are discarded due to overflow.
EFCI=1 from port	0x0C	3	x	All cells with EfcI=1 which arrive at the QE from the port. This includes cells which are discarded due to overflow.
OAM cells from port	0x3A	3	x	OAM cells which arrive at the QE from the port. This includes cells which are discarded due to overflow.
Rm cells from port	0x3E	3	x	Rm cells which arrive at the QE from the port. This includes cells which are discarded due to overflow.
FRm to NW	0x17	3	x	FRm cells which depart from the QE to the NW.
BRm+FsRm to NW	0x18	3	x	BRm + FsRm cells which depart from the QE to the NW.
EFCI=0 overflow discards	0x12	3	x	All EfcI=0 cells which are discarded at the QE due to overflow.
EFCI=1 overflow discards	0x13	3	x	All EfcI=1 cells which are discarded at the QE due to overflow.
OAM overflow discards	0x14	3	x	All OAM cells which are discarded at the QE due to overflow.
RM overflow discards	0x16	3	x	All Rm cells which are discarded at the QE due to overflow.

Table 1-9 Consolidated Ingress Statistics (to UXM Card)

Consolidated Ingress Statistics	Oid	Part of Which New Stat	New Oid	Stat Grp
seg OAM from port	0x3A	OAM from port	0x3A	3
end to end OAM from port	0x3C	OAM from port	0x3A	3
FRm cells from port	0x3E	Rm cells from port	0x3E	3
BRm+FsRm cells from port	0x40	Rm cells from port	0x3E	3

Table 1-10 Egress Statistics (from UXM Card)

Consolidated Egress Statistics	Oid	Part of Which New Stat	New Oid	Stat Grp
FRm from NW	0x3F	Rm from NW	0x3F	3
BRm+FsRm from NW	0x41	Rm from NW	0x3F	3
seg OAM from NW	0x3B	OAM from NW	0x3B	3
end to end OAM from NW	0x3D	OAM from NW	0x3B	3
FRm cells to port	0x09	Rm cells to port	0x0A	3
BRm+FsRm cells to port	0x0A	Rm cells to port	0x0A	3

Compatibility with 9.1 Classic Statistics

The statistics as defined for Level statistics will not provide the same information as statistics on a UXM running 9.1 firmware. However, backward compatibility is provided for any UXM upgraded from 9.1 to 9.2 firmware. UXMs shipped with 9.2 firmware do not support the Classic statistics.

Note The **rsh** command can be used to put UXM running 9.2 into classic statistics mode. (Note that you need to have debug level privileges to access this command.) In addition, any UXM upgraded from 9.1 to 9.2 will no longer support classic statistics if a statistics level has been set on the card. The UXMe supports, at a minimum, Level 2 statistics, and since Level 2 statistics supports all the statistics needed for compatibility with 9.1 software.

Refer to Table 1-11 for a list of the multilevel channel statistics supported on the UXM.

Table 1-11 UXM with Multilevel Channel Statistics

Statistics Description	Level	OID Number	Stat Number	Interv	Sum
Cells Received from Port	1	0x05	0x2d	YES	YES
Cells Transmitted to Network	1	0x07	0x2f	YES	YES
Cells Received from Network	1	0x1f	0x30	YES	YES
Cells Transmitted to Port	1	0x22	0x35	YES	YES
EOF Cells Received from Port	1	0x06	0x2e	YES	YES
Cells Received with CLP=1	1	0x08	0x31	YES	YES
Cells Received with CLP=0	1	0x2b	0x37	YES	YES
Non-Compliant Cells Received	1	0x0e	0x32	YES	YES
Average Rx VCq Depth in Cells	1	0x11	0x33	NO	YES
Average Tx Vcq Depth in Cells	1	0x53	0x3b	NO	YES
Ingress Vsvd Allowed Cell Rate	1	0x51	0x39	NO	YES
Egress Vsvd Allowed Cell Rate	1	0x52	0x3a	NO	YES
Cells Rx with CLP=0 from Network	1	0x2d	0x4c	YES	YES
Cells Rx with CLP=1 from Network	1	0x2f	0x4d	YES	YES
Cells Tx with CLP=0 to Port	1	0x2c	0x4e	YES	YES
Cells Tx with CLP=1 to Port	1	0x20	0x4f	YES	YES

Table 1-11 UXM with Multilevel Channel Statistics (Continued)

Statistics Description	Level	OID Number	Stat Number	Interv	Sum
Non-Comp Cells Rx w/CLP=0 dropped	1	0x0f	0x50	YES	YES
Non-Comp Cells Rx w/CLP=1 dropped	1	0x10	0x51	YES	YES
Overflow Cells Rx w/CLP=0 dropped	1	0x29	0x52	YES	YES
Overflow Cells Rx w/CLP=1 dropped	1	0x2a	0x53	YES	YES
OAM state (0:OK,1:FERF,2:AIS)	1	0x28	0x36	NO	YES
Good Pdu's Received by the Sar	1	0x60	0x44	YES	YES
Good Pdu's Transmitted by the Sar	1	0x61	0x45	YES	YES
Rx pdu's discarded by the Sar	1	0x62	0x46	YES	YES
Tx pdu's discarded by the Sar	1	0x63	0x47	YES	YES
Invalid CRC32 pdu rx by the sar	1	0x64	0x48	YES	YES
Invalid Length pdu rx by the sar	1	0x65	0x49	YES	YES
Shrt-Lgth Fail detected by the sar	1	0x66	0x4a	YES	YES
Lng-Lgth Fail detected by the sar	1	0x67	0x4b	YES	YES
Cells Tx with CLP=0 to Network	2	0x2e	0x54	YES	YES
Cells Tx with CLP=1 to Network	2	0x30	0x55	YES	YES
Cells Tx with EFCI=0 to Network	2	0x34	0x56	YES	YES
Cells Tx with EFCI=1 to Network	2	0x36	0x57	YES	YES
Cells Transmitted with EFCI=0	2	0x32	0x38	YES	YES
Cells Transmitted with EFCI=1	2	0x21	0x34	YES	YES
Overflow Cells Rx w/EOF dropped	2	0x0b	0x58	YES	YES
Cells Tx with EOF to Port	2	0x37	0x59	YES	YES
RM Cells Tx to Port	3	0x0a	0x5a	YES	YES
Cells Rx with EFCI=0 from Port	3	0x31	0x5b	YES	YES
Cells Rx with EFCI=1 from Port	3	0x0c	0x5c	YES	YES
OAM Cells Rx from Port	3	0x3a	0x5d	YES	YES
RM Cells Rx from Port	3	0x3e	0x5e	YES	YES
Overflow Cells Rx w/EFCI=0 dropped	3	0x12	0x5f	YES	YES
Overflow Cells Rx w/EFCI=1 dropped	3	0x13	0x60	YES	YES
Overflow OAM Cells Rx and dropped	3	0x14	0x61	YES	YES
Overflow RM Cells Rx and dropped	3	0x16	0x62	YES	YES
Forward RM Cells Tx to Network	3	0x17	0x63	YES	YES
Backward RM + FST Cells Tx to Net	3	0x18	0x64	YES	YES
Cells Rx with EFCI=0 from Network	3	0x33	0x65	YES	YES
Cells Rx with EFCI=1 from Network	3	0x35	0x66	YES	YES
Egress OAM Cells Rx	3	0x3b	0x67	YES	YES
Egress RM Cells Rx	3	0x3f	0x68	YES	YES
Overflow Cells Tx w/EFCI=0 dropped	3	0x19	0x69	YES	YES
Overflow Cells Tx w/EFCI=1 dropped	3	0x1a	0x6a	YES	YES

Table 1-11 UXM with Multilevel Channel Statistics (Continued)

Statistics Description	Level	OID Number	Stat Number	Interv	Sum
Overflow RM Cells Tx and dropped	3	0x1b	0x6b	YES	YES
Overflow OAM Cells Tx and dropped	3	0x1c	0x6c	YES	YES

Table 1-12 BXM Card with No Multilevel Channel Statistics

Statistics Description	Level	OID Number	Stat Number	Interv	Sum
Port Cells Received	n/a	0x05	0x1d	YES	YES
Port Frames Received	n/a	0x06	0x1e	YES	YES
Network Cells Transmitted	n/a	0x07	0x1f	YES	YES
Port Cells Received with CLP=1	n/a	0x08	0x20	YES	YES
Non-Compliant Cells Received (Port)	n/a	0x0e	0x26	YES	YES
Average Rx Q Depth in Cells	n/a	0x11	0x29	YES	YES
Cells Received from Network	n/a	0x1f	0x2e	YES	YES
Cells Transmitted with CLP (Port)	n/a	0x20	0x31	YES	YES
Cells Transmitted (Port)	n/a	0x22	0x2d	YES	YES
Average Tx Q Depth in Cells	n/a	0x53	0x39	YES	YES
Good Pdu's Received by the Sar	n/a	0x60	0x3a	YES	NO
Good Pdu's Transmitted by the Sar	n/a	0x61	0x3b	YES	NO
Rx pdu's discarded by the Sar	n/a	0x62	0x3c	YES	NO
Tx pdu's discarded by the Sar	n/a	0x63	0x3d	YES	NO
Invalid Length pdu rx by the sar	n/a	0x65	0x3f	YES	NO
Shrt-Lgth Fail detected by the sar	n/a	0x66	0x40	YES	NO
Lng-Lgth Fail detected by the sar	n/a	0x67	0x41	YES	NO
Invalid CRC32 pdu rx by the sar	n/a	0x64	0x3e	YES	NO
Cells Received with Clp 0	n/a	0x2b	0x45	YES	YES
Network Cells Received with Clp 0	n/a	0x2d	0x46	YES	YES
Network Cells Received with Clp 1	n/a	0x2f	0x47	YES	YES
Ingress Vsvd Allowed Cell Rate	n/a	0x51	0x48	YES	YES
Egress Vsvd Allowed Cell Rate	n/a	0x52	0x49	YES	YES
Cells Tx with CLP=0 to Port	n/a	0x2c	0x52	YES	YES
Cells Tx with CLP=0 to Network	n/a	0x2e	0x53	YES	YES
Rx Clp0+1 Port	n/a	n/a	0x54	NO	YES
Rx Clp0 Dscd	n/a	n/a	0x55	NO	YES
Tx Clp0 Dscd	n/a	n/a	0x56	NO	YES
Tx Clp1 Dscd	n/a	n/a	0x57	NO	YES
Tx Clp0+1 Dscd	n/a	n/a	0x58	NO	YES
OAM state (0:OK,1:FERF,2:AIS)	n/a	0x28	n/a	NO	NO

Refer to Table 1-13 for a list of multilevel channel statistics supported on the BXM.

Table 1-13 BXM with Multilevel Channel Statistics

Statistics Description	Level	OID Number	Stat Number	Interv	Sum
Port Cells Received	1	0x05	0x1d	YES	YES
Port Frames Received	1	0x06	0x1e	YES	YES
Network Cells Transmitted	1	0x07	0x1f	YES	YES
Port Cells Received with CLP=1	1	0x08	0x20	YES	YES
Non-Compliant Cells Received (Port)	1	0x0e	0x26	YES	YES
Average Rx Q Depth in Cells	1	0x11	0x29	YES	YES
Cells Received from Network	1	0x1f	0x2e	YES	YES
Cells Transmitted with CLP (Port)	1	0x20	0x31	YES	YES
Cells Transmitted (Port)	1	0x22	0x2d	YES	YES
Average Tx Q Depth in Cells	1	0x53	0x39	YES	YES
Good Pdu's Received by the Sar	1	0x60	0x3a	YES	NO
Good Pdu's Transmitted by the Sar	1	0x61	0x3b	YES	NO
Rx pdu's discarded by the Sar	1	0x62	0x3c	YES	NO
Tx pdu's discarded by the Sar	1	0x63	0x3d	YES	NO
Invalid Length pdu rx by the Sar	1	0x65	0x3f	YES	NO
Shrt-Lgth Fail detected by the Sar	1	0x66	0x40	YES	NO
Lng-Lgth Fail detected by the Sar	1	0x67	0x41	YES	NO
Invalid CRC32 pdu rx by the Sar	1	0x64	0x3e	YES	NO
Cells Received with Clp 0	1	0x2b	0x45	YES	YES
Network Cells Received with Clp 0	1	0x2d	0x46	YES	YES
Network Cells Received with Clp 1	1	0x2f	0x47	YES	YES
Ingress Vsvd Allowed Cell Rate	1	0x51	0x48	YES	YES
Egress Vsvd Allowed Cell Rate	1	0x52	0x49	YES	YES
Cells Tx with CLP=0 to Port	1	0x2c	0x52	YES	YES
Rx Clp0+1 Port	1	n/a	0x54	NO	YES
Tx Clp0 Dscd	1	n/a	0x56	NO	YES
Tx Clp1 Dscd	1	n/a	0x57	NO	YES
Tx Clp0+1 Dscd	1	n/a	0x58	NO	YES
Non-Comp Cells Rx w/CLP=0 dropped	1	0x0f	0x59	YES	YES
Non-Comp Cells Rx w/CLP=1 dropped	1	0x10	0x5a	YES	YES
Overflow Cells Rx w/CLP=0 dropped	1	0x29	0x5b	YES	YES
Overflow Cells Rx w/CLP=1 dropped	1	0x2a	0x5c	YES	YES
OAM state (0:OK,1:FERF,2:AIS)	1	0x28	n/a	NO	NO
Cells Tx with CLP=0 to Network	2	0x2e	0x53	YES	YES
Rx Clp0 Dscd	2	n/a	0x55	NO	YES
Cells Tx with CLP=1 to Network	2	0x30	0x5d	YES	YES

Table 1-13 BXM with Multilevel Channel Statistics (Continued)

Statistics Description	Level	OID Number	Stat Number	Interv	Sum
Cells Tx with EFCI=0 to Network	2	0x34	0x5e	YES	YES
Cells Tx with EFCI=1 to Network	2	0x36	0x5f	YES	YES
Cells Transmitted with EFCI=0	2	0x32	0x60	YES	YES
Cells Transmitted with EFCI=1	2	0x21	0x2c	YES	YES
Overflow Cells Rx w/EOF dropped	2	0x0b	0x61	YES	YES
Cells Tx with EOF to Port	2	0x37	0x62	YES	YES
RM Cells Tx to Port	3	0x0a	0x63	YES	YES
Cells Rx with EFCI=0 from Port	3	0x31	0x64	YES	YES
Cells Rx with EFCI=1 from Port	3	0x0c	0x65	YES	YES
OAM Cells Rx from Port	3	0x3a	0x66	YES	YES
RM Cells Rx from Port	3	0x3e	0x67	YES	YES
Overflow Cells Rx w/EFCI=0 dropped	3	0x12	0x68	YES	YES
Overflow Cells Rx w/EFCI=1 dropped	3	0x13	0x69	YES	YES
Overflow OAM Cells Rx and dropped	3	0x14	0x6a	YES	YES
Overflow RM Cells Rx and dropped	3	0x16	0x6b	YES	YES
Forward RM Cells Tx to Network	3	0x17	0x6c	YES	YES
Backward RM + FST Cells Tx to Net	3	0x18	0x6d	YES	YES
Cells Rx with EFCI=0 from Network	3	0x33	0x6e	YES	YES
Cells Rx with EFCI=1 from Network	3	0x35	0x6f	YES	YES
Egress OAM Cells Rx	3	0x3b	0x70	YES	YES
Egress RM Cells Rx	3	0x3f	0x71	YES	YES
Overflow Cells Tx w/EFCI=0 dropped	3	0x19	0x72	YES	YES
Overflow Cells Tx w/EFCI=1 dropped	3	0x1a	0x73	YES	YES
Overflow RM Cells Tx and dropped	3	0x1b	0x74	YES	YES
Overflow OAM Cells Tx and dropped	3	0x1c	0x75	YES	YES

Descriptions for Statistics Fields on cnfcdparm Screen

The field names on the **cnfcdparm** screen are similar to the field names on the **dspchstats** screen. Table 1-14 provides descriptions for fields that appear on the **cnfcdparm** screen. Note that the object names given may vary slightly from what actually appears on the **cnfcdparm** screen fields; similarly, the descriptions for each object (or screen field) correspond in most cases to the related object (or screen field) name, but not in all cases.

Table 1-14 Descriptions for cnfcdparm for BXM Card

Object ID	Object Name	Range/Values	Default	Description
01	Message Tag	Byte 0–3: Tag ID Byte 4–7: IP Address	0	Identifier and source IP address sent with ComBus message. Both will be copied into the response, if any is to be sent.
02	RESERVED			
03	LCN	1 – 64K	R	Identifies which channel to collect statistics.
04	RESERVED			
05	Rx Cells From Port	0 – 2 ³² -1	N/A	Number of cells received at the ingress of the connection. [A:ALL, B:ALL] (Note: This count is retrieved from the RCMP chip.)
06	Rx EOFs From Port	0 – 2 ³² -1	N/A	Number of EOFs received at the ingress of the connection. [A:ALL, B:12, B:28]
07	Rx Cells to Backplane	0 – 2 ³² -1	N/A	Number of cells rx'd at the ingress that were sent to the backplane. [A:ALL, B:ALL]
08	Rx CLP=1 Cells From Port	0 – 2 ³² -1	N/A	Number of cells received at the port with CLP=1. [A:ALL, B:ALL] (Note: This count is retrieved from the RCMP chip.)
09–0B	RESERVED			
0C	Rx EFCI=1 Cells From Port	0 – 2 ³² -1	N/A	Number of cells received at the port with EFCI=1. [A:28, B:28]
0D	RESERVED			
0E	Non-Compliant Cell Count (Total)	0 – 2 ³² -1	N/A	Number of cells received at the ingress of the connection that were non-compliant discarded. [A:ALL, B:ALL]. (Note: This is a 16-bit counter in the hardware— it can wrap in less than a second depending upon non-compliant rate.)
0F	Non-Compliant Cell Count (CLP 0 Only)	0 – 2 ³² -1	N/A	Number of CLP 0 cells received at the ingress of the connection that were non-compliant dropped. [A:ALL, B:ALL]. (Note: This is a 16-bit counter in the hardware—it can wrap in less than a second depending upon non-compliant rate.)
10	Non-Compliant Cell Count (CLP 1 Only)	0 – 2 ³² -1	N/A	Number of CLP 1 cells received at the ingress of the connection that were non-compliant dropped. [A:ALL, B:ALL]. (Note: This is a 16-bit counter in the hardware— it can wrap in less than a second depending upon non-compliant rate.)

Table 1-14 Descriptions for cnfcdparm for BXM Card (Continued)

Object ID	Object Name	Range/Values	Default	Description
11	Ingress VC Q Depth	0 – 2 ³² -1	N/A	Current Ingress VC Queue Depth. [A:ALL, B:ALL]
12–14	RESERVED			
15	Rx Rsrc Ovfl Discards	0 – 2 ³² -1	N/A	Number of cells received at the port that were discarded due to Resource Overflow. [B:ALL]
16–1E	RESERVED			
1F	Tx Cells From Network	0 – 2 ³² -1	N/A	Number of cells received from the backplane. [A:ALL, B:ALL]
20	Tx CLP=1 To Port	0 – 2 ³² -1	N/A	Number of cells transmitted out the port with CLP=1. [A:ALL, B:12, B:28]
21	Tx EFCI=1 To Port	0 – 2 ³² -1	N/A	Number of cells transmitted out the port with EFCI=1. [A:12, A:28, B:12, B:28]
22	Tx Cells To Port	0 – 2 ³² -1	N/A	Number of cells transmitted out the port. [A:ALL, B:ALL]
23–26	RESERVED			
27	Loopback RTD Measurement	0 – 2 ³² -1	N/A	The Loopback Round Trip Delay measurement in msec. (Still under investigation.) Used to initiate the measurement (Set). The Get is used to get the last measurement known; or zero if now known.
28	Local Ingress Rx State	0: Okay 1: FERF (aka RDI) 2: AIS	0	The OAM connection state. [A:ALL, B:ALL]
29	Rx CLP=0 Congested Discards	0 – 2 ³² -1	N/A	Number of CLP=0 Cells received from the port and discarded due to congestion (after the policer). [A:ALL, B:None]
2A	Rx CLP=1 Congested Discards	0 – 2 ³² -1	N/A	Number of CLP=1 Cells received from the port and discarded due to congestion (after the policer). [A:ALL, B:None]
2B	Rx CLP=0 Cells From Port	0 – 2 ³² -1	N/A	Number of CLP=0 Cells received from the port. [A:ALL, B:ALL] (NOTE: This stat is received from the RCMP.)
2C	Tx CLP=0 Cells To Port	0 – 2 ³² -1	N/A	Number of CLP=0 Cells transmitted to the port. [A:ALL, B:12, B:28]
2D	Tx CLP=0 Cells From Backplane	0 – 2 ³² -1	N/A	Number of CLP=0 Cells received from the backplane. [A:ALL, B:28]
2E	Rx CLP=0 Cells To Backplane	0 – 2 ³² -1	N/A	Number of CLP=0 Cells sent to the backplane. [A:ALL, B:12, B:28]
2F	Tx CLP=1 Cells From Backplane	0 – 2 ³² -1	N/A	Number of CLP=1 Cells received from the backplane. [A:ALL, B:28]
30	Rx CLP=1 Cells To Backplane	0 – 2 ³² -1	N/A	Number of CLP=1 Cells sent to the backplane. [A:12, A:28, B:12,B:28]
31	Rx EFCI=0 Cells From Port	0 – 2 ³² -1	N/A	Number of EFCI=0 Cells received from the port. [A:28, B:28]

Table 1-14 Descriptions for cnfcdparm for BXM Card (Continued)

Object ID	Object Name	Range/Values	Default	Description
32	Tx EFCI=0 Cells To Port	0 – 2 ³² -1	N/A	Number of EFCI=0 Cells transmitted to the port. [A:12,A:28, B:12, B:28]
33	Tx EFCI=0 Cells From Backplane	0 – 2 ³² -1	N/A	Number of EFCI=0 Cells received from the backplane. [A:28, B:28]
34	Rx EFCI=0 Cells To Backplane	0 – 2 ³² -1	N/A	Number of EFCI=0 Cells sent to the backplane. [A:12, A:28, B:12, B:28]
35	Tx EFCI=1 Cells From Backplane	0 – 2 ³² -1	N/A	Number of EFCI=1 Cells received from the backplane. [A:28, B:28]
36	Rx EFCI=1 Cells To Backplane	0 – 2 ³² -1	N/A	Number of EFCI=1 Cells sent to the backplane. [A:12, A:28, B:12, B:28]
37	Tx EOFs to Port	0 – 2 ³² -1	N/A	Number of cells with EOF sent to the port. [A:12, A:28, B:28]
38	Tx EOFs from Backplane	0 – 2 ³² -1	N/A	Number of EOFs received at the backplane. [B:12, B:28]
39	Rx EOFs to Backplane	0 – 2 ³² -1	N/A	Number of cells with EOF sent to the backplane. [B:28]
3A	Rx Segment OAM	0 – 2 ³² -1	N/A	Number of Segment OAM cells received at the port. [A:28, B:28]
3B	Tx Segment OAM	0 – 2 ³² -1	N/A	Number of Segment OAM cells received at the egress. [A:28, B:28]
3C	Rx End-to-End OAM	0 – 2 ³² -1	N/A	Number of End-to-End OAM cells received at the port. [A:28, B:28]
3D	Tx End-to-End OAM	0 – 2 ³² -1	N/A	Number of End-to-End OAM cells received at the egress. [A:28, B:28]
3E	Rx Forward RM Cells	0 – 2 ³² -1	N/A	Number of Forward RM cells received at the port. [A:28, B:28]
3F	Tx Forward RM Cells	0 – 2 ³² -1	N/A	Number of Forward RM cells received at the backplane. [A:28, B:28]
40	Rx Backward RM Cells	0 – 2 ³² -1	N/A	Number of Backward RM cells received at the port. [A:28, B:28]
41	Tx Backward RM Cells	0 – 2 ³² -1	N/A	Number of Backward RM cells received at the backplane. [A:28, B:28]
42	Rx Optimized Bandwidth Management RM Cells	0 – 2 ³² -1	N/A	Number of Optimized Bandwidth Management RM cells received at the port. [B:28]
43	Tx Optimized Bandwidth Management RM Cells	0 – 2 ³² -1	N/A	Number of Optimized Bandwidth Management RM cells received at the backplane. [B:28]
44	Rx Undefined RM Cells	0 – 2 ³² -1	N/A	Number of Undefined RM cells received at the port. [B:28]
45	Tx Undefined RM Cells	0 – 2 ³² -1	N/A	Number of Undefined RM cells received at the backplane. [B:28]

Table 1-14 Descriptions for cnfcdparm for BXM Card (Continued)

Object ID	Object Name	Range/Values	Default	Description
46	Tx Rsrc Ovfl Discards	0 – 2 ³² -1	N/A	Number of cells rx'd at the backplane that were discarded due to Resource Overflow. [B:ALL]
47	Rx VI Cell Discards	0 – 2 ³² -1	N/A	Number of cells received at the port that were discarded because of a full Vi. [B:12, B:28]
48	Tx VI Cell Discards	0 – 2 ³² -1	N/A	Number of cells rx'd at the backplane discarded because of a full Vi. [B:12, B:28]
49	Rx QBIN Cell Discards	0 – 2 ³² -1	N/A	Number of cells rx'd at the port discarded due to QBIN threshold violation. [B:12, B:28]
4A	Tx QBIN Cell Discards	0 – 2 ³² -1	N/A	Number of cells rx'd at the backplane that were disc. due to QBIN threshold violations. [B:12, B:28]
4B	Rx VC Cell Discards	0 – 2 ³² -1	N/A	Number of cells rx'd at the port that were disc. due to VC threshold violations. [B:12, B:28]
4C	Tx VC Cell Discards	0 – 2 ³² -1	N/A	Number of cells rx'd at the backplane that were discarded due to VC threshold violations. [B:ALL]
4D	Rx Cell Filter Discards	0 – 2 ³² -1	N/A	Number of cells received at the port that were discarded due to cell filter action. [B:12, B:28]
4E	Tx Cell Filter Discards	0 – 2 ³² -1	N/A	Number of cells rx'd at the backplane that were discarded due to cell filter action. [B:12, B:28]
4F	Rx Illegal Event Cells	0 – 2 ³² -1	N/A	Number of cells rx'd at the port that caused an reserved event in the hardware. [B:28]
50	Tx Illegal Event Cells	0 – 2 ³² -1	N/A	Number of cells rx'd at the backplane that caused an reserved event in the H/W. [B:28]
51	Ingress VSVD ACR	0 – 2 ³² -1	N/A	Ingress VSVD allowed Cell Rate. [A:ALL, B:ALL]
52	Egress VSVD ACR	0 – 2 ³² -1	N/A	Egress VSVD allowed Cell Rate. [A:ALL, B:ALL]
53	Egress VC Q Depth	0 – 2 ³² -1	N/A	Current Egress VC Queue Depth. [A:ALL, B:ALL]
54	Bkwd SECB	0 – 2 ³² -1	N/A	Backward reporting Performance Monitoring Severely Errored Cell Blocks. [A:ALL, B:ALL]
55	Bkwd Lost Cells	0 – 2 ³² -1	N/A	Backward reporting Performance Monitoring Lost Cell Count. [A:ALL, B:ALL]
56	Bkwd Misinserted Cells	0 – 2 ³² -1	N/A	Backward reporting Performance Monitoring Misinserted Cell Count. [A:ALL, B:ALL]
57	Bkwd BIPV	0 – 2 ³² -1	N/A	Backward reporting Performance Monitoring Bipolar Violation Count. [A:ALL, B:ALL]
58	Fwd SECB	0 – 2 ³² -1	N/A	Forward reporting Performance Monitoring Severely Errored Cell Blocks. [A:ALL, B:ALL]
59	Fwd Lost Cells	0 – 2 ³² -1	N/A	Forward reporting Performance Monitoring Lost Cell Count. [A:ALL, B:ALL]
5A	Fwd Misinserted Cells	0 – 2 ³² -1	N/A	Forward reporting Performance Monitoring Misinserted Cell Count. [A:ALL, B:ALL]
5B	Fwd BIPV	0 – 2 ³² -1	N/A	Forward reporting Performance Monitoring Bipolar Violation Count. [A:ALL, B:ALL]

Table 1-14 Descriptions for cnfcdparm for BXM Card (Continued)

Object ID	Object Name	Range/Values	Default	Description
5C–5F	RESERVED			
60	SAR Good PDUs Rcv	0 – 2 ³² -1	N/A	Number of good PDUs received by the SAR. [A:ALL, B:ALL]
61	SAR Good PDUs Xmt	0 – 2 ³² -1	N/A	Number of good PDUs transmitted by the SAR. [A:ALL, B:ALL]
62	SAR Rcv PDUs Discarded	0 – 2 ³² -1	N/A	Number of PDUs discarded on the ingress by the SAR. [A:ALL, B:ALL]
63	SAR Xmt PDUs Discarded	0 – 2 ³² -1	N/A	Number of PDUs discarded on the egress by the SAR. [A:ALL, B:ALL]
64	SAR Invalid CRC PDUs Rcvd	0 – 2 ³² -1	N/A	Number of invalid CRC32 PDUs received by the SAR. [A:ALL, B:ALL]
65	SAR Invalid Length PDUs Rcvd	0 – 2 ³² -1	N/A	Number of invalid-length PDUs received by the SAR. [A:ALL, B:ALL]
66	SAR Short Length Failures	0 – 2 ³² -1	N/A	Number of short-length failures detected by the SAR. [A:ALL, B:ALL]
67	SAR Long Length Failures	0 – 2 ³² -1	N/A	Number of long-length failures detected by the SAR. [A:ALL, B:ALL]

Full Name

Configure card parameters

Syntax**cnfcdparm** <card slot> <stats_level>**Related Commands****cnfchstats, dspchstats****Attributes**

Privilege	Jobs	Log	Node	Lock
5	No	No	IGX, BPX	No

Example 1

cnfcdparm 2.1.1.1 1

Description

Configure channel statistics level 1 on BXM card in slot 2, port 1, with vpi, vci of 1 1

System Response

```

sw57          TRM   SuperUser          BPX 8620    9.2.30    Date/Time Not Set

Channel Statistics for 2.1.1.1      Cleared: Date/Time Not Set  (\) Snapshot
MCR: 96000/96000 cps      Collection Time: 0 day(s) 00:01:45      Corrupted: NO
  Traffic      Cells      CLP      Avg CPS      %util  Chan Stat Addr: 30EBB36C
From Port   :           0           0           0           0
To Network  :           0      ---           0           0
From Network:           0           0           0           0
To Port     :           0      ---           0           0

NonCmplnt Dscd:           0 Rx Q Depth   :           0 Tx Q Depth   :           0
Rx Vsvd ACR  :           0 Tx Vsvd ACR  :           0 Bkwd SECB   :           0
Bkwd Lost Cell:           0 Bkwd Msin Cell:           0 Bkwd BIPV   :           0
Fwd SECB     :           0 Fwd Lost Cell :           0 Fwd Msin Cell :           0
Fwd BIPV     :           0

Last Command: dspchstats 2.1.1.1 1

Next Command:

                                CD                                Minor Alarm
    
```

Example 2

cnfcdparm 10.2.205.101

Description

Configure channel statistics level 1 on UXM card in slot 10, port 2, with vpi, vci of 205 and 101.

System Response

```

m2a          TN      SuperUser      IGX 16      9.2.30      May 14 1998 14:19 GMT

Channel Statistics: 10.1.205.101
Collection Time: 0 day(s) 23:02:58
Type          Count      Traffic      Rate (cps)
Cells Received from Port      82978      From port      0
Cells Transmitted to Network  82978      To network     0
Cells Received from Network   82978      From network   0
Cells Transmitted to Port     82978      To port       0
EOF Cells Received from Port      0
Cells Received with CLP=1        0
Cells Received with CLP=0     82978
Non-Compliant Cells Received    0
Average Rx VCq Depth in Cells  0
Average Tx Vcq Depth in Cells  0
Cells Transmitted with EFCI=1    0
Cells Transmitted with EFCI=0   82978

This Command: cnfcdparm 10.1.205.101 1
    
```

Table 1-15 cnfcdparm Parameters

Parameter	Description
slot.port.vpi.vci	Specifies the slot, port, vpi, and vci on BXM card.

cnfcdpparm (Configure CVM Card Parameters)

The **cnfcdpparm** command configures parameters for the CVM.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX

Associated Commands

cnfchts, **dchst**, **cnfecparm**

Syntax

cnfcdpparm <parameter number> <new value>

<parameter number> Specifies the number of the parameter to change. (See Table .)

<new value> Specifies the new value for the parameter.

Function

The **cnfcdpparm** command lets you configure CVM parameters for Modem Detection (MDM), certain reserved debug parameters, and In Frame and Out of Frame (I Frm and O Frm) thresholds for DS0A-type T1 applications. (See the **cnfln** description for information on assigning % Fast Modem on a per-channel basis.) Figure 1-7 lists the **cnfcdpparm** parameters. All CVMs in the node are dynamically reconfigured according to the new parameters. When you enter the command, the system prompts for a parameter number, as Figure 1-7 illustrates.



Caution You should consult the Cisco TAC before changing any of these parameter.

Figure 1-7 cnfcdpparm Parameters

```
pubsigx1            TN    SuperUser            IGX 32            9.2 Oct. 20 1998 18:06 PDT

 1  MDM Low Pwr Thrsh            [3160] (H) 15 0 Frm 4.8 Thrsh (msecs) [ 500] (D)
 2  MDM Stationary Coef.        [ 14] (H) 16 I Frm 9.6 Thrsh (msecs) [ 500] (D)
 3  MDM ZCR High Frq Thrsh      [ 5A] (H) 17 0 Frm 9.6 Thrsh (msecs) [ 500] (D)
 4  MDM ZCR Low Frq Thrsh       [ 56] (H)
 5  MDM Detect Failure Cnt       [ 4] (H)
 6  MDM Detect Window Min.       [ 39] (H)
 7  MDM Detect Silence Max.      [ 24] (H)
 8  MDM Pkt Header               [ 6] (D)
 9  Null Timing Pkt Header       [ 4] (D)
10  Debug Parm A                 [ 0] (H)
11  Debug Parm B                 [ 0] (H)
12  I Frm 2.4 Thrsh (msecs)      [ 500] (D)
13  O Frm 2.4 Thrsh (msecs)      [ 500] (D)
14  I Frm 4.8 Thrsh (msecs)      [ 500] (D)
```

This Command: cnfcdpparm

Which parameter do you wish to change:

Table 1-16 cnfcdpparm Parameters and Descriptions

No.	Parameter	Description	Default ¹
1	MDM Low Power Threshold	Power level for Modem Detect high-range threshold.	3160 (H)
2	MDM Stationary Coefficient	Indicates how rapidly the power level is changing to not be detected as modem.	14 (H)
3	MDM ZCR High Freq Threshold	Defines upper frequency value for 2100 Hz tone used in V.25 modem detection.	5A (H)
4	MDM ZCR Low Freq Threshold	Defines lower frequency value for 2100 Hz tone used in V.25 modem detection.	56 (H)
5	MDM Detect Failure Count	Defines number of failures above which fast modem is not declared.	4 (H)
6	MDM Detect Window Min.	Number of 5.25-milliseconds windows used in modem tests.	39 (H)
7	MDM Detect Silence Max.	Amount of time a channel stays in a modem-detected state. The parameter equals the value you enter times 84 milliseconds. Default=1008 milliseconds.	C (H)
8	MDM Pkt Header	Changes packet type from voice to non-timestamped for modems.	6 (D)
9	Null Timing Pkt Header	Gives a higher priority to the specified number of voice packets to decrease delay for spurts of talking.	4 (D)
10	Debug Parameter A	A reserved engineering debug parameter. This parameter does not actually go to the card.	0 (H)
11	Debug Parameter B	A reserved engineering debug parameter. This parameter does not actually go to the card.	0 (H)
12	I Frm 2.4 Threshold(msecs)	Specifies In Frame threshold for DS0 2.4 Kbps overhead data channel.	500 (D)
13	O Frm 2.4 Threshold (msecs)	Specifies Out of Frame threshold for DS0 2.4 Kbps overhead data channel.	500 (D)
14	I Frm 4.8 Threshold (msecs)	Same as 19 for DS0 4.8 Kbps channel.	500 (D)
15	O Frm 4.8 Threshold(msecs)	Same as 20 for DS0 4.8 Kbps channel.	500 (D)
16	I Frm 9.6 Threshold(msecs)	Same as 19 for DS0 9.6 Kbps channel.	500 (D)
17	O Frm 9.6 Threshold (msecs)	Same as 20 for DS0 9.6 Kbps channel.	500 (D)

¹ Enter value in either decimal (D) or hexadecimal (H).

cnfcftst (Configure Communication Fail Test Pattern)

The **cnfcftst** command changes the test pattern for communication failure testing.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

dspcfctst

Syntax

cnfcftst

Function

The communication fail test pattern is used to periodically test for failure of nodes to communicate with each other. This test pattern is also used to recover from communication fail conditions. A communication fail is defined as a loss of controller communication over one or more trunks to a particular node. A communication fail differs from a communication break condition in that the node may be reachable over other paths. The communication fail test is used to test the failed trunk for proper controller traffic.

This command allows the user to configure the communication fail test pattern byte-by-byte. It defaults to a pattern of 4 bytes of 1s followed by 4 bytes of 0s. Varying the length of the test pattern makes the communications test more or less rigorous. Changing the characters determines the pattern sensitivity for strings of less than 14 bytes.

The **dspcfctst** command displays the current communication test pattern. The parameters used for declaring and clearing communication fails are set by the **cnfnodparm** command. Figure 1-8 illustrates a typical screen.

Figure 1-8 cnfcftst—Configure Communication Fail Test Pattern

```
pubsigx1      TN      SuperUser      IGX 32      9.2      Feb 24 1998 21:17 GMT

Comm Fail Test Pattern

==> Byte  0: FF      Byte 12: 00      Byte 24: FF      Byte 36: 00      Byte 48: FF
      Byte  1: FF      Byte 13: 00      Byte 25: FF      Byte 37: 00      Byte 49: FF
      Byte  2: FF      Byte 14: 00      Byte 26: FF      Byte 38: 00      Byte 50: FF
      Byte  3: FF      Byte 15: 00      Byte 27: FF      Byte 39: 00      Byte 51: FF
      Byte  4: 00      Byte 16: FF      Byte 28: 00      Byte 40: FF      Byte 52: 00
      Byte  5: 00      Byte 17: FF      Byte 29: 00      Byte 41: FF      Byte 53: 00
      Byte  6: 00      Byte 18: FF      Byte 30: 00      Byte 42: FF      Byte 54: 00
      Byte  7: 00      Byte 19: FF      Byte 31: 00      Byte 43: FF      Byte 55: 00
      Byte  8: FF      Byte 20: 00      Byte 32: FF      Byte 44: 00      Byte 56: FF
      Byte  9: FF      Byte 21: 00      Byte 33: FF      Byte 45: 00      Byte 57: FF
      Byte 10: FF      Byte 22: 00      Byte 34: FF      Byte 46: 00      Byte 58: FF
      Byte 11: FF      Byte 23: 00      Byte 35: FF      Byte 47: 00      Byte 59: FF

This Command: cnfcftst

Enter Byte 0:
```

cnfchstats (Configure Channel Statistics Collection)

Use the **cnfchstats** command to enable statistics collection for various channel parameters. The **cnfchstats** command is sometimes referred to as an “interval statistics” command—the statistics information collected is propagated to Cisco WAN Manager.

In Release 9.2, the Multilevel Channel Statistics feature provides additional levels of statistics (levels 2 and 3) beyond level 1 statistics. To configure the channel statistics level on the BXM and UXM card, use the **cnfdparm** command. This command lets you configure a specific card slot to support additional levels of statistics (levels 2 and 3) that were supported in releases previous to Release 9.2 (level 1). See the **cnfdparm** command for more information.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: BPX, IGX

Associated Commands

dspchstatcnf, **cnfdparm**, **dspchstathist**, **cnfchanstats**

Syntax

```
cnfchstats <channel> <stat> <interval> <e | d> [<samples> <size> <peaks>] [<nodename>]
```

<channel>	Specifies the channel (connection) to configure.
<stat>	Specifies the type of statistic to enable/disable. (See Table .)
<interval>	Specifies the time interval of each sample (1–255 minutes).
<eld>	Enables/disables a statistic. ‘E’ to enable; ‘D’ to disable a statistic.
[samples]	Specifies the number of sample to collect (1–255).
[size]	Specifies the number of bytes per data sample (1, 2 or 4).
[peaks]	Enables/disables the collection of one minute peaks. ‘Y’ to enable; ‘N’ to disable.
[nodename]	Specifies the name of the node to which the Cisco WAN Manager terminal connects.

Function

This debug command enables statistics collecting for channel parameters. Table 1-34 lists the statistics by type. Not all statistic types are available for all connections. Only valid statistics are displayed for you to select; inapplicable statistics appear in gray. If you are unsure of the size parameter to specify, select four bytes per sample.

The **dspchstatcnf** command displays the channel statistics configuration. Statistics are collected by and displayed on the Cisco WAN Manager workstation. Cisco WAN Manager allows statistics collection to be customized. You can disable a Cisco WAN Manager-enabled channel statistic by specifying the optional node name of the workstation as the last parameter on the command line. Figure 1-9 illustrates the parameters available for a typical connection.

Figure 1-9 cnfchstats—Configure Channel Statistics

```
sw199          TN      SuperUser      IGX 8420      9.2      Aug. 28 1998 09:28 PDT
```

Channel Statistic Types

```

46) Cells Received from Port          60) Average Tx Vcq Depth in Cells
47) EOF Cells Received from Port      61) Bkwd Severely Errored Cell Blocks
48) Cells Transmitted to Network      62) Bkwd Lost Cell Count
49) Cells Received from Network       63) Bkwd Misinserted Cell Count
50) Cells Received with CLP=1         64) Bkwd Bipolar Violation Count
51) Non-Compliant Cells Received      65) Fwd Severely Errored Cell Blocks
52) Average Rx VCq Depth in Cells     66) Fwd Lost Cell Count
53) Cells Transmitted with EFCI=1     67) Fwd Misinserted Cell Count
54) Cells Transmitted to Port         68) Fwd Bipolar Violation Count
56) Cells Received with CLP=0         69) Good Pdu's Received by the Sar
57) Cells Transmitted with EFCI=0     70) Good Pdu's Transmitted by the Sar
58) Ingress Vsvd Allowed Cell Rate    71) Rx pdu's discarded by the Sar
59) Egress Vsvd Allowed Cell Rate     72) Tx pdu's discarded by the Sar

```

```
sw199          TN      SuperUser      IGX 8420      9.2      Aug. 28 1998 09:28 PDT
```

Channel Statistic Types

```

73) Invalid CRC32 pdu rx by the sar
74) Invalid Length pdu rx by the sar
75) Shrt-Lgth Fail detected by the sar
76) Lng-Lgth Fail detected by the sar

```

This Command: cnfchstats 9.2.1.100

Statistic Type:

Table 1-17 Channel Statistics

Statistic Number	Statistic
1	Frames Received
2	Receive Frames Discarded
3	Frames Transmitted
4	Transmit Frames Discarded
5	Packets Received
6	Receive Packets Discarded
7	Packets Transmitted
8	Projected Packets Transmitted
9	Supervisory Packets Transmitted
10	Bytes Received
11	Receive Bytes Discarded
12	Bytes Transmitted
13	Transmit Bytes Discarded
14	Seconds V.25 Modem On
15	Seconds DSI Enabled
16	Seconds Off-Hook
17	Seconds In Service
18	Frames Transmitted with FECN
19	Frames Transmitted with BECN
20	Supervisory Packets Received
21	Minutes Congested
22	DE Frames Received
23	DE Frames Transmitted
24	DE Frames Dropped
25	DE Bytes Received
26	Frames Received in Excess of CIR
27	Bytes Received in Excess of CIR
28	Frames Transmitted in Excess of CIR
29	Bytes Transmitted in Excess of CIR
32	Rx Frames Discarded—Deroute/Down
33	Rx Bytes Discarded—Deroute/Down
34	Rx Frames Discarded—VC Queue Overflow
35	Rx Bytes Discarded—VC Queue Overflow
36	Tx Frames Discarded—Queue Overflow
37	Tx Bytes Discarded—Queue Overflow
38	Tx Frames Discarded—Ingress CRC
39	Tx Bytes Discarded—Ingress CRC

Table 1-17 Channel Statistics (Continued)

Statistic Number	Statistic
40	Tx Frames Discarded—Trunk Discard
41	Tx Bytes Discarded—Trunk Discard
42	TX Frames During Ingress LMI Fail
43	TX Bytes During Ingress LMI Fail
44	Unkn Prot Frms Dscd at Ingress
45	Unkn Prot Frms Dscd at Egress
46	Cells Received from Port
47	EOF Cells Received from Por
48	Cells Transmitted to Network
49	Cells Received from Network
50	Cells Received with CLP=1
51	Non-Compliant Cells Received
52	Average Rx VCq Depth in Cells
53	Cells Transmitted with EFCI=1
54	Cells Transmitted to Port
56	Cells Received with CLP=0
57	Cells Transmitted with EFCI=0
58	Ingress Vsvd Allowed Cell Rate
59	Egress Vsvd Allowed Cell Rate
60	Average Tx Vcq Depth in Cells
61	Bkwd Severely Errored Cell Blocks
62	Bkwd Lost Cell Count
63	Bkwd Misinserted Cell Count
64	Bkwd Bipolar Violation Count
65	Fwd Severely Errored Cell Blocks
66	Fwd Lost Cell Count
67	Fwd Misinserted Cell Count
68	Fwd Bipolar Violation Count
69	Good pdu's Received by the SAR
70	Good pdu's Transmitted by the SAR
71	Rx pdu's discarded by the SAR
72	Tx pdu's discarded by the SAR
73	Invalid CRC32 pdu rx by the SAR
74	Invalid Length pdu rx by the SAR
75	Invalid Length pdu rx by the SAR
76	Lng-Lgth Fail detected by the SAR

cnfchts (Configure Channel Timestamp)

The **cnfchts** command configures a pre-aging parameter for data channels. Applicable cards are the SDP, LPD, LDM, and HDM. Applicable traffic is time-stamped data.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX

Associated Commands

cnfcdpparm

Syntax

cnfchts <channel(s)> <pre-age>

<channel(s)> Specifies the data channel.

<pre-age> Specifies a value in 250-microsecond increments to go in the age field in the header of a time-stamped.

Function

This command configures the pre-age parameter for data channels. The pre-age parameter specifies the initial age of a time-stamped packet. With a non-zero pre-age, the packet has less time to wait at the destination before it reaches the Max Time Stamped Packet Age and is taken out of the ingress queue. (Data channels with the greater pre-age value are processed sooner.) However, if the pre-age value is too high because of queuing delays in the network, packets could be discarded because they appear too old at the destination.

The value you enter for Pre-Age should be a multiple of 250 microseconds (otherwise, the system rounds the value down to the nearest multiple of 250 microseconds). The default value is 0. Acceptable values are in the range 0 to the Max Time Stamped Packet Age (set by the **cnfsysparm** command). After you finish entering this command, the screen as in the example. After you change a timestamp, the connection should be rerouted or restarted for the new value to take effect.

Note You can see the value for Pre-Age in the screen display for the **dspchcnf** command. If **dspchcnf** is entered at a user-privilege level below super user level, the Pre-Age parameter does not appear in the **dspchcnf** output.

Example

```
pubsipx1      TN      SuperUser      IGX 8420      9.2      Aug. 14 1998 03:50 GMT

      Maximum EIA      %      DFM Pattern      DFM      PreAge
Channels      Update Rate      Util      Length      Status      (usec)
3.1      2      100      8      Enabled      1000
3.2-4      2      100      8      Enabled      0
```

Last Command: cnfchts 3.1 1000

Next Command:

cnfclnparm (Configure Circuit Line Parameter)

The **cnfclnparm** command configures the alarm integration time for circuit lines originating on a UVM, CDP or CVM and for T1/E1 Frame Relay circuits originating on an FRP, FRM, or UFM.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX

Associated Commands

cnfclnsigparm, dchst

Syntax

cnfclnparm <line>

<line> Specifies the circuit line to configure.

Function

This command configures the circuit line alarm integration times for RED and YELLOW circuit line alarms. These integration times are specified in milliseconds and should be set to correspond to the local carrier's alarm integration times. Carrier integration times are typically 800 to 1500 ms. for RED Alarm and 1500 to 3000 ms. for YELLOW Alarm. The allowable range for these parameters are 60 to 3932100 ms. When you enter this command, the system responds with the screen shown in Figure 1-10.

Figure 1-10 cnfcln—Configure Circuit Line Alarm Integration Times

```
gamma                    TRM                    SuperUser                    Rev: 9.2    Aug. 14 1998    14:27 PDT

CLN 11 Parameters
 1 Red Alarm - In/Out [ 1000 / 2000] (Dec)
 2 Yel Alarm - In/Out [ 1000 / 2000] (Dec)
```

This Command: cnfclnparm 11

Which parameter do you wish to change:

cnfclnsigparm (Configure Circuit Line Signaling Parameters)

The **cnfclnsigparm** command configures signaling parameters for a UVM or CVM.

Note The CVM & UVM Heartbeat parameter (option 1) is the rate, in seconds, at which the card sends a signaling (ABCD bits) state update to the other end of the connection, even when there is no change in the state of the signaling bits. This is done because signaling packets are TS data packets, and there is a small chance that a signaling packet might be discarded somewhere in the network. This mechanism is a recovery mechanism to ensure that on-hook and off-hook notifications are not lost.

Increasing this interval will probably have no impact as long as none of the normal signaling TS data packets are being discarded in the network.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX

Associated Commands

cnfclnparm, dspsig

Syntax

cnfclnsigparm <parameter number> <parameter value>

<parameter number> Specifies the parameter number of the signaling parameter to change.
(See Table .)

<parameter value> Specifies the new value to enter.

Function

The **cnfclnsigparm** command configures any of the UVM, CVM circuit line signaling parameters associated with the node. See Table 1-18 for the parameters and their values.

When you enter this command, the system responds with the display as shown in Figure 1-11.

Figure 1-11 cnfclnsigparm—Configure Circuit Line Signaling Parameters

```

sw219          TRM  SuperUser          IGX 8420  9.2.a8   Apr. 22 1999 08:12 GMT

1  CVM & UVM Heartbeat                [  2] (sec)
2  CVM & UVM Sig. Polling Rate         [ 10] (sec)
3  CVM & UVM Default Inband Sig Delay  [ 96] (msec)
4  CVM & UVM Default Inband Playout Delay [ 200] (msec)
5  CVM & UVM Default Pulse Sig Delay   [ 96] (msec)
6  CVM & UVM Default Pulse Playout Delay [ 200] (msec)
7  CVM & Number of Packet Slices       [  1]
8  CVM & UVM Packet Rate                [ 200] (pkt/sec)
9  CVM & UVM Condition E1 CCS Lines?    [ NO]
10 CVM & UVM Default Inband Min. Wink   [ 140] (msec)
11 CVM & UVM Default Pulse Min. Wink    [ 140] (msec)
12 CVM & UVM Condition T1 Lines?       [ YES] (yes/no)
    
```

Last Command: cnfclnsigparm

Which parameter do you wish to change:

Table 1-18 cnfclnsigparm Parameters and Descriptions

No.	Parameter	Description	Range
1	Heartbeat	<p>The current state of the signaling is periodically transmitted to the far end even if no signaling transitions are detected. This interval is determined by the value of "heartbeat."</p> <p>The CVM & UVM Heartbeat parameter (option 1) is the rate, in seconds, at which the card sends a signaling (ABCD bits) state update to the other end of the connection, even when there is no change in the state of the signaling bits. This is done because signaling packets are TS data packets, and there is a small chance that a signaling packet might be discarded somewhere in the network. This mechanism is a recovery mechanism to ensure that on-hook and off-hook notifications are not lost.</p> <p>Increasing this interval will probably have no impact as long as none of the normal signaling TS data packets are being discarded in the network.</p>	2–30 sec.
2	Signal Polling Rate	How often the control card polls the UVM/CVM for the status of the signaling. This parameter is used to update displays and statistics.	2–60 sec.
3	Default Inband Signal Delay	The transmit buffer timer value set after a valid signaling transition for in-band signaling arrives. After timeout, a signaling packet is sent.	30–96 msec.
4	Default Inband Playout Delay	The receive buffer timer that "ages" an incoming, time-stamped packet. When the age of the packet reaches the timestamp value, it moves on to depacketization and then to the user-equipment. This parameter is used to even out the delay between signaling packets and voice packets.	0–200 msec.
5	Default Pulse Signal Delay	Same as number 3 but applied to pulse signaling.	30–96 msec.
6	Default Pulse Playout Delay	Same as number 4 but applied to pulse signaling.	100–200 msec.

Table 1-18 cnfclnsigparm Parameters and Descriptions (Continued)

No.	Parameter	Description	Range
8	Packet Rate	Reserves trunk bandwidth for carrying UVM/CVM signaling.	0–1000 packets/sec.
9	Condition CCS Lines	If you specify “yes” for this parameter, the card applies signaling conditioning during an alarm to all channels on E1 CCS circuit lines to notify marked for Common Channel signaling to notify PBX of a line failure.	YES or NO
10	Inband Min. Wink	Same as 6 for in-band signaling.	120–300 msec.
11	Pulse Min. Wink	For UVM/CVM connections only, this parameter controls both wink and inter-digit intervals for signaling that arrives over the NPC or NPM signaling channel from a far end UVM/CVM.	120–300 msec.
12	Condition T1 Lines?	If you specify “yes” for this parameter, the card applies signaling conditioning during an alarm to all channels on T1 circuit lines to notify PBX of a line failure.	YES or NO

cnfcmparm (Configure Connection Management Parameters)

The **cnfcmparm** command configures various connection management parameters for the node.

The **cnfcmparm** command is used to enable cost-based route selection and the use of delay as the trunk cost. By default, delay is enabled. This worst-case delay for each connection type is calculated from the configured voice and non-timestamped trunk queue depths. For delay sensitive connections on the IGX (voice and non-timestamped), the worst-case trunk delay can be used as the per trunk cost. For delay sensitive connections on the BPX (ATM CBR), end-to-end delay is not used as a routing constraint in AutoRoute.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

dsprrst, cnftlparm

Syntax

cnfcmparm <parameter number> <value>

<parameter number> Specifies the number of the parameter to change. See Table 1-19

<value> Specifies the new parameter value to enter.

Function

This command configures parameters that affect Adaptive Voice, Rerouting, and Courtesy Up/Down. These parameters are used only at the local node. Table 1-19 lists the parameters, their descriptions, and their default values.

Table 1-19 Connection Management Parameters

No.	Parameter	Description	Range	Default
1	Normalization Interval	The time delay in minutes between attempts to disable VAD (that is, to "normalize") on groups of voice connections. It is in force once the network has been stable for a while (see parameter 4, "Setting Interval").	1–10 minutes	2
2	Max Number To Normalize	The maximum number of connections that may be normalized at each normalization interval (see parameter 1)	1–50 connections	5 connections
3	Normalization Logging	This boolean specifies whether changes in VAD status are recorded in the event log	y=yes n=no	No
4	Settling Interval	The length of time, in minutes, following a disturbance in the network (trunk failure, and so on.) before normalization attempts are allowed.	1–10 minutes	4 minutes
5	Minimum Open Space	The minimum trunk bandwidth required, in packets/second, before normalization attempts are allowed. This is in addition to the statistical reserve for the trunk. Increasing this parameter causes all connections in the network to reroute (although the parameter only governs the local node).	0–8000 packets per second (pps)	1000 pps

Table 1-19 Connection Management Parameters (Continued)

No.	Parameter	Description	Range	Default
6	Normalization Priority	Determines the order in which connections are considered for VAD removal. It may be Class of Service (CoS) or load. While CoS is a simple test, the load option is more complex. The load, in packets/second, over the last "Load Sample Period" (see parameter 7) for all eligible connections (with or without VAD) is sampled. Every "Normalization Interval" (see parameter 1), the IGX node takes the "Max Number To Normalize" (see parameter 2) connections with VAD applied and compares their utilization with those with VAD already disabled. Those with the greatest load will have VAD disabled, if necessary, at the expense of some that were already disabled, where VAD is now applied. In this way, the most heavily used connections are continually found and have VAD disabled.	COS or Load (c/l)	1 (Load)
7	Load Sample Period	The period during which voice activity is sampled for load determination if parameter 6 is set to Load.	1–10 minutes	4 minutes
8	Maximum Routing Bundle	For rerouting, the maximum number of connections allowed in a routing request. For derouting, the maximum number of connections chosen using the CoS-based criterion. The value of this parameter should be set to less than that of parameter 21. A larger value provides a faster rerouting/derouting time. A smaller value provides better load balancing.	1–250	90
9	Reroute Timer	The number of seconds since the last reroute to wait before attempting another reroute of the same connection. After a connection has been successfully routed, it does not get rerouted again (especially for a connection that has previously experienced a failure at its preferred route) until this amount of time has elapsed. The time delay permits the preferred route to stabilize its operational status before a working connection with a preferred route is returned to the preferred route. A zero timer means the request is re-attempted immediately.	0–900 seconds	0 seconds
10	Timer Reset on Line Fail	This boolean specifies that the reroute timer in parameter 9 can be ignored if the current route actually fails (instead of attempting a rerouting of working connections on non-preferred routes).	y=yes n=no	y
11	Max Down/Up Per Pass	The maximum number of connections allowed to be upped or downed per pass. A larger value provides a faster completion of state update notifications, at the expense of potentially flooding the network. A smaller value provides better control of network traffic, but at the expense of prolonged state update notifications.	0–255	50
12	Down/Up Timer	The amount of time to wait before the next pass of upping/downing connections. A larger value provides slower-paced state update notifications, thus allowing time for the node to process other requests. A smaller value provides faster-paced state update notifications.	1000–65535 msec	30000 msec
13	Maximum Route Errors per Cycle	The maximum number of failed rerouting attempts allowed for a connection. Once this threshold has been reached, the connection is removed from the reroute group (see parameters 25, 26 and 27) and placed in a block waiting for the next cycle. (See also parameters 14 & 15.) A larger value provides a more resilient rerouting attempt. A smaller value allows a faster declaration of rerouting failure.	0–65535 failures	BPX: 50 IGX: 200

Table 1-19 Connection Management Parameters (Continued)

No.	Parameter	Description	Range	Default
14	Maximum Time Between Routing Cycles	All connections that have waited for this amount of time are allowed to be returned into the reroute group. The expiration of this timer starts off another cycle of rerouting attempts. (See also parameters 13 and 15.) A larger value provides more time for the network topology to settle before re-attempting a connection reroute. A smaller value allows more frequent reroute attempts.	1–8 minutes	5 minutes
15	Maximum Routing Error Cycles	The maximum number of cycles of rerouting attempts. Once this threshold has been reached, the connection is declared failed. You must use the rrtcon command to reroute the failed connection. (See also parameters 13 and 14.) Alternatively, the failed connection is rerouted when the BCC becomes active (for example, due to card reset or switchcc). A larger value provides a more resilient rerouting attempt. A smaller value allows a faster declaration of rerouting failure.	0–255 cycles	BPX: 10 IGX: 1
16	Routing pause timer	The amount of time to wait before the next rerouting attempt. Do not wait when set to 0. A larger value provides a slower-paced rerouting attempt, taking advantage of possible network topology updates. A smaller value allows for a faster-paced rerouting attempt that does not depend on the changing network topology.	0–65535 msec	0
17	Max. messages sent per update	The maximum number of CMUPDATE messages that may be sent into the network without acknowledgement. This parameter permits the transmitting node to throttle the networking traffic to prevent jamming. A larger value allows the broadcasting to complete faster, at the risk of jamming the network. A smaller value slows down the broadcasting without flooding the network, but at the expense of more broadcasting iterations.	0–223 decimal	10
18	Send SVC urgent msg	IGX only. This parameter enables an IGX node to inform each via node to remove an SVC connection during deletion. When disabled, the via nodes are not immediately informed through an update message. This causes the trunk loading occupied by a deleted SVC to remain unavailable until the update message is received by the via node.	y=yes n=no	BPX: n IGX: y
19	Max SVC Retry	IGX only. The maximum number of failed routing attempts before the SVC connection is declared failed. If the routing attempt fails due to a reason other than being “blocked,” the connection is immediately declared failed. A blocked attempt means that the routing state machine on the via/slave node is already processing a route request, or is locked by some other state machines. A larger value provides a more resilient SVC rerouting attempt. A smaller value allows a faster declaration of rerouting failure.	0–30 decimal	0
20	Wait for TBL updates	After routing all connections based on CoS, wait roughly this amount of time before the routing of other connections in need of rerouting (for example, those failed connections due to lack of critical internal resources). This delay allows the topology to settle after the CoS-based rerouting phase. This wait period should typically be one or two seconds longer than the time specified by the Fast Interval parameter (default 5 seconds) of the cnftlparm command.	0–65000 decimal	70 (x100 msec)

Table 1-19 Connection Management Parameters (Continued)

No.	Parameter	Description	Range	Default
21	Max derouting bundle	<p>The maximum number of connections chosen, based on load, that can be derouted concurrently. The value of this parameter should be set to greater than that of parameter 8. The actual number of connections concurrently derouted can reach the sum of this parameter and of parameter 8.</p> <p>A larger value provides a faster rerouting/derouting time.</p> <p>A smaller value provides better load balancing.</p>	0–16000 decimal	500
22	Enable cost-based routing	<p>This boolean specifies whether the Cost-Based Routing algorithm should be used in preference to the Hop-Based Routing algorithm. Yes means enable cost-based routing.</p> <p>Cost-based routing allows the network operation to better tune the network utilization based on the least cost.</p> <p>Hop-based routing is a simpler algorithm that selects a path strictly based on the least number of hops.</p>	y=yes n=no	n
23	Enable route cache usage	<p>This boolean specifies whether the most recent successfully-used routes are to be placed in cache, in order to avoid performing route selection. Yes enables route cache usage. The cache route can be either a cost-based route or a hop-based route.</p>	y=yes n=no	n
24	Use delay for routing	<p>This boolean specifies whether queuing delay is considered in the Cost-Based Routing algorithm. Yes means use delay for routing. The parameter is particular useful for time sensitive or voice connections.</p>	y=yes n=no	n
25	# of reroute groups used	<p>Specifies the number of reroute groups allowed for the node. Each reroute group is categorized based on the load requirement for each connection. The node reroutes connections with the highest load units first and proceeds with successively decreasing load unit ranges.</p> <p>A larger value provides more groups at the cost of more iterations stepping through the reroute groups during rerouting.</p> <p>A smaller value provides a faster completion of the iterations.</p>	1–200 groups	50
26	Starting size of RR groups	<p>The first reroute group is defined to consist of connections with load units at or below this parameter value. During rerouting, connections from this reroute group are considered last. Connections with load units above this value but at or below the sum of this value and that of the next parameter (Increment between RR groups) are placed in the second reroute group.</p> <p>A larger value provides a bigger range of bandwidth for the first reroute groups.</p> <p>A smaller value provides a more refined range of bandwidth included in the first reroute group.</p>	0–96000 cell load units (CLUs)	0 CLUs
27	Increment between RR groups	<p>Each of the remaining reroute groups is defined to consist of connections with load units higher than the previous reroute group, but at or below the sum of the previous reroute group threshold and this parameter value. The last reroute group can accommodate any load units above the second-last reroute group threshold.</p> <p>(See parameter 26 for a definition of the first reroute group.)</p> <p>A larger value provides a bigger range of bandwidth for each of a smaller number of reroute groups.</p> <p>A smaller value provides a smaller range of bandwidth for each of a larger number of reroute groups.</p>	1–96000 cell load units (CLUs)	100 CLUs

Example

Figure 1-12 shows the two screens required to display all **cnfcmparm** parameters.

Figure 1-12 cnfcmparm Parameters

```
sw116          TRMStrataComBPX          BPX 8620    9.2.z    July 29 1999 11:55 PST

1 Normalization Interval      [  2] (D)
2 Max Number To Normalize     [  5] (D)
3 Normalization Logging       [ No]
4 Settling Interval           [  4] (D)
5 Minimum Open Space          [1000] (D)
6 Normalization Priority       [ Load]
7 Load Sample Period          [  4] (D)
8 Maximum Routing Bundle      [  90] (D)
9 Reroute Timer                [  0] (secs)
10 Reset Timer on Line Fail    [ Yes]
11 Max Down/Up Per Pass       [  50] (D)
12 Down/Up Timer               [30000] (msecs)
13 Max Route Errs per cycle   [  50] (D)
14 Time between Rrt cycles    [  5] (mins)
15 Max. Rrt Err cycles        [ 10] (D)
```

This Command: cnfcmparm

Continue? y

```
sw116          TRMStrataComBPX          BPX 8620    9.2.z    July 29 1999 11:55 PST

16 Routing pause timer        [  0] (msecs)
17 Max msgs sent per update   [ 10] (D)
18 Send SVC urgent msg        [ No]
19 Max SVC Retry              [  0] (D)
20 Wait for TBL Updates       [  70] (100 msecs)
21 Max Derouting Bndl (0=all) [ 500] (D)
22 Enable Cost-Based Routing  [ No]
23 Enable Route Cache Usage   [ No]
24 Use Delay for Routing      [ No]
25 # of reroute groups used   [  50] (D)
26 Starting size of RR grps   [  0] (CLU)
27 Increment between RR grps  [ 100] (CLU)
```

This Command: cnfcmparm

Enter parameter index:

cnfdiagparm (Configure Diagnostic Test Parameters)

The **cnfdiagparm** command sets various diagnostic test parameters for the nodes.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

cnftstparm

Syntax

cnfdiagparm

Function

This command sets several parameters that affect the three IGX/BPX automatic diagnostic tests. Use this command to set test parameters on the internal system clock. Table 1-20 lists the parameters, descriptions, and default values for the **cnfdiagparm** command.

Table 1-20 Diagnostic Parameters

No.	Parameter *	Description	Default *
1	VDP Test Frequency (NOTE: This parameter is OBSOLETE.)	Interval between VDP background tests (in seconds).	50
2	LDP tstport delay	Seconds delayed before test data is sent.	10
3	System clock drift (8.192 Mhz)	Range of allowable drift of system clock.	±480
4	UEC-B's PLL railing (8.192 Mhz) (NOTE: This parameter is OBSOLETE.)	Range of UEC-B's phase lock loop rail.	±2720
5	NPC/NPM PLL Min. (8.192 Mhz)	Lower limit of controller card's PLL.	- 92000
6	NPC/NPM PLL Max. (8.192 Mhz)	Upper limit of controller card's PLL.	+ 508000
7	Clock Test Window	Number of samples that make up a window.	10
8	Clock Test Max Error in Window	Errors within window before fault isolation.	4
9	Clock Test Isolation Window	Window size during fault isolation.	10
10	Clock Fault Max. Error in Window	Errors allowed during fault isolation.	3
11	Clock Test Frequency	Interval between clock tests.	200 ms.
12	Clock Test Switch Delay	Delay clock testing after any clock transfers to allow settling.	3000 ms.
13	Card Reset Threshold		255
14	Card Reset Increment		0

* Clock Test parameters—Frequencies are in Hz, offset from 8.192 MHz

When you enter this command, the system responds with the screen illustrated in Figure 1-13. Note that parameters 1 and 4 are obsolete.

Figure 1-13 cnfdiagparm—Configure Diagnostic Test Parameters

```
sw197          TN   SuperUser      IGX 8420    9.2 Apr. 7 1998  01:39 GMT

1. Vdp Test Frequency (seconds)      [50]
2. LDP tstport delay                 [10]
3. System clock drift (8.192 MHz) +- [480]
4. UEC-B's PLL railing (8.192 MHz) +- [2720]
5. PCC's PLL minimum (8.192 MHz)    - [92000]
6. PCC's PLL maximum (8.192 Mhz)   + [508000]
7. Clock Test Window                 [10]
8. Clock Test Max Error in Window    [4]
9. Clock Fault Isolation Window      [10]
10. Clock Fault Max Error in Window  [3]
11. Clock Test Frequency (msec)      [200]
12. Clock Test Switch Delay (msec)   [2000]
13. Card Reset Threshold              [60]
14. Card Reset Increment              [10]

Last Command: cnfdiagparm

Next Command:
```

cnfdlparm (Configure Download Parameters)

The **cnfdlparm** command sets various software and firmware downloader parameters.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

dspdnl

Syntax

cnfdlparm

Function

This command sets parameters that affect the SW/FW download protocol. It is primarily a debug command. It is included only to accommodate the possibility that some future software or firmware revision may need to be adjusted for optimizing the downloading process. See Table for descriptions of the downloading parameters.



Caution You should not change downloader parameters except under specific direction from the Technical Assistance Center (TAC).

Parameters

When you enter **cnfdlparm**, the system displays an indexed list of parameters. Table 1-21 describes these parameters, and Figure 1-14 illustrates the **cnfdlparm** screen.

Table 1-21 Configurable Download Parameters

No.	Parameter	Description	Range	Default
1	Rmt Blk Freq	For downloads to a remote node, <i>Rmt Blk Freq</i> is the time between blocks.	1–9999999 msecs	100 msecs
2	Rmt Blk Size	For downloads to a remote node, <i>Rmt Blk Size</i> is the number of bytes in each block.	1–7C0 hex	400 hex
3	Lcl Blk Freq	For downloads to the other processor in the same (local) node, <i>Lcl Blk Freq</i> is the time (in msecs) between blocks.	1–9999999 msecs	100 msecs
4	Lcl Blk Size	For downloads to the other processor in the same (local) node, <i>Lcl Blk Size</i> is the number of bytes in each block.	1–7C0 hex	400 hex
5	Image Req Freq	The time between requests for a description of an image. When a node seeks a new software image from other nodes, it first sends requests for a full <i>description</i> of the image residing on a node to determine if that node has the correct image. The requesting node sends its request one node at a time. <i>Image Req Freq</i> is the time between the last request and the request to another node. (This parameter is not a frequency but rather a time period.)	1–9999999 msecs	10000 msecs

Table 1-21 Configurable Download Parameters (Continued)

6	Dnld Req Freq	After a node seeking a new software image has found a node with the correct image, it requests a download of the image. If the node with the correct image is not available to send the image, the requesting node waits a period of time before it again requests the image. <i>Dnld Req Freq</i> is the period of time the requesting node waits before it again requests the image. (This parameter is not a frequency but rather a time period.)	1-9999999 msecs	10000 msecs
7	Session Timeout	The time a receiving node waits for a block transfer to resume. If a block transfer stops after downloading begins, the <i>Session Timeout</i> is the time the receiving node waits to resume before it gives up and requests the download again.	1-9999999 msecs	30000 msecs
8	Request Hop Limit	Limit on the number of hops the local node can go to request a download. (The number of hops is the number of trunks that are crossed for one node to communicate with another node.) <i>Request Hop Limit=1</i> means the request can go to only an immediate neighbor.	1-9999999	1
9	Crc Throttle Freq	The number of CRC calculations per second. <i>Crc Throttle Freq</i> lets you reduce the number of calculations so the node does not use processor time for CRC calculations.	1-9999999	5000
10	Crc Block Size	Number of bytes that a CRC calculation covers. The default is intentionally the same as <i>Rmt Blk Size</i> and <i>Lcl Blk Size</i> .	1-7C0 hex bytes	400 hex bytes
11	Rev Change Wait	The time to wait before the node actually loads the software for loadrev or runrev execution.	0-99999 msecs	0
12	CCs Switch Wait	A wait period before the node actually switches control cards during switchcc execution. During normal operation, you should have no reason to increase <i>CCs Switch Wait</i> .	1-9999999 msecs	1000 msecs
13	Lcl Response TO	On a local node, a processor that is downloading to another processor must receive an acknowledgment from the receiving processor for each block that correctly arrived. If the sending processor does not receive an acknowledgment by the time <i>Lcl Response TO</i> (Time Out) has elapsed, the downloading processor sends the block again.	1-9999999 msecs	5000
14	Rmt Response TO	When one node downloads to another node, the sending node must receive an acknowledgment for each block correctly received. If the sending node receives no acknowledgment by the time <i>Rmt Response TO</i> (Time Out) has elapsed, the sending node sends the block again.	1-9999999 msecs	30000
15	FW Dnld Block TO (Time Out)	The wait period that a controller card waits for an acknowledgment from a receiving card that it correctly received a block.	1-9999999 msecs	50 msecs
16	FW Dnld Msgs/Block	Number of Cbus messages per CRC block CRC check on the payload of the FW download msg	1-9999999 msecs	4
17	Flash Write TO	During flash memory programming, <i>Flash Write TO</i> (Time Out) is the time to wait for an acknowledgment that a write cycle finished before timing out.	1-9999999 msecs	16000 msecs
18	Flash Erase TO	During a flash memory erasure, <i>Flash Erase TO</i> (Time Out) is the time to wait for an acknowledgment that the erase cycle finished before timing out.	1-9999999 msecs	100

Table 1-21 Configurable Download Parameters (Continued)

19	Erase Verify TO	<i>Erase Verify TO</i> (Time Out) is the time to wait for an acknowledgment of the completion of the second (or “true”) verification of the erasure before timing out. The <i>Erase Verify TO</i> parameter is useful only if write/erase performance characteristics of a flash memory device change.	1–9999999 msecs	16000 msecs
20	Standby Flash TO	During flash memory programming, <i>Standby Flash TO</i> (Time Out) is the time to wait for an acknowledgment that the standby flash is available before timing out.	1–9999999 msecs	300 msecs
21	Lcl Flash Init TO	During flash memory programming, <i>Lcl (local) Flash Init TO</i> (Time Out) is the time to wait for an acknowledgment that a initialization of local flash memory finished before timing out.	1–9999999 msecs	1000
22	Flsh Write Blk Sz	Number of bytes per write cycle	1–10000 hex	10000 hex
23	Flsh Verify Blk Sz	Second (or “true”) verification of the block write. The <i>Flsh Verify Blk Sz</i> parameter is useful only if performance characteristics of a flash memory device change.	1–10000 hex	400 hex
24	Chips Per Write/Erase	Number of bytes per write/erase cycle	1, 2, or 4	1

When you enter this command the system responds with the screen illustrated in Figure 1-14.

Figure 1-14 cnfdlparm—Configure Download Parameters

```
pubsbpx1          VT   SuperUser          BPX 8620    9.2          May 24 1998 23:18 GMT

1  Rmt Blk Freq (msec)      [  100]    16 FW Dnld Msgs/Block(dec) [    4]
2  Rmt Blk Size (hex)      [  400]    17 Flash Write TO(msec)   [ 16000]
3  Lcl Blk Freq (msec)     [  100]    18 Flash Erase TO(msec)   [   100]
4  Lcl Blk Size (hex)     [  400]    19 Erase Verify TO(msec)  [ 16000]
5  Image Req Freq (msec)   [ 10000]   20 Standby Flash TO(sec)  [   300]
6  Dnld Req Freq (msec)   [ 10000]   21 Lcl Flash Init TO(msec) [  1000]
7  Session Timeout (msec) [ 30000]   22 Flsh Write Blk Sz (hex) [ 10000]
8  Request Hop Limit (dec) [    1]    23 Flsh Verfy Blk Sz (hex) [   400]
9  Crc Throttle Freq (dec) [  5000]   24 Chips Per Write/Erse  [    1]
10 Crc Block Size (hex)   [   400]
11 Rev Change Wait(dec)  [    0]
12 CCs Switch Wait(dec)  [  1000]
13 Lcl Response TO(msec) [  5000]
14 Rmt Response TO(msec) [ 20000]
15 FW Dnld Block TO(msec) [    50]
```

This Command: cnfdlparm

Which parameter do you wish to change:

cnfecparm (Configure Echo Canceller Parameters)

The **cnfecparm** command configures the CDP or CVM integrated echo canceller (IEC) parameters for specified voice circuit line.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX

Associated Commands

cnfchec, **dspecparm**

Syntax

cnfecparm <line> <parameter number> <parameter value>

- <line> Specifies the circuit line to configure.
- <parameter number> Specifies the number of the parameter to change. (See Table .)
- <parameter value> Specifies the new value to enter for the parameter.

Function

The **cnfecparm** command configures the UVM, CVM or CDP integrated echo canceller (IEC). It configures IEC parameters associated with all voice channels for the specified circuit line. Setting these parameters allows you to optimize the IEC performance. Table 1-22 lists the parameters you can modify. The **dspecparm** command description lists the defaults and provides a sample display. Also, refer to the **cnfchec** command in the *Cisco WAN Switching Command Reference* for configuring per-channel parameters.

Table 1-22 Echo Canceller Parameters

Index	Parameter	Description	Options
1	Echo Return Loss High	Maximum ERL required for echo canceller to converge on speech (value X 0.1 dB).	0–99 dB
2	Echo Return Loss Low	Minimum ERL required for echo canceller to converge on speech (value X 0.1 dB).	0–99 dB
3	Tone Disabler Type	Selection of protocol to enable tone disabler.	G.164, G.165
4	Non-Linear Processing	Selects type of post-canceller signal.	Center Clipper, Multiplying
5	NLP Threshold	Threshold below which non-linear processing is enabled (value X 0.1 dB).	0–99 dB
6	Noise Injection	Determines if noise will be injected when NLP is active.	Enable, Disable
7	Voice Template	Selection of template to use; normal voice levels or high voice levels.	USA—normal UK—high-level

When you enter this command the system responds with the screen illustrated in Figure 1-15.

Figure 1-15 cnfecparm—Configure Echo Canceller Parameters

```
sw83          TN      SuperUser      IGX 8420      9.2      Aug. 1 1998  15:35 PST

IEC Line 7 Parameters
1 CDP IEC Echo Return Loss High (.1 dBs) [          60] (D)
2 CDP IEC Echo Return Loss Low  (.1 dBs) [          30] (D)
3 CDP IEC Tone Disabler Type     [          G.164]
4 CDP IEC Non-Linear Processing   [Center Clipper]
5 CDP IEC Non-Linear Processing Threshold [          18] (D)
6 CDP IEC Noise Injection        [          Enabled]
7 CDP IEC Voice Template         [          USA]
```

This Command: cnfecparm 7

Which parameter do you wish to change:

cnffpcom (Configure FastPAD Communication Parameters)

The **cnffpcom** command configures the FastPAD communication parameters.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX

Associated Commands

None

Syntax

cnffpcom <slot.port> | <name> <trans timer> <alive timer> <retry count>

<slot.port>	Specifies the slot.port of the card that connects to the FastPAD.
<name>	Specifies the name of the FastPAD connected to the port.
<trans timer>	Specifies the transmission timer.
<alive timer>	Specifies the keep alive timer value.
<retry count>	Specifies the retry count value.

Function

This command configures the FastPAD communication parameters. When you enter this command, the system responds as shown in Figure 1-16.

Figure 1-16 cnffpcom—Configure FastPAD Communication Parameters

```
cc7          VT      SuperUser      IGX 8420    9.2      Aug. 30 1998 10:05 PST
```

```
Last Command: cnffpcom 31.2 2 2 3
```

```
Next Command:
```

cnffpcon (Configure FastPAD Connection Parameters)

The **cnffpcon** command configures the FastPAD connection parameters.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX

Associated Commands

addcon, dspcon, dncon, upon

Syntax

cnffpcon <connection> [fr_bw]

<connection> Specifies the connection whose parameters to configure.

[fr_bw] Specifies the Frame Relay bandwidth parameters for the connection.

Function

This command configures connection parameters. When you enter this command, the system responds as shown in Figure 1-17.

Figure 1-17 cnffpcon—Configure FastPAD Connection Parameters

```

cc7          VT    SuperUser      IGX 8430    9.2      Aug. 30 1998 10:10 PST

Conn: 31.2.B.1  ca12          9.2.B.1    9.6
      MIR      CIR      VC Q Depth  PIR      Cmax    ECN QThresh  QIR      FST
11.6/11.6 11.6/11.6 2048/2048 11.6/11.6 10/10   1024/1024 11.6/11.6 n
% Util: 100/100
Owner: LOCAL Restriction: NONE COS: 0                      Status: New Conn
Group: NONE Priority: N/A TestRTD: 0 msec

Path: cc7      19-- 6.2cc1      6.3-- 2.2ca13    1.3-- 13ca12
Pref: Not Configured

cc7          FTC:   OK          ca12        FTC:   OK
            FTI:   OK          FTI:   OK
            FastPAD: OK        FastPAD: OK

This Command: cnffpcon 31.2.B.1 ca12 9.2.B.1

Enter FRP parameters (mir/oe_mir * ...):
    
```

cnffpddelay (Configure FastPAD Delay)

The **cnffpddelay** command configures thresholds for severe congestion (Sc) and mild congestion (Mc) on the FastPAD.

Attributes

Jobs: No Log: Lock: Node Type: IGX

Associated Commands

none

Syntax

```
cnffpddelay <slot.port.subslot.subport><Sc><Mc>
```

<slot.port.subslot.subport> Specifies the FTC or FTM port and subport that connects to the FastPAD for configuring Sc and Mc.

<Sc> Severe congestion.

<Mc> Mild congestion.

Function

Use this command to set up the delay on the FTC port and subport to which the FastPAD is connected. See Figure 1-18 for a sample screen.

Figure 1-18 **cnffpddelay—Configure FastPAD Delay**

```
pubsigx1            TN      SuperUser            IGX 32      9.2            Aug. 20 1998 14:07 GMT

Port:                8.1.7.2 [FAILED ]                    Configured Clock:    256.0 Kbps
Rcv Clocking:        EXTERNAL                                    Measured Clock:     N/A
Xmt Clocking:        EXTERNAL
Data Coding:         NRZ
Interface:           V.35

Signalling Protocol      STRATA LMI                    Interface Control Template
T391 Link Intg Timer     10
T392 Polling Verif Timer    15                            Lead            State
N391 Full Status Poll Cycle    6                            CTS            ON
N392 Error Threshold        3                            DSR            ON
Monitored Events Count      4                            DCD            ON

Severe Congestion (Sc) 64000 (512000)
Mild Congestion (Mc) 57600 (460800)

This Command: cnffpddelay 8.1.7.2

Sc [64000]:
```

cnffpdpvc (Configure FastPAD PVC)

The **cnffpdpvc** command configures the FastPAD bc/bc PVC parameters.

Attributes

Jobs: No Log: Lock: Node Type: IGX

Associated Commands

none

Syntax

cnffpdpvc <slot.port.subslot.subport.dlci> <bc> <bc>

<slot.port.subslot.subport.dlci> Specifies the FTC or FTM port, subport, and DLCI of the FastPAD.

cnffpmap (Configure FastPAD Map Table)

The **cnffpmap** command configures the FastPAD map table.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX

Associated Commands

cpyfpmap

Syntax

cnffpmap <slot.port>

<slot.port> Specifies the FTC or FTM port connected to the FastPAD.

Function

This command configures FastPAD map table. The map table contains the dialing plan for the FastPAD. When you enter this command, the system responds with the screen shown in Figure 1-19.

Figure 1-19 cnffpmap—Configure FastPAD Map Table

```
cc7                VT   SuperUser           IGX 8430      9.2      Aug. 30 1998 10:14 PST

Index #   DLCI Slot   Index #   DLCI Slot   Index #   DLCI Slot   Jump:
[000] 9915 0991 05   [014] FFFF 1023 15   [028] FFFF 1023 15
[001] 0182 0018 02   [015] FFFF 1023 15   [029] FFFF 1023 15
[002] 0528 0052 08   [016] FFFF 1023 15   [030] FFFF 1023 15
[003] 0186 0018 06   [017] FFFF 1023 15   [031] FFFF 1023 15
[004] 0188 0018 08   [018] FFFF 1023 15   [032] FFFF 1023 15
[005] 0524 0052 04   [019] FFFF 1023 15   [033] FFFF 1023 15
[006] 0526 0052 06   [020] FFFF 1023 15   [034] FFFF 1023 15
[007] 0528 0052 08   [021] FFFF 1023 15   [035] FFFF 1023 15
[008] 0528 1023 09   [022] FFFF 1023 15   [036] FFFF 1023 15
[009] FFFF 1023 15   [023] FFFF 1023 15   [037] FFFF 1023 15
[010] FFFF 1023 15   [024] FFFF 1023 15   [038] FFFF 1023 15
[011] FFFF 1023 15   [025] FFFF 1023 15   [039] FFFF 1023 15
[012] FFFF 1023 15   [026] FFFF 1023 15   [040] FFFF 1023 15
[013] FFFF 1023 15   [027] FFFF 1023 15   [041] FFFF 1023 15
```

This Command: cnffpmap 31.2

Next Command:

cnffpport (Configure FastPAD Port)

The **cnffpport** command configures the FastPAD port parameters.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX

Associated Commands

dspftcport, dnftcport, upftcport

Syntax

cnffpport <slot.port.subslot.subport> <parameter number> <parameter value>

<slot.port.subslot.subport> Specifies the port.

<parameter number> Specifies the number of the parameter to change.

<parameter value> Specifies the new value to enter.

Function

This command configures port parameters for the FastPAD port. When you enter this command, the system responds as in the screen example shown in Figure 1-20.

Figure 1-20 cnffpport—Configure FastPAD Port Parameters

```

cc7          VT      SuperUser      IGX 8430      9.2      Aug. 30 1998 10:16 PST

                               FastPad Port Configuration
                               Index: 0x0000 Location: 0x30E84C40
Port in Use   : 01      Port Type      : 02      Conn Exist   : 01
Phy Port Code : 00      Port Code      : 00      Abs Rate      : 07

                               Data Parameters
[01] Mode           : 00 [02] Baud Rate      : 06 [03] Underrun Fill : 7E
[04] Clock Stop FC : 00 [05] Transmit Clock: 00 [06] Local CTS      : 01
[07] Local CTS Dly : 00 [08] Local DSR      : 01 [09] Local DCD      : 01
[10] Hunt Group Mem: 01 [11] Dest Switch Nm: 01 [12] Dest Port Nm  : 03
[13] Dest Slot/Chnl: 00 [14] Call Timer      : 05 [15] Enable Channel: 01
[16] Initiate Calls: 01 [17] Allocate BW      : 00 [18] Inframe Fill: 00
[19] DPLL Mode      : 00 [20] Set DE on Data: 00 [21] Async In Timer: 05
[22] Checksum       : 00 [23] Sync Pattern   : 0000

This Command: cnffpport 31.2.B.1

Enter parameter number to change (DEL to quit):

```

cnffpsys (Configure FastPAD System Parameters)

The **cnffpsys** command configures the FastPAD system parameters.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX

Associated Commands

dspftcport, dnftcport, upftcport

Syntax

cnffpsys <slot.port> <parameter number> <parameter value>

<slot.port> Specifies the port.

<parameter number> Specifies the number of the parameter to change.

<parameter value> Specifies the new value to enter.

Function

This command configures system parameters for the FastPAD port. When you enter this command, the system responds with the screen shown in Figure 1-21.

Figure 1-21 cnffpsys—Configure System Parameters

```

cc7                VT   SuperUser      IGX 8430   9.2   Aug. 30 1998 10:17 PST

                                FastPad Configuration
                                Index: 0x0000 Location: 0x30E9D0B2
FPD in Use      : 01   Conn State   : 01   FPD Name       : cc7FP
Alarm Status   : 00   Switched Conn : 01   FPD Index      : 05
IGX Slot Nm    : 1F   FTC Port Nm   : 01   Link Int       : 01
Link Rate      : 0C   Card Dsc Index: 00   Avail SwVoice  : 00
Sfail/Nack     : 00/00 TmOut/OutOfSeq: 00/00 Unknown/Q len : 00/00

                                System Parameters
[04] Ring Freq   : 00 [05] Spd Dial Digit: 04 [06] Country Code  : 0100
[07] Line Mgmt Ptcl: 02 [08] Local Swtch Nm: 0C [09] Local Port Nm  : 51
[10] Inquire Poll : 05 [11] Full Stat Poll: 05 [12] Min Frame Size: 22
[13] Max Frame Size: 43 [14] Jitter Buf Sz : 00 [15] User Lockout  : 01

                                Link Parameters
[16] Clock       : 00 [17] Rate           : 0C [18] Bandwidth   : 8000
[19] Data Card Slot: FF [20] Data Card Chnl: 00 [21] Bundled DLCI  : 1000

This Command: cnffpsys 31.2

Enter parameter number to change (DEL to quit)

```

cnffstparm (Configure ForeSight Node Parameters)

The **cnffstparm** command configures the Optimized Bandwidth Management (formerly called ForeSight) parameters for Frame Relay ports.

Note As of Release 9.2, ForeSight is called Optimized Bandwidth Management.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

cnffrcon

Syntax

cnffstparm

No line or port number need be entered.

Function

This command configures the Optimized Bandwidth Management (formerly ForeSight) parameters for Frame Relay ports. This command only has an effect if the Frame Relay Optimized Bandwidth Management option is enabled. The parameter values set by this command apply to all Frame Relay connections enabled with Optimized Bandwidth Management. Therefore, these parameters must be configured on each node in the network that has Optimized Bandwidth Management connections. (The **cnffrcon** command enables Optimized Bandwidth Management on a connection.) Figure 1-22 illustrates BPX command menus. Table 1-23 lists the parameters of the **cnffstparm** command.

Figure 1-22 BPX System Response for cnffstparm

```

sw66          TN      SuperUser      BPX 15      9.2 Aug. 28 1998 23:50 GMT

1  FST Increase Rate      [ 10] (%)
2  FST Decrease Rate      [ 93] (%)
3  FST Fast Decrease Rate [ 50] (%)
4  RTD Measurement Time   [  5] (secs)
5  Default RTD            [ 100] (msecs)
6  Minimum RTD            [  40] (msecs)
7  Maximum RTD            [ 250] (msecs)
8  FECN for congested mins [  50] (%)
9  QIR Time-out           [ 244] (secs)
10 Max TstDelay Retries   [  2] (dec)

Last Command: cnffstparm

Next Command:

```

Table 1-23 cnffstparm Parameters

Number	Parameter	Description	Default
1	FRP Increase Rate	If free bandwidth is available, the rate at which FRP increases transmission (as a percentage of MIR).	10%
2	FRP Decrease Rate	If free bandwidth becomes unavailable, the rate at which FRP decreases transmission (as a percentage of current rate).	87%
3	FRP Fast Decrease Rate	If a cell is dropped or the TxQ is full, the rate at which FRP decreases transmission (as a percentage of current rate).	50%
4	RTD Measurement Time	The polling interval for measuring round-trip delay on each Frame Relay PVC.	5 sec.
5	Default RTD	The default RTD the connection uses before RTD is measured.	100 ms.
6	Minimum RTD	Min. value used for RTD in FR calculation regardless of measured RTD.	40 ms.
7	Maximum RTD	Max. value used for RTD in FR calculation regardless of measured RTD.	250 ms.
8	FECN for congested mins	When this percentage of packets received have the FECN bit set, a congested minutes field in the dsfrport command is indicated.	50%
9	QIR Time-out	Time before the allowable transmit rate is reset to QIR.	10 secs.
10	Max Test Delay Retries	Maximum number of delay test retries after a timeout.	2

cnflan (Configure LAN)

The **cnflan** command configures node communication parameters.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

upln, dnln, cnfln

Syntax

cnflan <IP_Address> <IP_Subnet_Mask> <Maximum LAN Transmit Unit> <TCP Service Port>

- | | |
|--------------------------|--|
| <IPAdd> | Specifies the Internet address of the node used in the TCP/IP protocol. |
| <IP subnet mask> | Specifies a 32-bit mask that contains information about the bit lengths of the subnet ID and host ID address fields. The format of this field uses 1s for the subnet ID field and 0s for the host ID address field as defined in the TCP/IP protocol. The default value (in decimal notation) is 255 255 255.0. This mask denotes both subnet ID and host ID fields as 8-bit fields. |
| <Max. LAN Transmit Unit> | BPX nodes only: typical length is 1500 bytes. |
| <TCPServicePort> | Specifies the node's service point used by the transmission control protocol (TCP). |
| <GatewayIPAddr> | Specifies the Internet gateway address. |

Function

This command configures node communication parameters, so the node can communicate with a Cisco WAN Manager terminal over an Ethernet LAN using TCP/IP protocol. The parameters all contain address information about the Ethernet TCP/IP network that connects the Cisco WAN Manager station to an IGX or BPX node. The values must conform to those of the network. The network administrator can supply the parameters. Refer to the screen in Figure 1-23.

Figure 1-23 cnflan—Configure LAN Parameters

```
sw197          TN      SuperUser      IGX 8420      9.2 Apr. 7 1998 01:48 GMT

Active IP Address:      172.29.9.111
IP Subnet Mask:        255.255.255.0
IP Service Port:       5120
Default Gateway IP Address: 172.29.9.1
Maximum LAN Transmit Unit: 1500
Ethernet Address:      00.C0.43.00.1F.7F

Type      State
LAN       READY
TCP       UNAVAIL
UDP       READY
Telnet    READY
TFTP     READY
TimeHdlr  READY
SNMP     READY

This Command: cnflan

Enter IP Address:
```

cnflnparm (Configure ATM Line Card Parameters)

The **cnflnparm** command configures several parameters for ATM lines originating on the BPX or IGX nodes.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: BPX, IGX

Associated Commands

upln, dnln, cnfln

Syntax

cnflnparm <slot.port> <option 1-4>

<slot.port> Specifies the line to configure.

<option > Specifies the parameter to configure.

Function

This command configures the circuit line alarm integration times in milliseconds for Red and Yellow circuit line alarms. You should set them to correspond to the local carrier's alarm integration times. The **cnflnparm** range for each of these parameters is 60–3932100 ms. Carrier integration times are typically 800 ms–1500 ms for Red Alarm and 1500–3000 ms for Yellow Alarm.

You can also set the queue depth for the two queues associated with the ASI-0 card, the constant bit rate (CBR) queue and the Variable Bit Rate (VBR) queue. The queue depths may be increased to 16,000 bytes per queue.

When you enter **cnflnparm**, the system responds with the screen in Figure 1-24. The **cnflnparm** command is quite similar to the **cnfln** command.

Figure 1-24 cnflnparm—Configure ATM Line Card Parameters

```
sw197                      TN    SuperUser                      IGX 8420                      9.2 Apr. 7 1998    01:54 GMT

LN 5.1 Parameters
  1 Red Alarm - In/Out [ 2500 / 15000] (Dec)
  2 Yel Alarm - In/Out [ 2500 / 15000] (Dec)
```

This Command: cnflnparm 5.1

Which parameter do you wish to change: Which parameter do you wish to change:

cnflnsigparm (Configure Line Signaling Parameters)

The **cnflnsigparm** command configures the line signaling parameters for the CVM and UVM voice cards.

Note The CVM & UVM Heartbeat parameter (option 1) is the rate, in seconds, at which the card sends a signaling (ABCD bits) state update to the other end of the connection, even when there is no change in the state of the signaling bits. This is done because signaling packets are TS data packets, and there is a small chance that a signaling packet might be discarded somewhere in the network. This mechanism is a recovery mechanism to ensure that on-hook and off-hook notifications are not lost.

Increasing this interval will probably have no impact as long as none of the normal signaling TS data packets are being discarded in the network.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX

Associated Commands

cnflnparm, cnflnstats, dsplnstatcnf, dsplnstathist, upln, dnln, cnfln

Syntax

cnflnsigparm <parameter number> <parameter value>

<parameter number> Specifies the number of the parameter to change.

<parameter value> Specifies the new value to enter.

Function

The **cnflnsigparm** command configures the line signaling parameters associated with a line. When you enter **cnflnsigparm**, the screen displays the parameters, as shown in Figure 1-25.

Note In Release 9.2, the CVM and UVM are supported cards. The CIP and CDP cards are not supported.

Figure 1-25 cnflnsigparm—Configure Line Signaling Parameters

```

cc2          LAN SuperUser      IGX 32      9.2        Aug. 30 1998 11:16 PST

1  CVM & UVM Heartbeat          [  2] (sec)
2  CVM & UVM Sig. Polling Rate  [ 10] (sec)
3  CVM & UVM Default Inband Sig Delay [ 96] (msec)
4  CVM & UVM Default Inband Playout Delay [ 200] (msec)
5  CVM & UVM Default Pulse Sig Delay [ 96] (msec)
6  CVM & UVM Default Pulse Playout Delay [ 200] (msec)
7  UVM Number of Packet Slices [  1]
8  CVM & UVM Packet Rate       [ 200] (pkt/sec)
9  CVM & UVM Condition T1 CCS Lines or T1 Lines? [ YES]
10 UVM Default Inband Min. Wink [ 140] (msec)
11 UVM Default Pulse Min. Wink [ 140] (msec)
12 CVM & UVM Condition T1 Lines? [ YES] (yes/no)
    
```

This Command: cnflnsigparm

Which parameter do you wish to change

Table 1-24 describes the parameters of the **cnflnsigparm** command.

Table 1-24 cnflnsigparm Parameters and Descriptions

No.	Parameter	Description	Range
1	Heartbeat	The current state of the signaling is periodically transmitted to the far end even if no signaling transitions are detected. This interval is determined by the value of "heartbeat." The CVM & UVM Heartbeat parameter (option 1) is the rate, in seconds, at which the card sends a signaling (ABCD bits) state update to the other end of the connection, even when there is no change in the state of the signaling bits. This is done because signaling packets are TS data packets, and there is a small chance that a signaling packet might be discarded somewhere in the network. This mechanism is a recovery mechanism to ensure that on-hook and off-hook notifications are not lost. Increasing this interval will probably have no impact as long as none of the normal signaling TS data packets are being discarded in the network.	2–30 sec.
2	Signal Polling Rate	How often the control card polls the UVM/CVM for the status of the signaling. This parameter is used to update displays and statistics.	2–60 sec.
3	Default Inband Signal Delay	The transmit buffer timer value set after a valid signaling transition for in-band signaling arrives. After timeout, a signaling packet is sent.	30–96 msec.
4	Default Inband Playout Delay	The receive buffer timer that "ages" an incoming, time-stamped packet. When the age of the packet reaches the timestamp value, it moves on to depacketization and then to the user-equipment. This parameter is used to even out the delay between signaling packets and voice packets.	0–200 msec.
5	Default Pulse Signal Delay	Same as number 3 but applied to pulse signaling.	30–96 msec.
6	Default Pulse Playout Delay	Same as number 4 but applied to pulse signaling.	100–200 msec.

Table 1-24 cnflnsigparm Parameters and Descriptions (Continued)

No.	Parameter	Description	Range
7	CVM Number of Packet Slices		1
8	Packet Rate	Reserves trunk bandwidth for carrying UVM/CVM signaling.	0–1000 packets/sec.
9	Condition CCS Lines	If you specify “yes” for this parameter, the card applies signaling conditioning during an alarm to all channels on T1 circuit lines to notify PBX of a line failure.	YES or NO
10	Inband Min. Wink	Same as 6 for in-band signaling.	120–300 msec.
11	Pulse Min. Wink	For UVM/CVM connections only, this parameter controls both wink and inter-digit intervals for signaling that arrives over the NPC or NPM signaling channel from a far end UVM/CVM.	120–300 msec.
12	Condition T1 Lines?	If you specify “yes” for this parameter, the card applies signaling conditioning during an alarm to all channels on T1 circuit lines to notify PBX of a line failure.	YES or NO

cnflnstats (Configure Line Statistics Collection)

The **cnflnstats** command configures statistics collection for a line.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

dsplnstatcnf, **dsplnstathist**

Syntax

cnflnstats <line> <stat> <interval> <e | d> [<samples> <size> <peaks>]

<line>	Specifies the port to configure.
<stat>	Specifies the type of statistic to enable/disable.
<interval>	Specifies the time interval of each sample (1–255 minutes).
<eld>	Enables/disables a statistic. 'E' to enable; 'D' to disable.
[samples]	Specifies the number of samples to collect (1–255).
[size]	Specifies the number of bytes per data sample (1, 2, or 4).
[peaks]	Enables the collection of one minute peaks. 'Y' to enable; 'N' to disable.

Function

Primarily, **cnflnstats** is a debug tool. It lets you customize statistics collected on each line. Table 1-25 lists the statistics for FastPacket-based cards with T1 or E1 lines. For other available parameters, refer to the actual screens on a node. For example, Figure 1-27 and Figure 1-28 show available statistics for a UXM port and an ASI-155 port, respectively.

Not all statistic types are available for all lines. Only valid statistics are displayed for you to select.

Table 1-25 Statistics for FastPacket Cards

Statistic Index Number	Statistic	Line Type
1	Bipolar Violations	E1 and T1
2	Frame Slips	E1 and T1
3	Out of Frames	E1 and T1
4	Loss of Signal	E1 and T1
5	Frame Bit Errors	E1 only
6	CRC Errors	E1 only
7	Out of Multi-Frames	E1 only

Table 1-25 Statistics for FastPacket Cards (Continued)

Statistic Index Number	Statistic	Line Type
8	All Ones in Timeslot 16	E1 only

Note Bipolar violations are not generally accumulated on E1 trunk and circuit lines. They are accumulated only on T1 lines connected to Frame Relay ports.

Figure 1-26 illustrates the screen displayed after entering **cnflnstats** on a FastPacket-based card. The three screens in Figure 1-27 show the statistics available on a UXM port. The two screens in Figure 1-28 show the statistics available on an ASI-155 card.

Figure 1-26 cnflnstats—Configure Line Statistics

```
cc2          LAN  SuperUser      IGX 8430    9.2      Aug. 30 1998 11:20 PST

Line Statistic Types

1) Bipolar Violations
2) Frames Slips
3) Out of Frames
4) Losses of Signal
5) Frames Bit Errors
6) CRC Errors
7) Out of Multi-Frames
8) All Ones in Timeslot 16

Last Command: cnflnstats 15 6 255 e

Next Command:
```

Figure 1-27 cnflnstats for a UXM Port

```
sw197          TN      SuperUser      IGX 8420      9.2 Apr. 7 1998 02:11 GMT

Line Statistic Types

    1) Bipolar Violations
    3) Out of Frames
    4) Losses of Signal
    5) Frames Bit Errors
    6) CRC Errors
    29) Line Code Violations
    30) Line Errored Seconds
    31) Line Severely Err Secs
    32) Line Parity Errors
    33) Errored Seconds - Line
    34) Severely Err Secs - Line
    35) Path Parity Errors
    36) Errored Secs - Path
    37) Severely Err Secs - Path
    38) Severely Err Frame Secs
    40) Unavail. Seconds
    41) BIP-8 Code Violations
    42) Cell Framing Errored Seconds
    43) Cell Framing Sev. Err Secs.
    44) Cell Framing Sec. Err Frame Secs
    45) Cell Framing Unavail. Secs.
    62) Total Cells Tx to line
    69) Total Cells Rx from line
    98) Frame Sync Errors
   141) FEBE Counts
   143) Cell Framing FEBE Err Secs

This Command: cnflnstats 5.1

Continue? y
```

sw197 TN SuperUser IGX 8420 9.2 Apr. 7 1998 02:12 GMT

Line Statistic Types

144) Cell Framing FEBE Sev. Err. Secs.	202) Section BIP8 Err. Secs.
151) Yellow Alarm Transition Count	203) Line BIP24 Err. Secs.
152) Cell Framing Yel Transitions	204) Line FEBE Err. Secs.
153) AIS Transition Count	205) Path BIP8 Err. Secs.
193) Loss of Cell Delineation	206) Path FEBE Err. Secs.
194) Loss of Pointer	207) Section BIP8 Severely Err. Secs.
195) OC-3 Path AIS	208) Section Sev. Err. Framing Secs.
196) OC-3 Path YEL	209) Line BIP24 Severely Err. Secs.
197) Section BIP8	210) Line FEBE Severely Err. Secs.
198) Line BIP24	211) Path BIP8 Severely Err. Secs.
199) Line FEBE	212) Path FEBE Severely Err. Secs.
200) Path BIP8	213) Line Unavailable Secs.
201) Path FEBE	214) Line Farend Unavailable Secs.

This Command: cnflnstats 5.1

Continue? y

sw197 TN SuperUser IGX 8420 9.2 Apr. 7 1998 02:12 GMT

Line Statistic Types

215) Path Unavailable Secs.
216) Path Farend Unavailable Secs.
217) HCS Uncorrectable Error
218) HCS Correctable Error

This Command: cnflnstats 5.1

Statistic Type:

Figure 1-28 cnflnstats for an ASI-155

```

sw59          TN      SuperUser      BPX 15      9.2 Apr. 7 1998  10:42 GMT

Line Statistic Types

    3) Loss of Frames                176) Line FEBE
    4) Loss of Signal                177) Path BIP8
   46) HCS Errors                    178) Path FEBE
   147) HCS Errored Seconds          179) Section BIP8 Err. Secs.
   148) HCS Severely Err. Secs.      180) Line BIP24 Err. Secs.
   151) YEL Transitions              181) Line FEBE Err. Secs.
   153) Alarm Indication Signal      182) Path BIP8 Err. Secs.
   170) Loss of Cell Delineation     183) Path FEBE Err. Secs.
   171) Loss of Pointer              184) Section BIP8 Severely Err. Secs.
   172) OC-3 Path AIS                185) Section Sev. Err. Framing Secs.
   173) OC-3 Path YEL                186) Line BIP24 Severely Err. Secs.
   174) Section BIP8
   175) Line BIP24

This Command: cnflnstats 10.1

Continue?

```

```

sw59          TN      SuperUser      BPX 15      9.2 Apr. 7 1998  10:43 GMT

Line Statistic Types

   187) Line FEBE Severely Err. Secs.
   188) Path BIP8 Severely Err. Secs.
   189) Path FEBE Severely Err. Secs.
   190) Line Unavailable Secs.
   191) Line Farend Unavailable Secs.
   192) Path Unavailable Secs.
   193) Path Farend Unavailable Secs.
   194) HCS Correctable Error
   195) HCS Correctable Error Err. Secs
   196) HCS Correctable Error SevErr Secs

This Command: cnflnstats 10.1

Statistic Type:

```

Functional Description

The following table provides a table of BXM “object names.” In many cases, the object name implies the screen field name on the **cnflnstats** screen.

provides a way for the software to fetch physical layer statistics from the Monarch firmware. Note: Where interface type is not specified it is implied to be of generic nature, and is good for all BXM interfaces (T3, E3, OC-3, OC-12).

Table 1-26 lists some line statistics descriptions for the BXM card. (Note that the object name given is in most cases the same as the screen field name, though they may vary slightly from the screen field name.)

Table 1-26 Line Statistics Descriptions for cnflnstats Command (BXM Card)

Object ID	Object Name	Range	Description
01	Message Tag	Byte 0-3: Tag ID Byte 4-7: IP Address	Identifier and source IP address sent with ComBus message. Both will be copied into the response, if any is to be sent.
02	Line Number	1 - 12	Identifies the target line number. If multiple line numbers are sent during the operation, then each line number object terminates the configuration for the string of objects for the previous line number.
03	Statistical Subset	Byte 0: Subset # 0: All stats 1-4: Subset # Byte 1-n: List of Stat Objects in subset	The set operator configures the subset template. The get operator uses the subset number to build a response. It ignores the "byte 1-n" string.
04	Statistics Auto-Reset Option	0: Disabled 1: Enabled	Statistics will be automatically reset after sent to the BCC in an Event Message if the Auto-Reset option is enabled. After the instance of an enable or disable command, the condition will persist until another Auto-Reset command is encountered. Note reset is on a line bases.
05	Total Cells Transmitted	0 - $2^{32}-1$	Total cells transmitted out the physical layer interface.
06	Total Cells Received	0 - $2^{32}-1$	Total cells received at the physical layer interface.
07	RESERVED		
08	LOS	0 - $2^{32}-1$	Number of instances of LOS.
09	LOF	0 - $2^{32}-1$	Number of instances of LOF.
0A	Line AIS	0 - $2^{32}-1$	Number of instances of AIS.
0B	Line RDI (YEL)	0 - $2^{32}-1$	Number of instances of Yellow Alarm detection.
0C	T3 / E3 LCV	0 - $2^{32}-1$	T3 / E3 Line Code Violation Count.
0D	T3 PCV	0 - $2^{32}-1$	T3 P-Bit Code Violations (Line) Count.
0E	T3 CCV	0 - $2^{32}-1$	T3 C-Bit Code Violations (Path) Count.
0F	T3 FEBE	0 - $2^{32}-1$	Far End Block Error.
10	T3 / E3 FERR	0 - $2^{32}-1$	Framing Errors Count.
11	T3 / E3 LES	0 - $2^{32}-1$	Line Errored Seconds Count. Incremented for each second there was at least one LCV.
12	T3 PES	0 - $2^{32}-1$	T3 P-Bit Errored Seconds Count. Incremented for each second there was at least one PES
13	T3 CES	0 - $2^{32}-1$	T3 C-Bit Errored Seconds Count. Incremented for each second there was at least one CES

Table 1-26 Line Statistics Descriptions for cnflnstats Command (BXM Card) (Continued)

Object ID	Object Name	Range	Description
14	T3 / E3 LSES	0 - 2 ³² -1	Line Severely Errored Seconds Count. Incremented for each second there were 44 or more LCVs
15	T3 PSES	0 - 2 ³² -1	T3 P-Bit Severely Errored Seconds Count. Incremented for each second there were 44 or more P-Bit Errors.
16	T3 CSES	0 - 2 ³² -1	T3 C-Bit Severely Errored Seconds Count. Incremented for each second there were 44 or more C-Bit Errors.
17	T3 / E3 SEFS	0 - 2 ³² -1	T3 / E3 Severely Errored Framing Seconds Count incremented for each second ether was one or more Severely Errored Framing Errors (OOF).
18	T3 / E3 UAS	0 - 2 ³² -1	Unavailable Seconds. Count starts from the onset of LOS, LOF, AIS.
19	T3 PLCP LOF	0 - 2 ³² -1	PLCP Loss of Frame. Number of times Loss of Frame detected by the PLCP
1A	T3 PLCP YEL	0 - 2 ³² -1	PLCP Yellow Alarm count.
1B	T3 / E3 PLCP BIP-8	0 - 2 ³² -1	PLCP/G.832 BIP-8 Errors. Incremented each BIP-8 Error detected by PLCP.
1C	T3 / E3 PLCP FEBE	0 - 2 ³² -1	T3 / E3 PLCP/G.832 Far End Block Errors.
1D	T3 PLCP FOE	0 - 2 ³² -1	T3 PLCP Framing Octet Errors
1E	T3 / E3 PLCP BIP-8 ES	0 - 2 ³² -1	T3 / E3 PLCP/G.832 BIP-8 Errored Seconds. Incremented each second at least one PLCP BIP-8 Error was detected.
1F	T3 / E3 PLCP FEBE ES	0 - 2 ³² -1	T3 / E3 PLCP/G.832 FEBE Errored Seconds. Incremented each second at least one PLCP FEBE was detected.
20	T3 / E3 PLCP BIP-8 SES	0 - 2 ³² -1	T3 / E3 PLCP/G.832 BIP-8 Severely Errored Seconds. Incremented each second there were at least 5 BIP-8 Errors.
21	T3 / E3 PLCP FEBE SES	0 - 2 ³² -1	T3 / E3 PLCP/G.832 FEBE Severely Errored Seconds. Incremented each second there were at least 5 FEBE Errors.
22	T3 PLCP SEFS	0 - 2 ³² -1	T3 Severely Errored Framing Seconds. Incremented each second there was at least one SEF event. (PLCP OOF).
23	T3 PLCP UAS	0 - 2 ³² -1	T3 PLCP Unavailable Seconds. Count starts at the onset of LOS, LOF, AIS, PLCP LOF.
24	RESERVED		
25	HCS uncorrectable errors	0 - 2 ³² -1	Number of instances of Loss of Cell Delineation.
26	RESERVED		
27	LOC	0 - 2 ³² -1	Number of instances of Loss of Cell Delineation.
28	OC-3 LOP	0 - 2 ³² -1	Number of instances of Loss of Pointer.
29	OC-3 Path AIS	0 - 2 ³² -1	Number of instances of Path AIS.
2A	OC-3 Path RDI (YEL)	0 - 2 ³² -1	Number of instances of Path Yellow.

Table 1-26 Line Statistics Descriptions for cnflnstats Command (BXM Card) (Continued)

Object ID	Object Name	Range	Description
2B	OC-3 Section BIP-8 Errors	0 - 2 ³² -1	Number of instances of Section BIP-8 Errors.
2C	OC-3 Line BIP-24	0 - 2 ³² -1	Number of instances of Line BIP-24 Errors.
2D	OC-3 Line FEBE	0 - 2 ³² -1	Number of instances of Line Far-End Blocking Errors.
2E	OC-3 Path BIP-8	0 - 2 ³² -1	Number of instances of Path BIP-8 Errors.
2F	OC-3 Path FEBE	0 - 2 ³² -1	Number of instances of Path Far-End Blocking Errors.
30	OC-3 Section BIP-8 ES	0 - 2 ³² -1	Number of seconds that had at least one instance of Section BIP-8 Errors.
31	OC-3 Line BIP-24 ES	0 - 2 ³² -1	Number of seconds that had at least one instance of Line BIP-24 Errors.
32	OC-3 Line FEBE ES	0 - 2 ³² -1	Number of seconds that had at least one instance of Line Far-End Blocking Errors.
33	OC-3 Path BIP-8 ES	0 - 2 ³² -1	Number of seconds that had at least one instance of Path BIP-8 Errors.
34	OC-3 Path FEBE ES	0 - 2 ³² -1	Number of seconds that had at least one instance of Path Far-End Blocking Errors.
35	OC-3 Section BIP-8 SES	0 - 2 ³² -1	Number of seconds that had at least 2500/8800 (OC-3/OC-12) instances of Section BIP-8 Errors.
36	OC-3 Section SEFS	0 - 2 ³² -1	Number of seconds that had at least 2500/8800 (OC-3/OC-12) instances of OOF.
37	OC-3 Line BIP-24 SES	0 - 2 ³² -1	Number of seconds that had at least 2500/10000 (OC-3/OC-12) instances of Line BIP-24 Errors.
38	OC-3 Line FEBE SES	0 - 2 ³² -1	Number of seconds that had at least 2500/10000 (OC-3/OC-12) instances of Line Far-End Blocking Errors.
39	OC-3 Path BIP-8 SES	0 - 2 ³² -1	Number of seconds that had at least 2400 instances of Path BIP-8 Errors.
3A	OC-3 Path FEBE SES	0 - 2 ³² -1	Number of seconds that had at least 2400 instances of Path Far-End Blocking Errors.
3B	OC-3 Line UAS	0 - 2 ³² -1	Number of seconds that the line was unavailable, in LOS, LOF, AIS, or after the occurrence of 10 contiguous Line SESs.
3C	OC-3 Line Far End UAS	0 - 2 ³² -1	Number of seconds that the line experienced at least 10 contiguous Line FEBE SESs.
3D	OC-3 Path UAS	0 - 2 ³² -1	Number of seconds that the line was unavailable, in LOP, Path AIS, or after the occurrence of 10 contiguous Path SESs.
3E	OC-3 Path Far End UAS	0 - 2 ³² -1	Number of seconds that the line experienced at least 10 contiguous Path FEBE SESs.
3F	HCS correctable errors	0 - 2 ³² -1	Number of instances of Loss of Cell Delineation.
40 -41	RESERVED		

cnfclnstats (Configure Circuit Line Statistics)

The **cnfclnstats** command configures parameters for circuit line statistics collection.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX

Associated Commands

dspchstats

Syntax

cnfclnstats <line> <stat> <interval> <eld> [**<samples>** **<size>** **<peaks>**]

- <line> Specifies the circuit line to configure.
- <stat> Specifies the type of statistic to enable/disable.
- <interval> Specifies the time interval of each sample (1–255 minutes).
- <eld> Enables/disables a statistic. 'E' to enable; 'D' to disable.
- [samples] Specifies the number of samples to collect (1–255).
- [size] Specifies the number of bytes per data sample (1, 2, or 4).
- [peaks] Enables/disables the collection of ten second peaks. 'Y' to enable; 'N' disable.

Function

This command configures circuit line statistics. The **cnfclnstats** command lets you customize statistics collection on each circuit line. It primarily applies to debugging and not standard network operation. Table 1-27 lists the **cnfclnstats** statistics by type. Figure 1-29 illustrates the display.

Not all statistic types are available for all lines. Valid statistics appear in full brightness while unavailable types appear in half brightness.

Table 1-27 cnfclnstats Command Statistics and Line Type

Statistic Type	Statistic	Line Type
1	Bipolar Violations	E1 and T1
2	Frame Slips	E1 and T1
3	Out of Frames	E1 and T1
4	Loss of Signal	E1 and T1
5	Frame Bit Errors	E1 only
6	CRC Errors	E1 only
7	Out of Multi-Frames	E1 only
8	All Ones in Timeslot 16	E1 only

Note Typically, bipolar violations do not accumulate on E1 trunks and circuit lines. They accumulate only on T1 lines and trunks.

Figure 1-29 illustrates the screens displayed after entering **cnfclnstats**. The card in the example is a UXM. The line is 5.1. The only statistic in this example is 215—the number of seconds that the path was unavailable. (To configure more statistics, you would have to re-enter the command.) Other parameters in this example are an interval of 5 minutes, an accumulation of 29 samples, a sample size of 2 bytes, and the choice of enabling of 10 minute peaks.

Figure 1-29 cnfclnstats—Configure Circuit Line Statistics (T1 Line)

```

sw197          TN      SuperUser          IGX 8420      9.2 Apr. 7 1998  01:21 GMT

Line Statistic Types

    1) Bipolar Violations                37) Severely Err Secs - Path
    3) Out of Frames                     38) Severely Err Frame Secs
    4) Losses of Signal                  40) Unavail. Seconds
    5) Frames Bit Errors                 41) BIP-8 Code Violations
    6) CRC Errors                       42) Cell Framing Errored Seconds
    29) Line Code Violations             43) Cell Framing Sev. Err Secs.
    30) Line Errored Seconds             44) Cell Framing Sec. Err Frame Secs
    31) Line Severely Err Secs           45) Cell Framing Unavail. Secs.
    32) Line Parity Errors               62) Total Cells Tx to line
    33) Errored Seconds - Line           69) Total Cells Rx from line
    34) Severely Err Secs - Line         98) Frame Sync Errors
    35) Path Parity Errors               141) FEBE Counts
    36) Errored Secs - Path              143) Cell Framing FEBE Err Secs

This Command: cnfclnstats 5.1

Continue?

Line Statistic Types

    144) Cell Framing FEBE Sev. Err. Secs.  202) Section BIP8 Err. Secs.
    151) Yellow Alarm Transition Count      203) Line BIP24 Err. Secs.
    152) Cell Framing Yel Transitions       204) Line FEBE Err. Secs.
    153) AIS Transition Count               205) Path BIP8 Err. Secs.
    193) Loss of Cell Delineation           206) Path FEBE Err. Secs.
    194) Loss of Pointer                    207) Section BIP8 Severely Err. Secs.
    195) OC-3 Path AIS                      208) Section Sev. Err. Framing Secs.
    196) OC-3 Path YEL                      209) Line BIP24 Severely Err. Secs.
    197) Section BIP8                       210) Line FEBE Severely Err. Secs.
    198) Line BIP24                         211) Path BIP8 Severely Err. Secs.
    199) Line FEBE                          212) Path FEBE Severely Err. Secs.
    200) Path BIP8                          213) Line Unavailable Secs.
    201) Path FEBE                          214) Line Farend Unavailable Secs.

This Command: cnfclnstats 5.1

Continue? y

```

cnfclnstats (Configure Circuit Line Statistics)

sw197 TN SuperUser IGX 8420 9.2 Apr. 7 1998 01:22 GMT

Line Statistic Types

- 215) Path Unavailable Secs.
- 216) Path Farend Unavailable Secs.
- 217) HCS Uncorrectable Error
- 218) HCS Correctable Error

Last Command: cnfclnstats 5.1 215 5 e 29 2 y

Next Command:

cnfmxbutil (Configure Muxbus Utilization)

The **cnfmxbutil** command configures the Muxbus or Cellbus utilization factor for each FRP or FRM, respectively.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX

Associated Commands

none

Syntax

cnfmxbutil <slot number> <percentage>

<slot number> Specifies the slot number of the associated FRP card.

<percentage> Specifies the percent of Muxbus or cellbus bandwidth to allocate.

Function

The **cnfmxbutil** command lets you configure the Muxbus or cellbus utilization factor for each FRP or FRM in the node on a slot-by-slot basis. (System software automatically allocates a certain amount of bandwidth for each FRP or FRM in a node. Since the maximum data rate for an FRP or FRM is 2 Mbps, this bandwidth is also the maximum amount of the bus reserved for an FRP or FRM.)

In many applications, each of the four FRP or FRM ports is configured for a large number of 56 or 64 Kbps connections. System software totals the bandwidth required for all the connections, multiplies the total by 121% to reserve extra bandwidth for overhead, then subtracts this amount from the total available bus bandwidth.

However, statistically full utilization is not often required on ports with a large number of connections, so the reserved bus bandwidth may be further reduced. In a node with a T3 or E3 ATM trunk card, much of the bus bandwidth may be assigned to the ATM trunk, so you should exercise caution when allocating the remaining bus bandwidth.

See Figure 1-30 for a sample screen. The screen displays “N/A” for a slot where no FRP or FRM exists. Once the slot is selected, the system displays the message “Enter Utilization Factor.” The range is 1–250%. The default is 121%. The extra 21% for the default is for the overhead for encapsulating the Frame Relay frame into the FastPackets or ATM cells.

Figure 1-30 cnfmxbutil—Configure Muxbus Utilization

gamma Cisco WAN Manager SuperUser IGX 8420 Rev: 9.2 Aug. 14 1998
14:27 PDT

Slot 1: N/A	Slot 9: N/A	Slot 17: 121%	Slot 25: N/A
Slot 2: N/A	Slot 10: N/A	Slot 18: 121%	Slot 26: N/A
Slot 3: N/A	Slot 11: N/A	Slot 19: N/A	Slot 27: N/A
Slot 4: N/A	Slot 12: N/A	Slot 20: N/A	Slot 28: N/A
Slot 5: N/A	Slot 13: N/A	Slot 21: N/A	Slot 29: N/A
Slot 6: N/A	Slot 14: N/A	Slot 22: N/A	Slot 30: N/A
Slot 7: N/A	Slot 15: N/A	Slot 23: N/A	Slot 31: N/A
Slot 8: N/A	Slot 16: N/A	Slot 24: N/A	Slot 32: N/A

This Command: cnfmxbutil

Enter Slot:

cnfnodeparm (Configure Node Parameter)

Sets a variety of general parameters for the nodes in a network.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

none

Syntax

cnfnodeparm

Function

The **cnfnodeparm** command lets you change some of the node's system parameters. The parameters you can set with **cnfnodeparm** are not closely related. Table 1-28 and Table 1-29 describe the parameters for the IGX and BPX nodes, respectively. After each table, an applicable set of **cnfnodeparm** screens appears. The defaults for the parameters are selected by Cisco engineering to operate under normal network conditions. With few exceptions, you should change them only with the guidance of the Cisco TAC.

In Release 9.2, two new options are provided that you can use to determine the maximum frequency with which hitless rebuilds can occur before a full rebuild of the node is started. See "Attributes" section on page 1-220 for more information on hitless rebuild.

Table 1-28 IGX cnfnodeparm Command Parameters

Index	Parameter	Description	Default
1	Update Initial Delay (sec.)	Specifies a factor for generating a delay before conditional updates are transmitted to the network after a controller card switch-over. The <i>Update Initial Delay</i> is multiplied by the number of nodes in the network.	5000 (D)
2	Update Per-Node Delay (ms.)	Specifies the delay between transmission of conditional updates to the nodes.	30000 (D)
3	Comm. Break Test Delay (ms.)	Normal interval between tests for communication break on any node.	30000 (D)
4	Comm. Break Test Offset	Factor between number of communication test failures and test successes to declare a node in communication break condition.	10 (D)
5	Network Timeout Period	Number of milliseconds to wait for a response to a communication test transmission before declaring a failure. The maximum is four failures.	1700 (D)
6	Network Inter-p Period	In inter-domain connections, <i>Network Inter-p Period</i> is the number of milliseconds to wait for a response to a communication test transmission before declaring a failure. The maximum is four failures.	4000 (D)
7	Network Sliding Window Size	Controls the number of control card messages that the node can simultaneously transmit to the network. This parameter defines the number of no acknowledgments outstanding on a controller before NACKS is declared.	1 (D)
8	Number of Normal Timeouts	For intra-domain connections: <i>Number of Normal Timeouts</i> is the maximum number of normal network retransmissions before the node signals a communication break.	7 (D)

* Enter value in either decimal (D) or hexadecimal (H).

cnfnodeparm (Configure Node Parameter)

Table 1-28 IGX cnfnodeparm Command Parameters (Continued)

Index	Parameter	Description	Default
9	Number of Inter-p Timeouts	For inter-domain connections: <i>Number of Inter-p Timeouts</i> is the maximum number of normal network retransmissions before the node signals a communication break.	3 (D)
10	Number of Satellite Timeouts	Maximum number of satellite network retransmissions before the node signals a communication break.	6 (D)
11	Number of Blind Timeouts	Maximum number of communication fail timeouts and retransmissions performed when using the blind channel. "Blind" refers to the message being sent across the trunk without knowing what node is on the other end of the trunk. The Comm Fail test uses this blind channel, however, the Comm Fail application has a non-configurable limit of three (3) comm failures before declaring Comm Fail. For example, the network handler task will attempt to deliver the Comm Fail request message four (4) times before reporting a failure back to the Comm Fail application, which will retry twice more (each with four retries on the blind channel) before declaring Comm Fail. The Number of Blind Timeouts parameter is the number of communication fail timeouts and retransmissions performed when using the blind channel.	4 (D)
12	Number of CB Msg Timeouts	Number of communication break timeouts and retransmissions before the node declares a communication break condition (CB). One successful acknowledgment clears the CB condition.	2 (D)
13	Comm. Fail Interval (ms.)	Minimum time allocated for communication fail testing of all trunks terminating on the local node.	10,000 (D)
14	Comm. Fail Multiplier	Number of Comm. Fail Intervals to skip for good lines.	3 (D)
15	Temperature Threshold (° C.)	Temperature in the enclosure that causes an over-temperature alarm to go to the controller card.	50 (D)
16	NPC Redundancy Configured	A "y" indicates a redundant controller card is required. The absence of a redundant controller card generates an alarm.	Y
17	MT3 Pass Through Delay	The parameter is OBSOLETE.	
18	Network Packet TX Rate	Rate for transmitting control card packets to the network. The range is a series of discreet values: 100 200 333 500 1000 1100 1200 1333 1500 2000. The units of measure are packets per second (pps). The purpose of this parameter is to prevent the control card from flooding the trunk with packets.	500 pps
19	TFTP Memory (x 10 KB)	Specifies the amount of controller memory to allocate for statistics collection.	76 (D)
20	Standby Update Timer	Specifies how often to send update messages to standby controller.	10 (D)
21	Stby Updts Per Pass	Number of messages that can be sent to standby NPC for each update interval.	30 (D)
22	Gateway ID Timer	An inter-domain rerouting timer. How often to look for junction nodes for new route.	30 (D)
23	GLCON Alloc Timer	Another inter-domain rerouting timer controlling gateway LCON function.	30 (D)
24	Comm Fail Delay	Number of seconds before starting to detect communication failures after a controller switch-over.	60 (D)
25	Nw Hdlr Timer (msec)	Network handler timer determines how long to wait to send messages to or receive messages from a remote node.	50 (D)
26	CBUS Delay	Specifies the minimum number of milliseconds the NPC or NPM must wait before it places the next command on the CBUS.	20 (D)

* Enter value in either decimal (D) or hexadecimal (H).

Table 1-28 IGX cnfnodeparm Command Parameters (Continued)

Index	Parameter	Description	Default
27	SNMP Event Logging	Enables maintenance logging of global SNMP messages. These SNMP events are not errors but any GET, SET, and so on. Output goes to a printer connected to the node's auxiliary port or a terminal server (accessible via telnet). Without a connected output device, the parameter is meaningless.	y=yes
28	TFTP Grant Delay (sec)	The number of seconds the node waits before resending a TFTP request after a TFTP error has occurred. This field is display-only: you set the value in Cisco WAN Manager.	1
29	TFTTP ACK Timeout (sec)	The number of seconds the node waits for an acknowledgment of a TFTTP request before it declares the request as timed out. This field is display-only: you set the value in Cisco WAN Manager.	10
30	TFTP Write retries	The number of times the node retries a TFTP operation (not just writes) after a failed attempt. This field is display-only: you set the value in Cisco WAN Manager.	3
31	FRP/FRM Link Status Alarm	Determines whether a signaling failure on an FRP or FRM port causes a major alarm. This parameter applies to any port configured as an NNI.	y=yes
32	Job Lock Timeout	The range is 1–1000 seconds. The default of 0 disables this parameter.	0
33	Max Via LCONs	The maximum number of "via" connections a node can support. (A via connection does not terminate on the node but merely passes through.) This maximum is configurable, but you cannot lower the number below the current limit on the node. The default is the current maximum and should remain unchanged for normal operating conditions.	On an IGX node: 20000 On a BPX node: 50000
34	Max Blind Segment Size	The maximum size of each segment of a blind message. (The full message may be longer than the segment, especially in a large network.) A <i>blind message</i> is a message the local node sends to the far end node when you execute addtrk . If the trunk has many errors, smaller message segments increase the possibility of a successful addtrk . Under normal conditions, this parameter should remain the default.	3570
35	Max XmtMemBlks per NIB	Maximum number of memory blocks available for messages that are awaiting transmission. Under normal conditions, this parameter should remain the default.	3000
36	Max Mem stby update Q size	Maximum number of update messages that can reside in queues awaiting transmission to the standby processor. This percentage is used to determine when to flush the standby message queue when the percentage is reached. Only rare circumstances could provide a reason to change this parameter, so do not change it without first consulting the TAC.	5000
37	Trk Cell Rtnng Restrict	Specifies whether or not trunks on a UXM on an IGX node can route only cell traffic. The Trk Cell Rtnng Restrict parameter lets you specify a default for an option to the addcon command; that is, you can specify what the addcon parameter "Trunk cell routing restricted" prompts the user as a default, for example: "Trunk cell routing restricted? y/n [y]" or "Trunk cell routing restricted? y/n [n]." If "n" is specified, then fast-packet based routing is used. When adding or configuring ATM connections, this prompt will display for all connections (for example, CBR, ABR, UBR, and so on.) except for real-time VBR (rt-VBR) connections because rt-VBR connections should not be routed over FastPacket trunks.	Yes/No

* Enter value in either decimal (D) or hexadecimal (H).

Table 1-28 IGX cnfnodparm Command Parameters (Continued)

Index	Parameter	Description	Default
38	Stat Config Proc Cnt	<p>Stat Config Proc Cnt is the number of statistics that will be enabled before pausing and allowing other processes to run. The default value of 1000 specifies that 1000 statistics should be enabled. But the count is only checked once for every object, so if the number of objects exceeds the count there will be one statistic enabled for each object.</p> <p>For example, if there are 1000 connections and the default count is set, one statistic will be enabled for each connection before pausing. If there are 2000 connections, one statistic will be enabled for each connection, then the number of statistics enabled (2000) will be compared to the count (1000). Since the number enabled exceeds the count, the enabling of statistics will pause.</p>	1000 (where count is between 1 and 100000)
39	Stat Config Proc Delay	<p>Specifies the amount of time in milliseconds (ms) that statistics processing pauses between enabling passes. On a heavily loaded switch, you may increase this number to reduce the load when enabling statistics, but the enabling process takes longer.</p> <p>The total (approximate) amount of time to process a statistics enable request is calculated as shown below:</p> $\text{total_time} = (\text{num_of_stats} / \text{count_per_pass}) * \text{delay_per_pass}$ <p>where num_of_stats is the sum of all statistics for this switch</p> $(\text{conns} * \text{conn stats} + \text{lines} * \text{line stats} + \dots)$ <p>count_per_pass is described above</p> <p>delay_per_pass is described above</p> <p>Using an example of a switch with 1000 connections (10 statistics per connection), three trunks (10 statistics per trunk), 10 ports (10 statistics per port), and the default settings (count = 1000, delay = 2000 msec) yields the following:</p> $\begin{aligned} \text{total_time} &= ((1000 * 10) + (3 * 10) + (10 * 10)) / 1000 * 2000 \\ &= (10130 / 1000) * 2000 \\ &= 11 * 2000 \\ &= 22000 \text{ msec} \\ &= 22 \text{ seconds} \end{aligned}$	2000 (where delay is between 50 and 60000 ms)

* Enter value in either decimal (D) or hexadecimal (H).

Table 1-28 IGX cnfnodeparm Command Parameters (Continued)

Index	Parameter	Description	Default
40	Enable Degraded Mode	<p>Enables or disables the rebuild prevention feature on the node. Enabling this parameter causes a graceful switchover of the active controller card without having to do a rebuild. User connections and user traffic are maintained even when bugs or system overload would cause repeated aborts. Remaining updates are completed as fast as possible without affecting existing connections.</p> <p>If this parameter is disabled and an abort occurs during the update of the standby processor, the node rebuilds. Note that on the IGX, the active/standby/fail lights on the active card do not flash (as they do on the BPX node to indicate that the node is in degraded mode).</p> <p>If enabled, an abort condition will transition the node into degraded mode rather than rebuilding the node. You can disable this parameter (it is enabled by default) so that an abort will result in a rebuild. After degraded has been entered, a minimal set of functionality is available. (See the “High Priority Login” section for more information.) Disabled functions include provisioning and routing, network communications, event logging, and LAN access. However, connections continue to pass traffic. Once in degraded mode, a configurable parameter indicates whether to switch to the standby once it’s ready.</p> <p>If Enable Degraded Mode is enabled (Y), an abort condition will transition the node into degraded mode rather than rebuilding the node. You can disable this parameter so that an abort will result in a node rebuild.</p>	Y (enabled)
41	Enable Feeder Alert	<p>When degraded mode is entered, this parameter is set to yes, then a message is sent to the MGX 8220 interface shelves to update status of node so that connections will not fail. This parameter works in conjunction with degraded mode parameters (for example, Auto Switch on Degrade).</p> <p>If Enable Feeder Alert is disabled (the default) or, due to network congestion, the messages cannot be exchanged between the hub and the feeder to disable LMI, manual intervention can still be achieved by using the addfdrlp and delfdrp commands on the BPX. (Note that addfdrlp and delfdrp commands are service-level commands and can be used only by Cisco personnel.)</p>	[No is default] Yes/No
42	Trk Cell Rtnng Restrict	<p>Specifies whether connections can be routed using cell-based trunks only. The Trk Cell Rtnng Restrict parameter lets you specify a default for an option to the addcon command; that is, you can specify what the addcon parameter “Trunk cell routing restricted” prompts the user as a default, for example: “Trunk cell routing restricted? y/n [y]” or “Trunk cell routing restricted? y/n [n]”. If “n” is specified, then fast-packet based routing is used.</p>	Yes/No
43	Enable Reroute on Comm Fail	<p>Default value is FALSE. If there is communication failure, the node will not send the topology update message to the other nodes. If the value is set to TRUE, the node will send out a line change message and the remote nodes (master/slave) will deroute/condition the connections. You would sometimes use this parameter in conjunction with the Abit Notifications on LMI/ILMI Interface feature (which you enable with the cnfnodeparm SuperUser command). See the Abit Notifications feature description in the <i>Cisco WAN Switching Command Reference</i> for information on the Abit Notifications feature.</p>	[N] (Y/N)

* Enter value in either decimal (D) or hexadecimal (H).

Table 1-28 IGX cnfnodparm Command Parameters (Continued)

Index	Parameter	Description	Default
44	Auto Switch on Degrade	<p>When degraded mode is entered, the standby card is updated and ready. If the default is enabled (yes) then the card switchover happens automatically. If this parameter is set to yes, when degraded mode is entered, then the standby card is ready, and the card switchover happens automatically.</p> <p>After a node has entered degraded mode (see Enable Degraded Mode parameter), this parameter indicates whether to switch to the standby card once it is ready. The default setting is to enable switching. You can set this parameter to disable switching if you want to allow further time to diagnose the problem rather than switching to the other processor, or to stop switching due to repeated aborts.</p>	[Yes is default] Yes/No
45	Max Degraded Aborts	<p>Use this parameter to determine the maximum frequency with which degraded mode aborts can occur before some other action is taken. In other words, they will be used to threshold degraded mode aborts. Another action could be a full rebuild, or it could be entering degraded mode. The allowable configurable range is shown in the Default column to the right.</p> <p>This parameter indicates the maximum number of aborts while in the degraded state. In the case where the processor continues to reset while in degraded mode, each reset will result in the processor staying in degraded mode unless this threshold has been reached, in which case the next reset will cause a full rebuild of the node. The desired result is to avoid infinite aborts while in degraded mode, which would essentially lock the node indefinitely.</p> <p>You can set Max Degraded Aborts to its maximum value (255) to indicate that the processor will be allowed to abort indefinitely without going through a full rebuild. This approach can be used to avoid a full rebuild (which will impact the user plane) until an appropriate time is reached when it may be reset or replaced.</p>	100 is default (range is 0–100 or 255 or infinite)
46	Max Hitless Rebuild Count	<p>Use this parameter to determine the maximum frequency with which hitless rebuilds can occur before some other action is taken. In other words, they will be used to threshold hitless rebuilds. Another action could be a full rebuild, or it could be entering degraded mode. The allowable configurable range is shown in the Default column to the right.</p> <p>For example, using the default values of 100 for Max Hitless Rebuild Count and 1000 hours Hitless Counter Reset Time, a maximum of 100 hitless rebuilds can occur within a 1000 hour period before it is determined that degraded mode should be entered. For each hitless rebuild that occurs, if 1000 hours pass without the maximum hitless rebuild count having been exceeded, then that hitless rebuild will have aged beyond the point where it is still considered for thresholding purposes.</p> <p>If the maximum hitless rebuild count is set to “255” for “infinite,” then an unlimited number of hitless rebuilds can occur without the thresholding mechanism triggering a full rebuild or a change to degraded mode. In this case, the configurable hitless counter reset time will be ignored, no full rebuilds will be automatically performed. This allows you to determine when the best time is to manually perform a full rebuild, probably during a period of low traffic.</p> <p>At the other extreme, if the maximum hitless rebuild is set to zero, then no hitless rebuilds will be attempted. This disables the feature.</p> <p>When the configurable parameters Max Hitless Rebuild Count and Hitless Counter Reset Time are reconfigured, then the statistical counters for hitless rebuilds will be reset. The Max Hitless Rebuild Count and Hitless Counter Reset Time are new in Release 9.2, and will be stored in BRAM.</p>	100 (range is 0–100 or 255 or infinite)

* Enter value in either decimal (D) or hexadecimal (H).

Table 1-28 IGX cnfnodeparm Command Parameters (Continued)

Index	Parameter	Description	Default
47	Hitless Counter Reset Time	<p>Use this parameter to determine the maximum frequency with which hitless rebuilds can occur before some other action is taken. In other words, they will be used to threshold hitless rebuilds. Another action could be a full rebuild, or it could be entering degraded mode. The allowable configurable range is shown in the Default column to the right.</p> <p>For example, using the default values of 100 for Max Hitless Rebuild Count and 1000 hours Hitless Counter Reset Time, a maximum of 100 hitless rebuilds can occur within a 1000 hour period before it is determined that degraded mode should be entered. For each hitless rebuild that occurs, if 1000 hours pass without the maximum hitless rebuild count having been exceeded, then that hitless rebuild will have aged beyond the point where it is still considered for thresholding purposes.</p> <p>If the maximum hitless rebuild count is set to “255” for “infinite”, then an unlimited number of hitless rebuilds can occur without the thresholding mechanism triggering a full rebuild or a change to degraded mode. In this case, the configurable hitless counter reset time will be ignored, no full rebuilds will be automatically performed. This allows you to determine when the best time is to manually perform a full rebuild, probably during a period of low traffic.</p> <p>At the other extreme, if the maximum hitless rebuild is set to zero, then no hitless rebuilds will be attempted. This disables the feature.</p> <p>When the configurable parameters Max Hitless Rebuild Count and Hitless Counter Reset Time are reconfigured, then the statistical counters for hitless rebuilds will be reset. The Max Hitless Rebuild Count and Hitless Counter Reset Time are new in Release 9.2, and will be stored in BRAM.</p>	1000 hours (range is 1–1000)
48	Send Abit Early	<p>Specifies whether Abit is sent on deroute. The default is set to no initially. If you issue this command again, the prompt then shows the previously-provisioned value.</p> <p>Use the Send Abit Early parameter (option 48) to enable or disable the Abit Notifications feature. (The default is "N" which means the Abit Notifications feature is disabled.) If the Send Abit Early parameter is set to N, then the settings for parameter 49 (Abit Timer Multiplier M) and parameter 50 (Abit Timer Granularity N) are ignored and have no effect.</p> <p>After you enable the Send Abit Early parameter by setting it to yes, you can set the Abit Timer Granularity N and Abit Timer Multiplier M parameters.</p> <p>The Send Abit Early parameter works on conjunction with the Abit Timer Multiplier M and Abit Timer Granularity N parameters. You must set the Send Abit Early parameter to yes to enable it, then you can set the Abit Timer Multiplier M and Abit Timer Granularity N parameters.</p> <p>The different Abit behavior in Release 9.2 is completely local to the node and is applicable to the master and slave ends of connections when the connections are derouted. When only one of the nodes connected by a connection has the Send Abit Early enabled (set to “Y”), the timing in which that the Abit notification feature is sent at one end of the connection may be drastically different from the other end of the connection. Thus, it is recommended that the Send Abit Early parameter be configured the same on all nodes.</p> <p>For more information on the Send Abit Notification on ILMI/LMI using Configurable Timer feature, refer to the “Sending Abit Notification on ILMI/LMI Using Configurable Timer” section on page 3-7 in the <i>Cisco WAN Switching Command Reference, Release 9.2</i> manual.</p>	[N is default] (Y/N)

* Enter value in either decimal (D) or hexadecimal (H).

Table 1-28 IGX cnfnodeparm Command Parameters (Continued)

Index	Parameter	Description	Default
49	Abit Timer Multiplier M	<p>The Abit Timer Multiplier M and Abit Timer Granularity N parameters are used in conjunction with the Send Abit Early parameter. You must set the Send Abit Early parameter to yes to enable it, then you can set Abit Timer Multiplier M and Abit Timer Granularity N parameters.</p> <p>You can set the Abit Timer Multiplier M option from 0 to 100. The default value is 0. When you execute the cnfnodeparm command, the prompt shows the previously-configured value, or the default value if no upgrade or no configuration on these values was done previously.</p> <p>A value "X" is the time to wait before Abit = 0 is sent out if the connection is in a derouted state. A connection derouted at a time period between 0 and N will send out Abit = 0 at a time between X and X + N, if the connection continues to be in a derouted state. In cases where there are many Abit status changes to report to the CPE, the last Abit updates may be delayed much longer because Abit updates process about 47 connections per second. To make a compromise between performance and the granularity of timers, Abit Timer Multiplier N can be configured to be from 3 to 255 seconds. The bigger the value of N, the better the system performance will be.</p> <p>The value of X is M * N (Abit Timer Multiplier M * Abit Timer Granularity N values). To compromise between performance and the granularity of timers, N can be configured to be from 3 to 255 seconds; the bigger the value of N, the better the system performance will be. The value of X (M * N) is set such that M can be configured to be from 0 to 100. The default value for N is 3 seconds. The default value for M is 0, meaning Abit = 0 sent out on deroute.</p> <p>It is recommended that the value of X (value of Abit Timer Multiplier M * value of Abit Timer Granularity N) be set such that when a trunk fails, the connections are given sufficient time to reroute successfully, avoiding the need to send out Abit = 0.</p> <p>If the value of X is set to be smaller than the normal time to reroute connections when a trunk fails, the time to complete rerouting them may take longer. This can happen for line cards and feeder trunks that have LMI/ILMI protocol runs on those cards, such as BXM on BPX and Frame Relay cards on IGX. Note that it takes time for those cards to process Abit status information for each connection coming from controller card through CommBus messages.</p> <p>To follow the general Release 9.2 interoperability, it is recommended that the Abit Notifications feature not be used when the standby control processor is in a locked state.</p>	<p>[Default is 0] (D)</p>

* Enter value in either decimal (D) or hexadecimal (H).

Table 1-28 IGX cnfnodeparm Command Parameters (Continued)

Index	Parameter	Description	Default
50	Abit Timer Granularity N	<p>You can set the Abit Timer Granularity N option from 3 to 255 seconds. The default value is 3 seconds. You use the Abit Timer Granularity N and Abit Timer Multiplier M parameters in conjunction with the Send Abit Early parameter to configure the Early Abit Notifications on LMI/ILMI Interface using Configurable Timer feature in Release 9.2 and beyond. (The Send Abit Early parameter must be enabled before you can set the Abit Timer Multiplier M and Abit Timer Granularity N parameters.)</p> <p>The Early Abit Notifications feature lets the user specify the timer interval to wait before Abit = 0 is sent out if a connection fails to reroute and is in the derouted state too long. No precise timer is kept for each connection. Instead, all connections derouted during a certain time period go to the same bucket. This time period is "N", which defines the granularity of the timers, and is specified by the Abit Timer Granularity N parameter. Also, the value "X" is the time to wait before Abit = 0 is sent out if the connection is in a derouted state. A connection that is derouted at a time period between 0 and N will send out Abit = 0 at a time between X and X + N if the connection continues to be in a derouted state. In cases where there are many Abit status changes to report to the CPE, the last Abit updates may be delayed much longer because Abit updates process about 47 connections per second.</p> <p>To compromise between performance and the granularity of timers, you can configure the N value (Abit Timer Granularity N) to be from 3 to 255 seconds. The bigger the value of N, the better the system performance will be. The value of X should be M * N, where M can be configured to be from 0 to 100. The default value for N (specified by the Abit Timer Multiplier N parameter) is 3 seconds. The default value for M is 0, meaning that Abit = 0 is sent out on deroute. It is recommended that the value of X (Abit Timer Multiplier M value * Abit Timer Granularity N value) be set such that when a trunk fails, the connections are given sufficient time to reroute successfully, avoiding the need to send out Abit = 0.</p>	[Default is 3 seconds]

* Enter value in either decimal (D) or hexadecimal (H).

Figure 1-31 shows the available parameters on an IGX node.

Figure 1-31 IGX cnfnodeparm Parameters

The example shows the two screens required to show all **cnfnodeparm** parameters on an IGX node.

```
pubsidx1      TN      SuperUser      IGX 8420      9.2 May  9 1998  09:30 GMT

 1 Update Initial Delay [ 5000] (D)  16 CC Redundancy Cnfged [  Y] (Y/N)
 2 Update Per-Node Delay [30000] (D)  17 MT3 Pass Through Relay [  Y] (Y/N)
 3 Comm-Break Test Delay [30000] (D)  18 Nw Pkt Tx Rate (pps) [ 500] (D)
 4 Comm-Break Test Offset [  10] (D)  19 Stats Memory (x 10KB) [  61] (D)
 5 Network Timeout Period [ 1700] (D)  20 Standby Update Timer [  1] (D)
 6 Network Inter-p Period [ 4000] (D)  21 Stby Updts Per Pass [  30] (D)
 7 NW Sliding Window Size [  1] (D)  22 Gateway ID Timer [  30] (D)
 8 Num Normal Timeouts [  7] (D)  23 GLCON Alloc Timer [  30] (D)
 9 Num Inter-p Timeouts [  3] (D)  24 Comm Fail Delay [  60] (D)
10 Num Satellite Timeouts [  6] (D)  25 Nw Hdlr Timer (msec) [ 100] (D)
11 Num Blind Timeouts [  4] (D)  26 CBUS Delay (msec) [  20] (D)
12 Num CB Msg Timeouts [  2] (D)  27 SNMP Event logging [  Y] (Y/N)
13 Comm Fail Interval [10000] (D)  28 TFTP Grant Delay (sec) [  1] (D)
14 Comm Fail Multiplier [  3] (D)  29 TFTP ACK Timeout (sec) [ 10] (D)
15 Temperature Threshold [  50] (D)  30 TFTP Write Retries [  3] (D)
```

This Command: cnfnodeparm

Continue? y

```
pubsidx1      TN      SuperUser      IGX 8420      9.2 May  9 1998  09:31 GMT

31 FRP Link Status Alarm [  Y] (Y/N)
32 Job Lock Timeout [  0] (D)
33 Max Via LCONS [ 5000] (D)
34 Max Blind Segment Size [ 3570] (D)
35 Max Nib Xmit Msgs [ 1000] (D)
36 Max Stby Update Q Sz [  412] (D)
37 Trk Cell Rtng Restrict [  Y] (Y/N)
38 Stat Config Proc Cnt [ 1000] (D)
39 Stat Config Proc Delay [ 2000] (D)
40 Enable Degraded Mode [  N] (Y/N)
41 Trk Cell Rtng Restrict [N] (Y/N)
42 Enable Feeder Alert [N] (Y/N)
43 Reroute on Comm Fail [N] (Y/N)
44 Auto Switch on Degrade [Y] (Y/N)
45 Max Degraded Aborts [100] (D)
46 Max Htls Rebuilt Count [100] (D)
47 Htls Counter Reset Time [1000] (D)
48 Send Abit Early [Y] (Y/N)
49 Abit Timer Multiplier M [2] (D)
50 Abit Timer Granularity M [3] (0)
```

This Command: cnfnodeparm

Enter parameter index:

Table 1-29 shows the available parameters on a BPX node for the **cnfnodeparm** command.

Table 1-29 BPX cnfnodeparm Command Parameters

Index	Parameter	Description	Default
1	Update Initial Delay (sec.)	This delay, multiplied times the number of nodes in the network, is the delay before conditional updates are transmitted to the network after a BCC switchover.	5000 seconds
2	Update Per-Node Delay (ms.)	Delay between transmission of conditional updates to nodes.	30000 msecs
3	Comm. Break Test Delay (ms.)	Interval between tests for communication breaks on any node.	3000 msecs
4	Comm. Break Test Offset	Factor between number of communication test failures and successful tests to declare a node in communication break condition.	10 (D)
5	Network Timeout Period	The time a node waits for a response to a communication test transmission before it declares a failure. Four failures allowed.	1700 (D)
6	Network Inter-p Period	The time a node waits for a response to a communication test transmission on inter-domain connections before it declares a failure. The maximum number failures is four.	4000 (D)
7	NW Sliding Window Size	Controls the number of BCC messages that can be transmitted simultaneously. Defines number of "no acknowledgments outstanding" on controller before NACKS declared.	1 (D)
8	Num. Normal Timeouts	Number of normal network retransmissions allowed before issuing a communication break condition (for intra-domain connections).	7 (D)
9	Num. Inter-p Timeouts	Number of normal network retransmissions allowed before issuing a communication break condition (for inter-domain connections).	3 (D)
10	Num. Satellite Timeouts	Number of satellite network retransmissions allowed before issuing a communication break.	6 (D)
11	Number of Blind Timeouts	Maximum number of communication fail timeouts and retransmissions performed when using the blind channel. "Blind" refers to the message being sent across the trunk without knowing what node is on the other end of the trunk. The Comm Fail test uses this blind channel.	4 (D)
12	Number of CB Msg Timeouts	Number of communication break timeouts and retransmissions before declaring a communication break (CB) condition. One successful acknowledgment clears CB.	2 (D)
13	Comm. Fail Interval (ms.)	Minimum time allocated for communication fail testing of all trunks terminating on the current node.	10,000 (D)
14	Comm. Fail Multiplier	Number of Comm. Fail Intervals to skip for good lines.	3 (D)
15	CC Redundancy Configured	Yes indicates a redundant controller card is required to prevent an alarm.	Y
16	Stats Memory (x 100 KB)	The amount of controller memory to allocate to statistics collection.	132 (D)
17	Standby Update Timer	Determines how often to send update messages to standby controller.	10 (D)
18	Stby Updts Per Pass	Number of messages that can be sent to standby NPC for each update interval.	50 (D)
19	Gateway ID Timer	An inter-domain rerouting timer. How often to look for junction nodes for new route.	30 (D)
20	GLCON Alloc Timer	Another inter-domain rerouting timer controlling gateway LCON function.	30 (D)
21	Comm Fail Delay	Number of seconds before starting to detect communication failures after a controller switchover.	60 (D)

* Enter value in either decimal (D) or hexadecimal (H).

Table 1-29 BPX cnfnodeparm Command Parameters (Continued)

Index	Parameter	Description	Default
22	Nw. Hdlr Timer (msec)	Network handler timer determines how long to wait to send messages to or receive messages from a remote node.	50 (D)
23	SAR CC Transmit Rate	Transmit data rate for BCC traffic to standby BCC (Kbps).	560 (D)
24	SAR High Transmit Rate	Transmit data rate for BCC traffic to other BCC nodes (Kbps).	280 (D)
25	SAR Low Transmit Rate	Transmit data rate for BCC traffic to ICC nodes (Kbps).	56 (D)
26	SAR VRAM Cngestn Limit	The threshold for BCC traffic receive queue congestion that causes cell discards.	7680 (D)
27	SAR VRAM Cell Discard	BCC traffic receive queue discard amount in cells.	256 (D)
28	ASM Card Cnfged	Yes indicates an Alarm/Status Monitor card is required or an alarm will be generated.	Y
29	TFTP Grant Delay (sec)	The number of seconds the node waits before resending a TFTP request after a TFTP error has occurred. This field is display-only: you set the value in Cisco WAN Manager.	1
30	TFTP ACK Timeout (sec)	The number of seconds the node waits for an acknowledgment of a TFTP request before it declares the request as timed out. This field is display-only: you set the value in Cisco WAN Manager.	10
31	TFTP Write Retries	The number of times the node retries a TFTP operation (not just writes) after a failed attempt. This field is display-only: you set the value in Cisco WAN Manager.	3
32	SNMP Event logging	Enables maintenance logging of global SNMP messages. These SNMP events are not errors but any GET, SET, and so on. Output goes to a printer connected to the node's auxiliary port or a terminal server (accessible via telnet). Without a connected output device, the parameter is meaningless.	y=yes
33	Job Lock Timeout	The range is 1–1000 seconds. The default of 0 disables this parameter.	60
34	Max Via LCONs	The maximum number of “via” connections a via node can support. The default is the maximum for the node and should remain the default under normal operating conditions.	50000
35	Max Blind Segment Size	The maximum size of each segment of a blind message. (The full message may be longer than the segment, especially in a large network.) A <i>blind message</i> is a message the local node sends to the far end node when you execute addtrk . If the trunk has many errors, smaller message segments increase the possibility of a successful addtrk . Under normal conditions, this parameter should remain the default.	3570
36	Max XmtMemBlks per NIB	Maximum number of memory blocks available for messages that are awaiting transmission. Under normal conditions, this parameter should remain the default.	3000
37	Max Mem on Stby Q (%)	Maximum number of update messages that can reside in queues awaiting transmission to the standby processor. This percentage is used to determine when to flush the standby message queue when the percentage is reached. Only rare circumstances could provide a reason to change this parameter, so do not change it without first consulting the TAC.	5000

* Enter value in either decimal (D) or hexadecimal (H).

Table 1-29 BPX cnfnodeparm Command Parameters (Continued)

Index	Parameter	Description	Default
38	Stat Config Proc Cnt	<p>Stat Config Proc Cnt is the number of statistics that will be enabled before pausing and allowing other processes to run. The default value of 1000 specifies that 1000 statistics should be enabled. But the count is only checked once for every object, so if the number of objects exceeds the count there will be one statistic enabled for each object.</p> <p>For example, if there are 1000 connections and the default count is set, one statistic will be enabled for each connection before pausing. If there are 2000 connections, one statistic will be enabled for each connection, then the number of statistics enabled (2000) will be compared to the count (1000). Since the number enabled exceeds the count, the enabling of statistics will pause.</p>	1000 (where count is between 1 and 100000)
39	Stat Config Proc Delay	<p>Specifies the amount of time in milliseconds (ms) that statistics processing pauses between enabling passes. On a heavily loaded switch, you may increase this number to reduce the load when enabling statistics, but the enabling process takes longer.</p> <p>The total (approximate) amount of time to process a statistics enable request is calculated as shown below:</p> $\text{total_time} = (\text{num_of_stats} / \text{count_per_pass}) * \text{delay_per_pass}$ <p>where num_of_stats is the sum of all statistics for this switch (conns * conn stats + lines * line stats + ...)</p> <p>count_per_pass is described above</p> <p>delay_per_pass is described above</p> <p>Using an example of a switch with 1000 connections (10 statistics per connection), three trunks (10 statistics per trunk), 10 ports (10 statistics per port), and the default settings (count = 1000, delay = 2000 msec) yields the following:</p> $\begin{aligned} \text{total_time} &= ((1000 * 10) + (3 * 10) + (10 * 10)) / 1000 * 2000 \\ &= (10130 / 1000) * 2000 \\ &= 11 * 2000 \\ &= 22000 \text{ msec} \\ &= 22 \text{ seconds} \end{aligned}$	2000 (where delay is between 50 and 60000 ms)
40	Enable Degraded Mode	<p>Enables or disables the rebuild prevention feature on the node. Enabling this parameter causes a graceful switchover of the active controller card without having to do a rebuild. User connections and user traffic are maintained even when bugs or system overload would cause repeated aborts. Remaining updates are completed as fast as possible without affecting existing connections.</p> <p>If this parameter is disabled and an abort occurs during the update of the standby processor, the node rebuilds. On the BPX, the active/standby/fail lights on the active card flash at the same time indicating the node is in degraded mode.</p>	No (disabled)
41	Trk Cell Rtng Restrict	<p>Specifies whether connections can be routed using cell-based trunks only. The Trk Cell Rtng Restrict parameter lets you specify a default for an option to the addcon command; that is, you can specify what the addcon parameter “Trunk cell routing restricted” prompts the user as a default, for example: “Trunk cell routing restricted? y/n [y]” or “Trunk cell routing restricted? y/n [n]”. If “n” is specified, then fast-packet based routing is used.</p>	Yes/No

* Enter value in either decimal (D) or hexadecimal (H).

Table 1-29 BPX cnfnodeparm Command Parameters (Continued)

Index	Parameter	Description	Default
42	Enable Feeder Alert	<p>When degraded mode is entered, this parameter is set to yes, then a message is sent to the MGX 8220 interface shelves to update status of node so that connections will not fail. This parameter works in conjunction with degraded mode parameters (for example, Auto Switch on Degrade).</p> <p>If Enable Feeder Alert is disabled (the default) or, due to network congestion, the messages cannot be exchanged between the hub and the feeder to disable LMI, manual intervention can still be achieved by using the addfdrlp and delfdrp commands on the BPX. (Note that addfdrlp and delfdrp commands are service-level commands and can be used only by Cisco personnel.)</p>	[No is default] Yes/No
43	Reroute on Comm Failure	<p>Default value is False. If there is communication failure, the node will not send the topology update message to the other nodes. If the value is set to True, the node will send out a line change message and the remote nodes (master/slave) will deroute/condition the connections.</p> <p>You would sometimes use this parameter in conjunction with the Abit Notifications on LMI/ILMI Interface feature (which you enable with the cnfnodeparm SuperUser command). See the <i>Cisco WAN Switch Command Reference</i> for information on the Abit Notifications feature.</p>	True/False
44	Auto Switch on Degrade	<p>When degraded mode is entered, the standby card is updated and ready. If the default is enabled (yes) then the card switchover happens automatically. If this parameter is set to yes, when degraded mode is entered, then the standby card is ready, and the card switchover happens automatically.</p>	[Yes is default] Yes/No
45	Max Degraded Aborts	<p>Use this parameter to determine the maximum frequency with which degraded mode aborts can occur before some other action is taken. In other words, they will be used to threshold degraded mode aborts. Another action could be a full rebuild, or it could be entering degraded mode. The allowable configurable range is shown in the Default column to the right.</p> <p>For example, using the default values of 100 for Max Hitless Rebuild Count, and 1000 hours Hitless Counter Reset Time, a maximum of 100 hitless rebuilds can occur within a 1000 hour period before it is determined that degraded mode should be entered. For each hitless rebuild that occurs, if 1000 hours pass without the maximum hitless rebuild count having been exceeded, then that hitless rebuild will have aged beyond the point where it is still considered for thresholding purposes.</p>	100 is default (range is 0–100 or 255 (infinite))

* Enter value in either decimal (D) or hexadecimal (H).

Table 1-29 BPX cnfnodparm Command Parameters (Continued)

Index	Parameter	Description	Default
46	Max Hitless Rebuild Count	<p>Use this parameter to determine the maximum frequency with which hitless rebuilds can occur before some other action is taken. In other words, they will be used to threshold hitless rebuilds. Another action could be a full rebuild, or it could be entering degraded mode. The allowable configurable range is shown in the Default column to the right.</p> <p>For example, using the default values of 100 for Max Hitless Rebuild Count, 1000 hours Hitless Counter Reset Time, a maximum of 100 hitless rebuilds can occur within a 1000 hour period before it is determined that degraded mode should be entered. For each hitless rebuild that occurs, if 1000 hours pass without the maximum hitless rebuild count having been exceeded, then that hitless rebuild will have aged beyond the point where it is still considered for thresholding purposes.</p> <p>If the maximum hitless rebuild counts is set to “255” for “infinite,” then an unlimited number of hitless rebuilds can occur without the thresholding mechanism triggering a full rebuild or a change to degraded mode. In this case, the configurable hitless counter reset time will be ignored, no full rebuilds will be automatically performed. This allows you to determine when the best time is to manually perform a full rebuild, probably during a period of low traffic.</p> <p>At the other extreme, if the maximum hitless rebuild is set to zero, then no hitless rebuilds will be attempted. This disables the feature.</p> <p>When the configurable parameters Max Hitless Rebuild Count and Hitless Counter Reset Time are reconfigured, then the statistical counters for hitless rebuilds will be reset. The Max Hitless Rebuild Count and Hitless Counter Reset Time are new in Release 9.2, and will be stored in BRAM.</p>	<p>100</p> <p>(range is 0–100 or 255 (infinite))</p>
47	Hitless Counter Reset Time	<p>Use this parameter to determine the maximum frequency with which hitless rebuilds may occur before some other action is taken. In other words, they will be used to threshold hitless rebuilds. Some other action could be a full rebuild, or it could be entering degraded mode. The allowable configurable range is shown in the Default column to the right.</p> <p>For example, using the default values of 100 for Max Hitless Rebuild Count, 1000 hours Hitless Counter Reset Time, a maximum of 100 hitless rebuilds may occur within a 1000 hour period before it is determined that degraded mode should be entered. For each hitless rebuild that occurs, if 1000 hours pass without the maximum hitless rebuild count having been exceeded, then that hitless rebuild will have aged beyond the point where it is still considered for thresholding purposes.</p>	<p>1000 hours</p> <p>(range is 1–1000)</p>

* Enter value in either decimal (D) or hexadecimal (H).

Table 1-29 BPX cnfnodeparm Command Parameters (Continued)

Index	Parameter	Description	Default
48	Send Abit Early	<p>Specifies whether Abit is sent on deroute. The default is set to no initially. If you issue this command again, the prompt then shows the previously provisioned value.</p> <p>Use the Send Abit Early parameter (option 48) to enable or disable the Abit Notifications feature. (The default is “N” which means the Abit Notifications feature is disabled.) If the Send Abit Early parameter is set to N, then the settings for parameter 49 (Abit Timer Multiplier M) and parameter 50 (Abit Timer Granularity N) are ignored and have no effect.</p> <p>After you enable the Send Abit Early parameter by setting it to yes, you can set the Abit Timer Granularity N and Abit Timer Multiplier M parameters.</p> <p>The Send Abit Early parameter works in conjunction with the Abit Timer Multiplier M and Abit Timer Granularity N parameters. You must set the Send Abit Early parameter to yes to enable it, then you can set the Abit Timer Multiplier M and Abit Timer Granularity N parameters.</p> <p>Note that a preRelease 9.1.07 node or Release 9.1.07 node with the Release 9.1.07 cnfnodeparm Send Abit immediately parameter turned off behaves the same way as a Release 9.2 node with the Early Abit Notifications on ILMI/LMI Interface using Configurable Timer feature disabled. A 9.1.07 node with the cnfnodeparm Send Abit immediately parameter turned on behaves the same as a Release 9.2 node with the Send Abit Early (option 48 in cnfnodeparm) set to yes and the Abit Timer Multiplier M (option 49 in cnfnodeparm) set to 0.</p> <p>The different Abit behavior in Release 9.2 is completely local to the node and is applicable to the master and slave ends of connections when the connections are derouted. When only one of the nodes connected by a connection has the Send Abit Early enabled (set to “Y”), the timing in which that the Abit notification feature is sent at one end of the connection may be drastically different from the other end of the connection. Thus, it is recommended that the Send Abit Early parameter be configured the same on all nodes.</p> <p>For more information on the Send Abit Notification on ILMI/LMI using Configurable Timer feature, refer to “Sending Abit Notification on ILMI/LMI Using Configurable Timer” section on page 3-7 in the <i>Cisco WAN Switching Command Reference, Release 9.2</i> manual.</p>	[N is default] (Y/N)

* Enter value in either decimal (D) or hexadecimal (H).

Table 1-29 BPX cnfnodparm Command Parameters (Continued)

Index	Parameter	Description	Default
49	Abit Timer Multiplier M	<p>The Abit Timer Multiplier M and Abit Timer Granularity N parameters are used in conjunction with the Send Abit Early parameter. You must set the Send Abit Early parameter to yes to enable it, then you can set Abit Timer Multiplier M and Abit Timer Granularity N parameters.</p> <p>You can set the Abit Timer Multiplier M option from 0 to 100. The default value is 0. When you execute the cnfnodparm command, the prompt shows the previously configured value, or the default value if no upgrade or no configuration on these values was done previously.</p> <p>A value "X" is the time to wait before Abit = 0 is sent out if the connection is in a derouted state. A connection derouted at a time period between 0 and N will send out Abit = 0 at a time between X and X + N , if the connection continues to be in a derouted state. In cases where there are many Abit status changes to report to the CPE, the last Abit updates may be delayed much longer because Abit updates process about 47 connections per second. To make a compromise between performance and the granularity of timers, Abit Timer Multiplier N can be configured to be from 3 to 255 seconds. The bigger the value of N, the better the system performance will be.</p> <p>The value of X is M * N (Abit Timer Multiplier M * Abit Timer Granularity N values). To compromise between performance and the granularity of timers, N can be configured to be from 3 to 255 seconds; the bigger the value of N, the better the system performance will be. The value of X (M * N) is set such that M can be configured to be from 0 to 100. The default value for N is 3 seconds. The default value for M is 0, meaning Abit = 0 sent out on deroute.</p> <p>It is recommended that the value of X (value of Abit Timer Multiplier M * value of Abit Timer Granularity N) be set such that when a trunk fails, the connections are given sufficient time to reroute successfully, avoiding the need to send out Abit = 0.</p> <p>If the value of X is set to be smaller than the normal time to reroute connections when a trunk fails, the time to complete rerouting them may take longer. This can happen for line cards and feeder trunks that have LMI/ILMI protocol runs on those cards, such as BXM on BPX and Frame Relay cards on IGX. Note that it takes time for those cards to process Abit status information for each connection coming from controller card through CommBus messages.</p> <p>Note that a preRelease 9.1.07 node or a 9.1.07 node with the Send Abit Early parameter turned off behaves the same way as a Release 9.2 node with the Release 9.2 Early Abit Notifications feature disabled. A 9.1.07 node with the Send Abit Early parameter turned on behaves the same way as a Release 9.2 node with the Send Abit Early parameter set to on, and the Abit Timer Multiplier M parameter set to 0.</p> <p>To follow the general Release 9.2 interoperability, it is recommended that the Abit Notifications feature not be used when the standby control processor is in a locked state.</p>	[Default is 0] (D)

* Enter value in either decimal (D) or hexadecimal (H).

Table 1-29 BPX cnfnodparm Command Parameters (Continued)

Index	Parameter	Description	Default
50	Abit Timer Granularity N	<p>You can set the Abit Timer Granularity N option from 3 to 255 seconds. The default value is 3 seconds. You use the Abit Timer Granularity N and Abit Timer Multiplier M parameters in conjunction with the Send Abit Early parameter to configure the Early Abit Notifications on LMI/ILMI Interface using the Configurable Timer feature in Release 9.2 and beyond. (The Send Abit Early parameter must be enabled before you can set the Abit Timer Multiplier M and Abit Timer Granularity N parameters.)</p> <p>The Early Abit Notifications feature lets the user specify the timer interval to wait before Abit = 0 is sent out if a connection fails to reroute and is in the derouted state too long. No precise timer is kept for each connection. Instead, all connections derouted during a certain time period go to the same bucket. This time period is "N", which defines the granularity of the timers, and is specified by the Abit Timer Granularity N parameter. Also, the value "X" is the time to wait before Abit = 0 is sent out if the connection is in a derouted state. A connection that is derouted at a time period between 0 and N will send out Abit = 0 at a time between X and X + N if the connection continues to be in a derouted state. In cases where there are many Abit status changes to report to the CPE, the last Abit updates may be delayed much longer because Abit updates process about 47 connections per second.</p> <p>To compromise between performance and the granularity of timers, you can configure the N value (Abit Timer Granularity N) to be from 3 to 255 seconds. The bigger the value of N, the better the system performance will be. The value of X should be M * N, where M can be configured to be from 0 to 100. The default value for N (specified by the Abit Timer Multiplier N parameter) is 3 seconds. The default value for M is 0, meaning that Abit = 0 is sent out on deroute. It is recommended that the value of X (Abit Timer Multiplier M value * Abit Timer Granularity N value) be set such that when a trunk fails, the connections are given sufficient time to reroute successfully, avoiding the need to send out Abit = 0.</p>	[Default is 3 seconds]
51	FBTC with PPD Policing	<p>If you have installed a BXM card with the RCMP (Routing Control Monitoring and Policing) chip, which supports PPD on policing, you may enable this feature by setting this parameter to Y. Older BXM cards do not support PPD on policing.</p> <p>After enabling this parameter, a warning appears: "Warning: Must switchyred or reset PPDolic BXM line cards after change." Note that these operations are not supported in remote NMS stations.</p> <p>Next you must choose one of two options by entering either Y or N:</p> <p>Y - BXM FBTC on thresholds & PPD policing This option is supported only on BXM cards with the new version of the RCMP chip that provides this functionality.</p> <p>N - BXM FBTC on thresholds Provides FBTC on CLP thresholds only.</p> <p>Although it is not recommended to use both an older BXM card and a BXM card that supports PPD on policing on a y-redundant pair, you can do so. The severity of the feature mismatch is minor because FBTC can still function based on the CLP thresholds on the BXM card that does not support PPD on policing. This parameter is a one-time installation task; it should not be frequently changed.</p>	[N is default] (Y/N)

* Enter value in either decimal (D) or hexadecimal (H).

Note The following example illustrates the two screens required to show all **cnfnodeparm** parameters on a BPX node.

```
sw45          TN      SuperUser      BPX 8620      9.2 Aug. 27 1998 18:25 PDT

1 Update Initial Delay [ 5000] (D)  16 Stats Memory (x 10KB) [ 61] (D)
2 Update Per-Node Delay [30000] (D) 17 Standby Update Timer [ 10] (D)
3 Comm-Break Test Delay [30000] (D) 18 Stby Updts Per Pass [ 50] (D)
4 Comm-Break Test Offset [ 10] (D) 19 Gateway ID Timer [ 30] (D)
5 Network Timeout Period [ 1700] (D) 20 GLCON Alloc Timer [ 30] (D)
6 Network Inter-p Period [ 4000] (D) 21 Comm Fail Delay [ 60] (D)
7 NW Sliding Window Size [ 1] (D) 22 Nw Hdlr Timer (msec) [ 50] (D)
8 Num Normal Timeouts [ 7] (D) 23 SAR CC Transmit Rate [ 560] (D)
9 Num Inter-p Timeouts [ 3] (D) 24 SAR High Transmit Rate [ 280] (D)
10 Num Satellite Timeouts [ 6] (D) 25 SAR Low Transmit Rate [ 56] (D)
11 Num Blind Timeouts [ 4] (D) 26 SAR VRAM Cngestn Limit [ 7680] (D)
12 Num CB Msg Timeouts [ 5] (D) 27 SAR VRAM Cell Discard [ 256] (D)
13 Comm Fail Interval [10000] (D) 28 ASM Card Cnfged [ Y] (Y/N)
14 Comm Fail Multiplier [ 3] (D) 29 TFTP Grant Delay (sec) [ 1] (D)
15 CC Redundancy Cnfged [ N] (Y/N) 30 TFTP ACK Timeout (sec) [ 10] (D)
```

This Command: cnfnodeparm

Continue? y

```
sw45          TN      SuperUser      BPX 8620      9.2 Aug. 27 1998 18:26 PDT

31 TFTP Write Retries [ 3] (D)
32 SNMP Event logging [ Y] (Y/N)
33 Job Lock Timeout [ 60] (D)
34 Max Via LCONs [50000] (D)
35 Max Blind Segment Size [ 3570] (D)
36 Max XmtMemBlks per NIB [ 3000] (D)
37 Max Stby Update Q Sz [ 5000] (D)
38 Stat Config Proc Cnt [ 1000] (D)
39 Stat Config Proc Delay [ 2000] (D)
40 Enable Degraded Mode [N] (Y/N)
41 Trk Cell Rtnng Restrict [N] (Y/N)
42 Enable Feeder Alert [N] (Y/N)
43 Reroute on Comm Fail [N] (Y/N)
44 Auto Switch on Degrade [Y] (Y/N)
45 Max Degraded Aborts [100] (D)
46 Max Htls Rebuilt Count [100] (D)
47 Htls Counter Reset Time [1000] (D)
48 Send Abit Early [Y] (Y/N)
49 Abit Timer Multiplier M [2] (D)
50 Abit Timer Granularity M [3] (0)
51 FBTC with PPD Policing [ N] (Y/N)
```

This Command: cnfnodeparm

Enter parameter index:

System Response

```
sazu          TN          SuperUser      BPX 8620      9.2          Apr. 18 1999 11:11 GMT

31 TFTP Write Retries      [  3] (D)
32 SNMP Event logging     [  Y] (Y/N)
33 Job Lock Timeout       [ 60] (D)
34 Max Via LCONs          [50000] (D)
35 Max Blind Segment Size [ 3570] (D)
36 Max XmtMemBlks per NIB [ 3000] (D)
37 Max Stby Update Q Sz   [ 5000] (D)
38 Reroute on Comm Fail   [  Y] (Y/N)
```

Last Command: cnfnodeparm 38 Y

Next Command:

Minor Alarm

cnfnwip (Configure Network IP Address)

The **cnfnwip** command configures an IP address and subnet mask for the node.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

none

Syntax

cnfnwip <IPAddr> <IPSubnetMask>

<IPAddr> IP address of the node: the format is *nnn.nnn.nnn.nnn*, where *nnn* can be 1–255

<IPSubnetMask> subnet mask: the format is *nnn.nnn.nnn.nnn*

An example of this command is:

```
cnfnwip 199.35.96.217 255.255.255.0
```

where 199.35.96.217 is the IP address, and 255.255.255.0 is the subnet mask.

Function

The network IP address and subnet mask support statistics collection for Cisco WAN Manager. The **cnfnwip** command defines the IP address the system uses to pass messages between Cisco WAN Manager and the node. The Statistics Master process in Cisco WAN Manager Network collects statistics. The Statistics Manager requests and receives statistics using TFTP Get and Put messages. These TFTP messages pass between the node and the Statistics Master using IP Relay. (See the **cnfstatmast** description for details on setting the Statistics Master address.) For an example of the **cnfnwip** command, refer to the screen in Figure 1-32.

Figure 1-32 cnfnwip—Configure Network IP Address

```
axiom      TN      Bootzilla      IGX 32      9.2      Aug. 5 19981998  18:25 GMT  
  
Active Network IP Address:      169.134.90.106  
Active Network IP Subnet Mask:  255.255.255.0
```

Last Command: cnfnwip 169.134.90.106 255.255.255.0

Next Command:

cnfphyslnstats (Configure Physical Line Statistics)

The **cnfphyslnstats** command configures parameters for circuit line statistics collection. This is a debug command that applies to physical lines on a UXM that is using Inverse Multiplexing Over ATM (IMA)—a *logical* trunk configuration.

In Release 9.2, for virtual trunking, physical line statistics apply to each physical port. In the case of IMA trunks, the physical line statistics are tallied separately for each T1 port.

IMA physical line alarms are a special case. Each IMA trunk port has a configurable number of retained links. If the number of non-alarmed lines is less than the number of retained links, the logical trunks on the IMA trunk port are placed into major alarm.

For example, consider there are IMA virtual trunks 4.5-8.2 and 4.5-8.7. Further, the number of retained links on 4.5-8 has been configured to 2. If 4.5 and 4.6 go into LOS (loss of signal), physical line alarms are generated for these two physical lines. The logical trunks 4.5-8.2 do not go into alarm because the two retained links are still healthy. In this situation, the bandwidth on the logical trunks is adjusted downward to prevent cell drops, and the connections on those trunks are rerouted. If a third line goes into alarm, the logical trunks are then failed.

The **cnfphyslnstats** command lets you configure the following additional physical line statistics (which support the ATM Forum compliant IMA protocol). A description of these statistics follows in Table 1-30.

Table 1-30 IMA Physical Line Statistics

Statistics
IMA Violations
Near End Severely Errored Seconds (SES-IMA)
Far End Severely Errored Seconds (SES-IMA-FE)
Near End Unavailable Seconds (UAS-IMA)
Far End Unavailable Seconds (UAS-IMA-FE)
Near End Tx Unusable Seconds (Tx-UUS-IMA)
Near End Rx Unusable Seconds (Rx-UUS-IMA)
Far End Tx Unusable Seconds (Rx-UUS-IMA-FE)
Far End Rx Unusable Seconds (Rx-UUS-IMA-FE)
Near End Tx No. of Failures (Tx-FC)
Near End Rx No. of Failures (Rx-FC)

Attributes

Jobs: YesLog: YesLock: YesNode Type: IGX

Associated Commands

dspphyslnstats, dspphyslnstathist

Syntax

cnfphyslnstats <port> <line> <stat> <interval> <eld> [<samples> <size> <peaks>]

- <port> Specifies the port with the physical line to configure.
- <line> Specifies the physical line to configure.
- <stat> Specifies the type of statistic to enable/disable.
- <interval> Specifies the time interval of each sample (1–255 minutes).
- <eld> enables/disables a statistic. 'E' to enable; 'D' to disable.
- [samples] Specifies the number of samples to collect (1–255).
- [size] Specifies the number of bytes per data sample (1, 2, or 4).
- [peaks] Enables/disables the collection of ten second peaks. 'Y' to enable; 'N' disable.

Function

This command configures physical line statistics on a UXM card. The **cnfphyslnstats** command lets you customize statistics collection on each physical line. It primarily applies to debugging and not standard network operation. To see the statistics available for each type of interface, refer to the actual screens for each interface, as in the subsequent illustrations. Figure 1-33, Figure 1-34, Figure 1-35, Figure 1-36, and Figure 1-37 show the available statistics for OC-3/STM1, T3, E3, T1, and E1, respectively.

Figure 1-33 cnfphyslnstats—Configure Physical Line Statistics (OC-3)

```

sw228          TN      SuperUser      IGX 8420      9.2 Aug. 27 1998 18:11 PST

Line Statistic Types

    1) Bipolar Violations
    3) Out of Frames
    4) Losses of Signal
    5) Frames Bit Errors
    6) CRC Errors
    62) Total Cells Tx to line
    69) Total Cells Rx from line
   151) Yellow Alarm Transition Count
   153) AIS Transition Count
   193) Loss of Cell Delineation
   194) Loss of Pointer
   195) OC-3 Path AIS
   196) OC-3 Path YEL
   197) Section BIP8
   198) Line BIP24
   199) Line FEBE
   200) Path BIP8
   201) Path FEBE
   202) Section BIP8 Err. Secs.
   203) Line BIP24 Err. Secs.
   204) Line FEBE Err. Secs.
   205) Path BIP8 Err. Secs.
   206) Path FEBE Err. Secs.
   207) Section BIP8 Severely Err. Secs.
   208) Section Sev. Err. Framing Secs.
   209) Line BIP24 Severely Err. Secs.

```

Last Command: cnfphyslnstats 6.2

Continue? y

```

sw228          TN      SuperUser      IGX 8420      9.2 Aug. 27 1998 18:11 PST

```

```

Line Statistic Types

   210) Line FEBE Severely Err. Secs.
   211) Path BIP8 Severely Err. Secs.
   212) Path FEBE Severely Err. Secs.
   213) Line Unavailable Secs.
   214) Line Farend Unavailable Secs.
   215) Path Unavailable Secs.
   216) Path Farend Unavailable Secs.
   217) HCS Uncorrectable Error
   218) HCS Correctable Error

```

This Command: cnfphyslnstats 6.2

Figure 1-34 cnfphyslnstats—Configure Physical Line Statistics (T3)

```
sw224          TN      SuperUser      IGX 8420      9.2 Aug. 27 1998 16:19 GMT

Line Statistic Types

    3) Out of Frames
    4) Loss of Signal
    6) CRC Errors
    29) Line Code Violation
    30) Line Errored Seconds
    31) Line Severely Err Secs
    32) Line Parity Errors
    33) Errored Seconds - Parity
    34) Severely Err Secs - Parity
    35) Path Parity Errors
    36) Errored Secs - Path
    37) Severely Err Secs - Path
    38) Severely Err Frame Secs

    40) Unavail. Seconds
    41) BIP-8 Errors
    42) BIP-8 Errored Seconds
    43) BIP-8 Severely Err Secs.
    44) Cell Framing Sev. Err Frame Secs
    45) Cell Framing Unavail. Secs.
    98) PLCP OOF counts
    141) FEBE Counts
    144) Cell Framing FEBE Sev. Err. Secs.
    152) PLCP YEL Counts

This Command: cnfphyslnstats 8.1

Statistic Type:
```

Figure 1-35 cnfphyslnstats—Configure Physical Line Statistics (E3)

```
sw224          TN      SuperUser      IGX 8420      9.2 Aug. 27 1998 16:19 GMT

Line Statistic Types

    3) Out of Frames
    4) Loss of Signal
    6) CRC Errors
    29) Line Code Violation
    30) Line Errored Seconds
    31) Line Severely Err Secs
    32) Line Parity Errors
    33) Errored Seconds - Parity
    34) Severely Err Secs - Parity
    38) Severely Err Frame Secs

    40) Unavail. Seconds
    41) BIP-8 Errors
    42) BIP-8 Errored Seconds
    43) BIP-8 Severely Err Secs.
    44) Cell Framing Sev. Err Frame Secs
    45) Cell Framing Unavail. Secs.
    98) PLCP OOF counts
    144) Cell Framing FEBE Sev. Err. Secs.
    152) PLCP YEL Counts

This Command: cnfphyslnstats 10.1
```

Figure 1-36 cnfphyslnstats—Configure Physical Line Statistics (T1)

```

sb-reef          TN      SuperUser      IGX 8420      9.2 Aug. 27 1998 18:17 PDT

Line Statistic Types

    1) Bipolar Violations
    3) Out of Frames
    4) Losses of Signal
    5) Frames Bit Errors
    6) CRC Errors
    62) Total Cells Tx to line
    69) Total Cells Rx from line
   151) Yellow Alarm Transition Count
   153) AIS Transition Count
   193) Loss of Cell Delineation
   194) Loss of Pointer
   195) OC-3 Path AIS
   196) OC-3 Path YEL
   197) Section BIP8
   198) Line BIP24
   199) Line FEBE
   200) Path BIP8
   201) Path FEBE
   202) Section BIP8 Err. Secs.
   203) Line BIP24 Err. Secs.
   204) Line FEBE Err. Secs.
   205) Path BIP8 Err. Secs.
   206) Path FEBE Err. Secs.
   207) Section BIP8 Severely Err. Secs.
   208) Section Sev. Err. Framing Secs.
   209) Line BIP24 Severely Err. Secs.

```

Last Command: cnfphyslnstats 10.1

Continue? y

```

sb-reef          TN      SuperUser      IGX 8420      9.2 Aug. 27 1998 18:17 PDT

```

```

Line Statistic Types

   210) Line FEBE Severely Err. Secs.
   211) Path BIP8 Severely Err. Secs.
   212) Path FEBE Severely Err. Secs.
   213) Line Unavailable Secs.
   214) Line Farend Unavailable Secs.
   215) Path Unavailable Secs.
   216) Path Farend Unavailable Secs.
   217) HCS Uncorrectable Error
   218) HCS Correctable Error

```

This Command: cnfphyslnstats 10.1

Statistic Type:

Figure 1-37 cnfphyslnstats—Configure Physical Line Statistics (E1)

```
sw228          TN      SuperUser      IGX 8420      9.2 Aug. 27 1998 18:07 PST

Line Statistic Types

    3) Out of Frames                               198) Line BIP24
    4) Losses of Signal                            199) Line FEBE
    5) Frames Bit Errors                           200) Path BIP8
    6) CRC Errors                                  201) Path FEBE
    62) Total Cells Tx to line                     202) Section BIP8 Err. Secs.
    69) Total Cells Rx from line                   203) Line BIP24 Err. Secs.
    151) Yellow Alarm Transition Count              204) Line FEBE Err. Secs.
    153) AIS Transition Count                       205) Path BIP8 Err. Secs.
    193) Loss of Cell Delineation                  206) Path FEBE Err. Secs.
    194) Loss of Pointer                           207) Section BIP8 Severely Err. Secs.
    195) OC-3 Path AIS                             208) Section Sev. Err. Framing Secs.
    196) OC-3 Path YEL                             209) Line BIP24 Severely Err. Secs.
    197) Section BIP8                              210) Line FEBE Severely Err. Secs.

This Command: cnfphyslnstats 11.4
```

Continue? y

```
sw228          TN      SuperUser      IGX 8420      9.2 Aug. 27 1998 18:07 PST

Line Statistic Types

    211) Path BIP8 Severely Err. Secs.
    212) Path FEBE Severely Err. Secs.
    213) Line Unavailable Secs.
    214) Line Farend Unavailable Secs.
    215) Path Unavailable Secs.
    216) Path Farend Unavailable Secs.
    217) HCS Uncorrectable Error
    218) HCS Correctable Error

This Command: cnfphyslnstats 11.4
```

cnfportstats (Configure Port Statistics Collection)

The **cnfportstats** command configures parameters for ports.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

none

Syntax

cnfportstats <port> <stat> <interval> <eld> [<samples> <size> <peaks>]

<port>	Specifies the port to configure.
<stat>	Specifies the type of statistic to enable/disable.
<interval>	Specifies the time interval of each sample (1–255 minutes).
<eld>	Enables/disables a statistic. 'E' to enable; 'D' to disable.
[samples]	Specifies the number of samples to collect (1–255).
[size]	Specifies the number of bytes per data sample (1, 2 or 4).
[peaks]	Enables the collection of one minute peaks. 'Y' to enable; 'N' to disable.

Function

The **cnfportstats** command configures port statistics. The primary purpose of this command is debugging. Table 1-31 lists the configurable statistics for a Frame Relay port. For port statistics in general, refer to the actual **cnfportstats** screens on a node. Not all statistic types are applied to all ports. To see the statistics for Frame Relay, UXM, and ASI-155 ports, refer to Figure 1-38, Figure 1-39, and Figure 1-40, respectively.

In Figure 1-38, for example, the screen shows that the selected statistic is 33—the number of transmitted bytes while the ingress LMI is showing a failed condition. After the port number and statistic number (33) on the command line, the remaining parameters are the interval, enable for this statistic, number of samples, and so on.

Table 1-31 Configurable Statistics for a Frame Relay Port

Type	Statistic
1–4	Total frames and bytes transmitted and received.
5–6	Frames transmitted with FECN and BECN set.
7–10	Frames received with problems: CRC errors, invalid format, frame alignment errors, wrong length frames.

Table 1-31 Configurable Statistics for a Frame Relay Port (Continued)

Type	Statistic
11	Number of direct memory access (DMA) overruns on a Frame Relay port that are probably due to excessive user-data input.
12–17	LMI counts on UNI ports. These include status inquiries, status transmit and update requests, invalid inquiries, and LMI link timeouts.
18	Frames received with DLCIs in error.
19	Frames dropped with DE bit set.
20–24	LMI counts on NNI ports: status inquiries, status receive and update requests, LMI link timeouts, keepalive sequence errors.
25–26	Frame and byte count totals for Consolidated Link Layer Message (CLLM) frames that transmit Optimized Bandwidth Management messages.

Figure 1-38 cnfportstats—Configure Port Statistics for a Frame Relay Card

```
pubsigx1      TN      SuperUser      IGX 32      9.2      Aug. 5 1998  17:21 GMT
```

```
Port Statistic Types
```

```

1) Frames Received              14) LMI UNI Status Update Count
2) Frames Transmitted           15) LMI Invalid Status Enquiries
3) Bytes Received               16) LMI UNI Link Timeout Errors
4) Bytes Transmitted            17) LMI UNI Keepalive Sequence Errors
5) Frames Transmitted with FECN 18) Receive Frames Undefined DLCI Count
6) Frames Transmitted with BECN 19) DE Frames Dropped
7) Receive Frame CRC Errors      20) LMI NNI Status Enquiries
8) Invalid Format Receive Frames 21) LMI NNI Status Receive Count
9) Receive Frame Alignment Errors 22) LMI NNI Status Update Count
10) Illegal Length Receive Frames 23) LMI NNI Link Timeout Errors
11) Number of DMA Overruns       24) LMI NNI Keepalive Sequence Errors
12) LMI UNI Status Enquiries     25) CLLM Frames Transmitted
13) LMI UNI Status Transmit Count 26) CLLM Bytes Transmitted
```

```
This Command: cnfportstats 3.1
```

```
Continue?
```

```
pubsigx1      TN      SuperUser      IGX 32      9.2      Aug. 5 1998  17:24 GMT
```

```
Port Statistic Types
```

```

27) CLLM Frames Received
28) CLLM Bytes Received
29) CLLM Failures
30) Tx Frames Discarded - Queue Overflow
31) Tx Bytes Discarded - Queue Overflow
32) Tx Frames while Ingress LMI Failure
33) Tx Bytes while Ingress LMI Failure
```

```
Last Command: cnfportstats 3.1 33 2 e 2 4 y
```

```
Next Command:
```

Figure 1-39 cnfportstats for a UXM Port

```
sw197          TN      SuperUser      IGX 8420      9.2 Apr. 7 1998  03:12 GMT
```

Port Statistic Types

- | | |
|-------------------------------------|--------------------------------------|
| 34) PORT: Unknown VPI/VCI count | 47) VI: Cells received |
| 35) VI: Cells received w/CLP=1 | 55) ILMI: Get Request PDUs rcvd |
| 36) VI: OAM cells received | 56) ILMI: Get Next Request PDUS rcvd |
| 37) VI: Cells transmitted w/CLP=1 | 57) ILMI: Get Next Request PDUS xmt |
| 38) PORT: Last unknown VPI/VCI pair | 58) ILMI: Set Request PDUs rcvd |
| 39) VI: Cells received w/CLP=0 | 59) ILMI: Trap PDUs rcvd |
| 40) VI: Cells discarded w/CLP=0 | 60) ILMI: Get Response PDUs rcvd |
| 41) VI: Cells discarded w/CLP=1 | 61) ILMI: Get Request PDUs xmt |
| 42) VI: Cells transmitted w/CLP=0 | 62) ILMI: Get Response PDUs xmt |
| 43) VI: OAM cells transmitted | 63) ILMI: Set Request PDUs xmt |
| 44) VI: RM cells received | 64) ILMI: Trap PDUs xmt |
| 45) VI: RM cells transmitted | 65) ILMI: Unknown ILMI PDUs rcvd |
| 46) VI: Cells transmitted | 66) LMI: Status messages xmt |

This Command: cnfportstats 5.1

Continue? y

```
sw197          TN      SuperUser      IGX 8420      9.2 Apr. 7 1998  03:12 GMT
```

Port Statistic Types

- 67) LMI: Update Status msgs xmt
- 68) LMI: Status Acknowledge msgs xmt
- 69) LMI: Status Enquiry msgs rcvd
- 70) LMI: Status Enquiry msgs xmt
- 71) LMI: Status msgs rcvd
- 72) LMI: Update Status msgs rcvd
- 73) LMI: Status Acknowledge msgs rcvd
- 74) LMI: Invalid LMI PDUs rcvd
- 75) LMI: Invalid LMI PDU length rcvd
- 76) LMI: Unknown LMI PDUs rcvd
- 77) LMI: Invalid LMI IE rcvd
- 78) LMI: Invalid Transaction IDs

This Command: cnfportstats 5.1

Statistic Type:

Figure 1-40 cnfportstats for an ASI-155

```
sw59          TN      SuperUser      BPX 15      9.2 Apr. 7 1998  11:18 GMT

Port Statistic Types

1) Unknown VPI/VCI count          13) OAM cells received count
2) Cell buff overflow (ingress)   14) Tx payload err cnt due to BIP-16 err
3) Non-zero GFC count            15) Number of cells xmitted w/CLP set
4) ISU discard count             16) Number of cells xmitted w/EFCI set
5) ISU free list empty count     17) Tx header err discard
6) Receive AIS cell count        18) Get Request PDUs received
7) Receive FERF cell count       19) Get Next Request PDUS received
8) Number of cells received      20) Get Next Request PDUS transmitted
9) Number of cells rcvd w/CLP set 21) Set Request PDUs received
10) Number of cells rcvd w/EFCI set 22) Trap PDUs received
11) Number of BCM cells rcvd     23) Get Response PDUs received
12) Number of cells xmitted      24) Get Request PDUs transmitted
```

This Command: cnfportstats 10.1

Continue? y

```
sw59          TN      SuperUser      BPX 15      9.2 Apr. 7 1998  11:19 GMT

Port Statistic Types

25) Get Response PDUs transmitted  37) Invalid LMI PDU length received
26) Trap PDUs transmitted          38) Unknown LMI PDUs received
27) Unknown ILMI PDUs Received     39) Invalid LMI IE received
28) Status messages transmitted    40) Invalid Transaction IDs
29) Update Status messages transmitted 41) Number of cells rcvd w/clp 0
30) Status Acknowledge messages transmit42) Number of cells dscd w/clp 0
31) Status Enquiry messages received 43) Number of cells dscd w/clp set
32) Status Enquiry messages transmitted 44) Number of cells tx w/clp 0
33) Status messages received       45) Tx OAM cell count
34) Update Status messages received  46) Rx RM cell count
35) Status Acknowledge messages received47) Tx RM cell count
36) Invalid LMI PDUs received received 48) Last unknown VPI/VCI pair
```

This Command: cnfportstats 10.1

Statistic Type:

cnfrobparm (Configure Robust Alarms Parameters)

The **cnfrobparm** command sets parameters associated with the Robust Alarms feature.

In Release 9.2, there are robust alarms for certain alarm conditions that appear in the maintenance log or in the node user interface but are not also reported as SNMP traps to the customer NMS. (Such traps are generated by the Cisco WAN Manager RTM proxy upon receiving Robust Alarms from a switch.) Robust Alarm messages are generated by the following alarm conditions:

- Power supply, temperature, fan, and DC voltage level alarms
- Connection AIS alarm
- Bus failure
- External clock source failure
- Multiple invalid login attempts on a user port
- Excessive CPU and memory usage on switch processor card

In Release 9.2, the BPX generates power supply, temperature and fan alarms as is currently done for the IGX.

Attributes

Jobs: No Log: No Lock: Yes Node Type: IGX, BPX

Associated Commands

none

Syntax

cnfrobparm <index> <value>

<index> Specifies the parameter to configure.

<value> Specifies new value to be entered for the parameter.

Function

This command sets Robust Alarms parameters. Robust Alarms is a protocol for node-to-Network Management System (NMS) communications. When a node has statistics or alarm information for the NMS, it requires a confirmation from the NMS that the database has been updated. Table 1-32 lists the parameters. Figure 1-41 illustrates the command.

Table 1-32 cnfrobparm Parameters and Descriptions

No.	Parameter	Description	Default
1	Robust State wakeup timer	The Robust State machine becomes active after the specified time period has elapsed. If this timer value increases, the state machine operates less often and places less load on the controller card. Units of measure are seconds.	10 seconds
2	Robust update timer	Once a message has gone to the NMS, another message does not go until this timer expires. Units of measure are seconds.	10 seconds
3	Robust acknowledgment timeout	An acknowledgment must be returned by the NMS within this time period or it is assumed the communications link is down. Units of measure are seconds.	600 seconds
4	Robust acknowledgment reset timeout	After a downed link has been repaired, the next message goes out after this time period has elapsed. The purpose of this time period is to let the link settle after the repair. Units of measure are seconds.	60 seconds

Figure 1-41 cnfrobparm—Configure Robust Alarm Parameters

```

a34      TRM  SuperUser      IGX 8420    9.2      Aug. 14 1998 15:02 PDT

                          Robust Parameters

1  Robust State wakeup timer (sec) .....10
2  Robust update timer (sec) .....10
3  Robust acknowledge timeout (sec) .....600
4  Robust acknowledge reset timeout (sec) .....60
    
```

This Command: cnfrobparm

Which parameter do you wish to change:

cnfslotstats (Configure Slot Statistics Collection)

The **cnfslotstats** command configures the statistics for a card slot.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: BPX

Associated Commands

dspsloterrs

Syntax

cnfslotstats <port> <stat> <interval> <eld> [**<samples>** **<size>** **<peaks>**]

- <port> Specifies the port to configure.
- <stat> Specifies the type of statistic to enable/disable.
- <interval> Specifies the time interval of each sample (1–255 minutes).
- <eld> Enables/disables a statistic. 'E' to enable; 'D' to disable.
- [samples] Specifies the number of samples to collect (1–255).
- [size] Specifies the number of bytes per data sample (1, 2 or 4).
- [peaks] Enables the collection of one minute peaks. 'Y' to enable; 'N' to disable.

Function

This command sets the collection interval for each of the BPX node slot statistics. The default is for no statistics to be collected. The collection interval range is 1 minute–255 minutes (4 1/4 hours).

Table 1-33 lists the statistics associated with each slot in the BPX node. Figure 1-42 illustrates the command screen. This command is primarily a troubleshooting tool for use when hardware errors are experienced that may not be detected by the individual care self-test routines. An associated display command (**dspsloterrs**) is available for all users.

Table 1-33 Statistics Associated with each Slot in a BPX Node

Error	Description
Standby Bus Errors	Indicates a background test over the standby bus produced an error.
Rx Invalid Port Errors	Indicates port number was out of the range 1–3.
Polling Bus A Errors	Parity error occurred on this polling bus.
Polling Bus B Errors	Parity error occurred on this polling bus.
Bad Grant Errors	Error indicates arbiter did not issue a grant to send data before a timeout.
Tx BIP-16 Errors	Data frame transmitted had a checksum error.
Rx BIP-16 Errors	Data frame received with a checksum error.
Bframe parity errors	Errors detected in the BPX frame on the StrataBus or in a memory operation.

Table 1-33 Statistics Associated with each Slot in a BPX Node (Continued)

Error	Description
SIU Phase Errors	Serial Interface Unit on the card did not detect the frame synch properly.
Rx FIFO Sync Errors	First-In-First-Out buffer synchronization errors.
Poll Clk Errors	Polling clock errors.
CK 192 Errors	Clock 192 errors.
Monarch Specific Errors	Errors that occur on only the BXM.

You must enter the statistic type (1–9) to set the collection interval. When you enter the command, the system responds with the following prompt:

```
Collection Interval (1-255 minutes): __
```

Figure 1-42 cnfslotstats—Configure Slot Statistics Parameters

```
sw81          TN   SuperUser      BPX 15   9.2   Aug. 1 1998 15:42 PST
```

```
Card Statistics Types
```

- 1) Standby PRBS Errors
- 2) Rx Invalid Port Errs
- 3) PollA Parity Errors
- 4) PollB Parity Errors
- 5) Bad Grant Errors
- 6) Tx Bip 16 Errors
- 7) Rx Bip 16 Errors
- 8) Bframe parity Errors
- 9) SIU phase Errors
- 10) Rx FIFO Sync Errors
- 11) Poll Clk Errors
- 12) CK 192 Errors
- 13) Monarch Specific Errors

```
This Command: cnfslotstats 8
```

cnftcpparm (Configure TCP Parameters)

The **cnftcpparm** command configures the TCP parameter.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

dsptcpparm

Syntax

cnftcpparm <network ip throttle>

<network ip throttle> Specifies the number of times that the BCC card polls the LAN for attention requests.

Function

This command specifies the number of times per second that the BCC checks the IP addressees for attention requests. Figure 1-43 illustrates the system response when you enter **cnftcpparm**.

Figure 1-43 Configure TCP Parameters

```
Sw81            TN    SuperUser        BPX 15    9.2    Aug. 1 1998 15:46 PST
NWIP Bandwidth Throttle (Kbytes/sec): 32
```

This Command: cnftcpparm

Enter NWIP Bandwidth Throttle (Kbytes/sec):

cnftermfunc (Configure Terminal Port Functions)

Configures port functions for the IGX or BPX control and auxiliary ports. The IGX nodes support two EIA/TIA-232 asynchronous serial ports on the SCC and SCM, respectively. The BPX node supports two EIA/TIA-232 asynchronous serial ports on the BCC. In all cases, the top port is the CONTROL TERMINAL port, and the lower port is the AUX PORT. The CONTROL TERMINAL port can connect to a control terminal, Cisco WAN Manager, a direct dial-in modem, or any external EIA/TIA-232 device. The AUX PORT can connect to a printer, an auto-dial modem to call a control center, or an external EIA/TIA-232 device.

The interface specified for the port must match the equipment physically attached to the port. The baud rate and other data transmission parameters for the port are set with the **cnfterm** command. If either port is configured as an external device window, enter the **window** command to begin a session with the external device.

If the auxiliary port is configured as an autodial modem, designate a “network ID” and a “phone number.” Configuring the auxiliary port for an autodial modem enables the following to occur: When a change in alarm status happens anywhere in the network, the autodial modem attached to the auxiliary port dials the specified “phone number.” If the call goes to the TAC, the alarm is logged under the specified “network ID.” With this log, Cisco engineers are automatically notified of any problems that occur in the network.

Full Name

Configure terminal port functions

Syntax

```
cnftermfunc <a/c> <index> [escape_string | (Network_ID Dial_String)]
```

Related Commands

cnfterm, **cnfppt**, **dsptermfunc**

Attributes

Privilege	Jobs	Log	Node	Lock
1-6	No	Yes	IPX, IGX	Yes

Example 1

```
cnftermfunc
```

Description

Configure an IGX or BPX node control or auxiliary port.

System Response

Without an argument on the command line, the switch displays a list of parameters. Figure 1-44 shows the screen on an IGX 8420 switch.

Figure 1-44 cnftermfunc Screen on an IGX 8420 Switch

```

TN      SuperUser      IGX 8420      9.2 Apr. 7 1998  03:46 GMT

Control port                      Auxiliary port

1. VT100/StrataView              1. Okidata 182 Printer
2. VT100                          2. Okidata 182 Printer with LOG
3. External Device Window        3. VT100
                                   4. Alarm Message Collector
                                   5. External Device Window
                                   6. Autodial Modem

This Command: cnftermfunc

Select Control port (c) or Auxiliary port (a)
    
```

Example 2
cnftermfunc a 5 Intrepid 18007674479

Description

Configure an auxiliary port. The port configuration screen appears with “Autodial Modem” highlighted to indicate that this interface has been chosen for the auxiliary port. When an alarm occurs on the network, the modem dials 18007674479 to reach the TAC. The alarm is logged on a Cisco computer under the name “Intrepid.”

Table 1-34 shows the parameters of the **cnftermfunc** command. Table 1-35 shows the index parameters of the **cnftermfunc** command, while Table 1-36 shows the optional parameters of the **cnftermfunc** command.

Table 1-34 cnftermfunc Command—Parameters

Parameter	Description
a	Specifies that the auxiliary port will be configured.
c	Specifies that the control port will be configured.

Table 1-35 cnftermfunc Command—Index Parameters

Index	Description
Control port	1. VT100/Cisco WAN Manager 2. VT100 3. External device window

Table 1-35 cnftermfunc Command—Index Parameters (Continued)

Index	Description
Auxiliary port	<ol style="list-style-type: none"> 1. Okidata 184 printer 2. Okidata 184 printer with LOG 3. VT100 4. Alarm Message Collector 5. External Device Window 6. Autodial Modem

Table 1-36 cnftermfunc Command—Optional Parameters

Optional	Description
escape string	Specifies a string of 1 to 8 characters used to terminate a session with an external device. This parameter is valid only for “External Device Window” interfaces. The default escape string is “quit.”
network id	Specifies a string of 1–12 characters used to identify the network during an autodial connection to the TAC. This parameter is valid only for “Autodial Modem” interfaces. Any alarm status change in the network is automatically logged at Cisco by using this network ID. Contact TAC for the ID to use.
dial string	Specifies the telephone number to be dialed when the network is reporting alarm status changes via the autodial modem. This parameter is valid only for “Autodial Modem” interfaces. The “phone number” can be up to 16 characters long and normally consists of digits and commas only. A comma is used to indicate that the autodial modem should pause two seconds before continuing to dial. For example, the number “9,4083700736” would cause the modem to dial a “9,” pause two seconds, then dial the remaining digits. Contact Cisco TAC for the number.

cnftlparm (Configure Trunk-Based Loading Parameters)

The **cnftlparm** command configures the trunk based loading (TBL) parameters.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

cnfcmparm

Syntax

cnftlparm <index>

Parameters

Table 1-37 describes the parameters of the **cnftlparm** command.

Note Cisco Systems recommends that you leave all parameters at the default values. If you need to change a TBL parameter, first call TAC.

Table 1-37 Configurable Trunk-Based Loading Parameters

No.	Index	Description	Range	Default
1	Enable	Enables or disables automatic TBL update messages. Do not disable unless you first contact the TAC.	Yes/No	Yes
2	Normal Interval	Specifies the time interval between checks to determine if the node should send out a TBL update signaling a non-critical change in the trunk load.	0–65000 (times 100 msec)	150
3	Fast Interval	Specifies the time interval between checks to determine if the node should send out a TBL update signaling a critical change in the trunk load.	0–65000 (times 100 msec)	50
4	Low Threshold	Algorithm parameters for complex update algorithm.	1–100%	50
5	High Threshold	Algorithm parameters for complex update algorithm.	1–100%	90
6	Min. Percent Chg, Mid 1	Algorithm parameters for complex update algorithm.	1–100%	10
7	Min. Percent Chg, Mid 2	Algorithm parameters for complex update algorithm.	1–100%	6
8	Min. Percent Chg, Mid 3	Algorithm parameters for complex update algorithm.	1–100%	3

Table 1-37 Configurable Trunk-Based Loading Parameters (Continued)

No.	Index	Description	Range	Default
9	Min. Percent Chg, Upper	Algorithm parameters for complex update algorithm.	1–100%	2
10	Background Updt Count	Specifies a periodic update. 0=update disabled. If <i>Background Updt Count</i> is greater than 0, switch software multiplies it by the value you specify for <i>Normal Interval</i> .	0–1000%	0
11	Update Algorithm	Selects the update algorithm. 0=default. 1=complex update algorithm.	0 or 1	0

Function

The **cnftlparm** command lets you control the rate of update messages in conjunction with trunk-based loading. For descriptions of the trunk-based loading parameters, see Table 1-32.

Figure 1-45 shows the output of the **cnftlparm** command.

Figure 1-45 cnftlparm Parameters

```

sw66          TN      SuperUser      BPX 15      9.2 Aug. 27 1998 22:31 GMT

1  Enable                      [ Yes]
2  Normal Interval              [ 150] (100msecs)
3  Fast Interval                [  50] (100msecs)
4  Low Threshold                [  50] (D)
5  High Threshold               [  90] (D)
6  Min Percent Chg, Mid 1      [  10] (D)
7  Min Percent Chg, Mid 2      [   6] (D)
8  Min Percent Chg, Mid 3      [   3] (D)
9  Min Percent Chg, Upper      [   2] (D)
10 Background Updt Count       [   0] (D)
11 Update Algorithm            [   0] (D)
    
```

This Command: cnftlparm

Enter parameter index:

cnftrafficgen

You can enable the Traffic Generation Test with the **cnftrafficgen** command and requires super user level permissions. The **cnftrafficgen** command interacts with the firmware, indicating that the functionality is to be turned on or off.

The **cnftrafficgen** command takes as input the following values:

- the address of the PVC.
- a flag indicating to enable or disable (E/D).
- the number of frames or cells to transmit.
- type of byte pattern to send, 1 = send all 0xff's, 2 = send all 0xAA's, 3 = send all 0x5A's.
- direction of traffic generation. For Release 9.2, only 'N' option for Network is supported

The Traffic Generation Test completes when the requested number of frames or cells has been transmitted, or when the test is explicitly disabled for the PVC. It will not remain enabled indefinitely like the OAM Loopback Test.

The Traffic Generation test does not directly log alarms. It is assumed that alarms have been reported before you decide to run this intrusive test. You can view the status of the Traffic Generation test by using the **dspttrafficgen** command on the node.

Traffic Generation Test

For traffic generation, switch software sends a "Transmit Frame/Generate Traffic Command" to the card with parameters for PVC address, enable, type of pattern to use, and traffic generation direction. For Release 9.2, both the switch software and firmware only support "network" direction for the traffic generation direction. The card then takes care of generating the traffic and continues until all frames/cells are sent or are disabled. When a card receives a disable message, it stops any traffic generation currently running. There is a **dspttrafficgen** command that lets you view the status of traffic generation, which gives you information such as the PVC, and if it is enabled or not.

Full Name

Configure traffic generation test

Syntax

cnftrafficgen <address> <E/D> <number of frames/cells> <pattern type> <N>

Related Commands

cnfoamlpbk, **dsपोamlpbk**, **dspttrafficgen**, **dspscons**

Attributes

Privilege	Jobs	Log	Node	Lock
SuperUser	Yes	Yes	IPX, IGX	Yes

Example 1

cnftrafficgen 2

Description

Enable the Traffic Generation test feature on a specified PVC on a specified card.

System Response

```

sw99          TN          SuperUser          BPX 159.2.10Aug. 27 1998 08:59 GMT

      generating supported
slot  traffic  in fw   Channel
----  -
2     Yes     Yes     2.2.6.18

```

Last Command: cnftrafficgen 2

Next Command:

Example 2

cnftrafficgen 2

Description

Enable the Traffic Generation test on the PVC with address of XX, transmit number of XX cells, send pattern type of XX, send traffic in the direction of N (for network).

Table 1-38 describes the parameters of the **cnftrafficgen** command.

Table 1-38 **cnftrafficgen Parameters**

Parameter	Description
address	Address of PVC that you want to configure the Traffic Generation test for.
e/d	Enable or disable the Traffic Generation test on the specified PVC.
number of frames/cells	Number of frames/cells to transmit.
pattern type	Type of byte pattern to send.
N	Direction to generate traffic. In Release 9.2, only 'N' option for Network is supported.

cnftrkparm (Configure Trunk Card Parameters)

Use the **cnftrkparm** command to set specified trunk parameters for the following front cards:

- UXM/UXM-E
- ALM/B
- AIT
- BTM
- NTC
- NTM
- BNI
- BXM/BXM-E

Function

Use the **cnftrkparm** command to optimize a network for particular traffic mixes. Use this command to configure any of the trunk-specific parameters associated with a trunk card. It applies to either a FastPacket trunk or an ATM trunk. For ATM trunks, **cnftrkparm** applies to both physical and virtual trunks. Spacer queues indicated for the CLP and FECN thresholds pertain to BTM cards in an IGX node.

You can also use this command to reconfigure trunk queue depths to meet the CEPT requirement for a maximum end-to-end delay of 10 milliseconds. For this purpose, enter the following:

```
cnftrkparm <trunk number> <parameter index> <parameter value>
```

where: *trunk number* specifies the trunk.

parameter index is 2 (which corresponds to the NTS queue).

parameter value is 7 (which is the maximum allowable queue depth).

When the system receives this command and a trunk number, it displays the configurable parameters with an index number for each. The parameters vary with the trunk type, as the subsequent tables and figures show. Table 1-39, Table 1-40, and Table 1-41 list the parameters for trunks carrying FastPackets and ATM cells on different platforms as well as virtual trunks. Figure 1-46, Figure 1-47, Figure 1-48, and Figure 1-49 show the response when you specify a FastPacket line or trunk on a variety of platforms. A table follows one or two screen examples.

Configuring Virtual Trunks with cnftrkparm Command

BXM and UXM virtual trunks have all the configuration parameters for queues as physical trunks.

The integrated alarm thresholds for major alarms and the gateway efficiency factor is the same for all virtual trunks on the port. Note that BNI VTs are supported by a single queue and do not support configuration of all the OptiClass queues on a single virtual trunk.

Configuring Trunk Queues Used by Real-Time VBR and Non-Real-Time VBR Connections

Qbin values on both ports and trunks used by rt-VBR connections and nrt-VBR connections can be configured separately. (To configure Qbin values on ports, use **cnfportq**.)

Note The rt-VBR traffic type (or connection class) is supported on the IGX UXM and BPX BXM, ASI, and BNI cards. However, the rt-VBR class of service is not supported for BTM and ALM-A/B connection endpoints, nor is it supported on FastPacket trunks. It is also not supported on MGX 8850 or MGX 8220 interface shelves.

A rt-VBR connection uses the rt-VBR queue on a trunk. It shares this queue with voice traffic. The rt-VBR and voice traffic shares the default or user configured parameters for the rt-VBR queue. These parameters are queue depth, queue CLP high and CLP low thresholds, EFCI threshold, and queue priority.

A nrt-VBR connection uses the nrt-VBR queue on a trunk. The configurable parameters are queue depth, queue CLP high and CLP low thresholds, EFCI threshold, and queue priority.

- You can configure the Qbin values separately for rt-VBR and nrt-VBR classes on trunks using the **cnftrkparm** command. For rt-VBR, the **cnftrkparm** command configures Q-depth rt-VBR and Max Age rt-VBR. For nrt-VBR, the **cnftrkparm** command configures Q-depth nrt-VBR, Low CLP nrt-VBR, and High CLP nrt-VBR.

See Figure 1-52 for a sample **cnftrkparm** screen and the parameters that can be configured for the various service type queues.

For information on configuring port queues used by rt-VBR and nrt-VBR connections, see the **cnfportq** command.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

dsptrkstat, **dsptrkstatcnf**

Syntax

cnftrkparm <trk number> <parm index> <parm value>

- | | |
|--------------|--|
| <trk number> | Specifies the trunk to configure (can be a virtual trunk specified with following format: <i>slot.port.vtrk</i>). |
| <parm index> | Specifies the parameter to change. |
| <parm value> | Specifies the value of the parameter. |

Figure 1-46 cnftrkparm for an IGX Node

```

sw83          TN      SuperUser      IGX 8420    9.2          Aug. 23 1998 15:58 PST

PLN 13 Parameters:
 1 Yel Alm-In/Out (D) [ 600/ 600]      18 Red Alm-In/Out (D) [ 2500/ 15000]
 2 Rx Max Age - rt-VBR (D) [ N/A]      19 Tx Max Age - rt-VBR (D) [ 20]
 3 Rx EFCN - BdataB (D) [ N/A]         20 Tx EFCN - BdataB (D) [ 30]
 4 Gateway Efficiency (D) [ N/A]
 5 EFCN - Rx Space (D) [ N/A]          Tx Age Step2 (D)      Tx Age Step (D)
 6 Low CLP - Rx_Space (%) [ N/A]        21 BDataA [ 128]      23 BDataA [ 128]
 7 High CLP - Rx_Space (%) [ N/A]        22 BDataB [ 128]      24 BDataB [ 128]
Rx High CLP (%)      Rx Low CLP (%)      Tx High CLP (%)      Tx Low CLP (%)
 8 BDataA [ N/A]      10 BDataA [ N/A]      25 BDataA [ 100]      27 BDataA [ 100]
 9 BDataB [ N/A]      11 BdataB [ N/A]      26 BDataB [ 75]       28 BDataB [ 25]
Receive Queue Depth (D)      Transmit Queue Depth (D)
12 rt-VBR [ N/A]      15 BDataA [ N/A]      29 rt-VBR [ 22]      32 BDataA [ 301]
13 Non TS [ N/A]      16 BDataB [ N/A]      30 Non TS [ 114]      33 BDataB [ 301]
14 TS [ N/A]          17 HighPri [ N/A]     31 TS [2616]          34 HighPri [ 100]

Last Command: cnftrkparm 13

Next Command:

```

Table 1-39 IGX Trunk Parameters

Index	Parameter	Description
1, 18	Yel/Red Alarm In/Out	Specifies a time period relating to when a trunk goes into a red or yellow alarm and after it comes out of the alarm state. The applicable type of alarm here stems from a physical line problem rather than from a statistical error. The purpose of this parameter is to prevent the switch from rerouting the connections after a very brief problem or from prematurely informing switch software that the trunk is back in service (after a failure). The implementation is <ul style="list-style-type: none"> The “into” alarm value is the time the card waits after a local (red) or yellow (remote) problem occurs before the card alerts switch software of the problem. The “out of” alarm value is the time the card waits after a local, physical problem is cleared before the card alerts switch software that the problem no longer exists.
2, 19	Rx/Tx Max. Age: - rt-VBR	Specifies a multiplier for 125-microsecond increments for the maximum age of rt-VBR (or voice) packets. For example, with the default of 20, the node discards rt-VBR (or voice) packets older than 2.5 seconds.
3, 20	Rx/Tx EFCN - BdataB	For packets or cells received from the trunk carrying Optimized Bandwidth Management Frame Relay, the node sets the FECN bit above this threshold.
4	Gateway Efficiency	Specifies an expected average number of FastPackets in each cell arriving from a trunk. The purpose of this parameter is to help switch software regulate bandwidth usage the cellbus in an IGX node. The range is 1.0–3.0. (This parameter does not apply to the BXM card.)
5	EFCN - Rx Space	Same as 3, 20 except that FECN - Rx Space sets the threshold in the Rx space queues in the AIT or BTM card. Rx space queues face towards the IGX node.
6, 7	Low-High CLP-Rx Space	Same as 8, 9 except this threshold is for setting CLP in receive spacer queues for data to send to the local node.

Table 1-39 IGX Trunk Parameters (Continued)

Index	Parameter	Description
8, 9	Rx High CLP (Bdata A/BdataB)	Frame relay cells/packets received from trunk with CLP bit set above this high threshold will be dropped and will continue to be dropped until the low threshold is crossed. Separate queues for Optimized Bandwidth Management and non-Optimized Bandwidth Management data. Given in terms of % of queue depth.
10, 11	Rx Low CLP (Bdata A/BdataB)	Same as for 8, 9 except sets low threshold.
12–17	Receive Queue Depth (rt-VBR, NTS, TS, BData A, BData B, High Pri.)	Reserves RAM in the trunk card for each of the receive queues in terms of the number of packets.
25, 26	Tx High CLP	Same as 8, 9 except this is threshold for setting CLP in transmit queues for data to be output to the next link.
27, 28	Tx Low CLP	Same as for 25, 26 except sets low threshold.
29–34	Transmit Queue Depth	Reserves RAM in the trunk card for each of the transmit queues in terms of the number of packets.

Note For parameter 12, the system displays the following: “Warning—don't change Voice Q size, use Max Voice Age.”

Figure 1-47 cnftrkparm for a BPX Trunk

```
pubsbsp1      TN      SuperUser      BPX 8620 9.2 July 15 1998 09:37 GMT

TRK 1.1 Parameters
 1 Q Depth - rt-VBR      [ 242] (Dec)   15 Q Depth - CBR      [ 600] (Dec)
 2 Q Depth - Non-TS     [ 360] (Dec)   16 Q Depth - nrt-VBR [ 1000] (Dec)
 3 Q Depth - TS        [ 1000] (Dec)  17 Q Depth - ABR      [ 9070] (Dec)
 4 Q Depth - BData A   [ 1000] (Dec)  18 Low CLP - CBR      [ 100] (%)
 5 Q Depth - BData B   [ 8000] (Dec)  19 High CLP - CBR     [ 100] (%)
 6 Q Depth - High Pri  [ 1000] (Dec)  20 Low CLP - nrt-VBR [ 100] (%)
 7 Max Age - rt-VBR    [ 20] (Dec)   21 High CLP - nrt-VBR [ 100] (%)
 8 Red Alm - I/O (Dec) [ 2500 / 15000] 22 Low CLP - ABR      [ 25] (%)
 9 Yel Alm - I/O (Dec) [ 2500 / 15000] 23 High CLP - ABR     [ 75] (%)
10 Low CLP - BData A   [ 100] (%)    24 EFCN - ABR        [ 30] (Dec)
11 High CLP - BData A [ 100] (%)    25 SVC Queue Pool Size [ 144] (Dec)
12 Low CLP - BData B   [ 25] (%)
13 High CLP - BData B [ 75] (%)
14 EFCN - BData B     [ 30] (Dec)

This Command: cnftrkparm 1.1

Which parameter do you wish to change:
```

Figure 1-48 cnftrkparm for a BXM OC-12 Trunk

```

sw97          TRM   SuperUser          BPX 8620      9.2 Apr. 30 1998 13:14 GMT

TRK 13.1 Parameters
Trunk Type:      NNI
1 Q Depth - rt-VBR [ 3000] (Dec)  15 Q Depth - CBR [ 1200] (Dec)
2 Q Depth - Non-TS [ 3000] (Dec)  16 Q Depth - rt-VBR [ 10000] (Dec)
3 Q Depth - TS [ 1000] (Dec)  17 Q Depth - ABR [ 30000] (Dec)
4 Q Depth - BData A [ 20000] (Dec)  18 Low CLP - CBR [ 100] (%)
5 Q Depth - BData B [ 20000] (Dec)  19 High CLP - CBR [ 100] (%)
6 Q Depth - High Pri [ 1000] (Dec)  20 Low CLP - rtVBR [ 100] (%)
7 Max Age - rt-VBR [ 20] (Dec)  21 High CLP - rt-VBR [ 100] (%)
8 Red Alm - I/O (Dec) [ 2500 / 15000]  22 Low CLP - ABR [ 25] (%)
9 Yel Alm - I/O (Dec) [ 2500 / 15000]  23 High CLP - ABR [ 75] (%)
10 Low CLP - BData A [ 100] (%)  24 EFCN - ABR [ 30] (Dec)
11 High CLP - BData A [ 100] (%)  25 SVC Queue Pool Size [ 144] (Dec)
12 Low CLP - BData B [ 25] (%)
13 High CLP - BData B [ 75] (%)
14 EFCN - BData B [ 30] (Dec)

Last Command: cnftrkparm 13.1

Next Command:

```

Note In Release 9.2.20, rt-VBR and voice connections both use the voice qbin on the trunk. Similarly, rt-VBR and voice traffic both share the default or user-configured voice qbin values for the trunk—Queue depth, CLP High/Low Threshold, EFCI Threshold, and Queue priority.

Table 1-40 BXM Trunk Parameters

Index	Parameter	Description
1	Q Depth - rt-VBR	Specifies the queue depth in cells for rt-VBR and voice traffic. This parameter relates to item 7, Max Age - rt-VBR: if you increase the value for Max Age - rt-VBR, the node increases the size of the rt-VBR (or voice) Packet Queue because more voice packets can accumulate due to a greater age. In Release 9.2, for BXM trunks, the rt-VBR and voice service types share the same queue (the rt-VBR queue). Similarly, for BXM trunks, rt-VBR and voice traffic share the default or user-configured voice Qbin values.
2	Q Depth - Non-TS	Specifies the queue depth in cells for non-time-stamped traffic.
3	Q Depth - TS	Specifies the queue depth in cells for time-stamped traffic.
4	Q Depth - BData A	Specifies the depth in cells for the bursty data A queue.
5	Q Depth - BData B	Specifies the depth in cells for the bursty data B queue.
6	Q Depth - High Pri	Specifies the queue depth in cells for high priority traffic.

Table 1-40 BXM Trunk Parameters (Continued)

Index	Parameter	Description
7	Max Age - rt-VBR	<p>Specifies a multiplier for 125-microsecond increments for the maximum age of rt-VBR (or voice) packets. For example, with the default of 20 microseconds, the node discards rt-VBR (or voice) packets older than 2.5 seconds. This value is the same as the default queue delay.</p> <p>The Max Age - rt-VBR (or voice) qbin threshold can be calculated as follows: $(20 * (125 \text{ microseconds}) * \text{num_ds0s}/53 \text{ cells} + 2)$ for any trunk.</p> <p>This parameter relates to item 1, Q Depth - rt-VBR: if you increase the value for Max Age - rt-VBR, the node increases the size of the Voice (or rt-VBR) Packet Queue because more rt-VBR (or voice) packets can accumulate due to a greater age.</p>
8	Red Alm - I/O (Dec)	<p>Specifies a time period relating to when a trunk goes into red alarm and after it comes out of the alarm state. The applicable type of alarm here stems from a physical line problem rather than from a statistical error. The purpose of this parameter is to prevent the switch from rerouting the connections after a very brief problem or from prematurely informing switch software that the trunk is back in service (after a failure). The implementation is:</p> <ul style="list-style-type: none"> • The “into” alarm value is the time the card waits after a local, physical problem occurs before the card alerts switch software of the problem. • The “out of” alarm value is the time the card waits after a local, physical problem is cleared before the card alerts switch software that the problem no longer exists.
9	Yel Alm - I/O (Dec)	<p>Specifies a time period relating to when a trunk goes into yellow alarm and after it comes out of the alarm state. The applicable type of alarm here stems from a physical line problem rather than from a statistical error. The purpose of this parameter is to prevent the switch from rerouting the connections after a very brief problem or from prematurely informing switch software that the trunk is back in service (after a failure). The implementation is:</p> <ul style="list-style-type: none"> • The “into” alarm value is the time the card waits after a remote, physical problem occurs before the card alerts local switch software of the problem. • The “out of” alarm value is the time the card waits after a remote, physical problem is cleared before the card alerts local switch software that the problem no longer exists.
10	Low CLP - BData A	<p>Specifies a percent of the Bursty Data A queue. When the number of cells in the queue falls below this percentage, the switch stops discarding cells with CLP=1. The default of 100% disables the function, which causes the switch to discard all cells with CLP=1.</p>
11	High CLP - BData A	<p>Specifies a percent of the Bursty Data A queue. When the number of cells in the queue reaches this percentage, the switch begins to discard cells with CLP=1. The default of 100% disables the function, which causes the switch to discard all cells with CLP=1 regardless of the cell count in the queue.</p>
12	Low CLP - BData B	<p>Specifies a percent of the Bursty Data B queue. When the number of cells in the queue falls below this percentage, the switch stops discarding cells with CLP=1.</p>
13	High CLP - BData B	<p>Specifies a percent of the Bursty Data B queue. When the number of cells in the queue reaches this percentage, the switch begins to discard cells with CLP=1.</p>
14	EFCN - BData B	<p>Specifies the number of cells in the Bursty Data B queue that causes the switch to send congestion notification to the destination node. The default is low in relation to the default queue depth so that notification begins to go out as soon as congestion begins.</p>

Table 1-40 BXM Trunk Parameters (Continued)

Index	Parameter	Description
15	Q Depth - CBR	Specifies the depth of the queue dedicated to CBR traffic.
16	Q Depth - nrt-VBR	Specifies the depth of the queue dedicated to nrt-VBR traffic.
17	Q Depth - ABR	Specifies the depth of the queue dedicated to ABR traffic.
18	Low CLP - CBR	Specifies a percent of the CBR queue. When the number of cells in the queue falls below this percentage, the node stops discarding cells with CLP=1. The default of 100% disables the function, which causes the switch to discard all cells with CLP=1 regardless of the cell count in the queue. The reason the default is 100% is that, with CBR, congestion is not an expected condition.
19	High CLP - CBR	Specifies a percent of the CBR queue. When the number of cells in the queue reaches this percentage, the node begins to discard cells with CLP=1. The default of 100% disables the function, which causes the switch to discard all cells with CLP=1 regardless of the cell count in the queue. The reason the default is 100% is that, with CBR, congestion is not an expected condition.
20	Low CLP - nrt-VBR	Specifies a percent of the nrt-VBR queue. When the number of cells in the queue falls below this percentage, the node stops discarding cells with CLP=1. The default of 100% disables the function, which causes the switch to discard all cells with CLP=1 regardless of the cell count in the queue. The reason the default is 100% is that, with VBR, congestion is not an expected condition.
21	High CLP - nrt-VBR	Specifies a percent of the nrt-VBR queue. When the number of cells in the queue reaches this percentage, the node begins to discard cells with CLP=1. The default of 100% disables the function, which causes the switch to discard all cells with CLP=1 regardless of the cell count in the queue. The reason the default is 100% is that, with VBR, congestion is not an expected condition.
22	Low CLP - ABR	Specifies a percent of the ABR queue. When the number of cells in the queue falls below this percentage, the node stops discarding cells with CLP=1.
23	High CLP - ABR	Specifies a percent of the ABR queue. When the number of cells in the queue reaches this percentage, the node begins to discard cells with CLP=1.
24	EFCN - ABR	Specifies the number of cells in the ABR queue that causes the switch to send congestion notification to the destination node. The default is low in relation to the default queue depth so that notification begins to go out as soon as congestion begins.
25	SVC Queue Pool Depth	Specifies the collective size of the queue depth for all SVC connections.

Figure 1-49 cnftrkparm for a Virtual Trunk

```

sw97          TN      SuperUser      BPX 15      9.2          Aug. 9 1998  10:11 GMT

TRK 1.1.1 Parameters
 8 Red Alm - I/O (Dec) [ 2500 / 10000]
 9 Yel Alm - I/O (Dec) [ 2500 / 10000]
15 Q Depth - CBR      [ 2678] (Dec)
18 Low CLP - CBR      [ 100] (%)
19 High CLP - CBR     [ 100] (%)
    
```

This Command: cnftrkparm 1.1.1

Which parameter do you wish to change:

Table 1-41 Virtual Trunk Parameters

Index	Parameter	Description
8	Red Alm - I/O (Dec)	<p>Specifies a time period relating to when a trunk goes into red alarm and after it comes out of the alarm state. The applicable type of alarm here stems from a physical line problem rather than from a statistical error. The purpose of this parameter is to prevent the switch from rerouting the connections after a very brief problem or from prematurely informing switch software that the trunk is back in service (after a failure). The implementation is:</p> <ul style="list-style-type: none"> • The “into” alarm value is the time the card waits after a local, physical problem occurs before the card alerts switch software of the problem. • The “out of” alarm value is the time the card waits after a local, physical problem is cleared before the card alerts switch software that the problem no longer exists.
9	Yel Alm - I/O (Dec)	<p>Specifies a time period relating to when a trunk goes into yellow alarm and after it comes out of the alarm state. The applicable type of alarm here stems from a physical line problem rather than from a statistical error. The purpose of this parameter is to prevent the switch from rerouting the connections after a very brief problem or from prematurely informing switch software that the trunk is back in service (after a failure). The implementation is:</p> <ul style="list-style-type: none"> • The “into” alarm value is the time the card waits after a remote, physical problem occurs before the card alerts local switch software of the problem. • The “out of” alarm value is the time the card waits after a remote, physical problem is cleared before the card alerts local switch software that the problem no longer exists.
18	Low CLP - CBR	<p>Specifies a percent of the CBR queue. When the number of cells in the queue falls below this percentage, the node stops discarding cells with CLP=1. The default of 100% disables the function, which causes the switch to discard all cells with CLP=1 regardless of the cell count in the queue. The reason the default is 100% is that, with CBR, congestion is not an expected condition.</p>

Table 1-41 Virtual Trunk Parameters (Continued)

Index	Parameter	Description
19	High CLP - CBR	Specifies a percent of the CBR queue. When the number of cells in the queue reaches this percentage, the node begins to discard cells with CLP=1. The default of 100% disables the function, which causes the switch to discard all cells with CLP=1 regardless of the cell count in the queue. The reason the default is 100% is that, with CBR, congestion is not an expected condition.
19	High CLP	Specifies a percent of the transmit/receive CBR queue depth. When a transmit/receive threshold is exceeded, the node discards cells with CLP=1 in the connection until the VC queue level falls below the depth specified by Low CLP.

Figure 1-50 cnftrkparm for a UXM OC-3 Trunk

```
sw228          TN      SuperUser      IGX 8420      9.2.w2      Aug. 27 1998 18:25 PST
```

```
TRK 6.3 Parameters:
```

```

1 Yel Alm-In/Out (D) [ 2500/ 10000]      18 Red Alm-In/Out (D) [ 2500/ 10000]
2 Rx Max Age - rt-VBR (D) [ 20]          19 Tx Max Age - rt-VBR (D) [ 20]
3 Rx EFCN - BdataB (D) [ 30]             20 Tx EFCN - BdataB (D) [ 30]
4 Gateway Efficiency (D) [ 2.0]
5 EFCN - Rx Space (D) [ N/A]             Tx Age Step2 (D) Tx Age Step (D)
6 Low CLP - Rx_Space (%) [ N/A]          21 BDataA [ N/A] 23 BDataA [ N/A]
7 High CLP - Rx_Space (%) [ N/A]          22 BDataB [ N/A] 24 BDataB [ N/A]
Rx High CLP (%) Rx Low CLP (%)           Tx High CLP (%) Tx Low CLP (%)
8 BDataA [ 100] 10 BDataA [ 100]          25 BDataA [ 100] 27 BDataA [ 100]
9 BDataB [ 75] 11 BdataB [ 25]            26 BDataB [ 75] 28 BDataB [ 25]
Receive Queue Depth (D)                   Transmit Queue Depth (D)
12 rt-VBR [ 1952] 15 BDataA [10000]       29 rt-VBR [ 1952] 32 BDataA [10000]
13 Non TS [ 2925] 16 BDataB [10000]       30 Non TS [ 2924] 33 BDataB [10000]
14 TS [ 1000] 17 HighPri[ 1000]           31 TS [ 1000] 34 HighPri[ 1000]
```

```
This Command: cnftrkparm 6.3
```

```
sw228          TN      SuperUser      IGX 8420      9.2          Aug. 27 1998 18:26 PST
```

```
TRK 6.3 Parameters:
```

```

Rx Queue Depth(D) Tx Queue Depth(D) Rx EFCN (D) Tx EFCN (D)
35 CBR [ 600] 38 CBR [ 600]
36 nrt-VBR [ 5000] 39 rt-VBR [ 5000]
37 ABR [20000] 40 ABR [20000] 47 ABR [ 30] 48 ABR [ 30]
Rx High CLP (%) Rx Low CLP (%) Tx High CLP (%) Tx Low CLP (%)
41 CBR [ 100] 44 CBR [ 100] 49 CBR [ 100] 52 CBR [ 100]
42 nrt-VBR [ 100] 45 nrt-VBR 100] 50 nrt-VBR [ 100] 53 VBR [ 100]
43 ABR [ 75] 46 ABR [ 25] 51 ABR [ 75] 54 ABR [ 25]
```

```
This Command: cnftrkparm 6.3
```

Figure 1-51 cnftrkparm for a UXM T3 or E3 Trunk

sw228 TN SuperUser IGX 8420 9.2.w2 Aug. 27 1998 18:25 PST

```
TRK 8.1 Parameters:
 1 Yel Alm-In/Out (D) [ 2500/ 10000]    18 Red Alm-In/Out (D) [ 2500/ 10000]
 2 Rx Max Age - rt-VBR (D) [ 20]        19 Tx Max Age - rt-VBR (D) [ 20]
 3 Rx EFCN - BdataB (D) [ 30]           20 Tx EFCN - BdataB (D) [ 30]
 4 Gateway Efficiency (D) [ 2.0]
 5 EFCN - Rx Space (D) [ N/A]           Tx Age Step2 (D) Tx Age Step (D)
 6 Low CLP - Rx_Space (%) [ N/A]        21 BDataA [ N/A] 23 BDataA [ N/A]
 7 High CLP - Rx_Space (%) [ N/A]        22 BDataB [ N/A] 24 BDataB [ N/A]
Rx High CLP (%) Rx Low CLP (%) Tx High CLP (%) Tx Low CLP (%)
 8 BDataA [ 100] 10 BDataA [ 100]        25 BDataA [ 100] 27 BDataA [ 100]
 9 BDataB [ 75] 11 BdataB [ 25]          26 BDataB [ 75] 28 BDataB [ 25]
Receive Queue Depth (D) Transmit Queue Depth (D)
12 rt-VBR [ 242] 15 BDataA [ 8000]       29 rt-VBR [ 242] 32 BDataA [ 8000]
13 Non TS [ 360] 16 BDataB [ 8000]       30 Non TS [ 360] 33 BDataB [8000]
14 TS [ 1000] 17 HighPri[ 1000]          31 TS [ 1000] 34 HighPri[ 1000]
```

This Command: cnftrkparm 8.1

sw228 TN SuperUser IGX 8420 9.2 Aug. 27 1998 18:26 PST

```
TRK 8.1 Parameters:
Rx Queue Depth(D) Tx Queue Depth(D) Rx EFCN (D) Tx EFCN (D)
35 CBR [ 400] 38 CBR [ 400]
36 nrt-VBR [ 5000] 39 VBR [ 5000]
37 ABR [10000] 40 ABR [10000] 47 ABR [ 30] 48 ABR [ 30]
Rx High CLP (%) Rx Low CLP (%) Tx High CLP (%) Tx Low CLP (%)
41 CBR [ 100] 44 CBR [ 100] 49 CBR [ 100] 52 CBR [ 100]
42 nrt-VBR [ 100] 45 nrt-VBR [ 100] 50 nrt-VBR [ 100] 53 nrt-VBR [ 100]
43 ABR [ 80] 46 ABR [ 60] 51 ABR [ 80] 54 ABR [ 60]
```


Figure 1-52 cnftrkparm for a BXM Trunk

pubsbpx1 TN silves:1 BPX 8620 9.2.2G July 16 1999 10:50 PDT

TRK 2.4 Parameters

1 Q Depth - rt-VBR	[885] (Dec)	15 Q Depth - CBR	[600] (Dec)
2 Q Depth - Non-TS	[1324] (Dec)	16 Q Depth - nrt-VBR	[5000] (Dec)
3 Q Depth - TS	[1000] (Dec)	17 Q Depth - ABR	[20000] (Dec)
4 Q Depth - BData A	[10000] (Dec)	18 Low CLP - CBR	[60] (%)
5 Q Depth - BData B	[10000] (Dec)	19 High CLP - CBR	[80] (%)
6 Q Depth - High Pri	[1000] (Dec)	20 Low CLP - nrt-VBR	[60] (%)
7 Max Age - rt-VBR	[20] (Dec)	21 High CLP - nrt-VBR	[80] (%)
8 Red Alm - I/O (Dec)	[2500 / 10000]	22 Low CLP/EPD-ABR	[60] (%)
9 Yel Alm - I/O (Dec)	[2500 / 10000]	23 High CLP - ABR	[80] (%)
10 Low CLP - BData A	[100] (%)	24 EFCN - ABR	[20] (%)
11 High CLP - BData A	[100] (%)	25 SVC Queue Pool Size	[0] (Dec)
12 Low CLP - BData B	[25] (%)		
13 High CLP - BData B	[75] (%)		
14 EFCN - BData B	[30] (Dec)		

This Command: cnftrkparm 2.4

Physical and Virtual Parameters You Can Configure Using cnftrkparm

All virtual trunks on a BNI card are supported by a single queue, therefore you cannot configure all the Advanced CoS Management queues on a single virtual trunk.

The UXM and BXM share the same queueing architecture. The egress cell traffic out a port is queued in two stages. First they are queued per virtual interface (VI), each of which supports a virtual trunk. Within each virtual interface, the traffic is queued according to its normal Advanced CoS Management traffic type. In other words, voice, Time-Stamped, Non Time-Stamped, High Priority, BData, BDataB, CBR, rt-VBR, nrt-VBR, and ABR traffic is queued separately.

The overall queue depth of the virtual interface is the sum of all the queue depths for all the available queues. Since each virtual trunk occupies one virtual interface (VI), the overall queue depth available for the virtual trunk is that of its VI. You do not configure the virtual interface directly, however, you use the **cnftrkparm** command to configure the queues within the virtual trunk.

Although the traffic consists of Frame Relay in cells, the traffic can pass through a BPX node. Therefore, the Bursty Data queues exist in the BPX node.

BXM and UXM virtual trunks have all the configuration parameters for queues that physical trunks have. The integrated alarm thresholds for major alarms and the gateway efficiency factor is the same for all virtual trunks on the port. Note that BNI virtual trunks are supported by a single queue and do not support configuration of all the Advanced CoS Management (formerly OptiClass) queues on a single virtual trunk.

Table 1-42 provides a list of physical and virtual parameters that you can configure using **cnftrkparm**. X in the table indicates that the parameter is configurable. X* in the virtual trunk column indicates the parameter is a physical parameter, and changing the value for one virtual trunk on the port will automatically cause all virtual trunks on the port to be updated with the same value.

Table 1-42 Configurable cnftrkparm Parameters for Physical and Virtual Trunks

Description of cnftrkparm Parameters	BXM		UXM	
	Physical	Virtual	Physical	Virtual
Queue Depth - rt-VBR	X	X	X	X
Queue Depth - NTS	X	X	X	X
Queue Depth - TS	X	X	X	X
Queue Depth - Bdata A	X	X	X	X
Queue Depth - Bdata B	X	X	X	X
Queue Depth - High Priority	X	X	X	X
Queue Depth - CBR	X	X	X	X
Queue Depth - nrt-VBR	X	X	X	X
Queue Depth - ABR	X	X	X	X
Max Age - rt-VBR	X	X	X	X
Red Alm - I/O	X	X*	X	X*
Yel Alm - I/O	X	X*	X	X*
Lo/Hi CLP and EFCN Bdata A	X	X	X	X
Lo/Hi CLP and EFCN Bdata B	X	X	X	X
Lo/Hi CLP for CBR	X	X	X	X
Lo/Hi CLP for VBR	X	X	X	X
Low/Hi CLP, and EFCN for ABR	X	X	X	X
EPD and EFCN for CBR and nrt-VBR			X	X
SVC Queue pool size	X	X		
Gateway Efficiency			X	X*

cnftrkstats (Configure Trunk Statistics Collection)

The **cnftrkstats** command configures collection of statistics for a selected trunk.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

dsprkstatcnf, dsprkstathist

Syntax

cnftrkstats <line> <stat> <interval> <eld> [**<samples>** **<size>** **<peaks>**]

- <line> specifies the trunk to configure.
- <stat> specifies the type of statistic to enable/disable.
- <interval> specifies the time interval of each sample (1–255 minutes).
- <eld> enables/disables a statistic. 'E' to enable; 'D' to disable.
- [samples] specifies the number of samples to collect (1–255).
- [size] specifies the number of bytes per data sample (1, 2 or 4).
- [peaks] enables/disables collection of 10-second peaks. 'Y' enables; 'N' disables.

Function

The **cnftrkstats** command is primarily a debug command. It configures the collection of statistics for a physical or virtual trunk. After displaying all statistic types for the trunk, the system prompts for “statistic type.” Enter the index number associated with the statistic.

Not all types of statistics are available for all lines. Unavailable selections appear in half-tone. Table 1-43 lists the types of statistics that are configurable for FastPacket T1 trunks and ATM T3 trunks. The subsequent figures show the screens associated with T1 packet trunks and T3 ATM trunks.

Table 1-43 Statistics Configurable for FastPacket T1 trunks and ATM T3 Trunks

Categories of Statistics Types	Categories of Statistics Types
Line faults	Line errors and errored seconds
Frame Slips and Loss	Path errors
Transmit packets dropped	Cell framing errors
Packets transmitted for various packet types	EFCN packets transmitted to bus
Packets dropped for various packet types	Queue Service Engine (QSE) cells transmitted
Bursty data CLP packets and cells dropped	Spacer packets transmitted and dropped for each of the 16 queues
Errored seconds	The number of seconds in which errors occurred

Figure 1-53 is the only screen for T1 trunks.

Figure 1-53 cnftrkstats—Configure T1 Trunk Statistics

```

sw83          TN   SuperUser      IGX 8420    9.2      Aug. 1 1998  14:42 PST

Line Statistic Types
  1) Bipolar Violations
  2) Out of Frames
  3) Losses of Signal
  4) Frames Bit Errors
  5) CRC Errors
  6) Packet Out of Frames
  9) Packet CRC Errors
 10) Tx Voice Packets Dropped
 12) Tx TS Packets Dropped
 13) Tx NTS Packets Dropped
 14) Tx CC Packets Dropped
 15) Tx BDA Packets Dropped
 16) Tx BDB Packets Dropped
 17) Voice Packets Transmitted
 18) TS Packets Transmitted
 19) NTS Packets Transmitted
 20) CC Packets Transmitted
 21) BDA Packets Transmitted
 22) BDB Packets Transmitted
 23) Total Packets Transmitted
 24) BDA CLP Packets Dropped
 25) BDB CLP Packets Dropped
 26) BDA EFCN Pkts Transmitted
 27) BDB EFCN Pkts Transmitted
 28) Bdata A CLP Packets Tx to Line
 149) Bdata B CLP Packets Tx to Line
 150)

Last Command: cnftrkstats 13

Next Command:

```

The following screens, shown in Figure 1-54 through Figure 1-61, pertain to an ATM trunk (AIT card) on an IGX node. Other trunk types and cards have other parameters. To see the list of these parameters, enter the command and continue from page to page without entering an index number.

Figure 1-54 cnftrkstats—Configure ATM Trunk Statistics (Screen 1)

```

sw83          TN      SuperUser      IGX 8420      9.2          Aug. 1 1998  14:45 PST

Line Statistic Types
 3) Out of Frames                22) BDA Packets Transmitted
 4) Losses of Signal             23) BDB Packets Transmitted
10) Packet CRC Errors            24) Total Packets Transmitted
12) Tx Voice Packets Dropped     25) BDA CLP Packets Dropped
13) Tx TS Packets Dropped        26) BDB CLP Packets Dropped
14) Tx NTS Packets Dropped       27) BDA EFCN Pkts Transmitted
15) Tx CC Packets Dropped        28) BDB EFCN Pkts Transmitted
16) Tx BDA Packets Dropped       29) Line Code Violations
17) Tx BDB Packets Dropped       30) Line Errored Seconds
18) Voice Packets Transmitted     31) Line Severely Err Secs
19) TS Packets Transmitted        32) Line Parity Errors
20) NTS Packets Transmitted       33) Errored Seconds - Line
21) CC Packets Transmitted        34) Severely Err Secs - Line

This Command: cnftrkstats 11

Continue?

```

Figure 1-55 cnftrkstats—Configure ATM Trunk Statistics (Screen 2)

```

sw83          TN      SuperUser      IGX 8420      9.2          Aug. 1 1998  14:46 PST

Line Statistic Types
35) Path Parity Errors           48) Tx nrt-VBR Cells Drpd
36) Errored Secs - Path          49) Tx TimeStamped Cells Drpd
37) Severely Err Secs - Path     50) Tx NTS Cells Dropped
38) Severely Err Frame Secs      51) Tx Hi-Pri Cells Drpd
39) AIS Signal Seconds           52) Tx BData A Cells Drpd
40) Unavail. Seconds             53) Tx BData B Cells Drpd
41) BIP-8 Code Violations        54) Voice Cells Tx to line
42) Cell Framing Errored Seconds 55) TimeStamped Cells Tx to ln
43) Cell Framing Sev. Err Secs.  56) NTS Cells Tx to line
44) Cell Framing Sec. Err Frame Secs 57) Hi-Pri Cells Tx to line
45) Cell Framing Unavail. Secs.    58) BData A Cells Tx to line
46) ATM Cell Header HEC Errs      59) BData B Cells Tx to line
47) Pkts. Rx from Muxbus          60) Half Full cells Tx to ln

This Command: cnftrkstats 11

Continue?

```

Figure 1-56 cnftrkstats—Configure ATM Trunk Statistics (Screen 3)

```

sw83          TN      SuperUser      IGX 8420      9.2      Aug. 1 1998  14:47 PST

Line Statistic Types
61) Full cells Tx to ln          74) Rx Hi-pri Pkts Dropped
62) Total Cells Tx to line      75) Rx BDA Pkts Dropped
63) Tx Bdata A CLP Cells Drpd   76) Rx BDB Pkts Dropped
64) Tx Bdata B CLP Cells Drpd   77) Voice pkts Tx to Muxbus
65) Bdata A EFCN Cells Tx ln    78) TS pkts Tx to Muxbus
66) Bdata B EFCN Cells Tx ln    79) NTS pkts Tx to Muxbus
67) Half Full Cells Rx from ln  80) Hi-pri pkts Tx to Muxbus
68) Full Cells Rx from line     81) Bdata A pkts Tx to Muxbus
69) Total Cells Rx from line    82) Bdata B pkts Tx to Muxbus
70) Total pkts Rx from line     83) Rx Bdata A CLP pkts drpd
71) Rx Voice Pkts Dropped       84) Rx Bdata B CLP pkts drpd
72) Rx TS Pkts Dropped         85) Bdata A EFCN Pkts Tx muxbus
73) Rx NTS Pkts Dropped        86) Bdata B EFCN Pkts Tx muxbus

This Command: cnftrkstats 11

Continue?

```

Figure 1-57 cnftrkstats—Configure ATM Trunk Statistics (Screen 4)

```

sw83          TN      SuperUser      IGX 8420      9.2      Aug. 1 1998  14:48 PST

Line Statistic Types
87) Total Pkts Tx to muxbus     100) Rx Spacer 2 Pkts dropped
88) Rx voice cells drpd        101) Rx Spacer 3 Pkts dropped
89) Rx TimeStamped Cells drpd  102) Rx Spacer 4 Pkts dropped
90) Rx NTS Cells dropped       103) Rx Spacer 5 Pkts dropped
91) Rx Hi-pri Cells dropped    104) Rx Spacer 6 Pkts dropped
92) Rx Bdata A Cells dropped   105) Rx Spacer 7 Pkts dropped
93) Rx Bdata B Cells dropped   106) Rx Spacer 8 Pkts dropped
94) Rx Bdata A CLP cells drpd  107) Rx Spacer 9 Pkts dropped
95) Rx Bdata B CLP cells drpd  108) Rx Spacer 10 Pkts dropped
96) Rx Spacer CLP Pkts drpd    109) Rx Spacer 11 Pkts dropped
97) Spacer EFCN Pkts Tx to Muxbus 110) Rx Spacer 12 Pkts dropped
98) Frame Sync Errors         111) Rx Spacer 13 Pkts dropped
99) Rx Spacer 1 Pkts dropped   112) Rx Spacer 14 Pkts dropped

This Command: cnftrkstats 11

```

Figure 1-58 cnftrkstats—Configure ATM Trunk Statistics (Screen 5)

```

sw83          TN      SuperUser      IGX 8420      9.2          Aug. 1 1998  14:49 PST

Line Statistic Types
113) Rx Spacer 15 Pkts dropped          126) Spacer 10 Pkts Tx to Muxbus
114) Rx Spacer 16 Pkts dropped          127) Spacer 11 Pkts Tx to Muxbus
115) Rx Spacer Pkts drpd                128) Spacer 12 Pkts Tx to Muxbus
116) Spacer 0 Pkts Tx to Muxbus         129) Spacer 13 Pkts Tx to Muxbus
117) Spacer 1 Pkts Tx to Muxbus         130) Spacer 14 Pkts Tx to Muxbus
118) Spacer 2 Pkts Tx to Muxbus         131) Spacer 15 Pkts Tx to Muxbus
119) Spacer 3 Pkts Tx to Muxbus         132) Spacer 16 Pkts Tx to Muxbus
120) Spacer 4 Pkts Tx to Muxbus         133) Rx Voice QSE Cells Tx
121) Spacer 5 Pkts Tx to Muxbus         134) Rx Time Stamped QSE Cells Tx
122) Spacer 6 Pkts Tx to Muxbus         135) Rx NTS QSE Cells Tx
123) Spacer 7 Pkts Tx to Muxbus         136) Rx Hi Priority QSE Cells Tx
124) Spacer 8 Pkts Tx to Muxbus         137) Rx BData A QSE Cells Tx
125) Spacer 9 Pkts Tx to Muxbus         138) Rx Bdata B QSE Cells Tx

This Command: cnftrkstats 11
    
```

Figure 1-59 cnftrkstats—Configure ATM Trunk Statistics (Screen 6)

```

sw83          TN      SuperUser      IGX 8420      9.2          Aug. 1 1998  15:02 PST

Line Statistic Types
139) Rx BData A EFCN QSE Cells Tx       152) Cell Framing Yel Transitions
140) Rx BData B EFCN QSE Cells Tx       153) AIS Transition Count
141) FEBE Counts                         161) CGW Packets Rx From IGX Net
142) FERR Counts (M or F bit)            162) CGW Cells Tx to Line
143) Cell Framing FEBE Err Secs          163) CGW Frms Relayed to Line
144) Cell Framing FEBE Sev. Err. Secs.   164) CGW Aborted Frames Tx to Line
145) Cell Framing FEBE Counts            165) CGW Dscd Pkts From Abted Frms
146) Cell Framing FE Counts              166) CGW 0-Lngth Frms Rx from Line
147) ATM CRC Errored Seconds             167) CGW Packets Tx to IGX Net
148) ATM CRC Severely Err. Secs.         168) CGW Cells Rx from Line
149) Bdata A CLP Packets Tx to Line       169) CGW Frms Relayed from Line
150) Bdata B CLP Packets Tx to Line       170) CGW Aborted Frms Rx From Line
151) Yellow Alarm Transition Count        171) CGW Dscd Cells From Abted Frms

This Command: cnftrkstats 11
    
```


Figure 1-60 cnftrkstats—Configure ATM Trunk Statistics (Screen 7)

```
sw83          TN      SuperUser      IGX 8420      9.2          Aug. 1 1998  14:51 PST
```

```
Line Statistic Types
```

```
172) CGW Bd CRC32 Frms Rx from Line      185) OAM Valid OAM Cells Rx
173) CGW Bd Lngth Frms Rx from Line      186) OAM Loopback Cells Rx
174) CGW Bd CRC16 Frms Rx from IGX       187) OAM AIS Cells Rx
175) CGW Bd Length Frms Rx from IGX     188) OAM FERF Cells Rx
176) CGW 0-Length Frms Rx from IGX      189) OAM RTD Cells Rx
177) OAM Valid OAM Cells Tx              190) OAM RA Cells Rx
178) OAM Loopback Cells Tx               191) OAM Invalid OAM Cells Rx
179) OAM AIS Cells Tx                    192) OAM CC Cells Rx
180) OAM FERF Cells Tx
181) OAM RTD Cells Tx
182) OAM RA Cells Tx
183) OAM Invalid Supv Packets Rx
184) OAM CC Cells Tx
```

```
This Command: cnftrkstats 11
```

Figure 1-61 cnftrkstats—Configure ATM Trunk Statistics (UXM OC-3/T3/E3/T1/E1)

```
sw228          TN      SuperUser      IGX 8420      9.2   Aug. 27 1998 18:19 PST
```

Virtual Interface Statistic Types

- | | |
|-------------------------------------|--------------------------------------|
| 1) QBIN: Voice Cells Tx to line | 14) QBIN: Tx BData A Cells Discarded |
| 2) QBIN: TimeStamped Cells Tx to ln | 15) QBIN: Tx BData B Cells Discarded |
| 3) QBIN: NTS Cells Tx to line | 16) QBIN: Tx CBR Cells Discarded |
| 4) QBIN: Hi-Pri Cells Tx to line | 17) QBIN: Tx ABR Cells Discarded |
| 5) QBIN: BData A Cells Tx to line | 18) QBIN: Tx VBR Cells Discarded |
| 6) QBIN: BData B Cells Tx to line | 19) QBIN: Tx NTS Cells Received |
| 7) QBIN: Tx CBR Cells Served | 20) QBIN: Tx Hi-Pri Cells Received |
| 8) QBIN: Tx nrt-VBR Cells Served | 21) QBIN: Tx rt-VBR Cells Received |
| 9) QBIN: Tx ABR Cells Served | 22) QBIN: Tx TS Cells Received |
| 10) QBIN: Tx NTS Cells Discarded | 23) QBIN: Tx BData A Cells Received |
| 11) QBIN: Tx Hi-Pri Cells Discarded | 24) QBIN: Tx BData B Cells Received |
| 12) QBIN: Tx Voice Cells Discarded | 25) QBIN: Tx CBR Cells Received |
| 13) QBIN: Tx TS Cells Discarded | 26) QBIN: Tx ABR Cells Received |
- This Command: cnftrkstats 6.2

Continue?

```
sw228          TN      SuperUser      IGX 8420      9.2   Aug. 27 1998 18:19 PST
```

Virtual Interface Statistic Types

- | | |
|-------------------------------------|---|
| 27) QBIN: Tx nrt-VBR Cells Received | 40) CGW: Packets Rx From Network |
| 28) VI: Cells received w/CLP=1 | 41) CGW: Cells Tx to Line |
| 29) VI: OAM cells received | 42) CGW: NIW Frms Relayed to Line |
| 30) VI: Cells transmitted w/CLP=1 | 43) CGW: SIW Frms Relayed to Line |
| 31) VI: Cells received w/CLP=0 | 44) CGW: Aborted Frames Tx to Line |
| 32) VI: Cells discarded w/CLP=0 | 45) CGW: Dscd Pkts |
| 33) VI: Cells discarded w/CLP=1 | 46) CGW: 0-Length Frms Rx from Network |
| 34) VI: Cells transmitted w/CLP=0 | 47) CGW: Bd CRC16 Frms Rx from Network |
| 35) VI: OAM cells transmitted | 48) CGW: Bd Length Frms Rx from Network |
| 36) VI: RM cells received | 49) CGW: OAM RTD Cells Tx |
| 37) VI: RM cells transmitted | 54) CGW: Packets Tx to Network |
| 38) VI: Cells transmitted | 55) CGW: Cells Rx from Line |
| 39) VI: Cells received | 56) CGW: NIW Frms Relayed from Line |
- This Command: cnftrkstats 6.2

Continue?

```
sw228          TN      SuperUser      IGX 8420      9.2   Aug. 27 1998 18:19 PST
```

Virtual Interface Statistic Types

- 57) CGW: SIW Frms Relayed from Line
 - 58) CGW: Aborted Frms Rx From Line
 - 59) CGW: Dscd Cells
 - 60) CGW: 0-Lngth Frms Rx from Line
 - 61) CGW: Bd CRC32 Frms Rx from Line
 - 62) CGW: Bd Lngth Frms Rx from Line
 - 63) CGW: OAM RTD Cells Rx
 - 64) CGW: OAM Invalid OAM Cells Rx
- This Command: cnftrkstats 6.2

cnftstparm (Configure Card Test Parameters)

The **cnftstparm** command sets parameters for the internal diagnostic self tests that you can perform for each card type in the node.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

cnfdiagparm, dspcderrs, prtderrs, tststats

Syntax

cnftstparm <tp> <freq> <s_e> <s_inc> <s_thr> <s_to> <b_e> <b_inc> <b_thr>

<tp>	Specifies the card type.
<freq>	Specifies the time between the completion of one test and the start of the next (in seconds; default is card-dependent). 1 sec–65535 secs. Default for BCC card is 1600 secs. The recommended value for the BCC card is 1600 seconds.
<s_e>	Enables/disables the card self test. 'E' to enable; 'D' to disable.
<s_inc>	Specifies the threshold counter increment for self-test failures. Counter for each card-type: each failure increments. Default 100.
<s_thr>	Specifies the failure threshold for self tests. Default 300.
<s_to>	Specifies time to wait for a self test response (in seconds). How long to wait for a response depends on the card. The recommended value for the self-test timeout value on the BCC card is 800 seconds. The value on the standby controller card will be maintained even if the active timeout value is less than 800, which prevents the self-test timeout value from changing during a switchover (after a switchcc command is run). For example, if you change the self-test timeout value to 900 on the standby controller card, and then do a switchcc , the self-test timeout value on the new active controller card will remain 900.
<b_e>	Enables/disables the card background test. 'E' to enable; 'D' to disable. Available tests depend on the card; some are not enabled.
<b_inc>	Specifies the threshold counter increment for background test failures.
<b_thr>	Specifies the failure threshold for background tests.

Function

This command sets internal diagnostic, self-test parameters. Upon receiving this command, the system displays a two-page screen illustrating each of the various card types equipped in the node along with their self-test parameters. Each card has two tests: a diagnostic self-test and a background test. The self-test affects the normal operation of the card. The background test can execute while the card is carrying traffic.

The following is a list of the configurable test parameters for each card type:

- Frequency For Test Execution (sec)
- Enable/Disable Self Test (e or d)
- Self Test Failure Increment
- Self Test Failure Threshold
- Timeout For Self Test (sec)
- Enable/Disable Background Test (e or d)
- Background Test Failure Increment
- Background Test Failure Threshold

After you enter **cnftstparm** on a BPX node, the first page of the display appears, as shown in Figure 1-62.

Figure 1-62 cnftstparm—Parameters on a BPX Node

```

sw45          TN    SuperUser      BPX 15      9.2 Aug. 27 1998 16:04 PDT

Card  Test  - - - - - Self Test - - - - - - - Background Test - - -
Type  Freq  Enable      Inc  Thresh  Timeout  Enable      Inc  Thresh
-----
BCC   1600  Enabled     100   300    800    N/A         100   300
ASM   300   Disabled    100   300    60     N/A         100   300
BNI-T3 300   Enabled     100   300    150    N/A         100   300
BNI-E3 300   Enabled     100   300    150    N/A         100   300
ASI-E3 900   Enabled     100   300    800    Enabled     100   300
ASI-T3 900   Enabled     100   300    800    Enabled     100   300
ASI-155 900  Enabled     100   300    800    Enabled     100   300
BNI-155 300  Enabled     100   300    150    N/A         100   300
BXM   2000  Disabled    100   300    1800   Enabled     100   300

Last Command: cnftstparm

Next Command:
    
```

To see the second screen, enter “y” at the Continue prompt.

The screens of the **cnftstparm** display for an IGX node appear in Figure 1-63.

Figure 1-63 cnftstparm—Parameters on an IGX 8420 Node

```

sw197          TN      SuperUser      IGX 8420      9.2 Apr. 7 1998 03:58 GMT

Card Test  - - - - - Self Test - - - - - - - Background Test - - -
Type Freq  Enable      Inc  Thresh  Timeout  Enable      Inc  Thresh
-----
PSM   300  Enabled      100   300    31  N/A         100   300
HDM   300  Enabled      100   300    80  Enabled     100   300
LDM   300  Enabled      100   300    80  Enabled     100   300
NTM   300  Enabled      100   300    31  N/A         100   300
FRM   300  Enabled      100   300    80  Enabled     100   300
MT3   300  Enabled      100   300    50  N/A         100   300
CVM   300  Enabled      100   300   300  N/A         100   300
NPM   180  Enabled      100   300   120  N/A         100   300
ARM   300  Enabled      100   300    60  N/A         100   300
BTM   300  Enabled      100   300   120  N/A         100   300
FTM   300  Enabled      100   300    80  Disabled    100   300
UFM   300  Enabled      100   300    80  Enabled     100   300

```

This Command: cnftstparm

Continue? y

```

sw197          TN      SuperUser      IGX 8420      9.2 Apr. 7 1998 03:59 GMT

Card Test  - - - - - Self Test - - - - - - - Background Test - - -
Type Freq  Enable      Inc  Thresh  Timeout  Enable      Inc  Thresh
-----
UFMU  300  Enabled      100   300    80  Enabled     100   300
ALM   300  Enabled      100   300   120  N/A         100   300
UVM   300  Disabled     100   300    60  N/A         100   300
UXM   300  Enabled      100   300   300  Enabled     100   300

```

This Command: cnftstparm

Enter Card Type To Modify:

Enter the card type at the prompt to begin modifying the test parameter.

cnfuiparm (Configure User Interface Parameters)

The **cnfuiparm** command sets various control terminal user interface parameters.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

cnfnodeparm, dsptsmap

Syntax

cnfuiparm <parameter number> <value>

<parameter number> Specifies the index number of the parameter to set. (See Table 1-38.)

<value> Specifies the new parameter value to enter.

Function

This command lets you set user interface parameters for the control terminal on the local node. It may be necessary to change these parameters in special circumstances, such as when you need to observe a screen for a long period of time or when modem password protection makes logging in difficult. Table 1-44 lists the user interface parameters. Figure 1-64 illustrates the associated display.

Table 1-44 User Interface Parameters that are Configurable with cnfuiparm

No.	Parameter	Description	Default*
1	Logout Time	Idle time before a local user is logged out (0=never).	20 minutes
2	VT Logout Time	Idle time before a virtual terminal user is logged out.	4 minutes
3	Prompt Time	Idle time before a parameter prompt times out.	2 minutes
4	Command Time	Idle time before a continuous command times out.	3 minutes
5	UID Privilege Level	Privilege level of User ID allowed to use control terminal. The default is 6, the lowest user-level.	6
6	Input Char Echo	If enabled, characters are echoed as you type them.	enabled
7	Screen Update Time	Time between screen updates.	2 seconds

Figure 1-64 cnfuiparm—Configure User Interface Parameters

```
sw197          TN      SuperUser      IGX 8420      9.2 Apr. 7 1998 04:01 GMT

1. Logout Time ..... 999 minutes
2. VT Logout Time ..... 4 minutes
3. Prompt Time ..... 60 seconds
4. Command Time ..... 3 minutes
5. UID Privilege Level ... 6
6. Input Character Echo .. Enabled
7. Screen Update Time .... 10 seconds
```

This Command: cnfuiparm

Enter parameter index:

cnfuvvmchparam (Configure Channel Parameters on a UVM)

Configures default parameters for a channel or range of channels on a UVM. The parameters are:

- Voice codec unit (VCU) level
- PCM interface unit (PIU) level
- VAD threshold
- Modem threshold

See Table 1-45 for an explanation of the preceding UVM channel parameters.

Full Name

Configure UVM channel parameters

Syntax

cnfuvvmchparam <channel(s)> <value>

Related Commands

none

Attributes

Privilege	Jobs	Log	Node	Lock
0	Yes	Yes	IGX	Yes

Example 1

cnfuvvmchparam 7.1.1

Description

Configure the parameters for channels 1–23 on port 1 of the UVM in slot 7.

System Response

```

sw109          VT    SuperUser          IGX 8420      9.2 Aug. 26 1998 17:25 PST

From          Parameter:
              VCU   PIU   VAD   mdm
7.1.1         lvl   lvl   thld thld  5   6   7   8   9   10  11
7.1.1-23     6    6    40  40   0   0   0   0   0   0   0
7.2.1-23     6    6    40  40   0   0   0   0   0   0   0

```

This Command: cnfuvmparm 7.1.

Enter VCU Noise Level/-10dB [0-15]:

Table 1-45 describes the parameters of the **cnfuvmparm** command.

Table 1-45 cnfuvmparm Parameters

Parameter	Description
channel	Specifies the channel or range of channels.
value	<p>“Value” consists of the following parameters:</p> <p>VCU is the Voice codec unit. The value for this parameter is a noise level placed in a voice packet that is added in case a voice packet is dropped. The value you can enter is a multiplier for the base noise level of -10 dB. The range is 1–15 (multiplied by -10 dB). For example, if you enter 6, the level of noise placed in a replacement packet is -60 dB.</p> <p>PIU is the PCM interface unit. The PIU performs a re-sampling and injects noise in case of lost packets. The range is 1–15 (which is a multiplier for -10 dB). For example, if you enter 6, the level of noise placed in a replacement packet is -60 dB.</p> <p>VAD is the Voice Activity Detection threshold. If the deciBel level falls below the specified limit, no packets are transmitted. The range is 0–65535 and is a multiplier of -1 dB, but typical values are around 30–40.</p> <p>Modem threshold is a threshold for modem tone detection. Below this threshold, the tone is ignored (or “not detected”). The range is 0–255 and is a multiplier of -1 dB, but typical values are around 30–40.</p> <p>All the other values appear as numbered columns. These are placeholders reserved for future development.</p>

cnfvchparm (Configure Voice Channel Parameter)

The **cnfvchparm** command modifies CVM or CVM voice channel parameters.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX

Associated Commands

cnfCVMparm, **dspchan**

Syntax

cnfvchparm <channel(s)> <parameters>

channel(s) Specifies the voice channel number(s) to configure.
parameters Specifies values for the voice parameters (Table 1-45 lists parameters).

Function

The **cnfvchparm** command specifies voice card parameters for:

- Voice Activity Detection (VAD)
- Background noise injection
- VF channel loss
- Echo suppression
- Modem detection

Table 1-46 lists the voice parameters you can specify with **cnfvchparm**. Table 1-47 lists some calculated examples for a *sample delay* for VAD and non-VAD connections.

Different versions of firmware for the CVM present different ways of specifying the level of background noise you can select to cover awkward periods of silence at the ends of voice connections. For cards with Model A firmware, you specify the actual level in dBm (decibel) or dBmC0. For Model A cards, you can specify the noise levels with a granularity of 0.1 dBm or dBmC0. For cards with Model B firmware, you enter a number that maps to a noise level. Table 1-48 lists the numbers that correspond to the levels of injected background noise for Model B firmware.

The screen displays in Example 1 and Example 2 illustrate **cnfvchparm** applied to a Model A CDP and a Model B CDP, respectively. The display for Model A cards shows the decibel level of the injected noise. The display for the Model B shows the number that corresponds to a decibel (or dBmC0) level of background noise.

After you enter **cnfvchparm**, the system displays “Enter channel(s).” After you enter the parameters, the system requests confirmation by displaying “Reconfigure active CDP channels? (y/n).”

Without the **cnfvchparm** command, the other ways to re-configure channels are

- By switching cards
- By deleting then re-adding connections

Table 1-46 VF Channel Parameters

Parameter	Description	Default
Sample delay for VAD connections	Adds processing to speech information to prevent front-end clipping due to speech detector latency. One increment is 125 µsecs. See Table 1-47.	A8 (H)
Sample delay for non-VAD connections	Same for non-VAD circuits.	01 (H)
Background Noise	Sets the level of background noise the far-end card adds to the connection while it receives no voice packets. For Model A firmware, specify levels in actual decibels in 0.1 dB increments. For Model B firmware, see Table 1-47.	2 (H)
High Pass Filter mode	Enables/disables high-pass filter to assist in VAD and modem detect.	enabled
Floating Priority mode	When enabled, sets higher priority for modem detection on “c” and “v” channels. Effectively changes the trunk queue for the channel.	enabled
V.25 modem detect mode	Enables/disables V.25 modem-detect mode. The default is enabled with “detect-64K,” which specifies that a 2100 Hz tone indicates the presence of V.25-type modem. The options with V.25 modem detect are “disable,” “32” for 32K upgrade, and “64” for 64K upgrade. Enter “32” for fax transmission at 32 Kbps FAX Optimized ADPCM. Use the default “64” for fax transmission at 64 kbps PCM.	enabled
32K	Auto-upgrade line to 32 Kbps ADPCM when a 32K modem is detected.	disabled
64K	Automatically upgrade line to 64 Kbps clear channel PCM when a high speed modem is detected.	enabled

Table 1-47 Sample Delay Parameters

Delay for VAD and Non-VAD	Delay
01	0.125 msec.
50	10 msec.
A8	21 msec.

Table 1-48 Injected Noise Levels for Model B

Parameter 3	Injected Noise Level
00	Dynamically set noise level to match the noise detected at the other end. Requires Model B firmware on the CDP or CVM.
0	0 dBmC0 or -90 dBm
1	18 dBmC0 or -70 dBm
2	21 dBmC0 or -67 dBm
3	23 dBmC0 or -65 dBm
4	25 dBmC0 or -63 dBm
5	27 dBmC0 or -61 dBm
6	30 dBmC0 or -58 dBm
7	49 dBmC0 or -39 dBm

Example 1 cnfvchparm for Model A

```

sw110          TN      SuperUser      IGX 8420      9.2 Aug. 6 1998 17:43 PDT

CDP Models All                               None          All
UVM Models All                               None          All
      Sample Delay Bkgnd
From 14.1     VAD Non-VAD Noise HPF Float      Echo Suppression V.25 Xmit
14.1-15      A8  01    67   ON  ON       ON          ON      64K  5
14.17-24     A8  01    67   ON  ON       ON          ON      64K  5
    
```

This Command: cnfvchparm 14.1-6 A8 1 67 e e e e

V.25 Modem detect, 'd' - disable, '32' - 32K upgrade, '64' - 64K upgrade:

Example 2 cnfvchparm for Model B

```

sw83 TN      SuperUser      IGX 8420      9.2      Aug. 1 1998 17:01 PST
CDP Models All                               None          All
      Sample Delay Bkgnd
From 11.1     VAD Non-VAD Noise HPF Float      Echo Suppression V.25 Xmit
11.1-15      A8  01    2    ON  ON       ON          ON      ON   5
11.17-31     A8  01    2    ON  ON       ON          ON      ON   5
    
```

This Command: cnfvchparm

Next Command:

cpyfpmmap (Copy FastPAD Map Table)

The **cpyfpmmap** command copies the FastPAD map table from one FastPAD port to another.

Attributes

Jobs: No Log: No Lock: Yes Node Type: IGX

Associated Commands

cnffpmap

Syntax

cpyfpmmap <source slot.port> <nodename> <destination slot.port>

<source slot.port> Specifies the FTC port to copy from.

<nodename> Specifies the nodename.

<destination slot.port> Specifies the FTC port to which to copy the FastPad Map table.

Function

This command copies a FastPAD map table from one FastPAD port to another FastPAD port. When you enter this command, the system responds as shown in Figure 1-65.

Figure 1-65 cpyfpmmap—Configure FastPAD Map Table

```
cc7                      VT SuperUser              IGX 8430      9.2      Aug. 30 1998 10:05 PST
```

```
Last Command: 31.2    cc5    31.1
```

```
Next Command:
```

dchst (Display Channel Status)

The **dchst** command displays CDP or CVM card parameters.

Attributes

Jobs: No Log: No Lock: Yes Node Type: IGX

Associated Commands

cnfcdpparm

Syntax

dchst <channel> [interval]

<channel(s)> Specifies the voice channel number(s) to configure.

<interval> Specifies the refresh time for the data (1–60 sec.).

Function

This command displays state information for a CDP or CVM channel used for a specific connection. The interval parameter specifies the refresh time for the data. It defaults to 5 seconds. The Transmit and Receive dBm0 for both CDP or CVM indicate the input (towards the circuit line) and output power (from the circuit line) levels for the channel. Modem state indicates whether modem–detect is on or off.

Table 1-49 lists the parameters for the CDP or CVM card. Figure 1-66 illustrates the system display for a CDP or CVM.

Table 1-49 Display Channel Status Parameters for CDP or CVM

Register	Byte	Parameter	Description
0	high	zcr total	Zero Crossing Total
	low	signal state mem	Signal State Memory
1	high	hpf z1 hi-hi	High-Pass Filter
	low	hpf z1 hi-lo	High-Pass Filter
2	high	sam - hi	Encoded Voice Sample
	low	sam - lo	Encoded Voice Sample
3	high	vad state-hi	Voice Activity Detector state
	low	vad state-lo	Voice Activity Detector state
4	high	sil cnt	Silent Count
	low	mad signal state	Modem Activity Detector Signal State
5	high	mad wnd cnt	Modem Activity Detector Wnd. Count
	low	mad fail cnt	Modem Activity Detector Fail Count
6	high	mad state-hi	Modem Activity Detector state
	low	mad state-lo	Modem Activity Detector state

Figure 1-66 dchst—Display Channel Status

```
alpha          TRM          SuperUser      Rev: 9.2  Aug. 14 1998 16:30 PST

CDP state display for channel 11.1                               Snapshot

Transmit dBm0:
Receive dBm0:

Register 0 =
Register 1 =
Register 2 =
Register 3 =
Register 4 =
Register 5 =
Register 6 =

Last Command: dchst 11.1

Next Command:
```

diagbus (Diagnose Failed Bus)

The **diagbus** command is used to diagnose a failed IGX Muxbus or IGX Cellbus.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX

Associated Commands

none

Syntax

diagbus

Function

This command runs detailed diagnostics to isolate Muxbus problems to a failed card or bus. It is used when a minor alarm is indicated and displaying the alarm (**dsPalms**) screen indicates the message “bus needs diagnosis.”

This command can only be run locally with a terminal connected directly to the CONTROL port or remotely from a modem connection. It can not be executed through a VT (virtual terminal) command or when the node's CONTROL port is configured for Cisco WAN Manager mode.



Caution This command may cause a major disruption in service on all lines and connections and should only be run at a time when this can be tolerated.

Performing this test can result in a major disruption in the operation of the node. It should not be performed except as a last resort. To fully isolate the failure may require manual removal of cards, including controller cards and so forth. For this reason, the command may not be executed over a Virtual Terminal connection.

If the test is successful, and no problems found, the system displays:

Both buses are OK

Otherwise, the system displays various messages to the operator for additional steps to perform in isolating the problem. These messages depend on the results of the diagnostics testing.

drtop (Display Route Op Table)

The **drtop** command displays the routing table from the local node to each connected remote node.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX, BPX

Associated Commands

dsprtkcons

Syntax

drtop

Function

The **drtop** command displays the routing table from the local node to each remote node to which it connects. It shows how NPM/B.C. traffic is routed to other nodes in the network. Use **drtop** to find which trunks are used to send control cells/packets to other nodes.

The display includes remote node name, number of hops to the remote node, the trunk(s) used, and number of satellite hops if any, and the number of unused DS0s (open space) if any on the route. Figure 1-67 illustrates the display.

Figure 1-67 drtop—Display Route Op Table

```
pubsidx2      VT      SuperUser      IGX 8430      9.2      Aug. 2 1998 02:27 GMT

Node Number  Node Name      Hops To  Via Trk  SAT Hops  No HP Hops  Open Space
1            npubsbpx1     2        6        0        0        0        3
2            npubsigx1     3        6        0        0        0        3
3            npubsigx2     0        0        0        0        0        0
5            npubsigx1     1        6        0        0        0        24
7            npubsigx3     2        6        0        0        0        24
```

Last Command: drtop

Next Command:

Figure 1-70 dspbuses on an IGX Switch

```
sw197          TN      SuperUser      IGX 8420      9.2 Apr. 7 1998 04:10 GMT

                        Bus Info

Bus Bandwidth usage in Fastpackets/second  (Snapshot)

    Allocated = 86000      ( 8%)

    Available = 1082000    (92%)

-----
Bus A: Active - OK
Bus B: Standby - OK

Last Command: dspbuses

Next Command:
```

dspcardstats (Display BXM Card Statistics)

The **dspcardstats** command displays the collected BXM card statistics for the selected node slot.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: BPX

Associated Commands

cnfslotstats

Syntax

dspcardstats <slot number>

<slot number> Specifies the shelf and slot.

Function

This command displays all card statistics for an active BXM card in the current node. Figure 1-71 illustrates a screen display after entering the **dspcardstats** command.

Figure 1-71 dspcardstats—Display BXM Card Statistics

```

sw59                    TN    SuperUser            BPX 15    9.2 Date/Time Not Set
ASI-T3 12              Status: Clear - Slot OK                    Clrd: Date/Time Not Set
Type            Count ETS    Status            Type
-----
utopia-2 discard count                    0    0
utopia-2 misalign count                   0    0
atm fr. pyld parity err                   0    0
bfr hdr parity err                        0    0
null bfrm header err                      0    0
brame hoq req t/o                         0    0
poll bus parity err                        0    0
bfr queue parity err                      0    0
bfr bip16 parity err                      0    0
mc addr tbl parity err                    0    0
eap arfd pndg err                         0    0

This Command: dspcardstats 12
Continue?

```

BXM Card Statistics Descriptions for dspcardstats Command

Table 1-50 lists some BXM card statistics names and descriptions for the **dspcardstats** command. The table gives the objects that the BXM firmware sends to the switch software. Note that in most cases the object name and screen field name are similar or identical; however, descriptions may vary from the field names as they appear on the **dspcardstats** screen.

Table 1-50 Descriptions for Statistics for BXM Card on dspcardstats Screen

Object ID	Object Name	Range/Values	Default	Description
01	Message Tag	Byte 0-3: Tag ID Byte 4-7: IP Address	0	Identifier and source IP address sent with ComBus message. Both will be copied into the response, if any is to be sent.
02	Auto-Reset Option	0 - Disable 1 - Enable	1	Controls whether the statistics read should be automatically reset to 0.
03	Poll-Bus A Parity Errors	0 - 2 ³² -1	NA	Includes both Poll-Bus A & B Parity Errors from SIMBA.
04-05	RESERVED			
06	Tx BIP-16 Errors	0 - 2 ³² -1	NA	Count of 100 msec intervals during which BXM BFrame Queue Parity errors existed.
07	RESERVED			
08	SBUS BFrame BIP-16 Errors	0 - 2 ³² -1	NA	Count of 100 msec intervals during which BFrame (non-header) BIP-16 errors existed.
09	SBUS BFrame Parity Errors	0 - 2 ³² -1	NA	Count of 100 msec intervals during which BFrame Header BIP-16 errors existed.
0A	RESERVED			
0B	SIU Phase Errors	0 - 2 ³² -1	NA	Count of 100 msec intervals during which SIU Clock Failures or Phase Margin errors existed.
0C	Standby PRBS Errors	0 - 2 ³² -1	NA	Count of 100 msec intervals during which SIU Rx errors existed.
0D-12	RESERVED			
13	Poll Clock Error Count	0 - 2 ³² -1	NA	Count of 100 msec intervals during which latched poll clock failures existed.
14	RESERVED			
15	Monarch-Specific Total Error Count	0 - 2 ³² -1	NA	Any time there is a Monarch-Specific Error occurrence (i.e. any of the errors listed in the following group of Object IDs) this counter is incremented. Hence, the software can just get this object to see if any errors have happened. If the counter is 0, then there is no need for S/W to fetch the remaining objects. If it is non-zero, then the remaining objects should be fetched to determine which error it is.
16	Utopia-2 discard error	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed.

Table 1-50 Descriptions for Statistics for BXM Card on dspcardstats Screen (Continued)

Object ID	Object Name	Range/Values	Default	Description
17	Utopia-2 Misalign error	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed.
18	ATM Fr. Pyld Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This is the ATM frame payload parity error.
19	ATM Fr. hdr Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This is the ATM frame header parity error.
1A	BFr. Hdr. Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This error is the BFrame header parity error (half-word PE using MSB as the check bit).
1B	Null BFr Header Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This error indicates that a null BFrame header was accessed.
1C	BFrame HOQ Req T/O	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This is the BFrame HOQ request time-out error.
1D	Poll Bus Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This is a generic poll-bus parity error.
1E	BFr. Queue Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed.
1F	BFr. BIP16 Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This error is the BFrame BIP-16 parity error as detected by SIMBA.
20	BFr Hdr. BIP16 Prty Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This error indicates that there was a BFrame header BIP-16 parity error.
21	MC Addr Tbl Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This error indicates that there was a Multicast Address table parity error.
22	EAP ARFD Pndg. Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that SIMBA detected a EAP alternate Reg File Data Pending error.
23	EAP PRFD Pndg. Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that SIMBA detected a EAP primary Reg File Data Pending error.
24	ECOE RFBD Pndg. Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that SIMBA detected an ECOE Reg File B Data pending error.

Table 1-50 Descriptions for Statistics for BXM Card on dspcardstats Screen (Continued)

Object ID	Object Name	Range/Values	Default	Description
25	ECOE RFAD Pndg. Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that SIMBA detected an ECOE Reg File A Data pending error.
26	MCE Q Data Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that SIMBA detected a MCE Queue Data parity error.
27	MCE Q Hdr Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that SIMBA detected a MCE Queue Header parity error.
28	MC Rec. Tbl Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed.
29	Cell Mem Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that a cell memory parity error was detected.
2A	VC T/S Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the QE has detected VC T/S addr/config errors.
2B	Rx A Hdr Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the QE has detected Rx A header parity errors.
2C	Rx A Payld Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the QE has detected Rx A payload parity errors.
2D	Rx A SOC OOS Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the QE has detected Rx A SOC out of sync errors.
2E	Rx A Disc Ctr Events	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the QE has detected Rx A Discard counter errors.
2F	Rx B Hdr Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the QE has detected Rx B header parity errors.
30	Rx B Payld Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the QE has detected Rx B payload parity errors.
31	Rx B SOC OOS Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the QE has detected Rx B SOC out of sync errors.
32	Rx B Disc Ctr Events	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the QE has detected Rx B Discard counter errors.
33	Rx C Hdr Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the QE has detected Rx C header parity errors.

Table 1-50 Descriptions for Statistics for BXM Card on dspcardstats Screen (Continued)

Object ID	Object Name	Range/Values	Default	Description
34	Rx C Payld Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the QE has detected Rx C payload parity errors.
35	Rx C SOC OOS Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the QE has detected Rx C SOC out of sync errors.
36	Rx C Disc Ctr Events	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the QE has detected Rx C Discard counter errors.
37	Cell Mem Hdr PE	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the QE has detected cell memory header parity errors.
38	Cell Mem Pyld PE	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the QE has detected cell memory payload parity errors.
39	FRMCP Alt. IF Crc Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected FRMCP Alternate IF CRC errors.
3A	FRMCP Pri. IF Crc Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected FRMCP Primary IF CRC errors.
3B	BRMCP Pri IF CRC Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected BRMCP Primary IF CRC errors.
3C	BRMCP Alt IF CRC Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected BRMCP Alternate IF CRC errors.
3D	OAMCP Pri. CRC Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected OAMCP Primary IF CRC errors.
3E	OAMCP Alt. CRC Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected OAMCP Alternate IF CRC errors.
3F	OAMCP Cell Fltr Parity Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected OAMCP Cell Filter parity errors.
40	ERP Exp. Rate BIP Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected ERP Explicit rate BIP errors.

Table 1-50 Descriptions for Statistics for BXM Card on dspcardstats Screen (Continued)

Object ID	Object Name	Range/Values	Default	Description
41	ERP LCN BIP Parity Errors	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected ERP LCN BIP parity errors.
42	ERP Missing Exp. Rte Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected ERP Message explicit rate errors.
43	Rx Pri. IF Hdr PEs	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected Rx Primary I/F Header parity errors.
44	Rx Pri. IF Pyld Errors	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected Rx Primary I/F payload parity errors.
45	Rx Pri IF SOC OOS Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected Rx Primary I/F SOC out of sync errors.
46	Rx Pri. IF Disc Ctr Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected Rx Primary I/F Discard counter errors.
47	Rx Alt. IF Hdr PEs	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected Rx Alternate I/F Header parity errors.
48	Rx Alt. IF Pyld Errors	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected Rx Alternate I/F payload parity errors.
49	Rx Alt IF SOC OOS Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected Rx Alternate I/F SOC out of sync errors.
4A	Rx Alt. IF Disc Ctr Err	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected Rx Alternate I/F Discard Counter errors.
4B	SDC Sch RAM PEs	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected SDC Extern Schedule RAM parity errors.
4C	VCSD ICG LUT PEs	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected VCSD ICG LUT parity errors.

Table 1-50 Descriptions for Statistics for BXM Card on dspcardstats Screen (Continued)

Object ID	Object Name	Range/Values	Default	Description
4D	RRC Ext Rate RAM PE	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected RRC external rate RAM parity errors.
4E	VCSA QE Sts Bus PE	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SABRE has detected VCSA Status bus parity errors.
4F	PRB Sec Req Sent Cnt	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SIMBA has detected Sec Req Send errors.
50	PRB Sec Req Acpt Cnt	0 - 2 ³² -1	NA	Count of 100 msec intervals during which this error existed. This indicates that the SIMBA has detected Sec Req Accept errors.

dspcderrs (Display Card Errors)

The **dspcderrs** command displays detailed card failure information resulting from card diagnostics testing at the local node.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX, BPX

Associated Commands

clrcderrs, **prtcdderrs**

Syntax

dspcderrs [<slot>]

[<slot>] Specifies the shelf slot in the local node.

Function

This command displays a history of card failures associated with a specified slot. If no argument is specified, a summary is displayed, indicating which slots have failures recorded against them. The command displays the results of the self tests and background tests as well as the total hardware errors.

To clear the card error counters, use the **clrcderrs** command. To obtain a hard copy of the report, use the **prtcdderrs** command. Figure 1-72 illustrates the command display.

Figure 1-72 dspcderrs—Display Card Errors

```
sw83                      TN    SuperUser                      IGX 8420    9.2                      Aug. 1 1998 17:56 PST

AIT in Slot 11 : 176767 Rev AEF                      Failures Cleared: Aug. 19 1998 11:25:29 PST
----- Records Cleared: Aug. 20 1998 13:14:03 PST
Self Test                      Threshold Counter: 0                      Threshold Limit: 300
Total Pass: 0                      Total Fail: 0                      Total Abort: 0
First Pass:                      Last Pass:
First Fail:                      Last Fail:

Hardware Error                      Total Events: 0                      Threshold Counter: 0
First Event:                      Last Event:

Last Command: dspcderrs 11

Next Command:
```

dspcftst (Display Communication Fail Test Pattern)

The **dspcftst** command displays the test pattern used for the communications fail test.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX, BPX

Associated Commands

cnfcftst

Syntax

dspcftst

Function

This command displays the test pattern used to test the controller communication path to a node that does not respond to normal controller traffic. The test pattern defaults to an alternating 8-byte sequence of 00 and FF. Refer to **cnfcftst** command for other patterns and how to reconfigure this pattern. Figure 1-73 illustrates the command display.

Figure 1-73 dspcftst—Display Comm. Fail Test Pattern

```
sw83          TN      SuperUser      IGX 8420      9.2      Aug. 1 1998  17:57 PST
```

```
Comm Fail Test Pattern.
```

```

Byte 0: FF      Byte 12: 00      Byte 24: FF      Byte 36: 00      Byte 48: FF
Byte 1: FF      Byte 13: 00      Byte 25: FF      Byte 37: 00      Byte 49: FF
Byte 2: FF      Byte 14: 00      Byte 26: FF      Byte 38: 00      Byte 50: FF
Byte 3: FF      Byte 15: 00      Byte 27: FF      Byte 39: 00      Byte 51: FF
Byte 4: 00      Byte 16: FF      Byte 28: 00      Byte 40: FF      Byte 52: 00
Byte 5: 00      Byte 17: FF      Byte 29: 00      Byte 41: FF      Byte 53: 00
Byte 6: 00      Byte 18: FF      Byte 30: 00      Byte 42: FF      Byte 54: 00
Byte 7: 00      Byte 19: FF      Byte 31: 00      Byte 43: FF      Byte 55: 00
Byte 8: FF      Byte 20: 00      Byte 32: FF      Byte 44: 00      Byte 56: FF
Byte 9: FF      Byte 21: 00      Byte 33: FF      Byte 45: 00      Byte 57: FF
Byte 10: FF     Byte 22: 00      Byte 34: FF      Byte 46: 00      Byte 58: FF
Byte 11: FF     Byte 23: 00      Byte 35: FF      Byte 47: 00      Byte 59: FF
```

```
Last Command: dspcftst
```

```
Next Command:
```

dspchan (Display Channel Configuration)

The **dspchan** command displays the configuration of various IGX voice channels.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX

Associated Commands

cnfcdpparm

Syntax

dspchan <channel>

<channel> Specifies the voice channel connection to display.

Function

This command displays the configuration of IGX voice channels. It is primarily a debug command and allows you to inspect the data structure defining a channel. Parameters for voice and signaling processing on a CVM voice channel are displayed by this command. Table 1-51 lists the parameters. Many of these parameters are also displayed elsewhere. Figure 1-74 illustrates the command display.

Table 1-51 Parameters Configurable on a CVM Voice Channel

Parameter	Parameter	Parameter	Parameter
VC Index	Dial Type	TX Sig	iec converge.
In Loss	TX A-D bit	RX Sig	Hi Pass F
Out Loss	RX A-D bit	Clr Chn	es loss
Chan Type	Signaling	Sig Rate	Fmodem
Sig. Intg	Echo supr	PLY MSBhx	ADV
Xmt. dlay	Wink Puls	PLY LSBhx	Cond ID
Smpl dlay	TX A-D Qual	In use	iec erl lvl
Bk noise	RX A-D Qual	DPU	iec Hregs.
DSI smple	TX Code	iec cancel	iec tone dsbl
Chan Util	RX Code	iec nlp	adpcm flag
Onhk A-D			

Figure 1-74 dspchan—Display Channel (CDP card)

```
sw83          TN      SuperUser      IGX 8420    9.2      Aug. 1 1998  18:06 PST
```

```
Channel Data Base for CDP card 7 chan. 000000 at address 30BF29EC
```

VC Index	-1	Onhk C	4
In Loss	0	Onhk D	4
Out Loss	0	Dial Type	0
Chan Type	1	TX A bit	1
Sig. Intg	96	TX B bit	1
Xmt. dlay	5	TX C bit	0
Smpl dlay	1	TX D bit	1
Bk noise	67	RX A bit	1
DSI smple	168	RX B bit	1
Chan Util	40	RX C bit	0
Onhk A	3	RX D bit	1
Onhk B	3	Signalling	TSP MODE

```
This Command: dspchan 7.1
```

```
Continue?
```

```
sw83          TN      SuperUser      IGX 8420    9.2      Aug. 1 1998  18:07 PST
```

```
Channel Data Base for CDP card 7 chan. 000000 at address 30BF29EC
```

Echo supr	1	TX A Qual	3
Hi Pass F	1	TX B Qual	3
Float	1	TX C Qual	3
es loss	1	TX D Qual	3
Fmodem	64	RX A Qual	3
ADV	1	RX B Qual	3
Cond ID	0	RX C Qual	3
Wink Puls	20	RX D Qual	3
END OF UNI CNFG			

```
This Command: dspchan 7.1
```

```
Continue?
```

```
sw83          TN      SuperUser      IGX 8420    9.2      Aug. 1 1998  18:07 PST
```

```
Channel Data Base for CDP card 7 chan. 000000 at address 30BF29EC
```

TX CODE	3	iec cancel	0
RX CODE	3	iec nlp	1
TX SIG	0	iec converg.	1
RX SIG	0	iec erl lvl	1
CLR CHN	0	iec Hregs.	1
SIG RATE	0	iec tone dsbl	1
PLY MSBhx	1	adpcm flag	0
PLY LSBhx	90		
In use	0		
DPU	-		

```
Last Command: dspchan 7.1
```

```
Next Command:
```

dspchstatcnf (Display Statistics Enabled for a Channel)

The **dspchstatcnf** command displays the configuration of enabled statistics for a channel.

You use the **cnfcdparm** command to configure the channel statistics level (level 1, 2, or 3) on a BXM and UXM card.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX

Associated Commands

cnfchstats, dspchstathist, cnfcdparm

Syntax

dspchstatcnf <channel>]

<channel> Specifies the channel whose statistics configuration you want to display.

Function

The **dspchstatcnf** command displays the enabled interval statistics for a channel. It is intended to help debug problems with statistics gathering. The command output is a list of the connection statistics as set by the **cnfchstats** command, by Cisco WAN Manager or by IGX features. Figure 1-75 illustrates a typical example.

The Owner column identifies who or what set the statistic. If the Owner column shows "Automatic," the node's features set the statistic. If the node name appears under Owner, Cisco WAN Manager set the statistic. If the user name appears under Owner, the **cnfchstats** command executed from the command line interface set the statistic.

Figure 1-75 dspchstatcnf—Display Channel Statistics Enabled (FR channel)

```
pubsbsp1      VT      SuperUser      BPX 15      9.2      May 24 1998 23:13 GMT
Statistics Enabled on Channel 5.1.100.100
```

Statistic	Samples	Interval	Size	Peaks	Owner
41) AAL5 Cells Discarded for VCQ Full	1	30	4	NONE	TFTP
42) Average VCq Depth in Cells	1	30	4	NONE	TFTP
43) Cells lost due to Rsrc Overflow	1	30	4	NONE	TFTP
44) Cells discarded for SBIN full	1	30	4	NONE	TFTP
45) Cells Transmitted with EFCI (Port)	1	30	4	NONE	TFTP
46) Cells Transmitted (Port)	1	30	4	NONE	TFTP
47) Cells Received from Network	1	30	4	NONE	TFTP
48) Cells discarded for QBIN full	1	30	4	NONE	TFTP
49) Cells discarded when QBIN>CLP	1	30	4	NONE	TFTP
50) Cells Transmitted with CLP (Port)	1	30	4	NONE	TFTP
51) BCM Cells Received (Port)	1	30	4	NONE	TFTP

This Command: dspchstatcnf 5.1.100.100

Continue?

dspchstathist (Display Statistics History for a Channel)

The **dspchstathist** command displays a history of statistics configured as enabled for a channel.

You can use the **cnfdparm** command to configure the channel statistics level on the BXM and UXM cards.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

cnfchstats, **cnfchlevel**, **dspchstatcnf**

Syntax

dspchstathist <channel> <stat> <owner> <interval>

<channel>	Specifies the channel.
<stat>	Specifies the number of the statistic to view.
<owner>	Specifies the source of the selected statistics's original configuration (the choices are "auto," "user," and "tftp").
<interval>	Specifies the time period of statistics collection to display.

Function

This command displays a history of the enabled statistics for a selected channel. It is intended for debugging problems with statistics gathering. It displays the data for the number of samples specified in the configuration of the channel statistic. You select a statistic from the list in the **dspchstathist** display. Specify only an enabled statistic.

Use the **dspchstatcnf** command to display the statistics enabled on the selected channel. Record the statistics types enabled, the collection interval, and owner; you will need this information to obtain the statistics history. Use **cnfchstats** to enable a statistic if it is not already enabled. Figure 1-76 illustrates a display for channel 6.1 packets transmitted (1 second interval) history.

Note You may have to enter owner "auto" in all capital letters.

Figure 1-76 dspchstathist—Display Channel Statistics History

gamma TRM SuperUser Rev: 9.2 Aug. 14 1998 13:53 PDT

Packets Transmitted on Channel 6.1
Interval: 1 Minute(s), Data Size: 4 Byte(s), NO Peaks, Owner: Automatic

0	-	1699
-1	-	1698
-2	-	1698
-3	-	1699
-4	-	1698
-5	-	1698
-6	-	1698
-7	-	1699
-8	-	1697
-9	-	1699

Last Command: dspchstathist 6.1 7 1 AUTO

Next Command:

dspchstats (Display All Enabled Statistics for a Channel)

Use the **dspchstats** command to display all statistics configured as enabled for a selected channel. (This is referred to as a “summary statistics” command.)

For descriptions of **dspchstats** fields for the BXM card, refer to Table 1-47. Note that the object names given in the table may not match what appears on the screen. Similarly, the descriptions given may vary in some cases for actual behavior for a particular **dspchstats** statistic. (Field names will be provided in the FCS release of this document.)

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

cnfchstats, **dspchstatcnf**

Syntax

dspchstats <channel> [interval]

<channel> specifies the channel defined according to the channel type (*slot.port.vpi.vci*, *slot.port.DLCI*, or *slot.port* for ATM, Frame Relay, or voice or data, respectively).

<interval> specifies the time interval of each sample (1–255 minutes).

Function

This command displays the enabled statistics for the selected channel. It is intended for debugging problems with statistics gathering. It displays the data for the last five occurrences of the channel statistic. You select the channel statistic from the list displayed when you first enter the command.

Use the **dspchstats** command to display the statistics enabled on the selected channel. Record the statistics types enabled, the collection interval, and owner—you will need this information to get the statistics history. Use **cnfchstats** to enable a statistic if it is not already enabled. You can use **cnfchlevel** to configure a BXM or UXM card to additional levels of statistics (level 2 and level 3) in addition to level 1 statistics. Figure 1-77 shows a display for channel statistics on a UXM port.

Figure 1-77 dspchstats—Display Channel Statistics

```
sw197          TN      SuperUser      IGX 8420      9.2      Apr. 7 1998  00:20 GMT

Channel Statistics: 5.1.70.100                               Snapshot
Collection Time: 0 day(s) 00:00:00                          Cld: 04/04/98 16:47:00
Type                                                     Count      Traffic      Rate (cps)
Cells Received from Port                                0      From port      0
Cells Transmitted to Network                            0      To network     0
Cells Received from Network                            0      From network   0
Cells Transmitted to Port                              0      To port        0
EOF Cells Received from Port                            0
Cells Received with CLP=1                              0
Cells Received with CLP=0                              0
Non-Compliant Cells Received                           0
Average Rx VCq Depth in Cells                          0
Average Tx VCq Depth in Cells                          0
Cells Transmitted with EFCI=1                          0
Cells Transmitted with EFCI=0                          0

Last Command: dspchstats 5.1.70.100

Next Command:
```

Descriptions for Statistics Fields on dspchstats

Table 1-52 gives some descriptions for fields on the **dspchstats** screen.

Note The object name does not necessarily map functionally in all cases to the screen field name, but in most cases provides a description of the function of the field.

Table 1-52 Descriptions for dspchstats Fields for BXM Card

Object ID	Object (Field) Name	Range/Values	Default	Description
01	Message Tag	Byte 0-3: Tag ID Byte 4-7: IP Address	0	Identifier and source IP address sent with ComBus message. Both will be copied into the response, if any is to be sent.
03	LCN	1 - 64K	R	Identifies which channel to collect statistics.
05	Rx Cells From Port	0 - 2 ³² -1	N/A	Number of cells received at the ingress of the connection. [A:ALL, B:ALL] (Note: This count is retrieved from the RCMP chip.)
06	Rx EOFs From Port	0 - 2 ³² -1	N/A	Number of EOFs received at the ingress of the connection. [A:ALL, B:12, B:28]
07	Rx Cells to Backplane	0 - 2 ³² -1	N/A	Number of cells rx'd at the ingress that were sent to the backplane. [A:ALL, B:ALL]
08	Rx CLP=1 Cells From Port	0 - 2 ³² -1	N/A	Number of cells received at the port with CLP=1. [A:ALL, B:ALL] (Note: This count is retrieved from the RCMP chip.)
09-0B	RESERVED			
0C	Rx EFCI=1 Cells From Port	0 - 2 ³² -1	N/A	Number of cells received at the port with EFCI=1. [A:28, B:28]
0D	RESERVED			
0E	Non-Compliant Cell Count (Total)	0 - 2 ³² -1	N/A	Number of cells received at the ingress of the connection that were non-compliant discarded. [A:ALL, B:ALL]. (Note: this is a 16-bit counter in the hardware -- it can wrap in less than a second depending upon non-compliant rate.)
0F	Non-Compliant Cell Count (CLP 0 Only)	0 - 2 ³² -1	N/A	Number of CLP 0 cells received at the ingress of the connection that were non-compliant dropped. [A:ALL, B:ALL]. (Note: This is a 16-bit counter in the hardware -- it can wrap in less than a second depending upon non-compliant rate.)

Table 1-52 Descriptions for dspchstats Fields for BXM Card (Continued)

Object ID	Object (Field) Name	Range/Values	Default	Description
10	Non-Compliant Cell Count (CLP 1 Only)	0 - 2 ³² -1	N/A	Number of CLP 1 cells received at the ingress of the connection that were non-compliant dropped. [A:ALL, B:ALL]. (Note: This is a 16-bit counter in the hardware—it can wrap in less than a second depending upon non-compliant rate.)
11	Ingress VC Q Depth	0 - 2 ³² -1	N/A	Current Ingress VC Queue Depth. [A:ALL, B:ALL]
15	Rx Rsrc Ovfl Discards	0 - 2 ³² -1	N/A	Number of cells received at the port that were discarded due to Resource Overflow. [B:ALL]
16-1E	RESERVED			
1F	Tx Cells From Network	0 - 2 ³² -1	N/A	Number of cells received from the backplane. [A:ALL, B:ALL]
20	Tx CLP=1 To Port	0 - 2 ³² -1	N/A	Number of cells transmitted out the port with CLP=1. [A:ALL, B:12, B:28]
21	Tx EFCI=1 To Port	0 - 2 ³² -1	N/A	Number of cells transmitted out the port with EFCI=1. [A:12, A:28, B:12, B:28]
22	Tx Cells To Port	0 - 2 ³² -1	N/A	Number of cells transmitted out the port. [A:ALL, B:ALL]
23-26	RESERVED			
27	Loopback RTD Measurement	0 - 2 ³² -1	N/A	The Loopback Round Trip Delay measurement in msec. (Still under investigation.) Used to initiate the measurement (Set). The Get is used to get the last measurement known; or zero if now known.
28	Local Ingress Rx State	0 : Okay 1 : FERF (aka RDI) 2 : AIS	0	The OAM connection state. [A:ALL, B:ALL]
29	Rx CLP=0 Congested Discards	0 - 2 ³² -1	N/A	Number of CLP=0 Cells received from the port and discarded due to congestion (after the policer). [A:ALL, B:None]
2A	Rx CLP=1 Congested Discards	0 - 2 ³² -1	N/A	Number of CLP=1 Cells received from the port and discarded due to congestion (after the policer). [A:ALL, B:None]
2B	Rx CLP=0 Cells From Port	0 - 2 ³² -1	N/A	Number of CLP=0 Cells received from the port. [A:ALL, B:ALL] (NOTE: This stat is received from the RCMP.)
2C	Tx CLP=0 Cells To Port	0 - 2 ³² -1	N/A	Number of CLP=0 Cells transmitted to the port. [A:ALL, B:12, B:28]
2D	Tx CLP=0 Cells From Backplane	0 - 2 ³² -1	N/A	Number of CLP=0 Cells received from the backplane. [A:ALL, B:28]
2E	Rx CLP=0 Cells To Backplane	0 - 2 ³² -1	N/A	Number of CLP=0 Cells sent to the backplane. [A:ALL, B:12, B:28]

Table 1-52 Descriptions for dspchstats Fields for BXM Card (Continued)

Object ID	Object (Field) Name	Range/Values	Default	Description
2F	Tx CLP=1 Cells From Backplane	0 - 2 ³² -1	N/A	Number of CLP=1 Cells received from the backplane. [A:ALL, B:28]
30	Rx CLP=1 Cells To Backplane	0 - 2 ³² -1	N/A	Number of CLP=1 Cells sent to the backplane. [A:12, A:28, B:12,B:28]
31	Rx EFCI=0 Cells From Port	0 - 2 ³² -1	N/A	Number of EFCI=0 Cells received from the port. [A:28, B:28]
32	Tx EFCI=0 Cells To Port	0 - 2 ³² -1	N/A	Number of EFCI=0 Cells transmitted to the port. [A:12,A:28, B:12, B:28]
33	Tx EFCI=0 Cells From Backplane	0 - 2 ³² -1	N/A	Number of EFCI=0 Cells received from the backplane. [A:28, B:28]
34	Rx EFCI=0 Cells To Backplane	0 - 2 ³² -1	N/A	Number of EFCI=0 Cells sent to the backplane. [A:12, A:28, B:12, B:28]
35	Tx EFCI=1 Cells From Backplane	0 - 2 ³² -1	N/A	Number of EFCI=1 Cells received from the backplane. [A:28, B:28]
36	Rx EFCI=1 Cells To Backplane	0 - 2 ³² -1	N/A	Number of EFCI=1 Cells sent to the backplane. [A:12, A:28, B:12, B:28]
37	Tx EOFs to Port	0 - 2 ³² -1	N/A	Number of cells with EOF sent to the port. [A:12, A:28, B:28]
38	Tx EOFs from Backplane	0 - 2 ³² -1	N/A	Number of EOFs received at the backplane. [B:12, B:28]
39	Rx EOFs to Backplane	0 - 2 ³² -1	N/A	Number of cells with EOF sent to the backplane. [B:28]
3A	Rx Segment OAM	0 - 2 ³² -1	N/A	Number of Segment OAM cells received at the port. [A:28, B:28]
3B	Tx Segment OAM	0 - 2 ³² -1	N/A	Number of Segment OAM cells received at the egress. [A:28, B:28]
3C	Rx End-to-End OAM	0 - 2 ³² -1	N/A	Number of End-to-End OAM cells received at the port. [A:28, B:28]
3D	Tx End-to-End OAM	0 - 2 ³² -1	N/A	Number of End-to-End OAM cells received at the egress. [A:28, B:28]
3E	Rx Forward RM Cells	0 - 2 ³² -1	N/A	Number of Forward RM cells received at the port. [A:28, B:28]
3F	Tx Forward RM Cells	0 - 2 ³² -1	N/A	Number of Forward RM cells received at the backplane. [A:28, B:28]
40	Rx Backward RM Cells	0 - 2 ³² -1	N/A	Number of Backward RM cells received at the port. [A:28, B:28]
41	Tx Backward RM Cells	0 - 2 ³² -1	N/A	Number of Backward RM cells received at the backplane. [A:28, B:28]
42	Rx Optimized Bandwidth Management RM Cells	0 - 2 ³² -1	N/A	Number of Optimized Bandwidth Management RM cells received at the port. [B:28]

Table 1-52 Descriptions for dspchstats Fields for BXM Card (Continued)

Object ID	Object (Field) Name	Range/Values	Default	Description
43	Tx Optimized Bandwidth Management RM Cells	0 - 2 ³² -1	N/A	Number of Optimized Bandwidth Management RM cells received at the backplane. [B:28]
44	Rx Undefined RM Cells	0 - 2 ³² -1	N/A	Number of Undefined RM cells received at the port. [B:28]
45	Tx Undefined RM Cells	0 - 2 ³² -1	N/A	Number of Undefined RM cells received at the backplane. [B:28]
46	Tx Rsrc Ovfl Discards	0 - 2 ³² -1	N/A	Number of cells rx'd at the backplane that were discarded due to Resource Overflow. [B:ALL]
47	Rx VI Cell Discards	0 - 2 ³² -1	N/A	Number of cells received at the port that were discarded because of a full Vi. [B:12, B:28]
48	Tx VI Cell Discards	0 - 2 ³² -1	N/A	Number of cells rx'ed at the backplane discarded because of a full Vi. [B:12, B:28]
49	Rx QBIN Cell Discards	0 - 2 ³² -1	N/A	Number of cells rx'd at the port discarded due to QBIN threshold violation. [B:12, B:28]
4A	Tx QBIN Cell Discards	0 - 2 ³² -1	N/A	Number of cells rx'd at the backplane that were disc. due to QBIN threshold violations. [B:12, B:28]
4B	Rx VC Cell Discards	0 - 2 ³² -1	N/A	Number of cells rx'd at the port that were disc. due to VC threshold violations. [B:12, B:28]
4C	Tx VC Cell Discards	0 - 2 ³² -1	N/A	Number of cells rx'd at the backplane that were discarded due to VC threshold violations. [B:ALL]
4D	Rx Cell Filter Discards	0 - 2 ³² -1	N/A	Number of cells received at the port that were discarded due to cell filter action. [B:12, B:28]
4E	Tx Cell Filter Discards	0 - 2 ³² -1	N/A	Number of cells rx'd at the backplane that were discarded due to cell filter action. [B:12, B:28]
4F	Rx Illegal Event Cells	0 - 2 ³² -1	N/A	Number of cells rx'd at the port that caused an reserved event in the hardware. [B:28]
50	Tx Illegal Event Cells	0 - 2 ³² -1	N/A	Number of cells rx'd at the backplane that caused an reserved event in the H/W. [B:28]
51	Ingress VSVD ACR	0 - 2 ³² -1	N/A	Ingress VSVD allowed Cell Rate. [A:ALL, B:ALL]
52	Egress VSVD ACR	0 - 2 ³² -1	N/A	Egress VSVD allowed Cell Rate. [A:ALL, B:ALL]
53	Egress VC Q Depth	0 - 2 ³² -1	N/A	Current Egress VC Queue Depth. [A:ALL, B:ALL]

Table 1-52 Descriptions for dspchstats Fields for BXM Card (Continued)

Object ID	Object (Field) Name	Range/Values	Default	Description
54	Bkwd SECB	0 - 2 ³² -1	N/A	Backward reporting Performance Monitoring Severely Errored Cell Blocks. [A:ALL, B:ALL]
55	Bkwd Lost Cells	0 - 2 ³² -1	N/A	Backward reporting Performance Monitoring Lost Cell Count. [A:ALL, B:ALL]
56	Bkwd Misinserted Cells	0 - 2 ³² -1	N/A	Backward reporting Performance Monitoring Misinserted Cell Count. [A:ALL, B:ALL]
57	Bkwd BIPV	0 - 2 ³² -1	N/A	Backward reporting Performance Monitoring Bipolar Violation Count. [A:ALL, B:ALL]
58	Fwd SECB	0 - 2 ³² -1	N/A	Forward reporting Performance Monitoring Severely Errored Cell Blocks. [A:ALL, B:ALL]
59	Fwd Lost Cells	0 - 2 ³² -1	N/A	Forward reporting Performance Monitoring Lost Cell Count. [A:ALL, B:ALL]
5A	Fwd Misinserted Cells	0 - 2 ³² -1	N/A	Forward reporting Performance Monitoring Misinserted Cell Count. [A:ALL, B:ALL]
5B	Fwd BIPV	0 - 2 ³² -1	N/A	Forward reporting Performance Monitoring Bipolar Violation Count. [A:ALL, B:ALL]
5C-5F	RESERVED			
60	SAR Good PDUs Rcv	0 - 2 ³² -1	N/A	Number of good PDUs received by the SAR. [A:ALL, B:ALL]
61	SAR Good PDUs Xmt	0 - 2 ³² -1	N/A	Number of good PDUs transmitted by the SAR. [A:ALL, B:ALL]
62	SAR Rcv PDUs Discarded	0 - 2 ³² -1	N/A	Number of PDUs discarded on the ingress by the SAR. [A:ALL, B:ALL]
63	SAR Xmt PDUs Discarded	0 - 2 ³² -1	N/A	Number of PDUs discarded on the egress by the SAR. [A:ALL, B:ALL]
64	SAR Invalid CRC PDUs Rcvd	0 - 2 ³² -1	N/A	Number of invalid CRC32 PDUs received by the SAR. [A:ALL, B:ALL]
65	SAR Invalid Length PDUs Rcvd	0 - 2 ³² -1	N/A	Number of invalid-length PDUs received by the SAR. [A:ALL, B:ALL]
66	SAR Short Length Failures	0 - 2 ³² -1	N/A	Number of short-length failures detected by the SAR. [A:ALL, B:ALL]
67	SAR Long Length Failures	0 - 2 ³² -1	N/A	Number of long-length failures detected by the SAR. [A:ALL, B:ALL]

dspclnstatcnf (Display Circuit Line Statistics Configuration)

The **dspclnstatcnf** command displays statistics configured as enabled for a selected circuit line.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX

Associated Commands

cnfclnstats

Syntax

dspclnstatcnf <line>

<line> Specifies the circuit line in the format *slot* or *slot.line*. If the card has only one line, you can enter just the slot.

Function

This command displays the circuit line statistics as enabled by the **cnfclnstats** command, by Cisco WAN Manager or by IGX features. See Figure 1-78 for an example display.

The Owner column shows what set the statistic. If the owner is “Automatic,” the statistic was derived from the features. If the node name appears under Owner, the statistic came from Cisco WAN Manager. If “User” is under Owner, the source of the statistic was the **cnfchstats** command.

Figure 1-78 dspclnstatcnf—Display Circuit Line Statistics Enabled (T1 line)

```

sw83                  TN    SuperUser                  IGX 8420      9.2                  Aug. 1 1998 18:14 PST

Statistics Enabled on Circuit Line 7

Statistic                                  Samples    Interval    Size    Peaks    Owner
-----
Frames Slips                                60            0        4    NONE    IGX
Out of Frames                                60            0        4    NONE    IGX
Losses of Signal                             60            0        4    NONE    IGX
Frames Bit Errors                            60            0        4    NONE    IGX
CRC Errors                                   60            0        4    NONE    IGX
Out of Multi-Frames                         60            0        4    NONE    IGX
All Ones in Timeslot 16                     60            0        4    NONE    IGX

Last Command: dspclnstatcnf 7

Next Command:

```

dspclnsthsthist (Display Statistics History for a Circuit Line)

The **dspclnsthsthist** command displays a history of statistics enabled for a circuit line.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX

Associated Commands

cnfclnstats, **dspclnstatcnf**

Syntax

dspclnsthsthist <line> <statistic number> <interval> <owner>

<line> Specifies the circuit line in the format *slot.line*. If the card set supports only one line, you can enter just the slot number.

<statistic
number> Specifies the type of statistic to enable/disable.

<interval> Specifies the time interval of each sample (1–255 minutes).

<owner> Specifies the source of the configuration (“auto,” “user”, or “tftp”).

Function

This command displays the last five occurrences of the circuit line statistic. The circuit line statistic is selected from the list displayed when you first enter this command. Use the **dspclnstatcnf** to display the statistics enabled for the selected channel. Use **cnfclnstats** to enable a statistic.

Figure 1-79 illustrates a display for T1 circuit line 14 bipolar violations (60 second interval) history.

Note You may have to enter owner “auto” in all capital letters.

Figure 1-79 dspclnstat—Display Circuit Line Statistics History

gamma TRM SuperUser Rev: 9.2 Aug. 14 1998 14:00 PDT

Bipolar Violations on Circuit Line 14
Interval: 60 Minute(s), Data Size: 4 Byte(s), 10 S Peaks, Owner: Automatic

0	-	0 (0)
-1	-	0 (0)
-2	-	0 (0)
-3	-	0 (0)
-4	-	0 (0)

Last Command: dspclnstat 14 1 60 AUTO

Next Command:

dspcnf (Display Configuration Save/Restore Status)

The **dspcnf** command displays the status for the configuration save/restore processes on all nodes in the network.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX, BPX

Associated Commands

savecnf, **loadcnf**, **runcnf**

Syntax

dspcnf

Function

This command displays the status for the configuration save/restore process. The display lists the various nodes, the backup ID name of the saved configuration, the time and date saved, and the Cisco WAN Manager terminal it is saved on. See Figure 1-80 for an example.

If the status displays “Reserved for Firmware,” a firmware image is being maintained in memory after being loaded. Use the **getfwrev 0.0** command to clear the firmware image. Likewise, if a configuration image is displayed, clear the old configuration image using **savecnf clear** or **loadcnf clear**.



Caution Do not use **clrcnf** without discussing the action with TAC.

Figure 1-80 **dspcnf—Display Configuration Save/Restore Status**

```

sw83          TN      SuperUser      IGX 8420      9.2      Aug. 24 1998  18:21 PST

Node      Backup ID Revision Date/Time (GMT)      Status
-----
sw78      mark      9.2.00 02/22/97 16:36:26 Unreachable
sw81      mark      9.2.00 02/22/97 16:36:26 Unreachable
sw84      mark      9.2.00 02/22/97 16:36:26 Save on Cisco WAN Manager at sw78 complete
sw79      mark      9.2.00 02/22/97 16:36:26 Save on Cisco WAN Manager at sw78 complete
sw86      mark      9.2.00 02/22/97 16:36:26 Unreachable
sw83      mark      9.2.00 02/22/97 16:36:26 Save on Cisco WAN Manager at sw78 complete

```

Last Command: dspcnf

Next Command:

dspdnl (Display Download)

The **dspdnl** command displays the status of a download to a nodes.

Attributes

Jobs: No Log: Yes Lock: No Node Type: IGX, BPX

Associated Commands

loadrev, **getfwrev**

Syntax

dspdnl

Function

This command displays the status of any software or firmware download operation from Cisco WAN Manager to the node controller card. You should be connected to the node being downloaded either directly or via virtual terminal connection. The display download command shows:

- download destination—Node currently being downloaded.
- download type—Destination of the downloaded image, standby RAM or active or standby ROM, or firmware.
- download source—Where the image to be downloaded is currently stored, Cisco WAN Manager or Cisco WAN Manager, standby controller, active or standby controller, or remote node.
- download image—Where the image is located, ROM or RAM.

This command can be used to check how far along the download has progressed. Figure 1-81 illustrates the command screen. Blocks of data already downloaded appear highlighted; the remaining blocks appear dim. If there was no download initiated when this command was entered, the blocks of data will appear as all zeros.

Figure 1-81 dspdnld—Display Download

```
sw83          TN      SuperUser      IGX 8420      9.2      Aug. 1 1998  18:23 PST

dl_dest:  Active CC          dl_source: Active CC
dl_type:  None              dl_image:  ROM      (NPC)

30010800 30020800 30030800 30040800 30050800 30060800 30070800 30080800
30090800 300A0800 300B0800 300C0800 300D0800 300E0800 300F0800 30100800
30110800 30120800 30130800 30140800 30150800 30160800 30170800 30180800
30190800 301A0800 301B0800 301C0800 301D0800 301E0800 301F0800 30200800
30210800 30220800 30230800 30240800 30250800 30260800 30270800 30280800
30290800 302A0800 302B0800 302C0800 302D0800 302E0800 302E3E7C
```

Last Command: dspdnld

Next Command:

dspdutl (Display Data Channel Utilization)

The **dspdutl** command displays the percentage of channel utilization of data connections.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX

Associated Commands

dspdutl

Syntax

dspdutl <start bslot> [clear]

<start bslot> Specifies the slot where the data card is located.

[clear] Specifies that all data channel utilization buffers should be cleared after the display.

Function

This command displays the percentage utilization for the data connections starting at the back slot (bslot) number you specify. All data connections for the node are displayed (maximum of 32).

The percentage is calculated by dividing the number of packets transmitted over the total number of packets allocated to the specified channel. Only transmit packet rates are used. If percentage use exceeds the use configured, the channel appears in reverse video.

Figure 1-82 illustrates a display where there is very low utilization (2%) on three of the four ports and no utilization of the fourth port. Use the clear option to clear all slots. Use **dspdutl** to display utilization for voice channels.

Figure 1-82 dspdutl—Display Data Channel Utilization

```
sw150          TN    SuperUser      IGX 8420    9.2    Aug. 1 1998  20:07 GMT

Percentage utilization      Last Cleared: Date/Time Not Set      Snapshot
From
Slot 1  2  3  4  5  6  7  8    Slot 1  2  3  4  5  6  7  8
13      6 99 99
```

Last Command: dspdutl 13

Next Command:

dspecparm (Display Echo Canceller Parameters)

The **dspecparm** command displays statistics configured as enabled for a selected CDP echo canceller.

Attributes

Jobs: No Log: Yes Lock: No Node Type: IGX

Associated Commands

cnfecparm

Syntax

dspecparm <line>

<line> Specifies the circuit line to display.

Function

This command displays the Integrated Echo Canceller card parameters associated with the specified circuit line. These parameters are set using the **cnfecparm** command. Table 1-53 lists the parameter options. Figure 1-83 illustrates a typical display.

Table 1-53 Echo Canceller Parameters

Number	Parameter	Description
1	Echo Return Loss High	Maximum ERL required for echo canceller to be enabled.
2	Echo Return Loss Low	Minimum ERL required for echo canceller to be enabled.
3	Tone Disabler Type	Selection of protocol to enable tone disabler.
4	Non-Linear Processing	Selects type of post-canceller signal.
5	NLP Threshold	Threshold to enable non-linear processing.
6	Noise Injection	Determines if noise will be injected when NLP is active.
7	Voice Template	Selection of echo canceller template to use.

Figure 1-83 dspeparm—Display Echo Canceller Parameters

```
sw83          TN      SuperUser      IGX 8420      9.2      Aug. 1 1998  18:34 PST
```

```
IEC Line 7 Parameters
```

```
1 CDP IEC Echo Return Loss High (.1 dBs) [          60] (D)
2 CDP IEC Echo Return Loss Low  (.1 dBs) [          30] (D)
3 CDP IEC Tone Disabler Type     [          G.164]
4 CDP IEC Non-Linear Processing   [Center Clipper]
5 CDP IEC Non-Linear Processing Threshold [          18] (D)
6 CDP IEC Noise Injection        [          Enabled]
7 CDP IEC Voice Template         [          USA]
```

```
Last Command: dspeparm 7
```

```
Next Command:
```

dspfpdsc (Display FastPAD Card Descriptor)

The **dspfpdsc** command displays FastPAD card descriptor information.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX

Associated Commands

dspfp, **dspfps**

Syntax

dspfpdsc <slot.port.subslot>

Function

This command displays FastPAD card descriptor information including:

- Card in use
- Card state
- FastPAD configuration index
- FastPAD port index

Figure 1-84 illustrates the system response.

Figure 1-84 dspfpdsc—Display FastPAD Card Descriptor

```
cc7          VT   SuperUser      IGX 8430    9.2      Aug. 30 1998  11:08 PST
                                     FastPad Card Descriptor Configuration

Card in Use   : 01   Card State    : 03   FPD CNFG indx : 00

                                     Port Index Array

                                     FastPad Port Indx
      0   1   2   3   4   5   6   7   8   9   A   B
0000 0001 0002 0003 0004 0005 0006 FFFF FFFF FFFF FFFF FFFF

Last Command: dspfpdsc 31.2.B

Next Command:
```

dspfwrev (Display Firmware Revision)

The **dspfwrev** command displays the status of card firmware revision image loaded in the controller card's RAM.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX, BPX

Associated Commands

getfwrev, **burnfwrev**

Syntax

dspfwrev

Function

This command displays the revision level and an indication of the length of the firmware in the controller card. It may require two screens to display all the parameters. Figure 1-85 illustrates the screen display. You can use this command while firmware is downloading to a node to get an idea of how far along the downloading process has progressed. The blocks already downloaded appear normal. Blocks that are yet to be downloaded appear shaded.

If no **getfwrev** command was issued, nothing displays. If “Configuration image present” displays, use the **loadcnf clear** command to clear this status.

Figure 1-85 dspfwrev—Display Firmware Revision

```
gamma          TRM          SuperUser      Rev:  9.2  Aug. 14 1998  14:28 PDT

Firmware       Size          Status
F.D.A         256 K        Complete

File           Address      Length         CRC            Burn Address
File           Address      Length         CRC            Burn Address
1              800800      410           22996DDA
1              800800      410           22996DDA
3              805E60      480           85CB29EA
4              80A630      70            57A938AE
4              80A630      70            57A938AE
6              810000      10000         338E45F6
7              820000      4400          95990113
8              835000      1810          875771B2
9              8368A0      15D0          4C597B97
```

This Command: dspfwrev

Continue?

```
gamma          TRM          SuperUser      Rev:  9.2  Aug. 14 1998  14:29 PDT

Firmware       Size          Status
F.D.A         256 K        Complete

File           Address      Length         CRC            Burn Address
10             838000      20F0          0F4898D2
11             83A100      1E20          175F4B39
12             83C000      2FC0          F39B0302
13             83F000      1B0           E755FE4E
14             83FFFE      2             A1F4726D
```

Last Command: dspfwrev

Next Command:

dsphitless (Display Statistical History of Hitless Rebuilds)

The **dsphitless** command displays the statistical history of hitless rebuilds that may have occurred within the configured thresholding period. This thresholding period is described under the **cnfnodeparm** command, under Index #42, Maximum Hitless Rebuild Count, and Index #43, Hitless Counter Reset Time parameters.

A statistical history of hitless rebuilds are stored in BRAM, and will survive a full rebuild. Two records of hitless rebuilds are maintained: one will contain information that is within the current thresholding window. When a full rebuild occurs, the hitless rebuild statistics from the current window will be moved to a saved area, and a new current window will begin.

You can enter some optional parameters with the **dsphitless** command, which displays either a summary screen or a detailed screen giving the history of hitless rebuilds. There can be two different versions of each screen, one for the current window and one for the saved previous window. See the Syntax section below for a list of optional parameters you can use with the **dsphitless** command.

If you do not provide any optional parameter, then the default values shown under “Syntax” will be used.

Refer to the screen under System Response to display the time and cause of each hitless rebuild that has occurred since the statistical record of hitless rebuilds was last cleared.

What Hitless Rebuild Feature Provides in Release 9.2

The Hitless Rebuild feature provides the ability for a node to effectively rebuild without affecting user traffic. It substantially decreases the time it takes for the BPX software to settle into its normal operating state after a rebuild.

Note The Hitless Rebuild feature is internal to the switch software on a node. If there is a problem with the node, switch software takes care of it; no user intervention is needed. Following information is provided to explain what happens in switch software when a hitless rebuild occurs.

In recent releases, much work has gone into the control software to prevent restarts. Better queue memory management techniques, faster standby updates, Soft Reset, and Rebuild Prevention are all examples. However, if it is necessary to restart the control software, and a switchover is not possible, then the node will still do a full rebuild. A node with many connections may take a couple of hours to restore itself fully to the network. In the meantime, it is in communication break with some nodes and some network connections are not routed or are not on their preferred routes.

The way to prevent rebuilds is to be able to do a software restart on the processor card without doing a full rebuild of the system. In particular, it is necessary to avoid resetting the line or trunk cards, or interfere with user traffic in any way during the control software restart. This concept is known as a "hitless rebuild".

Purpose of Hitless Rebuild

Hitless Rebuild is a modification of control software restart to prevent a full configuration rebuild of the node being done. During most software restarts, the interface cards are not reset to preserve their configurations. In particular, the case where the standby processor card is failed or absent, and the active card must abort will no longer cause a full rebuild.

Acronyms

- BRAM** Battery-backed RAM. This is where permanent configuration information for a node is kept.
- CC** Control Card, or processor card. The control card on the BPX is the BCC.
- DB** Database. An element in the current configuration state of the system. This includes both derived information, such as current route, and configured information, such as preferred route. Some databases are stored in BRAM so that they survive system initializations and power outages. The Hitless Rebuild feature in Release 9.2 affects databases stored in RAM.
- pSOS** The off-the-shelf operating system kernel used with switch software that runs on the BPX and IGX.

Software Revisions and Interoperability

The Hitless Rebuild feature requires Release 9.2 or later switch software, and works on both the BPX and IGX platforms. This feature is local to a node. Hitless Rebuild will function correctly on nodes that are running software that contains the feature, even in a network with mixed software releases, some of which do not have the feature.

Hitless Rebuild will operate during upgrades, but will not operate during a downgrade. If a failure occurs that would normally result in a controller card switchover, but the switchover needs to be suppressed due to the different software releases running on the two processors, then a hitless rebuild will be done instead.

If a backoff must be done from an upgrade, then a full rebuild will occur. A *backoff* refers to the state where the new switch software revision has been loaded as the secondary image, and the decision is made to go back to the original revision.

There are no operational problems if, during an upgrade, the new release of software has the Hitless Rebuild feature and the older release does not. Hitless Rebuild will just operate on the processor card with the newer release.

Description of how Hitless Rebuild Works

The purpose of the Hitless Rebuild feature is to minimize the impact on user traffic when a processor card must reinitialize. Unlike with a full rebuild, the effect of a control plane failure should have minimal impact upon the user plane. Line and trunk cards should not be reset during a hitless rebuild. Rather than having a node with many connections take up to two hours to restore itself fully to the network, a hitless rebuild will take, at most, only a little longer than a processor card switchover. All existing user connections should be maintained through the initialization. LMI continuity and trunk state should also be preserved.

During a traditional full rebuild, all databases are rebuilt from BRAM. The approach to doing a hitless rebuild is to maintain databases that cannot be rebuilt without affecting user connections, and to rebuild from BRAM any that will not affect user connections. Some key consistency checking of the preserved databases will be performed, such as topology consistency checking, to ensure that the hitless rebuild will work.

In general, almost all software aborts will result in a processor card switchover. If this is not possible, then a hitless rebuild will usually be done. Hitless rebuild is used only when a switch to the standby processor card is not possible or reasonable. For more details on specific types of potential problems that lead to hitless rebuilds or other types of initializations, see Table 1-53, Echo Cancellation Parameters.

The main functional difference in behavior from previous switch software release is that after a rebuild, the control software will settle quickly into its normal operating state, rather than taking a very long time to reset cards and reroute connections.

You use the CLI to enable/disable the Hitless Rebuild feature, and to configure the maximum frequency of hitless rebuilds that can occur before the node enters degraded mode, or a full rebuild is performed.

Most aspects of a full rebuild and a hitless rebuild function the same way. For example, initial synchronization between the switch and Cisco WAN Manager and the loss of statistics information will remain the same.

Safe Switchover

Sometimes shortly after a switchover, the new active processor card will run some diagnostics and detect a failure, causing it to switch back to the original active card. The Hitless Rebuild feature will improve this situation under most conditions. Following any processor card switchover, the new standby will rebuild, preserving the key databases needed for a hitless rebuild (11 seconds). When database updates can start, the standby will rebuild again doing a normal standby rebuild (11 seconds). If there is a failure on the new active card that causes it to switch back before updates can start, the card taking over will do a hitless rebuild. If the active processor card fails while still updating its standby, it will perform a hitless rebuild.

The time it takes the updates to complete to the standby card is 15–25 minutes. A full active rebuild takes about 45 seconds. (These numbers are based on measurements done in Release 8.4.)

Action Taken if the Control Card Fails

During any active control card failure, a decision must be made about the type of initialization to undertake. Table 1-54 shows the possible conditions and the corresponding actions to take.

Table 1-54 What Happens when a Control Card Restarts or Aborts

Reason	Standby Ready	Standby Updating	Standby Not Ready Not Updating	Standby State Un-known	Standby Does not exist	Standby in Upgrade	Standby State not applicable
Aborts (examples include: - bad logical ptr - bad nib DB - bad topology - memory allocs - out of buffers - bad primary revision	switch	Hitless	Hitless	Hitless	Hitless	Hitless	N/A
Abort (CC mastership error. Active now is standby card)	N/A	N/A	N/A	N/A	N/A	N/A	full standby rebuild (DBs are corrupted)

dsphitless (Display Statistical History of Hitless Rebuilds)

Table 1-54 What Happens when a Control Card Restarts or Aborts (Continued)

Reason	Standby Ready	Standby Updating	Standby Not Ready Not Updating	Standby State Un-known	Standby Does not exist	Standby in Upgrade	Standby State not applicable
Exceptions - Write Protect - Address Error - Trap Error - Bus Unknown	switch	Hitless	Hitless	Hitless	Hitless	Hitless	N/A
Exceptions - Parity Error	switch	Hitless	Hitless	Hitless	Hitless	Hitless	N/A
Exceptions - Spurious Int	switch	Hitless	Hitless	Hitless	Hitless	Hitless	N/A
Bad Image CRC	switch	Hitless	Hitless	Hitless	Hitless	Hitless	N/A
WatchDog	switch	Hitless	Hitless	Hitless	Hitless	Hitless	N/A
Time-out							
User Command - clrallcnf - clrncf - resetcd H	N/A	N/A	N/A	N/A	N/A	N/A	full rebuild
Bad Comm Bus	N/A	N/A	N/A	N/A	N/A	N/A	Degrade Mode
Bus Diagnostics (destructive)	N/A	N/A	N/A	N/A	N/A	N/A	full rebuild
configuration Changes - runcnf	N/A	N/A	N/A	N/A	N/A	N/A	full rebuild
bad BCC card	switch	ignore	ignore	ignore	ignore	ignore	N/A
Bad Crosspoint	ignore	ignore	ignore	ignore	ignore	ignore	ignore
Preparation for revision change (happens only on the standby card)	N/A	N/A	N/A	N/A	N/A	N/A	full standby rebuild
Revision Switch	switch	N/A	N/A	N/A	N/A	N/A	Hitless rebuild on standby
primary Revision Change	N/A	N/A	N/A	N/A	N/A	N/A	Full rebuild on either card
starting the updates to the standby card - message is sent by the active card	N/A	N/A	N/A	N/A	N/A	N/A	Full rebuild on the standby card

Table 1-54 What Happens when a Control Card Restarts or Aborts (Continued)

Reason	Standby Ready	Standby Updating	Standby Not Ready Not Updating	Standby State Un-known	Standby Does not exist	Standby in Upgrade	Standby State not applicable
User switchcc (switchcc) (hitless on standby card)	switch	- switch - full rebuild on newly active - hitless rebuild on standby	switch - hitless rebuild on standby -active rebuild depends on rebuild flag state	N/A	N/A	N/A	Hitless rebuild on the standby card

When a controller card switchover to the new card occurs, the new standby card (unless shown differently in Table 1-54) will perform a hitless rebuild maintaining the databases. These databases will be maintained, allowing this card to take over without affecting traffic until the updates are started. After the updates have started, the new standby card will do a full rebuild to get ready to receive the updates. The duration of the standby updates are 15–25 minutes (based on Release 8.4 measurements).

When the threshold is exceeded and the node is to enter degraded mode, a hitless rebuild will take place first, and degraded mode will be entered after the hitless rebuild completes.

Autobus Diagnostic Feature Disabled

As part of the Hitless Rebuild feature, the Autobus diagnostic feature on the node will be disabled. This is done because the feature is destructive, and it requires the node to undergo a series of full rebuilds causing the node to be out of the network for a long duration of time.

How Memory is Managed during Hitless Rebuilds

Full rebuilds result in the complete initialization of all RAM memory regions. Before the Hitless Rebuild feature, there was no need to save any databases in RAM through an initialization. All databases were rebuilt from configuration stored in BRAM. For a rebuild to be hitless, databases containing certain types of critical information related to trunks, connections, and so on., must survive intact in RAM.

Configuration data that must survive a hitless rebuild will be moved to regions where it will remain intact. These new regions are now managed by the new memory management algorithm, and will be known as “hitless regions.”

A user logged into a node will be able to see the changes by using the Profiler. The user commands “dspprf” and “dspprfhist” show some statistics related to memory usage. (Refer to the Service commands for descriptions of **dspprf** and **dspprfhist** commands. Note that you must have service level privileges to use the debug, or Service-level commands.)

Errors and Alarm Handling

The Hitless Rebuild feature does not cause many changes to errors or alarms. However, most of the conditions that cause a hitless rebuild will themselves generate errors or alarms. There are no changes to these.

The Hitless Rebuild feature introduces two new events, indicating the end of a hitless rebuild or a full rebuild. These will be logged into the local event log on the node (which you can view with **dspllog**).

Corresponding Robust Card Alarm messages will also be sent from the node to Cisco WAN Manager, and these will result in traps being generated and sent to Cisco WAN Manager's RTM proxy. The traps will make the information available to external network management systems that register for traps on Cisco WAN Manager.

As always, the Robust Alarm mechanism does not guarantee that all alarm state transitions will result in messages being sent to Cisco WAN Manager. The mechanism guarantees that "current state" information will be sent. However, when multiple transitions occur close together, only the last one is guaranteed. During a rebuild, a few changes may occur quickly.

The Robust Card Alarm messages sent to Cisco WAN Manager have the following values:

Trap Type: The current state of the card. (Fail, Active, Down, and so on.)
Alarm Class: (1) Info
Reason: (3107) BCC Completed hitless rebuild.
(3108) BCC Completed full rebuild.

This Robust Card Alarm messages will result in Cisco WAN Manager traps of the following type:

TrapType: (20004) Card Alarm
TrapReason: (3107) BCC Completed hitless rebuild
(3108) BCC Completed full rebuild

Consistency Checking

The purpose of the Hitless Rebuild feature is to dramatically improve performance of switch software during rebuilds, and to return the node to normal operation as quickly as possible. The intent is to minimize the effect of a control plane failure on the user plane when a node must rebuild. All existing user connections must be maintained through the initialization. LMI continuity and trunk state must be preserved. Unlike a full rebuild, which will result in communication failures, a hitless rebuild will not result in communication failures.

When a hitless rebuild is completed, the node will go through consistency checks to verify the databases. Some of these include topology checking, and verification of LCONS and VIA LCONS to have valid end points. The line card consistency checks done during a hitless rebuild will be the same as that done when a switchover to the standby takes place.

The line and trunk cards should not reset during a hitless rebuild. Rather than having a node with many connections take up to two hours to restore itself fully to the network, a hitless rebuild takes, at most, only a little longer than a processor card switchover.

During normal switch operation, or during normal switchovers into hot standby processor cards, the Hitless Rebuild feature should have no impact on the performance of switch software.

Node Reliability and Maintainability

The Hitless Rebuild feature is a direct improvement to the survivability of the BPX. It significantly reduces the possibility that a failure in the control plane will cause a failure in the user plane. The main purpose of hitless rebuild is to avoid, as much as possible, affecting the user traffic through a node when processor card redundancy is unusable or itself fails and the control card software must rebuild.

Hitless Rebuild Examples

Normal switchcc

Table 1-55 shows the steps for a normal switchcc. The standby is ready (in Standby state). Up to step 4 the new standby (card 7) can do a hitless rebuild if necessary. Note that a standby card rebuild is not the same as an active card rebuild. This is the same for both normal and hitless rebuilds.

The normal abort case is almost identical to this case. In step 1, the abort causes an automatic switch. The remaining steps are the same.

Table 1-55 Steps for a Normal switchcc

Steps	Card 7	Card 8
Step 1	Active BCC	Standby BCC - Ready
Step 2	User issues 'switchcc'.	
Step 3	Does Standby Hitless Rebuild, not ready to receive updates, can do Hitless Rebuild.	Activates itself.
Step 4		Kicks off standby updates. Can now do a Hitless Rebuild.
Step 5	Does normal standby rebuild.	Waits for standby
Step 6	Enters normal standby mode, ready to receive updates, cannot do Hitless Rebuild.	
Step 7		Starts standby updates and network updates.

Abort -- Standby not Ready

Table 1-56 shows the possible actions by the active card during an abort operation when the standby card is not ready.

Table 1-56 What Happens during an Abort and Standby Card is not Ready

	Card 7	Card 8
0	Active BCC	Standby BCC - Not Ready
1	Abort occurs For example, the card ran out of memory.	
2	Does active Hitless Rebuild.	
3	Tries to start standby updates.	
4	Starts network updates.	

Commbus failure

In the case of a Commbus failure (see Table 1-57), the active card is no longer certain of the state of any other card. In particular, it can make no assumptions about the state of the standby BCC.

Table 1-57 What Happens when a CommBus Failure Occurs

	Card 7	Card 8
0	Active BCC	Standby BCC - Any
1	Commbus failure detected.	
2	Enter Degraded Mode if feature is enabled. Otherwise, a full rebuild will occur.	

Attributes

Jobs: No Log: No Lock: No Node Type: IGX, BPX

Associated Commands

cnfnodeparm, resetcd, switchcc, dspcds, dsplog

Function

The **dsphitless** command displays the statistical history of hitless rebuilds that may have occurred within the configured thresholding period. This thresholding period is part of the super user command **cnfnodeparm**.

Statistical history of hitless rebuilds will be stored in BRAM, and will survive a full rebuild. Two records of hitless rebuilds will be kept. One will contain information that is within the current thresholding window. When a full rebuild occurs, the hitless rebuild statistics from the current window will be moved to a saved area, and a new current window will begin.

The command **dsphitless** accepts some optional parameters, and will display either a summary screen or a detailed screen providing the history of hitless rebuilds. There can be two different versions of each screen, one for the current window and one for the saved previous window. See the Syntax section for a list of the optional parameters.

Note that you can use the f, a, c, and d options listed below on the command line at the same time (for example, **dsphitless -d -a**).

Syntax

dsphitless [summary screen (default)] or [d - detailed screen]

dsphitless [active window (default)] or [p - previous window]

dsphitless [c - clear stats for current window]

dsphitless [s - standby stats]

System Response

```
sw99      TN      SuperUser      BPX 8620      9.2.10      Aug. 27 1998 14:59 GMT

current hitless rebuild count:      7
high water mark:                    9
cnf max before full rebuild:        10
cnf reset timer:                    24 hours
most recent hitless rebuild:        08/27/98 14:27:09
oldest hitless still in count:      08/27/98 11:42:18
Hitless stats cleared:              07/29/98 12:00:05
Action when cnf max is exceeded:    full rebuild
```

Last Command: dsphitless

Next Command:

Figure 1-86 dsphitless—Display Statistical History of Hitless Rebuilds

```
sw99          TN          SuperUser      BPX 15      9.2.10      Aug. 27 1998 14:59 GMT

1  04/07/98 14:27:09  software abort 1000003
2  04/07/98 13:58:46  software abort 1000003
3  04/07/98 13:32:24  software abort 1000003
4  04/07/98 12:57:36  software abort 1000003
5  04/07/98 12:28:29  software abort 1000003
6  04/07/98 12:07:16  software abort 1000003
7  04/07/98 11:42:18  software abort 1000003
```

Last Command: dsphitless d p

Next Command:

dsplstatcnf (Display Statistics Enabled for a Line)

The **dsplstatcnf** command displays statistics configured as enabled for a selected line.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

cnflnstats

Syntax

dsplstatcnf <line>

<line> Specifies the line.

Function

This command displays the line statistics as enabled by the **cnflnstats** command, by Cisco WAN Manager, or by node features. (Note that the **dsplstatcnf** command is the same as **dsplstatcnf**.) Figure 1-87 illustrates an example display.

The Owner column identifies who or what set the statistic. If the Owner column shows “Automatic,” the node’s features set the statistic. If the node name appears under Owner, Cisco WAN Manager set the statistic. If the user name appears under Owner, the **cnfchstats** command executed from the command line interface set the statistic.

Figure 1-87 dsplstatcnf—Display Statistics Enabled for a Line

```
cc2          LAN   SuperUser    IGX 8430    9.2      Aug. 30 1998 11:38 PST

Statistics Enabled on Circuit Line 15

Statistic                    Samples  Interval  Size  Peaks  Owner
-----
Bipolar Violations          60       0         4   NONE  IGX
Frames Slips                 60       0         4   NONE  IGX
Out of Frames                60       0         4   NONE  IGX
Losses of Signal             60       0         4   NONE  IGX
Frames Bit Errors            60       0         4   NONE  IGX
CRC Errors                   60       0         4   NONE  IGX
Out of Multi-Frames          60       0         4   NONE  IGX
All Ones in Timeslot 16     60       0         4   NONE  IGX

Last Command: dsplstatcnf 15

Next Command:
```

dsplnsthathist (Display Statistics Data for a Line)

The **dsplnsthathist** command displays a history of statistics configured as enabled for a selected line.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

cnflnstats, **dsplnstatcnf**

Syntax

dsplnsthathist <line> <statistic number> <interval> <owner>

<line> Specifies the circuit line in the format *slot.line*. If the card set supports only one line, you can enter just the slot number.

<statistic number> Specifies the type of statistic to enable/disable.

<interval> Specifies the time interval of each sample (1–255 minutes).

<owner> Specifies the source of the configuration (“auto,” “user”, or “tftp”).

Function

This command displays the last five occurrences of the line statistic. (Note that **dsplnsthathist** the command is the same as **dsplnsthathist**.) The line statistic is selected from the list displayed when this command is first entered. Use the **dsplnstatcnf** to display the statistics enabled on the selected channel. Use **cnflnstats** to enable a statistic.

Figure 1-88 illustrates an example display.

Note You may have to enter owner “auto” in all capital letters.

Figure 1-88 dsplnstathist—Display Statistics Data for a Line

pubsbpx1 TN SuperUser BPX 15 9.2 Mar. 24 1998 16:33 PST

Line Statistic Types

- | | |
|--------------------------------|--|
| 3) Loss of Frames | 41) BIP-8 Errors |
| 4) Loss of Signal | 42) BIP-8 Errored Seconds |
| 29) Line Code Violation | 43) BIP-8 Severely Err Secs. |
| 30) Line Errored Seconds | 44) Cell Framing Sev. Err Frame Secs |
| 31) Line Severely Err Secs | 45) Cell Framing Unavail. Secs. |
| 32) Line Parity Errors | 46) HCS Errors |
| 33) Errored Seconds - Parity | 98) Frame Sync Errors |
| 34) Severely Err Secs - Parity | 141) FEBE Counts |
| 35) Path Parity Errors | 143) Cell Framing FEBE Err. Secs. |
| 36) Errored Secs - Path | 144) Cell Framing FEBE Sev. Err. Secs. |
| 37) Severely Err Secs - Path | 145) Cell Framing FEBE Counts |
| 38) Severely Err Frame Secs | |
| 40) Unavail. Seconds | |

This Command: dsplnstathist 5.1

Continue?

pubsbpx1 TN SuperUser BPX 15 9.2 Mar. 24 1998 16:34 PST

Line Statistic Types

- 146) Cell Framing FE Counts
- 147) HCS Errored Seconds
- 148) HCS Severely Err. Secs.
- 151) YEL Transitions
- 152) Cell Framing YEL Transitions
- 153) Alarm Indication Signal
- 194) HCS Correctable Error
- 195) HCS Correctable Error Err. Secs
- 196) HCS Correctable Error SevErr Secs

This Command: dsplnstathist 5.1

Statistic Type:

dspphyslnstatcnf (Display Statistics Enabled for a Physical Line)

The **dspphyslnstatcnf** command displays statistics configured as enabled for a selected line on a UXM card.

The **dspphyslnstatcnf** command now lets you configure the additional physical line statistics (which support the ATM Forum compliant IMA protocol). Table 1-58 provides a summary and description of these statistics.

Table 1-58 IMA Physical Line Statistics

Statistics	Statistics
IMA Violations	Near End Rx Unusable Seconds (Rx-UUS-IMA)
Near End Severely Errored Seconds (SES-IMA)	Far End Tx Unusable Seconds (Rx-UUS-IMA-FE)
Far End Severely Errored Seconds (SES-IMA-FE)	Far End Rx Unusable Seconds (Rx-UUS-IMA-FE)
Near End Unavailable Seconds (UAS-IMA)	Near End Tx No. of Failures (Tx-FC)
Far End Unavailable Seconds (UAS-IMA-FE)	Near End Rx No. of Failures (Rx-FC)
Near End Tx Unusable Seconds (Tx-UUS-IMA)	

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX

Associated Commands

cnfphyslnstats

Syntax

dspphyslnstatcnf <line>

<line> Specifies the line.

Function

This command displays the physical line statistics on a UXM card as enabled by the **cnfphyslnstats** command, by Cisco WAN Manager, or by node features. Figure 1-89 illustrates an example display.

The Owner column identifies who or what set the statistic. If the Owner column shows “Automatic,” the node’s features set the statistic. If the node name appears under Owner, Cisco WAN Manager set the statistic. If the user name appears under Owner, the **cnfchstats** command executed from the command line interface set the statistic.

Figure 1-89 dspphyslnstatcnf—Display Statistics Enabled for a Line

cc2 LAN SuperUser IGX 32 9.2 Aug. 30 1998 11:38 PST

Statistics Enabled on Circuit Line 15

Statistic	Samples	Interval	Size	Peaks	Owner
Bipolar Violations	60	0	4	NONE	IGX
Frames Slips	60	0	4	NONE	IGX
Out of Frames	60	0	4	NONE	IGX
Losses of Signal	60	0	4	NONE	IGX
Frames Bit Errors	60	0	4	NONE	IGX
CRC Errors	60	0	4	NONE	IGX
Out of Multi-Frames	60	0	4	NONE	IGX
All Ones in Timeslot 16	60	0	4	NONE	IGX

Last Command: dspphyslnstatcnf 15

Next Command:

dspphyslnstathist (Display Statistics Data for a Physical Line)

The **dspphyslnstathist** command displays a history of statistics configured as enabled for a selected physical line on an active IMA trunk on a UXM card.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX

Associated Commands

cnfphyslnstats, **dspphyslnstatcnf**

Syntax

dspphyslnstathist <line> <statistic number> <interval> <owner>

- | | |
|--------------------|---|
| <line> | Specifies the circuit line in the format <i>slot.line</i> . If the card set supports only one line, you can enter just the slot number. |
| <statistic number> | Specifies the type of statistic to enable/disable. |
| <interval> | Specifies the time interval of each sample (1–255 minutes). |
| <owner> | Specifies the source of the configuration (“auto,” “user”, or “tftp”). |

Function

This command displays the last five occurrences of the line statistic for a physical line on an active IMA trunk on a UXM card. The line statistic is selected from the list displayed when this command is first entered. Use the **dspphyslnstatcnf** to display the statistics enabled on the selected channel. Use **cnfphyslnstats** to enable a statistic.

Figure 1-90 illustrates an example display.

Note You may have to enter owner “auto” in all capital letters.

Figure 1-90 dspphyslnstathist—Display Statistics Data for a Line

```
pubsigx1      TN      SuperUser      IGX 15      9.2 Mar. 24 1998 16:33 PST

Line Statistic Types

3) Loss of Frames
4) Loss of Signal
29) Line Code Violation
30) Line Errored Seconds
31) Line Severely Err Secs
32) Line Parity Errors
33) Errored Seconds - Parity
34) Severely Err Secs - Parity
35) Path Parity Errors
36) Errored Secs - Path
37) Severely Err Secs - Path
38) Severely Err Frame Secs
40) Unavail. Seconds

41) BIP-8 Errors
42) BIP-8 Errored Seconds
43) BIP-8 Severely Err Secs.
44) Cell Framing Sev. Err Frame Secs
45) Cell Framing Unavail. Secs.
46) HCS Errors
98) Frame Sync Errors
141) FEBE Counts
143) Cell Framing FEBE Err. Secs.
144) Cell Framing FEBE Sev. Err. Secs.
145) Cell Framing FEBE Counts
```

This Command: dspphyslnstathist 15

Next Command:

dspportstathist (Display Statistics History for a FR Port)

The **dspportstathist** command displays a history of statistics configured as enabled for a selected Frame Relay port.

Attributes

Jobs: No Log: Yes Lock: Yes Type: IGX

Associated Commands

cnfportstats, **dspportstatcnf**

Syntax

dspportstathist <line> <statistic number> <interval> <owner>

<line> Specifies the circuit line in the format *slot.line*. If the card set supports only one line, you can enter just the slot number.

<statistic number> Specifies the type of statistic to enable/disable.

<interval> Specifies the time interval of each sample (1–255 minutes).

<owner> Specifies the source of the configuration (“auto,” “user”, or “tftp”).

Function

This command displays the data for the last five occurrences of the port statistic. The port statistic is selected from the list displayed when this command is first entered. Use the **dspportstatcnf** to display the statistics enabled on the selected port. Use **cnfportstats** to enable a statistic.

Figure 1-92 illustrates a display for FR port 8.2 DE Frames Dropped (1 second interval) history.

Note You may have to enter owner “auto” or “user” in all capital letters.

Figure 1-92 dsportstathist—Display Port Statistics History

gamma TRM SuperUser Rev: 9.2 Aug. 14 1998 14:15 PDT

DE Frames Dropped on Port 8.2

Interval: 1 Minute(s), Data Size: 4 Byte(s), NO Peaks, Owner: IGX User

0	-	0
-1	-	0
-2	-	0
-3	-	0

Last Command: dsportstathist 8.2 19 1 USER

Next Command:

dsprevs (Display Revisions)

The **dsprevs** command displays the system software revision running on all nodes in the network.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX, BPX

Associated Commands

runrev, **loadrev**

Syntax

dsprevs

Function

This command displays the configuration and status of the primary and secondary software revisions for all nodes in the network. The primary revision is the software that is running on the node. The secondary revision is the software that is available in memory but not being run. Table 1-59 lists the various status messages. Figure 1-93 illustrates a typical display.

Table 1-59 Status of Node Software Revisions

Status	Description
unavailable	The revision is currently unavailable for the node displayed. The revision has not propagated to the node yet.
available	The node has located the specified revision but has not yet downloaded it.
partial	The revision was only partially downloaded. Indicates the download was temporarily interrupted.
downloading	The revision is in the process of being downloaded. Blocks of data are being transferred.
loaded	The revision has completed downloading but is not ready for running.
upgrading	The controller card is being upgraded by the current revision. This process generally occurs immediately following the download.
upgraded	The upgrade procedure has been completed.
running	The primary revision is currently being used to run the node.

Figure 1-93 dsprevs—Display Revisions

```
sw171          TN      SuperUser      IGX 8420  9.2.h0    June 26 1998 14:52 GMT
              ----- Primary -----
NodeName      Status      Revision      Status      Revision
sw29          Running    9.2.h3
sw43          Running    9.2.h5
sw44          Running    9.2.h3
sw171         Running    9.2.h0        Loaded      9.2.h9
sw177         Running
sw106         Running    9.2.h3
sw181         Running    9.2.h3
```

Lowest revision running in net: 9.2.h0

Last Command: dsprevs

Next Command:

dsprobst (Display Robust Statistics)

The **dsprobst** command displays the statistics associated with the Robust Alarms feature.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX, BPX

Associated Commands

cnfrobparm

Syntax

dsprobst [clear]

[clear] Specifies that the statistics buffers should be cleared after the display.

Function

This command displays the statistics associated with the Robust Alarms messages between the node and Cisco WAN Manager NMS. The optional “clear” argument clears the statistics buffers.

Figure 1-94 illustrates a sample display screen.

Figure 1-94 dsprobst—Display Robust Statistics

```
sw197                    TN    SuperUser            IGX 8420        9.2 Apr. 7 1998 05:43 GMT
```

```
Robust Communications Statistics since : Date/Time Not Set
```

```
Updts msg xmit:            0
Updts msg ackd:            0
Updts ack tout:            0
LCBs freed:                0
Updts ack reset:           0
```

```
Last Command: dsprobst
```

```
Next Command:
```

dsprst (Display Reroute Statistics)

The **dsprst** command displays the connection rerouting statistics for the network.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX, BPX

Associated Commands

rrtcon, drtop

Syntax

dsprst [s] [clear]

[s]

[clear] Specifies that the reroute statistics buffers should be cleared after the display.

Function

This command displays the statistics related to connection rerouting resulting from failed trunks. These statistics may be useful in determining the performance of the reroute algorithm. Use the “clear” option to clear the counters before accumulating the statistics. Table 1-60 lists reroute statistics.

Table 1-60 Display Reroute Statistics

Statistic	Description
Number of Completed Routes	This is the total number of connections routed since the NPC rebuilt.
Number of Failed Routes	This is the number of attempted reroutes that failed for any reason.
Number of Collisions	During a reroute, the initiating node locks all nodes on the route until rerouting is done. If another node attempts to reroute through a locked node, a collision occurs, so the second node must wait then retry.
Max. # of Consec. Collisions	Is the count of consecutive collisions as defined above.
Max/Avg Secs To Select Route	Time taken within the initiating node to select a new route.
Max/Avg Secs To Perform Route	Time taken to contact and lock the nodes on the new route and perform the rerouting process.
Avg Secs to Route a Conn:	Time to perform a reroute divided by the average number of connections in a bundle.
% of Collisions/Rrt Attempt	Another statistic derived from the number of collisions and the number of reroute attempts.
Max Secs To NOT find Route	Similar to “max secs to select a route” except that the algorithm finished and no route was found.
Number of Routes not found	Number of routes not found in the rerouting process. This parameter updates periodically as a heartbeat to check for activity.

Table 1-60 Display Reroute Statistics (Continued)

Statistic	Description
# of Rrts with rrt req_bit set	Number connections awaiting reroute. If rrt_req bit is set, a reroute was not successful; or trunk deletions or loading additions mean connections must be rerouted. Rerouting clears the rrt_req bit.
Address of Forced Rrt Counts	NPC memory address for database information.
Max routes checked in search	Maximum number of PLNs examined in a search for a new route.
Max good rts checked in search	Maximum number of possible routes found before the search ended. The value should be 1.
# our lns rmvd from under us	Measure the number of changes to topology and loading that occurred while rerouting was in progress.
# lines rmvd out from under us	Same as above.

Figure 1-95 dsprst—Display Reroute Statistics

```
sw197          TN      SuperUser      IGX 8420      9.2.a1      Apr. 7 1998  05:49 GMT
```

```
Conn. Routing Statistics LOC_DOMAIN
```

```
Number of Completed Routes:      0  Blocked by other st machines:      0
Number of Failed Routes:          0  Timeouts waiting for ACK/NACK:      0
Number of Collisions:             0  Timeouts in LOCKED state:          0
Max # of Consec Collisions:       0  Number of Routes Not found:        0
Max Secs To Select Route:         0.000 # of Rrts with rrt_req bit set:      0
Max Secs To Perform Route:        0.000 Address of Forced Rrt Counts: 313F9860
Max Bundle Size Routed:           0  Max routes checked in search:      0
Avg Secs To Select Route:         0.000 Max good rts checked in search:      0
Avg Secs To Perform Route         0.000 # nibs rmvd out from under us:      0
Avg Secs To Route a Conn:         0.000 # our lns rmvd from under us:      0
Avg Bundle Size Routed:           0  # lns rmvd from under us:          0
% of Collisions/Rrt Attempt:      0%  Number of conid conflicts:         0
Max Secs To NOT find Route:       0.022 Number of LCON deroutes:           0
Times conns deletd while rtng:    0  Number of VLCON deroutes:         0
```

```
This Command: dsprst
```

```
Continue?y
```

```
sw197          TN      SuperUser      IGX 8420      9.2.a1      Apr. 7 1998  05:50 GMT
```

```
Conn. Routing Statistics LOC_DOMAIN
```

```
# conns added to Rrt waitlist:    0  # no destination trunk:             0
# conns unroutable:               0  # lowest cost route found:          0
# Reroute_Line_Debug:             4000103 # lowest cost route not found:      0
# Reroute_Debug:                  FFFFFFFF # unsuccessful cache usage:         0
# Upd_via_info:                   0  # successful cache usage:           0
# diff rrt cons number:           0  # successful on-demand:             0
# hop count exceeded:             0
# cost exceeded:                  0
# delay exceeded:                 0
# open cell space too low:        0
# open packet space too low:      0
# open conid space too low:       0
# open GW LCN space too low:      0
# lowest cost path replaced:      0
```

```
Last Command: dsprst
```

```
Next Command:
```


dspslot (Display Slot)

The **dspslot** command displays system information associated with a specific card in the node.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX, BPX

Associated Commands

none

Syntax

dspslot <slot number>

<slot number> Specifies the shelf slot number.

Function

This command displays system information associated with a specific card in the node. The information can help you debug card failures. When a card failure is reported to the Cisco TAC, the TAC engineer records the parameters for the associated card displayed by using **dspslot**.

The information displayed by the **dspslot** command is unique to the card and is used primarily by the controller card to supervise background system tasks. Figure 1-97 illustrates a typical display—an FRP in this case. Table 1-61 lists the slot parameters you can display on a node.

Use this command to add information on a failed card when you return it. Print the screen or otherwise record the information and return it with the faulty card to Cisco.

Figure 1-97 dspslot—Display Slot Parameters

```
sw83                    TN    SuperUser            IGX 8420    9.2            Aug. 1 1998 19:27 PST

Card Data Base for FRP card in slot 6    at address 30BD820C

Logical Card            6                    Test in Prog            0
Verify DB Flag         0                    Slft Res Abort         0
Info Ptr                30B88C2C             Slft Abort              0
Last Event             TEST_FREE            Last Test               BKGD_TEST
Fail Inter             0                    FRP Test Fail          0
Selftest Fail          0                    FRP Test Fail I        0
Selftest Inter         0                    FRP Port Test Fail     0
Selftest Timeout       0                    FRP Port Capacity      31
Con Test Fail          0                    FRP Line Capable       1
Red LED Flag           0                    FRP V35 Capable        0
Restart Reason         Not maintained        FRP X21 Capable        0
Selftest Results                          FRP NNI/CLLM Cap       1
                                          FRP CGW/ATFR Cap      1

Last Command: dspslot 6

Next Command:
```

Table 1-61 Slot Parameters You Can Display on Node

Item	Parameter	Description
1	Logical Card	This number represents the type of card.
2	Verify DB Flag	Verify database flag. Concerned with database and memory.
3	Info Ptr	Information pointer. Concerned with database and memory.
4	Last Event	This is the previous state of the card known to the NPC.
5	Fail Inter	Indicates intermittent card failure.
6	Selftest Fail	Indicates self-test fail condition.
7	Selftest Inter	Indicates intermittent self-test failure.
8	Selftest Timeout	Self-test routine timed out before completion.
9	Con Test Fail	Indicates failure of the test con command.
10	Red LED Flag	Indicates front panel FAIL LED on.
11	Restart Reason	Reason for last card reset.
12	Selftest Results	Results of last self-test for card.
13	Test in Prog	Indicates card test is in progress.
14	Slft Res Abort	Not used.
15	Slft Abort	Not used.
16	Card Stats Up	A "1" indicates statistics are being collected on this card.
17	Sib Pointer	Pointer to database concerning statistics.
18	Summary stats	Pointer to database concerning statistics.
19	Detailed stats	Pointer to database concerning statistics.
20	Bus Mastership	For BCC, this indicates whether this is the slave BCC. For other cards, this is not used.
21	Last Test	Last test performed on card in this slot.

dspslotstathist (Display Statistics History for a BXM Card)

The **dspslotstathist** command displays a history of statistics enabled for a BXM card slot.

Attributes

Jobs: No Log: Yes Lock: Yes Type: BPX

Associated Commands

cnfslotstats, **dspslotstacnf**

Syntax

dspslotstathist <port>

<slot> Specifies the slot.

Function

This command displays the data for the last five occurrences of the slot statistic. The statistic is selected from the list displayed when this command is first entered. Use the **dspslotstacnf** to display the statistics enabled on the selected slot. Use **cnfslotstats** to enable a statistic.

Note You may have to enter owner “auto” or “user” in all capital letters.

dspstatfiles (Display TFTP Statistics File Information)

The **dspstatfiles** command displays TFTP statistics file information for the current node.

Attributes

Privilege: SuperUser Jobs: No Log: No Help: No History: OK Lock: No Hipri: No
Type: BPX and IGX

Associated Commands

dspstatparms, cnfstatparms, cnfnodeparm, dspstatmem

Syntax

dspstatfiles [d]

[d] Optional. Specifies a detailed display for command output.

Function

These files contain statistics for switch objects (such as connections, lines, trunks, ports, and so forth) that are reported to the Cisco WAN Manager (CWM) by means of the Trivial File Transport Protocol (TFTP).

Example

Display TFTP statistics file information for the current node.

dspstatfiles (Display TFTP Statistics File Information)

Default display example:

```
dspstatfiles
sw62          TN      StrataCom      BPX 8620  9.2.36      Jan. 24 2001 01:24 GMT

KEY:A = Active File, S = Switchover occurred, R = Stats Reset, K = Stats Skewed
  E = Stats just enabled, W = Write Failure, M = Made while standby
FILE NAME      FLAGS      FILE NAME      FLAGS
sw62.0124010030 M
sw62.0124010030 M
sw62.0124010045 M
sw62.0124010100 SE
sw62.0124010115 R
sw62.0000000000 A
```

Last Command:dspstatfiles

Next Command:

```
SW CD          MAJOR ALARM
```

Field definitions for default display:

A = Active File	- The active file.
S = Switchover occurred	- A CC switch over occurred while the file was active.
R = Stats Reset	- While the file was active a user executed the "rststats" command, or a there was a time change large enough to invalidate the current collection.
K = Stats Skewed	- Due to cbus message throttling some statistics polls may have been skipped. The stats were picked up by a later poll, but due to a file rollover the stats were skewed into the new active file.
E = Stats just enabled	- New statistics were enabled while the file was active.
W = Write Failure	- The file could not be written because the file size exceeded the remaining memory allocated for TFTP files. This is an error condition. The software error 2051 is logged to provide information about the error condition.
M = Made while standby	- The stats in the file were collected by the active CC while the current CC was standby.

Display detailed TFTP statistics file information for the current node:

```
dspstatfiles d
sw62          TN      StrataCom      BPX 8620  9.2.36   Jan. 24 2001 01:10 GMT

File:      sw62.0124010030          File:      sw62.0124010030

  Next File Ptr:  0x307C0EB0          Next File Ptr:  0x307C0A30
  Data Block Ptr: 0x307C10F0          Data Block Ptr: 0x307C0C70

  File Length:    53                  File Length:    53
  File Memory:    1152                 File Memory:    1152
  Data Length:    512                  Data Length:    512
  Tftp_File_Size  at creation: 573     Tftp_File_Size  at creation: 573

  Enter Long Fails:0                  Enter Long Fails:0
  Enter Fails:    0                    Enter Fails:    0
```

This Command:dspstatfiles d

Continue?

SW CD

MAJOR ALARM

dspstatmem (Display Statistics Memory Use)

The **dspstatmem** command displays memory usage for statistics collection.

Attributes

Jobs: No Log: Yes Lock: No Node Type: IGX, BPX

Associated Commands

none

Syntax

dspstatmem

Function

This command displays memory usage for statistics collection. It is intended for debugging statistics collection problems, not everyday use. The command shows the amount of controller card memory allocated by the user to statistics display (defaults to 650 Kbytes).

The memory occupied by USER is used for user-enabled statistics. Figure 1-99 illustrates a typical screen. The memory occupied by USER figure is that used by the Cisco WAN Manager user. Memory occupied by AUTO is that used by node features.

Figure 1-99 dspstatmem—Display Statistics Memory Usage

```
sw83                    TN    SuperUser            IGX 8420    9.2            Aug. 1 1998 19:29 PST

User Configured Statistics Memory (In bytes) = 624640

Memory Occupied by USER (In bytes) = 0

Memory Occupied by AUTO (In bytes) = 21584

Last Command: dspstatmem

Next Command:
```


dsptcpparm (Display TCP Parameters)

The **dsptcpparm** command displays the TCP bandwidth throttle parameter.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX, BPX

Associated Commands

cnftcpparm

Syntax

dsptcpparm

Function

This command displays the TCP bandwidth throttle parameter. Figure 1-100 shows a typical display.

Figure 1-100 dsptcpparm—Display TCP Parameters

```
cc2          LAN  SuperUser      IGX 8430    9.2    Aug. 30 1998  11:42 PST
NWIP Bandwidth Throttle (Kbytes/sec): 32
```

Last Command: dsptcpparm

Next Command:

dsprkcons (Display Trunk Connection Counts)

The **dsprkcons** command displays the number of connections routed over the specified trunk. This command applies to physical and virtual trunks.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX, BPX

Associated Commands

dsprkmcons, **dsplnmcons**

Syntax

dsprkcons <line number>

<line number> Trunk number.

Function

This command displays the total number of connections being carried by the specified trunk. The connections are summed for each terminating node in the network and lists the connection count for the transmit direction (out of the node).

This command is useful in determining the source of dropped packets in cases where the specified trunk is oversubscribed. Use the **dsprks** command to list the trunks that originate at each node. Next, use the **dsprkcons** to determine the number of connections (the more connections per trunk the greater the possibility of over-subscription). Then use the **dsprts** command to identify any through nodes (where the trunk is not terminated). Finally, look at the utilization factor for each of these lines using the **dsputl** and **dsputl** commands. Figure 1-101 illustrates the **dsprkcons** command display.

Figure 1-101 dsprkcons—Display Trunk Connection Counts

```
batman              TN      SuperUser              BPX 15      9.2              Aug. 9 1998 15:57 GMT

Connection Counts For TRK 5.1

Src Node  Conns      Src Node  Conns      Src Node  Conns      Src Node  Conns
batman      1765

Last Command: dsprkcons 5.1

Next Command:
```

dsptrkmcons (Display Trunk Connection Counts by Master Node)

The **dsptrkmcons** command displays the number of connections routed over the specified trunk (BNI) by the master node.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX, BPX

Associated Commands

dsptrkcons

Syntax

dsptrkmcons <line number>

<line number> Specified trunk number. Note that in a BPX, the line number must include a port number.

Function

This command displays the total number of connections being carried by the specified trunk. Rather than showing the remote end of the connection, the display lists the connection and the node that owns that connections.

This command is useful in determining the source of dropped packets in cases where the specified trunk is oversubscribed. First, use the **dsptrkmcons** command to list the trunks that originate at each node (the more connections per trunk, the greater the possibility of over-subscription). Next, use the **dsprts** command to identify any through-nodes (on which the trunk is not terminated). Finally, look at the utilization for each of these lines by using the **dsputl** and **dsputl** commands. Figure 1-102 illustrates the **dsptrkmcons** command display.

Figure 1-102 dsptrkmcons—Display Trunk Connection Counts by Master Node

```
sw81                      TN    SuperUser                      BPX 15    9.2    Aug. 26 1998 13:16 PST

Connection Counts For TRK 6.1

Mst Node  Conns    Mst Node  Conns    Mst Node  Conns    Mst Node  Conns
sw86                      26
```

Last Command: dsptrkmcons 6.1

Next Command:

dsprkstatcnf (Display Statistics Enabled for a Trunk)

The **dsprkstatcnf** command displays the enabled statistics a physical or virtual trunk.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

cnftrkstats

Syntax

dsprkstatcnf <line>

<line> Specifies the trunk: *line* can have the form *slot*, *slot.port* or *slot.port.vtrk*. The format depends on whether the trunk card has one or more physical ports and whether the trunk is a virtual trunk.

Function

This command displays the statistics enabled for a trunk. It is intended for debugging statistics collection problems. It displays the trunk statistics set by the **cnftrkstats** command, by Cisco WAN Manager, or by node features. Figure 1-103 shows example statistics for a T3 ATM trunk. The Owner column shows the source of the specification. If the Owner column shows "AUTO," the node's features determined the statistics. If the Owner column shows the name of the node, Cisco WAN Manager determined the statistics. If the Owner column shows "USER," the **cnftrkstats** command was used to configure the statistics. The display may take up to four screens to display completely depending on statistics displayed.

Figure 1-103 dsptrkstatcnf—Display T3 Trunk Statistics Enabled (Screen 1)

sw81 TN SuperUser BPX 15 9.2 Oct. 22 1998 23:47 PST

Statistics Enabled on Trunk 1.1

Statistic	Samples	Interval	Size	Peaks	Owner
3) Out of Frames	60	0	4	NONE	AUTO
4) Loss of Signal	60	0	4	NONE	AUTO
29) Line Code Violation	60	0	4	NONE	AUTO
32) Line Parity Errors	60	0	4	NONE	AUTO
35) Path Parity Errors	60	0	4	NONE	AUTO
41) BIP-8 Errors	60	0	4	NONE	AUTO
46) HCS Errors	60	0	4	NONE	AUTO
48) Tx Voice Overflow Drpd Cells	60	0	4	NONE	AUTO
49) Tx TS Overflow Drpd Cells	60	0	4	NONE	AUTO
50) Tx NTS Overflow Drpd Cells	60	0	4	NONE	AUTO
51) Tx Hi-Pri Overflow Drpd Cells	60	0	4	NONE	AUTO

This Command: dsptrkstatcnf 1.1

Continue? y

sw81 TN SuperUser BPX 15 9.2 Oct. 22 1998 23:48 PST

Statistics Enabled on Trunk 1.1

Statistic	Samples	Interval	Size	Peaks	Owner
52) Tx BData A Overflow Drpd Cells	60	0	4	NONE	AUTO
53) Tx BData B Overflow Drpd Cells	60	0	4	NONE	AUTO
98) Frame Sync Errors	60	0	4	NONE	AUTO
167) Tx CBR Overflow Drpd Cells	60	0	4	NONE	AUTO
168) Tx VBR Overflow Drpd Cells	60	0	4	NONE	AUTO
169) Tx ABR Overflow Drpd Cells	60	0	4	NONE	AUTO

Last Command: dsptrkstatcnf 1.1

Next Command:

dsprksthathist (Display Statistics History for a Trunk)

The **dsprksthathist** command displays a history of configured statistics for a physical or virtual trunk.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

cnftrkstats, **dsprksthathist**

Syntax

dsprksthathist <trunk>

<trunk> Specifies the trunk in one of the following formats:
slot for a trunk card with one line
slot.port for a trunk card with more than one line
slot.port.vtrk for a virtual trunk

Function

The **dsprksthathist** command is a statistics debugging command. It displays the data for the last five occurrences of the selected statistic. The available trunk statistics appear on screen upon entry of the **dsprksthathist** command. (The **cnftrkstats** command enables individual statistics. The **dsprksthathist** command displays the enabled statistics for a trunk.) Figure 1-104 displays a statistic history for virtual trunk 1.1.1. The statistic is TX ABR Overflow Dropped Cells. This is statistic number 169. The execution of **dsprksthathist** shows as enabled for this trunk. (If a *disabled* statistic is selected, a message stating this appears above the command line prompt.) The entered bucket interval is 0 minutes, which means that only the preceding 60 seconds worth of gathered data for number 169 appears.

Note Enter the owner in all capital letters. You may have to enter owner "auto" in all capital letters.

Figure 1-104 dsprksthathist—Display Trunk Statistics History

sw97 TN SuperUser BPX 15 9.2 Aug. 9 1998 12:42 GMT

Tx ABR Overflow Drpd Cells on Trunk 1.1.1
 Interval: 10 Second(s), Data Size: 4 Byte(s), NO Peaks, Owner: AUTO

0	-	0		-11	-	0
-1	-	0		-12	-	0
-2	-	0		-13	-	0
-3	-	0		-14	-	0
-4	-	0		-15	-	0
-5	-	0		-16	-	0
-6	-	0		-17	-	0
-7	-	0		-18	-	0
-8	-	0		-19	-	0
-9	-	0		-20	-	0
-10	-	0		-21	-	0

This Command: dsprksthathist 1.1.1 169 0 BPX

Continue?

dsputil (Display Utilization)

The **dsputil** command displays the utilization factor for all voice connections on a circuit line.

Attributes

Jobs: No Log: No Lock: Yes Node Type: IGX

Associated Commands

dsputil

Syntax

dsputil <bslot> [clear]

<bslot> Specifies the shelf back slot number of the circuit line.

[clear] Directs the controller card to clear the utilization counters after being displayed.

Function

This command displays the actual percentage utilization for all voice connections on a single circuit line specified by the back slot (**bslot**) number. The percentage is calculated by dividing the number of packets transmitted over the total number of packets allocated to the specified channel. Only transmit packet rates are used. If percentage of actual utilization exceeds the configured utilization the channel appears in reverse video.

Figure 1-105 illustrates a typical display. In this example, the connections from 11.1 to 11.11 use VAD and the connections from 11.12 to 11.17 do not. The connections using VAD do not use any network bandwidth (0 utilization) until the connection is used. The other connections utilize the full bandwidth (100% utilization) even though they may be idle.

Use the **dsputil** command to display utilization for data channels.

Figure 1-105 dsputil—Display Voice Channel Utilization

gamma TRM SuperUser Rev: 9.2 Aug. 14 1998 16:36 PDT

Percentage utilization Last Cleared: Date/Time Not Set Snapshot

CLN 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

11 0 0 0 0 0 0 0 0 0 0 0 0 99 99 99

CLN 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31

11 99

Last Command: dsputil 11

Next Command:

getfwrev (Get Firmware Revision)

The **getfwrev** command gets and loads a firmware image from Cisco WAN Manager, Cisco WAN Manager, or a remote node into the specified card on the specified node or on all reachable nodes.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

burnfwrev, dspfwrev, dspdnld

Syntax

getfwrev <card type> <image name> <nodename>

- | | |
|--------------|---|
| <card type> | Specifies the card on which to load the revision. |
| <image name> | Specifies the name assigned to the firmware revision. Image names are generally in all capital letters and are case-sensitive when being entered. |
| <nodename> | Specifies the node on which to load the revision. |

Function

This command gets and loads a firmware revision image into the specified node's NPC memory. This firmware image can then be downloaded to specific interface cards within the node with the **burnfwrev** command. The firmware image must be already loaded into the Cisco WAN Manager or Cisco WAN Manager terminal before using this command.

When the command is first entered, the status is temporarily “Unavailable” while the node attempts to locate the source of the firmware image. Once the download begins, a list of all of the files that make up the image is displayed and as the downloading progresses, the address of the file is updated.

- **getfwrev a.b.cd ***—Loads firmware revision a.b.cd at all reachable nodes
- **getfwrev BNI-E3 a.b.cd nodename**—Loads firmware revision a.b.cd on the BNI-E3 card at one node only (nodename specifies the node).
- **getfwrev 0.0** —Clears a firmware revision image from NPC memory. Should be issued after every firmware download to clear the NPC memory.
- **getfwrev BNI-E3 0.0 nodename**—Clears a firmware revision image from the BNI-E3 card at one node only (nodename specifies the node).



Caution This command is not to be confused with **loadrev**. The **loadrev** command loads system software, not firmware.

killuser (Log Out a User)

The **killuser** command logs out a user.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

none

Syntax

killuser <user number>

<user number> Specifies the number of the user to log out.

Function

This command logs out a user. The **killuser** screen in Figure 1-106 displays a numbered list of users. The number is the argument that **killuser** takes. The display indicates your user number so that you do not log out yourself.

Figure 1-106 killuser—Kill User

```
sw83          TN      SuperUser      IGX 8420      9.2      Dec. 9 1998  00:11 PST

#  TASK  PURPOSE      USER ID      #  TASK  PURPOSE      USER ID
--  ----  -
1  USR1   control port  none         13 VT_5  VT           none
2  USR2   auxilry port  none         14 VT_6  VT           none
3  USR3   lan port (SV) none         15 SNMP  agent       n/a
4  TN_1   lan (telnet)  SuperUser   < You      16 JOBS  runs jobs   n/a
5  TN_2   lan (telnet)  none
6  TN_3   lan (telnet)  none
7  TN_4   lan (telnet)  none
8  TN_5   lan (telnet)  none
9  VT_1   VT           none
10 VT_2   VT           none
11 VT_3   VT           none
12 VT_4   VT           none
```

This Command: killuser

Please Enter User Number:

loadcnf (Load Configuration)

The **loadcnf** command loads a configuration image from Cisco WAN Manager to a node.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX, BPX, IGX/AF

Associated Commands

dspcnf, **runcnf**, **savecnf**

Syntax

loadcnf <backup_id | clear> <node_name> <source_SV_node>

- | | |
|------------------|--|
| <backup_id > | Specifies the name of the backup configuration file to be loaded. Configuration names are case-sensitive. |
| <clear> | Specifies that the control card buffer area used for loading a configuration be cleared. |
| <node name> | Specifies the target node where the backup configuration file is to be loaded. |
| <source_SV_node> | Specifies the node connected to the Cisco WAN Manager where the configuration file <i>backup_id</i> resides. |

Function

This command causes a saved network configuration file to be downloaded from Cisco WAN Manager to one node or all nodes. (See **savecnf**.) The configuration image downloaded is temporarily stored in a buffer area in a node's controller card memory. The process runs in the background and may take several minutes if the configuration file is large. Although loaded, the configuration is not yet restored. The configuration is restored to the controller card's BRAM memory using the **runcnf** command.

After loading and restoring a network configuration, the control card buffer area used for this purpose should be cleared so it is available for other downloading processes, such as that of firmware. To clear the buffer area, execute **loadcnf** with the *clear* parameter specified instead of *backup_id*. Specify the buffer of an individual node with *node_name* or all nodes with *. For the purpose of clearing the buffer area, do not specify the *source_SV_node* parameter.

To execute this command on an IGX/AF interface shelf, telnet to the shelf or use a control terminal attached to the shelf.

loadrev (Load Revision)

The **loadrev** command loads a secondary system software revision image from Cisco WAN Manager into a node.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX, IGX/AF

Associated Commands

runrev, **dsprevs**, **cnfdlparm**, **upggrp**

Syntax

```
loadrev <revision> <node_name | group_name | *>
```

<revision>	Specifies the revision level of the system software file to be loaded.
<node_name>	Specifies the target node where the secondary revision is to be loaded.
<group_name>	Specifies a subset of nodes in the network.
<*>	Specifies all nodes in the network.

Function

This command loads the secondary revision system software for the specified nodes. The secondary revision system software is the code that is loaded onto a controller card but is not being run. Use the **runrev** command (after you have loaded a revision with **loadrev**) to make the secondary revision the primary revision. The primary revision then becomes the secondary.

Examples of this command:

- **loadrev a.b.cd ***—Loads revision a.b.cd at all reachable nodes.
- **loadrev a.b.cd nodename**—Loads revision a.b.cd at nodename only
- **loadrev 0.0**—Clears a software revision image from controller memory. You should issue this command after every software download to clear the controller memory.

After entering the command, the system responds with the following:

```
Enter Rev Number:
```

Use the **dsprevs** command to view the software revisions that are currently loaded in the controller memory. Use the **dsdnld** command to display a running picture of the download procedure status once it has begun. The **runrev** command also displays the lowest revision running in the network.



Caution Do not confuse **loadrev** with **getfwrev**. The **getfwrev** command loads firmware, not system software.

prtcderes (Print Card Errors)

The **prtcderes** command prints out detailed card failure information.

Attributes

Jobs: Yes Log: No Lock: Yes Node Type: IGX, BPX

Associated Commands

clrcderes, **dspcderes**

Syntax

prtcderes [<slot>]

<slot > Specifies the shelf slot where the selected card is installed.

Function

Prints a history of card failures associated with a specified slot on the network printer. If no argument is specified, a summary is printed, indicating the slots that have failures recorded against them. Refer to **dspcderes** command for an example of a typical card error record that might be printed.

rrtcon (Reroute Connection)

The **rrtcon** command is used to manually reroute one or more connections.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

drtop

Syntax

rrtcon <group | channel(s) | *>

<group | channel(s) | *>: Specifies a group, a channel, or a range of channels to be rerouted.
A * specifies all locally owned groups and connections.

Function

This command forces a group, channel or range of channels to be rerouted. If a free-routing connection is rerouted by the system for whatever reason, it will not automatically return to its original route when the trouble clears. This may leave the connection on a path that is not the most direct or cost effective.

You can use **rrtcon** to force a reroute that will likely put the connection back to its original route if that route is available. Over time, many routes may need to be rerouted back to their original paths. In this case, use the "*" parameter with **rrtcon** on the node where you originally executed it to reroute all connections.

To use this command you must first vt to the node that owns the connection (local node). If not at the local node, the system displays "This node is not owner of the connection(s)."

There is no provision for specifying a route. The node determines the connection route according to the same rules that are used when adding a new connection. If no network bandwidth is available for rerouting the connection, the node marks the connection as failed.



Caution Using this command on a connection that is in service should be done with some discretion because the reroute interrupts service for as long as it takes to reroute the connection.

rststats (Reset Statistics Collection Time)

The **rststats** command resets the statistics collection time for the **tststats** command. Executing **rststats** clears all statistics. When you enter it, a prompt warns you that the command clears all statistics and asks if you want to proceed.

Attributes

Jobs: Yes Log: No Lock: Yes Node Type: IGX, BPX

Associated Commands

tststats

Syntax

rststats

Function

This command resets the collection time for the **tststats** command. The **tststats** command displays a test statistics summary. Before there will be any meaningful statistics, the **tstcon** command must be performed on one or more network connections. Refer to the *Cisco WAN Switching Command Reference* for information on the **tstcon** command. Figure 1-107 illustrates the system response.

Figure 1-107 rststats—Reset Statistics Collection Time

```
alpha32            LAN    SuperUser            IGX 8430            9.2            Aug. 30 1998 13:35 PST
```

```
This Command: rststats
```

```
Warning: This command clears all statistics  
Continue?
```


runcnf (Run Configuration)

The **runcnf** command restores a network configuration image at one or all nodes.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX, IGX/AF

Associated Commands

savecnf, **loadcnf**, **clrcnf**

Syntax

```
runcnf <backup_id> <node_name>
```

<backup_id> Specifies the name of the configuration image loaded from Cisco WAN Manager. Configuration names are case-sensitive.

<node_name> Specifies the node name to receive the configuration. An asterisk (*) specifies all nodes.

Function

This command restores the specified configuration to the controller card's BRAM memory and overwrites the current configuration. Once restored, the specified node (or all nodes) rebuilds with the restored configuration image. To execute this command on an IGX/AF interface shelf, telnet to the shelf or use a control terminal attached to the shelf.

This command is usually run after a previous configuration has been lost. If doubts exist about the state of the configuration at other nodes in the network, load the configuration into all nodes by specifying "*" for the node name. The new configuration must have previously been loaded into the controller buffer area with the **loadcnf** command.



Caution All network nodes must be run with the same configuration.

The system may display two warnings in response to the **runcnf** command:

1 When single node specified:

- Warning—node_name not reachable. Continue? Y/N.
- Warning—node_name does not have the specified configuration. Continue? Y/N.

2 When all nodes specified:

- Warning—all nodes not reachable. Continue? Y/N.
- Warning—all nodes do not have the specified configuration. Continue? Y/N.

If a single node is not reachable, responding with a "Y" does not affect the operation of the network. If node(s) do not all have the specified configuration or all are unreachable, it is not recommended that you continue until after the problem is resolved.

runrev (Run Revision)

The **runrev** command runs a specific revision of the system software at a node.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX, BPX

Associated Commands

dsprevs, loadrev, cnfdlparm, upggrp

Syntax

runrev <revision> <node_name | group_name | *>

- | | |
|--------------|--|
| <revision> | Identifies the revision you want to run. |
| <node_name> | Specifies the node name to rebuild with a new configuration. |
| <group_name> | Specifies a subset of nodes in the network. |
| * | Specifies all nodes in the network. |

Function

This command sets the primary revision for the specified nodes. The primary software revision is the one that is actively controlling node operation. You can also load a non-active secondary revision that differs from the primary revision running in the controller. To set the primary software revision, enter:

- **runrev a.b.cd ***—To run revision a.b.cd at all reachable nodes.
or
- **runrev a.b.cd nodename**—To run revision a.b.cd at a single node (nodename) only.

After entering the command, the system responds with “Enter Rev Number.” Use the **dsprevs** command to determine which revision(s)—primary and secondary—are available on the node. The **runrev** command also displays the lowest revision running in the network. The **runrev** command will be ignored if the required revision is not present on the node.

You may need to load the new revision onto the Cisco WAN Manager terminal and then use **loadrev** command to download the new software image into the standby controller before you issue the **runrev** command. If you enter a revision number that does not exist at the node, the system displays the message

“Warning—the node does not have the specified revision. Continue? Y/N”



Caution All network nodes typically should be run with the same software revision to ensure normal network operation.

savecnf (Save Configuration)

The **savecnf** command saves a configuration image on a Cisco WAN Manager workstation disk.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX, BPX, IGX/AF

Associated Commands

loadcnf, **runcnf**, **clrcnf**

Syntax

savecnf <backup_id | clear> <node_name> <dest_SV_node> [<dest_SV_ip>]

<backup_id>	Specifies the name of a configuration to be saved on Cisco WAN Manager. The Backup ID must be 1–8 alphanumeric characters with the first character being alphabetic. Configuration names are case-sensitive.
<clear>	Specifies that the buffer area should be cleared.
<node_name>	Specifies the node name to save configuration on. An * may be specified to indicate all nodes.
<dest_SV_node>	Specifies the node name where Cisco WAN Manager is connected and is to receive the specified backup_id.
<dest_SV_IP>	For IGX/AF interface shelves only, this optional specification is the IP address of the Cisco WAN Manager that is to receive the configuration image.

Function

The **savecnf** command has two possible applications. It saves all the configurations for the nodes in a routing network, or it saves the configuration of one IGX/AF interface shelf to a specific Cisco WAN Manager workstation. Once saved, you can restore the configuration to BRAM by using the **loadcnf** and **runcnf** commands. You should execute **savecnf** in the following situations:

- After making any configuration changes in a network
- Before upgrading to a new system software release

Execution on a Routing Node

In a routing network, **savecnf** saves a configuration image for one node or all routing nodes (*node_name = **) on the Cisco WAN Manager workstation specified by *dest_SV_node*.

Execution on an IGX/AF Interface Shelf

To execute **savecnf** on an IGX/AF, either telnet to the shelf or use a control terminal attached to it: **savecnf** saves a configuration image of only the current shelf. The image is stored on the workstation with the IP address in the parameter *dest_SV_ip*. (In a routing network, *dest_SV_ip* is not necessary.) Note that *node_name* and *dest_SV_node* must *both* be the name of the shelf. The IP address of the destination Cisco WAN Manager workstation uniquely identifies where to store the configuration image.

setfpevt (Set FastPAD Event Reporting)

The **setfpevt** command enables the reporting of FastPAD events.

Attributes

Jobs: No Log: Yes Lock: Yes Node Type: IGX

Associated Commands

clrfpevt, **dsplog**

Syntax

```
setfpevt <slot.port>
```

<slot.port> Specifies the slot and port of the FastPAD.

Function

Executing **setfpevt** restarts FastPAD event logging after you have stopped logging by using **clrfpevt**.

The reason for executing **clrfpevt** is to prevent the large number of logged events that accumulate when certain user-controlled disruptions occur. Without suspension of event-logging, the number of events caused by the disruption can cause the FastPAD to become unreachable. Examples of these events are

- FTM Y-cable switchover
- NPM/NPC switchovers
- Adding a connection by using the **addrcons** command
- Resetting the FastPAD (power cycling or by the **resetfp** command)

Example

```
setfpevt 9.3
```

Description

The example command resumes event logging for the FastPAD connected to port 9.3.

Note No screen appears when **setfpevt** executes. The example shows the **dsplog** output after a sequence of **clrfpevt** then **setfpevt**. Earlier FastPAD events appear near the bottom of the screen.

Figure 1-108 illustrates a typical report of FastPAD events.

Figure 1-108 setfpevt—Set FastPAD Event Reporting

```
sw152          TN      SuperUser      IGX 8420      9.2 Nov. 26 1998 15:14 GMT

Most recent log entries (most recent at top)
Class  Description                                     Date      Time
Info   FP fp93 event: 9.3.B grp:0-0 code:12         11/26/97  15:13:28
Info   FP fp93 event: 9.3.B grp:0-0 code:1           11/26/97  15:13:28
Info   User SuperUser logged in (Local)              11/26/97  14:28:40
Info   User SuperUser logged in (Local)              11/26/97  12:56:49
Info   Invalid Login Attempt via LAN Port (Local)    11/26/97  12:56:46
Info   User SuperUser logged in (Local)              11/26/97  11:31:51
Info   AD 9.2.3 dallas COM OK (Kickoff)              11/26/97  11:23:17
Info   AD 9.2.3 dallas Unreachable                   11/26/97  10:59:32
Info   AD 9.2.3 dallas COM OK (Kickoff)              11/26/97  10:56:54
Info   FP fp93 event: 9.3.B grp:0-0 code:12         11/25/97  18:16:45
Info   FP fp93 event: 9.3.B grp:0-0 code:1           11/25/97  18:16:45

Last Command: dsplog

Next Command:
```

tststats (Test Statistics)

The **tststats** command displays a summary of the test statistics that result from performing a **tstcon** command on various network connections.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX, BPX

Associated Commands

tstcon

Syntax

tststats [clear]

[clear] Specifies that the test statistics buffers be cleared.

Function

Before **tststats** displays any meaningful statistics, the **tstcon** command must run on one or more network connections. Refer to the *Cisco WAN Switching Command Reference* for information on the **tstcon** command. The following are displayed for voice, data, and Frame Relay connections.

- Tests Completed, Passed, Failed, and Aborted.
- Failure data per failed connection (applies only to voice connections).
- Slot.channel—Indicates which connection has failed.
- Good reads—Indicates number of good reads on the test failure.
- Bad reads—Indicates number of bad reads on the test failure.

Figure 1-109 illustrates a typical test statistics display.

Note The **tstcon** command should have run before you enter **tststats**.

Figure 1-109 tststats—Display Test Statistics

sw150 TN SuperUser IGX 8420 9.2 Aug. 1 1998 21:54 GMT

Connection Test results since: Date/Time Not Set

Type	Total	Passed	Failed	Aborted
Voice	0	0	0	0
Data	0	0	0	0
Fr Relay	0	0	0	0

Last Command: tststats

Next Command:

tstbadubus

You can use the **tstbadubus** command to test an NTM corruption problem. It can be used any time you encounter a possible cell drop problem. Issue the **tstbadubus** command to make sure the problem is not caused by the UBU allocation.

Attributes

Jobs: Yes Log: Yes Lock: Yes Node Type: IGX

Associated Commands

dspbusbw, **cnfbusbw**

Syntax

tstbadubus

Function

The **tstbadubus** command checks every allocated UBU to see if the above problem exists. If an allocation problem is detected, the falsely allocated UBUs will be displayed.

Tests the NTM-UXM/NPM UBU corruption problem.

The NTM card has been known to corrupt Lane 1 of its previous UBU. But it only affects the cells, not FastPackets. Thus it may corrupt data for the UXM card (cells) and NPM (AAL5 cells) if their UBUs are located in front of the one for the NTM card.

For example, if UBU 2 is used by the NTM, the cells (not FastPackets) in Lane 1 of UBU 1 will be corrupted. Because the UXM and NPM are the only cards using the cells in the bus, the UBU immediately before the one used by NTM cannot be allocated to the UXM or NPM.

The UBU allocation software will not assign UBUs for a UXM and an NPM card, if it is next to the one for NTM (to avoid the problem mentioned above).

The **tstbadubus** command checks every allocated UBU to see if the above problem exists. If an allocation problem is detected, the falsely allocated UBUs will be displayed.

Workaround

If the **tstbadubus** screen shows something similar to the screen in Example 1, then reallocating the UBU to slot 8 may cure the problem.

Issue the **dspbusbw <8>** command to see how many UBUs are currently allocated to slot 8. If the allocated UBU is 10, then always add one more UBU to the card. Use **cnfbusbw <8> <11>** to allocate 11 UBUs to slot 8. Most of the time, this change can remove the corruption condition.

If the problem persists, then add two more UBUs to the card. The idea is that by adding one or two more UBUs to the card, the UBU locations to be allocated change, which may cure the problem. Reallocating one or two fewer UBUs may also work.

Full Name

Test NTM corruption problem

Syntax
tstbadubus

Related Commands
dspbusbw, cnfbusbw

Example 1
tstbadubus

Description
The 24th UBU in page 3 was “badly” allocated (causing corruption). It is allocated to the NTM located at slot 4. This UBU corrupts the UBU allocated to the UXM located at slot 8. A cell drop will be expected for slot 8 due to the corruption.

Figure 1-110 shows the system response to the **tstbadubus** command.

Figure 1-110 tstbadubus System Response

```
sw152          TRM   SuperUser          IGX 8420  9.2.w3   Apr. 16 1999 15:13 GMT
NTM-UXM UBU Corruption Test
Page UBU  NTM  UXM  Page UBU  NTM  UXM  Page UBU  NTM  UXM  Page UBU  NTM  UXM
   3   24   4    8
Total      1 Corrupted UBUs detected
Last Command: tstbadubus
```

Figure 1-111 shows the system response to an NTM corruption problem.

Figure 1-111 tstbadubus—Test NTM Corruption Problem

```
sw150          TN      SuperUser      IGX 8420    9.2      Aug. 1 1998  21:54 GMT
```

```
Connection Test results since: Date/Time Not Set
```

Type	Total	Passed	Failed	Aborted
Voice	0	0	0	0
Data	0	0	0	0
Fr Relay	0	0	0	0

```
Last Command: tststats
```

```
Next Command:
```

upggrp (Upgrade Groups)

The **loadrev** and **runrev** commands take “upgrade group” names as arguments, allowing you to upgrade any subset of nodes at the same time.

Previous to Release 9.1, you could specify either a single node name, or an ‘*’ (asterisk) to specify all nodes in the network, as an argument to **runrev** or **loadrev**. An “upgrade group” is a list of nodes, which could be all nodes in the network. Instead of running **runrev** for each node to be upgraded, upgrading an entire group of nodes at one time leads to a synchronized upgrade process (which the “staggered update mechanism” relies on). The staggered mechanism prevents a situation where many nodes send messages to a single node at the same time.

After an upgrade, each node requests information from every node about its topology and connection database to compensate for any errors or race conditions that may occur during the upgrade. Every node sends its messages to only one node during a given interval. If all nodes start sending these updates at the same time (and the interval is configured the same on all nodes), then all nodes will send messages to different nodes as everyone has a different node number. Whenever the interval ends, they start sending to a node with the next node number. If they would not start at the same time, there would be overlaps as one node could be in its first interval, whereas others are already in the second or third interval.

If all nodes start at the same time, it is guaranteed that one node will exchange updates with only one other node during a given interval, reducing the amount of stress that would occur when multiple nodes send updates to one node at the same time.

Attributes

Jobs: No Log: No Lock: No Node Type: IGX, BPX

Associated Commands

dsprevs, **cnfdlparm**, **loadrev**, **runrev**

Syntax

upggrp [-c[reate] | -d[ele]te] | -s[how]] <group_name>

upggrp [-a[dd] -r[emove]] <group_name> <node_list>

Function

This command creates a group of nodes to be upgraded by the **loadrev** and **runrev** commands. To create an upgrade group type

upggrp -c <group name>

You can create up to 20 upgrade groups. Naming the upgrade groups follows the same convention as for node names; that is, choose group names that are different from the node names in the network. If **loadrev** or **runrev** encounter a name conflict, the commands chose the node name interpretation.

Note Upgrade groups are only known on the node where they are created. They are neither sent to the Standby, nor saved in BRAM. It is assumed they are needed for a short time only. Once the upgrade is done, you can delete the groups.

To delete an upgrade group that is no longer needed, enter:

```
upggrp -d <group name>
```

This frees up the resources used by that group.

To show (list) the currently defined upgrade groups, enter:

```
upggrp -s
```

To list all the member nodes of a group, enter:

```
upggrp -s <group name>
```

To add several nodes to an upgrade group, enter:

```
upggrp -a <group name> <node 1> <node 2> ...
```

The length of the node list can be as long as the command line allows. If an entry is invalid, that is, it is not a valid node name or not a name of a node in the network, an error message prints, and the remainder of the node list is not processed. The nodes before the invalid node are added to the group.

After the command is executed, the members of the group are listed. You can add nodes to an upgrade group in multiple iterations.

To remove a node or several nodes from an upgrade group, enter:

```
upggrp -r <group name> <node 1> <node 2> ...
```

The length of the node list can be as long as the command line allows. If an entry is invalid, that is, it is not a valid node name or not the name of a node in the net, an error message is printed, and the remainder of the node list is not processed. The nodes before the invalid node name are removed from the group. After the command is executed, the members of the group are listed.

Table 1-62 describes the parameters of the **upggrp** command.

Table 1-62 upggrp Command Parameters

Parameters	Description
<code>upggrp -d[delete] <group name></code>	delete a user group
<code>upggrp -s[how] [<group name>]</code>	show the defined upgrades group(s)
<code>upggrp -a[ddnode] <group name> <list of node names></code>	add nodes to the group
<code>upggrp -r[emovencode] <group name> <list of node names></code>	remove list of nodes from group

