



Mounting Instructions for Aironet 4500 and 4800 Series Access Points

March 1, 2000

This document provides instructions for mounting Aironet 4500 and 4800 Series Access Points.



Note

This document does not apply to Cisco Aironet 340 Series Access Points. The mounting hardware in the kit described in this document does not fit Cisco Aironet 340 Series Access Points.

Contents


- “Installation Notes” section on page 2
- “Assembly Instructions” on page 3.




Installation Notes

Kit #420-001833 Contents


- #530-001827 Mounting Plate 1pc
- #535-001831 Antenna clamp, complete 1pc
- #535-001832 Beam clamps 2pcs
- #570-001861 Unit mounting screws 4pcs
- #570-001862 Beam clamp mounting screws 2pcs

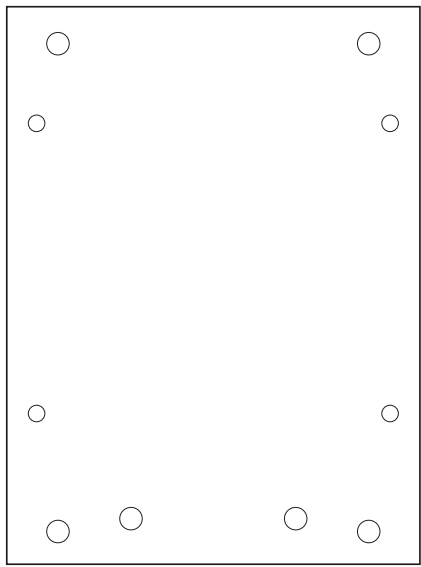


Mounting plate
530-001827

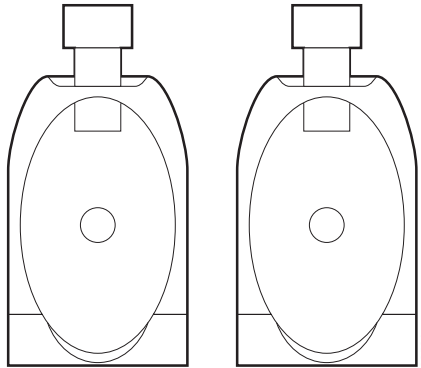


Beam clamps
535-001832

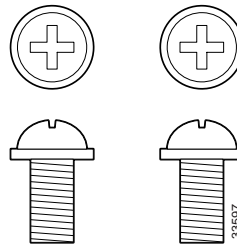

Beam clamp
mounting screws
(1/4-20 x 3/8")
570-001862

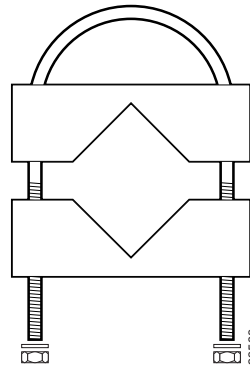


Antenna
clamp kit
535-001831

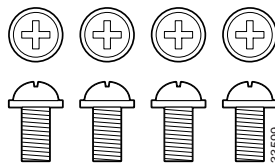

Unit
mounting screws
(8-32 x 5/16")
570-001861

Assembly Instructions

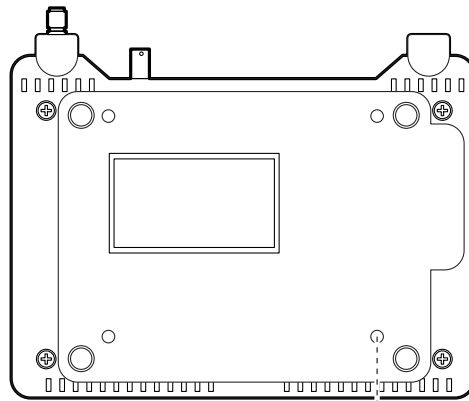

Assembly Instructions:

1. Fasten beam clamps to mounting plate in two positions as shown.
2. Attach plate to device in four locations.
3. Attach antenna clamp to plate. Do not tighten.
4. Slide antenna through clamp and tighten.
5. Attach antenna connector to device.

