

# Understanding the User Interface

---

The communication server user interface provides several different command modes. Each command mode provides a group of related commands. This chapter describes how to access and list the commands available in each command mode.

In addition to actions that can be carried out through commands, the user interface also allows an administrator of a communication server to create menus so that users can use communication server features without having to know anything about the underlying communication server user interface. This chapter also describes how create and use menus.

For a complete description of the commands mentioned in this chapter, refer to the “User Interface Commands” chapter in the *Access and Communication Servers Command Reference* publication. For information about configuring terminal lines refer to the chapter “Configuring Terminal Lines and Modem Support” later in this publication. For information about setting terminal and line parameters for a session, refer to the “Changing Terminal Parameters” chapter of the *Cisco Access Connection Guide*.

The command interpreter is called the EXEC. The EXEC interprets the commands you type and carries out the corresponding operations. You must log in to the communication server before you can enter an EXEC command. For security purposes, the EXEC has two levels of access to commands: *user* and *privileged*. The EXEC commands available at the user level are a subset of the EXEC commands available at the privileged level. From the privileged level, you can also access global configuration mode and six specific configuration modes: interface, subinterface, line, router, ipx-router, and route-map configuration.

Almost every system configuration command also has a **no** form. In general, use the **no** form to disable a feature or function. Use the command without the keyword **no** to reenable a disabled feature or enable a feature that is disabled by default. For example, IP routing is enabled by default. Specify the command **no ip routing** to disable IP routing and specify **ip routing** to reenable it. The *Access and Communication Servers Command Reference* publication provides the complete syntax for every command and describes what the **no** form of a command does.

If your communication server does not find a valid system image, or if its configuration file is corrupted at startup, the system might enter read-only memory (ROM) monitor mode. A brief description of the ROM monitor mode is included in this chapter.

The user interface also provides context-sensitive help on command syntax. This chapter describes how to use the help system. It also describes the command editing and command history features that enable you to recall previous command entries and easily edit command entries.

Entering a **question mark (?)** at the system prompt allows you to obtain a list of commands available for each command mode.

## User Interface Task List

You can perform the tasks in the following sections to become familiar with the communication server’s user interface and create user menus:

- Access Each Command Mode
- Get Context-Sensitive Help
- Check Command Syntax
- Use the Command History Features
- Use the Editing Features
- Create Menus

## Access Each Command Mode

This section describes how to access each of the communication server’s command modes:

- User EXEC Mode
- Privileged EXEC Mode
- Global Configuration Mode
- Interface Configuration Mode
- Subinterface Configuration Mode
- Line Configuration Mode
- Router Configuration Mode
- IPX Router Configuration Mode
- Route-Map Configuration Mode
- ROM Monitor Mode

Table 2-1 lists the command modes, how to access each mode, the prompt you will see while you are in that mode, and the method to exit that mode. The prompts listed assume the default communication server name, *cs*.

**Table 2-1 Summary of Command Modes**

Command Mode	Access Method	Prompt	Exit Method
User EXEC	Log in to communication server.	<i>cs</i> >	Use the <b>logout</b> command.
Privileged EXEC	From user EXEC mode, use the <b>enable</b> EXEC command.	<i>cs</i> #	To exit back to user EXEC mode, use the <b>disable</b> command. To exit into global configuration mode, use the <b>configure</b> privileged EXEC command.
Global configuration	From privileged EXEC mode, use the <b>configure</b> privileged EXEC command.	<i>cs(config)</i> #	To exit to privileged EXEC mode, use the <b>exit</b> or <b>end</b> command or press <b>Ctrl-Z</b> . To exit to interface configuration mode, enter an <b>interface</b> configuration command.

Command Mode	Access Method	Prompt	Exit Method
Interface configuration	From global configuration mode, enter by specifying an interface with an <b>interface</b> command.	<code>cs(config-if)#</code>	To exit to global configuration mode, use the <b>exit</b> command. To exit to privileged EXEC mode, press <b>Ctrl-Z</b> . To exit to subinterface configuration mode, specify a subinterface with the <b>interface</b> command.
Subinterface configuration	From global configuration mode, specify a subinterface with an <b>interface</b> command.	<code>cs(config-subif)#</code>	To exit to global configuration mode, use the <b>exit</b> command. To exit to privileged EXEC mode, press <b>Ctrl-Z</b> .
Hub configuration	From global configuration mode, enter by specifying a hub with the <b>hub</b> command.	<code>cs(config-hub)#</code>	To exit to global configuration mode, use the <b>exit</b> command. To exit to privileged EXEC mode, press <b>Ctrl-Z</b> .
Line configuration	From global configuration mode, enter by specifying a line with a <b>line</b> command.	<code>cs(config-line)#</code>	To exit to global configuration mode, use the <b>map-class</b> command. To exit to privileged EXEC mode, press <b>Ctrl-Z</b> .
Router configuration	From global configuration mode, enter by entering a command that begins with <b>router</b> (such as <b>router igrp</b> ).	<code>cs(config-router)#</code>	To exit to global configuration mode, use <b>exit</b> command. To exit to privileged EXEC mode, press <b>Ctrl-Z</b> .
IPX-router configuration	From global configuration mode, enter by issuing the <b>ipx routing</b> command, then a command that begins with <b>ipx router</b> (such as <b>ipx router eigrp</b> ).	<code>cs(config-ipx-router)#</code>	To exit to global configuration mode, use the <b>exit</b> command.
Route-map configuration	From global configuration mode, enter by specifying the <b>route-map</b> command.	<code>cs(config-route-map)#</code>	To exit to global configuration mode, use the <b>exit</b> command. To exit to privileged EXEC mode, press <b>Ctrl-Z</b> .
ROM monitor	From privileged EXEC mode, use the <b>reload</b> EXEC command. Press Break during the first 60 seconds while the system is booting.	<code>&gt;</code>	To exit to user EXEC mode, press <b>c</b> to continue.

## User EXEC Mode

After you log in to the communication server, you are automatically in user EXEC command mode. The EXEC commands available at the user level are a subset of those available at the privileged level. In general, the user EXEC commands allow you to establish connections, change terminal settings on a temporary basis, perform basic tests, and list system information.

To list the user EXEC commands, complete the following task:

Task	Command
List the user EXEC commands.	<code>?</code>

The user-level prompt consists of the communication server's host name followed by the angle bracket (`>`):

```
cs>
```

The default host name is `cs`, unless it has been changed during initial configuration using the **setup** command. (Refer to the *Access and Communication Servers Getting Started Guide* for information on the setup facility.) You can also change the communication server name using the **hostname global configuration** command described in the “Managing the System” chapter, later in this publication, and in the “System Management Commands” chapter in the *Access and Communication Servers Command Reference* publication.

To list the commands available in user EXEC mode, enter a question mark (?) as shown in the following example:

```
cs> ?
Exec commands:
<1-99>          Session number to resume
connect         Open a terminal connection
disconnect      Disconnect an existing telnet session
enable         Turn on privileged commands
exit           Exit from the EXEC
help           Description of the interactive help system
lat           Open a lat connection
lock           Lock the terminal
login          Log in as a particular user
logout         Exit from the EXEC
menu          Start a menu-based user interface
mbranch       Trace multicast route for branch of tree
mrbranch      Trace reverse multicast route to branch of tree
mtrace        Trace multicast route to group
name-connection Name an existing telnet connection
pad         Open a X.29 PAD connection
ping          Send echo messages
resume        Resume an active telnet connection
show         Show running system information
systat       Display information about terminal lines
telnet       Open a telnet connection
terminal     Set terminal line parameters
tn3270      Open a tn3270 connection
trace      Trace route to destination
where        List active telnet connections
x3         Set X.3 parameters on PAD
xremote    Enter XRemote mode
```

The list of commands might vary slightly from this example, depending upon how your communication server has been configured.

## Privileged EXEC Mode

Because many of the privileged commands set operating parameters, privileged access should be password-protected to prevent unauthorized use. The privileged command set includes those commands contained in user EXEC mode, as well as the **configure** command through which you can access the remaining command modes. Privileged EXEC mode also includes high-level testing commands, such as **debug**. For details on the **debug** command, see the *Debug Command Reference* publication.

To access and list the privileged EXEC commands, complete the following tasks:

Task	Command
<b>Step 1</b> Enter the privileged EXEC mode.	<code>enable</code> <code>[password]</code>
<b>Step 2</b> List privileged EXEC commands.	<code>?</code>

If the system administrator has set a password, you are prompted to enter it before being allowed access to privileged EXEC mode. The password is not displayed on the screen and is case sensitive. The system administrator uses the **enable password global configuration** command to set the password that restricts access to privileged mode. This command is described in the “System Management Commands” chapter in the *Access and Communication Servers Command Reference* publication.

The privileged-level prompt consists of the communication server’s host name followed by the pound sign (#). (If the communication server was named with the **hostname** command, that name would appear as the prompt instead of “cs.”)

```
cs#
```

The following example shows how to access privileged EXEC mode and list privileged EXEC commands:

```
cs> enable
Password:
cs# ?
Exec commands:
<1-99>          Session number to resume
bfe             For manual emergency modes setting
clear          Reset functions
clock          Manage the system clock
configure      Enter configuration mode
connect        Open a terminal connection
copy           Copy a config file to or from a tftp server
debug          Debugging functions
disable        Turn off privileged commands
disconnect     Disconnect an existing telnet session
enable         Turn on privileged commands
exit           Exit from the EXEC
help           Description of the interactive help system
lat            Open a lat connection
llc2           Execute llc2 tests
lock           Lock the terminal
login          Log in as a particular user
logout         Exit from the EXEC
menu           Start a menu-based user interface
name-connection Name an existing telnet connection
pad            Open a X.29 PAD connection
ping           Send echo messages
reload         Halt and perform a cold restart
resume        Resume an active telnet connection
send           Send a message to other tty lines
setup          Run the SETUP command facility
show           Show running system information
sysstat        Display information about terminal lines
telnet         Open a telnet connection
terminal       Set terminal line parameters
test           Test subsystems, memory, and interfaces
tn3270         Open a tn3270 connection
trace          Trace route to destination
undebug        Disable debugging functions (see also 'debug')
where          List active telnet connections
which-route    Do route table lookup and display results
write          Write running configuration to memory, network, or terminal
x3             Set X.3 parameters on PAD
xremote        Enter XRemote mode
```

The list of commands might vary slightly from this example, depending upon how your communication server has been configured.

From the privileged level, you can access global configuration mode. For instructions, see “Global Configuration Mode,” which follows this section.

To return from privileged EXEC mode to user EXEC mode, perform the following task:

Task	Command
Move from privileged EXEC mode to user EXEC mode.	<b>disable</b>

## Global Configuration Mode

Global configuration commands apply to features that affect the system as a whole. Use the **configure** privileged EXEC command to enter global configuration mode. When you enter this command, the EXEC prompts you for the source of the configuration commands:

Configuring from terminal, memory, or network [terminal]?

You can then specify either the terminal, nonvolatile memory (NVRAM), or a file stored on a network server as the source of configuration commands (see the “System Image and Configuration File Load Commands” chapter in the *Access and Communication Servers Command Reference publication*). The default is to enter commands from the terminal console. Pressing the Return key begins this configuration method.

To access and list the global configuration commands, complete the following tasks:

Task	Command
<b>Step 1</b> At the terminal, from the privileged EXEC mode, enter global configuration mode.	<b>configure {terminal   memory   network}</b> <sup>1</sup> <CR>
<b>Step 2</b> List the global configuration commands.	?

1. This command is documented in the “System Image and Configuration File Load Commands” chapter in the *Access and Communication Servers Command Reference publication*.

The following example shows how to access global configuration mode and list global configuration commands:

```

cs# configure
Configuring from terminal, memory, or network [terminal]? <CR>
Enter configuration commands, one per line. End with CNTL/Z.
cs(config)# ?
Configure commands:
  access-list      Add an access list entry
  arp              Set a static ARP entry
  async-bootp     Modify system bootp parameters
  autonomous-system Specify local AS number to which we belong
  banner          Define a login banner
  boot            Modify system boot parameters
  buffers         Adjust system buffer pool parameters
  busy-message    Display message when connection to host fails
  chat-script     Define a modem chat script
  clock           Configure time-of-day clock
  default-value   Default character-bits values
  dialer-list     Create a dialer list entry
  dnsix-dmdp     Provide DMDP service for DNSIX
  dnsix-nat      Provide DNSIX service for audit trails
  enable         Modify enable password parameters
  end            Exit from configure mode
  exit           Exit from configure mode
  frame-relay    Global frame relay configuration commands
    
```

help	Description of the interactive help system
hostname	Set system's network name
interface	Select an interface to configure
ip	Global IP configuration subcommands
ipx	Novell/IPX global configuration commands
keymap	Define a new keymap
lat	DEC Local Area Transport (LAT) transmission protocol
line	Configure a terminal line
logging	Modify message logging facilities
login-string	Define a host-specific login string
menu	Define a user-interface menu
mop	The DEC MOP Server
no	Negate a command or set its defaults
ntp	Configure NTP
priority-list	Build a priority list
queue-list	Build a custom queue list
route-map	Create route-map or enter route-map command mode
router	Enable a routing process
scheduler-interval	Maximum interval before running lowest priority process
service	Modify use of network based services
smt-queue-threshold	Set the max number of unprocessed SMT frames
snmp-server	Modify SNMP parameters
state-machine	Define a TCP dispatch state machine
tacacs-server	Modify TACACS query parameters
tftp-server	Provide TFTP service for netload requests
timezone	Configure time zone
tn3270	tn3270 configuration command
translate	Translate global configuration commands
ttycap	Define a new termcap
username	Establish User Name Authentication
x25	X.25 Level 3
x29	X29 commands
xns	XNS global configuration commands
xremote	Configure XRemote

The list of commands might vary slightly from this example, depending upon how your communication server has been configured.

To exit global configuration command mode and return to privileged EXEC mode, use one of the following commands:

Task	Command
Exit global configuration mode.	<b>exit</b> <b>end</b> <b>Ctrl-Z</b>

From global configuration mode you can access six configuration sublevels: interface, subinterface, line, router, ipx-router, and route-map configuration commands. These command modes are described in the following sections.

## Interface Configuration Mode

Many features are enabled on a per-interface basis. Interface configuration commands modify the operation of an interface such as an Ethernet or serial port. Interface configuration commands always follow an **interface** command, which defines the interface type.

For details on interface configuration commands that affect general interface parameters, such as **bandwidth**, clock rate, and so on, see the “Configuring Interfaces” chapter. For protocol-specific commands, see the appropriate chapter in this guide.

To access and list the interface configuration commands, complete the following tasks:

Task	Command
<b>Step 1</b> From global configuration mode, enter interface configuration mode.	<b>interface</b> <i>interface-type interface-number</i> <sup>1</sup>
<b>Step 2</b> List the interface configuration commands.	<b>?</b>

1. This command is documented in the “Interface Commands” chapter in the *Access and Communication Servers Command Reference* publication.

In the following example, serial interface 0 is about to be configured. The new prompt `cs(config-if)#` indicates interface configuration mode. In this example, the user asks for help by requesting a list of commands.

```
cs(config)# interface serial 0
cs(config-if)# ?
Interface configuration commands:
arp                Set arp type (arpa, probe, snap) or timeout
async             Async interface parameters
backup            Modify dial-backup parameters
bandwidth         Set bandwidth informational parameter
clockrate         Configure serial interface clock speed
custom-queue-list Assign a custom queue list to an interface
delay             Specify interface throughput delay
description       Interface specific description
dialer            Dial-on-demand routing (DDR) commands
dialer-group      Assign interface to dialer-list
down-when-looped Force looped serial interface down
encapsulation     Set encapsulation type for an interface
exit              Exit from interface configuration mode
frame-relay       Set frame relay parameters
hdh               Set HDH mode
help              Description of the interactive help system
hold-queue        Set hold queue depth
ip                Interface Internet Protocol config commands
ipx               Novell interface subcommands
keepalive         Enable keepalive
lapb              X.25 Level 2 parameters (Link Access Procedure, Balanced)
lat               LAT commands
llc2              LLC2 Interface Subcommands
loopback          Configure internal loopback on an interface
mac-address       Manually set interface MAC address
mop               DEC MOP server commands
mtu               Set the interface Maximum Transmission Unit (MTU)
no                Negate a command or set its defaults
ntp               Configure NTP
ppp               Point-to-point protocol
priority-group    Assign a priority group to an interface
pulse-time        Enables pulsing of DTR during resets
sdlc              SDLC commands
sdllc             Configure SDLC to LLC2 translation
shutdown          Shutdown the selected interface
smds              Modify SMDS parameters
transmit-interface Assign a transmit interface to a receive-only interface
transmitter-delay Set dead-time after transmitting a datagram
tunnel            protocol-over-protocol tunneling
tx-queue-limit   Configure card level transmit queue limit
xns               XNS interface subcommands
```

The list of commands might vary slightly from this example, depending upon how your communication server has been configured.



To exit interface configuration mode and return to global configuration mode, enter the **exit** command. To exit configuration mode and return to privileged EXEC mode, press **Ctrl-Z**.

## Subinterface Configuration Mode

You can configure multiple virtual interfaces (called subinterfaces) on a single physical interface. This feature is supported on serial interfaces with Frame Relay encapsulation.

Subinterfaces appear to be distinct physical interfaces to the various protocols. For example, Frame Relay networks provide multiple point-to-point links called permanent virtual circuits (PVCs). PVCs can be grouped under separate subinterfaces that in turn are configured on a single physical interface.

Subinterfaces also allow multiple encapsulations for a protocol on a single interface. For example, a communication server can receive an ARPA-framed IPX packet and forward the packet back out the same physical interface as a SNAP-framed IPX packet.

For detailed information on how to configure subinterfaces, see the “Configuring Interfaces” chapter later in this publication.

To access and list the subinterface configuration commands, complete the following tasks:

Task	Command
<b>Step 1</b> From interface configuration mode, configure a virtual interface.	See the example that follows. For a list of all interface commands that allow subinterface implementation, see the “Configuring Interfaces” chapter.
<b>Step 2</b> List the subinterface configuration commands.	?

In the following example, a subinterface is configured for serial line 2, which is configured for Frame Relay encapsulation. The subinterface is called 2.1 to indicate that it is subinterface 1 of serial interface 2. The new prompt `cs(config-subif)#` indicates subinterface configuration mode. The subinterface can be configured to support one or more Frame Relay PVCs. To list the commands available in subinterface configuration mode, enter a question mark (?).

```

cs(config)# interface serial 2
cs(config-if)# encapsulation frame-relay
cs(config-if)# interface serial 2.1
cs(config-subif)# ?
Interface configuration commands:
  appletalk      Appletalk interface subcommands
  bandwidth      Set bandwidth informational parameter
  bridge-group   Transparent bridging interface parameters
  clns           CLNS interface subcommands
  decnet         Interface DECnet config commands
  delay          Specify interface throughput delay
  description    Interface specific description
  exit           Exit from interface configuration mode
  frame-relay    Set frame relay parameters
  ip             Interface Internet Protocol config commands
  ipx           Novell interface subcommands
  no             Negate a command or set its defaults
  ntp           Configure NTP
  shutdown       Shutdown the selected interface

```

The list of commands might vary slightly from this example depending upon how your communication server has been configured.

To exit subinterface configuration mode and return to global configuration mode, enter the **exit** command. To exit configuration mode and return to privileged EXEC mode, press **Ctrl-Z**.

## Line Configuration Mode

Line configuration commands modify the operation of a serial terminal line. Line configuration commands always follow a **line** command, which defines a line number. These commands are generally used to establish connections and change terminal parameter settings on a line-by-line basis to support dial-on-demand routing (DDR) (see the “Dial-on-Demand Routing Commands” chapter in the *Access and Communication Servers Command Reference* publication).

To access and list the auxiliary port, console port, virtual terminal, and tty line configuration commands, complete the following tasks:

Task	Command
<b>Step 1</b> From global configuration mode, configure an auxiliary, console, virtual terminal or tty line.	<b>line</b> [aux   console   tty   vty] line-number [ending-line-number] <sup>1</sup>
<b>Step 2</b> List the line configuration commands.	?

1. This command is documented in the “Terminal Lines and Modem Support Commands” chapter in the *Access and Communication Servers Command Reference* publication.

The following example shows how to enter line configuration mode for asynchronous line 7 and list the line configuration commands:

```

cs(config)# line tty 7
cs(config-line)# ?
Line configuration commands:
absolute-timeout      Set absolute timeout for line disconnection
access-class          Filter connections based on an IP access list
activation-character   Define the activation character
arap                  AppleTalk Remote Access Protocol
autobaud              Set line to autobaud
autocommand           Automatically execute an EXEC command
autohangup           Automatically hangup when last connection closes
autoselect            Set line to autoselect
data-character-bits   Size of characters being handled
databits              Set number of data bits per character
disconnect-character  Define the disconnect character
dispatch-character    Define the dispatch character
dispatch-machine      Reference a TCP dispatch state machine
dispatch-timeout      Set the dispatch timer
editing               Enable command line editing
escape-character      Change the current line's escape character
exec                  Start an EXEC process
exec-banner           Enable the display of the EXEC banner
exec-character-bits   Size of characters to the command exec
exec-timeout          Set the EXEC timeout
exit                  Exit from line configuration mode
flowcontrol           Set the flow control
full-help             Provide help to unprivileged user
help                  Description of the interactive help system
history               Set the size of the command history buffer
hold-character        Define the hold character
insecure              Mark line as 'insecure' for LAT
keymap-type           Specify a keymap entry to use
lat                   DEC Local Area Transport (LAT) protocol-specific
configuration
length                Set number of lines on a screen
    
```

location	Enter terminal location description
lockable	Allow users to lock a line
logging	Modify message logging facilities
login	Enable password checking
logout-warning	Set warning countdown for absolute timeout of line
modem	Configure the Modem Control Lines
monitor	Copy debug output to the current terminal line
no	Negate a command or set its defaults
notify	Inform users of output from concurrent sessions
padding	Set padding for a specified output character
parity	Set terminal parity
password	Set a password
private	Configuration options that user can set will remain in effect between terminal sessions
refuse-message	Define a refuse banner
rotary	Add line to a rotary group
rxspeed	Set the receive speed
script	Specify event-related chat scripts to run on the line
session-limit	Set maximum number of sessions
session-timeout	Set interval for closing connection when there is no input traffic
special-character-bits	Size of the escape (and other special) characters
speed	Set the transmit and receive speeds
start-character	Define the start character
stop-character	Define the stop character
stopbits	Set async line stop bits
telnet	Telnet protocol-specific configuration
telnet-transparent	Send a CR as a CR followed by a NULL instead of a CR followed by a LF
terminal-type	Set the terminal type
transport	Define transport protocols for line
txspeed	Set the transmit speeds
vacant-message	Define a vacant banner
width	Set width of the display terminal

The list of commands might vary from this example, depending upon how your communication server has been configured.

To exit line configuration mode and return to global configuration mode, use the **exit** command. To exit configuration mode and return to privileged EXEC mode, press **Ctrl-Z**.

## Router Configuration Mode

Router configuration commands configure a routing protocol and always follow a **router** command. To access and list the router configuration commands, complete the following tasks:

Task	Command
<b>Step 1</b> From global configuration mode, enter router configuration mode.	<b>router</b> [ <i>keyword</i> ] <sup>1</sup> See the list in the example for keywords.
<b>Step 2</b> List the router configuration commands.	<b>?</b>

1. This command is documented in the “IP Routing Protocols Commands” chapter in the *Access and Communication Servers Command Reference* publication.

To list the available router configuration keywords, enter the **router** command followed by a space and a question mark (?) at the global configuration prompt:

```
cs(config)# router ?
  bgp      Border Gateway Protocol (BGP)
  egp      Exterior Gateway Protocol (EGP)
  igrp     Interior Gateway Routing Protocol (IGRP)
```

```
eigrp      Enhanced Interior Gateway Routing Protocol (EIGRP)
isis       ISO IS-IS
iso-igrp   IGRP for OSI networks
ospf       Open Shortest Path First (OSPF)
rip        Routing Information Protocol (RIP)
static     Static CLNS Routing
```

In the following example, the communication server is configured to support the Routing Information Protocol (RIP). The new prompt is `cs(config-router)#`. Enter a question mark (?) to list router configuration commands.

```
cs(config)# router rip
cs(config-router)# ?
router configuration commands:
  default-metric      Set metric of redistributed routes
  distance            Define an administrative distance
  distribute-list     Filter networks in routing updates
  exit               Exit from routing protocol configuration mode
  help              Description of the interactive help system
  neighbor           Specify a neighbor router
  network            Enable routing on an IP network
  no                Negate or set default values of a command
  offset-list        Add or subtract offset from IGRP or RIP metrics
  passive-interface  Suppress routing updates on an interface
  redistribute       Redistribute information from another routing protocol
  timers             Adjust routing timers
  validate-update-source Perform sanity checks against source address of
                    routing updates
```

The list of commands might vary slightly from this example, depending upon how your communication server has been configured.

To exit router configuration mode and return to global configuration mode, enter the **exit** command. To exit configuration mode and return to privileged EXEC mode, press **Ctrl-Z**.

## IPX Router Configuration Mode

Internet Packet Exchange (IPX) is a Novell network-layer protocol. To access and list the IPX routing configuration commands, complete the following tasks:

Task	Command
<b>Step 1</b> From global configuration mode, enter ipx-router configuration mode.	<b>ipx router</b> [ <i>keyword</i> ] <sup>1</sup>
<b>Step 2</b> List the ipx-router configuration commands.	<b>?</b>

1. This command is documented in the "Novell IPX Commands" chapter in the *Access and Communication Servers Command Reference* publication.

In the following example, IPX RIP routing is configured. The new prompt is `cs(config-ipx-router):`

```
cs(config)# ipx router rip
cs(config-ipx-router)# ?
```

To exit IPX-router configuration mode and return to global configuration mode, enter the **exit** command. To exit configuration mode and return to privileged EXEC mode, press **Ctrl-Z**.

## Route-Map Configuration Mode

Use the route-map configuration mode to configure routing table and source and destination information. To access and list the **route-map** configuration commands, complete the following tasks:

Task	Command
<b>Step 1</b> From global configuration mode, enter route-map configuration mode.	<b>route-map</b> <i>map-tag</i> [[ <b>permit</b>   <b>deny</b> ]   [ <i>sequence-number</i> ]] <sup>1</sup>
<b>Step 2</b> List the route-map configuration commands.	<b>?</b>

1. This command is documented in the “IP Routing Protocols Commands” chapter in the *Access and Communication Servers Command Reference* publication.

In the following example, a route map named *arizona1* is configured. The new prompt is `cs(config-route-map)`. Enter a question mark (**?**) to list **route-map** configuration commands.

```
cs(config)# route-map arizona1
cs(config-route-map)# ?
Route Map configuration commands:
  exit      Exit from route-map configuration mode
  help      Description of the interactive help system
  match     Match values from routing table
  no        Negate or set default values of a command
  set       Set values in destination routing protocol
```

To exit route-map configuration mode and return to global configuration mode, enter the **exit** command. To exit configuration mode and return to privileged EXEC mode, press **Ctrl-Z**.

## ROM Monitor Mode

If your communication server does not find a valid system image, or if its configuration file is corrupted at startup, the system might enter read-only memory (ROM) monitor mode. From ROM monitor mode, you can boot the router or perform diagnostic tests.

On the Cisco 2500 Series access server, you can also enter ROM monitor mode by entering the **reload** EXEC command and then pressing the Break key during the first 60 seconds of startup. To save changes to the configuration file before reloading, use the **write memory** command before issuing the **reload** command.

To access and list the ROM monitor configuration commands, complete the following tasks:

Task	Command
<b>Step 1</b> Enter ROM monitor mode from privileged EXEC mode.	<b>reload</b> <sup>1</sup> Press Break during the first 60 seconds while the system is booting.
<b>Step 2</b> List the ROM monitor commands.	<b>?</b>

1. This command is documented in the “System Image and Configuration File Load Commands” chapter of the *Access and Communication Servers Command Reference* publication.

The ROM monitor prompt is an angle bracket (>). The following example shows how to list the ROM monitor commands.

```
> ?
$ state      Toggle cache state (? for help)
B [filename] [TFTP Server IP address | TFTP Server Name]
              Load and execute system image from ROM or from TFTP server
```

```

C [address] Continue execution [optional address]
D /S M L V Deposit value V of size S into location L with modifier M
E /S M L Examine location L with size S with modifier M
G [address] Begin execution
H Help for commands
I Initialize
K Stack trace
L [filename] [TFTP Server IP address | TFTP Server Name]
Load system image from ROM or from TFTP server, but do not
begin execution
O Show configuration register option settings
P Set the break point
S Single step next instruction
T function Test device (? for help)
Deposit and Examine sizes may be B (byte), L (long) or S (short).
Modifiers may be R (register) or S (byte swap).
Register names are: D0-D7, A0-A6, SS, US, SR, and PC
    
```

To return to user EXEC mode, enter **c** to continue. To boot the system image file, use the **b** command (described in the “System Image and Configuration File Load Commands” chapter in the *Access and Communication Servers Command Reference* publication). For details on other ROM monitor commands, refer to the appropriate hardware installation guide.

## Get Context-Sensitive Help

The previous sections described the first level of help available with the user interface. Entering a question mark (?) at the system prompt displays a list of commands available for each command mode. You can also get a list of any command’s associated keywords and arguments with the context-sensitive help feature.

To get help specific to a command mode, a command, a keyword, or arguments, perform one of the following tasks:

Task	Command
Obtain a brief description of the help system in any command mode.	help
Obtain help for the full set of user-level commands.	full-help
Obtain help for the full set of user-level commands in user EXEC mode.	terminal full-help
Obtain a list of commands that begin with a particular character string.	<i>abbreviated-command-entry?</i>
Complete a partial command name.	<i>abbreviated-command-entry&lt;Tab&gt;</i>
List all commands available for a particular command mode.	?
List a command’s associated keywords.	<i>command ?</i>
List a keyword’s associated arguments.	<i>command keyword ?</i>

When using context-sensitive help, the space (or lack of a space) before the question mark (?) is significant. To obtain a list of commands that begin with a particular character sequence, enter those characters followed immediately by the question mark (?). Do not include a space. This form of help is called *word help*, because it completes a word for you.

To list keywords or arguments, enter a question mark (?) in place of a keyword or argument. Include a space before the question mark (?). This form of help is called *command syntax help*, because it reminds you which keywords or arguments are applicable based on the command, keywords, and arguments you already have entered.

You can abbreviate commands and keywords to the number of characters that allow a unique abbreviation. For example, you can abbreviate the **show** command to **sh**.

Enter the **help** command (which is available in any command mode) for a brief description of the help system:

```
cs> help
Help may be requested at any point in a command by entering
a question mark '?'. If nothing matches, the help list will
be empty and you must back up until entering a '?' shows the
available options.
Two styles of help are provided:
1. Full help is available when you are ready to enter a
   command argument (e.g. 'show ?') and describes each possible
   argument.
2. Partial help is provided when an abbreviated argument is entered
   and you want to know what arguments match the input
   (e.g. 'show pr?'.)
```

As described in the **help** command output, you can enter a partial command name and a question mark (?) to obtain a list of commands beginning with a particular character set. See the section “Complete a Partial Command Name” later in this chapter for more details.

The following example illustrates how the context-sensitive help feature enables you to create an access list from configuration mode. First enter the letters **co** at the system prompt followed by a question mark (?). Do not leave a space between the last letter and the (?). The system provides the commands that begin with **co**.

```
cs# co?
configure connect copy
```

Enter the **configure** command followed by a space and a question mark (?) to list the command’s keywords and a brief explanation.

```
cs# configure ?
memory      Configure from NV memory
network     Configure from a TFTP network host
terminal    Configure from the terminal
<cr>
```

Enter the **terminal** keyword to enter configuration mode from the terminal:

```
cs# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
cs(config)#
```

Enter the **access-list** command followed by a space and a question mark (?) to list the command’s keywords:

```
cs(config)# access-list ?
<1-99>      IP standard access list
<100-199>   IP extended access list
<1000-1099> IPX SAP access list
<1100-1199> Extended 48-bit MAC address access list
<200-299>   Protocol type-code access list
<700-799>   48-bit MAC address access list
<800-899>   IPX standard access list
<900-999>   IPX extended access list
```

Enter the access list number **99** and then enter another question mark (?) to see the arguments that apply to the keyword and brief explanations:

```
cs(config)# access-list 99 ?
deny       Specify packets to reject
```

```
permit Specify packets to forward
```

Enter the **deny** keyword followed by a question mark (?) to list additional options:

```
cs(config)# access-list 99 deny ?
A.B.C.D Address to match
```

Enter the IP address followed by a question mark (?) to list additional options:

```
cs(config)# access-list 99 deny 131.108.134.0 ?
A.B.C.D Mask of bits to ignore
<cr>
```

The <cr> symbol appears in the list, indicating that one of your options is to press Return to execute the command. The other option is to add a wildcard mask. Enter the wildcard mask followed by a question mark (?) to list further options.

```
cs(config)# access-list 99 deny 131.108.134.0 0.0.0.255 ?
<cr>

cs(config)# access-list 99 deny 131.108.134.0 0.0.0.255
```

When you enter a question mark and there are no further options, only the <cr> symbol appears, indicating that there are no more keywords or arguments. Press **Return** to execute the command. The system adds an entry to access list 99 that denies access to all hosts on subnet 131.108.134.0.

## Check Command Syntax

The user interface provides syntax checking in the form of an error location indicator (^). The ^ character appears at the point in the command string where you have entered an incorrect command, keyword, or argument. The error location indicator and interactive help system allow you to easily find and correct syntax errors.

In the following example, suppose you want to set the router clock. First, use context-sensitive help to check the syntax for setting the clock.

```
cs# clock ?
set Set the time and date
cs# clock
```

The help output shows that the **set** keyword is required. Next, check the syntax for entering the time:

```
cs# clock set ?
hh:mm:ss Current time
cs# clock set
```

Enter the current time:

```
cs# clock set 13:32:00
% Incomplete command.
```

The system indicates that you need to provide additional arguments to complete the command. Press **Ctrl-P** (see the next section, “Use the Command History Features”) to automatically repeat the previous command entry. Then add a space and question mark (?) to reveal the additional arguments:

```
cs# clock set 13:32:00 ?
<1-31> Day of the month
January Month of the year
February
March
April
May
June
```



```

July
August
September
October
November
December

```

Now you can complete the command entry:

```

cs# clock set 13:32:00 23 February 93
      ^
% Invalid input detected at '^' marker.

```

The caret symbol (^) and help response indicate an error at 93. To list the correct syntax, enter the command up to the point where the error occurred and then enter a question mark (?):

```

cs# clock set 13:32:00 23 February ?
      <1993-2035> Year
cs# clock set 13:32:00 23 February

```

Enter the year using the correct syntax and press **Return** to execute the command.

```

cs# clock set 13:32:00 23 February 1993

```

## Use the Command History Features

With the current software release, the user interface provides a history or record of commands you have entered. This feature is particularly useful for recalling long or complex commands or entries, including access lists. With the command history feature, you can complete the tasks in the following sections:

- Set the Command History Buffer Size
- Recall Commands
- Disable the Command History Feature

### Set the Command History Buffer Size

By default, the system records ten command lines in its history buffer. To set the number of command lines the system will record during the current terminal session, complete the following task in EXEC mode:

Task	Command
Enable the command history feature for the current terminal session.	<b>terminal history size</b> <i>number-of-lines</i>

The **terminal history no size** command resets the buffer size to the default of 10 command lines.

To configure the number of command lines the system will record, complete the following task in line configuration mode:

Task	Command
Enable the command history feature and specify the number of lines.	<b>history size</b> <i>number-of-lines</i>

The **no history size** command resets the buffer size to the default of 10 command lines.

### Recall Commands

To recall commands from the history buffer, perform one of the following tasks:

Task	Key Sequence/Command
Recall commands in the history buffer, beginning with the most recent command. Repeat the key sequence to recall successively older commands.	Press <b>Ctrl-P</b> or the up arrow key. <sup>1</sup>
Return to more recent commands in the history buffer after recalling commands with Ctrl-P or the up arrow key. Repeat the key sequence to recall successively more recent commands.	Press <b>Ctrl-N</b> or the down arrow key. <sup>1</sup>
While in EXEC mode, list the commands you have just entered.	<b>show history</b>

1. The arrow keys function only on ANSI-compatible terminals such as VT100s.

### Disable the Command History Feature

The command history feature is automatically enabled. To disable it during the current terminal session, complete the following task in EXEC mode:

Task	Command
Disable the command history feature for the current terminal session.	<b>terminal no history</b>

To configure a specific line so that the command history feature is disabled, complete the following task in line configuration mode:

Task	Command
Configure the line so that the command history feature is disabled.	<b>no history</b>

## Use the Editing Features

The current software release includes an enhanced editing mode that provides a set of editing key functions similar to those of the Emacs editor.

You can enter commands in uppercase, lowercase, or a mix of both. Only passwords are case sensitive. You can abbreviate commands and keywords to the number of characters that allow a unique abbreviation. For example, you can abbreviate the **show** command to **sh**. After entering the command line at the system prompt, press the Return key to execute the command.

The following subsections are included in this section:

- Enable Enhanced Editing Mode
- Move around on the Command Line
- Complete a Partial Command Name
- Paste in Buffer Entries
- Edit Command Lines that Wrap
- Delete Entries

- Scroll down a Line or a Screen
- Redisplay the Current Command Line
- Transpose Mistyped Characters
- Control Capitalization
- Designate a Keystroke as a Command Entry
- Disable Enhanced Editing Mode

## Enable Enhanced Editing Mode

Although enhanced editing mode is automatically enabled with the current software release, you can disable it and revert to the editing mode of previous software releases. See the section “Disable Enhanced Editing Mode” later in this chapter.

To reenable the enhanced editing mode for the current terminal session, complete the following task in EXEC mode:

Task	Command
Enable the enhanced editing features for the current terminal session.	<b>terminal editing</b>

To reconfigure a specific line to have enhanced editing mode, complete the following task in line configuration mode:

Task	Command
Enable the enhanced editing features.	<b>editing</b>

## Move around on the Command Line

Perform the following tasks to move the cursor around on the command line for corrections or changes:

Task	Keystrokes
Move the cursor back one character.	Press <b>Ctrl-B</b> or press the left arrow key. <sup>1</sup>
Move the cursor forward one character.	Press <b>Ctrl-F</b> or press the right arrow key. <sup>1</sup>
Move the cursor to the beginning of the command line.	Press <b>Ctrl-A</b> .
Move the cursor to the end of the command line.	Press <b>Ctrl-E</b> .
Move the cursor back one word.	Press <b>Esc-B</b> .
Move the cursor forward one word.	Press <b>Esc-F</b> .

1. The arrow keys function only on ANSI-compatible terminals such as VT100s.

## Complete a Partial Command Name

If you cannot remember a complete command name, you can use the Tab key to allow the system to complete a partial entry. To do so, perform the following task:

Task	Keystrokes
Recall a complete command name.	Enter the first few letters and press the <b>Tab</b> key.

If your keyboard does not have a Tab key, press **Ctrl-I** instead.

In the following example, when you enter the letters *conf* and press the Tab key, the system provides the complete command:

```
cs# conf<Tab>
cs# configure
```

If you enter a set of characters that could indicate more than one command, the system beeps to indicate an error. Enter a question mark (?) to obtain a list of commands that begin with that set of characters. Do not leave a space between the last letter and the question mark (?).

For example, there are three commands in privileged mode that start with “co.” To see what they are, enter **co?** at the privileged EXEC prompt:

```
cs# co?
configure connect copy
cs# co
```

## Paste in Buffer Entries

The system provides a buffer that contains the last ten items you deleted. You can recall these items and paste them in the command line by performing the following tasks:

Task	Keystrokes
<b>Step 1</b> Recall the most recent entry in the buffer.	Press <b>Ctrl-Y</b> .
<b>Step 2</b> Recall the next buffer entry.	Press <b>Esc-Y</b> .

The buffer contains only the last ten items you have deleted or cut. If you press **Esc-Y** more than ten times, you will cycle back to the first buffer entry.

## Edit Command Lines that Wrap

The editing command set provides a wraparound feature for commands that extend beyond a single line on the screen. When the cursor reaches the right margin, the command line shifts ten spaces to the left. You cannot see the first ten characters of the line, but you can scroll back and check the syntax at the beginning of the command. To scroll back, perform the following task:

Task	Keystrokes
Return to the beginning of a command line to verify that you have entered a lengthy command correctly.	Press <b>Ctrl-B</b> or the left arrow key repeatedly until you scroll back to the beginning of the command entry, or press <b>Ctrl-A</b> to return directly to the beginning of the line. <sup>1</sup>

1. The arrow keys function only on ANSI-compatible terminals such as VT100s.

In the following example, the **access-list** command entry extends beyond one line. When the cursor first reaches the end of the line, the line is shifted ten spaces to the left and redisplayed. The dollar sign (\$) indicates that the line has been scrolled to the left. Each time the cursor reaches the end of the line, the line is again shifted ten spaces to the left.

```
cs(config)# access-list 101 permit tcp 131.108.2.5 255.255.255.0 131.108.1
cs(config)# $ 101 permit tcp 131.108.2.5 255.255.255.0 131.108.1.20 255.25
cs(config)# $t tcp 131.108.2.5 255.255.255.0 131.108.1.20 255.255.255.0 eq
cs(config)# $108.2.5 255.255.255.0 131.108.1.20 255.255.255.0 eq 45
```

When you have completed the entry, press **Ctrl-A** to check the complete syntax before pressing the Return key to execute the command. The dollar sign (\$) appears at the end of the line to indicate that the line has been scrolled to the right:

```
cs(config)# access-list 101 permit tcp 131.108.2.5 255.255.255.0 131.108.1$
```

The communication server assumes you have a terminal screen that is 80 columns wide. If you have a width other than that, use the **terminal width** command to tell the router the correct width of your terminal.

Use line wrapping in conjunction with the command history feature to recall and modify previous complex command entries. See the section “Recall Commands” earlier in this chapter for information about recalling previous command entries.

## Delete Entries

Perform any of the following tasks to delete command entries if you make a mistake or change your mind:

Task	Keystrokes
Erase the character to the left of the cursor.	Press the Delete or Backspace key.
Delete the character at the cursor.	Press <b>Ctrl-D</b> .
Delete all characters from the cursor to the end of the command line.	Press <b>Ctrl-K</b> .
Delete all characters from the cursor to the beginning of the command line.	Press <b>Ctrl-U</b> or <b>Ctrl-X</b> .
Delete the word to the left of the cursor.	Press <b>Ctrl-W</b> .
Delete from the cursor to the end of the word.	Press <b>Esc-D</b> .

## Scroll down a Line or a Screen

When you use the help facility to list the commands available in a particular mode, the list is often longer than the terminal screen can display. In such cases, a `---More---` prompt is displayed at the bottom of the screen. To view the next line or screen, complete either of the following tasks:

Task	Keystrokes
Scroll down one line.	Press the Return key.
Scroll down one screen.	Press the Space bar.

**Note** The `---More---` prompt is used for any output that has more lines than can be displayed on the terminal screen, including **show** command output. You can use the keystrokes listed in the previous table whenever you see the `---More---` prompt.

## Redisplay the Current Command Line

If you are entering a command and the system suddenly sends a message to your screen, you can easily recall your current command line entry. To do so, perform the following task:

Task	Keystrokes
Redisplay the current command line.	Press <b>Ctrl-L</b> or <b>Ctrl-R</b> .

## Transpose Mistyped Characters

If you have mistyped a command entry, you can transpose the mistyped characters by performing the following task:

Task	Keystrokes
Transpose the character to the left of the cursor with the character located at the cursor.	Press <b>Ctrl-T</b> .

## Control Capitalization

You can capitalize or lowercase words or capitalize a set of letters with simple keystroke sequences. To do so, perform any of the following tasks:

Task	Keystrokes
Capitalize the word at the cursor.	Press <b>Esc-C</b> .
Change the word at the cursor to lowercase.	Press <b>Esc-L</b> .
Capitalize letters from the cursor to the end of the word.	Press <b>Esc-U</b> .

## Designate a Keystroke as a Command Entry

Sometimes you might want to use a particular keystroke as an executable command, perhaps as a shortcut. Complete the following task to insert a system code for this purpose:

Task	Keystrokes
Insert a code to indicate to the system that the keystroke immediately following should be treated as a command entry, <i>not</i> an editing key.	Press <b>Ctrl-V</b> or <b>Esc-Q</b> .

## Disable Enhanced Editing Mode

To disable enhanced editing mode and revert to the editing mode of software releases before 9.21, perform the following task in EXEC mode:

Task	Command
Disable the enhanced editing features for the local line.	<b>terminal no editing</b>

You might want to disable enhanced editing if you have prebuilt scripts; for example, scripts that do not interact well when enhanced editing is enabled. You can reenable enhanced editing mode with the **terminal editing** command.

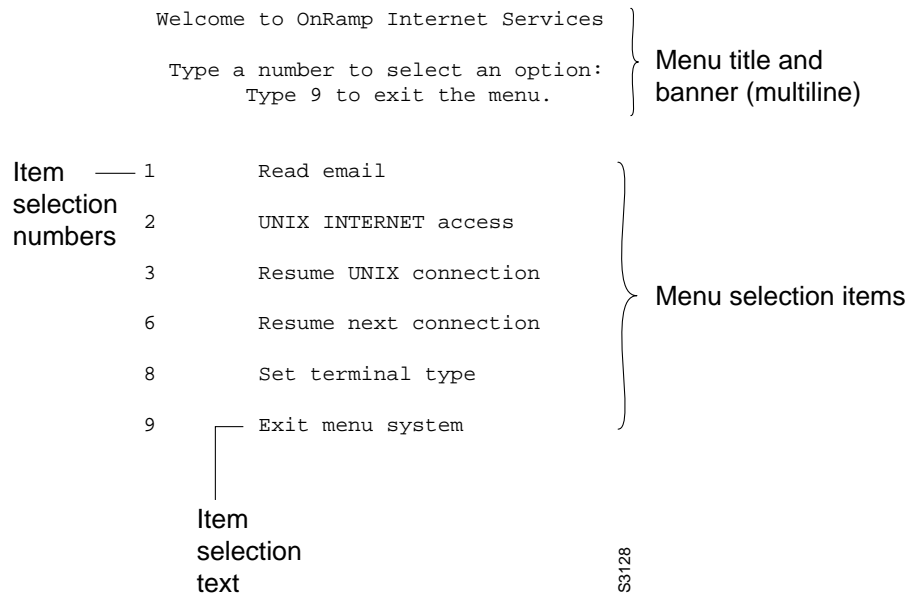
The editing keys and functions of software releases before 9.21 are listed in Table 2-2.

**Table 2-2** Editing Keys and Functions for Software Release 9.1 and Earlier

Key	Function
Delete or Backspace	Erases the character to the left of the cursor.
Ctrl-W	Erases a word.
Ctrl-U	Erases a line.
Ctrl-R	Redisplays a line.
Ctrl-Z	Ends configuration mode and returns to the EXEC prompt.
Return	Executes single-line commands.

## Create Menus

A menu is a displayed list of actions from which a user can select without having to know anything about the underlying command-level details. A menu system is also a good way to control what functions a user can access. Figure 2-1 illustrates the parts that make up a typical menu:

**Figure 2-1** Typical Menu Example

Anyone who can enter configuration mode can create these menus. Keep the following guidelines in mind when you create menus:

- Each menu item represents a single user command.
- The menu system assumes a standard “dumb” terminal that displays only text in a 24-line-by-80-column format.
- A menu can have a maximum of 18 menu items. Menus containing more than nine menu items are automatically configured as single-spaced menus; menus containing nine or fewer menu items are automatically configured as double-spaced menus, but can be configured as

single-spaced menus using the **single-space** option of the **menu** command (for more information about menu display configuration options, refer to the section “Specify Menu Display Configuration Options” later in this chapter).

- Each menu should be constructed with some thought to how a user exits a menu and where the user goes. If you do not provide an exit from a menu—such as with the **menu-exit** command (described in “Specify the Underlying Command for the Menu Item,” later in this section), there is no way to break out of the menu. The **exec-timeout** command can be used to close and clean up an idle menu; the **session-timeout** command can be used to clean up a menu with an open connection.

To create menus, perform the tasks in the following sections:

- Specify the Menu Title
- Specify the Menu Item Text
- Specify the Underlying Command for the Menu Item
- Create a Submenu
- Create Hidden Menu Entries
- Specify Menu Display Configuration Options
- Invoke the Menu
- Delete the Menu from the Configuration

## Specify the Menu Title

You can specify an identifying title for the menu. To specify the menu title, perform the following task in global configuration mode:

Task	Command
Specify the title for the menu.	<b>menu name title delimiter title delimiter</b>

The following example specifies the title that will be displayed when the OnRamp menu is invoked. Four main elements create the title:

- The **menu title** command
- Delimiter characters that open and close the title text
- Escape characters to clear the screen (optional)
- Title text

The following example shows the command used to create the title for the example shown at the beginning of this section:

```
cs101(config)# menu OnRamp title /^[H^[[J
    Welcome to OnRamp Internet Services

    Type a number to select an option;
    Type 9 to exit the menu.
/
```

You can position the title of the menu horizontally by preceding the title text with blank characters. You can also add lines of space above and below the title by pressing Return.



In this example, the title text consists of a one-line title, a space, and a two-line menu instruction banner. Title text must be enclosed within text delimiter characters—in this example, the slash character (/). Title text delimiters are characters that do not ordinarily appear within the text of a title, such as slash (/), double quote ("), or tilde (~). You can use any character that is not likely to be used within the text of the title. Ctrl-C is reserved for special use and should not be used in the text of the title.

This title text example also includes an escape character sequence to clear the screen before displaying the menu. In this case, the string `^[H^[J` is an escape string used by many VT100-compatible terminals to clear the screen. To enter it, you must type Ctrl-V before each escape character.

Instead of embedding a terminal-specific string in the menu title to clear the screen before displaying menus and submenus, use the **clear-screen** option of the **menu** command. This option uses a terminal-independent mechanism based upon termcap entries defined in the communication server and the terminal type configured for the user's terminal. This approach allows the same menu to be used on multiple types of terminals instead of having terminal-specific strings embedded within menu titles. If the termcap entry does not contain a clear string, the menu system inserts 24 newlines, causing all existing text to scroll off the top of the terminal screen.

To add the **clear-screen** option to a menu, perform the following task in global configuration mode:

Task	Command
Specify screen clearing before displaying menus and submenus.	<b>menu name clear-screen</b>

The following example specifies the **clear-screen** option for the *OnRamp* menu:

```
cs101(config)# menu OnRamp clear-screen
```

The terminal screen will be cleared before each menu or submenu is displayed.

## Specify the Menu Item Text

The menu item text the user sees displayed on the screen. Each displayed menu entry consists of the selection number for that line and the text describing the action to be performed. You can specify descriptive text for a maximum of 18 menu items. Because each menu entry represents a single user interface command, you must specify the menu item text one entry at a time. To specify the menu item text, perform the following task in global configuration mode:

Task	Command
Specify the text for the menu item.	<b>menu name text number text</b>

The following example specifies the text that will be displayed for the three entries in the *OnRamp* menu:

```
cs101(config)# menu OnRamp text 1 Read email
cs101(config)# menu OnRamp text 2 UNIX Internet Access
cs101(config)# menu OnRamp text 9 Exit menu system
```

You can provide access to context-sensitive help by creating a “help server” host and use a menu entry to make a connection to that host.

Menu selection numbers need not be contiguous. You can provide consistency across menus by assigning a particular number to a special function—such as Help or Exit—regardless of the number of menu entries in a given menu. For example, menu entry 1 could be reserved for help across all menus, while the last menu entry (for example, 9) could be reserved as the exit.

When more than nine menu items are defined in a menu, the **line-mode** and **single-space** options to the **menu** command are invoked automatically, but may also be configured explicitly for menus of nine or fewer items. For more information on these commands, refer to “Specify Menu Display Configuration Options” later in this chapter.

## Specify the Underlying Command for the Menu Item

Each displayed menu entry is backed up by a user interface command that is executed when the user enters the number for one of the menu entries. Each menu entry can have only a single command associated with it. To specify the menu item command, perform the following task in global configuration mode:

Task	Command
Specify the command to be performed when the menu item is selected.	<b>menu name command number command</b>

The following example specifies the commands that are associated with the three entries in the *OnRamp* menu:

```
cs101(config)# menu OnRamp command 1 rlogin mailsys
cs101(config)# menu OnRamp command 2 rlogin unix.cisco.com
cs101(config)# menu OnRamp command 9 menu-exit
```

The **menu-exit** command is a special command that is only available from within menus. It provides a way to return to a higher-level menu or to exit the menu system.

When a menu allows connections (their normal use), the menu should contain entries that can be used to resume connections; otherwise, when a user escapes from a connection and returns to the menu, there will be no way to resume the session and it will sit idle until the user logs off.

You can build the **resume connection EXEC** command into a menu entry so the user can resume a connection, or you can configure the line using the command **escape-char none** to prevent users from escaping their sessions.

To specify connection resumption as part of the menu item command, perform the following task in global configuration mode:

Task	Command
Specify the command to be performed when the menu item is selected.	<b>menu name command number resume [connection] /connect [connect string]</b>

Embedding the **resume** command within the **menu** command as the action to be performed when the menu entry is selected permits a user to resume the named connection or—if there is no active connection by that name—connect to it using the specified name. As an option, you can also supply the connect string needed to connect initially. When you do not supply this connect string, the command uses the specified connection name.

You can use the **resume** command in a menu in the following ways:

- Embedded in a menu entry
- As a separate, specific menu entry

- As a “rotary” menu entry

In the following example, the **resume** command is embedded in the **menu** command so that selecting that entry either starts the specified connection session (if one is not already open) or resumes the session (if one is already open):

```
cs101(config)# menu Duluth text 1 Read email

cs101(config)# menu Duluth command 1 resume mailsys /connect rlogin mailsys
```

In the following example, the resume command is used in a separate menu entry—entry 3, used to resume a specific connection:

```
cs101(config)# menu Duluth text 3 Resume UNIX Internet Access

cs101(config)# menu Duluth command 3 resume unix.cisco.com
```

You can also use the **resume /next** command, which resumes the next open connection in the user’s list of connections. This allows you to create a single menu entry that steps through all of the user’s connections. To specify **resume /next** connection resumption as part of the menu item command, perform the following task in global configuration mode:

Task	Command
Specify <b>resume /next</b> connection resumption.	<b>menu name command number resume /next</b>

The following example shows a menu entry—entry 6—created to step through all of the user’s connections:

```
cs101(config)# menu Duluth text 6 Resume next connection

cs101(config)# menu Duluth command 6 resume /next
```

## Create a Submenu

You can create submenus that are opened by selecting a higher-level menu entry. You do this by using the command to invoke a menu as the command in a line specifying a higher-level menu entry. To specify a submenu item command, perform the following task in global configuration mode:

Task	Command
<b>Step 1</b> Specify the menu item that invokes the submenu.	<b>menu name text number [text]</b>
<b>Step 2</b> Specify the command to be performed when the menu item is selected.	<b>menu name command number command</b>
<b>Step 3</b> Specify the title for the submenu.	<b>menu name title delimiter title delimiter</b>
<b>Step 4</b> Specify the submenu item.	<b>menu name text number [text]</b>
<b>Step 5</b> Specify the commands to be performed when the submenu item is selected.	<b>menu name command number [command]</b>

The following example specifies the menu item—entry 8—that invokes the submenu in the *OnRamp* menu:

```
cs101(config)# menu OnRamp text 8 Set terminal type
```

The following example specifies the command to be performed when the menu item is selected in the *OnRamp* menu:

```
cs101(config)# menu OnRamp command 8 menu Terminals
```

The following example specifies the title for the *Terminals* submenu:

```
cs101(config)# menu Terminals title /
                Supported Terminal Types

                Type a number to select an option;
                Type 9 to return to the previous menu.
/
```

The following example specifies the submenu items for the *Terminals* submenu:

```
cs101(config)# menu Terminals text 1 DEC VT420 or similar
cs101(config)# menu Terminals text 2 Heath H-19
cs101(config)# menu Terminals text 3 IBM 3051 or equivalent
cs101(config)# menu Terminals text 4 Macintosh with gterm emulator
cs101(config)# menu Terminals text 9 Return to previous menu
```

The following example specifies the commands to be performed for the submenu items in the *Terminals* submenu:

```
cs101(config)# menu Terminals command 1 term terminal-type vt420
cs101(config)# menu Terminals command 2 term terminal-type h19
cs101(config)# menu Terminals command 3 term terminal-type ibm3051
cs101(config)# menu Terminals command 4 term terminal-type gterm
cs101(config)# menu Terminals command 9 menu-exit
```

When you select entry 8 on the main menu, the *Terminals* submenu appears:

```
                Supported Terminal Types

                Type a number to select an option;
                Type 9 to return to the previous menu.

1          DEC VT420 or similar

2          Heath H-19

3          IBM 3051 or equivalent

4          Macintosh with gterm emulator

9          Return to previous menu
```

---

**Note** If you nest too many levels of menus, the system prints an error message on the terminal and returns to the previous menu level.

---

## Create Hidden Menu Entries

A hidden menu entry is a menu item containing a selection number but no associated text describing the action to be performed. Include this type of menu entry in menus to aid system administrators when helping users. The normal procedure is to specify a menu command, but omit specifying any text for the item. To specify a hidden menu item, perform the following task in global configuration mode:

---

Task	Command
Specify the command to be performed when the hidden menu entry is selected.	<b>menu</b> <i>name</i> <b>command</b> <i>number</i> <i>command</i>

---

The following example shows the command associated with the submenu entry in the *OnRamp* menu:

```
cs101(config)# menu OnRamp command 7 show whoami
```

The **show whoami** command displays information about the current user's terminal line, including hostname, line number, line speed, and location. This command can be included in menus to aid system administrators when helping users. To display line information, perform the following task at the EXEC prompt:

Task	Command
Display line information.	<b>show whoami</b> <i>text</i>

If text is included as an argument in the command, that text is displayed as part of the additional data about the line. This is useful in identifying exactly which menu or submenu the user is using. Because the **show whoami** command is hidden inside the menu entry, this information might not be otherwise available. For example, the hidden menu entry

```
show whoami Terminals submenu of OnRamp Internet Access menu
```

might display information similar to the following:

```
show whoami Terminals submenu of OnRamp Internet Access menu
Comm Server "cs101", Line 0 at 0 bps. Location "Second floor, West"
Additional data: Terminals submenu of OnRamp Internet Access menu
```

This command always displays a `---More---` prompt before returning, to prevent the information from being lost if the menu display clears the screen.

## Specify Menu Display Configuration Options

In addition to the **clear-screen** option to the **menu** command, described in the section “Specify the Menu Title,” there are three other **menu** command options that define menu behavior:

- **line-mode**
- **single-space**
- **status-line**

### Using Line Mode in Menus

In a menu of nine or fewer items, you ordinarily select a menu item by just typing the item number. In line mode, you select a menu entry by typing the item number and pressing Return. Line mode allows you to backspace over the selected number and type another before pressing Return to perform the command. This provides you the opportunity to change the selection number before performing the command.

To invoke the **line-mode** option, perform the following task in global configuration mode:

Task	Command
Specify line-mode operation.	<b>menu</b> <i>name</i> <b>line-mode</b>

This option is invoked automatically when more than nine menu items are defined, but may also be configured explicitly for menus of nine or fewer items.

### Displaying Single-Spaced Menus

In a menu of nine or fewer items, menu items are ordinarily displayed single-spaced rather than double-spaced. In a menu of more than nine items, the **single-space** option is invoked automatically to fit the menu into a normal 24-line terminal screen.

To invoke the **single-space** option, perform the following task in global configuration mode:

Task	Command
Specify single-space operation.	<b>menu name single-space</b>

This option may also be configured explicitly for menus of nine or fewer items.

### Displaying an Informational Status Line

The **status-line** option displays a line of status information about the current user at the top of the terminal screen before the menu title is displayed. This status line includes the communication server host name, the user's line number, and the current terminal type and keymap type (if any).

To invoke the **status-line** option, perform the following task in global configuration mode:

Task	Command
Display a status line when using a menu.	<b>menu name status-line</b>

### Invoke the Menu

To invoke the menu, perform the following task at the EXEC prompt:

Task	Command
Invoke the menu by specifying the name of the menu.	<b>menu name</b>

You can define menus containing privileged EXEC commands, but they will not be usable unless the user has privileged access when they start up the menu.

To ensure that a menu is automatically invoked on a line, define a menu that has no exit paths that will leave the user in an interface they cannot operate, then configure that line with the command **autocommand menu menu\_name**.

Menus can also be invoked on a per-user basis by defining an **autocommand** for that local username.

The following example invokes the *OnRamp* menu:

```
cs101> menu OnRamp

Welcome to OnRamp Internet Services

Type a number to select an option;
Type 9 to exit the menu.

1 Read email
2 UNIX Internet access
3 Resume UNIX connection

6 Resume next connection
```

---

9      Exit menu system

## Delete the Menu from the Configuration

To delete the menu from the configuration, perform the following task in global configuration mode:

<b>Task</b>	<b>Command</b>
Delete the menu by specifying the menu name.	<b>no menu <i>name</i></b>

The following example deletes the *OnRamp* menu from the configuration:

```
cs101(config)# no menu OnRamp
```

