



Cisco CTE 1400 and Design Studio

- 1 Install the Cisco CTE 1400
- 2 Configure the Cisco CTE 1400
- 3 Install Design Studio
- 4 Start Design Studio

1 Install the Cisco CTE 1400

The Cisco Content Transformation Engine (CTE) 1400 handles requests for web pages from devices such as Cisco IP phones, wireless phones, and personal digital assistants and uses transformation instructions to convert HTML/XML pages into wireless-compatible formats. Transformation instructions are created in the companion PC-based application, Cisco CTE Design Studio.

Requirements

To set up the CTE, you need the following hardware:

- Power cable
- Null-modem cable (9-pin female connector at both ends)
- A computer capable of hosting terminal console communication through a serial port
- One or two network cables to connect the CTE to a LAN

Procedure

The following steps summarize the installation procedure described in the *Cisco CTE 1400 Hardware Installation Guide*.

-
- Step 1** Install the CTE in a rack (if rack-mounted).
- Step 2** Connect a null-modem cable to the 9-pin serial port on the back of the CTE and connect the cable to a second computer capable of running terminal emulation software.
- Step 3** On the second computer, start a terminal emulation application. For example, start HyperTerminal.
- Step 4** Set the serial connection to 9600 bits per second, 8 data bits, no parity, 1 stop bit; set the Backspace key to issue a Delete character.
Hardware flow control is optional.
- Step 5** Power up the CTE.
The CTE console appears on the serial console of the second computer.
-

You are now ready to configure the CTE with your network.



2 Configure the Cisco CTE 1400

Typical network configurations for a CTE are summarized below.


Network and Website Characteristics	Network Location of CTE
A server load balancer sits in front of the web servers. Most of the network traffic to be intercepted by a CTE uses website content supplied by servers directly connected to the server load balancer.	Behind the server load balancer. or In front of a web server that routes traffic to a CTE or to web servers based on browser detection.
A server load balancer sits in front of the web servers. Most of the network traffic to be intercepted by a CTE uses website content supplied by servers at other locations. For example, a results page served by a search engine portal contains links to content that resides outside of the domain of the search site.	Behind the server load balancer, with requests from a CTE directed through the router.
One web server. All traffic destined for the web server goes through the CTE.	In front of the web server.

Procedures

This section summarizes the procedures for configuring two CTEs with a server load balancer. For detailed information on this and other configurations, see the *Cisco CTE 1400 Configuration Note*.

Figure 1 on page 4 shows the network configuration for this procedure. The steps assume that you are adding the CTEs to a network that already has a server load balancer and web server farm.

Figure 1 Two CTEs Connected to a Server Load Balancer

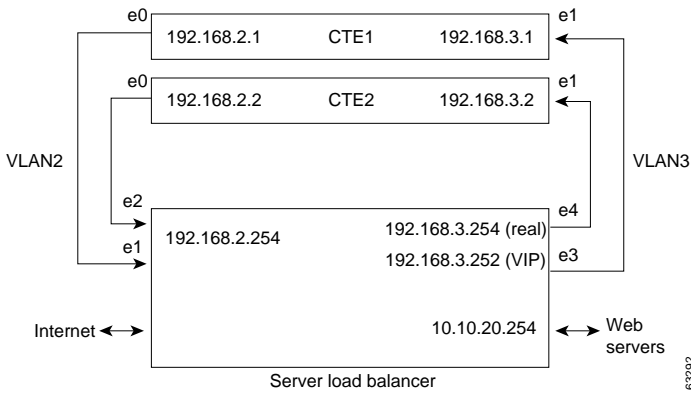

To configure a CTE with a server load balancer, perform these general steps:

-
- Step 1** Use network cables to connect the CTE NIC 1 (e0) port to a client-side port on the server load balancer. Connect the CTE NIC 2 (e1) port to a server-side port on the server load balancer.
 - Step 2** On the computer where the CTE console is running, type 2 (Set Networking Parameters), press Enter, and answer the prompts as follows:

```

Boot proto [DHCP,static]? static
Enter the Gateway device[0/1]: 1 [should correspond to the NIC that is on the
same subnet as the CTE default gateway]

IP address for eth0[x.x.x.x]? ipaddr
IP address for eth1 [x.x.x.x]? ipaddr [must be on a different subnet from e0]
NETMASK [x.x.x.x]? mask
GATEWAY [x.x.x.x]? ipaddr_for_slb_port
    
```

- Step 3** Type 5 (Set Default Web-Server/Web-Page), press Enter, and enter a virtual IP address for the web server or a URL for the CTE start page (such as a portal page).
 - Step 4** Type 4 (Set Masquerade Host), press Enter, and enter an IP address for Network Address Translation.
 - Step 5** If you are using DNS, type 3 (Set DNS Parameter), press Enter, and enter the IP addresses.
 - Step 6** Type 7 (Set Username and Password), press Enter, and specify a username and password for a Design Studio user. Repeat this step for each Design Studio user.
 - Step 7** Type 31 (Review and Commit Changes), press Enter, and enter yes to the prompt.
-



Next, you will configure the server load balancer. The commands in the following procedure are based on the sample configuration shown in Figure 1 on page 4.

To configure the server load balancer, perform these general steps:

-
- Step 1** On a computer that is connected to the server load balancer, log into the command line interface for the server load balancer.
- Step 2** Create links between the CTE ports and the server load balancer by adding VLAN2 and VLAN3, and defining the interfaces to the VLANs.
In the sample configuration, the e1 and e2 ports are the interfaces for VLAN2; e3 and e4 are the interfaces for VLAN3.
- Step 3** Specify the IP addresses for the VLAN circuits.
In the sample configuration, the IP address for the VLAN2 circuit is 192.168.2.254. The IP address for the VLAN3 circuit is 192.168.3.254.
- Step 4** Create services to identify the two CTEs.
In the sample configuration, the IP address for the CTE1 service is 192.168.2.1. The IP address for the CTE2 service is 192.168.2.2.
- Step 5** Create an owner so that you can define content rules for the CTE1 and CTE2 services.
- Step 6** Create a Layer 3 content rule for the services.
In the sample configuration, the content rule is configured with the virtual IP address 192.168.3.252 and is added to the CTE1 and CTE2 services.
-

3 Install Design Studio

Design Studio is the application used to create the rules that transform website content for delivery to wireless devices and Cisco IP phones.

Requirements

Design Studio requires the following:

- Windows 95, Windows 98/ME, Windows 2000, or Windows NT 4.0 with Service Pack 6.
- At least 10 MB of disk space.
- At least 128 MB of RAM; 256 MB is recommended.
- Internet Explorer version 5.0 or higher or Netscape version 4.01 or higher.
- Java 2 Runtime Environment (JRE), Standard Edition, version 1.2.2 (available from <http://www.javasoft.com> or the Design Studio CD-ROM).
- A VGA color monitor with a graphics card capable of showing 16-bit color or higher. A minimum screen resolution of 640 x 480. Recommended resolution is 1280 x 1024.
- Network connection to the Cisco CTE 1400.

Procedure

To install Design Studio, perform these steps:

-
- Step 1** Uninstall JDK or versions of JRE other than 1.2.2 from your computer.
- Step 2** If JRE 1.2.2 is not already installed on your computer, install it.
- Step 3** Insert the Design Studio CD-ROM into your CD-ROM drive.
If auto-start is enabled on your computer, the installer starts.
If auto-start is not enabled on your computer, double-click the drive icon for your CD-ROM, and then double-click setup.exe.
- Step 4** Follow the instructions in the installer.
By default, Design Studio is installed in C:\Programs\Cisco\Cisco CTE 1400 Design Studio.
- Step 5** Follow the instructions in Chapter 2 of the *Design Studio User Guide* to install and configure the wireless device simulators used to preview and test your work in Design Studio.
-



4 Start Design Studio

See the *Design Studio User Guide* for detailed information on using Design Studio to create, preview, and publish transformation rules. That information is also available from the Design Studio Help menu.

Requirements

To start Design Studio, you need the following login information from the administrator who set up the Cisco CTE 1400:

- Your username and password
- The IP address of the Cisco CTE 1400
- The server upload port number

Procedure

To start Design Studio, perform these steps:

Step 1 From the Windows Start menu, choose Programs > Cisco CTE 1400 > Design Studio.

Step 2 Enter your username and password.

Step 3 Enter the IP address of the Cisco CTE 1400 you want to use.

Step 4 If necessary, change the upload port number.

The default upload port number is 9001. You might need to change the port number if your firewall redirects ports. Contact your CTE administrator if you do not know which port to use.

Step 5 Click OK.

If you cannot connect to a Cisco CTE 1400, verify that your computer has a network connection to a running Cisco CTE 1400. Contact your CTE administrator for help.



Corporate Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
www.cisco.com
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 526-4100

European Headquarters
Cisco Systems Europe
11 Rue Camille Desmoulins
92782 Issy-les-Moulineaux
Cedex 9
France
www-europe.cisco.com
Tel: 33 1 58 04 60 00
Fax: 33 1 58 04 61 00

Americas Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
www.cisco.com
Tel: 408 526-7660
Fax: 408 527-0883

Asia Pacific Headquarters
Cisco Systems Australia, Pty., Ltd
Level 9, 80 Pacific Highway
P.O. Box 469
North Sydney
NSW 2060 Australia
www.cisco.com
Tel: +61 2 8448 7100
Fax: +61 2 9957 4350

Cisco Systems has more than 200 offices in the following countries. Addresses, phone numbers, and fax numbers are listed on the
Cisco Web site at www.cisco.com/go/offices

Argentina • Australia • Austria • Belgium • Brazil • Bulgaria • Canada • Chile • China PRC • Colombia • Costa Rica • Croatia • Czech Republic • Denmark • Dubai, UAE
Finland • France • Germany • Greece • Hong Kong SAR • Hungary • India • Indonesia • Ireland • Israel • Italy • Japan • Korea • Luxembourg • Malaysia • Mexico
The Netherlands • New Zealand • Norway • Peru • Philippines • Poland • Portugal • Puerto Rico • Romania • Russia • Saudi Arabia • Scotland • Singapore • Slovakia
Slovenia • South Africa • Spain • Sweden • Switzerland • Taiwan • Thailand • Turkey • Ukraine • United Kingdom • United States • Venezuela • Vietnam • Zimbabwe

AccessPath, AtmDirector, Browse with Me, CCIP, CCSI, CD-PAC, *CiscoLink*, the Cisco *Powered* Network logo, Cisco Systems Networking Academy, the Cisco Systems Networking Academy logo, Fast Step, Follow Me Browsing, FormShare, FrameShare, GigaStack, IGX, Internet Quotient, IP/V.C, IQ Breakthrough, IQ Expertise, IQ FastTrack, the IQ Logo, IQ Net Readiness Scorecard, MGX, the Networkers logo, *Packet*, RateMUX, ScriptBuilder, ScriptShare, SlideCast, SMARTnet, TransPath, Unity, Voice LAN, Wavelength Router, and WebViewer are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn, Discover All That's Possible, and Empowering the Internet Generation, are service marks of Cisco Systems, Inc.; and Aironet, ASIST, BPX, Catalyst, CCDA, CCDP, CCIE, CCNA, CCNP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, the Cisco IOS logo, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Enterprise/Solver, EtherChannel, EtherSwitch, FastHub, FastSwitch, IOS, IP/TV, LightStream, MICA, Network Registrar, PIX, Post-Routing, Pre-Routing, Registrar, StrataView Plus, Stratm, SwitchProbe, TeleRouter, and VCO are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries.

All other trademarks mentioned in this document or Web site are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0108R)