



Cisco ONS 15540 ESP Configuration Guide

Cisco IOS Release 12.1E

Corporate Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 526-4100

Customer Order Number: DOC-7816612=
Text Part Number: 78-16612-01

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The following information is for FCC compliance of Class A devices: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

The following information is for FCC compliance of Class B devices: The equipment described in this manual generates and may radiate radio-frequency energy. If it is not installed in accordance with Cisco's installation instructions, it may cause interference with radio and television reception. This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in part 15 of the FCC rules. These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

Modifying the equipment without Cisco's written authorization may result in the equipment no longer complying with FCC requirements for Class A or Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

You can determine whether your equipment is causing interference by turning it off. If the interference stops, it was probably caused by the Cisco equipment or one of its peripheral devices. If the equipment causes interference to radio or television reception, try to correct the interference by using one or more of the following measures:

- Turn the television or radio antenna until the interference stops.
- Move the equipment to one side or the other of the television or radio.
- Move the equipment farther away from the television or radio.
- Plug the equipment into an outlet that is on a different circuit from the television or radio. (That is, make certain the equipment and the television or radio are on circuits controlled by different circuit breakers or fuses.)

Modifications to this product not authorized by Cisco Systems, Inc. could void the FCC approval and negate your authority to operate the product.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

CCSP, the Cisco Square Bridge logo, Cisco Unity, Follow Me Browsing, FormShare, and StackWise are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn, and iQuick Study are service marks of Cisco Systems, Inc.; and Aironet, ASIST, BPX, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Empowering the Internet Generation, Enterprise/Solver, EtherChannel, EtherFast, EtherSwitch, Fast Step, GigaDrive, GigaStack, HomeLink, Internet Quotient, IOS, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, LightStream, Linksys, MeetingPlace, MGX, the Networkers logo, Networking Academy, Network Registrar, *Packet*, PIX, Post-Routing, Pre-Routing, ProConnect, RateMUX, Registrar, ScriptShare, SlideCast, SMARTnet, StrataView Plus, SwitchProbe, TeleRouter, The Fastest Way to Increase Your Internet Quotient, TransPath, and VCO are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0406R)

Cisco ONS 15540 ESP Configuration Guide
Copyright © 2001-2004, Cisco Systems, Inc.
All rights reserved.



Preface **xiii**

Audience	xiii
New and Changed Information	xiii
Organization	xiv
Related Documentation	xiv
Document Conventions	xv
Obtaining Documentation	xvi
Cisco.com	xvi
Documentation CD-ROM	xvi
Ordering Documentation	xvi
Documentation Feedback	xvii
Obtaining Technical Assistance	xvii
Cisco TAC Website	xvii
Opening a TAC Case	xvii
TAC Case Priority Definitions	xviii
Obtaining Additional Publications and Information	xviii

CHAPTER 1

Product Overview **1-1**

Cisco ONS 15540 Hardware Features	1-1
Chassis Overview	1-1
Component Summary	1-2
Transponder Modules	1-3
SM Transponder Modules	1-3
MM Transponder Modules	1-4
Extended Range Transponder Modules with Selectable Transceivers	1-4
Mux/Demux Modules	1-5
Processor Cards	1-6
Standards Compliance	1-6
Cisco ONS 15540 Software Feature Overview	1-6
Network Management Systems	1-7
Optical Supervisory Channel	1-7
Online Diagnostics	1-7
Network Topologies	1-7

CHAPTER 2

Before You Begin 2-1

- About the CLI 2-1
- About Cisco IOS Command Modes 2-1
 - Listing Cisco IOS Commands and Syntax 2-3
- Interface Naming Conventions 2-4
 - Transparent Interfaces 2-6
 - Wave Interfaces 2-7
 - Wavepatch Interfaces 2-7
 - Filter Interfaces 2-7
 - Wdm Interfaces 2-8
 - Thru Interfaces 2-8
 - Filterband Interfaces 2-8
 - Filtergroup Interfaces 2-8
 - OSC Interfaces 2-9
 - NME Interfaces 2-9
 - Auxiliary Port Interfaces 2-9
- Configuration Overview 2-10

CHAPTER 3

Initial Configuration 3-1

- About the Processor Card 3-1
- Starting Up the Cisco ONS 15540 3-2
- Using the Console Ports, NME Ports, and Auxiliary Ports 3-2
 - Modem Support 3-2
- About Passwords 3-3
 - Enable Password 3-3
 - Enable Secret Password 3-3
- Configuring IP Access on the NME Interface 3-3
 - Displaying the NME Interface Configuration 3-5
 - Displaying the Operating Configurations 3-5
- Configuring the Host Name 3-6
- About NTP 3-6
- Configuring NTP 3-7
 - Displaying the NTP Configuration 3-8
- About Processor Card Redundancy 3-8
 - Redundant Operation Requirements 3-11
 - Conditions Causing a Switchover from the Active Processor Card 3-11

Configuring Processor Card Redundancy	3-12
Forcing a Switchover from Privileged EXEC Mode	3-12
Forcing a Switchover from ROM Monitor Mode	3-13
Configuring Autoboot	3-14
Displaying the Autoboot Configuration	3-14
Synchronizing the Configurations	3-15
Synchronizing Configurations Manually	3-15
Enabling and Disabling Automatic Synchronization	3-16
Configuring Maintenance Mode	3-17
Displaying the Processor Card Redundancy Configuration and Status	3-17
Reloading the Processor Cards	3-20

CHAPTER 4

Configuring Interfaces and Patch Connections 4-1

Configuring Protocol Encapsulation or Clock Rate	4-2
Displaying Protocol Encapsulation or Clock Rate Configuration	4-6
About Protocol Monitoring	4-6
Configuring Protocol Monitoring	4-7
Displaying Protocol Monitoring Configuration	4-8
About Alarm Thresholds	4-9
Configuring Alarm Thresholds	4-9
Displaying Alarm Threshold Configuration	4-11
About Laser Shutdown	4-12
About Forward Laser Control	4-12
About OFC	4-13
About Laser Safety Control	4-14
Configuring Laser Shutdown	4-15
Configuring Forward Laser Control	4-15
Displaying Forward Laser Control Configuration	4-16
Configuring Laser Safety Control	4-16
Displaying Laser Safety Control Configuration	4-17
About Patch Connections	4-17
Configuring Patch Connections	4-18
Displaying Patch Connections	4-19
About Cross Connections	4-20
Displaying Cross Connections	4-20

CHAPTER 5

Configuring Splitter Protection and Line Card Protection with APS 5-1

- About APS 5-1
- About Splitter Protection 5-1
 - Considerations for Using Splitter Protection 5-2
- Configuring Splitter Protection 5-3
 - Displaying the Splitter Protection Configuration 5-5
- About Line Card Protection 5-6
 - Considerations for Using Line Card Protection 5-7
- Configuring Line Card Protection 5-8
 - Configuring Y-Cable Protection 5-9
 - Displaying the Y-Cable Protection Configuration 5-10
 - Configuring Splitter Protected Line Card Motherboards for Line Card Protection 5-11
- About Path Switching 5-12
- Configuring Path Switching 5-14
 - Changing the Path Switching Direction for Y-Cable Protection 5-16
 - Displaying the Path Switching Configuration 5-18
- Switchovers and Lockouts 5-19
 - Requesting a Switchover or Lockout 5-20
 - Displaying Switchover and Lockout Request Status 5-20
 - Clearing Switchovers and Lockouts 5-21
 - Displaying Switchover and Lockout Clear Status 5-21

CHAPTER 6

Configuring Dual Shelf Nodes 6-1

- About Dual Shelf Nodes 6-1
- Configuring Line Card Protected Dual Shelf Nodes 6-1
 - Configuring and Cabling the Shelves 6-2
 - Terminal Mux/Demux Modules for 32-Channels 6-2
 - Add/Drop Mux/Demux Modules for 24-Channels 6-5
 - Configuring Connections Between Shelves 6-8
 - Configuring APS 6-9

CHAPTER 7

Configuring Point-to-Point Topologies 7-1

- About Point-to-Point Topologies 7-1
- Configuring a Point-to-Point Topology with Splitter Protection 7-3
 - Patch Connections 7-4
 - Transparent Interfaces 7-5
 - APS 7-5

Configuring a Point-to-Point Topology with Line Card Protection	7-5
Node 1	7-6
Patch Connections	7-6
Transparent Interfaces	7-6
APS	7-7
Configuring an Unprotected Point-to-Point Topology	7-9
Patch Connections	7-10
Transparent Interfaces	7-11

CHAPTER 8

Configuring Ring Topologies 8-1

About Ring Topologies	8-1
Hubbed Ring Topologies	8-2
Meshed Ring Topologies	8-3
Configuring a Hubbed Ring with Splitter Protection and OSC	8-3
Node 1	8-4
Patch Connections	8-5
Transparent Interfaces	8-5
OSC Interfaces	8-6
APS	8-6
Node 2	8-8
Patch Connections	8-9
Transparent Interfaces in Slot 2	8-9
OSC Interfaces	8-10
APS	8-10
Node 3	8-11
Patch Connections	8-12
Transparent Interfaces in Slot 5	8-12
OSC Interfaces	8-13
APS	8-13
Node 4	8-14
Patch Connections	8-15
Transparent Interfaces in Slot 8	8-15
OSC Interfaces	8-16
APS	8-16
Node 5	8-17
Patch Connections	8-18
Transparent Interfaces in Slot 11	8-18
OSC Interfaces	8-19
APS	8-19

Configuring a Hubbed Ring with Line Card Protection and OSC	8-20
Node 1	8-20
Patch Connections	8-21
Transparent Interfaces	8-21
OSC Interfaces	8-22
APS	8-22
Node 2	8-25
Patch Connections	8-26
Transparent Interfaces in Slot 2	8-26
Transparent Interfaces in Slot 4	8-27
OSC Interfaces	8-27
APS	8-27
Node 3	8-28
Patch Connections	8-29
Transparent Interfaces in Slot 3	8-29
Transparent Interfaces in Slot 5	8-30
OSC Interfaces	8-30
APS	8-30
Node 4	8-31
Patch Connections	8-32
Transparent Interfaces in Slot 8	8-32
Transparent Interfaces in Slot 10	8-33
OSC Interfaces	8-33
APS	8-33
Node 5	8-34
Patch Connections	8-35
Transparent Interfaces in Slot 9	8-35
Transparent Interfaces in Slot 11	8-36
OSC Interfaces	8-36
APS	8-36
Configuring a Meshed Ring with Splitter Protection and OSC	8-37
Node 1	8-38
Patch Connections	8-39
Transparent Interfaces in Slot 2	8-39
Transparent Interfaces in Slot 5	8-40
Transparent Interfaces in Slot 8	8-40
OSC Interfaces	8-40
APS	8-40

Node 2	8-42
Patch Connections	8-43
Transparent Interfaces in Slot 2	8-43
OSC Interfaces	8-44
APS	8-44
Node 3	8-45
Patch Connections	8-46
Transparent Interfaces in Slot 5	8-46
Transparent Interfaces in Slot 11	8-47
OSC Interfaces	8-47
APS	8-47
Node 4	8-48
Patch Connections	8-49
Transparent Interfaces in Slot 8	8-49
Transparent Interfaces in Slot 11	8-50
OSC Interfaces	8-50
APS	8-50
Configuring a Splitter Protected Meshed Ring with Unprotected Channels and OSC	8-52
Node 1	8-52
Node 2	8-53
Patch Connections	8-54
Transparent Interfaces in Slot 2	8-54
Transparent Interfaces in Slot 4	8-55
OSC Interfaces	8-55
APS	8-55
Node 3	8-56
Patch Connections	8-57
Transparent Interfaces in Slot 5	8-57
Transparent Interfaces in Slot 8	8-58
Transparent Interfaces in Slot 11	8-58
OSC Interfaces	8-58
APS	8-58
Node 4	8-59
Configuring a Meshed Ring with Line Card Protection and OSC	8-60
Node 1	8-60
Patch Connections	8-61
Transparent Interfaces	8-61
OSC Interfaces	8-62
APS	8-62

Node 2	8-64	
Patch Connections	8-65	
Transparent Interfaces in Slot 2	8-65	
Transparent Interfaces in Slot 4	8-66	
OSC Interfaces	8-66	
APS	8-66	
Node 3	8-67	
Patch Connections	8-68	
Transparent Interfaces in Slot 3	8-68	
Transparent Interfaces in Slot 5	8-69	
Transparent Interfaces in Slot 9	8-69	
Transparent Interfaces in Slot 11	8-69	
OSC Interfaces	8-69	
APS	8-70	
Node 4	8-71	
Patch Connections	8-72	
Transparent Interfaces in Slot 8	8-72	
Transparent Interfaces in Slot 10	8-73	
OSC Interfaces	8-73	
APS	8-73	
Configuring a Line Card Protected Meshed Ring with Unprotected Channels and OSC	8-74	
Node 1	8-74	
Node 2	8-75	
Patch Connections	8-76	
Transparent Interfaces in Slot 2	8-76	
Transparent Interfaces in Slot 4	8-77	
Transparent Interfaces in Slot 8	8-77	
OSC Interfaces	8-77	
APS	8-78	
Node 3	8-79	
Patch Connections	8-80	
Transparent Interfaces in Slot 3	8-80	
Transparent Interfaces in Slot 5	8-81	
Transparent Interfaces in Slot 8	8-81	
Transparent Interfaces in Slot 9	8-81	
Transparent Interfaces in Slot 11	8-81	
OSC Interfaces	8-81	
APS	8-82	
Node 4	8-83	

Monitoring the Network Topology	9-1
About the OSC	9-1
Hardware Guidelines for Using OSC	9-2
Configuring CDP	9-3
Configuring Global CDP	9-3
Displaying the Global CDP Configuration	9-4
Displaying Global CDP Information	9-4
Clearing Global CDP Information	9-5
Configuring CDP Topology Discovery on Wdm Interfaces	9-5
Displaying CDP Information for Wdm Interfaces	9-6
Configuring OSCP	9-7
Configuring the Hello Interval Timer	9-7
Configuring the Hello Hold-Down Timer	9-7
Configuring the Inactivity Factor	9-8
Displaying the OSCP Configuration	9-8
Displaying OSCP Neighbors	9-8
Configuring IP on the OSC	9-9
Verifying Connectivity Over the OSC	9-11
Configuring SNMP	9-11
Enabling MIB Notifications	9-12
Alarm Threshold MIB	9-12
APS MIB	9-13
OSCP MIB	9-13
Patch MIB	9-13
Physical Topology MIB	9-14
Redundancy Facility MIB	9-14
Monitoring Without the OSC	9-15
Setting up Connections to Individual Nodes	9-15
Manually Configuring the Network Topology	9-15
Displaying the Network Topology	9-16
Configuring Transparent Interfaces in the Network Topology	9-17
Displaying Topology Information for Transparent Interfaces	9-17
About Embedded CiscoView	9-18
Installing and Configuring Embedded CiscoView	9-18
Accessing Embedded CiscoView	9-21
Displaying Embedded CiscoView Information	9-21



Preface

This preface describes the audience, organization, and conventions for the *Cisco ONS 15540 ESP Configuration Guide and Command Reference*, and provides information on how to obtain related documentation.

The information contained in this document pertains to the entire range of hardware supported on the Cisco ONS 15540 platform. As new hardware and Cisco IOS software releases are made available for the Cisco ONS 15540 platform, verification of compatibility becomes extremely important. To ensure that your hardware is supported by your release of Cisco IOS software, see the “New and Changed Information” section on page xiii. Also refer to the “Hardware Supported” section of the latest release notes for the Cisco ONS 15540 ESP (Extended Services Platform).

Audience

This publication is intended for experienced network administrators who are responsible for configuring and maintaining the Cisco ONS 15540 ESP.

New and Changed Information

The following table lists the changes and additions to this guide.

Feature	Release	Description	Location
Extended range transparent transponder module with selectable transceivers	12.1(11b)E	A transponder module that accepts selectable transceivers supporting specific protocol rates.	“Extended Range Transponder Modules with Selectable Transceivers” section on page 1-4

Organization

This guide is organized as follows:

Chapter	Title	Description
Chapter 1	Product Overview	Provides an overview of the Cisco ONS 15540 features and functions.
Chapter 2	Before You Begin	Describes how to access the commands available in each command mode and explains the primary uses for each command mode. Also, this chapter describes the interface model and configuration overview.
Chapter 3	Initial Configuration	Describes the initial configuration of the Cisco ONS 15540.
Chapter 4	Configuring Interfaces and Patch Connections	Describes how to configure Cisco ONS 15540 interfaces and patch connections.
Chapter 5	Configuring Splitter Protection and Line Card Protection with APS	Describes how to configure signal protection on Cisco ONS 15540 systems and networks.
Chapter 6	Configuring Dual Shelf Nodes	Describes how to configure a network node with two Cisco ONS 15540 shelves supporting 32 channels with line card protection.
Chapter 7	Configuring Point-to-Point Topologies	Describes how to configure point-to-point network topologies with examples.
Chapter 8	Configuring Ring Topologies	Describes how to configure ring network topologies with examples.
Chapter 9	Monitoring the Network Topology	Describes how to monitor the operation of Cisco ONS 15540 networks.

Related Documentation

This document provides detailed configuration examples for the Cisco ONS 15540; however, it does not provide complete extensive background information on DWDM (dense wavelength division multiplexing) technology or the architecture of the Cisco ONS 15540. For background information on DWDM technology, refer to the *Introduction to DWDM Technology* document. For detailed information on the Cisco ONS 15540 architecture and functionality, refer to the *Cisco ONS 15540 ESP Planning and Design Guide*.

You will also find useful information on the CLI (command-line interface) and basic shelf management in the *Cisco IOS Configuration Fundamentals Configuration Guide* and the *Cisco IOS Configuration Fundamentals Command Reference* publication.

Refer to the following documents for detailed design considerations, hardware installation, safety information, troubleshooting information, and glossary terms:

- *Introduction to DWDM Technology*
- *Cisco ONS 15540 ESP Planning and Design Guide*
- *Regulatory Compliance and Safety Information for the Cisco ONS 15540 ESP*

- *Cisco ONS 15540 ESP Hardware Installation Guide*
- *Cisco ONS 15540 ESP Troubleshooting Guide*
- *Glossary for Optical Networking Terms*
- *Cisco ONS 15540 ESP MIB Quick Reference*

Document Conventions

This document uses the following conventions:

Convention	Description
boldface font	Commands and keywords are in boldface .
<i>italic font</i>	Arguments for which you supply values are in <i>italics</i> .
[]	Elements in square brackets are optional.
{ x y z }	Alternative keywords are grouped in braces and separated by vertical bars.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
screen font	Terminal sessions and information the system displays are in screen font.
boldface screen font	Information you must enter is in boldface screen font .
<i>italic screen font</i>	Arguments for which you supply values are in <i>italic screen font</i> .
→	This pointer highlights an important line of text in an example.
^	The symbol ^ represents the key labeled Control—for example, the key combination ^D in a screen display means hold down the Control key while you press the D key.
< >	Nonprinting characters, such as passwords, are in angle brackets.

Notes use the following conventions:



Note

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the publication.

Cautions use the following conventions:

**Caution**

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Obtaining Documentation

Cisco provides several ways to obtain documentation, technical assistance, and other technical resources. These sections explain how to obtain technical information from Cisco Systems.

Cisco.com

You can access the most current Cisco documentation on the World Wide Web at this URL:

<http://www.cisco.com/univercd/home/home.htm>

You can access the Cisco website at this URL:

<http://www.cisco.com>

International Cisco websites can be accessed from this URL:

http://www.cisco.com/public/countries_languages.shtml

Documentation CD-ROM

Cisco documentation and additional literature are available in a Cisco Documentation CD-ROM package, which may have shipped with your product. The Documentation CD-ROM is updated regularly and may be more current than printed documentation. The CD-ROM package is available as a single unit or through an annual or quarterly subscription.

Registered Cisco.com users can order a single Documentation CD-ROM (product number DOC-CONDOCCD=) through the Cisco Ordering tool:

http://www.cisco.com/en/US/partner/ordering/ordering_place_order_ordering_tool_launch.html

All users can order annual or quarterly subscriptions through the online Subscription Store:

<http://www.cisco.com/go/subscription>

Ordering Documentation

You can find instructions for ordering documentation at this URL:

http://www.cisco.com/univercd/cc/td/doc/es_inpk/pdi.htm

You can order Cisco documentation in these ways:

- Registered Cisco.com users (Cisco direct customers) can order Cisco product documentation from the Networking Products Marketplace:

<http://www.cisco.com/en/US/partner/ordering/index.shtml>

- Nonregistered Cisco.com users can order documentation through a local account representative by calling Cisco Systems Corporate Headquarters (California, USA.) at 408 526-7208 or, elsewhere in North America, by calling 800 553-NETS (6387).

Documentation Feedback

You can submit comments electronically on Cisco.com. On the Cisco Documentation home page, click **Feedback** at the top of the page.

You can send your comments in e-mail to bug-doc@cisco.com.

You can submit comments by using the response card (if present) behind the front cover of your document or by writing to the following address:

Cisco Systems
Attn: Customer Document Ordering
170 West Tasman Drive
San Jose, CA 95134-9883

We appreciate your comments.

Obtaining Technical Assistance

For all customers, partners, resellers, and distributors who hold valid Cisco service contracts, the Cisco Technical Assistance Center (TAC) provides 24-hour, award-winning technical support services, online and over the phone. Cisco.com features the Cisco TAC website as an online starting point for technical assistance.

Cisco TAC Website

The Cisco TAC website (<http://www.cisco.com/tac>) provides online documents and tools for troubleshooting and resolving technical issues with Cisco products and technologies. The Cisco TAC website is available 24 hours a day, 365 days a year.

Accessing all the tools on the Cisco TAC website requires a Cisco.com user ID and password. If you have a valid service contract but do not have a login ID or password, register at this URL:

<http://tools.cisco.com/RPF/register/register.do>

Opening a TAC Case

The online TAC Case Open Tool (<http://www.cisco.com/tac/caseopen>) is the fastest way to open P3 and P4 cases. (Your network is minimally impaired or you require product information). After you describe your situation, the TAC Case Open Tool automatically recommends resources for an immediate solution. If your issue is not resolved using these recommendations, your case will be assigned to a Cisco TAC engineer.

For P1 or P2 cases (your production network is down or severely degraded) or if you do not have Internet access, contact Cisco TAC by telephone. Cisco TAC engineers are assigned immediately to P1 and P2 cases to help keep your business operations running smoothly.

To open a case by telephone, use one of the following numbers:

Asia-Pacific: +61 2 8446 7411 (Australia: 1 800 805 227)

EMEA: +32 2 704 55 55

USA: 1 800 553-2447

For a complete listing of Cisco TAC contacts, go to this URL:

<http://www.cisco.com/warp/public/687/Directory/DirTAC.shtml>

TAC Case Priority Definitions

To ensure that all cases are reported in a standard format, Cisco has established case priority definitions.

Priority 1 (P1)—Your network is “down” or there is a critical impact to your business operations. You and Cisco will commit all necessary resources around the clock to resolve the situation.

Priority 2 (P2)—Operation of an existing network is severely degraded, or significant aspects of your business operation are negatively affected by inadequate performance of Cisco products. You and Cisco will commit full-time resources during normal business hours to resolve the situation.

Priority 3 (P3)—Operational performance of your network is impaired, but most business operations remain functional. You and Cisco will commit resources during normal business hours to restore service to satisfactory levels.

Priority 4 (P4)—You require information or assistance with Cisco product capabilities, installation, or configuration. There is little or no effect on your business operations.

Obtaining Additional Publications and Information

Information about Cisco products, technologies, and network solutions is available from various online and printed sources.

- The *Cisco Product Catalog* describes the networking products offered by Cisco Systems, as well as ordering and customer support services. Access the *Cisco Product Catalog* at this URL:
http://www.cisco.com/en/US/products/products_catalog_links_launch.html
- Cisco Press publishes a wide range of networking publications. Cisco suggests these titles for new and experienced users: *Internetworking Terms and Acronyms Dictionary*, *Internetworking Technology Handbook*, *Internetworking Troubleshooting Guide*, and the *Internetworking Design Guide*. For current Cisco Press titles and other information, go to Cisco Press online at this URL:
<http://www.ciscopress.com>
- Packet magazine is the Cisco quarterly publication that provides the latest networking trends, technology breakthroughs, and Cisco products and solutions to help industry professionals get the most from their networking investment. Included are networking deployment and troubleshooting tips, configuration examples, customer case studies, tutorials and training, certification information, and links to numerous in-depth online resources. You can access Packet magazine at this URL:
<http://www.cisco.com/go/packet>
- iQ Magazine is the Cisco bimonthly publication that delivers the latest information about Internet business strategies for executives. You can access iQ Magazine at this URL:
<http://www.cisco.com/go/iqmagazine>

- Internet Protocol Journal is a quarterly journal published by Cisco Systems for engineering professionals involved in designing, developing, and operating public and private internets and intranets. You can access the Internet Protocol Journal at this URL:
http://www.cisco.com/en/US/about/ac123/ac147/about_cisco_the_internet_protocol_journal.html
- Training—Cisco offers world-class networking training. Current offerings in network training are listed at this URL:
<http://www.cisco.com/en/US/learning/index.html>



Product Overview

The Cisco ONS 15540 ESP (Extended Services Platform) is an optical transport platform that employs DWDM (dense wavelength division multiplexing) technology. With the Cisco ONS 15540 ESP, users can take advantage of the availability of dark fiber to build a common infrastructure that supports data, SAN (storage area network), and TDM (time-division multiplexing) traffic. For more information about DWDM technology and applications, refer to the *Introduction to DWDM Technology* publication and the *Cisco ONS 15540 ESP Planning and Design Guide*.

This chapter includes the following sections:

- Cisco ONS 15540 Hardware Features, page 1-1
- Cisco ONS 15540 Software Feature Overview, page 1-6


Cisco ONS 15540 Hardware Features

This section describes the hardware features and components of the Cisco ONS 15540.

Chassis Overview

The Cisco ONS 15540 uses a 12-slot modular vertical chassis. As you face the chassis, the two leftmost slots (slots 0 and 1) hold the optical mux/demux motherboards, which are populated with optical mux/demux modules. Slots 2 through 5 and 8 through 11 hold the line card motherboards, which are populated with transponder modules. Slots 6 and 7 hold the processor cards (see Figure 1-1). Air inlet, fan tray, and cable management are located beneath the modular slots. The system has an optical backplane for carrying signals between the transponders and the mux/demux modules, and an electrical backplane for system control.

Figure 1-1 Cisco ONS 15540 Shelf Layout

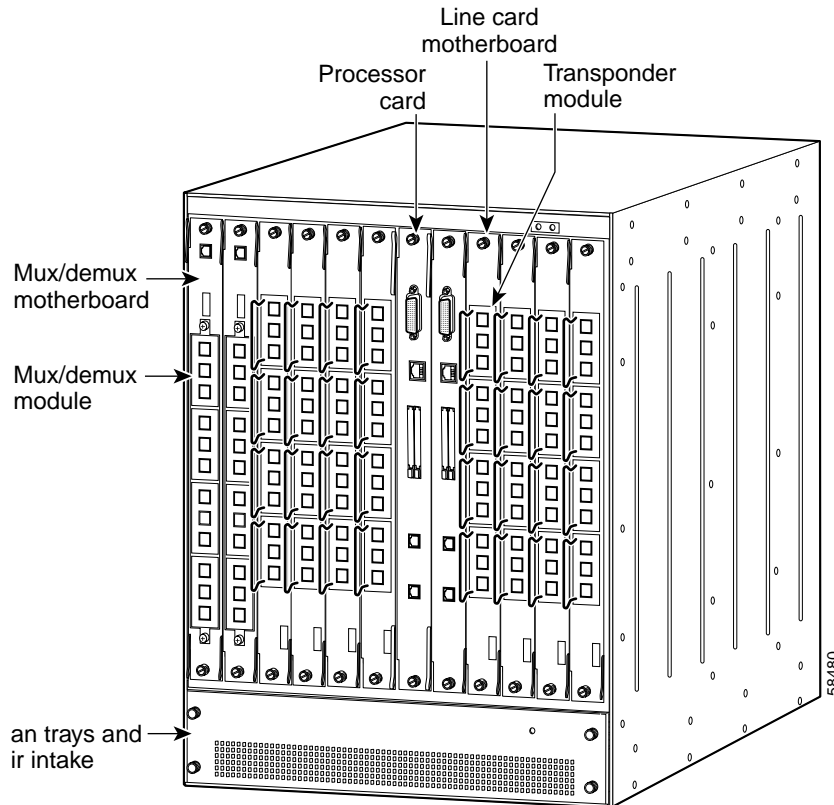

Component Summary

The Cisco ONS 15540 supports the following hot-swappable modular hardware components:

- Line card motherboards—Up to eight in a system, each of which accepts up to four transponder modules. The line card motherboards are modular and can be populated according to user needs. There are three types of line card motherboards: splitter protected, unprotected “west” direction, and unprotected “east” direction.
- Transponder modules—Up to four per line card motherboard. Each transponder module has a single external interface to the client side and an internal interface that connects over the system’s optical backplane to the mux/demux modules. The transponder modules are hot pluggable, permitting in-service upgrades and replacement. The transponder modules transmit the ITU wavelength, or channel, to the mux/demux modules.
- Optical mux/demux motherboards—One per system for unprotected operation or two per system for protection. Each mux/demux motherboard can accept up to four mux/demux modules. The mux/demux motherboards are modular and can be populated according to user needs.
- Optical add/drop mux/demux modules—Up to four per mux/demux motherboard. Each add/drop mux/demux module can multiplex and demultiplex a band of 4 or 8 channels, for a maximum of 32 channels. Channels not filtered by the OADM module are passed on to the next add/drop mux/demux module. The add/drop mux/demux modules connect to the trunk side and to the transponder modules over the optical backplane.

- Optical terminal mux/demux modules—Up to two per mux/demux motherboard. Each terminal mux/demux module can multiplex and demultiplex a band of 16 channels, for a maximum of 32 channels. All of the channels received by the terminal mux/demux modules are terminated, none are passed through. The terminal mux/demux modules connect to the trunk side and to the transponder modules over the optical backplane.
- Processor cards—Two per system for fault tolerance. The processor cards provide system processing, redundancy arbitration, clocking, and other central functions.

Transponder Modules

In the transponder module, the client signal is converted into an ITU-compliant wavelength, which is cross-connected over the optical backplane to the mux/demux modules. You can populate the line card motherboard subcard slots with as few or as many transponder modules as required (up to 32) to support the desired number of client signals, or data channels.

All client signals are supported in 3R (reshape, retime, retransmit) mode, regardless of protocol encapsulation type.

The Cisco ONS 15540 supports three types of single interface transponder modules:

- SM (single-mode) transponder modules
- MM (multimode) transponder modules
- Extended range transponder modules with selectable transceivers

SM Transponder Modules

SM transponders modules have a fixed, non-pluggable transceivers for the single client interface. SM transponder modules accept SM client signals on the 1310-nm wavelength through an SC connector and support client signal clock rates ranging from 16 Mbps to 2.5 Gbps.

On the trunk side, the SM transponder modules have output (laser) power in the range of 4 to 8 dBm and receive (detector) sensitivity of –28 dBm. For more information on power budget planning, refer to the *Cisco ONS 15540 ESP Planning and Design Guide*. For power budget specifications for individual components, refer to the *Cisco ONS 15540 ESP Hardware Installation Guide*.

The following protocol encapsulation types are supported in 3R mode plus protocol monitoring:

- ESCON (Enterprise Systems Connection) (200 Mbps) SM
- Fibre Channel (1 Gbps) SM
- FICON (Fiber Connection) (800 Mbps) SM
- Gigabit Ethernet (1000 Mbps) SM
- SDH (Synchronous Digital Hierarchy) STM-1 SM
- SDH STM-4 SM
- SDH STM-16 SM
- SONET OC-3 SM
- SONET OC-12 SM
- SONET OC-48 SM
- ISC (Intersystem Channel Links) compatibility mode

The following protocol encapsulation types are supported in 3R mode without protocol monitoring:

- Fast Ethernet SM
- FDDI SM
- Fibre Channel (2 Gbps) SM
- ISC peer mode SM

The SM transponder modules also support the OFC (open fiber control) safety protocol for Fibre Channel, ISC compatibility mode, and FICON.

MM Transponder Modules

MM transponder modules have a fixed, non-pluggable transceivers for the single client interface. MM transponder modules accept both SM client signals and MM client signals on the 1310-nm wavelength through an SC connector and support client signal clock rates ranging from 16 Mbps to 622 Mbps.

On the trunk side, the MM transponder modules have output (laser) power in the range of 4 to 8 dBm and receive (detector) sensitivity of -28 dBm. For more information on power budget planning, refer to the *Cisco ONS 15540 ESP Planning and Design Guide*. For power budget specifications for individual components, refer to the *Cisco ONS 15540 ESP Hardware Installation Guide*.

The following protocol encapsulation types are supported in 3R mode plus protocol monitoring:

- ESCON (Enterprise Systems Connection) (200 Mbps) SM and MM
- SDH (Synchronous Digital Hierarchy) STM-1 SM and MM
- SDH STM-4 SM and MM
- SONET OC-3 SM and MM
- SONET OC-12 SM and MM

The following protocol encapsulation types are supported in 3R mode without protocol monitoring:

- Fast Ethernet SM
- FDDI SM
- Sysplex CLO (control link oscillator) MM
- Sysplex ETR (external timer reference) MM

Extended Range Transponder Modules with Selectable Transceivers

The extended range transponder module accepts a selectable transceiver module that supports a specific protocol rate.

On the trunk side, the Type 2 extended range transponder modules have output (laser) power in the range of 5 to 10 dBm and receive (detector) sensitivity of -28 dBm. For more information on power budget planning, refer to the *Cisco ONS 15540 ESP Planning and Design Guide*. For power budget specifications for individual components, refer to the *Cisco ONS 15540 ESP Hardware Installation Guide*.

Table 1-1 lists features for the selectable transceivers supported by the extended range transponders.

Table 1-1 Selectable Transceiver Features

Part Number	Supported Protocols	Fiber Type	Wavelength	Connector Type
15500-XVRA-01A2	ESCON, SONET OC-3 SR, SDH STM-1	MM 62.5/125 μ m	1310 nm	MT-RJ
15500-XVRA-02C1	Gigabit Ethernet ¹ , Fibre Channel (1 Gbps) ²	MM 50/125 μ m MM 62.5/125 μ m	850 nm	Duplex LC
15500-XVRA-02C2	Fibre Channel (2 Gbps) ³	MM 50/125 μ m MM 62.5/125 μ m	850 nm	Duplex LC
15500-XVRA-03B1	Gigabit Ethernet ⁴ , Fibre Channel (1 Gbps) ⁵	SM 9/125 μ m	1310 nm	Duplex LC
15500-XVRA-03B2	Fibre Channel (1 Gbps ⁶ and 2 Gbps ⁷)	SM 9/125 μ m	1310 nm	Duplex LC
15500-XVRA-06B1	SONET OC-12 SR ⁸ , SDH STM-4	SM 9/125 μ m	1310 nm	Duplex LC
15500-XVRA-07B1	SONET OC-48 SR, SDH STM-16	SM 9/125 μ m	1310 nm	Duplex LC

1. 1000BaseSX
2. FC-0-100-M5-SN-S and FC-0-100-M6-SN-S standards
3. FC-0-200-M5-SN-S and FC-0-200-M6-SN-S standards
4. 1000BaseLX
5. FC-0-100-SM-LC-S standard
6. FC-0-100-SM-LC-S standard
7. FC-0-200-SM-LC-S standard
8. SR = short range

The following protocols can be monitored with the extended range transponder modules:

- ESCON (Enterprise Systems Connection)
- Fibre Channel (1 Gbps only)
- FICON (Fiber Connection)
- Gigabit Ethernet
- SDH (Synchronous Digital Hierarchy) (STM-1, STM-4, STM-16)
- SONET (OC-3, OC-12, OC-48)

ISC (compatibility mode only)The extended range transponder modules also support the OFC (open fiber control) safety protocol for Fibre Channel.

Mux/Demux Modules

The optical mux/demux modules multiplex signals received over the optical backplane from the transponder modules. The optical mux/demux modules also demultiplex the received signals from the trunk side.

Processor Cards

The Cisco ONS 15540 includes two processor cards for redundancy, one in active mode and the other in hot-standby mode. Each processor card is comprised of a number of subsystems, including a CPU, a clock subsystem, an Ethernet switch for communication between processors and with the LRC (line card redundancy controller) on the mux/demux and line card motherboards, and an SRC (switchcard redundancy controller). The active processor controls the system. All motherboards in the system use the system clock and synchronization signals from the active processor. Interfaces on the processor cards permit access by 10/100 Ethernet, console terminal, or modem connections.

Standards Compliance

For information on standards compliance for the Cisco ONS 15540, refer to the *Regulatory Compliance and Safety Information for the Cisco ONS 15540 ESP* publication.

Cisco ONS 15540 Software Feature Overview

The Cisco ONS 15540 offers the following software functionality:

- Cisco IOS software on the processor.
- Autoconfiguration at system boot.
- Autodiscovery of network neighbors.
- Online diagnostics.
- Processor redundancy provided by arbitration of processor status and switchover in case of failure without loss of connections.
- Autosynchronization of startup and running configurations between redundant processor cards.
- Support for in-service software upgrades.
- Support for per-channel APS (Automatic Protection Switching) in point-to-point and ring topologies using redundant subsystems that monitor link integrity and signal quality.
- Unidirectional and bidirectional 1+1 path switching.
- System configuration and management through the CLI (command-line interface), accessible through an Ethernet connection or console terminal.
- Optical power monitoring on the trunk side of the transponder module, digital monitoring on both client and trunk sides of the transponder module, and per-channel transponder module in-service and out-of-service loopback (client and trunk sides).
- Optional out-of-band management of other Cisco ONS 15540 systems on the network through the OSC (optical supervisory channel).
- Support for network management systems that use SNMP. Its capabilities include configuration management, fault isolation, topology discovery, and path trace.

Network Management Systems

The Cisco ONS 15540 is supported by the network management system CiscoWorks2000, which includes the following:

- CiscoView
- DFM (Device Fault Manager)

For Embedded CiscoView configuration information, see the “Installing and Configuring Embedded CiscoView” section on page 9-18.

Optical Supervisory Channel

The Cisco ONS 15540 supports an optional out-of-band management channel for communicating between systems on the network. Using a 33rd wavelength (channel 0), the OSC allows control and management traffic to be carried without a separate Ethernet connection to each Cisco ONS 15540 in the network. The OSC always terminates on a neighboring node. By contrast, data channels may or may not be terminated on a given node, depending on whether the channels on the mux/demux modules are treated as either express (pass-through) or add/drop channels.

The OSC carries the following types of information:

- CDP (Cisco Discovery Protocol) packets—Used to discover neighboring devices
- IP packets—Used for SNMP and Telnet sessions between nodes
- OSCP (OSC Protocol) packets—Used to determine whether the OSC link is up using a Hello protocol
- APS protocol packets—Used for controlling signal path switching



Note

When the OSC is not present, Cisco ONS 15540 systems can be managed individually by separate Ethernet connections.

The OSC uses a dedicated laser and detector on a mux/demux motherboard. The OSC is a full duplex channel that can use a single ring for transmit and receive.

For more information on the OSC and managing Cisco ONS 15540 networks, see Chapter 9, “Monitoring the Network Topology.”

Online Diagnostics

The Cisco ONS 15540 provides the following types of online diagnostic tests:

- Background tests checking system component status and access
- OIR (online insertion and removal) tests for motherboards, modules, and standby processors

For more information on using the online diagnostics, refer to the *Cisco ONS 15540 ESP Troubleshooting Guide*.

Network Topologies

The Cisco ONS 15540 supports the following types of topologies:

- Point-to-point
- Hubbed ring
- Meshed ring

For more information on network topologies, refer to the *Introduction to DWDM Technology* publication and the *Cisco ONS 15540 ESP Planning and Design Guide*. Also, for information about configuring network topologies, see Chapter 7, “Configuring Point-to-Point Topologies” and Chapter 8, “Configuring Ring Topologies.”



Before You Begin

This chapter provides basic information about the Cisco ONS 15540. This chapter includes the following topics:

- About the CLI, page 2-1
- About Cisco IOS Command Modes, page 2-1
- Interface Naming Conventions, page 2-4
- Configuration Overview, page 2-10

About the CLI

You can configure the Cisco ONS 15540 from the CLI (command-line interface) that runs on the system console or terminal, or by using remote access.

To use the CLI, your terminal must be connected to the Cisco ONS 15540 through the console port or one of the TTY lines. By default, the terminal is configured to a basic configuration, which should work for most terminal sessions.

About Cisco IOS Command Modes

The Cisco IOS user interface is divided into many different modes. The commands available to you depend on which mode you are currently in. To get a list of the commands available in a given mode, type a question mark (?) at the system prompt.

When you start a session on the system, you begin in user mode, also called EXEC mode. Only a limited subset of the commands are available in EXEC mode. To have access to all commands, you must enter privileged EXEC mode. Normally, you must type in a password to access privileged EXEC mode. From privileged mode, you can type in any EXEC command or access global configuration mode. Most of the EXEC commands are one-time commands, such as **show** commands, which show the current configuration status, and **clear** commands, which clear counters or interfaces. The EXEC commands are not saved across system reboots or across processor switchovers.

You can monitor and control the standby processor with commands entered on the active processor. A subset of EXEC and privileged EXEC commands are available via the standby processor console.



Note

You can easily determine if you are accessing the active or the standby processor: The standby processor has “sby-” prefixed to the command prompt.

The configuration modes allow you to make changes to the running configuration. If you later save the configuration, these commands are stored across system reboots. You must start at global configuration mode. From global configuration mode, you can enter interface configuration mode, subinterface configuration mode, and a variety of submodes.

ROM (Read-only memory) monitor mode is a separate mode used when the system cannot boot properly. For example, your system or access server might enter ROM monitor mode if it does not find a valid system image when it is booting, or if its configuration file is corrupted at startup.

Table 2-1 lists and describes the most commonly used modes, how to enter the modes, and the resulting system prompts. The system prompt helps you identify which mode you are in and, therefore, which commands are available to you.

Table 2-1 Frequently Used IOS Command Modes

Mode	Description of Use	How to Access	Prompt
User EXEC	To connect to remote devices, change terminal settings on a temporary basis, perform basic tests, and display system information.	Log in.	Switch>
Privileged EXEC (Enable)	To set operating parameters. The privileged command set includes the commands in user EXEC mode, as well as the configure command. Use this command to access the other command modes.	From the user EXEC mode, enter the enable command and the enable password.	Switch#
Global configuration	To configure features that affect the system as a whole.	From the privileged EXEC mode, enter the configure terminal command.	Switch(config)#
Interface configuration	To enable features for a particular interface. Interface commands enable or modify the operation of a port.	From global configuration mode, enter the interface type location command. For example, enter interface fastethernet 0	Switch(config-if)#
Line configuration	To configure the console port or VTY line from the directly connected console or the virtual terminal used with Telnet.	From global configuration mode, enter the line console 0 command to configure the console port, or the line vty line-number command to configure a VTY line.	Switch(config-line)#
Redundancy configuration	To configure system redundancy.	From global configuration mode, enter the redundancy command.	Switch(config-red)#
APS ¹ configuration	To configure APS redundancy features.	From redundancy configuration mode, enter the associate group command.	Switch(config-aps)#

Table 2-1 Frequently Used IOS Command Modes (continued)

Mode	Description of Use	How to Access	Prompt
Threshold list configuration	To configure alarm threshold list attributes and thresholds.	From the global configuration mode, enter the threshold-list command.	Switch(config-t-list)#
Threshold configuration	To configure alarm threshold attributes.	From threshold list configuration mode, enter the threshold command.	Switch(config-threshold)#

1. Automatic Protection Switching

The Cisco IOS command interpreter, called the EXEC, interprets and executes the commands you enter. You can abbreviate commands and keywords by entering just enough characters to make the command unique from other commands. For example, you can abbreviate the **show** command to **sh** and the **configure terminal** command to **conf t**.

When you type **exit**, the CLI backs out one command mode level. In general, typing **exit** returns you to global configuration mode. To exit configuration mode completely and return to privileged EXEC mode, press **Ctrl-Z** or **end**.

Listing Cisco IOS Commands and Syntax

In any command mode, you can get a list of available commands by entering a question mark (?).

```
Switch> ?
```

To obtain a list of commands that begin with a particular character sequence, type in those characters followed immediately by the question mark (?). Do not include a space. This form of help is called word help, because it lists the words for you.

```
Switch# c?
calendar cd clear clock configure
connect copy
```

To list keywords or arguments, enter a question mark in place of a keyword or argument. Include a space before the question mark. This form of help is called command syntax help, because it reminds you which keywords or arguments are applicable based on the command, keywords, and arguments you have already entered.

```
Switch# configure ?
memory          Configure from NV memory
network         Configure from a TFTP network host
overwrite-network Overwrite NV memory from TFTP network host
terminal       Configure from the terminal
<cr>
```

To redisplay a command you previously entered, press the Up-arrow key. You can continue to press the Up-arrow key to see more previously issued commands.



Tips

If you are having trouble entering a command, check the system prompt and enter the question mark (?) for a list of available commands. You might be in the wrong command mode or using incorrect syntax.

You can press **Ctrl-Z** or **end** in any mode to immediately return to privileged EXEC (enable) mode, instead of entering **exit**, which returns you to the previous mode.

Interface Naming Conventions

The Cisco ONS 15540 has two types of motherboards, the line card motherboard and the mux/demux motherboard. Each line card motherboard can have up to four transponder modules. Each transponder module has two interfaces: an external client side interface and an internal trunk side interface. The client side interface connects to client equipment. The trunk side interface connects through the backplane to a mux/demux module in a mux/demux motherboard. The external interfaces of each mux/demux module connects to a pair of fibers, one for the receive direction and one for the transmit direction. The Cisco ONS 15540 CLI supports the following interface types:

- Transparent interfaces
- Wave interfaces
- Wavepatch interfaces
- Filter interfaces
- Wdm interfaces
- Thru interfaces
- Filterband interfaces
- Filtergroup interfaces
- OSC (optical supervisory channel) interfaces
- NME (network management Ethernet) interfaces

Figure 2-1 shows the interface relationships for splitter protected line card motherboards with transparent transponder modules and mux/demux motherboards with mux/demux modules and the OSC.

Figure 2-1 Interface Model with Splitter Protection


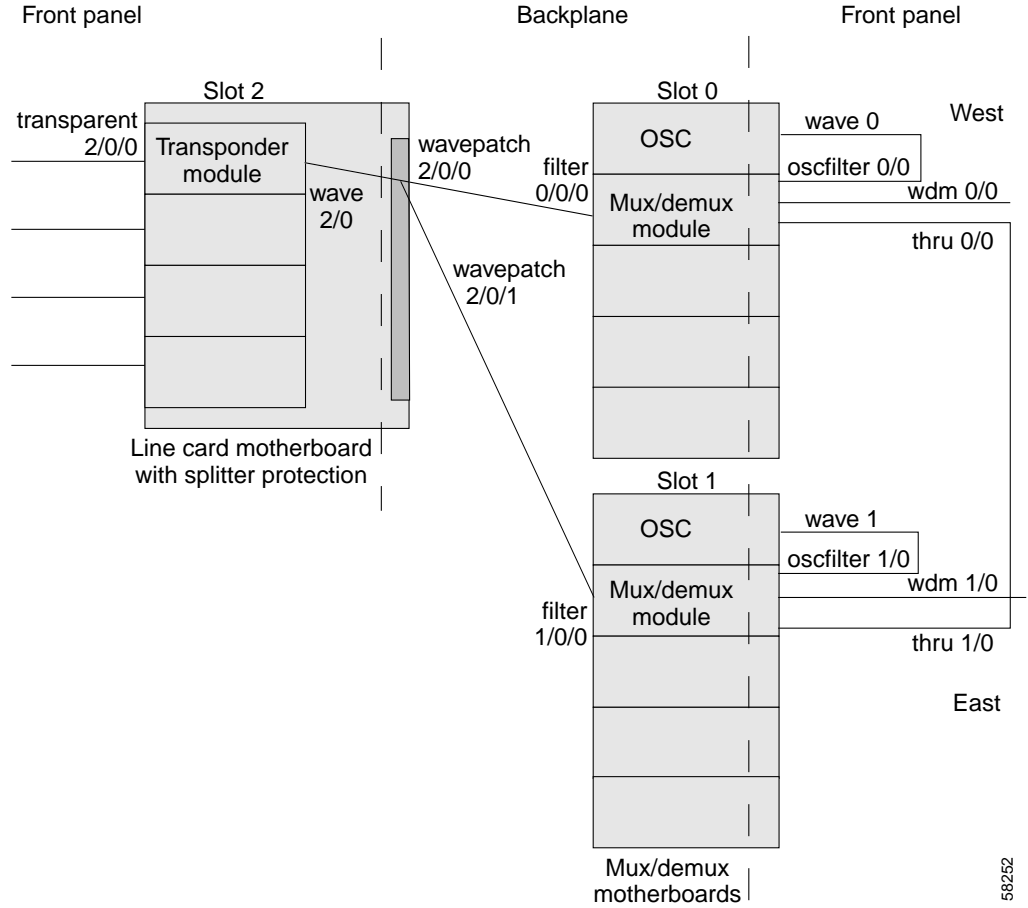


Figure 2-2 shows the interface relationship for unprotected line card motherboards with transparent transponder modules and mux/demux motherboards with mux/demux modules and the OSC.

Figure 2-2 Interface Model with Line Card Protection

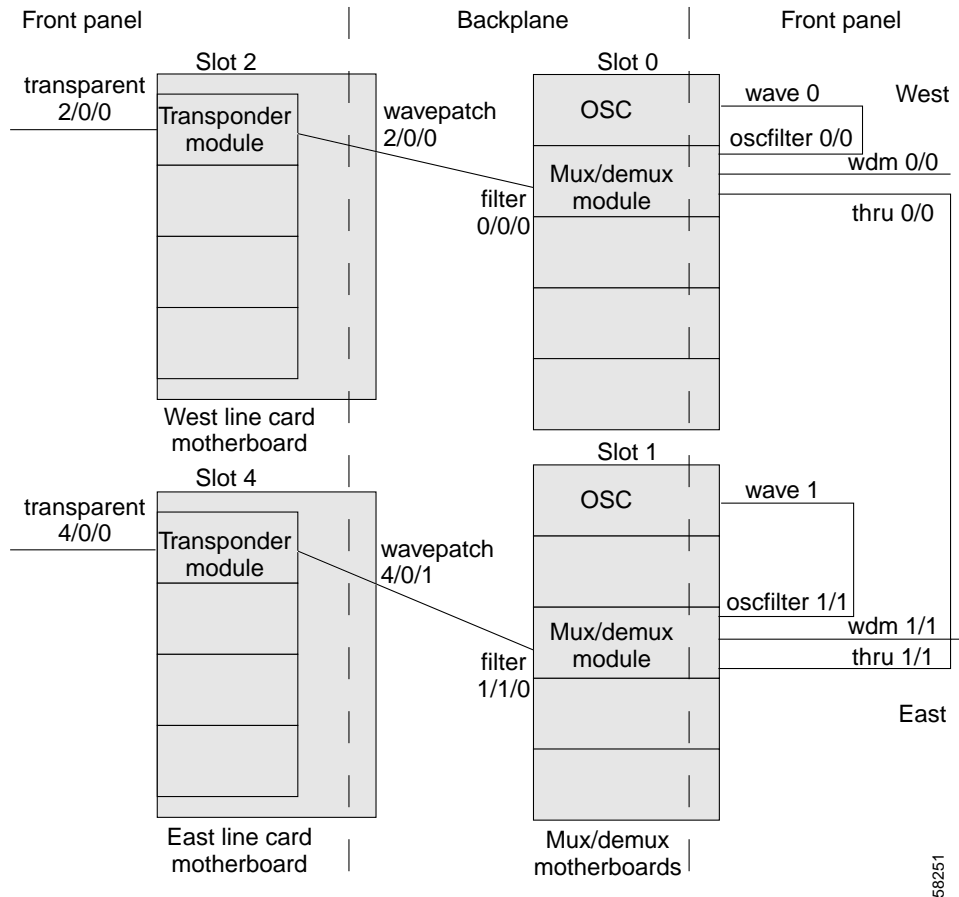

Transparent Interfaces

The transparent interfaces are the client side interfaces on the transponder modules. The interface does not terminate the protocol, hence the term *transparent*. Also, transparent applies to transparency with regard to networking protocols. The transparent interface connects to the wave interface on the backplane side of the transponder module (see Figure 2-1).

The naming convention for the client side interfaces on the transponder module is as follows:

transparent slot/subcard/port

Because the client side of a transponder module has only one port, the port number is always 0. For example, the client side interface identifier for a transponder module in subcard position 2 in slot 4 is transparent 4/2/0.

Wave Interfaces

The wave interface is the specific wavelength generated by a transponder module. The wave interface electrically connects to the client side transparent interface and optically connects to two wavepatch interfaces on a splitter protected line card motherboard (see Figure 2-1), or to one wavepatch interface on an unprotected east or west line card motherboard (see Figure 2-2).

The naming convention for wave interfaces is as follows:

wave *slot/subcard*

Wavepatch Interfaces

The wavepatch interface is the interface on the backplane side of the line card motherboard. The wave interfaces on the backplane side of the transponder modules connect to the wavepatch interfaces.

A splitter protected line card motherboard has four pairs of wavepatch interfaces, one pair for each transponder module position. One interface of a pair connects to a filter interface on a mux/demux module in slot 0 and the other connects to a filter interface on a mux/demux module in slot 1. (See Figure 2-1.)

Unprotected line card motherboards have only one wavepatch interface per transponder module position for a total of four. A wavepatch interface on a west line card motherboard connects to the filter interface on a mux/demux module in slot 0; a wavepatch interface on an east line card motherboard connects to the filter interface on a mux/demux module in slot 1. (See Figure 2-2.)

The wavepatch interface operational state reflects the operational state of the corresponding wave interface. If the wave interfaces are operationally down, the corresponding wavepatch interfaces are operationally down. Conversely, if the wave interfaces are operationally up, then the wavepatch interfaces are up. However, the administrative states of the wave and wavepatch interfaces are independently tracked.

The naming convention for wavepatch interfaces is as follows:

wavepatch *slot/subcard/port*

Filter Interfaces

The filter interface is the interface on the backplane side of a mux/demux module. Each filter interface corresponds to an individual wavelength filter. The filter interface connects a wavepatch interface on a line card motherboard to a wdm interface on the same mux/demux module (see Figure 2-1).

The naming convention for filter interfaces is as follows:

filter *slot/subcard/port*

The port numbers are 0 through 3 for 4-channel mux/demux modules, 0 through 7 for 8-channel mux/demux modules, and 0 through 15 for 16-channel mux/demux modules.

Wdm Interfaces

The wdm interface is the interface on the mux/demux module that receives the DWDM signal containing wavelengths to be dropped, or transmits the DWDM signal with added wavelengths. It represents the pairs of fibers (Tx and Rx) coming out of a mux/demux module. The wdm interface connects either to a wdm interface on another network node, or, in the case of an add/drop mux/demux modules, to a thru interface on another add/drop mux/demux module in the same slot (see Figure 2-1).

The naming convention for wdm interfaces is as follows:

wdm *slot/subcard*

Thru Interfaces

The thru interface is the interface on the add/drop mux/demux module that sends the DWDM signal to, or receives it from, another add/drop mux/demux module without altering it. It represents the pairs of fibers (Tx and Rx) coming out of a add/drop mux/demux module. The thru interface connects either to the wdm interface on an add/drop mux/demux module in the same slot, or to the thru interface on an add/drop mux/demux module in the other slot (see Figure 2-1).

The naming convention for thru interfaces is as follows:

thru *slot/subcard*

Filterband Interfaces

The filterband interface is an interface on the terminal mux/demux module that supports channels 1 through 16. This interface represents a pair of fibers (Rx and Tx) that transmit channels to, and receive channels from, the terminal mux/demux module that supports channels 17 through 32.

The naming convention for filterband interfaces is as follows:

filterband *slot/subcard/port*

Because each terminal mux/demux module occupies two subcard positions, the numbering for the filterband interface subcard position is either 0 or 2.

Filtergroup Interfaces

The filtergroup interface is an interface on the terminal mux/demux module that supports channels 17 through 32. This interface represents a pair of fibers (Tx and Rx) that transmit channels to, and receive channels from, the terminal mux/demux module that supports channels 1 through 16.

The naming convention for filtergroup interfaces is as follows:

filtergroup *slot/subcard/port*

Because each terminal mux/demux module occupies two subcard positions, the numbering for the filtergroup interface subcard position is either 0 or 2.

OSC Interfaces

The optional OSC provides management communications among the Cisco ONS 15540 systems in a network. The OSC is separate from the 32 data channels. The shelf can have two OSCs, one per mux/demux slot. Each OSC has two interfaces: one connection on the mux/demux motherboard and one on the mux/demux module that sends and receives the OSC wavelength on the network trunk (see Figure 2-1). Each interface represents the pairs of fibers (Tx and Rx).

The naming convention for the OSC interface on a mux/demux motherboard is as follows:

wave slot

The naming convention for the OSC interface on a mux/demux module is as follows:

oscfilter slot/subcard

The subcard position number for an oscfilter interface on a terminal mux/demux module is either 0 or 2 because the module occupies two subcard positions in the mux/demux motherboard.



Note

Only one mux/demux module per slot can have an oscfilter interface. For more information on hardware rules, refer to the *Cisco ONS 15540 ESP Planning and Design Guide*.

NME Interfaces

Each processor card has a Fast Ethernet interface, called an NME (network management Ethernet), for network management purposes. The NME interface on the active processor card is named fastethernet 0 and the NME interface on the standby processor card is named as fastethernet-sby 0.

Each NME interface has a unique MAC address. Also, you must configure each NME interface with a unique IP address. After a processor switchover, when standby processor card takes over as active, the IP and MAC addresses of the standby processor card are reinitialized to those of the active processor card.



Note

Network management system sessions and Telnet sessions are allowed on the NME interface on the active processor card (fastethernet 0) but not allowed on the NME interface on the standby processor card (fastethernet-sby 0).

Auxiliary Port Interfaces

Each processor card has an auxiliary port interface. This interface is named aux 0.



Note

Each Cisco ONS 15540 processor card has an ASE (aggregation shelf Ethernet) interface. This interface is not supported.

Configuration Overview

Configure your Cisco ONS 15540 systems and network using the following steps:

-
- Step 1** Select transponder modules, line card motherboards, mux/demux modules, and mux/demux motherboards to meet your requirements.
- For detailed information about the hardware components, refer to the *Cisco ONS 15540 ESP Hardware Installation Guide*. For detailed information on system planning and design, refer to the *Cisco ONS 15540 ESP Planning and Design Guide*.
- Step 2** Insert the modules, motherboards, and processor cards into the chassis.
- For detailed information on hardware configuration rules, refer to the *Cisco ONS 15540 ESP Planning and Design Guide*.
- Step 3** Configure the NME ports on the active processor card and on the standby processor card, if present.
- For detailed information on configuring the NME port, see Chapter 3, “Initial Configuration.”
- Step 4** Connect the mux/demux modules with optical cables. If present, connect the OSC interface on the mux/demux motherboard to the OSC interface on a mux/demux module in the same slot. Configure the patch connections with the CLI.
- For detailed information on cabling between mux/demux modules, refer to the *Cisco ONS 15540 ESP Planning and Design Guide*. For information on configuring patch connections with the CLI, see the “Configuring Patch Connections” section on page 4-18.
- Step 5** Verify the mux/demux connections using the **show patch** and **show connect** commands.
- For more information about the **show patch** and **show connect** commands, see the “Displaying Patch Connections” section on page 4-19 and the “About Cross Connections” section on page 4-20.
- Step 6** For all transparent interfaces in the shelf, configure either the protocol encapsulation or the clock rate for the client signal. Also, enable protocol monitoring for supported protocols.
- For detailed information on interface configuration, see Chapter 4, “Configuring Interfaces and Patch Connections.”
- Step 7** Configure APS.
- For detailed information on configuring APS, see Chapter 5, “Configuring Splitter Protection and Line Card Protection with APS.”
- Step 8** Configure processor card redundancy.
- For detailed information on processor card redundancy, see the “About Processor Card Redundancy” section on page 3-8.
- Step 9** Configure IP connectivity on the OSC for network management.
- For detailed information on configuring IP connectivity on the OFC, see the “Configuring IP on the OSC” section on page 9-9.
- Step 10** Configure CDP and the network topology.
- For detailed information on network monitoring, see Chapter 9, “Monitoring the Network Topology”.
-



Initial Configuration

This chapter describes how to configure the Cisco ONS 15540 so it can be accessed by other devices. This chapter includes the following sections:

- About the Processor Card, page 3-1
- Starting Up the Cisco ONS 15540, page 3-2
- Using the Console Ports, NME Ports, and Auxiliary Ports, page 3-2
- About Passwords, page 3-3
- Configuring IP Access on the NME Interface, page 3-3
- Configuring the Host Name, page 3-6
- About NTP, page 3-6
- Configuring NTP, page 3-7
- About Processor Card Redundancy, page 3-8
- Configuring Processor Card Redundancy, page 3-12

About the Processor Card

The processor card provides intelligence to the Cisco ONS 15540. The processor card supports SNMP (Simple Network Management Protocol) and many MIBs (Management Information Bases).

The Cisco ONS 15540 uses 64-bit MIPS RM7000 processors running at 250 MHz. The processor has primary cache comprised of 16 KB for instructions and 16 KB for data. The secondary cache is 256 KB for both instructions and data. A third-level cache controller supports 512 KB, 1 MB, 2 MB, 4 MB, and 8 MB block write-through cache. Both the primary cache and the secondary cache are integrated onto the processor. The optional third-level cache is controlled through an on-chip cache controller.

The processor card supports a dual-height Flash memory Type II slot that can accommodate two Flash PC Cards.

The Cisco ONS 15540 supports redundant operation with dual processor cards. The processor cards reside in slots 6 and 7, the seventh and eighth slots from the left as you face the chassis. For more information, see the “About Processor Card Redundancy” section on page 3-8.

For more information on the processor card, refer to the *Cisco ONS 15540 ESP Hardware Installation Guide*.

Starting Up the Cisco ONS 15540

Before starting up the Cisco ONS 15540, you should verify the following:

- The system is set for the correct AC (or DC) power voltages.
Refer to the *Cisco ONS 15540 ESP Hardware Installation Guide* for correct power voltages.
- The cables are connected to the system.
- A console terminal is connected to the system.

Refer to the *Cisco ONS 15540 ESP Hardware Installation Guide* for instructions.

When you start up the Cisco ONS 15540, the CLI (command-line interface) prompts you to enter the initial configuration dialog. Answer **no** to this prompt:

```
Would you like to enter the initial dialog? [yes]: no
```

You see the following user EXEC prompt:

```
Switch>
```

You can now begin configuring the processor card.

Using the Console Ports, NME Ports, and Auxiliary Ports

You can configure the Cisco ONS 15540 from a direct console connection to the console port or remotely through its NME (network management Ethernet) port.

- If you are using a direct console connection, configure your terminal emulation program for 9600 baud, 8 data bits, no parity, and 1 stop bit.
- If you are using the NME port interface, you must assign an IP address to the interface (fastethernet 0).

For interface configuration instructions, see the “Configuring IP Access on the NME Interface” section on page 3-3.

For further details on configuring ports and lines for management access, refer to the *Cisco IOS Configuration Fundamentals Configuration Guide*.

Modem Support

The auxiliary port of Cisco ONS 15540 provides for modem connection support. However, the hardware flow control signals are not available on the auxiliary port. The following settings on the modem are required:

- Enable auto answer mode
- Suppress result codes
- Disable hardware flow control
- Ensure auxiliary port terminal characteristics (speed/stop bits/parity) matches that of modem

You can configure your modem by setting the DIP switches on the modem itself or by setting them via terminal equipment connected to the modem. Refer to the user manual provided with your modem for the correct configuration information.

**Note**

Because there are no hardware flow control signals available on the auxiliary port, the auxiliary port terminal characteristics should match the modem settings.

For further details on configuring ports and modems for management access, refer to the *Cisco IOS Configuration Fundamentals Configuration Guide* and the *Cisco IOS Dial Services Configuration Guide: Terminal Services*.

About Passwords

You can configure both an enable password and an enable secret password. For maximum security, the enable password should be different from the enable secret password.

Enable Password

The enable password is a nonencrypted password. It can contain any number of uppercase and lowercase alphanumeric characters. Give the enable password only to users permitted to make configuration changes to the Cisco ONS 15540.

Enable Secret Password

The enable secret password is a secure, encrypted password. By setting an encrypted password, you can prevent unauthorized configuration changes. On systems running Cisco IOS, you must type in the enable secret password before you can access global configuration mode. You must type in the enable secret password to access boot ROM software.

An enable secret password contains from 1 to 25 uppercase and lowercase alphanumeric characters. The first character cannot be a number. Spaces are valid password characters. Leading spaces are ignored; trailing spaces are recognized.

You will configure passwords in the next section, Configuring IP Access on the NME Interface.

Configuring IP Access on the NME Interface

The Fast Ethernet interface, or NME, on the active processor card, named *fastethernet 0*, is the management interface that allows multiple, simultaneous Telnet or SNMP network management sessions.

You can remotely configure the Cisco ONS 15540 through the Fast Ethernet interface, but first you must configure an IP address so that the active processor card is reachable. There are two ways to configure the NME interface: manually from the CLI or by copying the configuration from the BOOTP server into NVRAM.

For information on configuring the NME interface on the standby processor card, *fastethernet-sby 0*, refer to the *Cisco ONS 15540 ESP Software Upgrade Guide*.

**Note**

Before you begin to manually configure an NME interface, obtain its IP address and IP subnet mask. Also make sure the console cable is connected to the console port.

To configure IP access on the NME port fastethernet 0 from the CLI, perform these steps from the console interface:

	Command	Purpose
Step 1	Switch> enable Switch#	Enters privileged EXEC mode.
Step 2	Switch# show hardware	Verifies the installed hardware part numbers and serial numbers.
Step 3	Switch# configure terminal Switch(config)#	Enters global configuration mode.
Step 4	Switch(config)# enable password <i>password</i>	Sets the enable password. See the “About Passwords” section on page 3-3.
Step 5	Switch(config)# enable secret <i>password</i>	Specifies an enable secret password. Once set, the enable secret password must be entered to gain access to global configuration mode.
Step 6	Switch(config)# interface fastethernet 0 Switch(config-if)#	Enters interface configuration mode on interface fastethernet 0, the NME port on the active processor card.
Step 7	Switch(config-if)# ip address <i>ip-address</i> <i>subnet-mask</i>	Specifies the IP address and IP subnet mask for the management port interface.
Step 8	Switch(config-if)# speed {10 100 auto}	Specifies the transmission speed. The default is auto (autonegotiation).
Step 9	Switch(config-if)# duplex {auto full half}	Specifies the duplex mode. The default is auto (autonegotiation).
Step 10	Switch(config-if)# exit Switch(config)#	Returns to global configuration mode.
Step 11	Switch(config)# ip default-gateway <i>ip-address</i>	Specifies the address of the default IP gateway node.
Step 12	Switch(config)# line vty <i>line-number</i> Switch(config-line)#	Enters line configuration mode for virtual terminal connections. Commands entered in this mode control the operation of Telnet sessions.
Step 13	Switch(config-line)# password <i>password</i>	Specifies a password for Telnet sessions.
Step 14	Switch(config-line)# end Switch#	Returns to privileged EXEC mode.
Step 15	Switch# copy system:running-config nvrAM:startup-config	Saves the configuration changes to NVRAM.

The Cisco ONS 15540 NME interface should now be operating correctly.



Note

If a processor card switchover occurs, you can use the same IP address to access the other processor card after it becomes active.

**Note**

In a dual shelf node configuration, perform these steps on the NME interfaces on both shelves in the node.

Displaying the NME Interface Configuration

To display the configuration of the NME interface, use the following EXEC command:

Command	Purpose
show interfaces fastethernet 0	Displays the NTP status.

Example

```
Switch# show interfaces fastethernet 0
FastEthernet0 is up, line protocol is up
  Hardware is AmdFE, address is 0000.1644.28ea (bia 0000.1644.28ea)
  → Internet address is 172.20.54.152/24
     MTU 1500 bytes, BW 10000 Kbit, DLY 1000 usec,
        reliability 255/255, txload 1/255, rxload 1/255
     Encapsulation ARPA, loopback not set
     Keepalive set (10 sec)
  → Half-duplex, 10Mb/s, 100BaseTX/FX
     ARP type: ARPA, ARP Timeout 04:00:00
     Last input 00:00:00, output 00:00:00, output hang never
     Last clearing of "show interface" counters never
     Input queue: 0/75/0/0 (size/max/drops/flushes); Total output drops: 0
     Queueing strategy: fifo
     Output queue :0/40 (size/max)
     5 minute input rate 3000 bits/sec, 6 packets/sec
     5 minute output rate 1000 bits/sec, 3 packets/sec
       36263 packets input, 3428728 bytes
         Received 17979 broadcasts, 0 runts, 0 giants, 0 throttles
         0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored
         0 watchdog
         0 input packets with dribble condition detected
       20363 packets output, 4279598 bytes, 0 underruns
         0 output errors, 8 collisions, 0 interface resets
         0 babbles, 0 late collision, 72 deferred
         0 lost carrier, 0 no carrier
         0 output buffer failures, 0 output buffers swapped out
```

Displaying the Operating Configurations

You can display the configuration file when you are in privileged EXEC (enable) mode.

- To see the current operating configuration, enter the following command at the enable prompt:

```
Switch# more system:running-config
```

- To see the configuration saved in NVRAM, enter the following command:

```
Switch# more nvram:startup-config
```

If you made changes to the configuration, but did not yet write the changes to NVRAM, the contents of the running-config file will differ from the contents of the startup-config file.

Configuring the Host Name

In addition to passwords and an IP address, your initial configuration should include the host name to make it easier to configure and troubleshoot the Cisco ONS 15540. To configure the host name, perform the following steps:

	Command	Purpose
Step 1	Switch# configure terminal Switch(config)#	Enters global configuration mode.
Step 2	Switch(config)# hostname name	Specifies a system name.
Step 3	<i>name</i> (config)# end <i>name</i> #	Returns to privileged EXEC mode. The prompt indicates that the host name has been set to the new name.
Step 4	<i>name</i> # copy system:running-config nvram:startup-config	Saves your configuration changes to NVRAM.



Note

The host name is also synchronized with the standby processor card. The host name prompt on the standby processor card appears with “sby-” as a prefix.

Example

The following example shows how to configure a new host name, beginning in privileged EXEC mode:

```
Switch# configure terminal
Switch(config)# hostname ONS15540
ONS15540(config)# end
ONS15540# copy system:running-config nvram:startup-config
```

About NTP

The NTP (Network Time Protocol) is a utility for synchronizing system clocks over the network, providing a precise time base for networked workstations and servers. In the NTP model, a hierarchy of primary and secondary servers pass timekeeping information by way of the Internet to cross-check clocks and correct errors arising from equipment or propagation failures.

An NTP server must be accessible by the client switch. NTP runs over UDP (User Datagram Protocol), which in turn runs over IP. NTP is documented in RFC 1305. All NTP communication uses UTC (Coordinated Universal Time), which is the same as Greenwich Mean Time. An NTP network usually gets its time from an authoritative time source, such as a radio clock or an atomic clock attached to a time server. NTP distributes this time across the network. NTP is extremely efficient; no more than one packet per minute is necessary to synchronize two machines to within a millisecond of one another.

NTP uses a stratum to describe how many NTP hops away a machine is from an authoritative time source. A stratum 1 time server has a radio or atomic clock directly attached, a stratum 2 time server receives its time from a stratum 1 time server, and so on. A machine running NTP automatically chooses as its time source the machine with the lowest stratum number that it is configured to communicate with through NTP. This strategy effectively builds a self-organizing tree of NTP speakers.

NTP has two ways to avoid synchronizing to a machine whose time might be ambiguous:

- NTP never synchronizes to a machine that is not synchronized itself.
- NTP compares the time reported by several machines and does not synchronize to a machine whose time is significantly different from the others, even if its stratum is lower.

The communications between machines running NTP, known as associations, are usually statically configured; each machine is given the IP address of all machines with which it should form associations. Accurate timekeeping is possible by exchanging NTP messages between each pair of machines with an association.

The Cisco implementation of NTP does not support stratum 1 service; it is not possible to connect to a radio or atomic clock. We recommend that you obtain the time service for your network from the public NTP servers available in the IP Internet. If the network is isolated from the Internet, the Cisco NTP implementation allows a machine to be configured so that it acts as though it is synchronized using NTP, when in fact it has determined the time using other means. Other machines then synchronize to that machine using NTP.

A number of manufacturers include NTP software for their host systems, and a version for systems running UNIX and its various derivatives is also publicly available. This software allows host systems to be time-synchronized as well.

Configuring NTP

NTP services are enabled on all interfaces by default. You can configure your Cisco ONS 15540 in either of the following NTP associations:

- Peer association—This system either synchronizes to the other system or allows the other system to synchronize to it.
- Server association—This system synchronizes to the other system, and not the other way around.

From global configuration mode, use the following procedure to configure NTP in a server association that transmits broadcast packets and periodically updates the calendar:

	Command	Purpose
Step 1	Switch(config)# ntp update-calendar	Updates hardware calendar with NTP time.
Step 2	Switch(config)# ntp server ip-address	Forms a server association with another system. You can specify multiple associations.
Step 3	Switch(config)# end Switch#	Returns to privileged EXEC mode.
Step 4	Switch# copy system:running-config nvram:startup-config	Saves your configuration changes to NVRAM.

For information on other optional NTP configurations, see the *Cisco IOS Configuration Fundamentals Configuration Guide*.

Displaying the NTP Configuration

To view the current NTP configuration and status, use the following EXEC command:

Command	Purpose
<code>show ntp status</code>	Displays the NTP status.

Example

The following example shows the NTP configuration and status:

```
Switch# show ntp status
Clock is synchronized, stratum 4, reference is 198.92.30.32
nominal freq is 250.0000 Hz, actual freq is 249.9999 Hz, precision is 2**24
reference time is B6C04F19.41018C62 (18:21:13.253 UTC Thu Feb 27 1997)
clock offset is 7.7674 msec, root delay is 113.39 msec
root dispersion is 386.72 msec, peer dispersion is 1.57 msec
```

About Processor Card Redundancy

The Cisco ONS 15540 supports fault tolerance by allowing the standby processor card to take over if the active processor card fails. This standby, or redundant, processor card runs in hot-standby state. In hot-standby state, the standby processor card is partially booted with Cisco IOS software, but no configuration is loaded.

At the time of a switchover from the active processor card, the standby processor card becomes active and loads the configuration as follows:

- If the running configuration file on the active and standby processor cards match, the new active processor card uses the running configuration file.
- If the running configuration file on the new active processor card is missing or invalid, the new active processor card uses the startup configuration file in its NVRAM (not the NVRAM of the former active processor card).

The former active processor card then reloads and becomes the standby processor card.



Note

If the standby processor card is unavailable, the system reports a minor alarm. Use the **show facility-alarm status** command to display the redundancy alarm status.

When the Cisco ONS 15540 is powered on, the two processor cards arbitrate to determine which is the active processor card and which is the standby processor card. The following rules apply during arbitration:

- A newly inserted processor card always comes up as the standby processor card, except in cases where the newly inserted card is the only one present.
- If one of the processor cards cannot boot its software image, the other processor card boots as the active processor card, allowing you to correct the situation manually.
- If none of the above conditions is true, the processor card in slot 6 becomes the active processor card.

During normal operation, the active processor card boots completely. The standby processor card partially boots, stopping short of parsing the configuration. From this point, the active and standby processor cards communicate periodically to synchronize any system configuration changes.


Table 3-1 describes the five processor card hardware states.

Table 3-1 Processor Card Hardware States

State	Description
Active	Processor card is currently providing clock signals and control for all system modules. The active processor card responds to the configured management IP address.
Standby	Processor card is partially booted in hot-standby state waiting to switch over when the active processor card fails, when it is rebooted or removed, or when a manual switchover is requested.
Nonparticipant	Processor card is in ROMMON mode, or is in the process of booting, or has not yet reached the hot-standby state. Manual switchovers are rejected unless the force option is used.
Not plugged in	Processor card slot is empty.
Error	Processor card is present but either the interprocess arbitration interface is not functioning or the processor card is not fully seated in the chassis slot.

Figure 3-1 shows the valid hardware transition states for a system with redundant processor cards.

Figure 3-1 Processor card State Transition Diagram

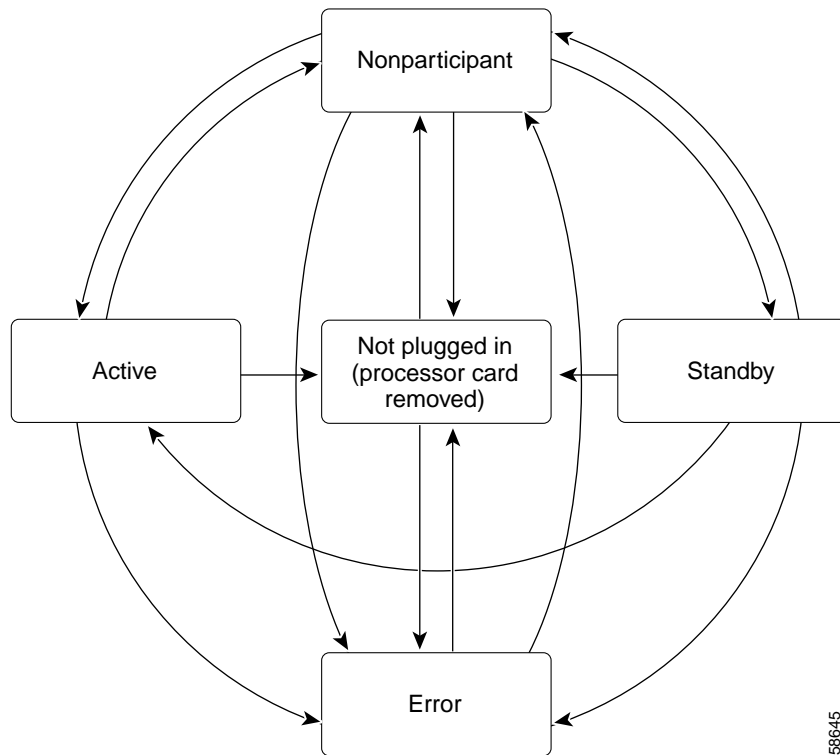

In response to redundancy events, such as switchovers and reboots of the active processor card, the software transitions through a series of software redundancy states. Table 3-2 lists some of the significant software states.

Table 3-2 Processor Card Software States

State	Description
Disabled	The standby processor card is not yet running the system image or is in maintenance mode.
Standby cold	The standby processor card is running the system image but has not begun to synchronize data from the active processor card.
Standby hot	The standby processor card has fully synchronized the configuration and other data from the active processor card. It will remain in the hot-standby state until a switchover occurs.
Active	The processor card is in the active hardware state and has completed all switchover or initial bootup processing. It is fully ready to control the system.

Redundant Operation Requirements

For fully redundant operation, the following requirements must be met:

- Two processor cards are required.
- The processor cards must have identical hardware configurations. This includes variables such as DRAM size, and so on.
- Both processor cards must have the same functional image.
- Both processor cards must be running compatible system images. System images are compatible across one major release.
- Both the running and startup configurations are automatically synchronized between the processor cards.
- Both processor cards must be set to autoboot (a default setting).

If these requirements are met, the Cisco ONS 15540 runs in redundant mode by default. If they are not met, the system is conditionally redundant.

**Note**

For detailed information on updating system images, refer to the *Cisco ONS 15540 ESP Software Upgrade Guide*.

Conditions Causing a Switchover from the Active Processor Card

The following conditions can cause a switchover from the active processor card to the standby processor card:

- The active processor card is removed or swapped. When the processor card functioning as the active processor card is removed, the standby processor card takes over. The Cisco ONS 15540 is nonredundant until a second processor card is inserted.
- The active processor card is rebooted. When a processor card functioning as the active processor card is rebooted, it relinquishes its active role if the standby processor card has reached the hot-standby state.
- The active processor card fails. The standby processor card takes over as the active processor card, using the last synchronized running configuration file (or the last saved startup configuration file if the running configuration file synchronization was disabled or failed).
- A switchover is manually forced with the **redundancy switch-activity** command.

Configuring Processor Card Redundancy

This section describes how to configure processor card redundancy for your Cisco ONS 15540.



Note

The initial default configuration will support processor card redundancy and database synchronization with no manual configuration required.

Forcing a Switchover from Privileged EXEC Mode

You can manually force the standby processor card to take over as the active processor card from privileged EXEC mode. To force a switchover from privileged EXEC mode, enter the following command on the active processor card CLI:

Command	Purpose
redundancy switch-activity [force]	Causes a processor card switchover. If the standby processor card has not reached the hot-standby software state, use the force option.

As long as you have not changed the default configuration register setting from autoboot, the standby processor card (formerly the active processor card) automatically boots until it reaches the hot-standby state.



Note

Data transmission through the system is not affected by a processor card switchover.

Example

The following example shows how to manually cause a processor card switchover from privileged EXEC mode:

```
Switch# redundancy switch-activity
This will reload the active unit and force a switch of activity [confirm] y
Preparing to switch activity

00:12:05: %SYS-5-RELOAD: Reload requested
<Information deleted>
```

Forcing a Switchover from ROM Monitor Mode

You can manually force the standby processor card to take over as the active processor card ROM monitor mode. To force a switchover from ROM monitor mode, enter the following commands on the active processor card CLI:

m

Command	Purpose
switchover	Causes a processor card reset and switchover. The processor card stays in ROM monitor mode.



Note

Using the **reset** command in ROM monitor mode on the active processor CLI under normal conditions does not cause a switchover.

Example

The following example shows how to manually cause a processor card switchover from ROM monitor mode:

```
<Information deleted>
```

```
➔ This CPU is ACTIVE (sev=0), peer CPU is NON-PARTICIPANT (sev=2)
MANHATTAN_OPTICAL platform with 131072 Kbytes of main memory

rommon 1 > switchover
System Bootstrap, Version 12.1(20010726:234219) [ffrazer-lh4 102], DEVELOPMENT S
FTWARE
Copyright (c) 1994-1999 by cisco Systems, Inc.
Flash size is 16777216

Reset Reason Register = RESET_REASON_SW_NMI (0x4)

Reset type 0x2

Reading monitor variables from NVRAM
Running reset I/O devices
Enabling interrupts

Initializing TLB

Initializing cache

Initializing required TLB entries
Initializing main memory

SDRAM DIMM size 67108864

Sizing NVRAM

Initializing PCMCIA controller

Initializing SRC FPGA
CPU arbitration

➔ This CPU is NON-PARTICIPANT (sev=2), peer CPU is ACTIVE (sev=0)
MANHATTAN_OPTICAL platform with 131072 Kbytes of main memory

rommon 1 >
```

Configuring Autoboot

If you have changed the default configuration register value from autoboot, you can change it back by performing the following steps, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch(config)# config-register 0x2102	Sets the configuration register for autoboot. ¹
Step 2	Switch(config)# boot system bootflash:filename	Sets the BOOT environment variable. This variable specifies the location and name of the system image file to use when automatically booting the system.
Step 3	Switch(config)# end Switch#	Returns to privileged EXEC mode.
Step 4	Switch# copy system:running-config nvrnram:startup-config	Saves the configuration to NVRAM. The new configuration register value takes effect after the next system reload.

1. This is the default configuration register setting. For details on using the configuration register to set boot parameters, refer to the *Cisco IOS Configuration Fundamentals Configuration Guide*.



Note

If the standby processor card remains in ROM monitor mode, you can manually boot the processor card using a system image either on the bootflash or on a Flash PC Card.

Example

The following example shows how to configure the Cisco ONS 15540 to autoboot using the first valid file on the Flash PC Card in slot 0:

```
Switch(config)# config-register 0x2102
Switch(config)# boot system flash slot0:
Switch(config)# end
Switch# copy system:running-config nvrnram:startup-config
```

Displaying the Autoboot Configuration

To display the configuration register value, use the following EXEC command:

Command	Purpose
show version	Displays the configuration register value.
show bootvar	Displays the configuration register value.

Example

The following example shows the contents of the configuration register:

```
Switch# show version
Cisco Internetwork Operating System Software
IOS (tm) ONS-15540 Software (manopt-M0-M), Experimental Version 12.1(20010221:0)
Copyright (c) 1986-2001 by cisco Systems, Inc.
Compiled Tue 20-Feb-01 18:40 by lthanvan
Image text-base: 0x60010968, data-base: 0x604D8000

ROM: System Bootstrap, Version 12.1(20010204:232442) [vsankar-alarm_fix 106], DE
BOOTFLASH: M1540-ODS Software (manopt-M0-M), Experimental Version 12.1(20001229)

M1 uptime is 1 minute
System returned to ROM by power-on
System image file is "tftp://171.69.1.129//tftpboot/lthanvan/manopt-m0-mz"

cisco (QUEENS-CPU) processor with 98304K/32768K bytes of memory.
R7000 CPU at 234Mhz, Implementation 39, Rev 2.1, 256KB L2, 2048KB L3 Cache

Last reset from unexpected value
2 Ethernet/IEEE 802.3 interface(s)
509K bytes of non-volatile configuration memory.

16384K bytes of Flash internal SIMM (Sector size 64K).
➔ Configuration register is 0x2102
```

The following example shows the contents of the boot variable:

```
➔ Switch# show bootvar
BOOT variable = bootflash:ons15540-i-mz.1;
CONFIG_FILE variable =
BOOTLDR variable =
Configuration register is 0x2

Standby auto-sync startup config mode is on

Standby auto-sync running config mode is on
```

Synchronizing the Configurations

During normal operation, the startup and running configurations are synchronized by default between the two processor cards. In the event of a switchover, the new active processor card uses the current running configuration. Configurations are synchronized either manually from the CLI using the **redundancy manual-sync** command or automatically following configuration changes input from the CLI or from SNMP if automatic synchronization is enabled.

Synchronizing Configurations Manually

To immediately synchronize the configurations used by the two processor cards, use the following privileged EXEC command on the active processor card:

Command	Purpose
redundancy manual-sync {startup-config running-config both}	Immediately synchronizes the configuration.

Example

The following example shows how to manually synchronize the running configuration:

```
Switch# redundancy manual-sync running-config
```

Enabling and Disabling Automatic Synchronization

You can enable and disable automatic synchronization of the running configuration and the startup configuration between the two processor cards. Automatic synchronization ensures that, when a switchover occurs, the standby processor card has the most recent configuration information.

**Note**

By default, the Cisco ONS 15540 automatically synchronizes the running configuration and the startup configuration between the two processor cards.

Table 3-3 lists the events that cause the automatic synchronization of the configuration files.

Table 3-3 Synchronization Events for Configuration Files

Filename	When Synchronized
running-config	Upon exiting from global configuration mode in the CLI, or within 5 seconds after an SNMP message that changes the configuration
startup-config	When a new configuration is copied to NVRAM on the active processor card

To enable or disable the system to automatically synchronize the configurations on both processor cards, perform the following steps on the active processor card, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch(config)# redundancy Switch(config-red)#	Enters redundancy configuration mode.
Step 2	Switch(config-red)# [no] auto-sync running-config	Enables or disables synchronization of the running configuration when it is updated. The default state is enabled.
Step 3	Switch(config-red)# [no] auto-sync startup-config	Enables or disables synchronization of the startup configuration when it is updated. The default state is enabled.

Example

The following example shows how to disable automatic synchronization of the running configuration:

```
Switch(config)# redundancy
Switch(config-red)# no auto-sync running-config
Switch(config-red)# end
Switch# copy system:running-config nvram:startup-config
```

Configuring Maintenance Mode

You can configure the Cisco ONS 15540 to enter the redundancy maintenance mode. Configuration synchronizations and standby processor card fault reporting are suppressed in maintenance mode. Upon exiting maintenance mode and reverting to redundant mode, the standby processor card is rebooted to bring it back to the hot-standby state.



Note

When the system is in maintenance mode, switchovers only occur by entering the **redundancy switch-activity force** command, or physically removing the active processor card.

To configure maintenance mode, perform the following commands, beginning in global configuration mode:

Command	Purpose
Switch(config)# redundancy	Enters redundancy configuration mode.
Switch(config-red)#	
Switch(config-red)# maintenance-mode	Configures the system in maintenance mode.

Example

The following example shows how to configure redundancy maintenance mode:

```
Switch(config)# redundancy
Switch(config-red)# maintenance-mode
This command will place the system in SIMPLEX mode [confirm] y
```

Displaying the Processor Card Redundancy Configuration and Status

To display the processor card redundancy configuration and status, use the following privileged EXEC commands:

Command	Purpose
show redundancy	Displays the redundancy configuration and status.
show redundancy capability	Displays capabilities of the active and standby processor cards and the software version that is running.
show redundancy running-config-file	Displays the running configuration file on the standby processor card.
	Note This command is only available on a terminal connected to the standby processor card.

Examples

The following example shows the processor card redundancy configuration and status:

```
Switch# show redundancy

Redundant system information
-----
Available Uptime:          3 days, 4 hours, 35 minutes
Time since last switchover: 10 hours, 30 minutes
Switchover Count:         1

Inter-CPU Communication State:UP
Last Restart Reason:      Switch over
Software state at switchover: ACTIVE

Last Running Config sync:  2 hours, 18 minutes
Running Config sync status: In Sync
Last Startup Config sync:  6 hours, 4 minutes
Startup Config sync status: In Sync

This CPU is the Active CPU.
-----
Slot:                       7
Time since CPU Initialized:  22 hours, 33 minutes
Image Version:               ONS-15540 Software(ONS15540-I-M),...
Image File:                  bootflash:ons15540-i-mz.010727
Software Redundancy State:   ACTIVE
Hardware State:              ACTIVE
Hardware Severity:          0

Peer CPU is the Standby CPU.
-----
Slot:                       6
Time since CPU Initialized:  10 hours, 29 minutes
Image Version:               ONS-15540 Software(ONS15540-I-M),...
Image File (on sby-CPU):    bootflash:ons15540-i-mz.010727
Software Redundancy State:   STANDBY HOT
Hardware State:              STANDBY
Hardware Severity:          0
```

The following example shows the processor card capabilities:

```
Switch# show redundancy capability
CPU capability support

Active CPU  Sby CPU  Sby Compat  CPU capability description
-----
   96 MB    96 MB    OK          CPU DRAM size
   32 MB    32 MB    OK          CPU PMEM size
  512 KB    512 KB    OK          CPU NVRAM size
   16 MB    16 MB    OK          CPU Bootflash size
   2.1      2.1      OK          CPU hardware major.minor version
   1.11     1.11     OK          CPU functional major.minor version

Linecard driver major.minor versions, (counts:Active=18, Standby=18)
```


Active CPU	Sby CPU	Sby Compat	Drv ID	Driver description
1.1	1.1	OK	0x1000	CPU w/o Switch Fabric
1.1	1.1	OK	0x1001	Fixed Transponder, w/monitor
1.1	1.1	OK	0x1002	Fixed Transponder, no monitor
1.1	1.1	OK	0x1003	Pluggable Transponder, w/monitor
1.1	1.1	OK	0x1004	Pluggable Transponder, no monitor
1.1	1.1	OK	0x1005	Line Card Motherboard
1.1	1.1	OK	0x1006	Backplane
Active CPU	Sby CPU	Sby Compat	Drv ID	Driver description
1.1	1.1	OK	0x1007	32-ch Mux/Demux
1.1	1.1	OK	0x1008	Fixed 4-ch Mux/Demux, no OSC
1.1	1.1	OK	0x1009	Fixed 8-ch Mux/Demux, no OSC
1.1	1.1	OK	0x100A	Modular 4-ch Mux/Demux, no OSC
1.1	1.1	OK	0x100B	Modular 8-ch Mux/Demux, no OSC
1.1	1.1	OK	0x100C	32-ch Array Wave Guide
1.1	1.1	OK	0x100D	Mux/Demux Motherboard
1.1	1.1	OK	0x100E	Modular 4-ch Mux/Demux plus OSC
1.1	1.1	OK	0x100F	Modular 8-ch Mux/Demux plus OSC
1.1	1.1	OK	0x1010	Mux-Demux Motherboard, no OSC
1.1	1.1	OK	0x1011	Line Card Motherboard, no splitter

Software sync client versions, listed as version range X-Y.
 X indicates the oldest peer version it can communicate with.
 Y indicates the current sync client version.
 Sync client counts:Active=2, Standby=2

Active CPU	Sby CPU	Sby Compat	Cl ID	Redundancy Client description
ver 1-1	ver 1-1	OK	17	CPU Redundancy
ver 1-1	ver 1-1	OK	6	OIR Client

The following example shows how to display the running configuration file on the standby processor card:

```
sby-Switch# show redundancy running-config-file
!
version 12.1
no service pad
service timestamps debug uptime
service timestamps log uptime
no service password-encryption
no service dhcp
!
hostname Switch

<Information deleted>
```

Reloading the Processor Cards

To reload one or both of the processor cards, use the following privileged EXEC commands on the active processor card CLI:

Command	Purpose
redundancy reload peer	Reloads the standby processor card.
redundancy reload shelf	Reloads both processor cards in the shelf.

Example

The following example shows how to reload the standby processor card:

```
Switch# redundancy reload peer  
Reload peer [confirm] y  
Preparing to reload peer
```



Configuring Interfaces and Patch Connections

This chapter describes how to configure interfaces and patch connections on the Cisco ONS 15540. This chapter includes the following sections:

- Configuring Protocol Encapsulation or Clock Rate, page 4-2
- About Protocol Monitoring, page 4-6
- Configuring Protocol Monitoring, page 4-7
- About Alarm Thresholds, page 4-9
- Configuring Alarm Thresholds, page 4-9
- About Laser Shutdown, page 4-12
- Configuring Laser Shutdown, page 4-15
- About Patch Connections, page 4-17
- Configuring Patch Connections, page 4-18
- About Cross Connections, page 4-20

To configure transparent interfaces on the Cisco ONS 15540, perform the following steps:

-
- Step 1** Specify the protocol encapsulation and, if required, the transmission rate and OFC (open fiber control), or specify the signal clock rate (required).
 - Step 2** Enable protocol monitoring (optional).
 - Step 3** Create alarm threshold lists and apply them to the interfaces (optional).
 - Step 4** Enable forward laser control (optional).
-

To configure wave interfaces on the Cisco ONS 15540, perform the following steps:

-
- Step 1** Enable forward laser control (optional).
 - Step 2** Enable laser safety protocol (optional).
-

To configure patch connections on the Cisco ONS 15540, perform the following steps:

-
- Step 1** Configure the patch connections between the mux/demux modules (required).
 - Step 2** Configure the patch connections between the OSC (optical supervisory channel) interface on the mux/demux motherboards and the mux/demux modules (required if the OSC is present).
-

Configuring Protocol Encapsulation or Clock Rate

A transparent interface does not terminate the protocol of the signal it receives but it does convert it from an optical signal to an electrical signal and back to an optical signal. Therefore, you must configure the signal transmission rate by specifying either the protocol encapsulation or the clock rate.

To configure the protocol encapsulation or the clock rate for a transparent interface, perform the following steps, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch(config)# interface transparent <i>slot/subcard/0</i> Switch(config-if)#	Selects the interface to configure and enters interface configuration mode.
Step 2	Switch(config-if)# encapsulation {fastethernet fddi gigabitethernet escon} or Switch(config-if)# encapsulation sysplex clo or Switch(config-if)# encapsulation sysplex etr or Switch(config-if)# encapsulation sysplex isc {compatibility peer} or Switch(config-if)# encapsulation ficon 1g or Switch(config-if)# encapsulation sonet {oc3 oc12 oc48} or Switch(config-if)# encapsulation sdh {stm-1 stm-4 stm-16} or Switch(config-if)# encapsulation fibrechannel {1g 2g} [ofc {enable disable}] or Switch(config-if)# clock rate value	Specifies Fast Ethernet, FDDI, Gigabit Ethernet, or ESCON. OFC ¹ is disabled. Specifies Sysplex CLO ² . OFC is disabled. Forward laser control is enabled on both the transparent and wave interfaces. OFC is disabled. Specifies Sysplex ETR ³ . OFC is disabled. Specifies ISC ⁴ compatibility mode (1 Gbps) or peer mode (2 Gbps). OFC is enabled for compatibility mode and disabled for peer mode. Specifies FICON. OFC is disabled. Specifies SONET as the signal protocol and OC-3, OC-12, or OC-48 as the transmission rate. OFC is disabled. Specifies SDH as the signal protocol and STM-1, STM-4, or STM-16 as the transmission rate. OFC is disabled. Specifies Fibre Channel as the signal protocol and 1 Gbps or 2 Gbps as the transmission rate. Enables or disables OFC. OFC is disabled by default. Specifies the signal transmission clock rate without an associated protocol. OFC is disabled. Note Protocol monitoring cannot be enabled on the interface when the clock rate command is configured.

1. For information about OFC, see the “About Laser Shutdown” section on page 4-12.
2. CLO = control link oscillator
3. ETR = external timer reference
4. ISC = Intersystem Channel Links

**Note**

Disable autonegotiation 2-Gbps Fibre Channel client equipment connected to Cisco ONS 15540 and set the speed to match the clock rate or protocol encapsulation set on the transparent interfaces. The transponder modules only recognize the configured clock rate or protocol encapsulation and do not support autonegotiation.

**Caution**

Do not configure y-cable protection with Sysplex CLO, Sysplex ETR, or ISC compatibility protocol encapsulation, or with the OFC safety protocol.

**Note**

Sysplex CLO and Sysplex ETR are supported outside the nominal range of the clock rates for the Cisco ONS 15540 because of the nature of the traffic type.

Table 4-1 lists the clock rates for well-known protocols supported by the 2.5-Gbps transponder modules:

Table 4-1 Supported Clock Rates for Well-Known Protocols

Well-Known Protocol	Clock Rate (in kbps)
DS3	44,736
DV1 ¹ in ADI ² mode	270,000
E3	34,368
ESCON	200,000
Fibre Channel (1 Gbps)	1,062,500
Fibre Channel (2 Gbps)	2,125,000
FICON (1 Gbps)	1,062,500
FICON (2 Gbps)	2,125,000
Gigabit Ethernet	1,250,000
ISC Compatibility Mode (ISC-1)	1,062,500
ISC Peer Mode (ISC-3)	2,125,000
SONET OC-1	51,840
SONET OC-3/SDH STM-1	155,520
SONET OC-12/SDH STM-4	622,080
SONET OC-24	1,244,160
SONET OC-48/SDH STM-16	2,488,320

1. DV = digital video
2. ADI = Asynchronous Digital Interface

**Note**

Error-free transmission of some D1 video signals (defined by the SMPTE 259M standard) and test patterns (such as Matrix SDI) cannot be guaranteed by the Cisco ONS 15500 Series because of the pathological pattern in D1 video. This well-known limitation is usually overcome by the D1 video equipment vendor, who uses a proprietary, second level of scrambling. No standards exist at this time for the second level of scrambling.

The following ranges are not supported by the SM transponder module hardware and the MM transponder module hardware:

- 851,000 kbps to 999,999 kbps
- 1,601,000 kbps to 1,999,999 kbps

For clock rate values outside of these unsupported ranges and not listed in Table 4-1, contact your SE (systems engineer) at Cisco Systems.

**Note**

Use the encapsulation command for clock rates supported by protocol monitoring rather than the clock rate command. For more information protocol monitoring, see the “About Protocol Monitoring” section on page 4-6.

**Caution**

The selectable transceivers supported by the extended range transponder modules yield optimal performance at the data rates for which the transceivers are explicitly designed. Configuring a protocol encapsulation or clock rate outside of the clock rate specifications for the transceiver could result in suboptimal performance, depending on the transceiver characteristics (such as receiver sensitivity and output power).

For information on transceiver specifications, refer to the *Cisco ONS 15440 ESP Hardware Installation Guide*.

**Note**

When you must use Sysplex CLO encapsulation or Sysplex ETR encapsulation, you must configure APS bidirectional path switching. For more information on APS and bidirectional path switching, see Chapter 5, “Configuring Splitter Protection and Line Card Protection with APS.”

Examples

The following example shows how to configure GE (Gigabit Ethernet) encapsulation on a transparent interface:

```
Switch(config)# interface transparent 8/0/0
Switch(config-if)# encapsulation gigabitethernet
```

The following example shows how to configure a clock rate on a transparent interface:

```
Switch(config)# interface transparent 10/1/0
Switch(config-if)# clock rate 1065
```

**Note**

Removing the protocol encapsulation or the clock rate does not shut down the transmit lasers. To shut down the lasers, use the **shutdown** command.

Displaying Protocol Encapsulation or Clock Rate Configuration

To display the protocol encapsulation configuration of a transparent interface, use the following EXEC command:

Command	Purpose
show interfaces transparent <i>slot/subcard/0</i>	Displays the transparent interface configuration.

Examples

The following example shows how to display the protocol encapsulation configuration of a transparent interface:

```
Switch# show interfaces transparent 8/0/0
Transparent11/3/0 is up, line protocol is up
  Encapsulation: GigabitEthernet
  Signal monitoring: off
  Time of last "monitor" state change never
  Time of last "encapsulation" change 00:00:03
  Forward laser control: Off
  Configured threshold Group: None
  Loopback not set
  Last clearing of "show interface" counters 00:00:03
  Hardware is transparent
```

The following example shows how to display the clock rate configuration of a transparent interface:

```
Switch# show interfaces transparent 10/1/0
Transparent11/3/0 is up, line protocol is up
  Encapsulation: Unknown
  Clock rate: 1000000 KHz
  Signal monitoring: off
  Time of last "monitor" state change never
  Time of last "encapsulation" change never
  Forward laser control: Off
  Configured threshold Group: None
  Loopback not set
  Last clearing of "show interface" counters never
  Hardware is transparent
```

About Protocol Monitoring

Transparent interfaces on the Cisco ONS 15540 can be configured to monitor protocol and signal performance. When monitoring is enabled, the system maintains statistics that are used to determine the quality of the signal.

The following protocols can be monitored:

- ESCON (Enterprise Systems Connection)
- Fibre Channel (1 Gbps only)
- FICON (Fiber Connection)
- Gigabit Ethernet
- SDH (Synchronous Digital Hierarchy) (STM-1, STM-4, STM-16)
- SONET (OC-3, OC-12, OC-48)

- ISC (compatibility mode only)

**Note**

Enabling monitoring on a transparent interface also enables monitoring on the corresponding wave interface. For example, if you enable monitoring on transparent interface 3/0/0, monitoring is also enabled on wave interface 3/0.

For Gigabit Ethernet, Fibre Channel, and FICON, the Cisco ONS 15540 monitors the code violation and running disparity error count.

For SONET errors, the Cisco ONS 15540 monitors the SONET section overhead only, not the SONET line overhead. Specifically, the Cisco ONS 15540 monitors the B1 byte and the framing bytes. The system can detect the following defect conditions:

- Loss of light
- Loss of lock (when the clock cannot be recovered from the received data stream)
- Severely errored frame
- Loss of frame

For SONET performance, the system monitors the B1 byte, which is used to compute the four SONET section layer performance monitor parameters:

- SEFS-S (second severely errored framing seconds)
- CV-S (section code violations)
- ES-S (section errored seconds)
- SES-S (section severely errored seconds)

Configuring Protocol Monitoring

To configure protocol monitoring on a transparent interface, and its corresponding wave interface, perform the following steps, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch(config)# interface transparent <i>slot/subcard/0</i> Switch(config-if)#	Selects the transparent interface to configure and enters interface configuration mode.
Step 2	Switch(config-if)# monitor enable	Enables signal monitoring. Note Protocol encapsulation must be configured on the transparent interface before enabling monitoring.

Example

The following example shows how to enable protocol monitoring on a transparent interface:

```
Switch(config)# interface transparent 10/0/0
Switch(config-if)# monitor enable
```

The following example shows how to disable protocol monitoring on a transparent interface:

```
Switch(config)# interface transparent 10/0/0
Switch(config-if)# no monitor enable
```

Displaying Protocol Monitoring Configuration

To display the protocol monitoring configuration of a transparent interface, use the following EXEC command:

Command	Purpose
show interfaces {transparent slot/subcard/0 wave slot/subcard}	Displays the transparent interface configuration.

Example

The following example shows how to display the protocol monitoring configuration of a transparent interface:

```
Switch# show interfaces transparent 10/0/0
Transparent10/0/0 is up, line protocol is up
  Signal quality: Signal degrade threshold exceeded
  Encapsulation: Sonet      Rate: oc3
  Signal monitoring: on
  Forward laser control: Off
  Configured threshold Group: None
  Section code violation error count(bipl): 3714369135
  Number of errored seconds(es): 57209
  Number of severely errored seconds(ses): 57209
  Number of severely errored framing seconds(sefs): 0
  Number of times SEF alarm raised: 0
  Number of times SF threshold exceeded: 0
  Number of times SD threshold exceeded: 384
  Loopback not set
  Last clearing of "show interface" counters never
  Hardware is transparent
```

The following example shows how to display the protocol monitoring configuration of a wave interface:

```
Switch# show interfaces wave 10/0
Wave10/0 is up, line protocol is up
  Channel: 25   Frequency: 195.1 Thz   Wavelength: 1536.61 nm
  Splitter Protected: No
  Receiver power level: -7.0 dBm
  Laser safety control: Off
  Forward laser control: Off
  Osc physical port: No
  Wavelength used for inband management: No
  Configured threshold Group: None
→ Section code violation error count(bipl): 929326
  Number of errored seconds(es): 30
  Number of severely errored seconds(ses): 30
  Number of severely errored framing seconds(sefs): 0
  Number of times SEF alarm raised: 0
  Number of times SF threshold exceeded: 0
  Number of times SD threshold exceeded: 0
  Loopback not set
  Last clearing of "show interface" counters never
  Hardware is data_only_port
```

About Alarm Thresholds

You can configure thresholds on transparent and wave interfaces that issue alarm messages to the system if the thresholds are exceeded. The threshold values are applied to both transparent and wave interfaces on a transponder module when protocol monitoring is enabled on the transparent interface.

The rate is based on the protocol encapsulation or the clock rate for the interface. Every second, the monitoring facility updates the counters that correspond to the alarm thresholds. When the signal degrades, or fails entirely, the system issues alarms to the console. These alarms can help isolate failures in the system and in the network.

Configuring Alarm Thresholds

To configure alarm thresholds on transparent interfaces, perform the following steps, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch(config)# threshold-list <i>name</i> Switch(config-t-list)#	Creates or selects the threshold list to configure and enters threshold list configuration mode.
Step 2	Switch(config-t-list)# notification-throttle timer <i>seconds</i>	Configures the SNMP notification timer. The default value is 5 seconds. (Optional)
Step 3	Switch(config-t-list)# threshold name { 8b10b cvrd cdl hec sonet-sdh section cv } { failure degrade } [<i>index value</i>] Switch(config-threshold)#	Specifies a threshold type to modify and enters threshold configuration mode.
Step 4	Switch(config-threshold)# value rate <i>value</i>	Specifies the threshold rate value. This value is the negative power of 10 (10^{-n}).
Step 5	Switch(config-threshold)# description <i>text</i>	Specifies a description of the threshold. The default value is the null string. (Optional)
Step 6	Switch(config-threshold)# aps trigger	Enables APS switchover when this threshold is crossed. (Optional) Note This command only triggers switchovers for y-cable protection, not for splitter protection.
Step 7	Switch(config-threshold)# exit Switch(config-t-list)#	Returns to threshold list configuration mode. Repeat Step 3 through Step 7 to configure more thresholds in the threshold list.
Step 8	Switch(config-t-list)# exit Switch(config)#	Returns to global configuration mode.
Step 9	Switch(config)# interface { transparent slot/subcard/0 wave slot/subcard } Switch(config-if)#	Selects the transparent or wave interface to configure and enters interface configuration mode.
Step 10	Switch(config-if)# threshold-group <i>name</i>	Configures the threshold list on the interface.

**Note**

If a threshold type does not apply to the encapsulation type for the interface, that threshold type is ignored.

**Note**

For y-cable protected transparent and wave interfaces, disable monitoring on the interface with the **no monitor** command before removing an alarm threshold. Use the **show aps** command to determine the protection configuration for the interface.

Table 4-2 lists the threshold error rates in errors per second for each of the protocol encapsulations.

Table 4-2 Thresholds for Monitored Protocols (Errors Per Second)

Rate	SONET OC-3 or SDH STM-1	SONET OC-12 or SDH STM-4	SONET OC-48 or SDH STM-16	Gigabit Ethernet	ESCON	FICON	Fibre Channel ¹	ISC ²
3	31,753	32,000	32,000	1,244,390	199,102	1,057,731	1,057,731	1,057,731
4	12,318	27,421	31,987	124,944	19,991	106,202	106,202	106,202
5	1518	5654	17,296	12,499	2000	10,625	10,625	10,625
6	155	616	2394	1250	200	1062	1062	1062
7	15.5	62	248	125	20	106	106	106
8	1.55	6.2	24.8	12.5	2	10.6	10.6	10.6
9	0.155	0.62	2.48	1.25	0.2	1.06	1.06	1.06

1. One Gbps rate only.
2. Compatibility mode only.

Examples

The following example shows how to create an alarm threshold list and configure that list on a transparent interface:

```
Switch# configure terminal
Switch(config)# threshold-list sonet-counters
Switch(config-t-list)# threshold name sonet-sdh section cv degrade
Switch(config-threshold)# value rate 9
Switch(config-threshold)# exit
Switch(config-t-list)# threshold name sonet-sdh section cv failure
Switch(config-threshold)# value rate 7
Switch(config-threshold)# exit
Switch(config-t-list)# exit
Switch(config)# interface transparent 10/0/0
Switch(config-if)# threshold-group sonet-counters
```

The following example shows how to create an alarm threshold list with the APS switchover trigger and configure that list on a pair of associated transparent interfaces:

```
Switch(config)# threshold-list sonet-alarms
Switch(config-t-list)# threshold name sonet-sdh section cv failure
Switch(config-threshold)# value rate 6
Switch(config-threshold)# aps trigger
Switch(config-threshold)# exit
Switch(config-t-list)# exit
Switch(config)# redundancy
Switch(config-red)# associate group sonet-channel
Switch(config-red-aps)# aps working transparent 3/0/0
```

```

Switch(config-red-aps)# aps protection transparent 3/0/0
Switch(config-red-aps)# aps y-cable
Switch(config-red-aps)# aps revertive
Switch(config-red-aps)# enable
Switch(config-red-aps)# exit
Switch(config-red)# exit
Switch(config)# interface transparent 3/0/0
Switch(config-if)# encap sonet oc3
Switch(config-if)# monitor enable
Switch(config-if)# threshold-group sonet-alarms
Switch(config-if)# exit
Switch(config)# interface transparent 5/0/0
Switch(config-if)# encap sonet oc3
Switch(config-if)# monitor enable
Switch(config-if)# threshold-group sonet-alarms

```

Displaying Alarm Threshold Configuration

To display the configuration of a threshold list and the threshold group for a transparent or wave interface, use the following EXEC commands:

Command	Purpose
show threshold-list [<i>name</i>]	Displays the threshold group configuration.
show interfaces { transparent <i>slot/subcard</i> / 0 wave <i>slot</i> [<i>subcard</i>]}	Displays the transparent or wave interface configuration.

Example

The following example shows how to display the configuration of a threshold group:

```

Switch# show threshold-list sonet-counters

Threshold List Name: sonet-counters
Notification throttle timer : 5 (in secs)
  Threshold name : sonet-sdh section cv          Severity : Degrade
    Value : 10e-9
    APS Trigger : Not set
    Description : SONET BIP1 counter
  Threshold name : sonet-sdh section cv          Severity : Failure
    Value : 10e-6
    APS Trigger : Set
    Description : SONET BIP1 counter

```

The following example shows how to display the threshold group information for an interface:

```

Switch# show interfaces transparent 3/1/0
Transparent3/1/0 is up, line protocol is up
Encapsulation: Sonet      Rate: oc3
Signal monitoring: on
Forward laser control: Off
Configured threshold Group: sonet-counters
Threshold monitored for: sonet-sdh section cv
SF set value: 10e-8 (155 in 100 secs)
SD set value: 10e-9 (155 in 1000 secs)
Section code violation error count(bip1): 3713975925
Number of errored seconds(es): 57203
Number of severely errored seconds(ses): 57203
Number of severely errored framing seconds(sefs): 0
Number of times SEF alarm raised: 0

```

```

Number of times SF threshold exceeded: 0
Number of times SD threshold exceeded: 378
Loopback not set
Last clearing of "show interface" counters never
Hardware is transparent

```

About Laser Shutdown

To avoid operator injury or transmission of unreliable data, or to provide quick path switchover, the Cisco ONS 15540 supports mechanisms to automatically shut down transponder module lasers. The three types of laser shutdown mechanisms are:


- Forward laser control
- OFC safety protocol
- Laser safety control

About Forward Laser Control

When loss of light occurs on the receive signal of a transparent or wave interface, the corresponding transmitting laser on the other side of the transponder module continues to function and might send unreliable information to the client. Forward laser control provides a means to quickly shut down a transmitting laser when such a receive signal failure occurs (see Figure 4-1). The receive signal loss of light can result from a failure in the client equipment, a receiver failure in the transponder module, or a laser shutdown on another node in the network.

This feature is convenient for configurations, such as Sysplex, where signal protection is performed in the client hardware and a quick laser shutdown causes a quick path switchover.

Figure 4-1 Forward Laser Control Overview

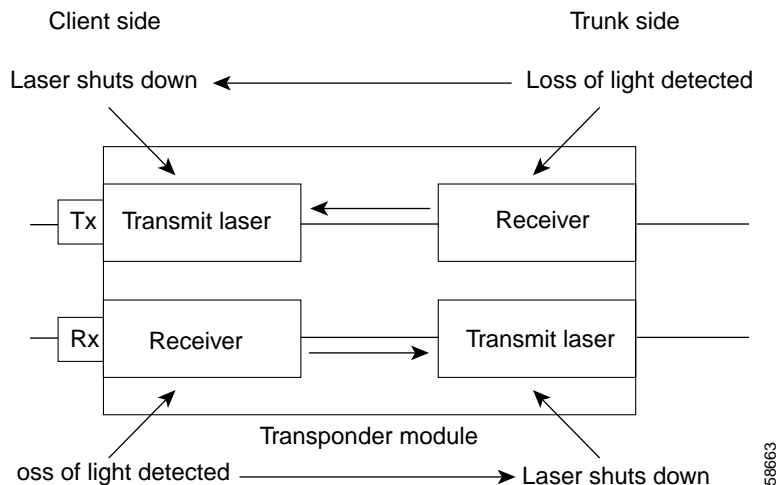


58663

About OFC

The Cisco ONS 15540 allows you to enable the OFC safety protocol on the client side interfaces. When the system detects an “open fiber,” the laser that transmits to the client equipment shuts down. An open fiber condition occurs when the connectors to the client equipment are detached from the transponder ports or when the fiber is cut (see Figure 4-2).

Figure 4-2 OFC Overview

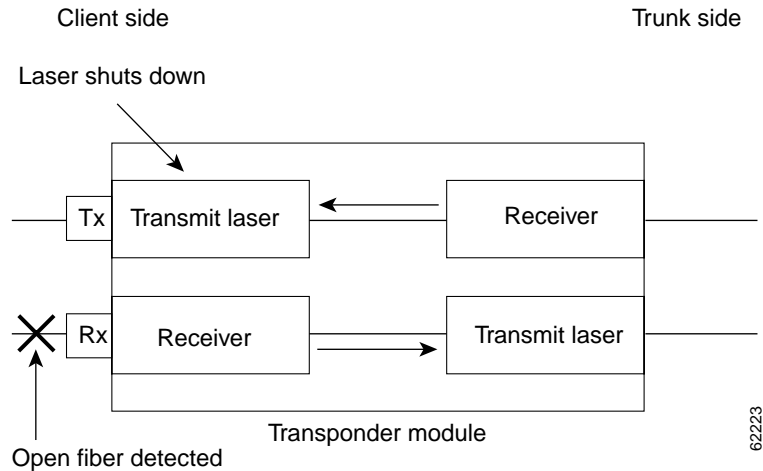

The OFC safety protocol conforms to the Fibre Channel standard. It applies only to the Fibre Channel and ISC compatibility mode encapsulations. The Cisco ONS 15540 interoperates with OFC-standard-compliant client equipment.



Caution


Do not configure OFC with either forward laser control or laser safety control. Combining these features interferes with the OFC protocol.

Use the **encapsulation** command, described in the “Configuring Protocol Encapsulation or Clock Rate” section on page 4-2 to configure OFC on a transparent interface.

About Laser Safety Control

The Cisco ONS 15540 allows you to enable laser safety control on the trunk side interfaces of the transponder modules. Much like OFC, the laser safety control protocol shuts down the transponder module laser transmitting to the trunk when a fiber cut occurs or when the trunk fiber is detached from the shelf (see Figure 4-3).

Figure 4-3 Laser Safety Control Overview

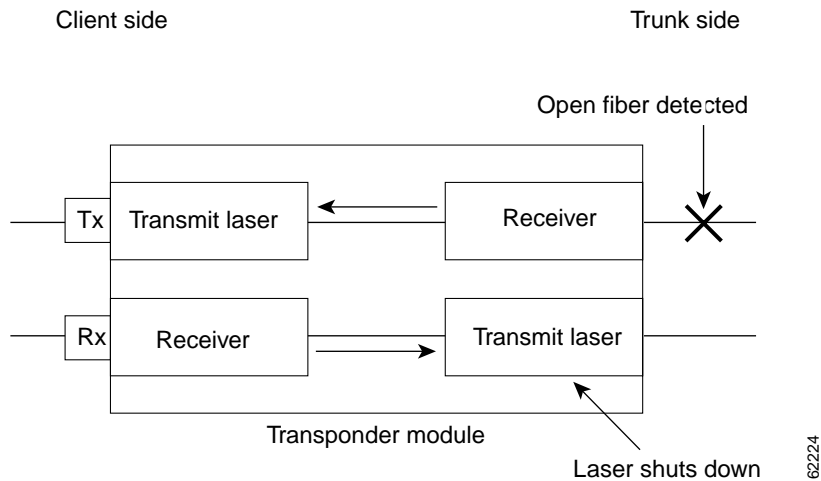

Laser safety control uses the same protocol state machine as OFC, but not the same timing. Laser safety control uses the pulse interval and pulse duration timers compliant with the ALS (automatic laser shutdown) standard (ITU-T G.664).

Use laser safety control with line card protected and unprotected configurations only. Enable laser safety control on all wave interfaces, including the OSC.



Caution

Laser safety control can interrupt signal transmission with splitter protected configurations. If you configure the system with splitter protection and enable laser safety control, the transmit laser to the client shuts down when an open fiber occurs on one transport fiber and signal transmission to the client is interrupted.

Configuring Laser Shutdown

This sections describes how to configure forward laser control and laser safety control on the Cisco ONS 15540 transponder module interfaces.



Note

To function correctly, configure forward laser control on both the transparent and wave interfaces on a transponder module. For y-cable protection, configure forward laser control on both the transparent and wave interfaces on both transponder modules.

Configuring Forward Laser Control

To configure forward laser control on a transponder module transparent and wave interfaces, perform the following steps, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch(config)# interface transparent <i>slot/subcard/port</i> Switch(config-if)#	Selects the transparent interface to configure and enters interface configuration mode.
Step 2	Switch(config-if)# [no] laser control forward enable	Configures forward laser control on the interface. The default state is disabled.
Step 3	Switch(config-if)# exit	Returns to global configuration mode.
Step 4	Switch(config)# interface wave <i>slot[/subcard]</i> Switch(config-if)#	Selects the wave interface to configure and enters interface configuration mode.
Step 5	Switch(config-if)# [no] laser control forward enable	Configures forward laser control on the interface. The default state is disabled.



Caution

Do not configure forward laser control when OFC is enabled. Combining these features interferes with the OFC protocol.

Examples

The following example shows how to configure forward laser control for the transparent and wave interfaces on a transponder module:

```
Switch(config)# interface transparent 5/1/0
Switch(config-if)# laser control forward enable
Switch(config-if)# exit
Switch(config)# interface wave 5/1
Switch(config-if)# laser control forward enable
```

The following example shows how to configure forward laser control for an OSC wave interface:

```
Switch(config)# interface wave 0
Switch(config-if)# laser control forward enable
```

Displaying Forward Laser Control Configuration

To display the forward laser control configuration of a transparent or wave interface, use the following EXEC command:

Command	Purpose
show interfaces { transparent <i>slot/subcard/port</i> wave <i>slot/subcard</i> }	Displays interface information.

Example

The following example shows how to display the forward laser control configuration for an interface:

```
Switch# show interfaces transparent 10/0/0
Transparent10/0/0 is up, line protocol is up
  Encapsulation: Sonet      Rate: oc3
  Signal monitoring: off
  Time of last "monitor" state change never
  Time of last "encapsulation" change 10:18:20
  Forward laser control: On
  Configured threshold Group: None
  Loopback not set
  Last clearing of "show interface" counters 10:18:20
  Hardware is transparent
```

Configuring Laser Safety Control

To configure laser safety control on a wave interface, perform the following steps, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch(config)# interface wave <i>slot/subcard</i> Switch(config-if)#	Selects the wave interface to configure and enters interface configuration mode.
Step 2	Switch(config-if)# [no] laser control safety enable	Enables or disables laser safety control.



Note

Use laser safety control only with line card protected and unprotected configurations. Enable laser safety control on all the wave interfaces in the shelf.



Caution

Do not configure laser safety control when OFC is enabled. Combining these features interferes with the OFC safety protocol.

Example

The following example shows how to configure laser safety control on a wave interface:

```
Switch(config)# interface wave 8/0
Switch(config-if)# laser control safety enable
```

Displaying Laser Safety Control Configuration

To display the laser safety control configuration of a wave interface, use the following EXEC command:

Command	Purpose
<code>show interfaces wave slot/subcard</code>	Displays interface information.

Example

The following example shows how to display the laser safety control configuration for an interface:

```
Switch# show interfaces wave 3/1
launch2#show interfaces wave 10/0
Wavel0/0 is up, line protocol is up
  Channel: 25   Frequency: 195.1 Thz   Wavelength: 1536.61 nm
  Splitter Protected: Yes
  Receiver power level: -10.0 dBm
  Laser safety control: On
  Forward laser control: Off
  Osc physical port: No
  Wavelength used for inband management: No
  Configured threshold Group: None
  Loopback not set
  Last clearing of "show interface" counters never
  Hardware is data_only_port
```

About Patch Connections

Because the mux/demux modules are passive devices, the Cisco ONS 15540 does not detect its optical patch connection configuration. For system management purposes, you must also configure the patch connection configuration using the CLI.



Note

If you correctly patched your mux/demux modules, no CLI configuration is necessary for the signal to pass from the client to the trunk fiber.

Table 4-3 describes the types of patch connections on the Cisco ONS 15540.

Table 4-3 Patch Connection Types

Patch Connection	Description
Thru interface to wdm interface or wdm interface to thru interface	Connection between two add/drop mux/demux modules in the same chassis slot
Thru interface to thru interface	Connection between two add/drop mux/demux modules in different chassis slots
Filterband interface to filtergroup interface or filtergroup interface to filterband interface	Connection between the terminal mux/demux module supporting channels 1 through 16 and the terminal mux/demux module supporting channels 17 through 32 in the same chassis slot or in different chassis slots

Table 4-3 Patch Connection Types (continued)

Patch Connection	Description
OSC wave interface to OSC oscfilter interface or OSC oscfilter interface to OSC wave interface	Connection between the OSC wave interface on the mux/demux motherboard and the OSC oscfilter interface on the mux/demux module in the same chassis slot
Wavepatch interface to filter interface or filter interface to wavepatch interface	Connection between the wavepatch interface on the front panel of the line card motherboard and the filter interface on either the front panel of the mux/demux module or the front panel of the mux/demux motherboard. (

For more information on patch connection rules, refer to the *Cisco ONS 15540 ESP Planning and Design Guide*.

Configuring Patch Connections

To configure patch connections between mux/demux modules within the same shelf, use the following global configuration commands:

Command	Purpose
patch thru <i>slot/subcard1 wdm slot/subcard2</i> or patch wdm <i>slot/subcard1 thru slot/subcard2</i>	Configures the patch connection between two add/drop mux/demux modules in the same chassis slot.
patch thru <i>slot1/subcard1 thru slot2/subcard2</i>	Configures the patch connection between two add/drop mux/demux modules in different chassis slots.
patch filterband <i>slot1/subcard1/port1 filtergroup slot2/subcard2/port2</i> or patch filtergroup <i>slot1/subcard1/port1 filterband slot2/subcard2/port2</i>	Configures the patch connection between a terminal mux/demux module supporting channels 1 through 16 and a terminal mux/demux module supporting channels 17 through 32 in the same chassis slot or in different chassis slots.
patch wave <i>slot oscfilter slot/subcard</i> or patch oscfilter <i>slot/subcard wave slot</i>	Configures the patch connection between the OSC wave interface on the mux/demux motherboard and the OSC oscfilter interface on the mux/demux module in the same chassis slot.



Note

If you correctly patch your mux/demux modules, **patch** command configuration is not necessary for the signal to pass from the client to the trunk fiber. However, without correct **patch** command configuration, CDP is unable to locate the wdm interfaces that connect to the trunk fiber and discover the topology neighbors. For more information on network monitoring, see the “Configuring CDP” section on page 9-3.

Example

The following example shows how configure the patch connections between OSC interfaces and between mux/demux modules:

```
Switch# configure terminal
Switch(config)# patch thru 0/0 wdm 0/1
Switch(config)# patch thru 0/1 wdm 0/2
Switch(config)# patch thru 0/2 thru 1/0
Switch(config)# patch thru 1/1 wdm 1/0
Switch(config)# patch thru 1/2 wdm 1/1
Switch(config)# patch wave 0 oscfilter 0/0
Switch(config)# patch wave 1 oscfilter 1/2
```

Displaying Patch Connections

To display the patch connections, use the following privileged EXEC command:

Command	Purpose
<code>show patch [detail]</code>	Displays the patch connections.



Note

The error field in the **show patch** command output helps troubleshoot shelf misconfigurations. When there is a channel mismatch between a transponder module and a mux/demux module, “Channel Mismatch” appears for the patch connection. When more than one mux/demux module drops the same channels, “Channel Mismatch” appears for all patch connections.

Example

The following example shows the patch connections:


```
Switch# show patch

Patch Interface      Patch Interface      Type      Error
-----
Thru0/0             Wdm0/1              USER
Thru0/1             Wdm0/2              USER
Thru0/2             Thru1/0             USER
Thru1/1             Wdml/0              USER
Thru1/2             Wdml/1              USER
Wave0               Oscfilter0/0        USER
Wave1               Oscfilter1/2        USER
```

About Cross Connections

The client signal follows a path of interface optical cross connections through the Cisco ONS 15540. Figure 4-4 shows an example of cross connections. Knowing the path of a signal through the shelf helps with system management and troubleshooting.

Figure 4-4 Optical Cross Connection Example

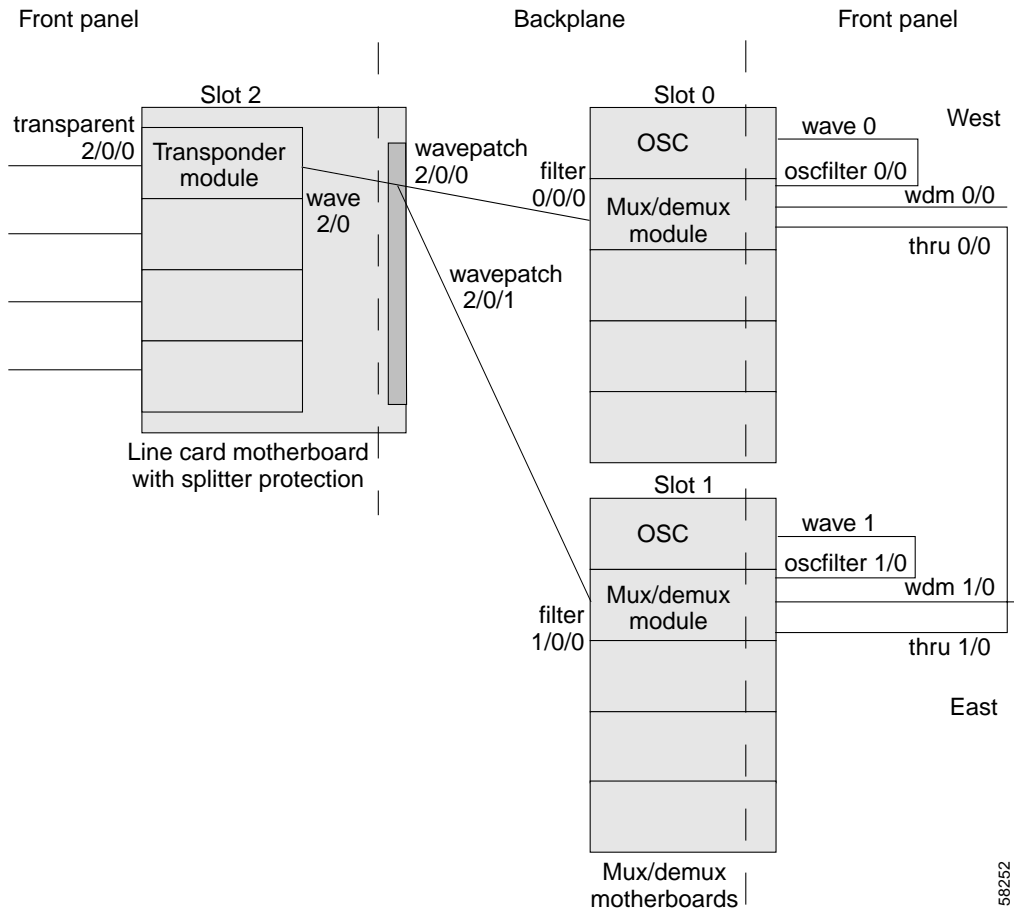

Displaying Cross Connections

To display the signal path cross connections, use the following privileged EXEC command:

Command	Purpose
show connect [edge intermediate [sort-channel interface { transparent <i>slot/subcard/port</i> wave <i>slot/subcard</i> }]]	Displays the optical connections.

Examples

The following example shows the cross connections within a system configured for splitter protection:

```
Switch# show connect intermediate
client/      wave      wave      wdm
wave        client    patch    filter  trk  channel
-----
Trans2/0/0  Wave2/0   2/0/0*   0/0/0   0/0   1
              2/0/1   1/0/0   1/0     1/0   1
Trans2/2/0  Wave2/2   2/2/0*   0/0/2   0/0   3
              2/2/1   1/0/2   1/0     1/0   3
Trans2/3/0  Wave2/3   2/3/0*   0/0/3   0/0   4
              2/3/1   1/0/3   1/0     1/0   4
```

The following example shows the cross connections within a system configured for line card protection using splitter protected line card motherboards:

```
Switch# show connect intermediate
client/      wave      wave      wdm
wave        client    patch    filter  trk  channel
-----
Trans10/0/0  Wave10/0  10/0/0*  0/3/0   0/2   25
              10/0/1
Trans10/1/0  Wave10/1  10/1/0*  0/3/1   0/2   26
              10/1/1
Trans10/2/0  Wave10/2  10/2/0*  0/3/2   0/2   27
              10/2/1
Trans10/3/0  Wave10/3  10/3/0*  0/3/3   0/2   28
              10/3/1
```




Configuring Splitter Protection and Line Card Protection with APS

This chapter describes how to configure splitter protection and line card protection with APS (Automatic Protection Switching). This chapter contains the following sections:

- About APS, page 5-1
- About Splitter Protection, page 5-1
- Configuring Splitter Protection, page 5-3
- About Line Card Protection, page 5-6
- Configuring Line Card Protection, page 5-8
- About Path Switching, page 5-12
- Configuring Path Switching, page 5-14
- Switchovers and Lockouts, page 5-19

About APS

APS provides protection against signal transmission failure. The Cisco ONS 15540 supports the following APS features:


- 1+1 path protection
- Splitter protection
- Line card protection
- Bidirectional and unidirectional path switching

The 1+1 path protection architecture transmits the client signal on both the working and protection paths.

About Splitter Protection

Splitter protection on the Cisco ONS 15540 provides protection against facility failure, such as trunk fiber cuts, but not transponder module failures or client equipment failures. Splitter protection internally replicates the client optical signal received from the transponder module and transmits it to mux/demux modules in both slot 0 and slot 1 (see Figure 5-1).

Figure 5-1 Splitter Protection Scheme

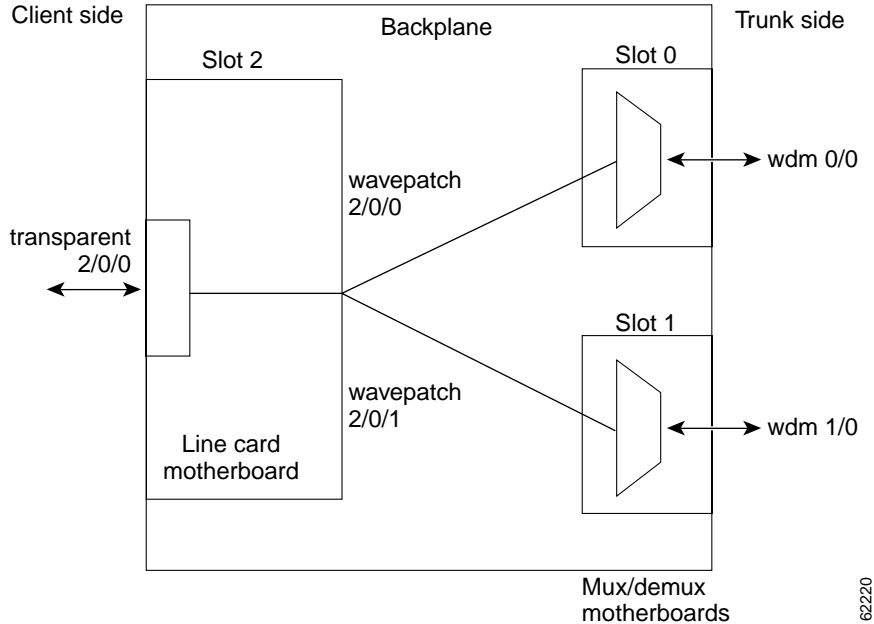

On the trunk side, a fiber pair, with one receive fiber and one transmit fiber, connects to one mux/demux module in slot 0. Another trunk fiber pair connects to a mux/demux module in slot 1. The client signal is transmitted through both mux/demux modules to the trunk fiber pairs. A 2 x 2 switch on the line card motherboard receives both signals from the trunk fiber pairs and selects one as the active signal. When a signal failure is detected, the 2 x 2 switch switches over to the standby signal. The standby signal then becomes the active signal.

Considerations for Using Splitter Protection

The following considerations apply when considering the use of splitter protection:

- Each subcard position in the splitter protected line card motherboard corresponds to a specific subcard position in both of the mux/demux motherboards in slots 0 and 1.

For detailed information on backplane connectivity, refer to the *Cisco ONS 15540 ESP Planning and Design Guide*.

- Splitter protection does not protect against failure in the transponder module, where the lasers are located. Splitter protection also does not protect against failure of the client equipment.

To protect against transponder module failure, use y-cable protection as described in the “About Line Card Protection” section on page 5-6 and the “Configuring Line Card Protection” section on page 5-8. To protect against both transponder module failure and client failure, implement protection on the client equipment instead.

- A fully configured system can support 32 channels in splitter protection mode.

- Splitter protection is nonrevertive. After correcting the problem that caused the signal failure and verifying the signal quality, you must manually switch the signal over to begin using the former working path. Use optical testing equipment to verify the signal quality. For more information on troubleshooting signal failures and restoring connectivity, refer to the *Cisco ONS 15540 ESP Troubleshooting Guide*.
- For interfaces with either Sysplex ETR or Sysplex CLO protocol encapsulation, configure bidirectional path switching to ensure proper functioning of the protocol.

For detailed information on shelf configuration rules, refer to the *Cisco ONS 15540 ESP Planning and Design Guide*.

Configuring Splitter Protection

The following steps describe the tasks required to configure splitter protection:

-
- Step 1** Determine the number of clients you need to support and which channels you will deploy to transport client data.
- Step 2** Ensure that the correct transponder modules are inserted in the line card motherboards in slots 2 through 5 and 8 through 11.
- Step 3** Ensure that the mux/demux modules needed to support the deployed channels are inserted in the correct subcards of the mux/demux motherboards.
- For each band of four or eight channels, you need a mux/demux module in the correct subcard position in the mux/demux motherboard in slot 0 and in the same subcard position in the mux/demux motherboard in slot 1.
- For detailed information on hardware configuration rules, refer to the *Cisco ONS 15540 ESP Planning and Design Guide*.
- Step 4** Ensure that the add/drop mux/demux modules are correctly interconnected with the external optical patch cables.
- Step 5** Configure APS from the CLI (command-line interface).
-



Caution

Laser safety control interrupts signal transmission with splitter protected configurations. If you configure the system with splitter protection and enable laser safety control, the transmit laser to the client shuts down when an open fiber occurs on one transport fiber and signal transmission to the client is interrupted.

To enable splitter protection, use the following commands, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch(config)# redundancy Switch(config-red)#	Enters redundancy configuration mode.
Step 2	Switch(config-red)# associate interface wavepatch */*/working-interface wavepatch */*/protection-interface [enable disable] or Switch(config-red)# associate interface wavepatch slot*/working-interface wavepatch slot*/protection-interface [enable disable]	Configures APS splitter protection mode on the entire chassis. The default state is disabled. or Configures APS splitter protection mode on the interfaces in a slot. The default state is disabled. Note The prompt stays in redundancy mode when the interface identifiers contain wildcards. To configure an individual interface pair, continue to the next step.
Step 3	Switch(config-red)# associate group name Switch(config-red-aps)#	Specifies an APS group name and enters APS configuration mode. Note The group name is case sensitive.
Step 4	Switch(config-red-aps)# aps disable	Disables APS activity between the interfaces. Note For newly created APS groups, APS activity is disabled by default.
Step 5	Switch(config-red-aps)# aps working wavepatch slot/subcard/port	Configures the working path interface.
Step 6	Switch(config-red-aps)# aps protection wavepatch slot/subcard/port	Configures the protection path interface.
Step 7	Switch(config-red-aps)# aps timer search-for-up minimum maximum	Changes the interval times for the search-for-up timer. If both wavepatch interfaces are down, or the wave interface is down, the system first checks one wavepatch connection, starting at the minimum interval, then the other wavepatch connection, until one of the connections comes up. The default minimum starting interval is 2 seconds and the default maximum interval is 32 seconds.
Step 8	Switch(config-red-aps)# aps timer switchover min-interval seconds	Changes the interval times for the automatic switchover enable timer. The default interval is 2 seconds.
Step 9	Switch(config-red-aps)# aps enable	Enables APS activity between the interfaces.

Examples

This example shows how to associate all the wavepatch interfaces in the shelf for splitter protection and enable APS activity.

```
Switch# configure terminal
Switch(config)# redundancy
Switch(config-red)# associate interface wavepatch */*/0 wavepatch */*/1 enable
Switch(config-red)#
```

This example shows how to associate all the wavepatch interfaces in slot 2 for splitter protection and enable APS activity.

```
Switch# configure terminal
Switch(config)# redundancy
Switch(config-red)# associate interface wavepatch 2/*/0 wavepatch 2/*/1 enable
Switch(config-red)#
```

This example shows how to associate wavepatch interfaces for the transponder module in slot 3 and subcard 0 for splitter protection and modify the default attribute settings.

```
Switch# configure terminal
Switch(config)# redundancy
Switch(config-red)# associate group dallas1
Switch(config-red-aps)# aps working wavepatch 3/0/0
Switch(config-red-aps)# aps protection wavepatch 3/0/1
Switch(config-red-aps)# aps timer search-for-up 5 40
Switch(config-red-aps)# aps enable
```

Displaying the Splitter Protection Configuration

To display the splitter protection configuration, use the following EXEC commands:

Command	Purpose
show aps	Displays the APS configuration summary.
show aps {detail group name interface wavepatch slot/subcard/port}	Displays detailed APS configuration information for groups and interfaces.
	Note Group names are case sensitive.

Example

The following example shows how to display the APS splitter protection configuration:

```
Switch# show aps

AR : APS Role, Wk: Working, Pr: Protection
AS : APS State, Ac: Active, St: Standby
IS : Interface State, Up: Up, Dn: Down
MPL: Minimum Protection Level, SD: Signal Degrade, SF: Signal Failure
      LOL: Loss of Light, - not currently protected

Interface          AR AS IS MPL Redundant Intf      Group Name
~~~~~
Wavepatch5/3/0    Wk St Up   Wavepatch5/3/1  Seattle
Wavepatch5/3/1    Pr Ac Up   LOL Wavepatch5/3/0  Seattle

Switch# show aps detail


APS Group Seattle :

architecture.: 1+1, remote prov: 1+1
span.....: end-to-end (network side splitter)
direction....: prov: uni, current: uni, remote prov: uni
revertive....: no
created.....: 14 hours, 54 minutes
aps state....: associated (enabled)
request timer: holddown: 5000 ms, max: 15000 ms, count 2
search-up int: min: 2 secs, max: 32 secs
switched chan: 1
channel ( 0): Wavepatch5/3/1 (ACTIVE - UP)
              : channel request: no-request
              : transmit request: do-not-revert
              : receive request: no-request
channel ( 1): Wavepatch5/3/0 (STANDBY - UP)
              : channel request: do-not-revert
              : switchover count: 1
              : last switchover: 14 hours, 54 minutes
```

About Line Card Protection

Line card protection on the Cisco ONS 15540 provides protection against both facility failures and transponder module failures. With line card protection, the client equipment sends identical signals to two separate transponder modules on the Cisco ONS 15540. The client equipment itself duplicates the signal on two separate connects or it uses a y-cable. On the Cisco ONS 15540, the signal from one of the transponder modules crosses the optical backplane to a mux/demux module in slot 0; the signal from the other transponder module crosses the optical backplane to a mux/demux module in slot 1 (see Figure 5-2).

Figure 5-2 Line Card Protection Scheme

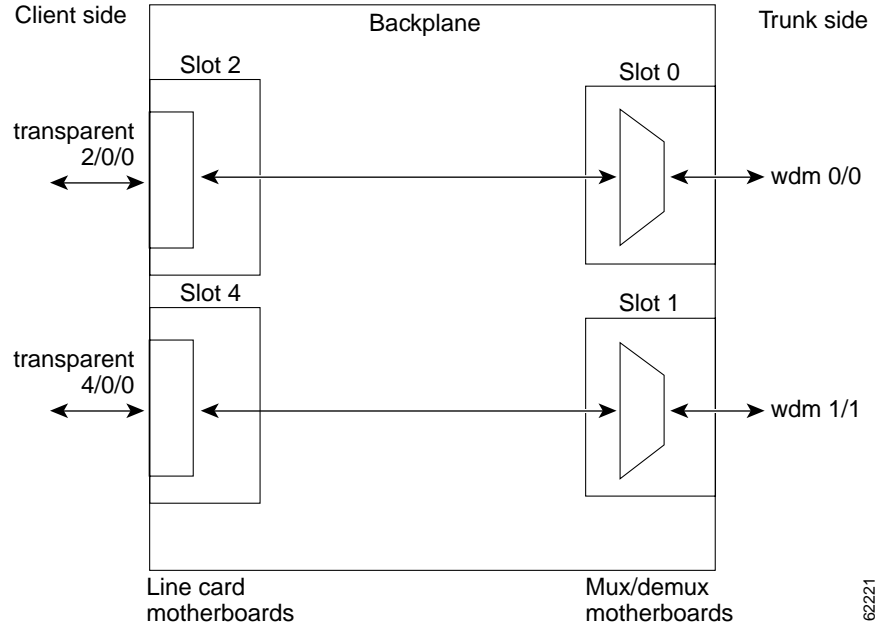

The Cisco ONS 15540 supports two types of line card protection, client protection and y-cable protection. In client protection mode, both signals are transmitted to the client system. The client system decides which signal to use and when to switch over.

**Note**

Client protection does not require APS configuration on the Cisco ONS 15540.

With y-cable protection, the signal from only one of the transparent interfaces is transmitted to the client. The Cisco ONS 15540 turns on the laser at the active transparent interface, and turns off the laser on the standby transparent interface. At each receiver on the trunk side of the transponder module, the system monitors the optical signal power level. If the system detects a failure of the active signal when an acceptable signal exists on the standby transponder module, a switchover to the standby signal occurs by turning off the active transmitter at the client interface and turning on the standby transmitter.

Considerations for Using Line Card Protection

The following considerations apply when considering the use of line card protection:

- Each subcard position in an unprotected line card motherboard corresponds to a specific subcard position in one of mux/demux motherboards. If the line card motherboard supports the “west direction,” the signal is transmitted to slot 0. If the line card motherboard supports the “east direction,” the signal is transmitted to slot 1.
- Y-cable line card protection does not protect against failures of the client equipment. To protect against client failures, ensure that protection is implemented on the client equipment itself.
- A fully provisioned single shelf configuration can support 16 channels in line card protection mode. A fully provisioned dual shelf configuration can support 32 channels in line card protection mode. For more information about dual shelf nodes, see Chapter 6, “Configuring Dual Shelf Nodes.”

- Y-cable line card protection supports revertive behavior. With revertive behavior, the signal automatically switches back to the working path after the signal failure has been corrected. The default behavior is nonrevertive.
- To simplify system management, terminate the client signal on two transponder modules of the same channel. In this way the client signal maps to the same WDM wavelength on both the working and protection paths.
- For interfaces with either Sysplex ETR or Sysplex CLO protocol encapsulation, configure bidirectional path switching to ensure proper functioning of the protocol.

**Caution**

Do not configure y-cable protection with Sysplex CLO, Sysplex ETR, or ISC compatibility protocol encapsulation, or with the OFC safety protocol.

Proper physical configuration of the system is critical to the operation of line card protection. For detailed information on shelf configuration rules, refer to the *Cisco ONS 15540 ESP Planning and Design Guide*.

Configuring Line Card Protection

The following is an overview of the tasks required to configure line card protection:

-
- Step 1** Determine the number of clients you need to support and which channels you will deploy to transport the client data.
 - Step 2** Ensure that the mux/demux modules needed to support the deployed channels are inserted in the correct subcards of the mux/demux motherboards; also ensure that the appropriate subcard positions in the mux/demux motherboards are depopulated. (See the “Considerations for Using Line Card Protection” section on page 5-7.)
 - Step 3** Ensure that the mux/demux modules are correctly interconnected with the external optical patch cables.
 - Step 4** Shut down the wavepatch interfaces connecting to the unused mux/demux motherboard if you are using splitter protected line card motherboards.
 - Step 5** Configure y-cable protection from the CLI. If your client equipment manages the signal switchover, no CLI configuration is necessary on the Cisco ONS 15540.
-

Configuring Y-Cable Protection

Y-cable protection on the Cisco ONS 15540 requires configuration on the CLI. To configure y-cable protection, use the following commands, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch(config)# redundancy Switch(config-red)#	Enters redundancy configuration mode.
Step 2	Switch(config-red)# associate group <i>name</i> Switch(config-red-aps)#	Specifies an APS group name and enters APS configuration mode. The group name is case sensitive.
Step 3	Switch(config-red-aps)# aps disable	Disables APS activity between the interfaces. For newly associated pairs, APS activity is disabled by default.
Step 4	Switch(config-red-aps)# aps working transparent <i>slot/subcard/port</i>	Configures the working path interface.
Step 5	Switch(config-red-aps)# aps protection transparent <i>slot/subcard/port</i>	Configures the protection path interface.
Step 6	Switch(config-red-aps)# aps y-cable	Enables y-cable protection. The default state is no y-cable protection (disabled).
Step 7	Switch(config-red-aps)# aps revertive	Enables revertive switchover behavior. The default behavior is nonrevertive.
Step 8	Switch(config-red-aps)# aps timer wait-to-restore <i>seconds</i>	Modifies the interval for the wait-to-restore timer. If revertive protection is configured and a switchover has occurred, the system will wait this amount of time before switching back to the functioning working path. The default value is 300 seconds.
Step 9	Switch(config-red-aps)# aps timer switchover min-interval <i>seconds</i>	Changes the interval times for the automatic switchover enable timer. The default interval is 2 seconds.
Step 10	Switch(config-red-aps)# aps enable	Enables APS activity between the interfaces.



Note

Configure both nodes that add and drop the channel with the same revertive behavior.



Caution

Do not configure y-cable protection with Sysplex CLO, Sysplex ETR, or ISC compatibility protocol encapsulation, or with the OFC safety protocol.

Example

This example shows how to associate two transparent interfaces for y-cable line card protection with revertive switchover behavior:

```
Switch# configure terminal
Switch(config)# redundancy
Switch(config-red)# associate group blue
Switch(config-red-aps)# aps working transparent 3/0/0
Switch(config-red-aps)# aps protection transparent 5/0/0
Switch(config-red-aps)# aps revertive
Switch(config-red-aps)# aps y-cable
Switch(config-red-aps)# aps enable
```

Displaying the Y-Cable Protection Configuration

To display the y-cable protection configuration, use the following EXEC command:

Command	Purpose
show aps	Displays the APS configuration summary.
show aps {detail group name interface {transparent slot/subcard/0 wavepatch slot/subcard/port}}	Displays detailed APS configuration information for interfaces and groups. Note Group names are case sensitive.

Example

The following example shows how to display the y-cable protection for an APS group named blue:

```
Switch# show aps
AR : APS Role, Wk: Working, Pr: Protection
AS : APS State, Ac: Active, St: Standby
IS : Interface State, Up: Up, Dn: Down
MPL: Minimum Protection Level, SD: Signal Degrade, SF: Signal Failure
      LOL: Loss of Light, - not currently protected

Interface          AR AS IS MPL Redundant Intf      Group Name
-----
Transparent2/3/0   Wk Ac Up SD   Transparent4/3/0 Yosemite
Transparent4/3/0   Pr St Up      Transparent2/3/0 Yosemite

Switch# show aps group Yosemite

APS Group Yosemite :
architecture.: 1+1, remote prov: 1+1
span.....: end-to-end (client side y-cable)
direction...: prov: uni, current: uni, remote prov: bi
revertive...: no
created.....: 14 hours, 53 minutes
aps state...: associated (enabled)
request timer: holddown: 5000 ms, max: 15000 ms, count 2
switched chan: 0
channel ( 0): Transparent4/3/0 (STANDBY - UP), Wave4/3 (UP)
              : channel request: no-request
              : transmit request: no-request
              : receive request: no-request
channel ( 1): Transparent2/3/0 (ACTIVE - UP), Wave2/3 (UP)
              : channel request: no-request
              : switchover count: 0
              : last switchover: never
```

Configuring Splitter Protected Line Card Motherboards for Line Card Protection

Normally, you would use unprotected line card motherboards for line card protection configurations. However, you can use splitter protected line card motherboards instead by shutting down the wavepatch interfaces to one of the mux/demux motherboards.

To configure line card protection on splitter protected line card motherboards, use the following commands, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch(config)# interface wavepatch slot/subcard/port Switch(config-if)#	Selects the wavepatch interface to configure and enters interface configuration mode.
Step 2	Switch(config-if)# shutdown	Disables the wavepatch interface.
Step 3	Switch(config-if)# exit Switch(config)#	Returns to global configuration mode. Repeat Step 1 through Step 3 for one wavepatch interface per wavepatch pair on splitter protected line card motherboards.

Examples

For the following examples, assume that the line card motherboards shown in Figure 5-2 on page 5-7 have splitter protection.

The following example shows how to disable all wavepatch interfaces on the line card motherboard in slot 2 that connect to the mux/demux motherboard in slot 1:

```
Switch(config)# interface wavepatch 2/0/1
Switch(config-if)# shutdown
Switch(config-if)# exit
Switch(config)# interface wavepatch 2/1/1
Switch(config-if)# shutdown
Switch(config-if)# exit
Switch(config)# interface wavepatch 2/2/1
Switch(config-if)# shutdown
Switch(config-if)# exit
Switch(config)# interface wavepatch 2/3/1
Switch(config-if)# shutdown
Switch(config-if)# exit
Switch(config)#
```

The following example shows how to disable all wavepatch interfaces on the line card motherboard in slot 4 that connect to the mux/demux motherboard in slot 0:

```
Switch(config)# interface wavepatch 4/0/0
Switch(config-if)# shutdown
Switch(config-if)# exit
Switch(config)# interface wavepatch 4/1/0
Switch(config-if)# shutdown
Switch(config-if)# exit
Switch(config)# interface wavepatch 4/2/0
Switch(config-if)# shutdown
Switch(config-if)# exit
Switch(config)# interface wavepatch 4/3/0
Switch(config-if)# shutdown
Switch(config-if)# exit
Switch(config)#
```

About Path Switching

The Cisco ONS 15540 supports per-channel unidirectional and bidirectional 1+1 path switching. When a signal is protected and the signal fails, or in some cases degrades, on the active path, the system automatically switches from the active network path to the standby network path.

Signal failures can be total loss of light caused by laser failures, by fiber cuts between the Cisco ONS 15540 and the client equipment, or by other equipment failure. Loss of light failures cause switchovers for both splitter protected and y-cable protected signals.

For y-cable protected signals, you can also configure alarm thresholds to cause a switchover when the signal error rate reaches an unacceptable level. For information about configuring alarm thresholds, see the “Configuring Alarm Thresholds” section on page 4-9.



Note

Both interfaces on both nodes must be configured with alarm thresholds for signal error rate switchovers to occur.

The Cisco ONS 15540 implements path switching using a APS Channel Protocol over the OSC (optical supervisory channel) on the protection path, or the IP management connection.



Note

Bidirectional path switching operates only on Cisco ONS 15540 networks that have the OSC or the IP management connection. You must correctly configure the patch connection between the mux/demux module and the OSC wave interface for the APS message channel to function if you use the OSC.

Figure 5-3 shows a simple point-to-point configuration with splitter protection. The configured working path carries the active signal, and the configured protection path carries the standby signal.

Figure 5-3 Active and Standby Path Configuration Example

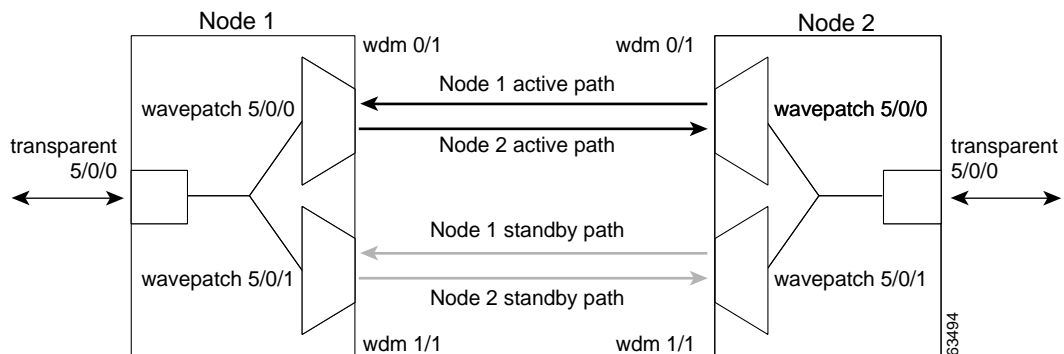


Figure 5-4 shows the behavior of unidirectional path switching when a loss of signal occurs. For the two node example network, unidirectional path switching operates as follows:

- Node 2 sends the channel signal over both the active and standby paths.
- Node 1 receives both signals and selects the signal on the active path.
- Node 1 detects a loss of signal light on its active path and switches over to the standby path.
- Node 2 does not switch over and continues to use its original active path.

Now the nodes are communicating along different paths.

Figure 5-4 Unidirectional Path Switching Example


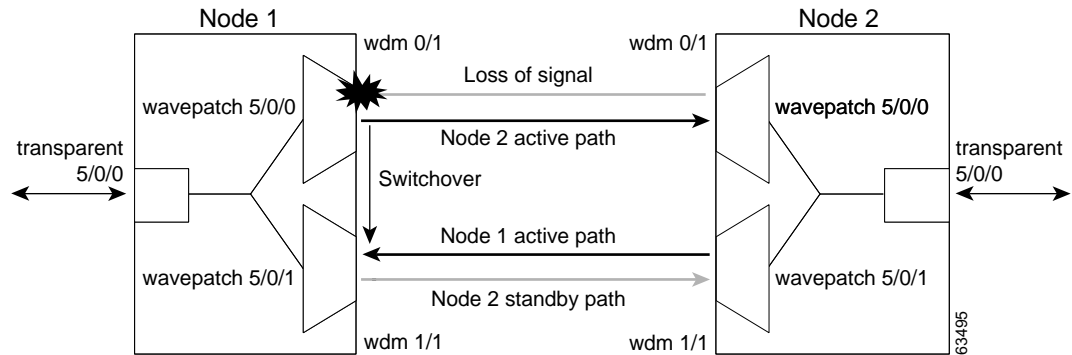


Figure 5-5 shows the behavior of bidirectional path switching when a loss of signal occurs. For the two node example network, bidirectional path switching operates as follows:

- Node 2 sends the channel signal over both the active and standby paths.
- Node 1 receives both signals and selects the signal on the active path.
- Node 1 detects a loss of signal light on its active path and switches over to the standby path.
- Node 1 sends an APS switchover message to node 2 on the protection path.
- Node 2 switches from the active path to the standby path.

Both node 1 and node 2 communicate on the same path.

Figure 5-5 Bidirectional Path Switching Overview

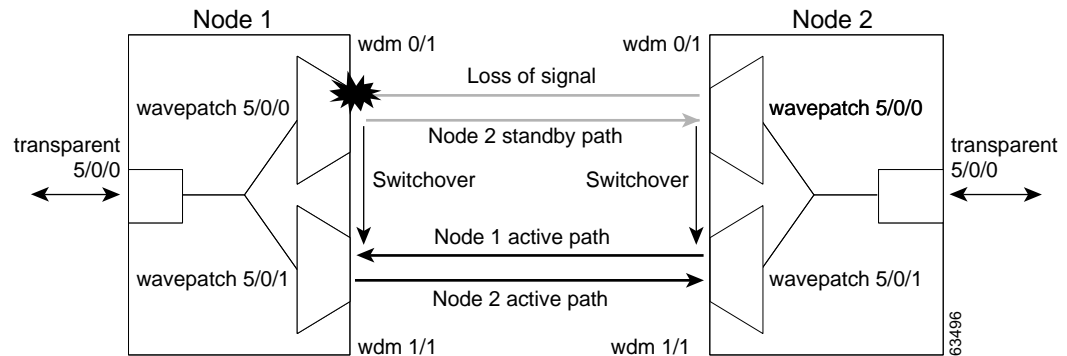

Configuring Path Switching

To configure unidirectional or bidirectional path switching, use the following commands, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch(config)# redundancy Switch(config-red)#	Enters redundancy configuration mode.
Step 2	Switch(config-red)# associate group <i>name</i> Switch(config-red-aps)#	Selects the interfaces to associate and enters APS configuration mode. Note The group name is case sensitive.
Step 3	Switch(config-red-aps)# aps disable	Disables APS activity between the interfaces. Note For newly associated pairs, APS activity is disabled by default.
Step 4	Switch(config-red-aps)# aps direction { unidirectional bidirectional }	Specifies the type of path switching. The default behavior is unidirectional.
Step 5	Switch(config-red-aps)# aps working { transparent <i>slot/subcard/0</i> wavepatch <i>slot/subcard/port</i> }	Configures the working path interface.
Step 6	Switch(config-red-aps)# aps protection { transparent <i>slot/subcard/0</i> wavepatch <i>slot/subcard/port</i> }	Configures the protection path interface.
Step 7	Switch(config-red-aps)# aps timer oscp holddown <i>milliseconds</i> count <i>number</i>	Changes the APS Channel Protocol holddown timer and message count values. The default is 5000 milliseconds and a count of 2
Step 8	Switch(config-red-aps)# aps timer oscp max-interval <i>seconds</i>	Changes the APS Channel Protocol maximum interval timer for waiting for a message. The default is 15 seconds. Repeat Step 1 through Step 8 on the corresponding transparent interface on the other node that adds and drops, or terminates, the channel.
Step 9	Switch(config-red-aps)# aps enable	Enables APS activity between the interfaces.


Note

Both nodes in the network that add and drop the channel must have the same APS configuration. Specifically, both must have the same path switching behavior, and working and protection paths.



Note

For interfaces with either Sysplex ETR or Sysplex CLO protocol encapsulation, configure bidirectional path switching to ensure proper functioning of the protocol.

Examples

Figure 5-6 shows the active and standby paths between node 1 and node 2 with splitter protection.

Figure 5-6 Bidirectional Path Switching Example with Splitter Protection

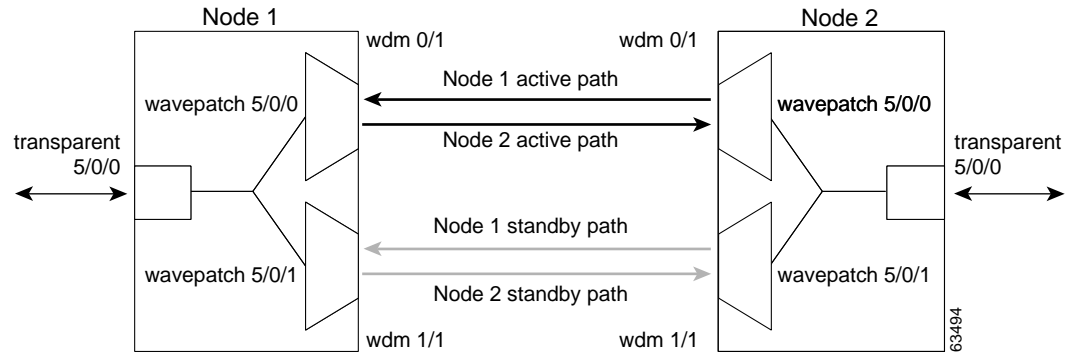

The following example shows how to configure one channel in the example network for bidirectional path switching using the default working and protection path interfaces:


```

Node1# configure terminal
Node1(config)# redundancy
Node1(config-red)# associate group red
Node1(config-red-aps)# aps working wavepatch 5/0/0
Node1(config-red-aps)# aps protection wavepatch 5/0/1
Node1(config-red-aps)# aps bidirectional
Node1(config-red-aps)# aps enable

Node2# configure terminal
Node2(config)# redundancy
Node2(config-red)# associate group blue
Node2(config-red-aps)# aps working wavepatch 5/0/0
Node2(config-red-aps)# aps protection wavepatch 5/0/1
Node2(config-red-aps)# aps bidirectional
Node2(config-red-aps)# aps enable
  
```

Figure 5-7 shows the active and standby paths between node 1 and node 2 with y-cable protection.

Figure 5-7 Bidirectional Path Switching Example with Y-Cable Protection

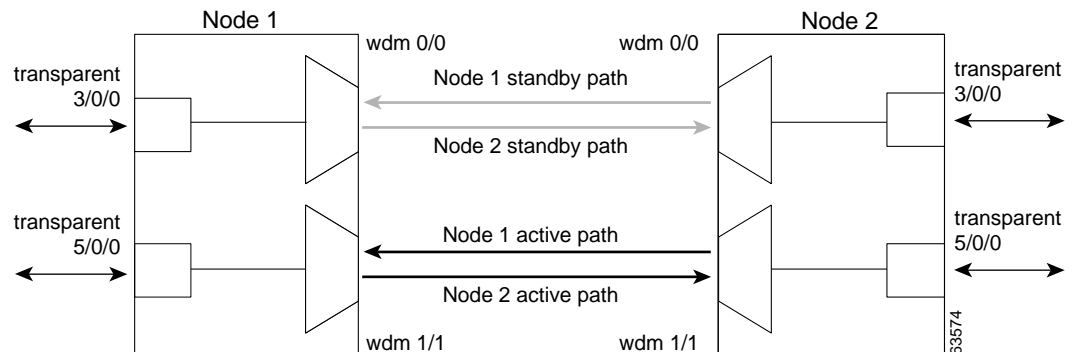

The following example shows how to configure one channel in the example network for bidirectional path switching and configure the working and protection path interfaces:

```

Node1# configure terminal
Node1(config)# redundancy
Node1(config-red)# associate group alpha
Node1(config-red-aps)# aps working transparent 5/0/0
Node1(config-red-aps)# aps protection transparent 3/0/0
Node1(config-red-aps)# aps direction bidirectional
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps enable

Node2# configure terminal
Node2(config)# redundancy
Node2(config-red)# associate group alpha
Node2(config-red-aps)# aps working transparent 5/0/0
Node2(config-red-aps)# aps protection transparent 3/0/0
Node2(config-red-aps)# aps direction bidirectional
Node2(config-red-aps)# aps y-cable
Node2(config-red-aps)# aps enable

```

Changing the Path Switching Direction for Y-Cable Protection

To change the path switching direction for a y-cable protection configuration, use the following commands:

	Command	Purpose
Step 1	Switch# show aps group name	Displays the current standby interface in the APS group information.
Step 2	Switch# configure terminal Switch(config)#	Enters global configuration mode.
Step 3	Switch(config)# interface transparent slot/subcard0 Switch(config-if)#	Enters interface configuration mode for the standby interface.
Step 4	Switch(config-if)# shutdown	Disables the interface.
Step 5	Switch(config-if)# exit Switch(config)#	Exits interface configuration mode.
Step 6	Switch(config)# redundancy Switch(config-red)#	Enters redundancy configuration mode.
Step 7	Switch(config-red)# associate group name Switch(config-red-aps)#	Selects the interfaces to associate and enters APS configuration mode. Note The group name is case sensitive.
Step 8	Switch(config-red-aps)# aps disable	Disables APS activity between the interfaces. Note For newly associated pairs, APS activity is disabled by default.
Step 9	Switch(config-red-aps)# aps direction {unidirectional bidirectional}	Specifies the new path switching operation.
Step 10	Switch(config-red-aps)# aps enable	Enables APS activity between the interfaces.

	Command	Purpose
Step 11	Switch(config-red-aps)# exit Switch(config)#	Exits APS configuration mode.
Step 12	Switch(config-red)# exit Switch(config)#	Exits redundancy configuration mode.
Step 13	Switch(config)# interface transparent slot/subcard/0 Switch(config-if)#	Enters interface configuration mode for the standby interface.
Step 14	Switch(config-if)# no shutdown	Disables the interface.
Step 15	Switch(config-if)# end Switch#	Returns to privileged EXEC mode. Repeat Step 1 through Step 15 on the corresponding transparent interface on the other node that adds and drops, or terminates, the channel.

Example

The following example shows how to change the path switching operation for a y-cable APS group from unidirectional to bidirectional:

```

Node1# show aps group Denver

APS Group Denver :

  architecture.: 1+1, remote prov: 1+1
  span.....: end-to-end (client side y-cable)
  direction...: prov: uni, current: uni, remote prov: uni
  revertive....: no
  created.....: 14 hours, 53 minutes
  aps state...: associated (enabled)
  request timer: holddown: 5000 ms, max: 15000 ms, count 2
  switched chan: 0
→ channel ( 0): Transparent4/3/0 (STANDBY - UP), Wave4/3 (UP)
   : channel request: no-request
   : transmit request: no-request
   : receive request: no-request
  channel ( 1): Transparent2/3/0 (ACTIVE - UP), Wave2/3 (UP)
   : channel request: no-request
   : switchover count: 0
   : last switchover: never

Node1# configure terminal
Node1(config)# interface transparent 4/3/0
Node1(config-if)# shutdown
Node1(config-if)# exit
Node1(config)# redundancy
Node1(config-red)# associate group Denver
Node1(config-red-aps)# aps disable
Node1(config-red-aps)# aps direction bidirectional
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# exit
Node1(config)# interface transparent 4/3/0
Node1(config-if)# no shutdown
Node1(config-if)# end
Node1#

```

```

Node2# show aps group Denver

APS Group Denver :

architecture.: 1+1, remote prov: 1+1
span.....: end-to-end (client side y-cable)
direction...: prov: uni, current: uni, remote prov: bi
revertive....: no
created.....: 14 hours, 53 minutes
aps state...: associated (enabled)
request timer: holddown: 5000 ms, max: 15000 ms, count 2
switched chan: 0
→ channel ( 0): Transparent4/3/0 (STANDBY - UP), Wave4/3 (UP)
      : channel request: no-request
      : transmit request: no-request
      : receive request: no-request
channel ( 1): Transparent2/3/0 (ACTIVE - UP), Wave2/3 (UP)
      : channel request: no-request
      : switchover count: 0
      : last switchover: never

Node2# configure terminal
Node2(config)# interface transparent 4/3/0
Node2(config-if)# shutdown
Node2(config-if)# exit
Node2(config)# redundancy
Node2(config-red)# associate group Denver
Node2(config-red-aps)# aps disable
Node2(config-red-aps)# aps direction bidirectional
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# exit
Node2(config)# interface transparent 4/3/0
Node2(config-if)# no shutdown
Node2(config-if)# end
Node2#

```

Displaying the Path Switching Configuration

To display the path switching configuration, use the following EXEC command:

Command	Purpose
show aps [detail group name interface { transparent slot/subcard/0 wavepatch slot/subcard/port }]	Displays the APS configuration for interfaces and groups. Note Group names are case sensitive.

Example

The following example shows how to display the path switching configuration for an APS group named blue:

```
Switch# show aps group blue

APS Group blue:

architecture.: 1+1, remote prov: 1+1
span.....: end-to-end
➔ direction...: prov: bi, current: bi, remote prov: bi
revertive....: no
created.....: 26 minutes
aps state....: associated
request timer: holddown: 5000 ms, max: 15 secs, count 2
switched chan: 0
channel ( 0): Wavepatch8/0/1 (STANDBY - UP)
             : channel request: no-request
             : transmit request: no-request
             : receive request: no-request
channel ( 1): Wavepatch8/0/0 (ACTIVE - UP)
             : channel request: no-request
             : switchover count: 0
             : last switchover: never
```

Switchovers and Lockouts

In APS, you can switch a channel signal from one path to another, or you can lockout a switchover altogether while performing system maintenance.

A switchover of the channel signal from the working path to protection path is useful when upgrading or maintaining the system, or in cases where a signal failure caused a switchover. In the case of splitter protection, once the cause of the problem has been corrected, the system does not automatically revert to using the original working path. The switchover to the formerly failed interface must be requested from the CLI. The interface originally configured as the working path might be preferred because of its link loss characteristics or because of its distance advantage. For example, some protocols, such as ESCON, experience lower data throughput at increasing distances, so moving the signal back to the shorter path might be advised.

A lockout prevents a switchover of the active signal from the working path to the protection path. This is useful when upgrading or maintaining the system, or when the signal on the protection path has degraded or failed.

The Cisco ONS 15540 supports APS switchover and lockout requests from the CLI. These requests have priorities depending on the condition of the protection signal and the existence of other switchover requests. There are three types of switchover requests:

- Lockout requests—Have the highest priority and take effect regardless of the condition of the protection signal. A lockout prevents the active signal from switching over from the working path to the protection path.
- Forced switchover requests—Have the next highest priority and are only prevented if there is an existing lockout on the protection path, or the signal on the protection path has failed when switching from working to protection.
- Manual switchover requests—Have the lowest priority and only occur if there is no protection path lockout, a forced switchover, or the signal has failed or degraded.

In summary, the priority order is:

1. Lockout
2. Signal failure on the protection path
3. Forced switchover
4. Signal failure on the working path
5. Signal degrade on the working or protection path
6. Manual switchover

If a request or condition of a higher priority is in effect, a lower priority request is rejected.



Note

APS lockouts and switchovers do not persist across processor card switchovers or system reloads.

Requesting a Switchover or Lockout

To prevent switchovers to the protection signal, or to request a signal switchover, use the following commands in privileged EXEC mode:

Command	Purpose
aps lockout <i>group-name</i>	Locks out all switchovers to the protection path.
aps switch <i>group-name</i> { force manual } { protection-to-working working-to-protection }	Requests a signal switchover of the active signal from the working path to the protection path, or vice versa, within an associated interface pair.

Examples

The following example shows how to request a forced switchover from working to protection except if a lockout is in effect on the protection path:

```
Switch# aps switch blue force working-to-protection
```

The following example shows how to prevent a switchover to the protection path:

```
Switch# aps lockout Wavepatch3/0/0
```

Displaying Switchover and Lockout Request Status

To display a pending switchover request, use the following command in privileged EXEC mode:

Command	Purpose
show aps [detail group <i>name</i> interface { transparent <i>slot/subcard/0</i> wavepatch <i>slot/subcard/port</i> }]	Displays the APS configuration for interfaces and groups. Note Group names are case sensitive.

The following example shows how to display the switchover request status on an APS group:

```
Switch# show aps group yellow

APS Group yellow:

architecture.: 1+1, remote prov: 1+1
span.....: end-to-end (client side y-cable)
direction...: prov: uni, current: uni, remote prov: bi
revertive...: no
created.....: 15 hours, 1 minute
aps state...: associated (enabled)
request timer: holddown: 5000 ms, max: 15000 ms, count 2
switched chan: 0
channel ( 0): Transparent4/3/0 (STANDBY - UP), Wave4/3 (UP)
→          : channel request: lockout-of-protection
→          : transmit request: lockout-of-protection
           : receive request: no-request
channel ( 1): Transparent2/3/0 (ACTIVE - UP), Wave2/3 (UP)
           : channel request: no-request
           : switchover count: 0
           : last switchover: never
```

Clearing Switchovers and Lockouts

A lockout or a forced or manual switchover request stays in effect until the system reboots. You can manually clear these requests from the CLI.

To clear an APS switchover or lockout, use the following privileged EXEC command:

Command	Purpose
aps clear <i>group-name</i>	Clears APS switch request or lockout on an associated interface pair.

Example

The following example shows how to clear the switchover requests on an associated interface pair using the default group name:

```
Switch# aps clear Wavepatch10/0/0
```

Displaying Switchover and Lockout Clear Status

To display a pending switchover request, use the following command in privileged EXEC mode:

Command	Purpose
show aps [detail group <i>name</i> interface { transparent <i>slot/subcard/0</i> wavepatch <i>slot/subcard/port</i> }]	Displays the APS configuration for interfaces and groups. Note Group names are case sensitive.

The following example shows how to display the switchover requests status on an APS group:

```
Switch# show aps group blue

APS Group blue :

architecture.: 1+1, remote prov: 1+1
span.....: end-to-end (client side y-cable)
direction...: prov: uni, current: uni, remote prov: bi
revertive...: no
created.....: 15 hours, 1 minute
aps state...: associated (enabled)
request timer: holddown: 5000 ms, max: 15000 ms, count 2
switched chan: 0
channel ( 0): Transparent10/0/0 (STANDBY - UP)
→          : channel request: no-request
→          : transmit request: no-request
           : receive request: no-request
channel ( 1): Transparent8/0/0 (ACTIVE - UP)
           : channel request: no-request
           : switchover count: 0
           : last switchover: never
```



Configuring Dual Shelf Nodes

This chapter describes how to configure a dual shelf node in a network topology. This chapter contains the following sections:

- About Dual Shelf Nodes, page 6-1
- Configuring Line Card Protected Dual Shelf Nodes, page 6-1

About Dual Shelf Nodes

On a single Cisco ONS 15540 shelf, only 16 channels can be supported with line card protection. By cascading two Cisco ONS 15540 shelves, up to 32 channels can be supported with line card protection. You can use dual shelf nodes in either a point-to-point topology or a ring topology. The OSCs (optical supervisory channels) can both connect to one shelf, or they can be split between the two shelves.

Configuring Line Card Protected Dual Shelf Nodes

To configure a dual shelf node with line card protection, follow these steps:

-
- Step 1** Populate the shelves with the motherboards, modules, and processor cards.
 - Step 2** Connect the mux/demux modules with cables and configure the patch connections.
For more information on patch connections, see the “About Patch Connections” section on page 4-17.
 - Step 3** Establish network access to both shelves.
For information on configuring network access, see the “Configuring IP Access on the NME Interface” section on page 3-3.
 - Step 4** Configure IP addresses on the OSC wave interfaces.
For information on configuring IP address on the OSC wave interface, see the “Configuring IP on the OSC” section on page 9-9.
 - Step 5** Configure the network topology information for the connections between the two shelves.
 - Step 6** Configure APS (Automatic Protection Switching) on the shelves in the network that support the channels.
-

Configuring and Cabling the Shelves


You can use either terminal or add/drop mux/demux modules in a dual shelf node. For configurations with 32 channels with line card protection, we recommend using the 16-channel terminal mux/demux module. For configurations with fewer than 32 channels in line card protection, use 8-channel add/drop mux/demux modules as often as possible.

Terminal Mux/Demux Modules for 32-Channels

Shelf 1 is configured for channels 1–16 with OSC, while shelf 2 is configured for channels 17–32 without OSC. The mux/demux modules are patched between the two shelves as if they were in the same shelf.

Figure 6-1 shows how the modules are installed for shelf 1 in the line card protected 32-channel configuration.


Figure 6-1 Shelf 1 Configuration for 32 Channels with Terminal Mux/Demux Modules and Line Card Protection

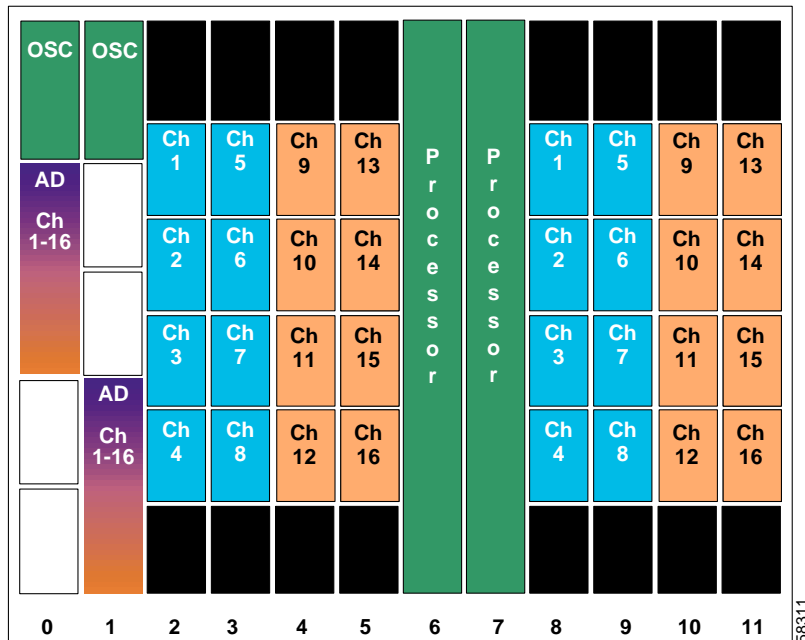

58311

The configuration for shelf 2 is shown in Figure 6-2. As in shelf 1, the west line card motherboards are used in slots 2–5, and the east line card motherboards are used in slots 8–11.


Figure 6-2 Shelf 2 Configuration for 32 Channels with Terminal Mux/Demux Modules and Line Card Protection

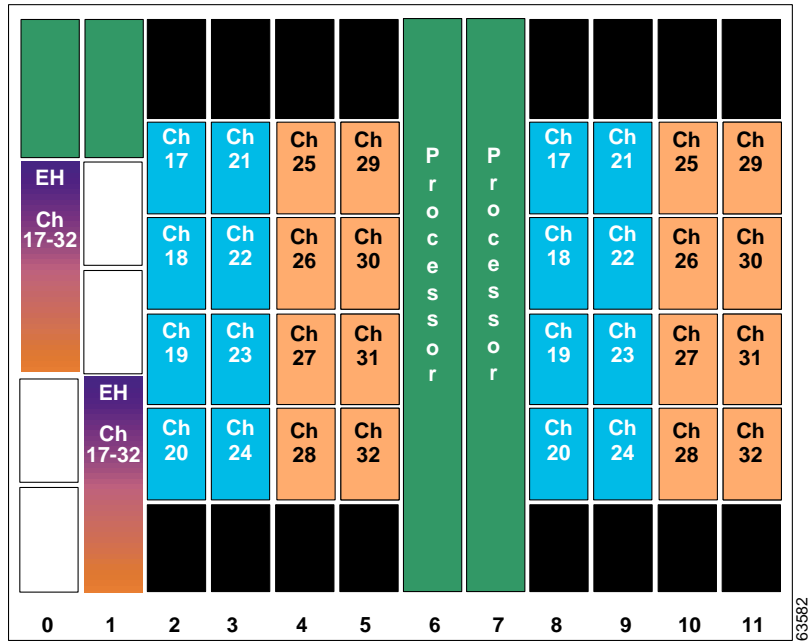

63582

Figure 6-3 shows how the terminal mux/demux modules are cabled between the two shelves to support all 32 channels on both the east and west sides.

Figure 6-3 Terminal Mux/Demux Module Cabling with Two Shelves with 32 Channels and Line Card Protection

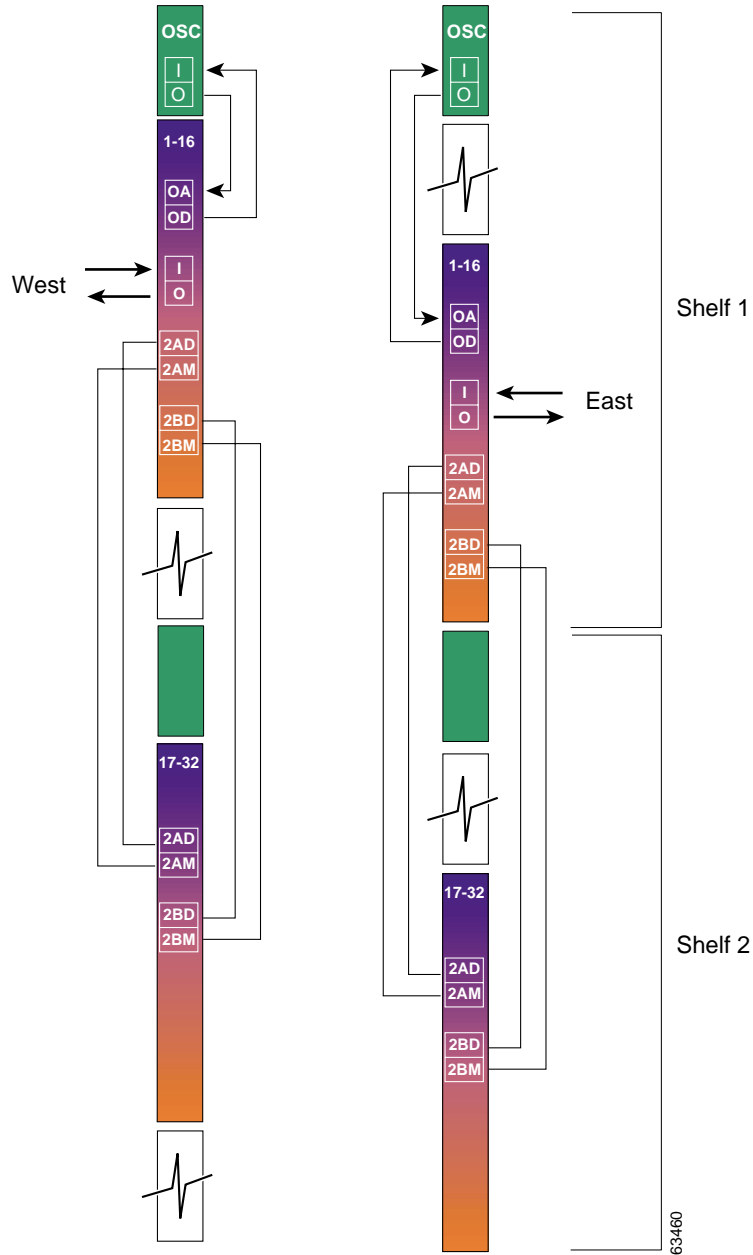


Add/Drop Mux/Demux Modules for 24-Channels

Shelf 1 is configured for channels 1–16 with OSC to the west and shelf 2 is configured for channels 17–24 with OSC to the east. The mux/demux modules are patched between the two shelves as if they were in the same shelf.


Figure 6-4 shows how the modules are installed for shelf 1 in the line card protected 24-channel configuration.

Figure 6-4 Shelf 1 Configuration for 24 Channels with Add/Drop Mux/Demux Modules and Line Card Protection

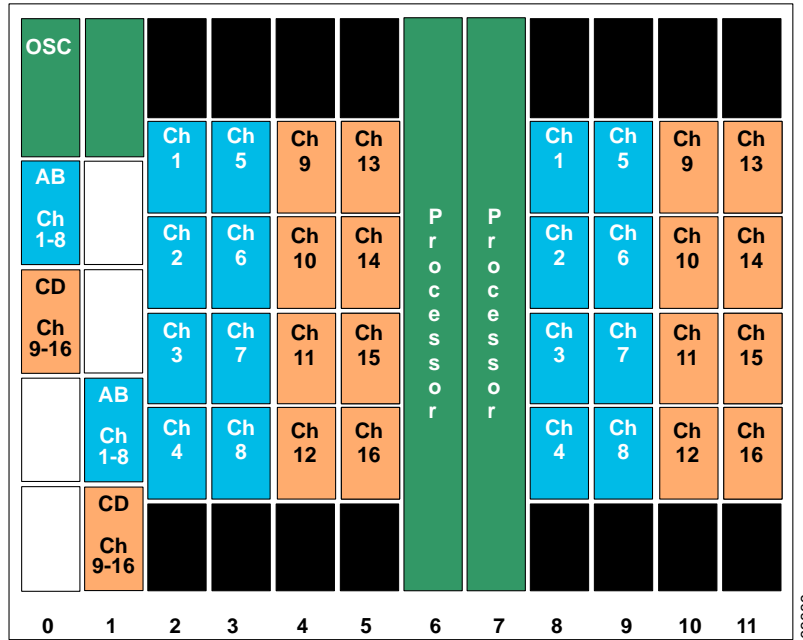

The configuration for shelf 2 is shown in Figure 6-5. As in shelf 1, the west line card motherboards are used in slots 2–5, and the east line card motherboards are used in slots 8–11.


Figure 6-5 Shelf 2 Configuration for 24 Channels with Add/Drop Mux/Demux Modules and Line Card Protection

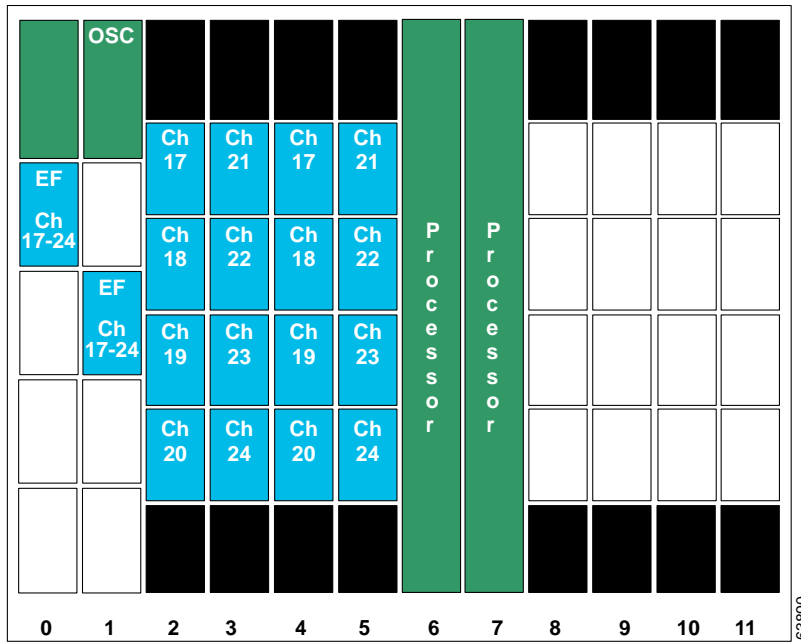

63890

Figure 6-6 shows how the terminal mux/demux modules are cabled between the two shelves to support 24 channels on both the east and west sides.

Figure 6-6 Add/Drop Mux/Demux Module Cabling with Two Shelves with 24 Channels and Line Card Protection

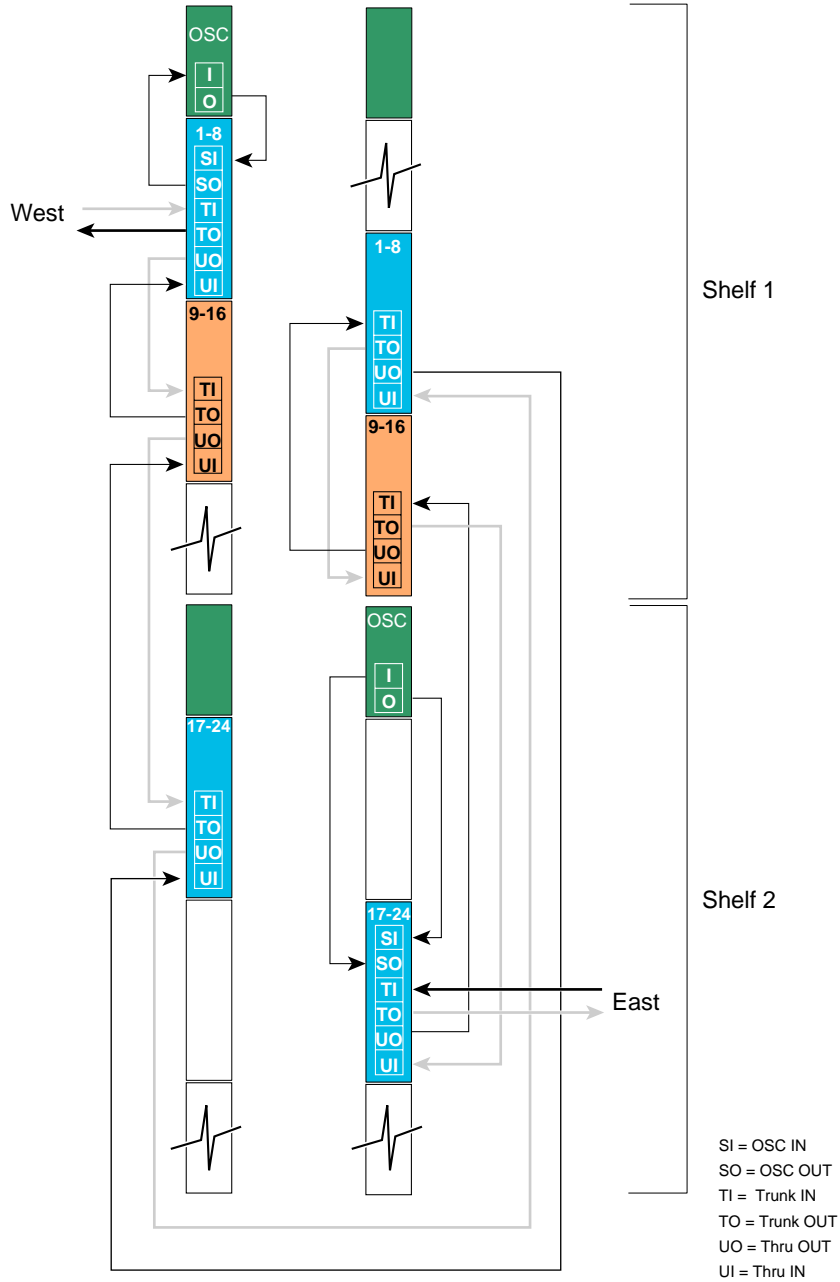

Configuring Connections Between Shelves

To include the two shelves as one node in the network topology, you must configure the patch connection between the shelves in the CLI (command-line interface). To configure these connections, use the following commands, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch1(config)# interface { wave slot oscfiler slot/subcard thru slot/subcard wdm slot/subcard filterband slot/subcard/port filtergroup slot/subcard/port }	Selects the interface to configure and enters interface configuration mode.
Step 2	Switch(config-if)# topology neighbor { name node-name ip-address node-ip-address mac-address node-mac-address } { port { name port-name ip-address port-ip-address mac-address port-mac-address }}	Configures the network topology information for a neighboring node.
Step 3	Switch(config-if)# topology neighbor agent ip-address ip-address	Specifies the address of the network topology agent on a neighboring node.



Note

Configure the patch connections between the mux/demux modules on the same shelf as described in the “Configuring Patch Connections” section on page 4-18.

Examples

The following example shows how to configure the patch connections between the terminal mux/demux modules on the two shelves in the node:

```
Shelf1(config)# interface filterband 0/0/0
Shelf1(config-if)# topology neighbor name shelf2 port name filtergroup 0/0/0
Shelf1(config-if)# topology neighbor agent ip-address 10.1.2.3
Shelf1(config-if)# exit
Shelf1(config)# interface filterband 0/0/1
Shelf1(config-if)# topology neighbor name shelf2 port name filtergroup 0/0/1
Shelf1(config-if)# topology neighbor agent ip-address 10.1.2.3
Shelf1(config-if)# exit
Shelf1(config)# interface filterband 1/2/0
Shelf1(config-if)# topology neighbor name shelf2 port name filtergroup 1/2/0
Shelf1(config-if)# topology neighbor agent ip-address 10.1.2.3
Shelf1(config-if)# exit
Shelf1(config)# interface filterband 1/2/1
Shelf1(config-if)# topology neighbor name shelf2 port name filtergroup 1/2/1
Shelf1(config-if)# topology neighbor agent ip-address 10.1.2.3
```

```

Shelf2(config)# interface filtergroup 0/0/0
Shelf2(config-if)# topology neighbor name shelf1 port name filterband 0/0/0
Shelf2(config-if)# topology neighbor agent ip-address 10.2.2.4
Shelf2(config-if)# exit
Shelf2(config)# interface filtergroup 0/0/1
Shelf2(config-if)# topology neighbor name shelf1 port name filterband 0/0/1
Shelf2(config-if)# topology neighbor agent ip-address 10.2.2.4
Shelf2(config-if)# exit
Shelf2(config)# interface filtergroup 1/2/0
Shelf2(config-if)# topology neighbor name shelf1 port name filterband 1/2/0
Shelf2(config-if)# topology neighbor agent ip-address 10.2.2.4
Shelf2(config-if)# exit
Shelf2(config)# interface filtergroup 1/2/1
Shelf2(config-if)# topology neighbor name shelf1 port name filterband 1/2/1
Shelf2(config-if)# topology neighbor agent ip-address 10.2.2.4

```

The following example shows how to configure the patch connections between the add/drop mux/demux modules on the two shelves in the node:

```

Shelf1(config)# interface thru 0/3
Shelf1(config-if)# topology neighbor name shelf2 port name wdm 0/0
Shelf1(config-if)# topology neighbor agent ip-address 10.2.2.4
Shelf1(config-if)# exit
Shelf1(config)# interface wdm 1/3
Shelf1(config-if)# topology neighbor name shelf2 port name thru 1/0
Shelf1(config-if)# topology neighbor agent ip-address 10.2.2.4
Shelf1(config-if)# exit

Shelf2(config)# interface wdm 0/0
Shelf2(config-if)# topology neighbor name shelf1 port name thru 0/3
Shelf2(config-if)# topology neighbor agent ip-address 10.2.2.4
Shelf2(config-if)# exit
Shelf2(config)# interface thru 1/0
Shelf2(config-if)# topology neighbor name shelf1 port name wdm 0/0
Shelf2(config-if)# topology neighbor agent ip-address 10.2.2.4
Shelf2(config-if)# exit

```

Configuring APS

When a dual shelf node is part of a network topology, the channels supported by it might require special configuration. On a dual shelf node, the OSC might have only one connection, such as the configuration shown in Figure 6-4 on page 6-5, or no OSC connections at all, such as the configuration shown in Figure 6-2 on page 6-3. For the APS Channel Protocol to function correctly, the shelves that support a channel must both have two OSC connections, or you must configure the APS group name and IP address information on the shelves.

To configure APS for a channel supported on a dual shelf node without full OSC support, perform the following steps, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch1(config)# redundancy Switch1(config-red)#	Enters redundancy configuration mode.
Step 2	Switch(config-red)# associate group <i>name</i> Switch(config-red-aps)#	Specifies an APS group name and enters APS configuration mode. Note The group name is case sensitive.

	Command	Purpose
Step 3	Switch(config-red-aps)# aps disable	Disables APS activity between the interfaces. Note For newly created APS groups, APS activity is disabled by default.
Step 4	Switch(config-red-aps)# aps working wavepatch slot/subcard/port	Configures the working path interface.
Step 5	Switch(config-red-aps)# aps protection wavepatch slot/subcard/port	Configures the protection path interface.
Step 6	Switch1(config-red-aps)# aps y-cable	Enables y-cable protection. The default state is no y-cable protection (disabled).
Step 7	Switch1(config-red-aps)# aps far-end group group-name ip-address address	Configures the APS group name and IP address on the remote node that support the channel.
Step 8	Switch1(config-red-aps)# aps enable	Enables APS activity between the interfaces.

For more information on configuring y-cable line card protection, refer to the “Configuring Line Card Protection” section on page 5-8.

Examples

For these examples, assume the following:

- Channels 17-20 terminate on the second shelf of the dual shelf node.
- The second shelf of the dual shelf node has no OSC support (see Figure 6-3 on page 6-4).
- The management IP address of the second shelf of the dual shelf node is 10.1.2.3.
- The management IP address of the single shelf node is 10.3.2.1.

The following example shows how to configure channels 17-20 on the single shelf node:

```
Switch(config)# redundancy
Switch(config-red)# associate group Channel17
Switch(config-red-aps)# aps working transparent 2/0/0
Switch(config-red-aps)# aps protection transparent 4/0/0
Switch(config-red-aps)# aps y-cable
Switch(config-red-aps)# aps far-end group Channel17 ip-address 10.1.2.3
Switch(config-red-aps)# aps enable
Switch(config-red-aps)# exit
Switch(config-red)# associate group Channel18
Switch(config-red-aps)# aps working transparent 2/1/0
Switch(config-red-aps)# aps protection transparent 4/1/0
Switch(config-red-aps)# aps y-cable
Switch(config-red-aps)# aps far-end group Channel18 ip-address 10.1.2.3
Switch(config-red-aps)# aps enable
Switch(config-red-aps)# exit
Switch(config-red)# associate group Channel19
Switch(config-red-aps)# aps working transparent 2/2/0
Switch(config-red-aps)# aps protection transparent 4/2/0
Switch(config-red-aps)# aps y-cable
Switch(config-red-aps)# aps far-end group Channel19 ip-address 10.1.2.3
Switch(config-red-aps)# aps enable
Switch(config-red-aps)# exit
```



```
Switch(config-red)# associate group Channel20
Switch(config-red-aps)# aps working transparent 2/3/0
Switch(config-red-aps)# aps protection transparent 4/3/0
Switch(config-red-aps)# aps y-cable
Switch(config-red-aps)# aps far-end group Channel20 ip-address 10.1.2.3
Switch(config-red-aps)# aps enable
Switch(config-red-aps)# end
```

```
Switch# copy system:running-config nvram:startup-config
```

The following example shows how to configure channels 17-20 on shelf 2 of a dual shelf node.

```
Shelf2(config)# redundancy
Shelf2(config-red)# associate group Channel17
Shelf2(config-red-aps)# aps working transparent 2/0/0
Shelf2(config-red-aps)# aps protection transparent 4/0/0
Shelf2(config-red-aps)# aps y-cable
Shelf2(config-red-aps)# aps far-end group Channel17 ip-address 10.3.2.1
Shelf2(config-red-aps)# aps enable
Shelf2(config-red-aps)# exit
Shelf2(config-red)# associate group Channel18
Shelf2(config-red-aps)# aps working transparent 2/1/0
Shelf2(config-red-aps)# aps protection transparent 4/1/0
Shelf2(config-red-aps)# aps y-cable
Shelf2(config-red-aps)# aps far-end group Channel18 ip-address 10.3.2.1
Shelf2(config-red-aps)# aps enable
Shelf2(config-red-aps)# exit
Shelf2(config-red)# associate group Channel19
Shelf2(config-red-aps)# aps working transparent 2/2/0
Shelf2(config-red-aps)# aps protection transparent 4/2/0
Shelf2(config-red-aps)# aps y-cable
Shelf2(config-red-aps)# aps far-end group Channel19 ip-address 10.3.2.1
Shelf2(config-red-aps)# aps enable
Shelf2(config-red-aps)# exit
Shelf2(config-red)# associate group Channel20
Shelf2(config-red-aps)# aps working transparent 2/3/0
Shelf2(config-red-aps)# aps protection transparent 4/3/0
Shelf2(config-red-aps)# aps y-cable
Shelf2(config-red-aps)# aps far-end group Channel20 ip-address 10.3.2.1
Shelf2(config-red-aps)# aps enable
Shelf2(config-red-aps)# end

Shelf2# copy system:running-config nvram:startup-config
```




Configuring Point-to-Point Topologies

This chapter describes how to configure point-to-point topologies. This chapter contains the following sections:

- About Point-to-Point Topologies, page 7-1
- Configuring a Point-to-Point Topology with Splitter Protection, page 7-3
- Configuring a Point-to-Point Topology with Line Card Protection, page 7-5
- Configuring an Unprotected Point-to-Point Topology, page 7-9

About Point-to-Point Topologies

In a point-to-point topology, two Cisco ONS 15540 systems are connected to each other in the network. Each of the systems originates and terminates all configured channels. You can use splitter protection to protect against fiber failure, or line card protection to protect against both the fiber and transponder failures. To also protect against client failure, you can implement protection on the client equipment itself.



Note

Client protection implementation is beyond the scope of this document.

Up to 32 client signals in splitter protection mode, or 16 client signals in line card protection mode, are optically multiplexed at each end and are multiplexed onto a single fiber pair. Figure 7-1 shows an example of this topology using two DWDM fiber links, one working and one protection.

Figure 7-1 Protected Point-to-Point Topology Example


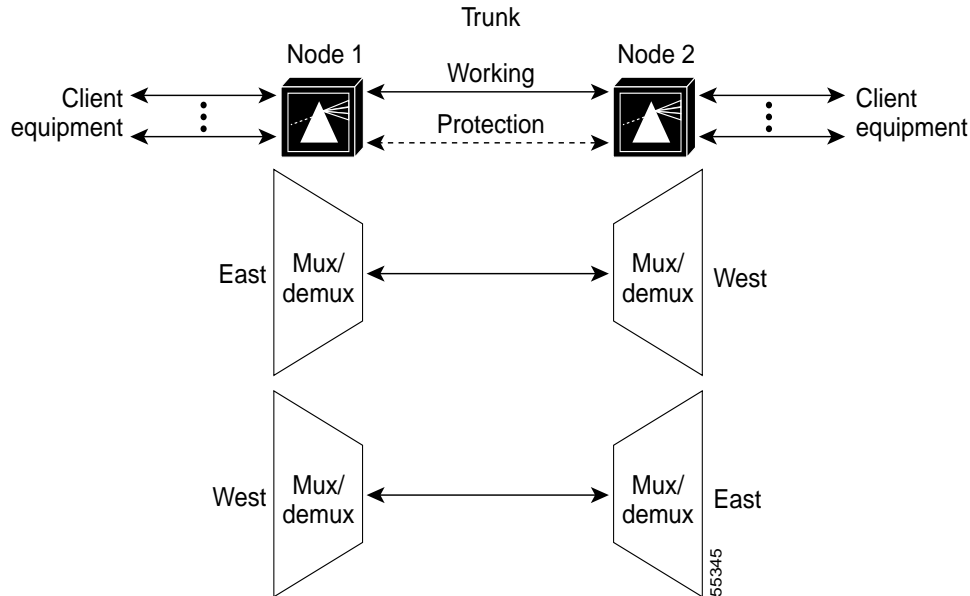


Figure 7-2 shows an example of an unprotected point-to-point topology using one unprotected DWDM fiber link.

Figure 7-2 Unprotected Point-to-Point Topology Example

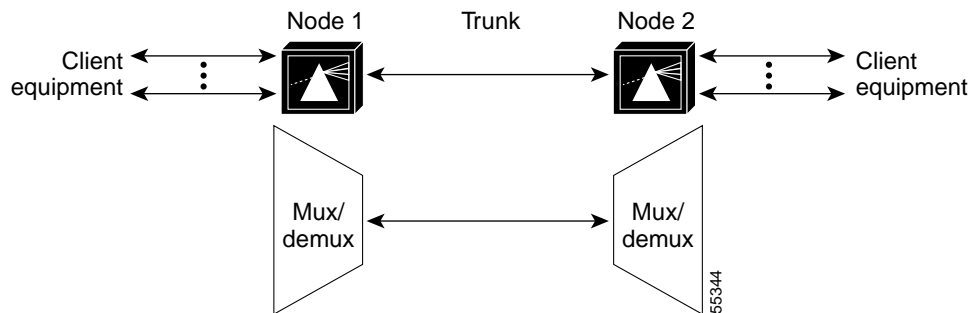

Point-to-point topologies have many common applications, including extending the reach of Gigabit Ethernet or SONET in long-haul transport.

**Note**


Point-to-point topologies support an intermediate add/drop node only in an unprotected configuration. If add/drop with protection is required, a ring configuration should be used.

For more information on point-to-point topologies, refer to the *Cisco ONS 15540 ESP Planning and Design Guide*.

Configuring a Point-to-Point Topology with Splitter Protection

Figure 7-3 shows how the modules are installed in the shelf for a 32-channel point-to-point topology. Thirty-two client signals of any supported protocol are carried over the trunk fiber, which is protected. This scenario assumes that splitter protection is being used and the working path is through slot 0 on both nodes.


Figure 7-3 Shelf Configuration for Splitter Protected 32-Channel Point-to-Point Topology

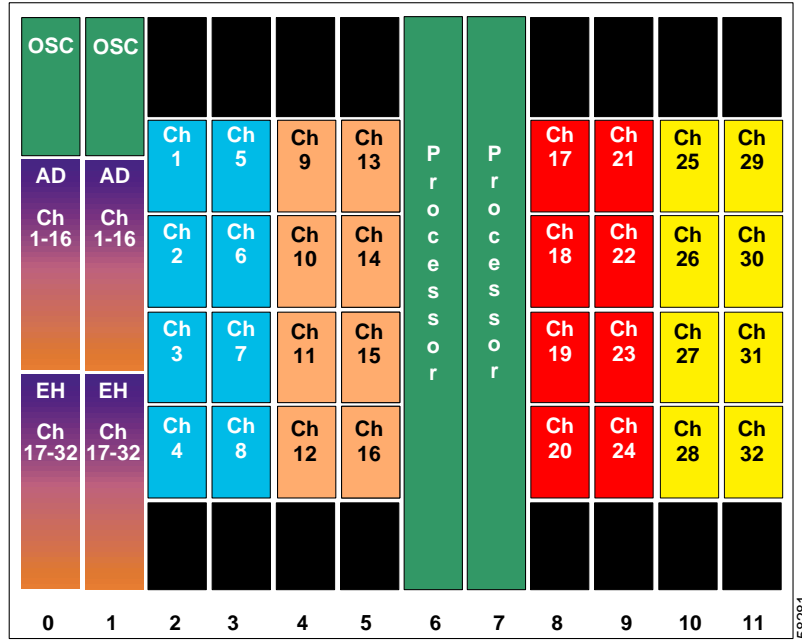

58281

Figure 7-4 shows how the terminal mux/demux modules are cabled for the 32-channel splitter protected point-to-point configuration.

Figure 7-4 Terminal Mux/Demux Module Cabling with OSC for Splitter Protected 32-Channel Point-to-Point Topology

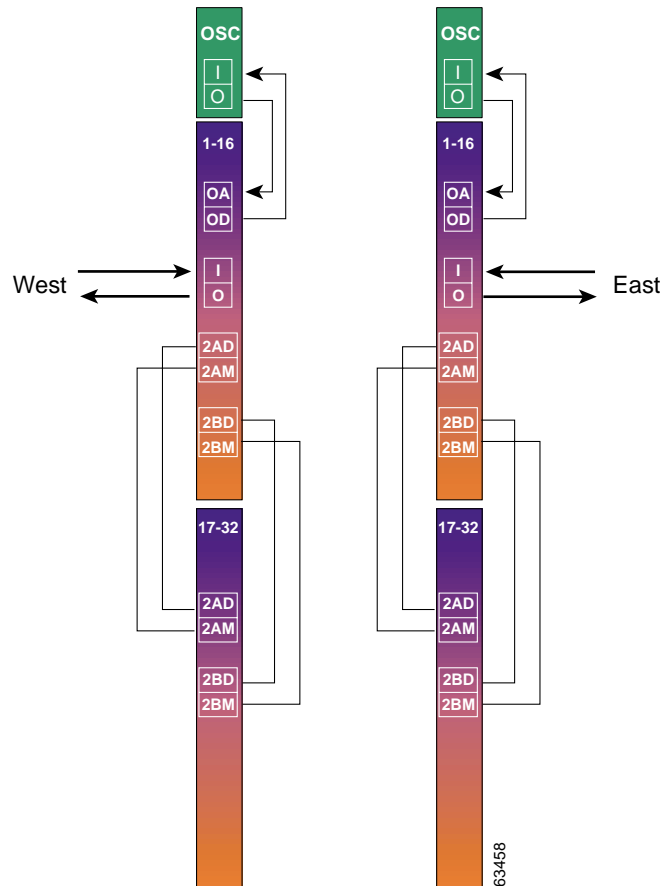

Patch Connections

```

Node1# configure terminal
Node1(config)# patch wave 0 oscfilter 0/0
Node1(config)# patch wave 1 oscfilter 1/0
Node1(config)# patch filterband 0/0/0 filtergroup 0/2/0
Node1(config)# patch filterband 0/0/1 filtergroup 0/2/1
Node1(config)# patch filterband 1/0/0 filtergroup 1/2/0
Node1(config)# patch filterband 1/0/1 filtergroup 1/2/1

```

Transparent Interfaces

```

Node1(config)# interface transparent 2/0/0
Node1(config-if)# encapsulation sonet oc12
Node1(config-if)# monitor enable
Node1(config-if)# exit

```

<Configure the remaining transparent interfaces in the shelf>

APS

```

Node1(config)# redundancy
Node1(config-red)# associate interface wavepatch */*/0 wavepatch */*/1 enable
Node1(config-red)# end

```

```
Node1# copy system:running-config nvram:startup-config
```

Repeat the entire preceding configuration on node 2.

Configuring a Point-to-Point Topology with Line Card Protection


Figure 7-5 shows how the modules are installed in the shelf for a 16-channel point-to-point topology with line card protection. Sixteen client signals of any supported protocol are carried over the trunk fiber, which is also protected.



Note

For information about configuring nodes with more than 16 channels and line card protection, see Chapter 6, “Configuring Dual Shelf Nodes.”


Figure 7-5 Shelf Configuration for Line Card Protected 32-Channel Point-to-Point Topology

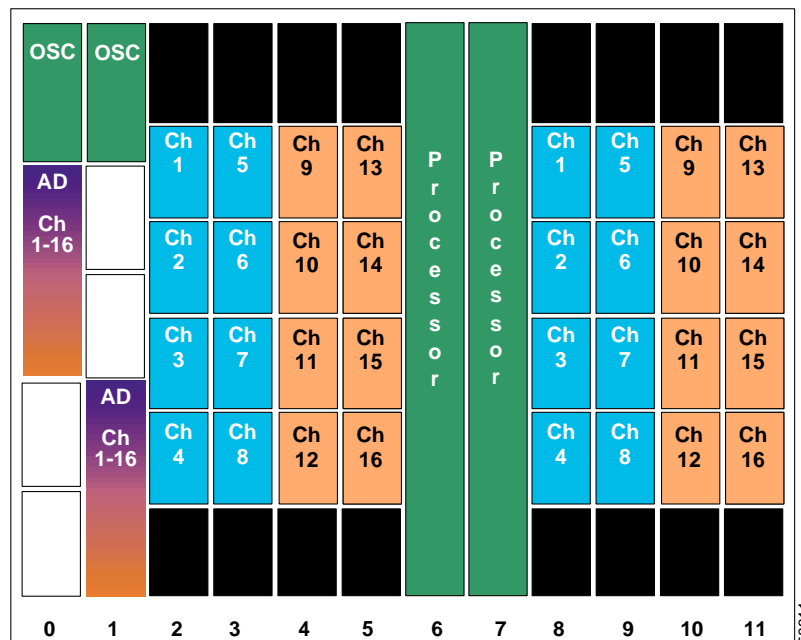

58311

Figure 7-6 shows how the terminal mux/demux modules are cabled for the 16-channel line card protected point-to-point configuration.

Figure 7-6 Terminal Mux/Demux Module Cabling with OSC for Line Card Protected 16-Channel Point-to-Point Topology

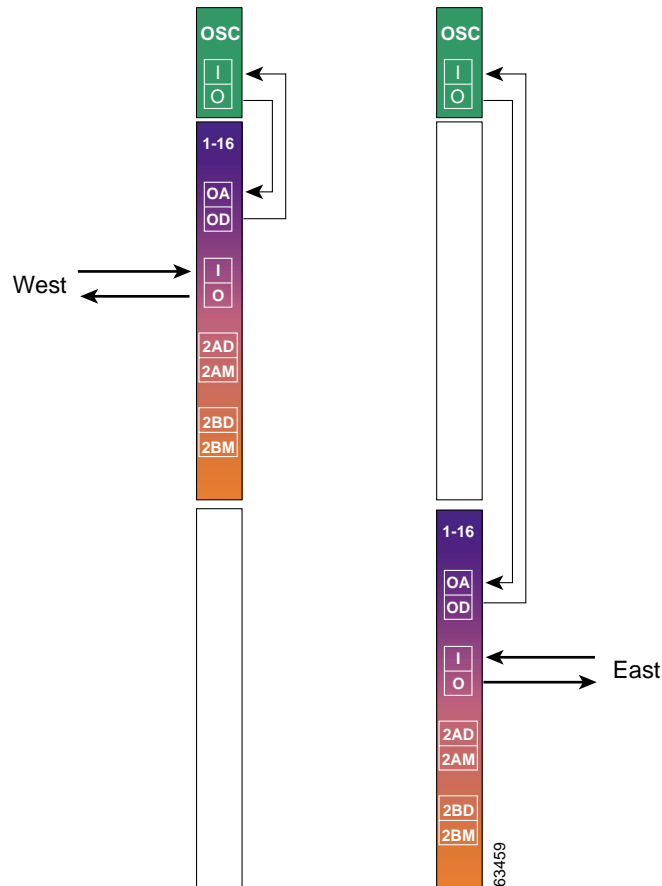

Node 1

Patch Connections

```
Node1# configure terminal
Node1(config)# patch wave 0 oscfilter 0/0
Node1(config)# patch wave 1 oscfilter 1/2
```

Transparent Interfaces

```
Node1(config)# interface transparent 2/0/0
Node1(config-if)# encapsulation sonet oc12
Node1(config-if)# monitor enable
Node1(config-if)# exit
```

<Configure the remaining transparent interfaces in the shelf>

APS

Use the following commands to configure y-cable protection. The working path is through slot 0.

```
Node1(config)# redundancy
Node1(config-red)# associate group channel1
Node1(config-red-aps)# aps working transparent 2/0/0
Node1(config-red-aps)# aps protection transparent 8/0/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel2
Node1(config-red-aps)# aps working transparent 2/1/0
Node1(config-red-aps)# aps protection transparent 8/1/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel3
Node1(config-red-aps)# aps working transparent 2/2/0
Node1(config-red-aps)# aps protection transparent 8/2/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel4
Node1(config-red-aps)# aps working transparent 2/3/0
Node1(config-red-aps)# aps protection transparent 8/3/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel5
Node1(config-red-aps)# aps working transparent 3/0/0
Node1(config-red-aps)# aps protection transparent 9/0/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel6
Node1(config-red-aps)# aps working transparent 3/1/0
Node1(config-red-aps)# aps protection transparent 9/1/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel7
Node1(config-red-aps)# aps working transparent 3/2/0
Node1(config-red-aps)# aps protection transparent 9/2/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel8
Node1(config-red-aps)# aps working transparent 3/3/0
Node1(config-red-aps)# aps protection transparent 9/3/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel9
Node1(config-red-aps)# aps working transparent 4/0/0
Node1(config-red-aps)# aps protection transparent 10/0/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel10
Node1(config-red-aps)# aps working transparent 4/1/0
Node1(config-red-aps)# aps protection transparent 10/1/0
Node1(config-red-aps)# aps y-cable
```

```

Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel11
Node1(config-red-aps)# aps working transparent 4/2/0
Node1(config-red-aps)# aps protection transparent 10/2/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel12
Node1(config-red-aps)# aps working transparent 4/3/0
Node1(config-red-aps)# aps protection transparent 10/3/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel13
Node1(config-red-aps)# aps working transparent 5/0/0
Node1(config-red-aps)# aps protection transparent 11/0/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel14
Node1(config-red-aps)# aps working transparent 5/1/0
Node1(config-red-aps)# aps protection transparent 11/0/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel15
Node1(config-red-aps)# aps working transparent 5/2/0
Node1(config-red-aps)# aps protection transparent 11/2/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel16
Node1(config-red-aps)# aps working transparent 5/3/0
Node1(config-red-aps)# aps protection transparent 11/3/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# end

Node1# copy system:running-config nvram:startup-config


```

Repeat the entire preceding configuration on node 2.

Configuring an Unprotected Point-to-Point Topology

Figure 7-7 shows how the modules are installed in the shelf for a 32-channel point-to-point topology without protection.


Figure 7-7 Shelf Configuration for Unprotected 32-Channel Point-to-Point Topology

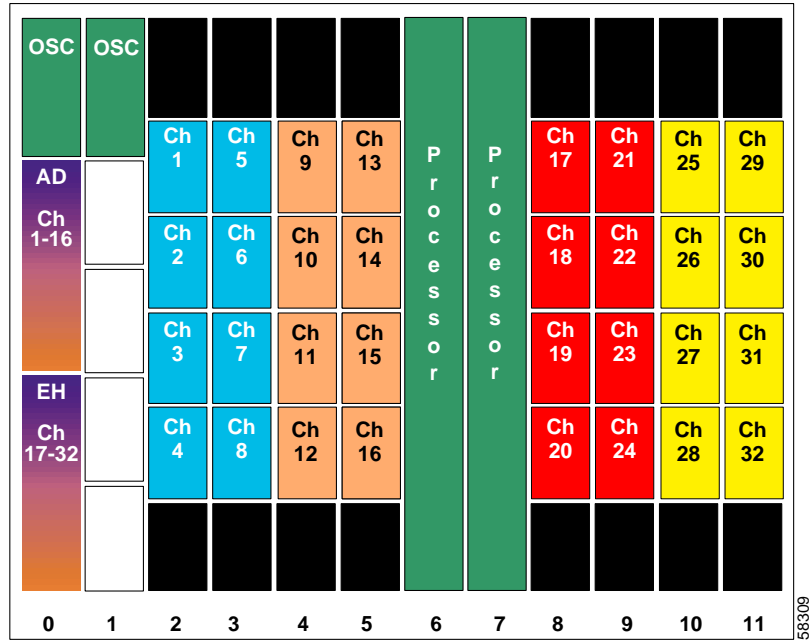

58309

Figure 7-8 shows how the terminal mux/demux modules are cabled for the 32-channel unprotected point-to-point configuration.

Figure 7-8 Terminal Mux/Demux Module Cabling with OSC for Unprotected 32-Channel Point-to-Point Topology

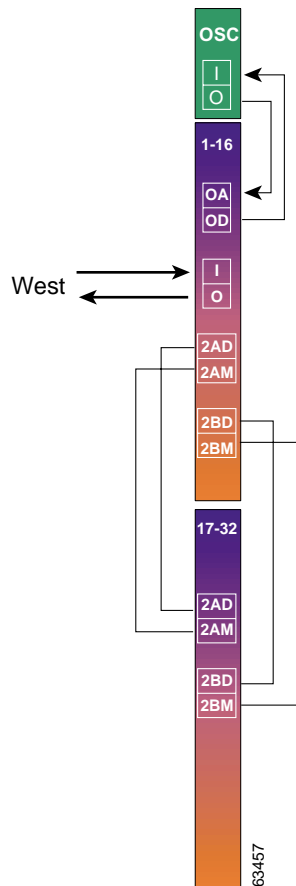

Patch Connections

Node 1

```
Node1# configure terminal
Node1(config)# patch wave 0 oscfilter 0/0
Node1(config)# patch filterband 0/0/0 filtergroup 0/2/0
Node1(config)# patch filterband 0/0/1 filtergroup 0/2/1
```

Node 2

```
Node2# configure terminal
Node2(config)# patch wave 0 oscfilter 0/0
Node2(config)# patch filterband 0/0/0 filtergroup 0/2/0
Node2(config)# patch filterband 0/0/1 filtergroup 0/2/1
```

Transparent Interfaces

Node 1

```
Node1(config)# interface transparent 2/0/0
Node1(config-if)# encapsulation sonet oc12
Node1(config-if)# monitor enable
Node1(config-if)# exit
```

<Configure the remaining transparent interfaces in the shelf>

```
Node1# copy system:running-config nvram:startup-config
```

Node 2

```
Node2(config)# interface transparent 2/0/0
Node2(config-if)# encapsulation sonet oc12
Node2(config-if)# monitor enable
Node2(config-if)# end
```

<Configure the remaining transparent interfaces in the shelf>

```
Node2# copy system:running-config nvram:startup-config
```




Configuring Ring Topologies

This chapter describes how to configure the Cisco ONS 15540 in two-fiber topologies and provides example configurations for hubbed ring and meshed ring topologies using optical add/drop multiplexing. This chapter includes the following sections:

- About Ring Topologies, page 8-1
- Configuring a Hubbed Ring with Splitter Protection and OSC, page 8-3
- Configuring a Hubbed Ring with Line Card Protection and OSC, page 8-20
- Configuring a Meshed Ring with Splitter Protection and OSC, page 8-37
- Configuring a Splitter Protected Meshed Ring with Unprotected Channels and OSC, page 8-52
- Configuring a Meshed Ring with Line Card Protection and OSC, page 8-60
- Configuring a Line Card Protected Meshed Ring with Unprotected Channels and OSC, page 8-74

About Ring Topologies

A ring topology is a network of three or more nodes each of which connects to two other nodes to form a “ring”. Ring topologies support splitter protected, line card protected, and unprotected configurations. On a ring, traffic is transmitted in both directions from each node; traffic is received from only one direction. In case of a fiber failure, the node switches over to receive traffic from the other direction.

The Cisco ONS 15540 supports hubbed ring and meshed ring topologies.




Note

We recommend ESCON for point-to-point topologies, not ring topologies.

Hubbed Ring Topologies

In a hubbed ring topology, all channels originate and terminate on the hub node (node1 in Figure 8-1). The other nodes on the ring, sometimes called *satellite nodes*, add and drop one or more channels. The added and dropped channels terminate at the node, while the channels that are not being dropped (express channels) are passed through optically, without being electrically terminated.

Figure 8-1 Hubbed Ring Topology Example

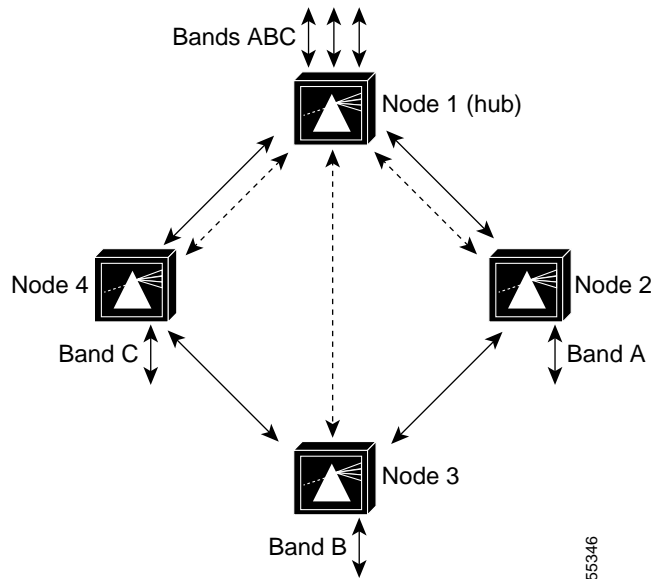


For more information on hubbed ring topologies, refer to the *Introduction to DWDM Technology* document and the *Cisco ONS 15540 ESP Planning and Design Guide*.

Meshed Ring Topologies

A meshed ring is a physical ring that has the characteristics of a mesh. Figure 8-2 shows an example of this type of configuration, which is sometimes called a *logical mesh*. While all traffic travels around the physical ring, nodes 1 and node 3 share band B (channels 5-8), and nodes 3 and node 4 share band D (channels 29-32). Hence there is a logical mesh overlay on the ring.

Protection options and optical link loss budget considerations are the same as in a hubbed ring configuration.

Figure 8-2 Meshed Ring Topology Example

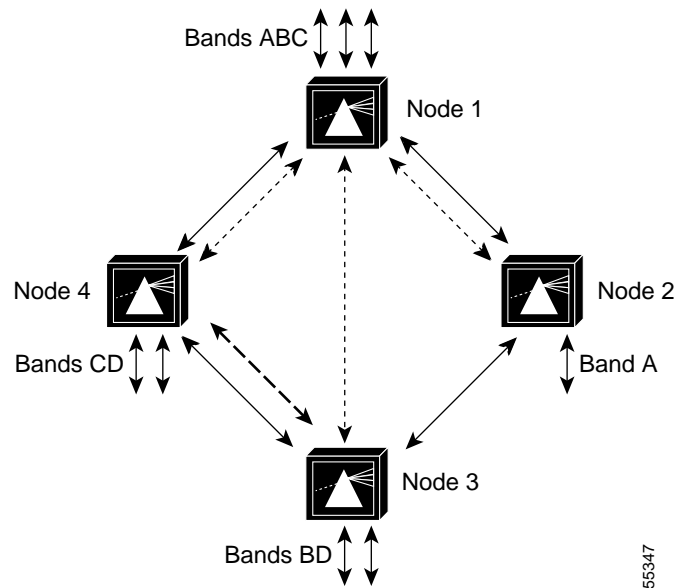


For more information on meshed ring topologies, refer to the *Introduction to DWDM Technology* document and the *Cisco ONS 15540 ESP Planning and Design Guide*.

Configuring a Hubbed Ring with Splitter Protection and OSC

Figure 8-3 shows an example topology of a three-node hubbed ring. Node 1 is the hub configured with band A through band D (channels 1-16). Node 2 adds and drops band A (channels 1-4), node 3 adds and drops band B (channels 5-8), node 4 adds and drops band C (channels 9-12), and node 5 adds and drops band D (channels 13-16). The transponders carry Gigabit Ethernet traffic.

Figure 8-3 Hubbed Ring Channel Plan

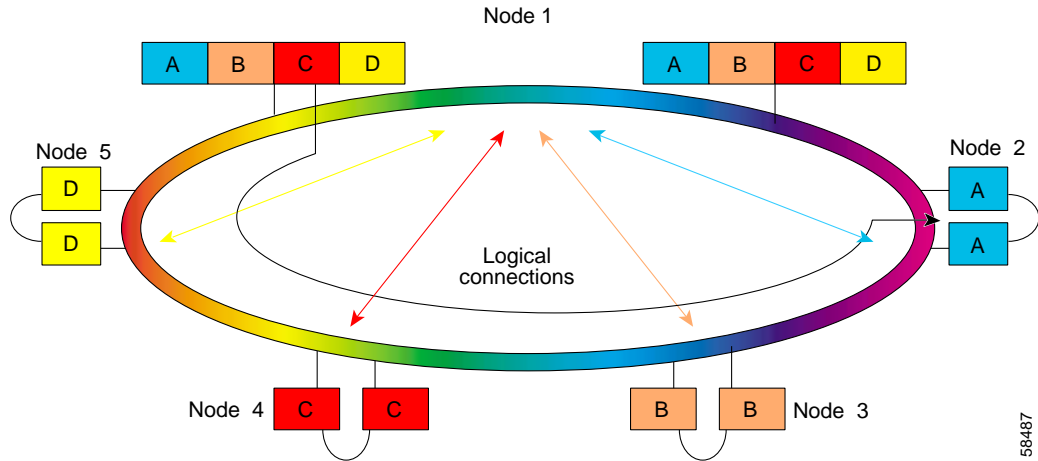

Node 1

Figure 8-4 shows how the modules are installed in the shelf for node 1 in the example network shown in Figure 8-3 on page 8-4. The shelf is populated for the 16-channel splitter protected hub node. Splitter protected line card motherboards are installed in slots 2–5, and the 16-channel mux/demux modules are used in the east and west mux/demux slots.

Figure 8-4 Shelf Configuration for 16-Channel Hub Node in Splitter Protected Hubbed Ring


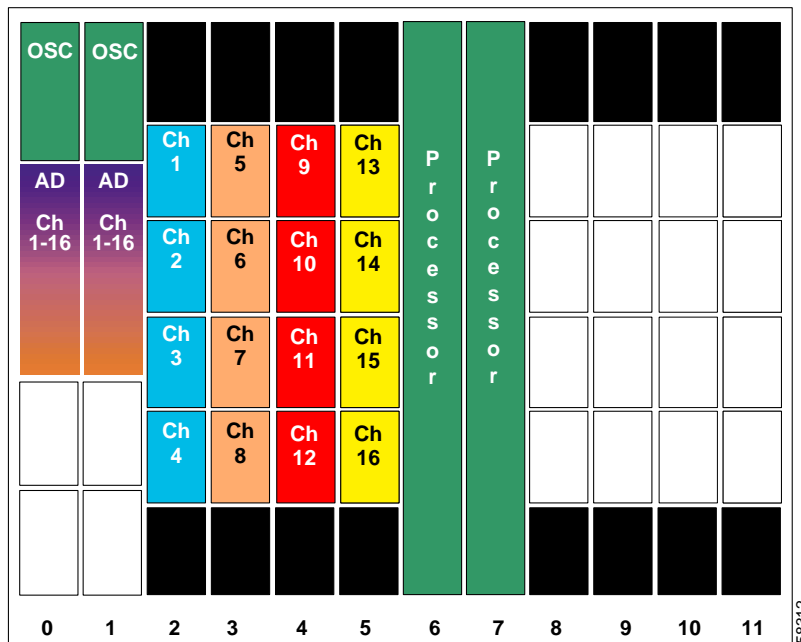


Figure 8-5 shows how the 16-channel mux/demux modules are cabled for the hub node in the splitter protected hubbed ring shown in Figure 8-3 on page 8-4.

Figure 8-5 Terminal Mux/Demux Module Cabling with OSC for 16-Channel Hub Node in Splitter Protected Hubbed Ring

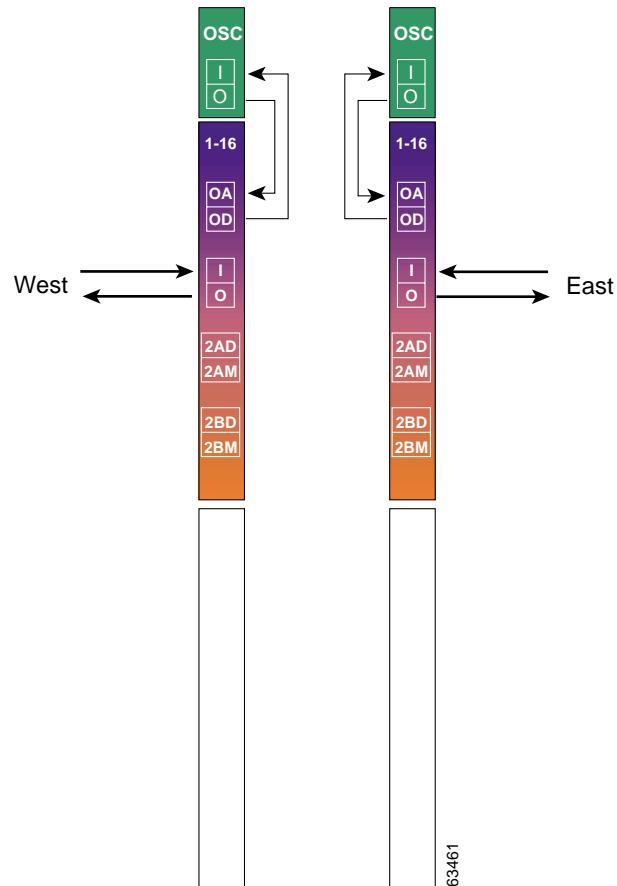

Patch Connections

```
Node1# configure terminal
Node1(config)# patch wave 0 oscfilter 0/0
Node1(config)# patch wave 1 oscfilter 1/0
```

Transparent Interfaces

```
Node1(config)# interface transparent 2/0/0
Node1(config-if)# encapsulation gigabitethernet
Node1(config-if)# monitor enable
Node1(config-if)# exit
```

<Configure the remaining transparent interfaces in the shelf>

OSC Interfaces

```

Nodel(config)# interface wave 0
Nodel(config-if)# no shutdown
Nodel(config-if)# exit

```

```

Nodel(config)# interface wave 1
Nodel(config-if)# no shutdown
Nodel(config-if)# exit

```

APS

```

Nodel(config)# redundancy
Nodel(config-red)# associate group wavepatch channel1
Nodel(config-red-aps)# aps working wavepatch 2/0/1
Nodel(config-red-aps)# aps protection wavepatch 2/0/0
Nodel(config-red-aps)# aps enable
Nodel(config-red-aps)# exit
Nodel(config-red)# associate group wavepatch channe2
Nodel(config-red-aps)# aps working wavepatch 2/1/1
Nodel(config-red-aps)# aps protection wavepatch 2/1/0
Nodel(config-red-aps)# aps enable
Nodel(config-red-aps)# exit
Nodel(config-red)# associate group wavepatch channel3
Nodel(config-red-aps)# aps working wavepatch 2/2/1
Nodel(config-red-aps)# aps protection wavepatch 2/2/0
Nodel(config-red-aps)# aps enable
Nodel(config-red-aps)# exit
Nodel(config-red)# associate group wavepatch channel4
Nodel(config-red-aps)# aps working wavepatch 2/3/1
Nodel(config-red-aps)# aps protection wavepatch 2/3/0
Nodel(config-red-aps)# aps enable
Nodel(config-red-aps)# exit

```

```

Nodel(config-red)# associate group wavepatch channel5
Nodel(config-red-aps)# aps working wavepatch 3/0/1
Nodel(config-red-aps)# aps protection wavepatch 3/0/0
Nodel(config-red-aps)# aps enable
Nodel(config-red-aps)# exit
Nodel(config-red)# associate group wavepatch channe6
Nodel(config-red-aps)# aps working wavepatch 3/1/1
Nodel(config-red-aps)# aps protection wavepatch 3/1/0
Nodel(config-red-aps)# aps enable
Nodel(config-red-aps)# exit
Nodel(config-red)# associate group wavepatch channel7
Nodel(config-red-aps)# aps working wavepatch 3/2/1
Nodel(config-red-aps)# aps protection wavepatch 3/2/0
Nodel(config-red-aps)# aps enable
Nodel(config-red-aps)# exit
Nodel(config-red)# associate group wavepatch channel8
Nodel(config-red-aps)# aps working wavepatch 3/3/1
Nodel(config-red-aps)# aps protection wavepatch 3/3/0
Nodel(config-red-aps)# aps enable
Nodel(config-red-aps)# exit

```

```
Node1(config-red)# associate group wavepatch channel9
Node1(config-red-aps)# aps working wavepatch 4/0/0
Node1(config-red-aps)# aps protection wavepatch 4/0/1
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group wavepatch channel10
Node1(config-red-aps)# aps working wavepatch 4/1/0
Node1(config-red-aps)# aps protection wavepatch 4/1/1
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group wavepatch channel11
Node1(config-red-aps)# aps working wavepatch 4/2/0
Node1(config-red-aps)# aps protection wavepatch 4/2/1
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group wavepatch channel12
Node1(config-red-aps)# aps working wavepatch 4/3/0
Node1(config-red-aps)# aps protection wavepatch 4/3/1
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit

Node1(config-red)# associate group wavepatch channel13
Node1(config-red-aps)# aps working wavepatch 5/0/0
Node1(config-red-aps)# aps protection wavepatch 5/0/1
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group wavepatch channel14
Node1(config-red-aps)# aps working wavepatch 5/1/0
Node1(config-red-aps)# aps protection wavepatch 5/1/1
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group wavepatch channel15
Node1(config-red-aps)# aps working wavepatch 5/2/0
Node1(config-red-aps)# aps protection wavepatch 5/2/1
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group wavepatch channel16
Node1(config-red-aps)# aps working wavepatch 5/3/0
Node1(config-red-aps)# aps protection wavepatch 5/3/1
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# end

Node1# copy system:running-config nvram:startup-config
```

Node 2

Figure 8-6 shows the shelf configuration for node 2 in the example hubbed ring network shown in Figure 8-3 on page 8-4. A splitter protected line card motherboard is used in slot 2, and 4-channel mux/demux modules are used in subcard 0 of the east and west mux/demux slots.

Figure 8-6 Shelf Configuration for Node 2 in Splitter Protected Hubbed Ring


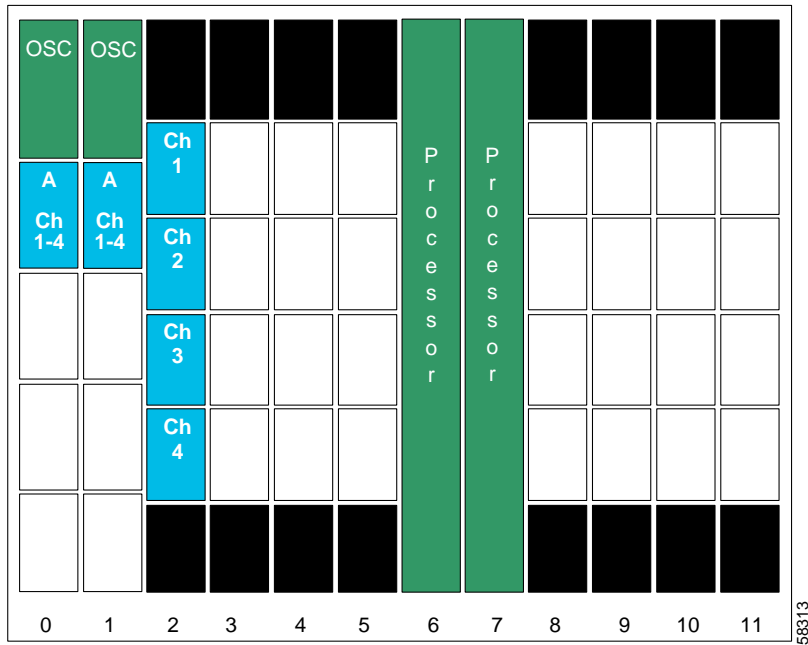


Figure 8-7 shows how the 4-channel mux/demux modules are cabled for node 2 in the splitter protected hubbed ring shown in Figure 8-3 on page 8-4.

Figure 8-7 Add/Drop Mux/Demux Module Cabling with OSC for Node 2 in Splitter Protected Hubbed Ring

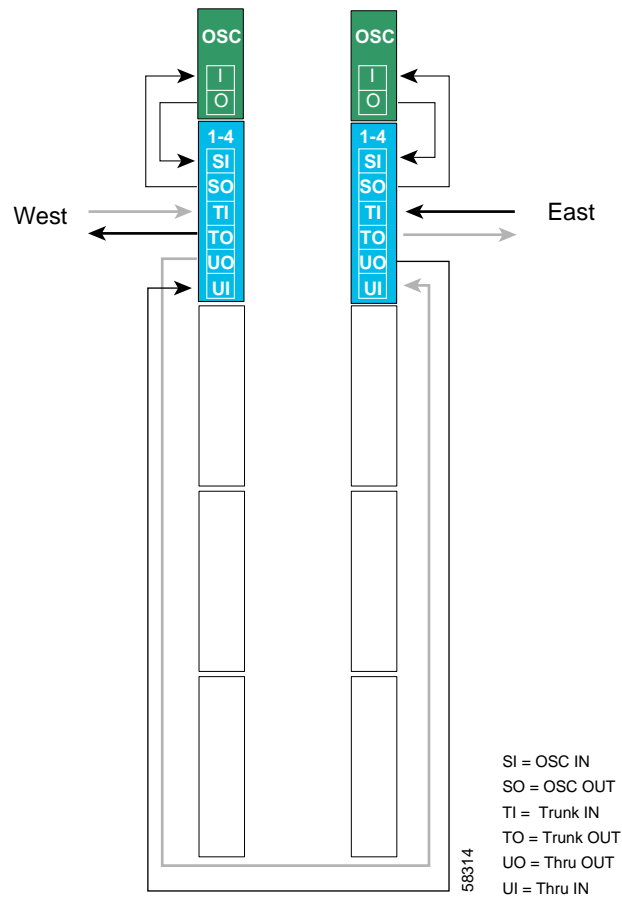

Patch Connections

```
Node2# configure terminal
Node2(config)# patch thru 0/0 thru 1/0
Node2(config)# patch wave 0 oscfilter 0/0
Node2(config)# patch wave 1 oscfilter 1/0
```

Transparent Interfaces in Slot 2

```
Node2(config)# interface transparent 2/0/0
Node2(config-if)# encapsulation gigabitethernet
Node2(config-if)# monitor enable
Node2(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node2(config)# interface wave 0
Node2(config-if)# no shutdown
Node2(config-if)# exit
```

```
Node2(config)# interface wave 1
Node2(config-if)# no shutdown
Node2(config-if)# exit
```

APS

```
Node2(config)# redundancy
Node2(config-red)# associate group wavepatch channel1
Node2(config-red-aps)# aps working wavepatch 2/0/0
Node2(config-red-aps)# aps protection wavepatch 2/0/1
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group wavepatch channel2
Node2(config-red-aps)# aps working wavepatch 2/1/0
Node2(config-red-aps)# aps protection wavepatch 2/1/1
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group wavepatch channel3
Node2(config-red-aps)# aps working wavepatch 2/2/0
Node2(config-red-aps)# aps protection wavepatch 2/2/1
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group wavepatch channel4
Node2(config-red-aps)# aps working wavepatch 2/3/0
Node2(config-red-aps)# aps protection wavepatch 2/3/1
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# end

Node2# copy system:running-config nvram:startup-config
```


Node 3

Figure 8-8 shows the shelf configuration for node 3 in the example hubbed ring network shown in Figure 8-3 on page 8-4. A splitter protected line card motherboard is used in slot 5, and 4-channel mux/demux modules are used in subcard 1 of the east and west mux/demux slots.

Figure 8-8 Shelf Configuration for Node 3 in Splitter Protected Hubbed Ring


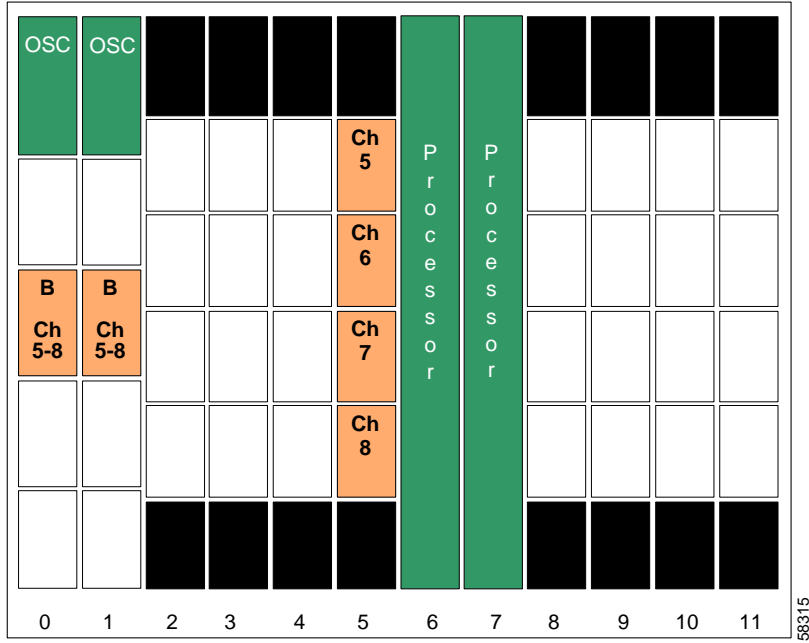


Figure 8-9 shows how the 4-channel mux/demux modules are cabled for node 3 in the splitter protected hubbed ring network shown in Figure 8-3 on page 8-4.

Figure 8-9 Add/Drop Mux/Demux Module Cabling with OSC for Node 3 in Splitter Protected Hubbed Ring

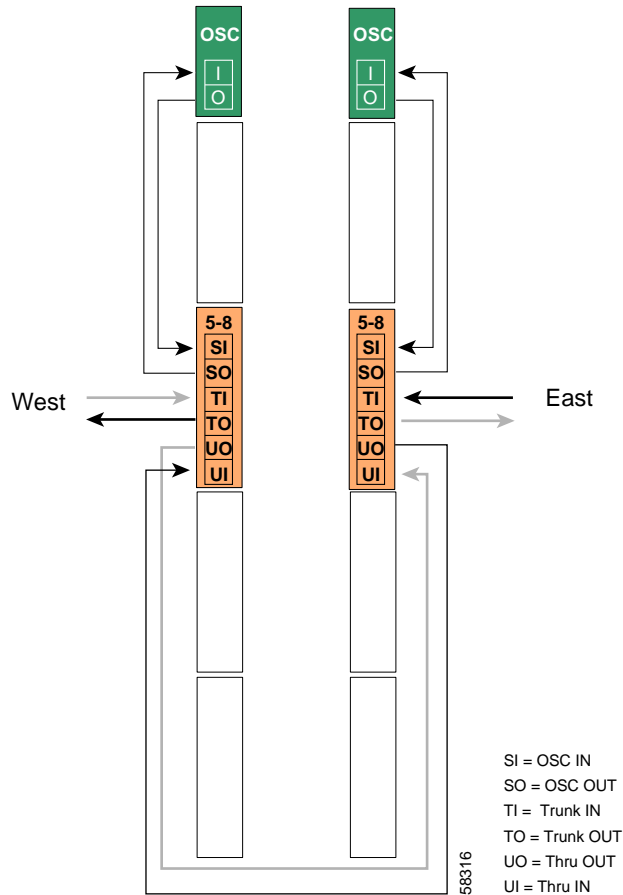

Patch Connections

```
Node3# configure terminal
Node3(config)# patch thru 0/1 thru 1/1
Node3(config)# patch wave 0 oscfilter 0/1
Node3(config)# patch wave 1 oscfilter 1/1
```

Transparent Interfaces in Slot 5

```
Node3(config)# interface transparent 5/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node3(config)# interface wave 0
Node3(config-if)# no shutdown
Node3(config-if)# exit
```

```
Node3(config)# interface wave 1
Node3(config-if)# no shutdown
Node3(config-if)# exit
```

APS

```
Node3(config)# redundancy
Node3(config-red)# associate group wavepatch channel5
Node3(config-red-aps)# aps working wavepatch 5/0/0
Node3(config-red-aps)# aps protection wavepatch 5/0/1
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group wavepatch channel6
Node3(config-red-aps)# aps working wavepatch 5/1/0
Node3(config-red-aps)# aps protection wavepatch 5/1/1
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group wavepatch channel7
Node3(config-red-aps)# aps working wavepatch 5/2/0
Node3(config-red-aps)# aps protection wavepatch 5/2/1
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group wavepatch channel8
Node3(config-red-aps)# aps working wavepatch 5/3/0
Node3(config-red-aps)# aps protection wavepatch 5/3/1
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# end

Node3# copy system:running-config nvram:startup-config
```

Node 4

Figure 8-10 shows the shelf configuration for node 4 in the hubbed ring network shown in Figure 8-3 on page 8-4. A splitter protected line card motherboard is used in slot 8, and 4-channel mux/demux modules are used in subcard 2 of the east and west mux/demux slots.

Figure 8-10 Shelf Configuration for Node 4 in Splitter Protected Hubbed Ring


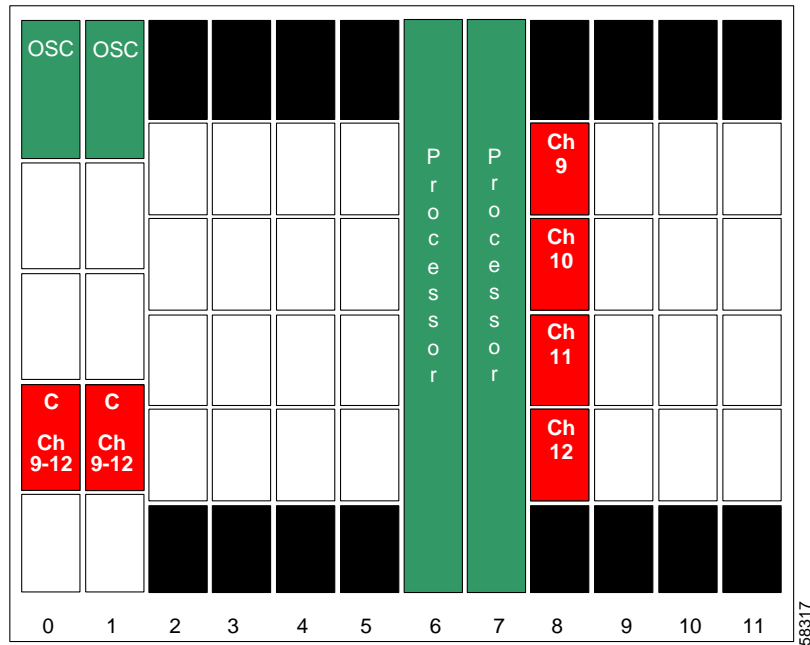


Figure 8-11 shows how the 4-channel mux/demux modules are cabled for node 4 in the splitter protected hubbed ring network shown in Figure 8-3 on page 8-4.

Figure 8-11 Add/Drop Mux/Demux Module Cabling with OSC for Node 4 in Splitter Protected Hubbed Ring

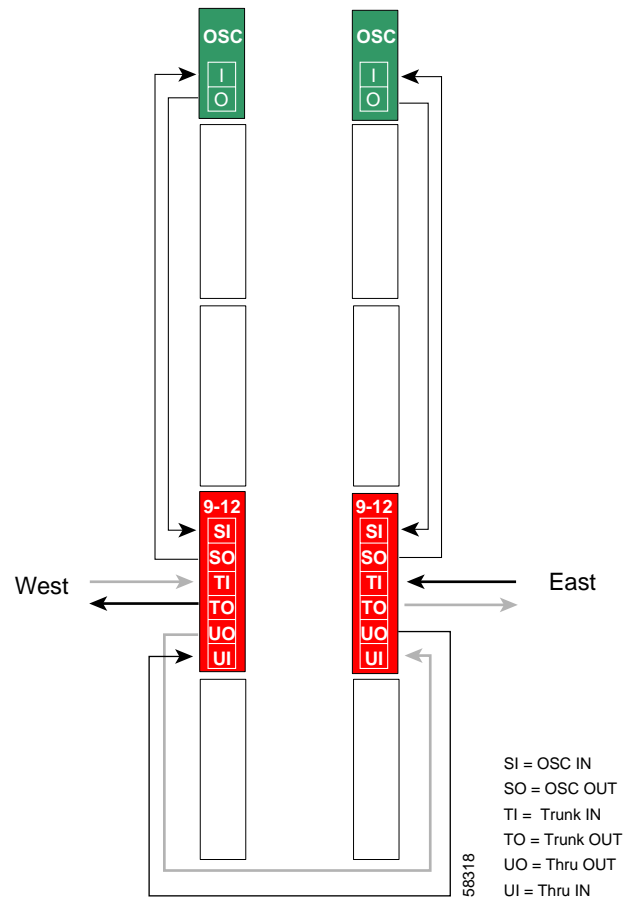

Patch Connections

```
Node4# configure terminal
Node4(config)# patch thru 0/2 thru 1/2
Node4(config)# patch wave 0 oscfilter 0/2
Node4(config)# patch wave 1 oscfilter 1/2
```

Transparent Interfaces in Slot 8

```
Node4(config)# interface transparent 8/0/0
Node4(config-if)# encapsulation gigabitethernet
Node4(config-if)# monitor enable
Node4(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node4(config)# interface wave 0
Node4(config-if)# no shutdown
Node4(config-if)# exit
```

```
Node4(config)# interface wave 1
Node4(config-if)# no shutdown
Node4(config-if)# exit
```

APS

```
Node4(config)# redundancy
Node4(config-red)# associate group channel9
Node4(config-red-aps)# aps working wavepatch 8/0/1
Node4(config-red-aps)# aps protection wavepatch 8/0/0
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel10
Node4(config-red-aps)# aps working wavepatch 8/1/1
Node4(config-red-aps)# aps protection wavepatch 8/1/0
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel11
Node4(config-red-aps)# aps working wavepatch 8/2/1
Node4(config-red-aps)# aps protection wavepatch 8/2/0
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel12
Node4(config-red-aps)# aps working wavepatch 8/3/1
Node4(config-red-aps)# aps protection wavepatch 8/3/0
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red-aps)# end

Node4# copy system:running-config nvram:startup-config
```

Node 5

Figure 8-12 shows the shelf configuration for node 5 in the example network shown in Figure 8-3 on page 8-4. A splitter protected line card motherboard is used in slot 11, and 4-channel mux/demux modules are used in subcard 3 of the east and west mux/demux slots.

Figure 8-12 Shelf Configuration for Node 5 in Splitter Protected Hubbed Ring


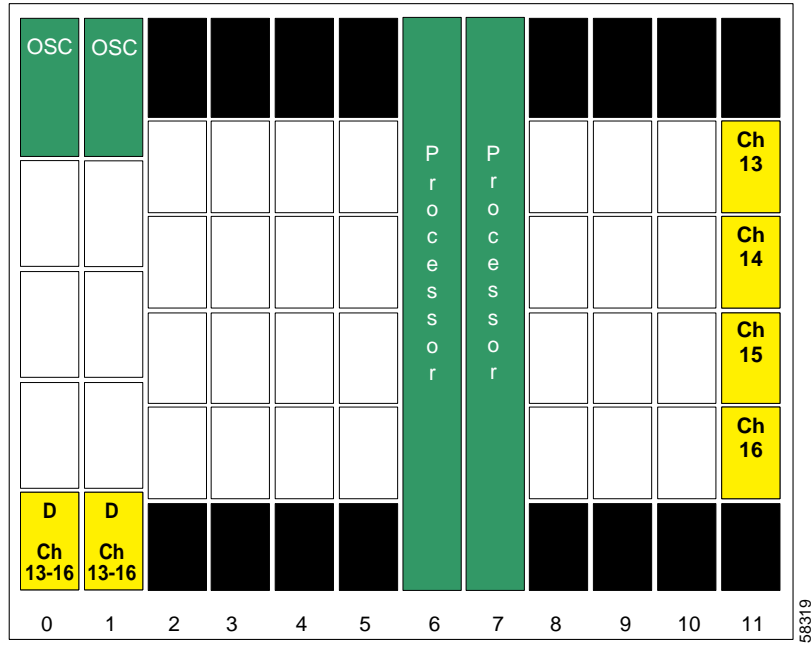


Figure 8-13 shows how the 4-channel mux/demux modules are cabled for node 5 in the example network shown in Figure 8-3 on page 8-4.

Figure 8-13 Add/Drop Mux/Demux Module Cabling with OSC for Node 5 in Splitter Protected Hubbed Ring

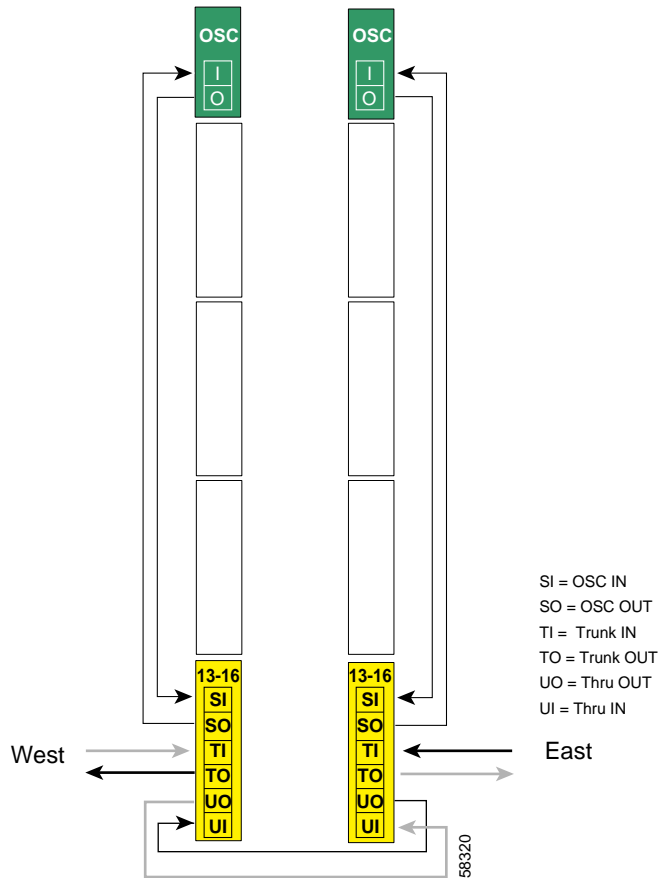

Patch Connections

```
Node5# configure terminal
Node5(config)# patch thru 0/3 thru 1/3
Node5(config)# patch wave 0 oscfilter 0/3
Node5(config)# patch wave 1 oscfilter 1/3
```

Transparent Interfaces in Slot 11

```
Node5(config)# interface transparent 11/0/0
Node5(config-if)# encapsulation gigabitethernet
Node5(config-if)# monitor enable
Node5(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node5(config)# interface wave 0
Node5(config-if)# no shutdown
Node5(config-if)# exit
```

```
Node5(config)# interface wave 1
Node5(config-if)# no shutdown
Node5(config-if)# exit
```

APS

```
Node5(config)# redundancy
Node5(config-red)# associate group channel13
Node5(config-red-aps)# aps working wavepatch 11/0/1
Node5(config-red-aps)# aps protection wavepatch 11/0/0
Node5(config-red-aps)# aps enable
Node5(config-red-aps)# exit
Node5(config-red)# associate group channel14
Node5(config-red-aps)# aps working wavepatch 11/1/1
Node5(config-red-aps)# aps protection wavepatch 11/1/0
Node5(config-red-aps)# aps enable
Node5(config-red-aps)# exit
Node5(config-red)# associate group channel15
Node5(config-red-aps)# aps working wavepatch 11/2/1
Node5(config-red-aps)# aps protection wavepatch 11/2/0
Node5(config-red-aps)# aps enable
Node5(config-red-aps)# exit
Node5(config-red)# associate group channel16
Node5(config-red-aps)# aps working wavepatch 11/3/1
Node5(config-red-aps)# aps protection wavepatch 11/3/0
Node5(config-red-aps)# aps enable
Node5(config-red-aps)# exit
Node5(config-red-aps)# end

Node5# copy system:running-config nvram:startup-config
```

Configuring a Hubbed Ring with Line Card Protection and OSC

Line card protection requires a different shelf and CLI configuration from splitter protection. The following sections describe an example based on the hubbed ring topology shown in Figure 8-3 on page 8-4.



Note

For information about configuring nodes with more than 16 channels and line card protection, see Chapter 6, “Configuring Dual Shelf Nodes.”

Node 1

Figure 8-14 shows the shelf configuration for the hub node in the hubbed ring example shown in Figure 8-3 on page 8-4. The line card motherboards in slots 2–5 are west motherboards, corresponding to the 16-channel mux/demux module in the west mux/demux slot; the line card motherboards in slots 8–11 are east motherboards, corresponding to the 16-channel mux/demux module in the east mux/demux slot.

Figure 8-14 Shelf Configuration for Hub Node in Line Card Protected Hubbed Ring


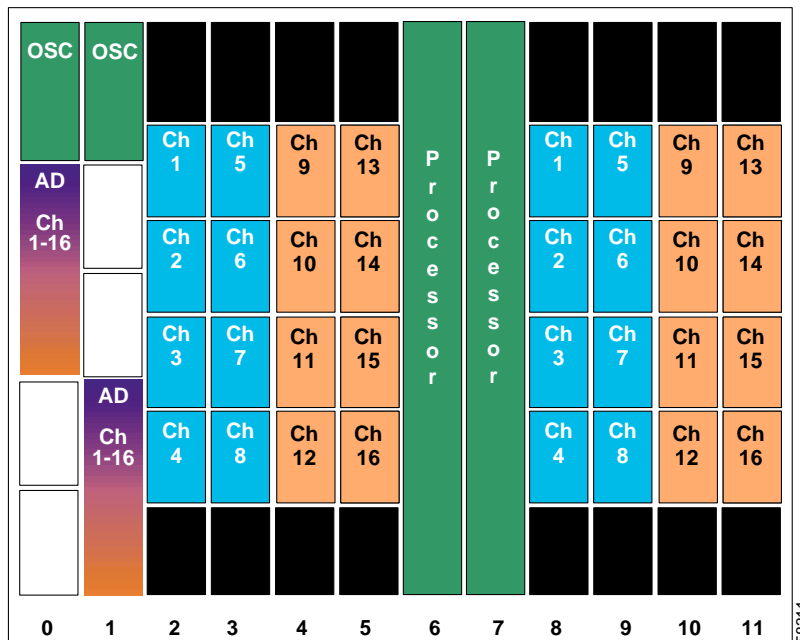


Figure 8-15 shows how the 16-channel mux/demux modules are cabled for node 1 in the hub node in the line card protected hubbed ring shown in Figure 8-3 on page 8-4.

Figure 8-15 Terminal Mux/Demux Module Cabling with OSC for Hub Node in Line Card Protected Hubbed Ring

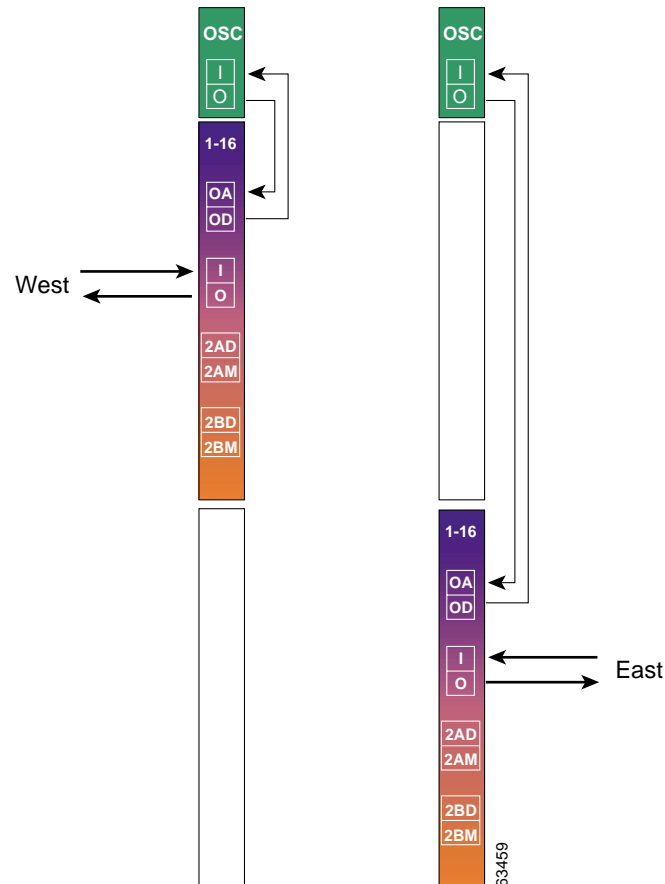

Patch Connections

```
Node1# configure terminal
Node1(config)# patch wave 0 oscfilter 0/0
Node1(config)# patch wave 1 oscfilter 1/2
```

Transparent Interfaces

```
Node1(config)# interface transparent 2/0/0
Node1(config-if)# encapsulation gigabitethernet
Node1(config-if)# monitor enable
Node1(config-if)# exit
```

<Configure the remaining transparent interfaces in the shelf>

OSC Interfaces

```

Node1(config)# interface wave 0
Node1(config-if)# no shutdown
Node1(config-if)# exit

```

```

Node1(config)# interface wave 1
Node1(config-if)# no shutdown
Node1(config-if)# exit

```

APS

Use the following for configuring y-cable protection.

```

Node1(config)# redundancy
Node1(config-red)# associate group channel1
Node1(config-red-aps)# aps working transparent 8/0/0
Node1(config-red-aps)# aps protection transparent 2/0/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel2
Node1(config-red-aps)# aps working transparent 8/1/0
Node1(config-red-aps)# aps protection transparent 2/1/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel3
Node1(config-red-aps)# aps working transparent 8/2/0
Node1(config-red-aps)# aps protection transparent 2/2/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel4
Node1(config-red-aps)# aps working transparent 8/3/0
Node1(config-red-aps)# aps protection transparent 2/3/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit

```

```
Node1(config-red)# associate group channel5
Node1(config-red-aps)# aps working transparent 9/0/0
Node1(config-red-aps)# aps protection transparent 3/0/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel6
Node1(config-red-aps)# aps working transparent 9/1/0
Node1(config-red-aps)# aps protection transparent 3/1/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel7
Node1(config-red-aps)# aps working transparent 9/2/0
Node1(config-red-aps)# aps protection transparent 3/2/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel8
Node1(config-red-aps)# aps working transparent 9/3/0
Node1(config-red-aps)# aps protection transparent 3/3/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit

Node1(config-red)# associate group channel9
Node1(config-red-aps)# aps working transparent 4/0/0
Node1(config-red-aps)# aps protection transparent 10/0/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel10
Node1(config-red-aps)# aps working transparent 4/1/0
Node1(config-red-aps)# aps protection transparent 10/1/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel11
Node1(config-red-aps)# aps working transparent 4/2/0
Node1(config-red-aps)# aps protection transparent 10/2/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel12
Node1(config-red-aps)# aps working transparent 4/3/0
Node1(config-red-aps)# aps protection transparent 10/3/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
```


```
Nodel(config-red)# associate group channel13
Nodel(config-red-aps)# aps working transparent 5/0/0
Nodel(config-red-aps)# aps protection transparent 11/0/0
Nodel(config-red-aps)# aps y-cable
Nodel(config-red-aps)# aps revertive
Nodel(config-red-aps)# aps enable
Nodel(config-red-aps)# exit
Nodel(config-red)# associate group channel14
Nodel(config-red-aps)# aps working transparent 5/1/0
Nodel(config-red-aps)# aps protection transparent 11/1/0
Nodel(config-red-aps)# aps y-cable
Nodel(config-red-aps)# aps revertive
Nodel(config-red-aps)# aps enable
Nodel(config-red-aps)# exit
Nodel(config-red)# associate group channel15
Nodel(config-red-aps)# aps working transparent 5/2/0
Nodel(config-red-aps)# aps protection transparent 11/2/0
Nodel(config-red-aps)# aps y-cable
Nodel(config-red-aps)# aps revertive
Nodel(config-red-aps)# aps enable
Nodel(config-red-aps)# exit
Nodel(config-red)# associate group channel16
Nodel(config-red-aps)# aps working transparent 5/3/0
Nodel(config-red-aps)# aps protection transparent 11/3/0
Nodel(config-red-aps)# aps y-cable
Nodel(config-red-aps)# aps revertive
Nodel(config-red-aps)# aps enable
Nodel(config-red-aps)# end

Nodel# copy system:running-config nvram:startup-config
```

Node 2

Figure 8-16 shows the shelf configuration for node 2 in the line card protected hubbed ring shown in Figure 8-3 on page 8-4. Slot 2 uses a west line card motherboard, corresponding to the add/drop mux/demux module in the west mux/demux slot; slot 4 uses an east line card motherboard, corresponding to the add/drop mux/demux module in the east mux/demux slot.


Figure 8-16 Shelf Configuration for Node 2 in Line Card Protected Hubbed Ring

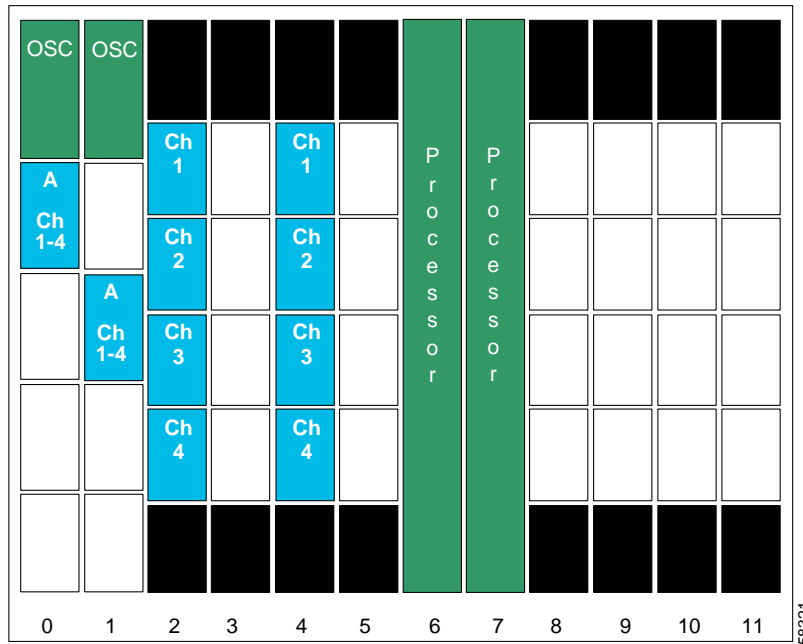

58321

Figure 8-17 shows how the 4-channel mux/demux modules are cabled for node 2 in the line card protected hubbed ring shown in Figure 8-3 on page 8-4.

Figure 8-17 Add/Drop Mux/Demux Module Cabling with OSC for Node 2 in Line Card Protected Hubbed Ring

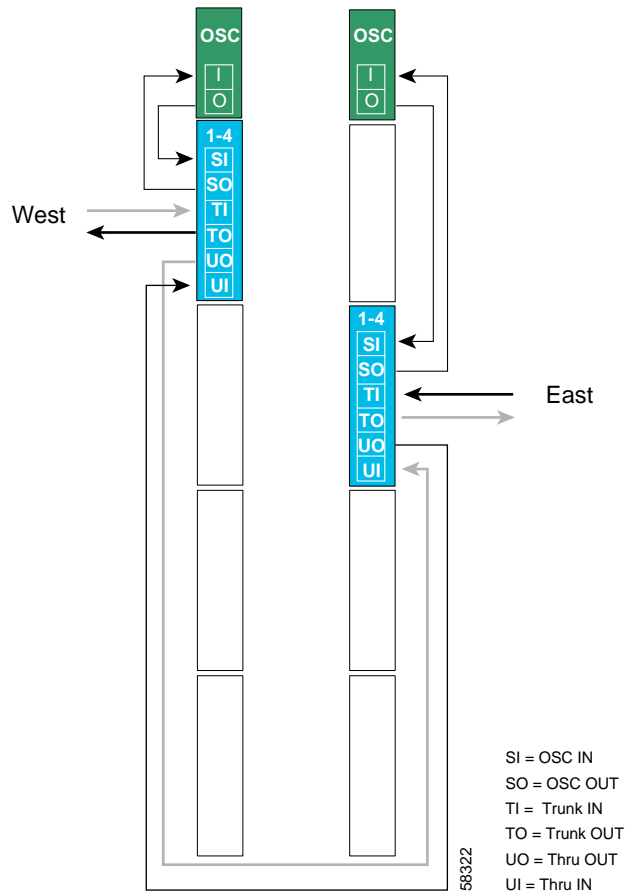

Patch Connections

```
Node2# configure terminal
Node2(config)# patch thru 0/0 thru 1/1
Node2(config)# patch wave 0 oscfilter 0/0
Node2(config)# patch wave 1 oscfilter 1/1
```

Transparent Interfaces in Slot 2

```
Node2(config)# interface transparent 2/0/0
Node2(config-if)# encapsulation gigabitethernet
Node2(config-if)# monitor enable
Node2(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 4

```
Node2(config)# interface transparent 4/0/0
Node2(config-if)# encapsulation gigabitethernet
Node2(config-if)# monitor enable
Node2(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node2(config)# interface wave 0
Node2(config-if)# no shutdown
Node2(config-if)# exit
```

```
Node2(config)# interface wave 1
Node2(config-if)# no shutdown
Node2(config-if)# exit
```

APS

Use the following for configuring y-cable protection.

```
Node2(config)# redundancy
Node2(config-red)# associate group channel1
Node2(config-red-aps)# aps working transparent 2/0/0
Node2(config-red-aps)# aps protection transparent 4/0/0
Node2(config-red-aps)# aps y-cable
Node2(config-red-aps)# aps revertive
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group channel2
Node2(config-red-aps)# aps working transparent 2/1/0
Node2(config-red-aps)# aps protection transparent 4/1/0
Node2(config-red-aps)# aps y-cable
Node2(config-red-aps)# aps revertive
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group channel3
Node2(config-red-aps)# aps working transparent 2/2/0
Node2(config-red-aps)# aps protection transparent 4/2/0
Node2(config-red-aps)# aps y-cable
Node2(config-red-aps)# aps revertive
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group channel4
Node2(config-red-aps)# aps working transparent 2/3/0
Node2(config-red-aps)# aps protection transparent 4/3/0
Node2(config-red-aps)# aps y-cable
Node2(config-red-aps)# aps revertive
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# end

Node2# copy system:running-config nvram:startup-config
```

Node 3

Figure 8-18 shows the shelf configuration for node 3 in the line card protected hubbed ring shown in Figure 8-3 on page 8-4. Slot 3 uses an east line card motherboard, corresponding to the add/drop mux/demux module in the east mux/demux slot; slot 5 uses a west line card motherboard, corresponding to the add/drop mux/demux module in the west mux/demux slot.

Figure 8-18 Shelf Configuration for Node 3 in Line Card Protected Hubbed Ring


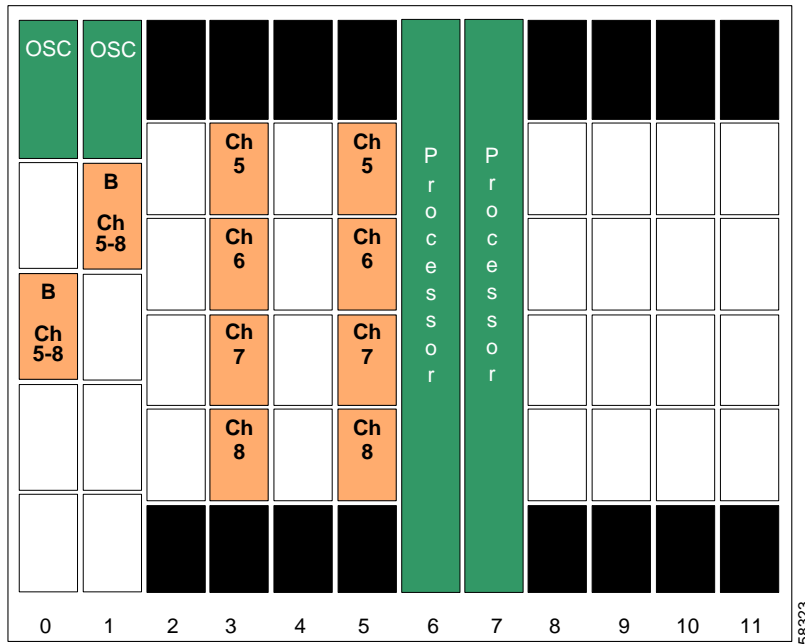


Figure 8-19 shows how the 4-channel mux/demux modules are cabled for node 3 in the line card protected hubbed ring shown in Figure 8-3 on page 8-4.

Figure 8-19 Add/Drop Mux/Demux Module Cabling with OSC for Node 3 in Line Card Protected Hubbed Ring

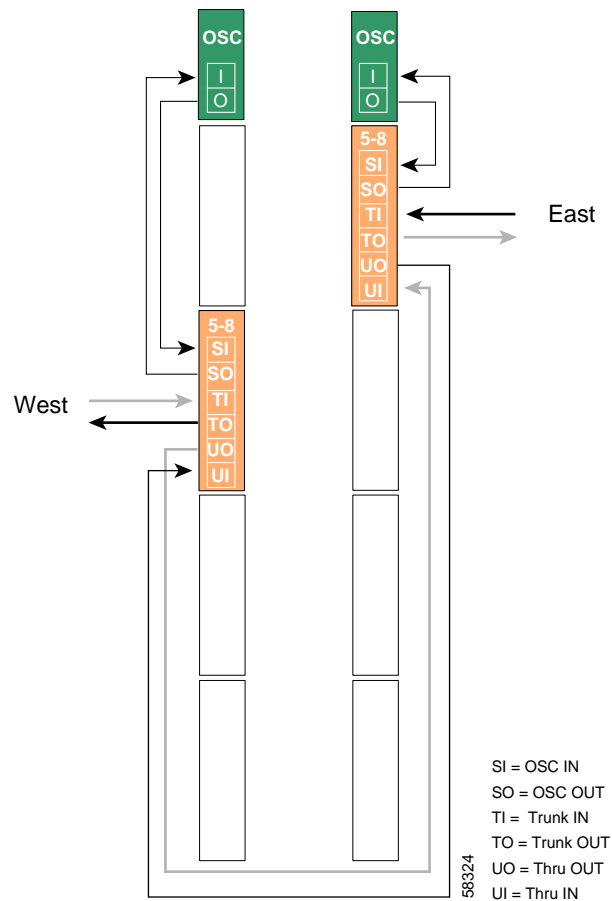

Patch Connections

```
Node3# configure terminal
Node3(config)# patch thru 0/1 thru 1/0
Node3(config)# patch wave 0 oscfilter 0/1
Node3(config)# patch wave 1 oscfilter 1/0
```

Transparent Interfaces in Slot 3

```
Node3(config)# interface transparent 3/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 5

```
Node3(config)# interface transparent 5/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node3(config)# interface wave 0
Node3(config-if)# no shutdown
Node3(config-if)# exit
```

```
Node3(config)# interface wave 1
Node3(config-if)# no shutdown
Node3(config-if)# exit
```

APS

Use the following for configuring y-cable protection.

```
Node3(config)# redundancy
Node3(config-red)# associate group channel5
Node3(config-red-aps)# aps working transparent 5/0/0
Node3(config-red-aps)# aps protection transparent 3/0/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel6
Node3(config-red-aps)# aps working transparent 5/1/0
Node3(config-red-aps)# aps protection transparent 3/1/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel7
Node3(config-red-aps)# aps working transparent 5/2/0
Node3(config-red-aps)# aps protection transparent 3/2/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel8
Node3(config-red-aps)# aps working transparent 5/3/0
Node3(config-red-aps)# aps protection transparent 3/3/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# end

Node3# copy system:running-config nvram:startup-config
```

Node 4

Figure 8-20 shows the shelf configuration for node 4 in the line card protected hubbed ring shown in Figure 8-3 on page 8-4. Slot 8 uses a west line card motherboard, corresponding to the add/drop mux/demux module in the west mux/demux slot; slot 10 uses an east line card motherboard, corresponding to the add/drop mux/demux module in the east mux/demux slot.

Figure 8-20 Module Installation Configuration for Node 4


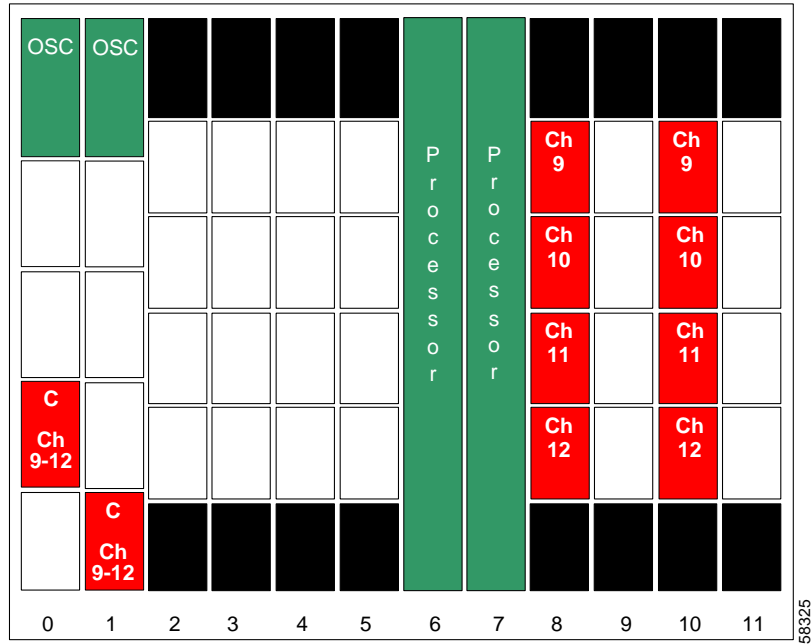


Figure 8-21 shows how the 4-channel mux/demux modules are cabled for node 4 in the line card protected hubbed ring shown in Figure 8-3 on page 8-4.

Figure 8-21 Add/Drop Mux/Demux Module Cabling with OSC for Node 4 in Line Card Protected Hubbed Ring

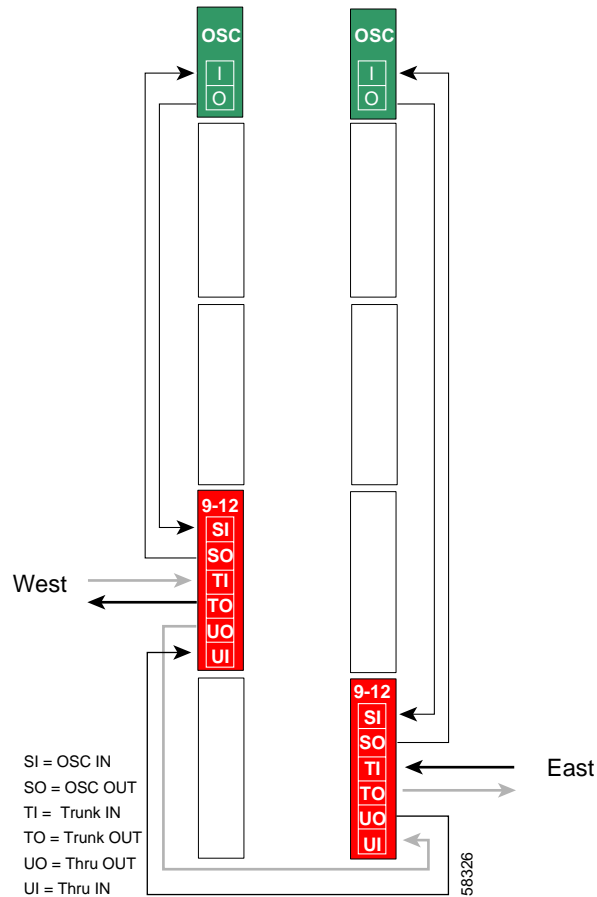

Patch Connections

```
Node4# configure terminal
Node4(config)# patch thru 0/2 thru 1/3
Node4(config)# patch wave 0 oscfilter 0/2
Node4(config)# patch wave 1 oscfilter 1/3
```

Transparent Interfaces in Slot 8

```
Node4(config)# interface transparent 8/0/0
Node4(config-if)# encapsulation gigabitethernet
Node4(config-if)# monitor enable
Node4(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 10

```
Node4(config)# interface transparent 10/0/0
Node4(config-if)# encapsulation gigabitethernet
Node4(config-if)# monitor enable
Node4(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node4(config)# interface wave 0
Node4(config-if)# no shutdown
Node4(config-if)# exit
```

```
Node4(config)# interface wave 1
Node4(config-if)# no shutdown
Node4(config-if)# exit
```

APS

Use the following for configuring y-cable protection.

```
Node4(config)# redundancy
Node4(config-red)# associate group channel9
Node4(config-red-aps)# aps working transparent 10/0/0
Node4(config-red-aps)# aps protection transparent 8/0/0
Node4(config-red-aps)# aps y-cable
Node4(config-red-aps)# aps revertive
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel10
Node4(config-red-aps)# aps working transparent 10/1/0
Node4(config-red-aps)# aps protection transparent 8/1/0
Node4(config-red-aps)# aps y-cable
Node4(config-red-aps)# aps revertive
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel11
Node4(config-red-aps)# aps working transparent 10/2/0
Node4(config-red-aps)# aps protection transparent 8/2/0
Node4(config-red-aps)# aps y-cable
Node4(config-red-aps)# aps revertive
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel12
Node4(config-red-aps)# aps working transparent 10/3/0
Node4(config-red-aps)# aps protection transparent 8/3/0
Node4(config-red-aps)# aps y-cable
Node4(config-red-aps)# aps revertive
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# end
```

```
Node4# copy system:running-config nvram:startup-config
```

Node 5

Figure 8-22 shows the shelf configuration for node 5 in the line card protected hubbed ring shown in Figure 8-3 on page 8-4. Slot 9 uses an east line card motherboard, corresponding to the add/drop mux/demux module in the east mux/demux slot; slot 11 uses a west line card motherboard, corresponding to the add/drop mux/demux module in the west mux/demux slot.

Figure 8-22 Shelf Configuration for Node 5 in Line Card Protected Hubbed Ring


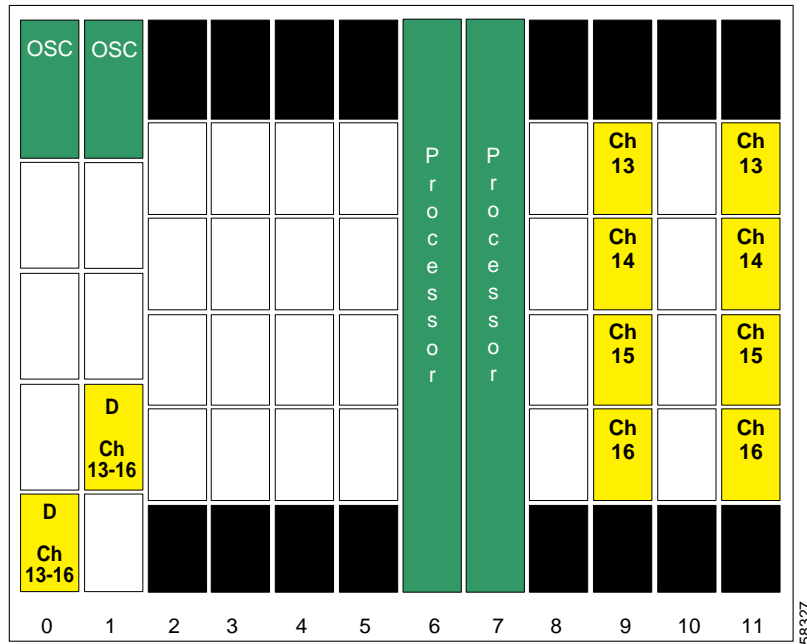


Figure 8-23 shows how the 4-channel mux/demux modules are cabled for node 5 in the line card protected hubbed ring shown in Figure 8-3 on page 8-4.

Figure 8-23 Add/Drop Mux/Demux Module Cabling with OSC for Node 5 in Line Card Protected Hubbed Ring

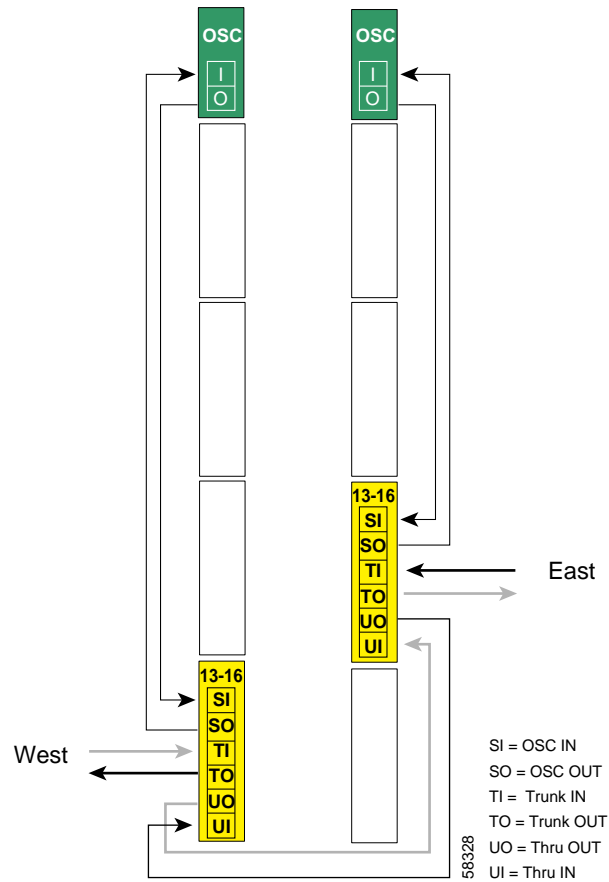

Patch Connections

```
Node5# configure terminal
Node5(config)# patch thru 0/3 thru 1/2
Node5(config)# patch wave 0 oscfilter 0/3
Node5(config)# patch wave 1 oscfilter 1/2
```

Transparent Interfaces in Slot 9

```
Node5(config)# interface transparent 9/0/0
Node5(config-if)# encapsulation gigabitethernet
Node5(config-if)# monitor enable
Node5(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 11

```
Node5(config)# interface transparent 11/0/0
Node5(config-if)# encapsulation gigabitethernet
Node5(config-if)# monitor enable
Node5(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node5(config)# interface wave 0
Node5(config-if)# no shutdown
Node5(config-if)# exit
```

```
Node5(config)# interface wave 1
Node5(config-if)# no shutdown
Node5(config-if)# exit
```

APS

Use the following for configuring y-cable protection.


```
Node5(config)# redundancy
Node5(config-red)# associate group channel13
Node5(config-red-aps)# aps working transparent 9/0/0
Node5(config-red-aps)# aps protection transparent 11/0/0
Node5(config-red-aps)# aps y-cable
Node5(config-red-aps)# aps revertive
Node5(config-red-aps)# aps enable
Node5(config-red-aps)# exit
Node5(config-red)# associate group channel14
Node5(config-red-aps)# aps working transparent 9/1/0
Node5(config-red-aps)# aps protection transparent 11/1/0
Node5(config-red-aps)# aps y-cable
Node5(config-red-aps)# aps revertive
Node5(config-red-aps)# aps enable
Node5(config-red-aps)# exit
Node5(config-red)# associate group channel15
Node5(config-red-aps)# aps working transparent 9/2/0
Node5(config-red-aps)# aps protection transparent 11/2/0
Node5(config-red-aps)# aps y-cable
Node5(config-red-aps)# aps revertive
Node5(config-red-aps)# aps enable
Node5(config-red-aps)# exit
Node5(config-red)# associate group channel16
Node5(config-red-aps)# aps working transparent 9/3/0
Node5(config-red-aps)# aps protection transparent 11/3/0
Node5(config-red-aps)# aps y-cable
Node5(config-red-aps)# aps revertive
Node5(config-red-aps)# aps enable
Node5(config-red-aps)# end

Node5# copy system:running-config nvram:startup-config
```

Configuring a Meshed Ring with Splitter Protection and OSC

Figure 8-24 shows an example topology of a four-node meshed ring with splitter protection and OSC support. Node 1 supports bands A, B, and C (channels 1 through 12). Node 2 adds and drops band A, node 3 adds and drops band B and band D, and node 4 adds and drops band C and band D. The transponders carry Gigabit Ethernet traffic.

Figure 8-24 Channel Plan for Meshed Ring

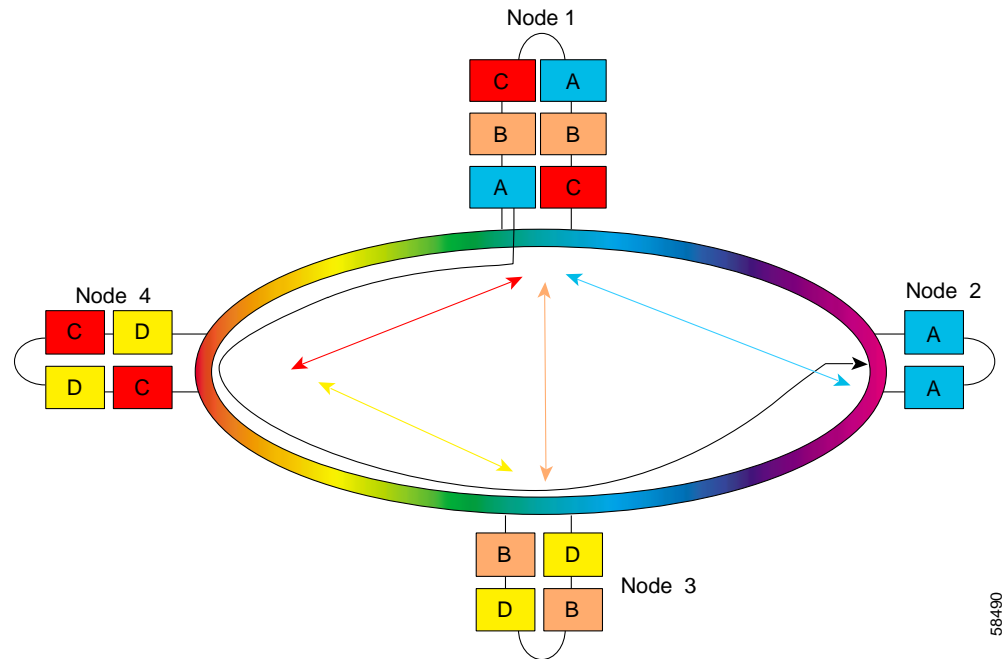

Node 1

Figure 8-25 shows the shelf configuration for node 1 in the splitter protected meshed ring shown in Figure 8-24 on page 8-37. Splitter protected line card motherboards are used to couple the signal to the add/drop mux/demux modules in both west and east mux/demux slots.

Figure 8-25 Shelf Configuration for Node 1 in Splitter Protected Meshed Ring


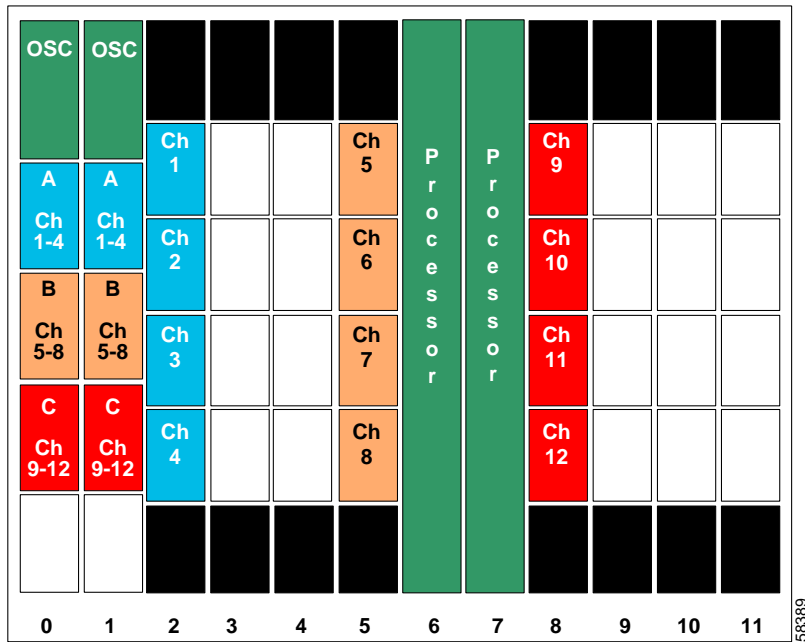


Figure 8-26 shows how the 4-channel mux/demux modules are cabled for node 1 in the splitter protected meshed ring shown in Figure 8-24 on page 8-37.

Figure 8-26 Add/Drop Mux/Demux Module Cabling with OSC for Node 1 in Splitter Protected Meshed Ring

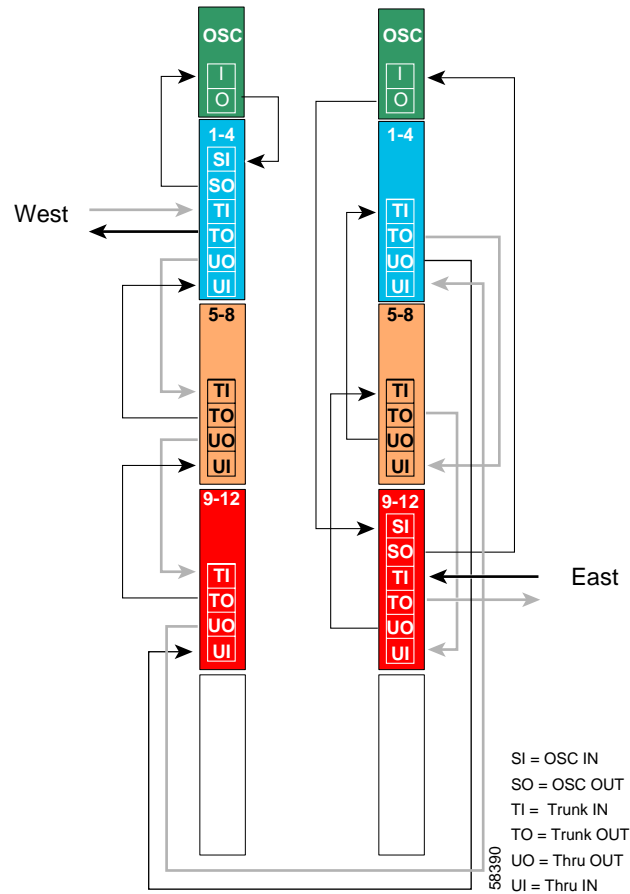

Patch Connections

```

Node1# configure terminal
Node1(config)# patch thru 0/0 wdm 0/1
Node1(config)# patch thru 0/1 wdm 0/2
Node1(config)# patch thru 0/2 thru 1/0
Node1(config)# patch wdm 1/0 thru 1/1
Node1(config)# patch wdm 1/1 thru 1/2
Node1(config)# patch wave 0 oscfilter 0/0
Node1(config)# patch wave 1 oscfilter 1/2
  
```

Transparent Interfaces in Slot 2

```

Node1(config)# interface transparent 2/0/0
Node1(config-if)# encapsulation gigabitethernet
Node1(config-if)# monitor enable
Node1(config-if)# exit
<Configure the remaining transparent interfaces in the slot>
  
```

Transparent Interfaces in Slot 5

```

Node1(config)# interface transparent 5/0/0
Node1(config-if)# encapsulation gigabitethernet
Node1(config-if)# monitor enable
Node1(config-if)# exit

```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 8

```

Node1(config)# interface transparent 8/0/0
Node1(config-if)# encapsulation gigabitethernet
Node1(config-if)# monitor enable
Node1(config-if)# exit

```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```

Node1(config)# interface wave 0
Node1(config-if)# no shutdown
Node1(config-if)# exit

```

```

Node1(config)# interface wave 1
Node1(config-if)# no shutdown
Node1(config-if)# exit

```

APS

```

Node1(config)# redundancy
Node1(config-red)# associate group channel1
Node1(config-red-aps)# aps working wavepatch 2/0/1
Node1(config-red-aps)# aps protection wavepatch 2/0/0
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel2
Node1(config-red-aps)# aps working wavepatch 2/1/1
Node1(config-red-aps)# aps protection wavepatch 2/1/0
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel3
Node1(config-red-aps)# aps working wavepatch 2/2/1
Node1(config-red-aps)# aps protection wavepatch 2/2/0
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel4
Node1(config-red-aps)# aps working wavepatch 2/3/1
Node1(config-red-aps)# aps protection wavepatch 2/3/0
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit

```

```
Node1(config-red)# associate group channel5
Node1(config-red-aps)# aps working wavepatch 5/0/1
Node1(config-red-aps)# aps protection wavepatch 5/0/0
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel6
Node1(config-red-aps)# aps working wavepatch 5/1/1
Node1(config-red-aps)# aps protection wavepatch 5/1/0
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel7
Node1(config-red-aps)# aps working wavepatch 5/2/1
Node1(config-red-aps)# aps protection wavepatch 5/2/0
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel8
Node1(config-red-aps)# aps working wavepatch 5/3/1
Node1(config-red-aps)# aps protection wavepatch 5/3/0
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit

Node1(config-red)# associate group channel9
Node1(config-red-aps)# aps working wavepatch 8/0/0
Node1(config-red-aps)# aps protection wavepatch 8/0/1
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel10
Node1(config-red-aps)# aps working wavepatch 8/1/0
Node1(config-red-aps)# aps protection wavepatch 8/1/1
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel11
Node1(config-red-aps)# aps working wavepatch 8/2/0
Node1(config-red-aps)# aps protection wavepatch 8/2/1
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel12
Node1(config-red-aps)# aps working wavepatch 8/3/0
Node1(config-red-aps)# aps protection wavepatch 8/3/1
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# end

Node1# copy system:running-config nvram:startup-config
```

Node 2

Figure 8-27 shows the shelf configuration for node 2 in the splitter protected meshed ring shown in Figure 8-24 on page 8-37. Slot 2 uses the splitter protected line card motherboard, which couples the signal to the add/drop mux/demux modules in both west and east mux/demux slots.

Figure 8-27 Shelf Configuration for Node 2 in Splitter Protected Meshed Ring


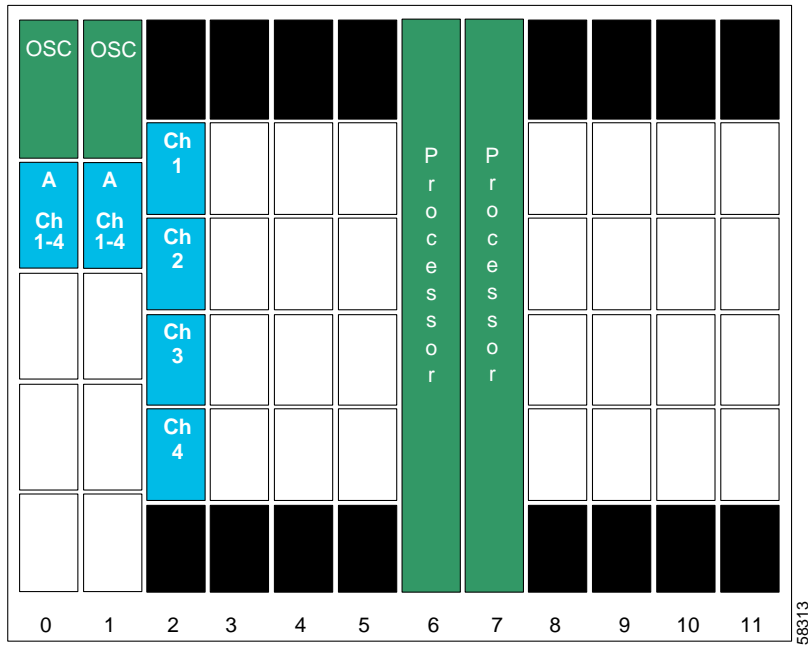


Figure 8-28 shows how the 4-channel mux/demux modules are cabled for node 2 in the splitter protected meshed ring shown in Figure 8-24 on page 8-37.

Figure 8-28 Add/Drop Mux/Demux Module Cabling with OSC for Node 2 in Splitter Protected Meshed Ring

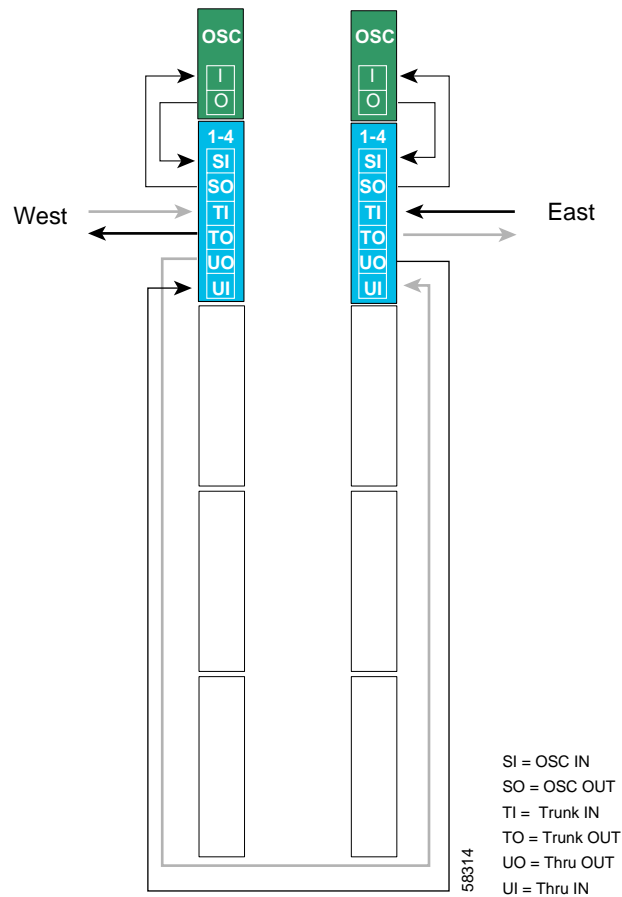

Patch Connections

```
Node2# configure terminal
Node2(config)# patch thru 0/0 thru 1/0
Node2(config)# patch wave 0 oscfilter 0/0
Node2(config)# patch wave 1 oscfilter 1/0
```

Transparent Interfaces in Slot 2

```
Node2(config)# interface transparent 2/0/0
Node2(config-if)# encapsulation gigabitethernet
Node2(config-if)# monitor enable
Node2(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node2(config)# interface wave 0
Node2(config-if)# no shutdown
Node2(config-if)# exit
```

```
Node2(config)# interface wave 1
Node2(config-if)# no shutdown
Node2(config-if)# exit
```

APS

```
Node2(config)# redundancy
Node2(config-red)# associate group channel1
Node2(config-red-aps)# aps working wavepatch 2/0/0
Node2(config-red-aps)# aps protection wavepatch 2/0/1
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group channel2
Node2(config-red-aps)# aps working wavepatch 2/1/0
Node2(config-red-aps)# aps protection wavepatch 2/1/1
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group channel3
Node2(config-red-aps)# aps working wavepatch 2/2/0
Node2(config-red-aps)# aps protection wavepatch 2/2/1
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group channel4
Node2(config-red-aps)# aps working wavepatch 2/3/0
Node2(config-red-aps)# aps protection wavepatch 2/3/1
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# end

Node2# copy system:running-config nvram:startup-config
```

Node 3

Figure 8-29 shows the shelf configuration for node 3 in the splitter protected meshed ring shown in Figure 8-24 on page 8-37. Slots 5 and 11 use splitter protected line card motherboards, which couple the signal to the add/drop mux/demux modules in both west and east mux/demux slots.

Figure 8-29 Shelf Configuration for Node 3 in Splitter Protected Meshed Ring


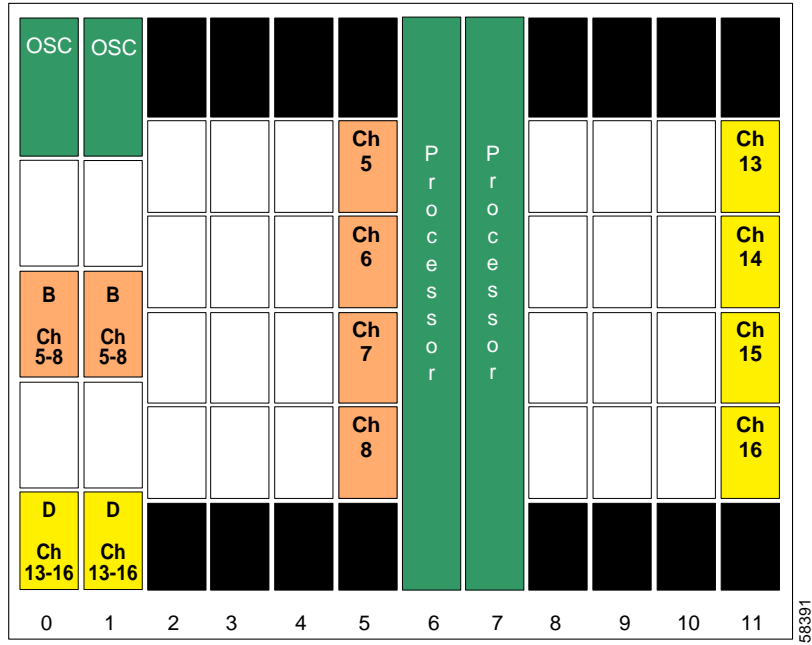


Figure 8-30 shows how the 4-channel mux/demux modules are cabled for node 3 in the splitter protected meshed ring shown in Figure 8-24 on page 8-37.

Figure 8-30 Add/Drop Mux/Demux Module Cabling with OSC for Node 3 in Splitter Protected Meshed Ring

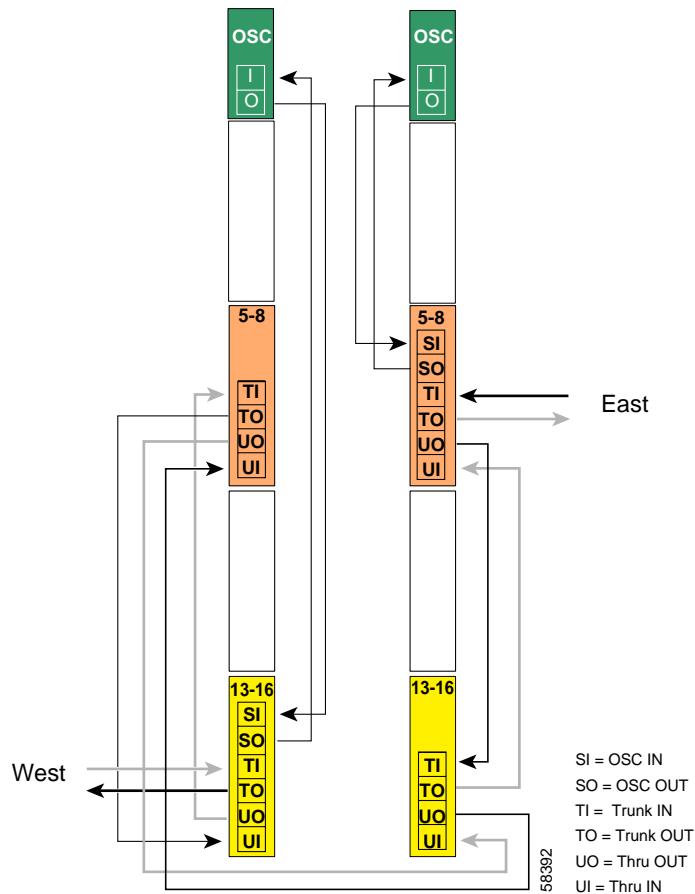

Patch Connections

```
Node3# configure terminal
Node3(config)# patch wdm 0/1 thru 0/3
Node3(config)# patch thru 0/1 thru 1/3
Node3(config)# patch wdm 1/3 thru 1/1
Node3(config)# patch wave 0 oscfilter 0/3
Node3(config)# patch wave 1 oscfilter 1/1
```

Transparent Interfaces in Slot 5

```
Node3(config)# interface transparent 5/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 11

```
Node3(config)# interface transparent 11/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node3(config)# interface wave 0
Node3(config-if)# no shutdown
Node3(config-if)# exit
```

```
Node3(config)# interface wave 1
Node3(config-if)# no shutdown
Node3(config-if)# exit
```

APS

```
Node3(config)# redundancy
Node3(config-red)# associate group channel5
Node3(config-red-aps)# aps working wavepatch 5/0/0
Node3(config-red-aps)# aps protection wavepatch 5/0/1
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel6
Node3(config-red-aps)# aps working wavepatch 5/1/0
Node3(config-red-aps)# aps protection wavepatch 5/1/1
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel7
Node3(config-red-aps)# aps working wavepatch 5/2/0
Node3(config-red-aps)# aps protection wavepatch 5/2/1
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel8
Node3(config-red-aps)# aps working wavepatch 5/3/0
Node3(config-red-aps)# aps protection wavepatch 5/3/1
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
```

```

Node3(config-red)# associate group channel13
Node3(config-red-aps)# aps working wavepatch 11/0/1
Node3(config-red-aps)# aps protection wavepatch 11/0/0
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel14
Node3(config-red-aps)# aps working wavepatch 11/1/1
Node3(config-red-aps)# aps protection wavepatch 11/1/0
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel15
Node3(config-red-aps)# aps working wavepatch 11/2/1
Node3(config-red-aps)# aps protection wavepatch 11/2/0
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel16
Node3(config-red-aps)# aps working wavepatch 11/3/1
Node3(config-red-aps)# aps protection wavepatch 11/3/0
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# end


Node3# copy system:running-config nvram:startup-config

```

Node 4

Figure 8-31 shows the shelf configuration for node 4 in the splitter protected meshed ring shown in Figure 8-24 on page 8-37. Slots 8 and 11 use the splitter protected line card motherboards, which couple the signal to the add/drop mux/demux modules in both the west and east mux/demux slots.


Figure 8-31 Module Installation Configuration for Node 4

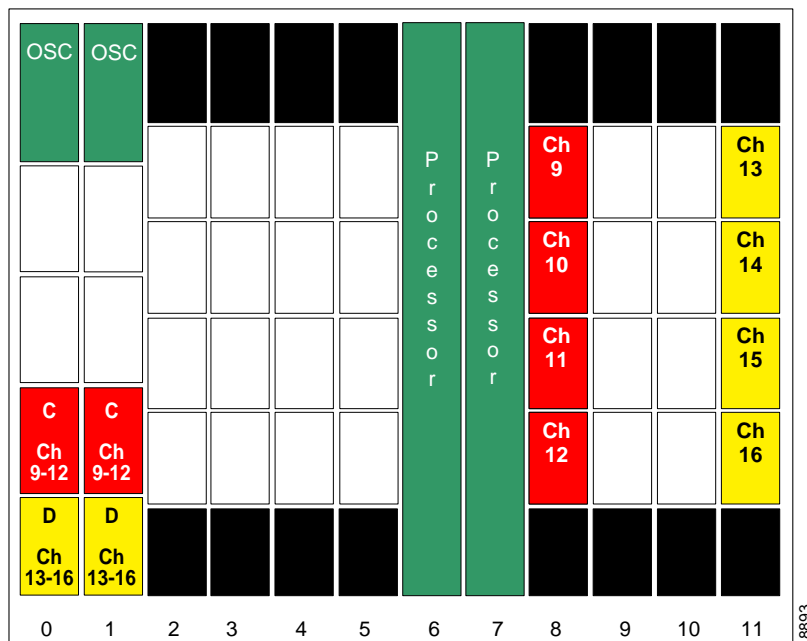

8893

Figure 8-32 shows how the 4-channel mux/demux modules are cabled for node 4 in the splitter protected meshed ring shown in Figure 8-24 on page 8-37.

Figure 8-32 Add/Drop Mux/Demux Module Cabling with OSC for Node 4 in Splitter Protected Meshed Ring

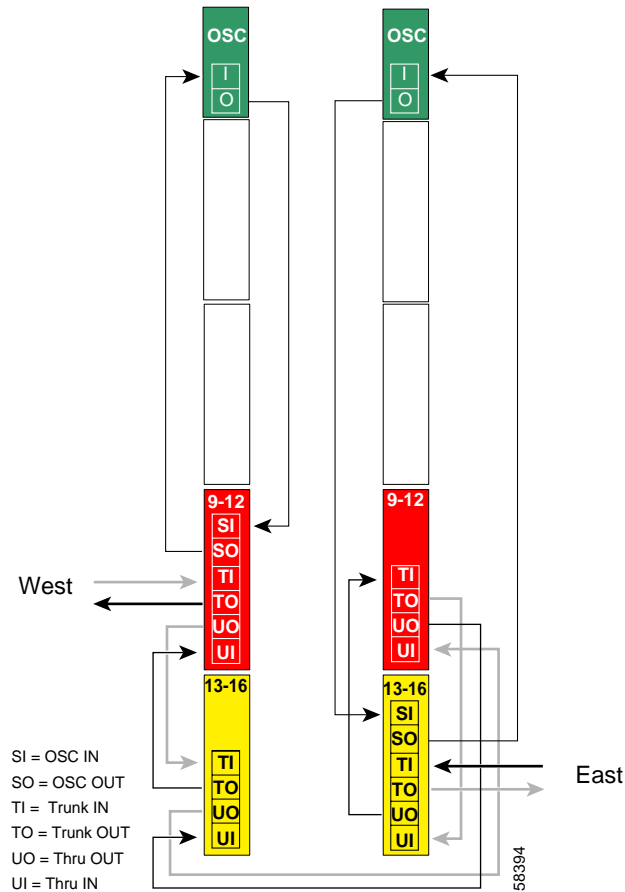

Patch Connections

```
Node4# configure terminal
Node4(config)# patch thru 0/2 wdm 0/3
Node4(config)# patch thru 0/3 thru 1/2
Node4(config)# patch wdm 1/2 thru 1/3
Node4(config)# patch wave 0 oscfilter 0/2
Node4(config)# patch wave 1 oscfilter 1/3
```

Transparent Interfaces in Slot 8

```
Node4(config)# interface transparent 8/0/0
Node4(config-if)# encapsulation gigabitethernet
Node4(config-if)# monitor enable
Node4(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 11

```
Node4(config)# interface transparent 11/0/0
Node4(config-if)# encapsulation gigabitethernet
Node4(config-if)# monitor enable
Node4(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node4(config)# interface wave 0
Node4(config-if)# no shutdown
Node4(config-if)# exit
```

```
Node4(config)# interface wave 1
Node4(config-if)# no shutdown
Node4(config-if)# exit
```

APS

```
Node4(config)# redundancy
Node4(config-red)# associate group channel9
Node4(config-red-aps)# aps working wavepatch 8/0/1
Node4(config-red-aps)# aps protection wavepatch 8/0/0
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel10
Node4(config-red-aps)# aps working wavepatch 8/1/1
Node4(config-red-aps)# aps protection wavepatch 8/1/0
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel11
Node4(config-red-aps)# aps working wavepatch 8/2/1
Node4(config-red-aps)# aps protection wavepatch 8/2/0
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel12
Node4(config-red-aps)# aps working wavepatch 8/3/1
Node4(config-red-aps)# aps protection wavepatch 8/3/0
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
```




```
Node4(config-red)# associate group channel13
Node4(config-red-aps)# aps working wavepatch 11/0/0
Node4(config-red-aps)# aps protection wavepatch 11/0/1
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel14
Node4(config-red-aps)# aps working wavepatch 11/1/0
Node4(config-red-aps)# aps protection wavepatch 11/1/1
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel15
Node4(config-red-aps)# aps working wavepatch 11/2/0
Node4(config-red-aps)# aps protection wavepatch 11/2/1
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel16
Node4(config-red-aps)# aps working wavepatch 11/3/0
Node4(config-red-aps)# aps protection wavepatch 11/3/1
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# end

Node4# copy system:running-config nvram:startup-config
```

Configuring a Splitter Protected Meshed Ring with Unprotected Channels and OSC

Figure 8-33 shows an example topology of a four-node meshed ring with splitter protection and OSC support. Node 1 supports bands A, B, and C (channels 1-12). Node 2 adds and drops band A (channels 1-4) and unprotected band E (channels 17-20). Node 3 adds and drops band B (channels 5-8), band D (channels 13-16), and unprotected band E (channels 17-20). Node 4 adds and drops band C (channels 9-12) and band D (channels 13-16). The transponders carry Gigabit Ethernet traffic.

Figure 8-33 Overview of Meshed Ring Topology with Splitter Protection

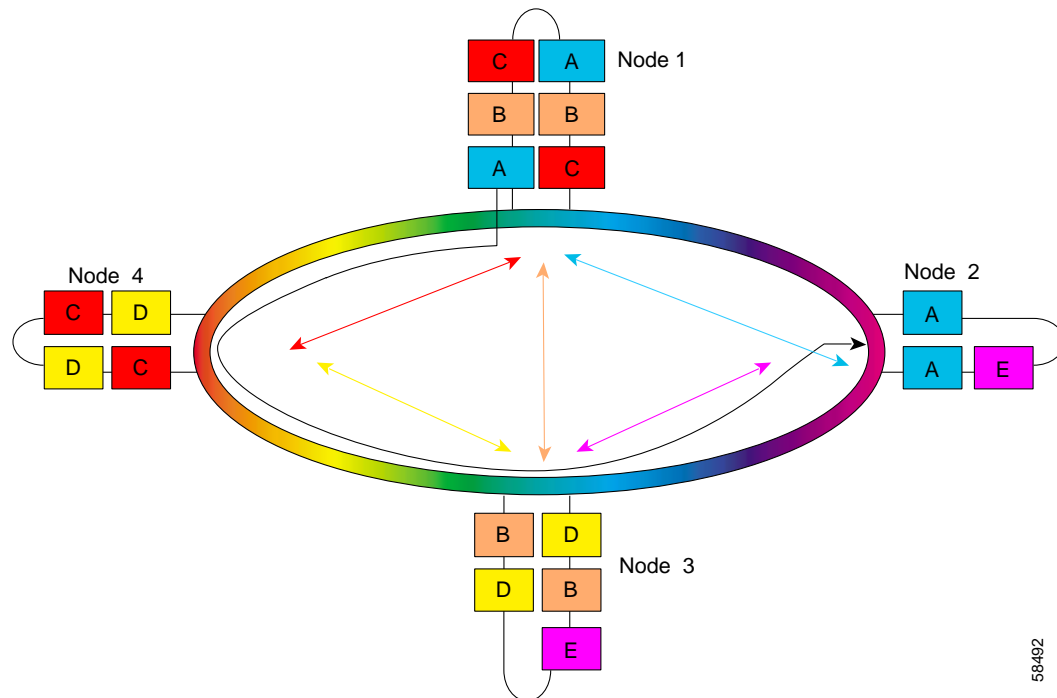

58492

Node 1

The configuration for node 1 is the same as described in the “Node 1” section on page 8-38.

Node 2

Figure 8-34 shows the shelf configuration for node 2 in the splitter protected meshed ring with unprotected channels shown in Figure 8-33 on page 8-52. Slot 2 uses the splitter protected line card motherboard, which couples the signal to the add/drop mux/demux modules in subcard 0 of both west and east mux/demux slots. Slot 4, which supports the unprotected channels, uses an east line card motherboard.

Figure 8-34 Shelf Configuration for Node 2 in Splitter Protected Meshed Ring with Unprotected Channels


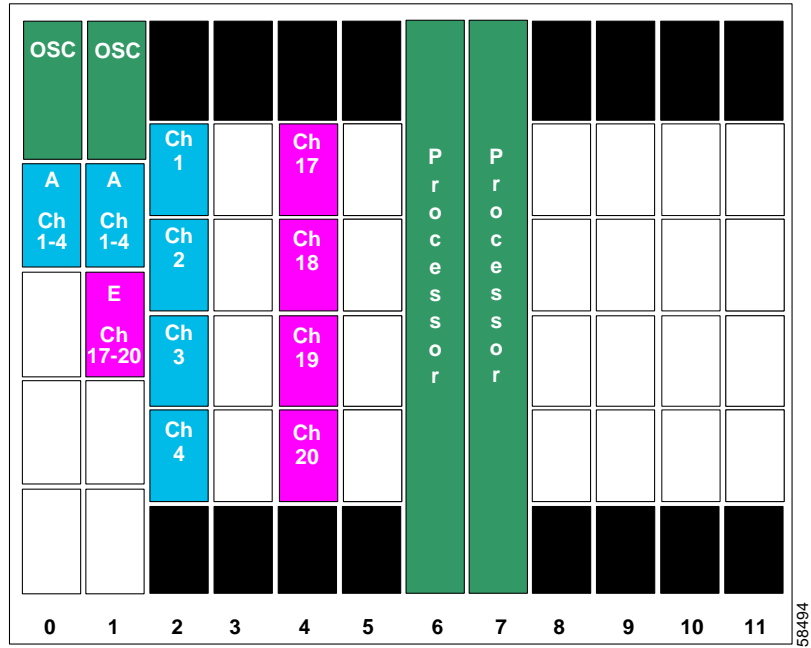


Figure 8-35 shows how the 4-channel mux/demux modules are cabled for node 2 in the splitter protected meshed ring with unprotected channel shown in Figure 8-33 on page 8-52.

Figure 8-35 Add/Drop Mux/Demux Module Cabling for Node 2 in Splitter Protected Meshed Ring with Unprotected Channels

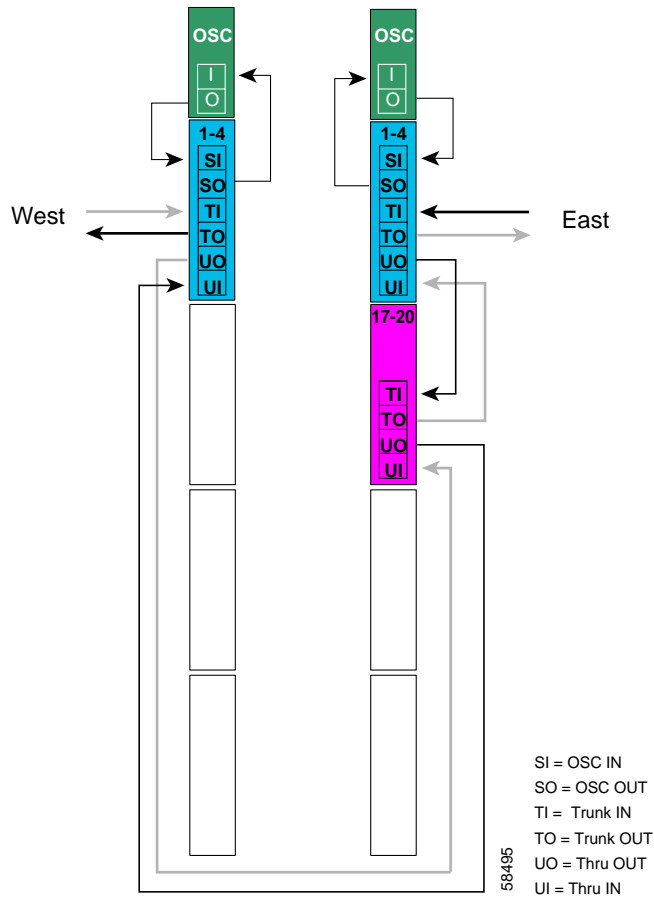

Patch Connections

```
Node2# configure terminal
Node2(config)# patch thru 0/0 thru 1/1
Node2(config)# patch wdm 1/1 thru 1/0
Node2(config)# patch wave 0 oscfilter 0/0
Node2(config)# patch wave 1 oscfilter 1/0
```

Transparent Interfaces in Slot 2

```
Node2(config)# interface transparent 2/0/0
Node2(config-if)# encapsulation gigabitethernet
Node2(config-if)# monitor enable
Node2(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 4

```
Node2(config)# interface transparent 4/0/0
Node2(config-if)# encapsulation gigabitethernet
Node2(config-if)# monitor enable
Node2(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node2(config)# interface wave 0
Node2(config-if)# no shutdown
Node2(config-if)# exit
```

```
Node2(config)# interface wave 1
Node2(config-if)# no shutdown
Node2(config-if)# exit
```

APS

```
Node2(config)# redundancy
Node2(config-red)# associate group channel1
Node2(config-red-aps)# aps working wavepatch 2/0/0
Node2(config-red-aps)# aps protection wavepatch 2/0/1
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group channel2
Node2(config-red-aps)# aps working wavepatch 2/1/0
Node2(config-red-aps)# aps protection wavepatch 2/1/1
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group channel3
Node2(config-red-aps)# aps working wavepatch 2/2/0
Node2(config-red-aps)# aps protection wavepatch 2/2/1
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group channel4
Node2(config-red-aps)# aps working wavepatch 2/3/0
Node2(config-red-aps)# aps protection wavepatch 2/3/1
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# end
```

```
Node2# copy system:running-config nvram:startup-config
```

Node 3

Figure 8-36 shows the shelf configuration for node 3 in the splitter protected meshed ring with unprotected channels shown in Figure 8-33 on page 8-52. Slot 5 and slot 11 use splitter protected line card motherboards, which couple the signal to the add/drop mux/demux modules in subcard 1 and subcard 3, respectively, of both west and east mux/demux slots. Slot 8, which supports the unprotected channels, uses a west line card motherboard.

Figure 8-36 Shelf Configuration for Node 3 in Splitter Protected Meshed Ring with Unprotected Channels


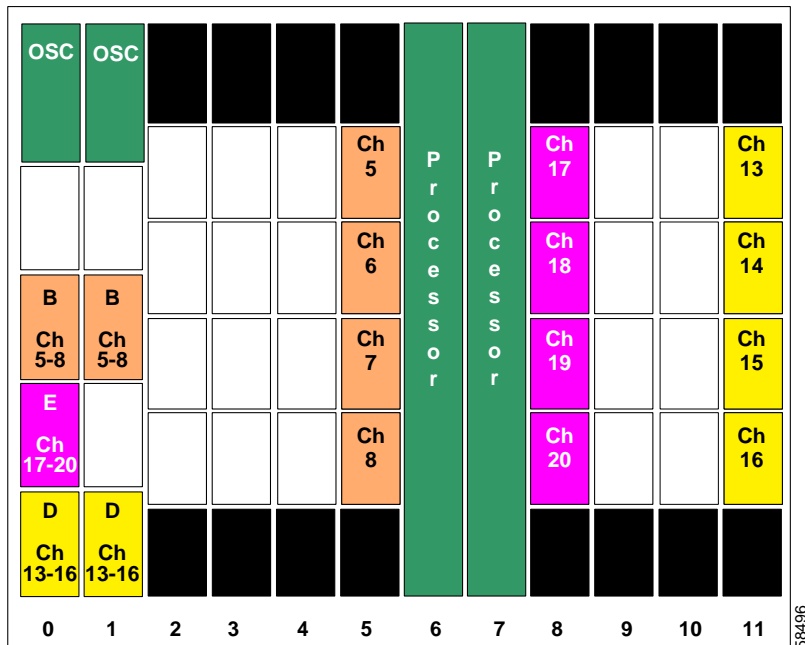


Figure 8-37 shows how the 4-channel mux/demux modules are cabled for node 3 in the splitter protected meshed ring with unprotected channels shown in Figure 8-33 on page 8-52.

Figure 8-37 Add/Drop Mux/Demux Module Cabling for Node 3 in Splitter Protected Meshed Ring with Unprotected Channels

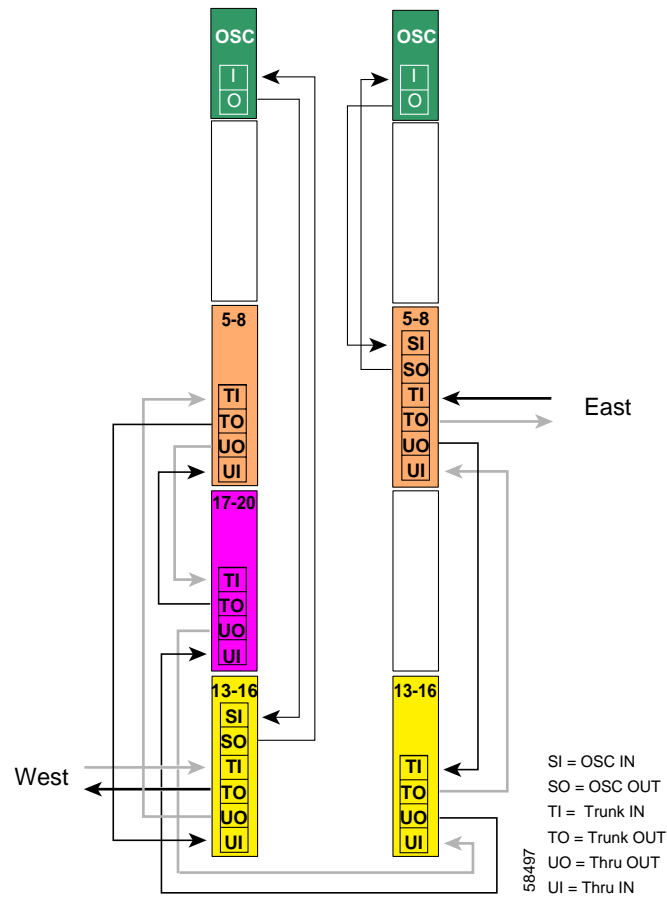

Patch Connections

```
Node3# configure terminal
Node3(config)# patch thru 0/3 wdm 0/1
Node3(config)# patch thru 0/1 wdm 0/2
Node3(config)# patch thru 0/2 thru 1/3
Node3(config)# patch wdm 1/3 thru 1/1
Node3(config)# patch wave 0 oscfilter 0/3
Node3(config)# patch wave 1 oscfilter 1/1
```

Transparent Interfaces in Slot 5

```
Node3(config)# interface transparent 5/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 8

```
Node3(config)# interface transparent 8/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 11

```
Node3(config)# interface transparent 11/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node3(config)# interface wave 0
Node3(config-if)# no shutdown
Node3(config-if)# exit
```

```
Node3(config)# interface wave 1
Node3(config-if)# no shutdown
Node3(config-if)# exit
```

APS

```
Node3(config)# redundancy
Node3(config-red)# associate group channel5
Node3(config-red-aps)# aps working wavepatch 5/0/0
Node3(config-red-aps)# aps protection wavepatch 5/0/1
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel6
Node3(config-red-aps)# aps working wavepatch 5/1/0
Node3(config-red-aps)# aps protection wavepatch 5/1/1
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel7
Node3(config-red-aps)# aps working wavepatch 5/2/0
Node3(config-red-aps)# aps protection wavepatch 5/2/1
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel8
Node3(config-red-aps)# aps working wavepatch 5/3/0
Node3(config-red-aps)# aps protection wavepatch 5/3/1
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
```



```
Node3(config-red)# associate group channel13
Node3(config-red-aps)# aps working wavepatch 11/0/1
Node3(config-red-aps)# aps protection wavepatch 11/0/0
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel14
Node3(config-red-aps)# aps working wavepatch 11/1/1
Node3(config-red-aps)# aps protection wavepatch 11/1/0
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel15
Node3(config-red-aps)# aps working wavepatch 11/2/1
Node3(config-red-aps)# aps protection wavepatch 11/2/0
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel16
Node3(config-red-aps)# aps working wavepatch 11/3/1
Node3(config-red-aps)# aps protection wavepatch 11/3/0
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# end

Node3# copy system:running-config nvram:startup-config
```

Node 4

The configuration for node 4 is the same as described in the “Node 4” section on page 8-48.

Configuring a Meshed Ring with Line Card Protection and OSC

Line card protection requires different shelf and CLI configuration from splitter protection. The following sections describe an example based on the meshed ring topology shown in Figure 8-24 on page 8-37.

Node 1

Figure 8-38 shows the shelf configuration for node 1 using line card protection in the example meshed ring shown in Figure 8-24 on page 8-37. Slots 2, 5, and 8 use west line card motherboards, corresponding to the add/drop mux/demux modules in the west mux/demux slot; slots 3, 4, and 10 use east line card motherboards, corresponding to the add/drop mux/demux modules in the east mux/demux slot.

Figure 8-38 Shelf Configuration for Node 1 in Line Card Protected Meshed Ring


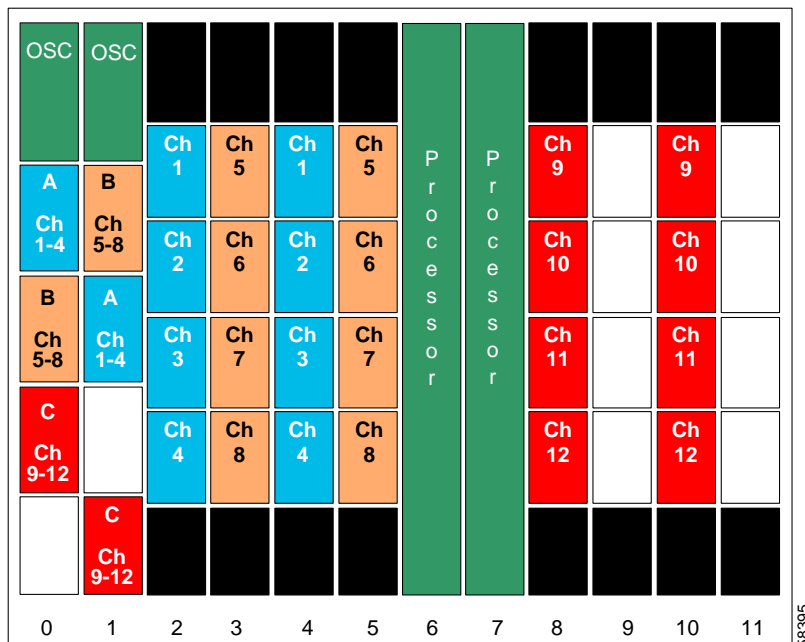


Figure 8-39 shows how the 4-channel mux/demux modules are cabled for node 1 in the line card protected meshed ring shown in Figure 8-24 on page 8-37.

Figure 8-39 Add/Drop Mux/Demux Module Cabling with OSC for Node 1 in Line Card Protected Meshed Ring

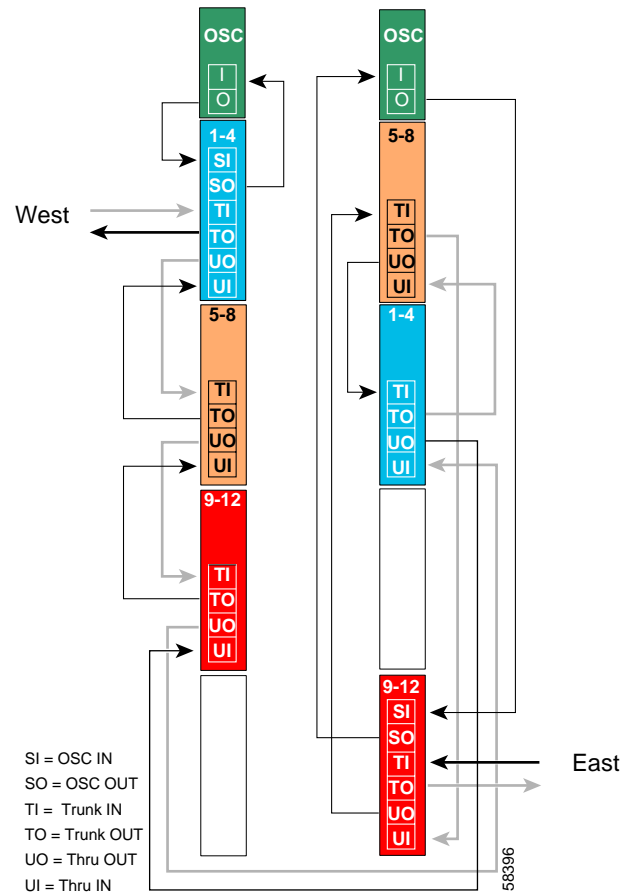

Patch Connections

```

Node1# configure terminal
Node1(config)# patch thru 0/0 wdm 0/1
Node1(config)# patch thru 0/1 wdm 0/2
Node1(config)# patch thru 0/2 thru 1/1
Node1(config)# patch wdm 1/1 thru 1/0
Node1(config)# patch wdm 1/0 thru 1/3
Node1(config)# patch wave 0 oscfilter 0/0
Node1(config)# patch wave 1 oscfilter 1/3
  
```

Transparent Interfaces

```

Node1(config)# interface transparent 2/0/0
Node1(config-if)# encapsulation gigabitethernet
Node1(config-if)# monitor enable
Node1(config-if)# exit
  
```

<Configure the remaining transparent interfaces in the shelf>

OSC Interfaces

```

Node1(config)# interface wave 0
Node1(config-if)# no shutdown
Node1(config-if)# exit

```

```

Node1(config)# interface wave 1
Node1(config-if)# no shutdown
Node1(config-if)# exit

```

APS

Use the following for configuring y-cable protection.

```

Node1(config)# redundancy
Node1(config-red)# associate group channel1
Node1(config-red-aps)# aps working transparent 4/0/0
Node1(config-red-aps)# aps protection transparent 2/0/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel2
Node1(config-red-aps)# aps working transparent 4/1/0
Node1(config-red-aps)# aps protection transparent 2/1/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel3
Node1(config-red-aps)# aps working transparent 4/2/0
Node1(config-red-aps)# aps protection transparent 2/2/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel4
Node1(config-red-aps)# aps working transparent 4/3/0
Node1(config-red-aps)# aps protection transparent 2/3/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit

```

```
Node1(config-red)# associate group channel5
Node1(config-red-aps)# aps working transparent 5/0/0
Node1(config-red-aps)# aps protection transparent 3/0/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel6
Node1(config-red-aps)# aps working transparent 5/1/0
Node1(config-red-aps)# aps protection transparent 3/1/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel7
Node1(config-red-aps)# aps working transparent 5/2/0
Node1(config-red-aps)# aps protection transparent 3/2/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel8
Node1(config-red-aps)# aps working transparent 5/3/0
Node1(config-red-aps)# aps protection transparent 3/3/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit

Node1(config-red)# associate group channel9
Node1(config-red-aps)# aps working transparent 8/0/0
Node1(config-red-aps)# aps protection transparent 11/0/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel10
Node1(config-red-aps)# aps working transparent 8/1/0
Node1(config-red-aps)# aps protection transparent 11/1/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel11
Node1(config-red-aps)# aps working transparent 8/2/0
Node1(config-red-aps)# aps protection transparent 11/2/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# exit
Node1(config-red)# associate group channel12
Node1(config-red-aps)# aps working transparent 8/3/0
Node1(config-red-aps)# aps protection transparent 11/3/0
Node1(config-red-aps)# aps y-cable
Node1(config-red-aps)# aps revertive
Node1(config-red-aps)# aps enable
Node1(config-red-aps)# end

Node1# copy system:running-config nvram:startup-config
```

Node 2

Figure 8-40 shows the shelf configuration for node 2 in the line card protected meshed ring shown in Figure 8-24 on page 8-37. Slot 2 uses the west line card motherboard, corresponding to the add/drop mux/demux module in the west mux/demux slot; slot 4 uses the east line card motherboard, corresponding to the add/drop mux/demux module in the east mux/demux slot.

Figure 8-40 Shelf Configuration for Node 2 in Line Card Protected Meshed Ring


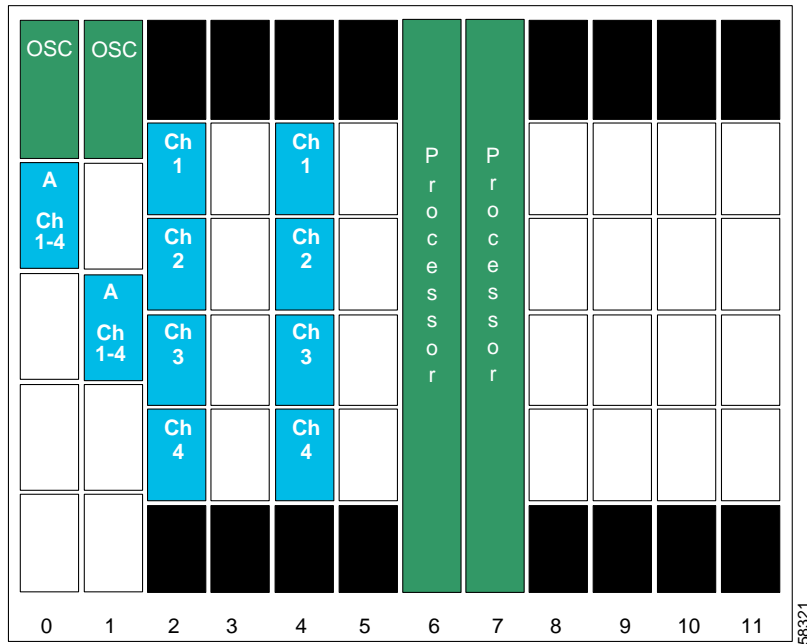


Figure 8-41 shows how the 4-channel mux/demux modules are cabled for node 2 in the line card protected meshed ring shown in Figure 8-24 on page 8-37.

Figure 8-41 Add/Drop Mux/Demux Module Cabling with OSC for Node 2 in Line Card Protected Meshed Ring

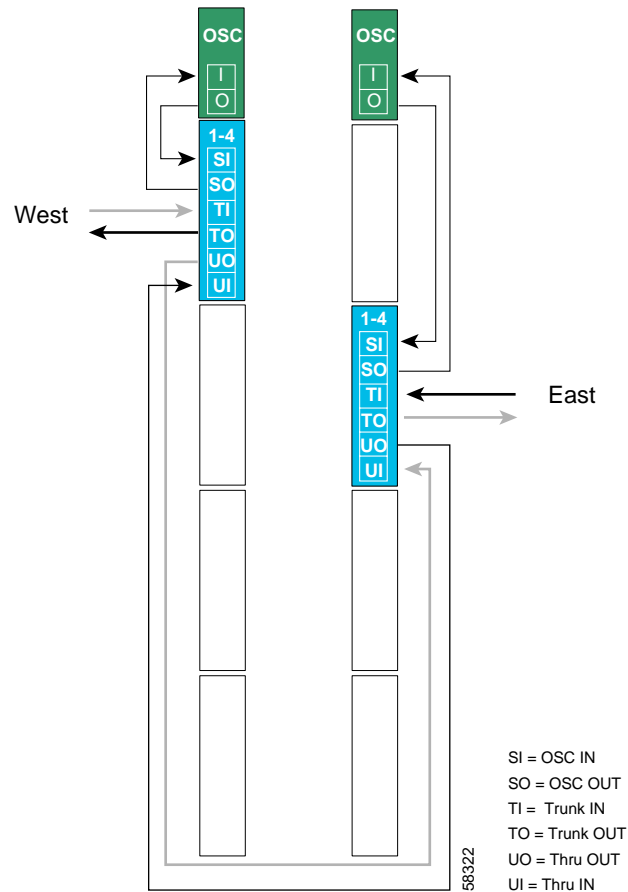

Patch Connections

```
Node2# configure terminal
Node2(config)# patch thru 0/0 thru 1/1
Node2(config)# patch wave 0 oscfilter 0/0
Node2(config)# patch wave 1 oscfilter 1/1
```

Transparent Interfaces in Slot 2

```
Node2(config)# interface transparent 2/0/0
Node2(config-if)# encapsulation gigabitethernet
Node2(config-if)# monitor enable
Node2(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 4

```
Node2(config)# interface transparent 4/0/0
Node2(config-if)# encapsulation gigabitethernet
Node2(config-if)# monitor enable
Node2(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node2(config)# interface wave 0
Node2(config-if)# no shutdown
Node2(config-if)# exit
```

```
Node2(config)# interface wave 1
Node2(config-if)# no shutdown
Node2(config-if)# exit
```

APS

Use the following for configuring y-cable protection.

```
Node2(config)# redundancy
Node2(config-red)# associate group channel1
Node2(config-red-aps)# aps working transparent 2/0/0
Node2(config-red-aps)# aps protection transparent 4/0/0
Node2(config-red-aps)# aps y-cable
Node2(config-red-aps)# aps revertive
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group channel2
Node2(config-red-aps)# aps working transparent 2/1/0
Node2(config-red-aps)# aps protection transparent 4/1/0
Node2(config-red-aps)# aps y-cable
Node2(config-red-aps)# aps revertive
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group channel3
Node2(config-red-aps)# aps working transparent 2/2/0
Node2(config-red-aps)# aps protection transparent 4/2/0
Node2(config-red-aps)# aps y-cable
Node2(config-red-aps)# aps revertive
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group channel4
Node2(config-red-aps)# aps working transparent 2/3/0
Node2(config-red-aps)# aps protection transparent 4/3/0
Node2(config-red-aps)# aps y-cable
Node2(config-red-aps)# aps revertive
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# end

Node2# copy system:running-config nvram:startup-config
```


Node 3

Figure 8-42 shows the shelf configuration for node 3 in the line card protected meshed ring shown in Figure 8-24 on page 8-37. Slots 5 and 11 use the west line card motherboards, corresponding to the add/drop mux/demux modules in the west mux/demux slot; slots 3 and 9 use the east line card motherboards, corresponding to the add/drop mux/demux modules in the east mux/demux slot.

Figure 8-42 Shelf Configuration for Node 3 in Line Card Protected Meshed Ring


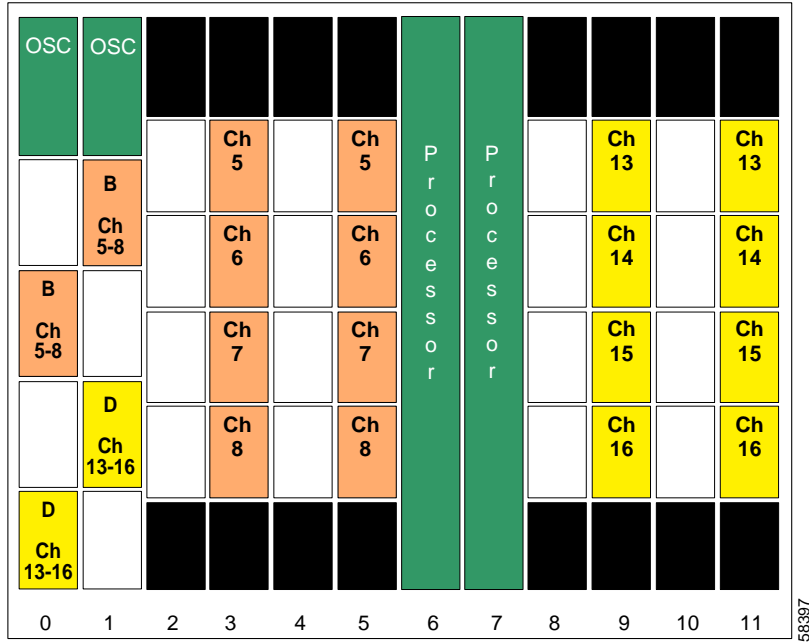


Figure 8-43 shows how the 4-channel mux/demux modules are cabled for the line card protected meshed ring shown in Figure 8-24 on page 8-37.

Figure 8-43 Add/Drop Mux/Demux Module Cabling with OSC for Node 3 in Line Card Protected Meshed Ring

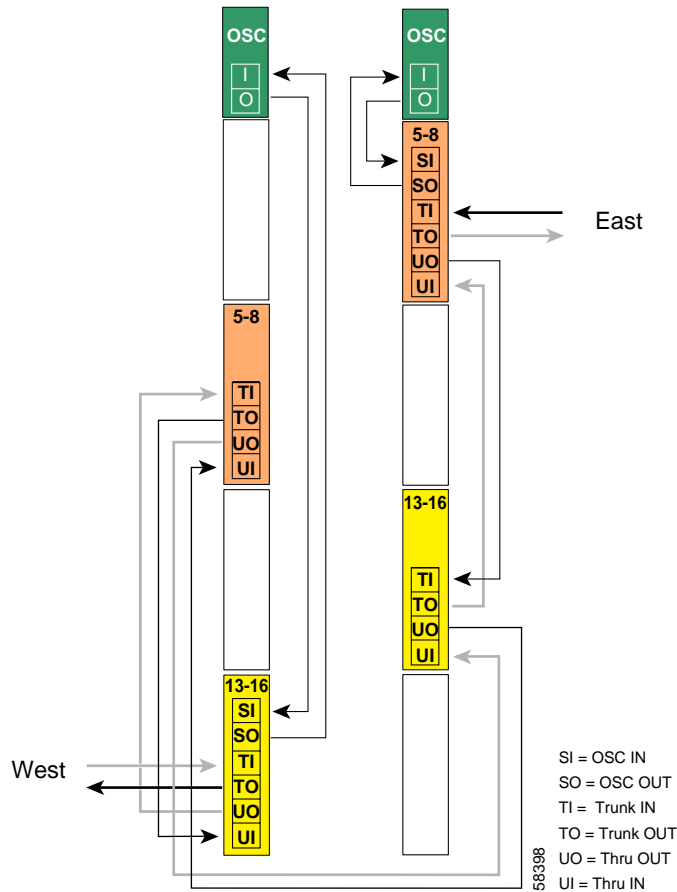

Patch Connections

```
Node3# configure terminal
Node3(config)# patch thru 0/1 wdm 0/3
Node3(config)# patch thru 0/3 thru 1/0
Node3(config)# patch wdm 1/0 thru 1/2
Node3(config)# patch wave 0 oscfilter 0/3
Node3(config)# patch wave 1 oscfilter 1/0
```

Transparent Interfaces in Slot 3

```
Node3(config)# interface transparent 3/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 5

```
Node3(config)# interface transparent 5/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 9

```
Node3(config)# interface transparent 9/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 11

```
Node3(config)# interface transparent 11/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node3(config)# interface wave 0
Node3(config-if)# no shutdown
Node3(config-if)# exit
```

```
Node3(config)# interface wave 1
Node3(config-if)# no shutdown
Node3(config-if)# exit
```

APS

Use the following for configuring y-cable protection.

```

Node3(config)# redundancy
Node3(config-red)# associate group channel5
Node3(config-red-aps)# aps working transparent 3/0/0
Node3(config-red-aps)# aps protection transparent 5/0/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel6
Node3(config-red-aps)# aps working transparent 3/1/0
Node3(config-red-aps)# aps protection transparent 5/1/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel7
Node3(config-red-aps)# aps working transparent 3/2/0
Node3(config-red-aps)# aps protection transparent 5/2/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel8
Node3(config-red-aps)# aps working transparent 3/3/0
Node3(config-red-aps)# aps protection transparent 5/3/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit


Node3(config-red)# associate group channel13
Node3(config-red-aps)# aps working transparent 11/0/0
Node3(config-red-aps)# aps protection transparent 9/0/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel14
Node3(config-red-aps)# aps working transparent 11/1/0
Node3(config-red-aps)# aps protection transparent 9/1/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel15
Node3(config-red-aps)# aps working transparent 11/2/0
Node3(config-red-aps)# aps protection transparent 9/2/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel16
Node3(config-red-aps)# aps working transparent 11/3/0
Node3(config-red-aps)# aps protection transparent 9/3/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# end
Node3# copy system:running-config nvram:startup-config

```

Node 4

Figure 8-44 shows the shelf configuration for node 4 in the line card protected meshed ring shown in Figure 8-24 on page 8-37. Slots 8 and 11 use the west line card motherboards, corresponding to the add/drop mux/demux modules in the west mux/demux slots; slots 9 and 10 use the east line card motherboards, corresponding to the add/drop mux/demux modules in the east mux/demux slots.


Figure 8-44 Shelf Configuration for Node 4 in Line Card Protected Meshed Ring

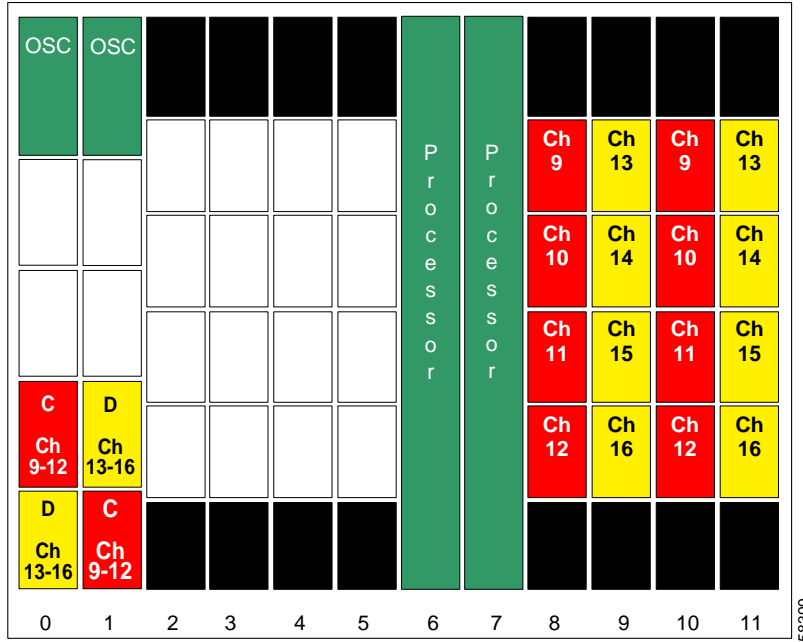

56399

Figure 8-45 shows how the 4-channel mux/demux modules are cabled for node 4 in the line card protected meshed ring shown in Figure 8-24 on page 8-37.

Figure 8-45 Add/Drop Mux/Demux Module Cabling with OSC for Node 4 in Line Card Protected Meshed Ring

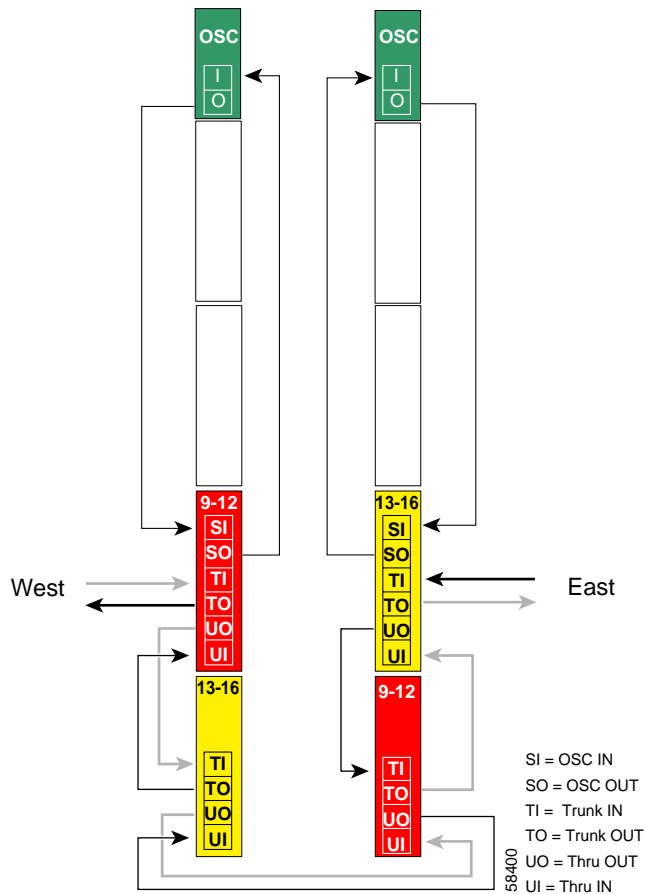

Patch Connections

```
Node4# configure terminal
Node4(config)# patch thru 0/2 wdm 0/3
Node4(config)# patch thru 0/3 thru 1/3
Node4(config)# patch wdm 1/3 thru 1/2
Node4(config)# patch wave 0 oscfilter 0/2
Node4(config)# patch wave 1 oscfilter 1/2
```

Transparent Interfaces in Slot 8

```
Node4(config)# interface transparent 8/0/0
Node4(config-if)# encapsulation gigabitethernet
Node4(config-if)# monitor enable
Node4(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 10

```
Node4(config)# interface transparent 10/0/0
Node4(config-if)# encapsulation gigabitethernet
Node4(config-if)# monitor enable
Node4(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node4(config)# interface wave 0
Node4(config-if)# no shutdown
Node4(config-if)# exit
```

```
Node4(config)# interface wave 1
Node4(config-if)# no shutdown
Node4(config-if)# exit
```

APS

Use the following for configuring y-cable protection.

```
Node4(config)# redundancy
Node4(config-red)# associate group channel9
Node4(config-red-aps)# aps working transparent 10/0/0
Node4(config-red-aps)# aps protection transparent 8/0/0
Node4(config-red-aps)# aps y-cable
Node4(config-red-aps)# aps revertive
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel10
Node4(config-red-aps)# aps working transparent 10/1/0
Node4(config-red-aps)# aps protection transparent 8/1/0
Node4(config-red-aps)# aps y-cable
Node4(config-red-aps)# aps revertive
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel11
Node4(config-red-aps)# aps working transparent 10/2/0
Node4(config-red-aps)# aps protection transparent 8/2/0
Node4(config-red-aps)# aps y-cable
Node4(config-red-aps)# aps revertive
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel12
Node4(config-red-aps)# aps working transparent 10/3/0
Node4(config-red-aps)# aps protection transparent 8/3/0
Node4(config-red-aps)# aps y-cable
Node4(config-red-aps)# aps revertive
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
```

```

Node4(config-red)# associate group channel13
Node4(config-red-aps)# aps working transparent 9/0/0
Node4(config-red-aps)# aps protection transparent 11/0/0
Node4(config-red-aps)# aps y-cable
Node4(config-red-aps)# aps revertive
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel13
Node4(config-red-aps)# aps working transparent 9/1/0
Node4(config-red-aps)# aps protection transparent 11/1/0
Node4(config-red-aps)# aps y-cable
Node4(config-red-aps)# aps revertive
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel13
Node4(config-red-aps)# aps working transparent 9/2/0
Node4(config-red-aps)# aps protection transparent 11/2/0
Node4(config-red-aps)# aps y-cable
Node4(config-red-aps)# aps revertive
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# exit
Node4(config-red)# associate group channel13
Node4(config-red-aps)# aps working transparent 9/3/0
Node4(config-red-aps)# aps protection transparent 11/3/0
Node4(config-red-aps)# aps y-cable
Node4(config-red-aps)# aps revertive
Node4(config-red-aps)# aps enable
Node4(config-red-aps)# end

Node4# copy system:running-config nvram:startup-config

```

Configuring a Line Card Protected Meshed Ring with Unprotected Channels and OSC

Line card protection requires different shelf and CLI configuration from splitter protection. The following sections describe an example based on the meshed ring topology shown in Figure 8-33 on page 8-52.

Node 1

The configuration for node 1 is the same as described in the “Node 1” section on page 8-60.

Node 2

Figure 8-46 shows the shelf configuration for node 2 in the line card protected meshed ring with unprotected channels shown in Figure 8-33 on page 8-52. Channels 1-4 are line card protected using a west line card motherboard in slot 2 and an east line card motherboard in slot 4. Slot 8 uses an east line card motherboard for the unprotected channels.

Figure 8-46 Shelf Configuration for Node 2 in Line Card Protected Meshed Ring with Unprotected Channels


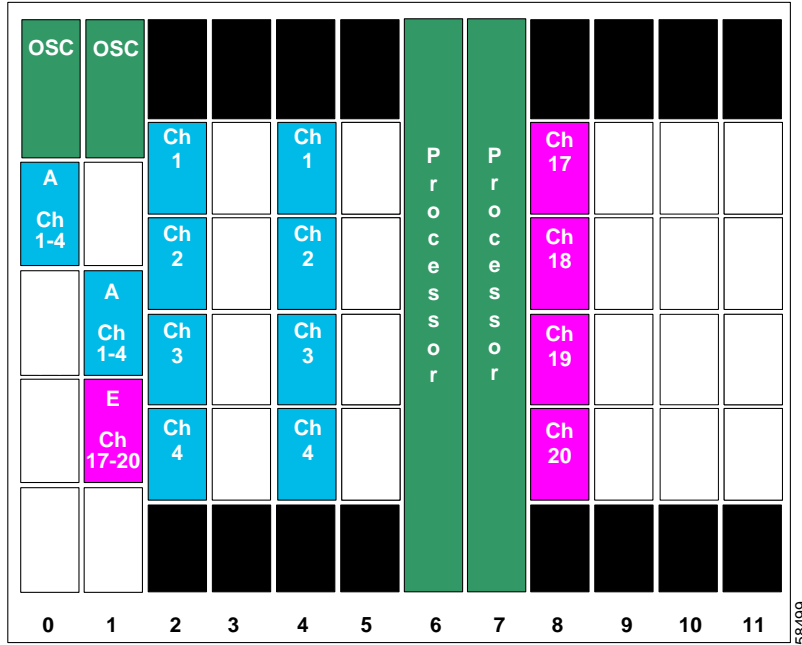


Figure 8-47 shows how the 4-channel mux/demux modules are cabled for node 2 in the line card protected meshed ring with unprotected channels shown in Figure 8-33 on page 8-52.

Figure 8-47 Add/Drop Mux/Demux Module Cabling for Node 2 in Line Card Protected Meshed Ring with Unprotected Channels

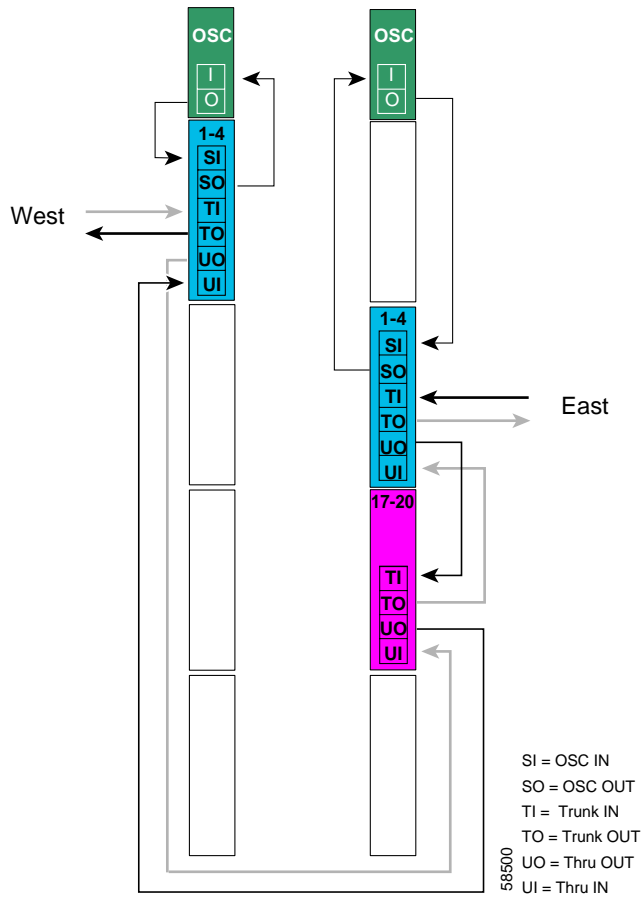

Patch Connections

```
Node2# configure terminal
Node2(config)# patch thru 0/0 thru 1/2
Node2(config)# patch wdm 1/2 thru 1/1
Node2(config)# patch wave 0 oscfilter 0/0
Node2(config)# patch wave 1 oscfilter 1/1
```

Transparent Interfaces in Slot 2

```
Node2(config)# interface transparent 2/0/0
Node2(config-if)# encapsulation gigabitethernet
Node2(config-if)# monitor enable
Node2(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 4

```
Node2(config)# interface transparent 4/0/0
Node2(config-if)# encapsulation gigabitethernet
Node2(config-if)# monitor enable
Node2(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 8

```
Node2(config)# interface transparent 8/0/0
Node2(config-if)# encapsulation gigabitethernet
Node2(config-if)# monitor enable
Node2(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node2(config)# interface wave 0
Node2(config-if)# no shutdown
Node2(config-if)# exit
```

```
Node2(config)# interface wave 1
Node2(config-if)# no shutdown
Node2(config-if)# exit
```

APS

Use the following for configuring y-cable protection.

```

Node2(config)# redundancy
Node2(config-red)# associate group channel1
Node2(config-red-aps)# aps working transparent 2/0/0
Node2(config-red-aps)# aps protection transparent 4/0/0
Node2(config-red-aps)# aps y-cable
Node2(config-red-aps)# aps revertive
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group channel2
Node2(config-red-aps)# aps working transparent 2/1/0
Node2(config-red-aps)# aps protection transparent 4/1/0
Node2(config-red-aps)# aps y-cable
Node2(config-red-aps)# aps revertive
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group channel3
Node2(config-red-aps)# aps working transparent 2/2/0
Node2(config-red-aps)# aps protection transparent 4/2/0
Node2(config-red-aps)# aps y-cable
Node2(config-red-aps)# aps revertive
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# exit
Node2(config-red)# associate group channel4
Node2(config-red-aps)# aps working transparent 2/3/0
Node2(config-red-aps)# aps protection transparent 4/3/0
Node2(config-red-aps)# aps y-cable
Node2(config-red-aps)# aps revertive
Node2(config-red-aps)# aps enable
Node2(config-red-aps)# end


Node2# copy system:running-config nvram:startup-config

```

Node 3

Figure 8-48 shows how the modules are installed in the shelf for node 3 in the example network shown in Figure 8-33 on page 8-52. Channels 5–8 are line card protected using an east line card motherboard in slot 3 and a west line card motherboard in slot 5. Channels 13–16 are line card protected using an east line card motherboard in slot 9 and a west line card motherboard in slot 11. Slot 8 uses a west line card motherboard for the unprotected channels.


Figure 8-48 Shelf Configuration for Node 3 in Line Card Protected Meshed Ring with Unprotected Channels

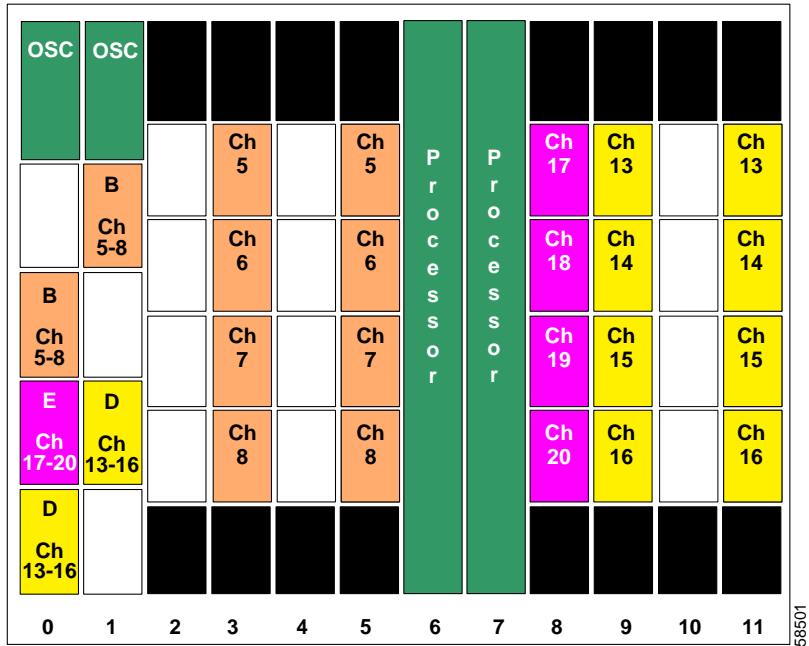

58501

Figure 8-49 shows how the 4-channel mux/demux modules are cabled for node 3 in the line card protected meshed ring with unprotected channels shown in Figure 8-33 on page 8-52.

Figure 8-49 Add/Drop Mux/Demux Module Cabling for Node 3 in Line Card Protected Meshed Ring with Unprotected Channels

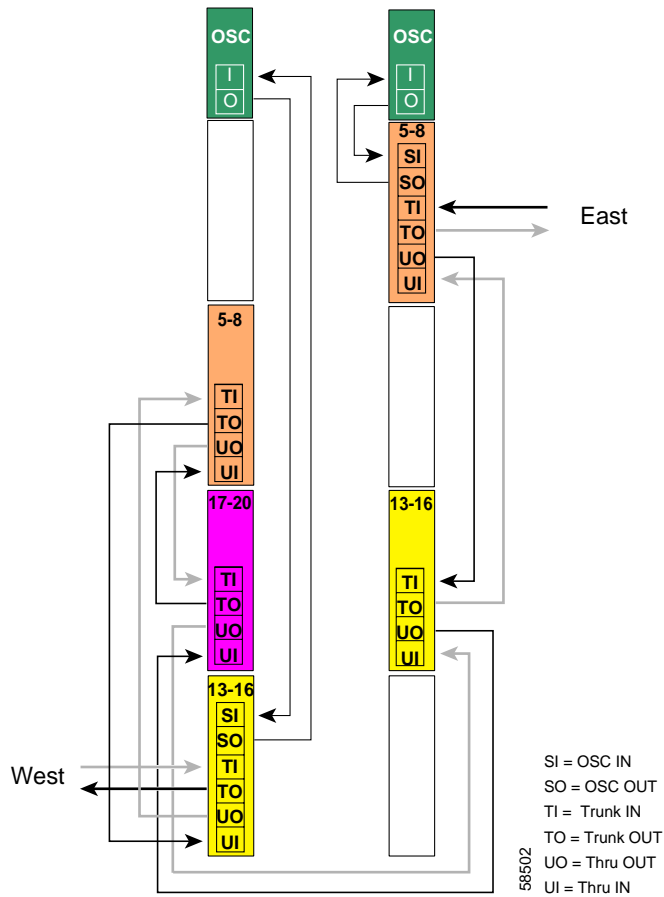

Patch Connections

```
Node3# configure terminal
Node3(config)# patch thru 0/3 wdm 0/1
Node3(config)# patch thru 0/1 wdm 0/2
Node3(config)# patch thru 0/2 thru 1/2
Node3(config)# patch wdm 1/2 thru 1/0
Node3(config)# patch wave 0 oscfilter 0/3
Node3(config)# patch wave 1 oscfilter 1/0
```

Transparent Interfaces in Slot 3

```
Node3(config)# interface transparent 3/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 5

```
Node3(config)# interface transparent 5/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 8

```
Node3(config)# interface transparent 8/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 9

```
Node3(config)# interface transparent 9/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

Transparent Interfaces in Slot 11

```
Node3(config)# interface transparent 11/0/0
Node3(config-if)# encapsulation gigabitethernet
Node3(config-if)# monitor enable
Node3(config-if)# exit
```

<Configure the remaining transparent interfaces in the slot>

OSC Interfaces

```
Node3(config)# interface wave 0
Node3(config-if)# no shutdown
Node3(config-if)# exit
```

```
Node3(config)# interface wave 1
Node3(config-if)# no shutdown
Node3(config-if)# exit
```

APS

Use the following for configuring y-cable protection.

```

Node3(config)# redundancy
Node3(config-red)# associate group channel5
Node3(config-red-aps)# aps working transparent 3/0/0
Node3(config-red-aps)# aps protection transparent 5/0/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel6
Node3(config-red-aps)# aps working transparent 3/1/0
Node3(config-red-aps)# aps protection transparent 5/1/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel7
Node3(config-red-aps)# aps working transparent 3/2/0
Node3(config-red-aps)# aps protection transparent 5/2/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel8
Node3(config-red-aps)# aps working transparent 3/3/0
Node3(config-red-aps)# aps protection transparent 5/3/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit

Node3(config-red)# associate group channel13
Node3(config-red-aps)# aps working transparent 11/0/0
Node3(config-red-aps)# aps protection transparent 9/0/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel14
Node3(config-red-aps)# aps working transparent 11/1/0
Node3(config-red-aps)# aps protection transparent 9/1/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel15
Node3(config-red-aps)# aps working transparent 11/2/0
Node3(config-red-aps)# aps protection transparent 9/2/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable
Node3(config-red-aps)# exit
Node3(config-red)# associate group channel16
Node3(config-red-aps)# aps working transparent 11/3/0
Node3(config-red-aps)# aps protection transparent 9/3/0
Node3(config-red-aps)# aps y-cable
Node3(config-red-aps)# aps revertive
Node3(config-red-aps)# aps enable

Node3# copy system:running-config nvram:startup-config

```


Node 4

The configuration for node 4 is the same as described in the “Node 4” section on page 8-71.



Monitoring the Network Topology

This chapter describes how to configure and manage your network topology. This chapter includes the following sections:


- About the OSC, page 9-1
- Configuring CDP, page 9-3
- Configuring OSCP, page 9-7
- Configuring IP on the OSC, page 9-9
- Configuring SNMP, page 9-11
- Monitoring Without the OSC, page 9-15
- Configuring Transparent Interfaces in the Network Topology, page 9-17
- About Embedded CiscoView, page 9-18
- Installing and Configuring Embedded CiscoView, page 9-18

About the OSC

As described in the “Optical Supervisory Channel” section on page 1-7, the Cisco ONS 15540 dedicates a separate channel (channel 0) for the OSC (optical supervisory channel), which is used for network control and management information between Cisco ONS 15540 systems on the network. The OSC is carried on the same fiber as the data channels (channels 1 through 32), but it carries no client data traffic.

Figure 9-1 shows the path of the OSC in a protected ring configuration. The OSC signal is generated by a laser on each mux/demux motherboard and is sent in both directions from the node; both receive signals are monitored to maintain communication with the neighboring nodes. The OSC signal terminates at each node.

Figure 9-1 OSC Signal Path in a Ring Configuration

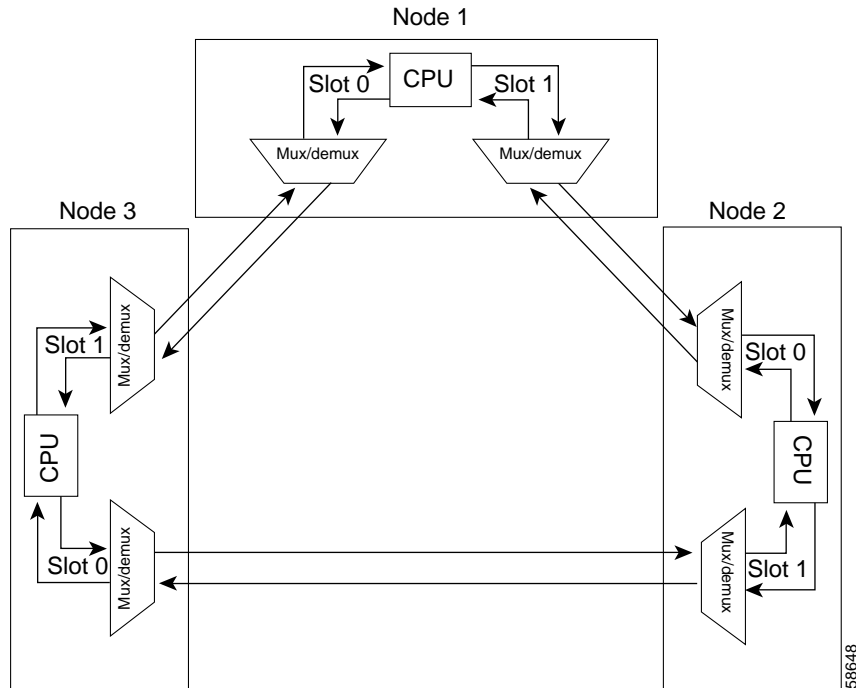

The OSC performs the following functions:

- **Discovery**—CDP (Cisco Discovery Protocol) sends packets on the OSC to discover neighboring nodes. CDP runs by default every 60 seconds. The information gathered by CDP can be displayed using the CLI (command-line interface) and used by the NMS (network management system) to discover the logical topology of the network.
- **Monitoring**—OSCP (OSC Protocol) runs over the OSC to provide monitoring of the status of adjacent nodes. OSCP is a keepalive mechanism similar to the PNNI Hello protocol used in ATM (Asynchronous Transfer Mode). Using OSCP, nodes exchange packets that allow them to determine the operational status of their neighbors. OSCP must establish that there is two-way communication before declaring to the upper layer protocols that a node is “up.”
- **Management**—IP packets are carried over the OSC to support SNMP and Telnet sessions. Using Telnet over the OSC allows you to access the CLI of all systems on your Cisco ONS 15540 network with a single Ethernet connection. Also, just one Ethernet connection is required from the NMS to monitor all Cisco ONS 15540 systems on the network using SNMP.

Hardware Guidelines for Using OSC

The OSC signal is generated using a dedicated laser on the mux/demux motherboards. To provide protection against failure of the laser or a fiber break in protected configurations (point-to-point or ring), the following rules apply:

- Both mux/demux motherboards must support OSC.
- One mux/demux module in each slot must support OSC along with a band of wavelengths.
- The wdm interface of each mux/demux module that supports OSC must connect to the trunk fiber.

For more information on hardware configuration rules, refer to the *Cisco ONS 15540 ESP Planning and Design Guide*.

Configuring CDP

CDP is primarily used to obtain protocol addresses of neighboring devices and to discover the platform of those devices. For a full description of CDP and details on configuring the protocol, refer to the *Cisco IOS Configuration Fundamentals Configuration Guide*. For a full description of the CDP commands, refer to the *Cisco IOS Configuration Fundamentals Command Reference*.

On the Cisco ONS 15540, you can configure CDP at both the global level and the interface level. The global-level CDP configuration sets the attributes for the entire system. The interface-level configuration identifies interfaces connected to the client equipment and to the trunk interface to CDP. Because there are only optical connections to the client equipment, you must explicitly identify the transparent interfaces connected to the client equipment. On wdm interfaces, you can choose to provide the information about the interface in the CLI or you can let CDP discover it.



Note

The shelf must include the OSC to support CDP. If the OSC is not present, see the “Monitoring Without the OSC” section on page 9-15.

Configuring Global CDP

To configure CDP on your Cisco ONS 15540, use the following commands in global configuration mode:

Command	Purpose
cdp advertise-v2	Specifies CDP version 2 advertisements. The default is version 2.
cdp holdtime <i>seconds</i>	Specifies the amount of time the receiving device should hold a CDP packet from the sending device before discarding it. The default value is 180 seconds.
cdp timer <i>seconds</i>	Specifies how often to send CDP updates. The default value is 60 seconds.
[no] cdp run	Enables and disables CDP on the device. The default state is enabled.

Examples

In the following example, the CDP packets being sent from your device should be held by the receiving device for 60 seconds before being discarded:

```
Switch(config)# cdp holdtime 60
```

In the following example, CDP updates are sent every 80 seconds:

```
Switch(config)# cdp timer 80
```

Displaying the Global CDP Configuration

To display the configured CDP values, use the following EXEC command:

Command	Purpose
show cdp	Displays the configured CDP timer, holdtime, and advertisement settings.

Example

The following example shows how to display the configured CDP values:

```
Switch> show cdp
Global CDP information:
  Sending CDP packets every 60 seconds
  Sending a holdtime value of 180 seconds
  Sending CDPv2 advertisements is enabled
```

Displaying Global CDP Information

You can display information gathered by CDP, including a specific neighbor device listed in the CDP table, the interfaces on which CDP is enabled, and the traffic between devices gathered using CDP.

To display the CDP information, use the following EXEC commands:

Command	Purpose
show cdp entry {[* <i>entry-name</i>] [protocol version]}	Displays information about all neighbors or a specific neighbor discovered by CDP. Optionally, displays the protocol and version.
show cdp interface [<i>type number</i>]	Displays information about the interfaces on which CDP is enabled.
show cdp neighbors	Displays a list of CDP neighbors.
show cdp traffic	Displays information about traffic between devices gathered using CDP.

Example

The following example shows how to display CDP status and activity information:

```
Switch1# show cdp entry *
-----
Device ID: Switch2
Entry address(es):
  IP address: 10.1.1.2
Platform: cisco , Capabilities: Router
Interface: Wave0, Port ID (outgoing port): Wave0
Holdtime : 176 sec

Version :
Cisco Internetwork Operating System Software
IOS (tm) ONS-15540 Software (manopt-I-M), Experimental Version 12.1 [koj-ons 122]
Copyright (c) 1986-2001 by cisco Systems, Inc.
Compiled Mon 30-Apr-01 12:04 by koj
advertisement version: 2
```

```

Switch1# show cdp interface
Wave0 is up, line protocol is up
  Encapsulation UNKNOWN
  Sending CDP packets every 60 seconds
  Holdtime is 180 seconds

Switch1# show cdp neighbors
Capability Codes: R - Router, T - Trans Bridge, B - Source Route Bridge
                  S - Switch, H - Host, I - IGMP, r - Repeater

Device ID         Local Intrfce   Holdtme    Capability Platform  Port ID
Switch2           Wave0          158        R           Wave0     Wave0

Switch1# show cdp traffic
CDP counters :
  Total packets output: 18, Input: 20
  Hdr syntax: 0, Chksum error: 0, Encaps failed: 0
  No memory: 0, Invalid packet: 0, Fragmented: 0
  CDP version 1 advertisements output: 0, Input: 0
  CDP version 2 advertisements output: 18, Input: 20

```

Clearing Global CDP Information

You can reset the CDP traffic counters to zero and clear the table that contains the CDP neighbor information. To clear the CDP information, use the following privileged EXEC commands:

Command	Purpose
<code>clear cdp counters</code>	Resets the CDP traffic counters to zero.
<code>clear cdp table</code>	Clears the table that contains the CDP neighbor information.

Configuring CDP Topology Discovery on Wdm Interfaces

You can enable CDP topology discovery on the wdm interfaces that connect to the trunk fiber. CDP then automatically advertises interface information to neighboring nodes.



Note

The Cisco ONS 15540 enables CDP topology discovery by default on the wdm interfaces connecting to the trunk fiber.

To configure CDP topology discovery on wdm interfaces, perform the following steps, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch(config)# topology hold-time <i>seconds</i>	Modifies the interval to hold a nonstatic network topology node entry. The default value is 300 seconds.
Step 2	Switch(config)# interface <i>wdm slot/subcard</i> Switch(config-if)#	Selects the interface to configure and enters interface configuration mode.
Step 3	Switch(config-if)# topology neighbor cdp or Switch(config-if)# topology neighbor disable	Enables CDP topology discovery on the interface. The default is enabled. or Disables CDP on the interface.

Examples

The following example shows how to enable CDP topology discover on a wdm interface:

```
Switch(config)# interface wdm 0/0
Switch(config-if)# topology neighbor cdp
```

The following example shows how to disable CDP topology discovery on a wdm interface:

```
Switch(config)# interface wdm 0/0
Switch(config-if)# topology neighbor disable
```

Displaying CDP Information for Wdm Interfaces

You can display interface-level information gathered by CDP, including neighboring devices.

To display the CDP information for an interface, use the following EXEC commands:

Command	Purpose
show topology neighbor [detail]	Displays information about the physical network topology neighbors for the node.
show topology	Displays the global physical network topology configuration.

Example

```
Switch# show topology neighbor
Physical Topology:
```

```
Local Port      Neighbor Node      Neighbor Port
-----
Wd0/0          Node1              wdm1/1
Wd0/1          Node2              wdm0/2
Trans8/1/0     Router1            gigabitethernet1/1
```

```
Switch# show topology
Global Physical Topology configuration:
  Maximum Hold Time = 300 secs
  Trap interval = 60 secs
```


Configuring OSCP

The configurable parameters of the OSCP are described in the following sections.



Note

The default values are suitable in most cases.

Configuring the Hello Interval Timer

The OSCP sends Hello packets to adjacent nodes at a configured interval. When five packets fail to get a response from the receiving node, that node is declared “down.” By decreasing the interval at which Hello packets are sent, reaction time to a failed node can be lessened. Increasing the interval reduces the amount of Hello packet traffic.

To configure the OSCP Hello timer interval, use the following global configuration command:

Command	Purpose
<code>ospf timer hello interval <i>milliseconds</i></code>	Configures the Hello interval timer in milliseconds. The default value is 3000 milliseconds.

Example

The following example shows how to set the Hello interval to 500 milliseconds:

```
Switch(config)# ospf timer hello interval 500
```

Configuring the Hello Hold-Down Timer

The Hello hold-down timer specifies the interval during which no more than one Hello packet can be sent. If more than one Hello packet is generated during the hold-down period, the extra packets are delayed. Increasing the hold-down timer limits the number of Hello packets triggered in response to Hello packets received from a neighboring node and reduces the likelihood of Hello packets flooding the OSC.

To configure the OSCP Hello hold-down timer, use the following global configuration command:

Command	Purpose
<code>ospf timer hello holddown <i>milliseconds</i></code>	Configures the Hello hold-down timer in milliseconds. The default value is 100 milliseconds.

Example

The following example shows how to set the Hello hold-down timer to 2000 milliseconds:

```
Switch(config)# ospf timer hello holddown 2000
```

Configuring the Inactivity Factor

The OSCP inactivity factor determines whether or not to declare a link down. The inactivity factor is multiplied by the advertised Hello timer interval of the other node to produce the inactivity time interval. If the system does not receive OSCP packets from the other node before the expiration of the inactivity time interval, the link is declared down.

To configure the OSCP inactivity factor, use the following global configuration command:

Command	Purpose
ospf timer inactivity-factor <i>factor</i>	Configures inactivity factor as a multiple of the Hello interval. The default multiplier is 5.

Example

The following example shows how to configure the inactivity factor to 10 times the Hello interval value:

```
Switch(config)# ospf timer inactivity-factor 10
```

Displaying the OSCP Configuration

You can display the OSCP version, node ID, interfaces, and configured protocol parameters. To display the OSCP configuration, use the following EXEC command:

Command	Purpose
show ospf info	Displays the OSCP configuration.

Example

The following example shows the OSCP configuration:

```
Switch(config)# show ospf info
OSPF protocol version 1, Node ID          0202.0304.0506
No. of interfaces 0, No. of neighbors 0
Hello interval 25 tenth of sec, inactivity factor 5,

Hello hold-down 1 tenth of sec
Supported OSCP versions: newest 1, oldest 1
```

Displaying OSCP Neighbors

You can display the information for neighboring nodes monitored by the OSCP. To display the OSCP neighbor status for a node, use the following EXEC command:

Command	Purpose
show ospf neighbor	Displays the OSCP neighbor status.

Example

The following example shows the OSCP neighbors for a node:

```
Switch(config)# show oscp neighbor
OSCP Neighbors
Neighbor Node Id:0009.7cla.cb20 Port list:
  Local Port Port ID Rem Port ID OSCP state
~~~~~
Wave7/0      20E0000 20E0000 2way
```

Configuring IP on the OSC

Configuring IP on the OSC allows you to use one Cisco ONS 15540 node in the network to monitor all the other Cisco ONS 15540 nodes in the network. The OSC is a point-to-point signal so any IP configuration valid for point-to-point interfaces is usable.

IP addressing on the OSC can be configured two ways:

- An IP address for each OSC wave interface with each address on a separate subnet.
- An unnumbered address for the OSC wave interfaces which reference another numbered interface.

The IP address of the reference interface is used as the IP packet source address. Use a loopback interface as the reference interface since it is always up. Configure IP address for each node in a separate subnet.



Note You can alternatively use the IP address of the NME (network management Ethernet) interface (fastethernet 0) for the reference address instead of the loopback interface.

To configure IP on an OSC wave interface, perform the following steps, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch(config)# interface loopback 1 Switch(config-if)#	Selects the loopback interface to configure and enters interface configuration mode.
Step 2	Switch(config-if)# ip address ip-address subnet-mask	Configures IP address and subnet for the interface.
Step 3	Switch(config-if)# exit Switch(config)#	Exits interface configuration mode and returns to global configuration mode.
Step 4	Switch(config)# interface fastethernet 0 Switch(config-if)#	Selects the NME interface to configuration and enters interface configuration mode.
Step 5	Switch(config-if)# ip address ip-address subnet-mask	Configures IP address and subnet for the interface.
Step 6	Switch(config-if)# exit Switch(config)#	Exits interface configuration mode and returns to global configuration mode.
Step 7	Switch(config)# interface wave 0 Switch(config-if)#	Selects the wave interface on slot 0.

	Command	Purpose
Step 8	Switch(config-if)# ip unnumbered loopback 1	Configures an unnumbered interface referencing the loopback interface.
Step 9	Switch(config-if)# exit Switch(config)#	Exits interface configuration mode and returns to global configuration mode.
Step 10	Switch(config)# interface wave 1 Switch(config-if)#	Selects the wave interface on slot 1.
Step 11	Switch(config-if)# ip unnumbered loopback 1	Configures an unnumber interface referencing the loopback interface.
Step 12	Switch(config-if)# exit Switch(config)#	Exits interface configuration mode and returns to global configuration mode.
Step 13	Switch(config)# ip route prefix prefix-mask interface or Switch(config)# router ospf process-id Switch(config-router)# network network-address wildcard-mask area area-id or Switch(config)# router eigrp as-number Switch(config-router)# network network-number [network-mask] or Switch(config)# router bgp as-number Switch(config-router)# network network-number [mask network-mask] Switch(config-router)# neighbor {ip-address peer-group-name} remote-as number	Configures IP static routes for some or all destinations. or Configures OSPF as the routing protocol. or Configures EIGRP as the routing protocol. or Configures BGP as the routing protocol.

**Note**

For detailed information about configuring routing protocols, refer to the *Cisco IOS IP and IP Routing Configuration Guide*.

Example

The following example shows how to configure IP on the OSC on a three node system. Node 1 connects to the NMS (network management system).

```

Node1# configure terminal
Node1(config)# interface loopback 1
Node1(config-if)# ip address 10.1.1.1 255.255.255.0
Node1(config-if)# exit
Node1(config)# interface fastethernet 0
Node1(config-if)# ip address 20.1.1.1 255.255.255.0
Node1(config-if)# exit
Node1(config)# interface wave 0
Node1(config-if)# ip unnumbered loopback 1
Node1(config-if)# exit

```

```

Node1(config)# interface wave 1
Node1(config-if)# ip unnumbered loopback 1
Node1(config)# router ospf 1
Node1(config-router)# network 10.1.0.0 0.0.255.255 area 0
Node1(config-router)# network 20.1.0.0 0.0.255.255 area 0

Node2# configure terminal
Node2(config)# interface loopback 1
Node2(config-if)# ip address 10.1.2.2 255.255.255.0
Node2(config-if)# exit
Node2(config)# interface wave 0
Node2(config-if)# ip unnumbered loopback 1
Node2(config-if)# exit
Node2(config)# interface wave 1
Node2(config-if)# ip unnumbered loopback 1
Node2(config)# router ospf 1
Node2(config-router)# network 10.1.0.0 0.0.255.255 area 0

Node3# configure terminal
Node3(config)# interface loopback 1
Node3(config-if)# ip address 10.1.3.3 255.255.255.0
Node3(config-if)# exit
Node3(config)# interface wave 0
Node3(config-if)# ip unnumbered loopback 1
Node3(config-if)# exit
Node3(config)# interface wave 1
Node3(config-if)# ip unnumbered loopback 1
Node3(config)# router ospf 1
Node3(config-router)# network 10.1.0.0 0.0.255.255 area 0

```

Verifying Connectivity Over the OSC

To verify connectivity over the OSC, use the following EXEC command:

Command	Purpose
<code>telnet ip-address</code>	Connects to another node using the reference IP address for the other node.

Example

The following example shows how to Telnet from node 1 to node 2 in the ring to another through the OSC:

```

Node1# telnet 10.1.2.2
Trying 10.1.2.2 ... Open
Node2# enable
Node2#

```

Configuring SNMP

SNMP is an application-layer protocol that allows an SNMP manager, such as an NMS (network management system), and an SNMP agent on the managed device to communicate. You can configure SNMPv1, SNMPv2c, or SNMPv3 on the Cisco ONS 15540.

The NME (network management Ethernet) ports on the active processor card, named *fastethernet 0*, provide multiple simultaneous SNMP network management sessions to the current active processor. The Cisco ONS 15540 can be fully managed by sending SNMP messages to the active processor IP address. If a processor switchover occurs, you can access the other processor card after it reaches the active state. For more information on processor card redundancy, see the “About Processor Card Redundancy” section on page 3-8.

**Note**

The standby processor card does not respond to SNMP messages.

For detailed instructions on configuring SNMP and enabling SNMP trap notifications, refer to the *Cisco IOS Configuration Fundamentals Configuration Guide* and the *Cisco IOS Configuration Fundamentals Command Reference* publication.

Enabling MIB Notifications

The Cisco ONS 15540 supports SNMP trap notifications through MIBs. This section describes the following MIBs:

- Alarm threshold MIB
- APS MIB
- OSCP MIB
- Patch MIB
- Redundancy facility MIB
- Physical topology MIB

You can find the complete list of MIBs supported on the Cisco ONS 15540 and the MIB module definition files on the Cisco MIB website on Cisco.com. For more information on accessing the MIBs module definition files, refer to the *Cisco ONS 15540 ESP MIBs User Quick Reference*.

Alarm Threshold MIB

The interface alarm threshold MIB (CISCO-IF-THRESHOLD-MIB) assists SNMP monitoring of the interface alarm threshold activity. To enable the SNMP trap notifications for alarm threshold activity, use the following global configuration command:

Command	Purpose
snmp-server enable traps threshold min-severity {degrade failure}	Enables SNMP trap notifications for alarm threshold activity.

For information about other commands that enable SNMP trap notifications, refer to the *Cisco IOS Configuration Fundamentals Command Reference* publication.

Example

The following example shows how to enable SNMP trap notifications for alarm thresholds and set the minimum notification severity to signal degrade.

```
Switch# configure terminal
```

```
Switch(config)# snmp-server enable traps threshold min-severity degrade
```

APS MIB

The APS MIB (CISCO-APS-MIB) assists SNMP monitoring of SONET APS activity. To enable the SNMP trap notifications for APS activity between associated interfaces, use the following global configuration command:

Command	Purpose
snmp-server enable traps aps	Enables SNMP trap notifications for APS activity.

For information about other commands that enable SNMP trap notifications, refer to the *Cisco IOS Configuration Fundamentals Command Reference* publication.

Example

The following example shows how to enable SNMP trap notifications for APS.

```
Switch# configure terminal
Switch(config)# snmp-server enable traps aps
```

OSCP MIB

The OSCP MIB (CISCO-OSCP-MIB) assists SNMP monitoring of OSCP activity. To enable the SNMP trap notifications for OSCP activity, use the following global configuration command:

Command	Purpose
snmp-server enable traps oscp	Enables SNMP trap notifications for OSCP activity.

For information about other commands that enable SNMP trap notifications, refer to the *Cisco IOS Configuration Fundamentals Command Reference* publication.

Example

The following example shows how to enable SNMP trap notifications for OSCP.

```
Switch# configure terminal
Switch(config)# snmp-server enable traps oscp
```

Patch MIB

The patch MIB (CISCO-OPTICAL-PATCH-MIB) assists SNMP monitoring of patch connections. To enable the SNMP trap notifications for patch connection creation, modification, and deletion, use the following global configuration command.

Command	Purpose
snmp-server enable traps patch	Enables SNMP trap notifications for patch connection activity.

For information about other commands that enable SNMP trap notifications, refer to the *Cisco IOS Configuration Fundamentals Command Reference* publication.

Example

The following example shows how to enable SNMP trap notifications for patch connections:

```
Switch# configure terminal
Switch(config)# snmp-server enable traps patch
```

Physical Topology MIB

The network physical topology MIB (PTOPO-MIB) assists SNMP monitoring of network topology activity. To enable the SNMP trap notifications for network topology activity, use the following global configuration command.

Command	Purpose
snmp-server enable traps topology [throttle-interval <i>seconds</i>]	Enables SNMP trap notifications for network topology activity.

For information about other commands that enable SNMP trap notifications, refer to the *Cisco IOS Configuration Fundamentals Command Reference* publication.

Example

The following example shows how to enable SNMP trap notifications for network topology activity:

```
Switch# configure terminal
Switch(config)# snmp-server enable traps topology
```

Redundancy Facility MIB

The redundancy facility MIB (CISCO-RF-MIB) assists SNMP monitoring of processor redundancy activity. To enable the SNMP trap notifications for processor redundancy activity, use the following global configuration command.

Command	Purpose
snmp-server enable traps rf	Enables SNMP trap notifications for the redundancy facility activity.

For information about other commands that enable SNMP trap notifications, refer to the *Cisco IOS Configuration Fundamentals Command Reference* publication.

Example

The following example shows how to enable SNMP trap notifications for processor redundancy activity.

```
Switch# configure terminal
Switch(config)# snmp-server enable traps rf
```


Monitoring Without the OSC

To take advantage of the OSC, the Cisco ONS 15540 system must be equipped with one mux/demux module with OSC (for unprotected configurations) or two mux/demux modules with OSC (for protected configurations). If your system is not equipped to support the OSC, the following conditions apply:

- You cannot reach other nodes on the network using Telnet or SNMP. Separate connections to each system must exist on the network for management purposes.
- CDP does not function on the network. The physical topology must be configured manually for fault isolation and system management.
- Keepalive information is not available for other nodes on the network.

Setting up Connections to Individual Nodes

To access individual nodes in a Cisco ONS 15540 network without the OSC, you must establish separate connections to a management port on each system. This can be done using a Telnet session over an Ethernet connection, a console connection, or a modem connection to the auxiliary port. For instructions on how to do this, see Chapter 3, “Initial Configuration.”

For NMS without the OSC, each node reports individually to the NMS. Thus you must connect the NMS to each node using SNMP over an Ethernet connection.


Manually Configuring the Network Topology

If the OSC is absent from the system or CDP is disabled, you must manually add the wdm interfaces connected to the trunk fiber to the network topology using the CLI. To manually add the wdm interfaces to the network topology, perform the following steps on all the nodes in the network, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch(config)# interface wdm <i>slot/subcard</i> Switch(config-if)#	Selects the interface to configure and enters interface configuration mode.
Step 2	Switch(config-if)# topology neighbor { name <i>node-name</i> ip-address <i>node-ip-address</i> mac-address <i>node-mac-address</i> } { port { name <i>port-name</i> ip-address <i>port-ip-address</i> mac-address <i>port-mac-address</i> } }	Configures the network topology information for a neighboring node.
Step 3	Switch(config-if)# topology neighbor agent ip-address <i>ip-address</i>	Specifies the address of the network topology agent on a neighboring node.

Figure 9-2 shows an example ring topology with three shelves.

Figure 9-2 Ring Topology Example

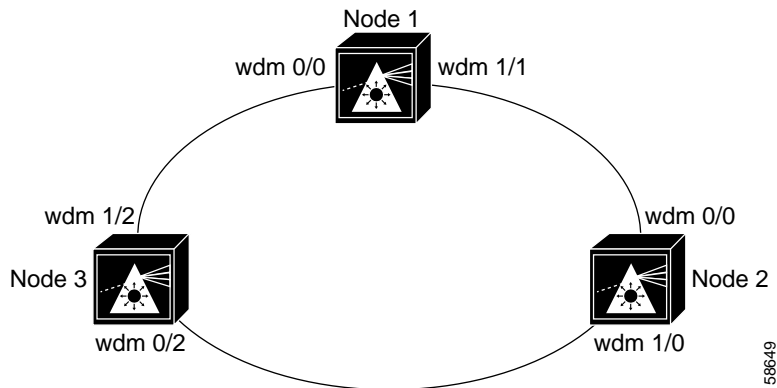

The following example shows how to configure the network topology for node 1 in Figure 9-2:

```

Node1(config)# interface wdm 1/1
Node1(config-if)# topology neighbor name Node2 port name wdm0/0
Node1(config-if)# topology neighbor agent ip-address 10.2.2.2
Node1(config)# exit
Node1(config)# interface wdm 0/0
Node1(config-if)# topology neighbor name Node3 port name wdm1/2
Node1(config-if)# topology neighbor agent ip-address 10.3.3.3
  
```

The following example shows how to configure the network topology for node 2 in Figure 9-2:

```

Node2(config)# interface wdm 0/0
Node2(config-if)# topology neighbor name Node1 port name wdm1/1
Node2(config-if)# topology neighbor agent ip-address 10.1.1.1
Node2(config)# exit
Node2(config)# interface wdm 1/0
Node2(config-if)# topology neighbor name Node3 port name wdm0/2
Node2(config-if)# topology neighbor agent ip-address 10.3.3.3
  
```

The following example shows how to configure the network topology for node 3 in Figure 9-2:

```

Node3(config)# interface wdm 0/2
Node3(config-if)# topology neighbor name Node2 port name wdm1/0
Node3(config-if)# topology neighbor agent ip-address 10.2.2.2
Node3(config)# exit
Node3(config)# interface wdm 1/2
Node3(config-if)# topology neighbor name Node1 port name wdm0/0
Node3(config-if)# topology neighbor agent ip-address 10.1.1.1
  
```

Displaying the Network Topology

To display the network topology, use the following EXEC command:

Command	Purpose
show topology neighbor	Displays the network topology.

Example

The following example shows the network topology:

```
Switch# show topology neighbor
```

Physical Topology:

Local Port	Neighbor Node	Neighbor Port
-----	-----	-----
Wd0/0	Node1	wdm1/1
Wd0/1	Node2	wdm0/2

Configuring Transparent Interfaces in the Network Topology

The client-side transparent interfaces on the Cisco ONS 15540 do not support CDP. Therefore, you can explicitly add the transparent interfaces and client equipment to the network topology.

To add a transparent interface to the network topology, perform the following steps on the transparent interfaces on all the nodes in the network, beginning in global configuration mode:

	Command	Purpose
Step 1	Switch(config)# interface transparent slot/subcard/0 Switch(config-if)#	Selects the interface to configure and enters interface configuration mode.
Step 2	Switch(config-if)# topology neighbor { name node-name ip-address node-ip-address mac-address node-mac-address } { port {name port-name ip-address port-ip-address mac-address port-mac-address }}	Configures the network topology information for a neighboring node.
Step 3	Switch(config-if)# topology neighbor agent ip-address ip-address	Specifies the address of the network topology agent on a neighboring node.

Example

The following example shows how to add a transparent interface to the network topology:

```
Switch(config)# interface transparent 8/1/0
Switch(config-if)# topology neighbor name router1 port name gigabitethernet1/1
Switch(config-if)# topology neighbor agent ip-address 10.1.1.1
```

Displaying Topology Information for Transparent Interfaces

To display the topology information for a transparent interface, use the following EXEC command:

Command	Purpose
show topology neighbor	Displays network topology information.

Example

The following example shows how to display the client equipment topology:

```
Switch# show topology neighbor
```

Physical Topology:

```
Local Port      Neighbor Node      Neighbor Port
-----
Trans8/1/0     Router1            gigabitethernet1/1
```

About Embedded CiscoView

The Embedded CiscoView network management system provides a web-based interface for the Cisco ONS 15540. Embedded CiscoView uses HTTP and SNMP to provide graphical representations of the system and to provide GUI-based management and configuration facilities. After you install and configure Embedded CiscoView, you can access your Cisco ONS 15540 from a web browser utility.

You can download the Embedded CiscoView files from the following URL:

<http://www.cisco.com/kobayashi/sw-center/netmgmt/ciscoview/embed-cvview-planner.shtml>

Installing and Configuring Embedded CiscoView

To install and configure Embedded CiscoView on the Cisco ONS 15540, perform the following steps:

	Command	Purpose
Step 1	Switch# copy tftp: {diskn: slotn:}	Copies the CiscoView tar file (ONS15540.tar) from the TFTP server. If you are installing Embedded CiscoView for the first time, skip to Step 4.
Step 2	Switch# delete {diskn:cv/* slotn:cv/*}	Removes existing files from the CiscoView directory.
Step 3	Switch# squeeze {diskn: slotn:}	Recovers the space in the file system.
Step 4	Switch# archive tar /xtract diskn:ONS15540.tar diskn:cv or Switch# archive tar /xtract slotn:ONS15540.tar slotn:cv	Extracts the CiscoView files from the tar file on the TFTP server to the CiscoView directory.
Step 5	Switch# dir {diskn: slotn:}	Displays the file in Flash memory. Repeat Step 1 and Step 5 for the file system on the standby processor (sby-diskn: or sby-slotn:).
Step 6	Switch# configure terminal Switch(config)#	Enters global configuration mode.
Step 7	Switch(config)# ip http server	Enables the HTTP web server.

	Command	Purpose
Step 8	Switch(config)# end Switch#	Returns to privileged EXEC mode.
Step 9	Switch# copy system:running-config nvram:startup-config	Saves the configuration in NVRAM.



Note You can install Embedded CiscoView files only on disk0:, disk1:, slot0:, or slot1:. Do not install the files on the bootflash.

Examples

The following example shows how to initially install Embedded CiscoView on both processors in your system:

```
Switch# copy tftp slot0:
Address or name of remote host []? 20.1.1.1
Source filename []? ONS15540.tar
Destination filename [ONS15540.tar]?
Accessing tftp://20.1.1.1/ONS15540.tar...
Loading ONS15540.tar from 20.1.1.1 (via Port-channel1.1):
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
[OK - 1251840/2503680 bytes]

1251840 bytes copied in 109.848 secs (11484 bytes/sec)

Switch# archive tar /xtract slot0:ONS15540.tar slot0:/cv
cccccccccccccccccccccccccccccccccccccccccccccccccccccccccccccccc

8510CSR# dir slot0:
Directory of slot0:/

   1  -rw-     2276396  Apr 30 2001 17:48:07  ONS15540-i-mz.121
   2  -rw-     1251840  May 23 2001 14:03:35  ONS15540.tar
   3  -rw-         8861  May 23 2001 14:26:05  cv/ONS15540-1.0.html
   4  -rw-    1183238  May 23 2001 14:26:06  cv/ONS15540-1.0.sgz
   5  -rw-         3704  May 23 2001 14:27:55  cv/ONS15540-1.0_ace.html
   6  -rw-         401  May 23 2001 14:27:55  cv/ONS15540-1.0_error.html
   7  -rw-        17003  May 23 2001 14:27:55  cv/ONS15540-1.0_jks.jar
   8  -rw-        17497  May 23 2001 14:27:57  cv/ONS15540-1.0_nos.jar
   9  -rw-         8861  May 23 2001 14:27:59  cv/applet.html
  10  -rw-          529  May 23 2001 14:28:00  cv/cisco.x509
  11  -rw-         2523  May 23 2001 14:28:00  cv/identitydb.obj

16384000 bytes total (1287752 bytes free)

Switch# copy tftp: sby-slot0:ONS15540.tar
Address or name of remote host []? 20.1.1.1
Source filename []? ONS15540.tar
Destination filename [ONS15540.tar]?
Accessing tftp://20.1.1.1/ONS15540.tar...
Loading ONS15540.tar from 20.1.1.1 (via Port-channel1.1):
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
[OK - 1251840/2503680 bytes]

1251840 bytes copied in 109.848 secs (11484 bytes/sec)
```

```

Switch# archive tar /xtract slot0:ONS15540.tar sby-slot0:cv
cccccccccccccccccccccccccccccccccccccccc
Switch# dir sby-slot0:
Directory of sby-slot0:/

   1  -rw-     2276396   May 20  2001  17:48:07  ONS15540-i-mz.121
   2  -rw-     1251840   May 23  2001  14:03:35  ONS15540.tar
   3  -rw-         8861   May 23  2001  14:26:05  cv/ONS15540-1.0.html
   4  -rw-     1183238   May 23  2001  14:26:06  cv/ONS15540-1.0.sgz
   5  -rw-         3704   May 23  2001  14:27:55  cv/ONS15540-1.0_ace.html
   6  -rw-          401   May 23  2001  14:27:55  cv/ONS15540-1.0_error.html
   7  -rw-        17003   May 23  2001  14:27:55  cv/ONS15540-1.0_jks.jar
   8  -rw-        17497   May 23  2001  14:27:57  cv/ONS15540-1.0_nos.jar
   9  -rw-         8861   May 23  2001  14:27:59  cv/applet.html
  10  -rw-          529   May 23  2001  14:28:00  cv/cisco.x509
  11  -rw-         2523   May 23  2001  14:28:00  cv/identitydb.obj
16384000 bytes total (1287752 bytes free)
Switch# configure terminal
Switch(config)# ip http server
Switch(config)# end
Switch# copy system:running-config nvram:startup-config

```

The following example shows how to update the CiscoView files on your Cisco ONS 15540:

```

Switch# delete slot0:cv/*
Delete filename [cv/*]?
Delete slot0:cv/ONS15540-1.0.html? [confirm]
Delete slot0:cv/ONS15540-1.0.sgz? [confirm]
Delete slot0:cv/ONS15540-1.0_ace.html? [confirm]
Delete slot0:cv/ONS15540-1.0_error.html? [confirm]
Delete slot0:cv/ONS15540-1.0_jks.jar? [confirm]
Delete slot0:cv/ONS15540-1.0_nos.jar? [confirm]
Delete slot0:cv/applet.html? [confirm]
Delete slot0:cv/cisco.x509? [confirm]
Delete slot0:cv/identitydb.obj? [confirm]

Switch# squeeze slot0:
All deleted files will be removed. Continue? [confirm]
Squeeze operation may take a while. Continue? [confirm]

Squeeze of slot0 complete

Switch# copy tftp slot0:
Address or name of remote host []? 20.1.1.1
Source filename []? ONS15540.tar
Destination filename [ONS15540.tar]?
Accessing tftp://20.1.1.1/ONS15540.tar...
Loading ONS15540.tar from 20.1.1.1 (via Port-channel1.1):
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
[OK - 1251840/2503680 bytes]

1251840 bytes copied in 109.848 secs (11484 bytes/sec)

Switch# archive tar /xtract slot0:ONS15540.tar slot0:cv
cccccccccccccccccccccccccccccccccccccccc

```

```

Switch# delete sby-slot0:cv/*
Delete filename [cv/*]?
Delete slot0:cv/ONS15540-1.0.html? [confirm]
Delete slot0:cv/ONS15540-1.0.sgz? [confirm]
Delete slot0:cv/ONS15540-1.0_ace.html? [confirm]
Delete slot0:cv/ONS15540-1.0_error.html? [confirm]
Delete slot0:cv/ONS15540-1.0_jks.jar? [confirm]
Delete slot0:cv/ONS15540-1.0_nos.jar? [confirm]
Delete slot0:cv/applet.html? [confirm]
Delete slot0:cv/cisco.x509? [confirm]
Delete slot0:cv/identitydb.obj? [confirm]
Switch# squeeze sby-slot0:
All deleted files will be removed. Continue? [confirm]
Squeeze operation may take a while. Continue? [confirm]
Squeeze of sby-slot0 complete
Switch# copy tftp sby-slot0:
Address or name of remote host [20.1.1.1]?
Source filename [ONS15540.tar]?
Destination filename [ONS15540.tar]?
Accessing tftp://20.1.1.1/ONS15540.tar...
Loading ONS15540.tar from 20.1.1.1 (via Port-channel1.1):
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
[OK - 1251840/2503680 bytes]

1251840 bytes copied in 109.848 secs (11484 bytes/sec)
Switch# archive tar /xtract slot0:ONS15540.tar slot0:cv
CCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCC
Switch# archive tar /xtract tftp://10.1.1.1/ciscoview.tar sby-slot0:cv

```

Accessing Embedded CiscoView

Access Embedded CiscoView using the NME IP address as the URL for your Cisco ONS 15540 from a web browser using the following format:

http://A.B.C.D/

Displaying Embedded CiscoView Information

To display the Embedded CiscoView information, use the following EXEC commands:

Command	Purpose
show ciscoview package	Displays information about the Embedded CiscoView files in the Flash PC Card.
show ciscoview version	Displays the Embedded CiscoView version.

Example

The following example shows how to display the Embedded CiscoView file and version information:

```
8510CSR# show ciscoview package
File source:flash:
CVFILE                               SIZE(in bytes)
-----
ONS15540-1.0.html                    8861
ONS15540-1.0.sgz                     1183238
ONS15540-1.0_ace.html                 3704
ONS15540-1.0_error.html               401
ONS15540-1.0_jks.jar                  17003
ONS15540-1.0_nos.jar                  17497
applet.html                           8861
cisco.x509                             529
identitydb.obj                         2523

8510CSR# show ciscoview version
Engine Version: 5.3 ADP Device: ONS15540 ADP Version: 1.0 ADK: 39
```




A

add/drop mux/demux modules

description 1-2

interfaces 2-7, 2-8, 2-9

See also mux/demux modules

aggregate shelf Ethernet interfaces. See ASE interfaces

alarm threshold

rates (table) 4-10

alarm thresholds

configuring 4-9

description 4-9

displaying configuration 4-11

MIBs 9-12

ALS

laser safety control and 4-14

APS

configuring dual shelf nodes 6-9 to 6-11

configuring line card protection 5-6 to 5-10

configuring splitter protection 5-1 to 5-6

lockouts 5-19 to 5-22

MIBs 9-13

switchovers 5-19 to 5-22

aps clear command 5-21

aps direction command 5-14

aps disable command 5-4, 5-9, 5-14, 6-10

aps enable command 5-4, 5-9, 5-14, 6-10

aps far-end command 6-10

aps lockout command 5-20

APS lockouts. See lockouts

aps protection command 5-4, 5-9, 6-10

aps revertive command 5-9

aps switch command 5-20

APS switchovers. See switchovers

aps timer oscp holddown command 5-14

aps timer oscp max-interval command 5-14

aps timer search-for-up command 5-4

aps timer switchover min-interval command 5-4, 5-9

aps timer wait-to-restore command 5-9

aps trigger command 4-9

aps working command 5-4, 5-9, 5-14, 6-10

aps y-cable command 5-9, 6-10

ASE interfaces

not supported (note) 2-9

associate group command 5-4, 5-9, 5-14, 6-9

associate interface command 5-4

autoboot

configuring 3-14

displaying configuration 3-14

See also booting

automatic laser shutdown. See ALS

Automatic Protection Switching. See APS

automatic synchronization

causes (table) 3-16

configuring 3-16

auto-sync running-config command 3-16

auto-sync startup-config command 3-16

auxiliary ports

interface naming convention 2-9

modem support 3-2

B

bands

description 1-2

bidirectional path switching
 configuring 5-14
 description 5-13
 displaying configuration 5-18
 example (figure) 5-15
 figure 5-13

boot system command 3-14

C

CDP

 clearing information 9-5
 configuring 9-3 to 9-6
 description 9-3
 displaying configuration 9-4
 displaying information 9-4

cdp advertise-v2 command 9-3

cdp holdtime command 9-3

cdp run command 9-3

cdp timer command 9-3

channel bands. See bands

channels
 description 1-2
 OSC 1-7
 See also data channels

Cisco Discovery Protocol. See CDP

Cisco ONS 15540
 configuration overview 2-10
 starting up 3-2
 See also hardware; shelf; software

CiscoView. See Embedded CiscoView

CiscoWorks2000
 support 1-7

clear cdp counters command 9-5

clear cdp table command 9-5

CLI
 description 2-1
 help 2-3

client equipment
 monitoring 9-17

client protection
 configuring 5-7, 5-8
 description 5-7
 See also line card protection; y-cable protection

client signals
 extended range transponder support 1-4
 MM transponder support 1-4
 SM transponder support 1-3
 transparent interfaces and 2-6

clock rate command 4-3

clock rates
 configuring 4-2
 displaying configuration 4-6
 laser shutdown and (note) 4-5

command-line interface. See CLI

command modes
 description 2-1
 table 2-2

commands
 abbreviating 2-3
 listing 2-3
 syntax in documentation xiv

compliance
 ITU-T G.692 1-6
 NEBS 1-6

components
 description 1-2 to 1-6

config-register command 3-14

configuration register
 changing value 3-14

configurations
 displaying 3-5
 overview of tasks 2-10
 synchronizing 3-15 to 3-16

console ports
 configuring modem support 3-2
 using 3-2
 See also NME

conventions
 document xv
 naming interfaces 2-4 to 2-9

CPUs. See processor cards

cross connections
 description 4-20
 displaying 4-20

D

data channels
 OSC and 1-7, 9-1
 transponder module support 1-3

description command 4-9

diagnostic tests. See online diagnostics

digital video. See DV

documentation
 conventions xv
 related xiv

dual shelf nodes
 configuring 6-1 to 6-11
 description 6-1

duplex command 3-4

DV
 support on transponder modules 4-5

E

Embedded CiscoView
 accessing 9-21
 description 9-18
 download URL 9-18
 installing 9-18 to 9-22

enable password command 3-4

enable passwords
 description 3-3

enable secret command 3-4

enable secret passwords
 description 3-3

encapsulation. See protocol encapsulation

encapsulation command 4-3

Enterprise Systems Connection. See ESCON

ESCON
 configuring protocol encapsulation (table) 4-3
 configuring protocol monitoring 1-5, 4-6
 network topologies and (note) 8-1

Ethernet management ports. See NME

extended range transponder modules
 description 1-4

F

Fast Ethernet
 configuring protocol encapsulation (table) 4-3

fastethernet 0 interfaces
 configuring 3-3 to 3-5
 configuring IP addresses 3-4
 description 2-9
 IP on OSC 9-9
 See also NME

fastethernet-sby 0 interfaces
 description 2-9
 See also NME

FDDI
 configuring protocol encapsulation (table) 4-3

Fiber Connection. See FICON

Fibre Channel
 configuring protocol encapsulation (table) 4-3
 configuring protocol monitoring 1-5, 4-6

FICON
 configuring protocol encapsulation (table) 4-3
 configuring protocol monitoring 1-5, 4-6

filterband interfaces
 description 2-8

filtergroup interfaces
 description 2-8

filter interfaces
 description 2-7

forward laser control
 configuring 4-15
 description 4-12
 displaying configuration 4-16
 figure 4-12
 OFC and (caution) 4-15

G

Gigabit Ethernet
 configuring protocol encapsulation (table) 4-3
 configuring protocol monitoring 1-5, 4-6

H

hardware
 components 1-2 to 1-6
 features 1-1
 OSC guidelines 9-2
 shelf overview 1-1

Hello hold-down timer
 configuring 9-7

Hello inactivity factor
 configuring 9-8

Hello interval timer
 configuring 9-7

help
 CLI 2-3

hostname command 3-6

host names
 configuring 3-6

hubbed ring topologies
 configuring line card protection 8-20 to 8-36
 configuring splitter protection 8-3 to 8-19
 description 8-2
 example (figure) 8-2

I

interface loopback command 9-9

interfaces
 configuration overview 4-1
 line card protection model (figure) 2-6
 naming conventions 2-4 to 2-9
 splitter protection model (figure) 2-5
 See also specific types of interfaces (for example, filter interfaces)

interface transparent command 4-3

interface wave command 4-15, 4-16, 9-9

interface wavepatch command 5-11

interface wdm command 9-15

IP

configuring on OSC interfaces 9-9 to 9-11

ip address command 3-4, 9-9

IP addresses
 configuring on NME 3-4
 OSC wave interfaces 9-9

ip default-gateway command 3-4

ip route command 9-10

ip unnumbered command 9-10

ITU-T G.692
 laser grid 1-6

L

laser control. See forward laser control; laser safety control

laser control forward enable command 4-15

laser control safety enable command 4-16

- laser safety control
 - configuring 4-16
 - description 4-14
 - displaying configuration 4-17
 - figure 4-14
 - line card protection and 4-16
 - OFC and (caution) 4-16
 - splitter protection and (caution) 4-14, 5-3
 - laser shutdown
 - configuring 4-15 to 4-17
 - description 4-12 to 4-14
 - line card motherboards
 - configuring for line card protection 5-11
 - description 1-2
 - displaying cross connections (example) 4-21
 - splitter protection and 5-2
 - wavepatch interfaces 2-7
 - line card protection
 - configuring dual shelf topologies 6-1 to 6-11
 - configuring hubbed ring topologies 8-20 to 8-36
 - configuring meshed ring topologies 8-60 to 8-74
 - configuring point-to-point topologies 7-5 to 7-8
 - configuring splitter protected line card motherboards 5-11
 - configuring y-cable protection 5-8
 - considerations 5-7
 - description 5-6
 - displaying cross connections (example) 4-21
 - example (figure) 5-7
 - interface model (figure) 2-6
 - lockouts 5-19 to 5-22
 - switchovers 5-19 to 5-22
 - See also y-cable protection
 - line card redundancy controllers. See LRCs
 - line vty command 3-4
 - lockouts
 - clearing 5-21
 - description 5-19
 - displaying status 5-20, 5-21
 - requesting 5-20
 - logical mesh topologies. See meshed ring topologies
 - LRCs
 - description 1-6
-
- ## M
- maintenance-mode command 3-17
 - management ports. See NME
 - management systems. See network management systems
 - meshed ring topologies
 - configuring line card protection 8-60 to 8-74
 - configuring line card protection with unprotected channels 8-74 to 8-83
 - configuring splitter protection 8-37 to 8-51
 - configuring splitter protection with unprotected channels 8-52 to 8-59
 - description 8-3
 - example (figure) 8-3
 - MIBs
 - enabling 9-13 to 9-14
 - processor support 3-1
 - supported 9-12
 - MM transponder modules
 - description 1-4
 - modem
 - support 3-2
 - monitor enable command 4-7
 - monitoring. See network monitoring; protocol monitoring
 - multimode transponder modules. See MM transponder modules
 - mux/demux cabling
 - dual shelf nodes 6-2 to 6-7
 - hubbed ring topologies with line card protection, example 8-21, 8-26, 8-29, 8-32, 8-35
 - hubbed ring topologies with splitter protection, example 8-5, 8-9, 8-12, 8-15, 8-18
 - meshed ring topologies with line card protection, example 8-61, 8-65, 8-68, 8-72

meshed ring topologies with splitter protection,
example 8-39, 8-43, 8-46, 8-49

meshed ring topologies with unprotected channels, line
card protection, example 8-76, 8-80

meshed ring topologies with unprotected channels,
splitter protection, example 8-54, 8-57

point-to-point topologies with line card protection, 32
channels, example 6-4

point-to-point topologies without protection,
example 7-10

mux/demux modules

- configuring for line card protection 5-8
- description 1-5
- interfaces 2-7, 2-8

See also add/drop mux/demux modules; terminal
mux/demux modules

mux/demux motherboards

- description 1-2

N

NEBS

- compliance 1-6

network management Ethernet. See NME

network management systems

- supported 1-7

See also Embedded CiscoView

network monitoring

- CDP 9-3 to 9-5

- Embedded CiscoView 9-18 to 9-22

- OSCP 9-7 to 9-9

- transparent interfaces 9-17

- without OSC 9-15 to 9-17

Network Time Protocol. See NTP

network topologies

- adding transparent interfaces 9-17

- adding wdm interfaces 9-5

- MIBs 9-13, 9-14

- types 1-7

See also hubbed ring topologies; meshed ring
topologies; point-to-point topologies

NME

- configuring interfaces 3-3

- description 2-9

- displaying configuration 3-5

- using 3-2

See also fastethernet 0 interfaces

notification-throttle timer command 4-9

NTP

- configuring 3-7

- description 3-6

- displaying configuration 3-8

ntp server command 3-7

ntp update-calendar command 3-7

O

OADM. See add/drop mux/demux modules

OFC

- configuring with encapsulation command 4-3

- description 4-13

- figure 4-13

- forward laser control and (caution) 4-15

- laser safety control and (caution) 4-16

online diagnostics

- description 1-7

open fiber control. See OFC

optical add/drop mux/demux modules. See add/drop
mux/demux modules

optical connections. See cross connections

optical mux/demux motherboards. See mux/demux
motherboards

optical supervisory channel. See OSC

Optical Supervisory Channel Protocol. See OSCP

optical terminal mux/demux modules. See terminal
mux/demux modules

OSC

- description 1-7, 9-1 to 9-2

- hardware guidelines 9-2

- OSCP 9-7 to 9-9
 - signal path (figure) 9-2
- oscfiler interfaces
 - configuring patch connections 4-18
 - description 2-9
- OSC interfaces
 - configuring CDP 9-3 to 9-5
 - configuring IP 9-9 to 9-11
 - description 2-9
 - patch connections 4-18
- OSCP
 - configuring 9-7 to 9-8
 - description 9-2
 - displaying configuration 9-8
 - displaying neighbors 9-8
 - MIBs 9-13
- OSC Protocol. See OSCP
- oscp timer hello holddown command 9-7
- oscp timer hello interval command 9-7
- oscp timer inactivity-factor command 9-8

P

- passwords
 - description 3-3
- patch command 4-18
- patch connections
 - configuring 4-2, 4-18 to 4-19
 - description 4-17
 - displaying configuration 4-19
 - types (table) 4-17
- path lockouts. See lockouts
- path switching
 - configuring 5-14 to 5-19
 - description 5-12 to 5-14
 - example (figure) 5-12
 - y-cable protection and 5-16 to 5-18
- path switchovers. See switchovers

- point-to-point topologies
 - configuring line card protection 7-5 to 7-8
 - configuring splitter protection 7-3
 - configuring without protection 7-9 to 7-11
 - description 7-1
 - example without protection (figure) 7-2
 - example with protection (figure) 7-2
- processor cards
 - autoboot 3-14
 - configuring 3-12 to 3-20
 - description 1-6, 3-1
 - hardware state transitions 3-9
 - interfaces 2-9
 - redundant 3-13
 - reloading 3-20
 - slot assignments 1-2
 - software state transitions 3-10
 - starting up 3-2
- processor redundancy. See redundancy
- processors. See processor cards
- processor switchovers
 - forcing 3-12 to 3-13
- protection
 - description 5-1
 - types 5-1 to 5-10
- protection switching. See path switching
- protocol encapsulation
 - configuring 4-2
 - displaying configuration 4-6
 - types supported 1-3
- protocol monitoring
 - configuring 4-7
 - description 4-6
 - displaying configuration 4-8

Q

- quick laser shutdown. See forward laser control; laser safety control

R

redundancy

- configuring 3-12 to 3-20
- description 3-8 to 3-11
- displaying alarm status (note) 3-8
- displaying configuration 3-17
- forcing switchovers 3-12 to 3-13
- MIBS 9-14
- processor hardware state transitions 3-9
- processor software state transitions 3-10
- synchronizing configurations 3-15
- redundancy command 3-16, 5-4
- redundancy manual-sync command 3-15
- redundancy reload peer command 3-20
- redundancy reload shelf command 3-20
- redundancy switch-activity command 3-12
- reset command 3-13
- reshape, retime, retransmit functions. See 3R functions
- ring topologies
 - description 8-1 to 8-3
 - See also hubbed ring topologies; meshed ring topologies
- router bgp command 9-10
- router eigrp command 9-10
- router ospf command 9-10

S

SDH

- configuring protocol encapsulation (table) 4-3
- configuring protocol monitoring 1-5, 4-6
- selectable transceivers. See transceivers
- shelf
 - configuration examples
 - hubbed ring topologies with splitter protection 8-8, 8-14
 - point-to-point topologies with line card protection, 32 channels 6-3, 6-6
 - point-to-point topologies without protection 7-9

- configuration overview 2-10
- description 1-1
- layout (figure) 1-2
- starting up 3-2
- show aps command 5-5, 5-10
- show bootvar command 3-14
- show cdp command 9-4
- show cdp entry command 9-4
- show cdp interface command 9-4
- show cdp neighbor command 9-4
- show cdp traffic command 9-4
- show ciscoview package command 9-21
- show ciscoview version command 9-21
- show connect command 4-20
- show hardware command 3-4
- show interfaces transparent command 4-6
- show ntp status command 3-8
- show oscp info command 9-8
- show oscp neighbor command 9-8
- show patch command 4-19
- show redundancy capability command 3-17
- show redundancy command 3-17
- show redundancy running-config-file command 3-17
- show threshold-list command 4-11
- show topology command 9-6, 9-17
- show topology neighbor command 9-16
- show version command 3-14
- shutdown command 4-5, 5-11
- Simple Network Management Protocol. See SNMP
- single-mode transponder modules. See SM transponder modules
- SM transponder modules
 - description 1-3
- SNMP
 - configuring 9-11
 - configuring alarm thresholds (table) 4-9
 - processor support 3-1
 - snmp-server enable traps aps command 9-13
 - snmp-server enable traps oscp command 9-13

snmp-server enable traps patch command 9-13
 snmp-server enable traps rf command 9-14
 snmp-server enable traps threshold min-severity
 command 9-12
 snmp-server enable traps topology command 9-14

software

features 1-6 to 1-8

SONET

configuring protocol encapsulation (table) 4-3
 configuring protocol monitoring 1-5, 4-6

SONET APS. See APS

speed command 3-4

splitter protection

configuring 5-3
 configuring hubbed ring topologies 8-3 to 8-19
 configuring meshed ring topologies 8-37 to 8-51
 configuring meshed ring topologies with unprotected
 channels 8-52 to 8-59
 configuring point-to-point topologies 7-3
 considerations 5-2
 description 5-1
 displaying configuration 5-5
 displaying cross connections (example) 4-21
 example (figure) 5-2
 figure 2-5
 interface model (figure) 2-5
 lockouts 5-19 to 5-22
 switchovers 5-19 to 5-22

SRCs

description 1-6

standards compliance. See compliance

switchcard redundancy controllers. See SRCs

switchover command 3-13

switchovers

clearing 5-21
 description 5-19
 displaying status 5-20, 5-21
 requesting 5-20
 types 5-19

synchronizing

configurations 3-15 to 3-16

Synchronous Digital Hierarchy. See SDH

T

telnet command 9-11

terminal mux/demux modules

description 1-3
 interfaces 2-8, 2-9
 subcard position numbering 2-8, 2-9
 See also mux/demux modules

threshold command 4-9

threshold-group command 4-9

threshold-list command 4-9

thresholds. See alarm thresholds

thru interfaces

configuring patch connections 4-18
 description 2-8

topologies. See network topologies

topology hold-time command 9-6

topology neighbor agent ip-address command 6-8, 9-15,
 9-17

topology neighbor cdp command 9-6

topology neighbor command 6-8, 9-15, 9-17

topology neighbor disable command 9-6

transceivers

description 1-5

transparent interfaces

adding to network topology 9-17
 configuration overview 4-1
 configuring alarm thresholds 4-9 to 4-12
 configuring clock rates 4-2
 configuring protocol encapsulation 4-2
 configuring protocol monitoring 4-6
 description 2-6
 displaying network topology information 9-17

transponder modules
 description 1-2, 1-3
 interfaces 2-6, 2-7
 shutting down lasers 4-12 to 4-17
 splitter protection and 5-2
 y-cable protection and 5-7

troubleshooting
 cross connections 4-20
 online diagnostics 1-7
 shelf misconfigurations 4-19

U

unidirectional path switching
 configuring 5-14
 description 5-13
 displaying configuration 5-18
 example (figure) 5-13

unprotected channels
 configuring in meshed ring topologies 8-52 to 8-59,
 8-74 to 8-83
 configuring in point-to-point topologies 7-9 to 7-11

V

value command 4-9

W

wave interfaces
 configuration overview 4-1
 configuring alarm thresholds 4-9 to 4-12
 configuring forward laser control 4-15
 configuring laser safety control 4-16
 configuring patch connections 4-18
 description 2-7
 protocol monitoring 4-7

wavepatch interfaces
 description 2-7

wdm interfaces
 adding manually to network topologies,
 example 9-15 to 9-17
 configuring CDP 9-5
 configuring patch connections 4-18
 description 2-8
 displaying CDP information 9-6

Y

y-cable protection
 configuring 5-9
 displaying configuration 5-10
 path switching and 5-16 to 5-18
 See also line card protection